

PROFESSIONAL HVLP SPRAY GUN W/GAUGE

MODEL H7669

INSTRUCTION MANUAL



COPYRIGHT © JULY, 2005 BY GRIZZLY INDUSTRIAL, INC., REVISED NOVEMBER, 2009 (TS)
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
#PC7366 PRINTED IN CHINA



Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemical are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Table of Contents

SECTION 1: SAFETY	4
Additional Safety Instructions for HVLP Spray Guns	6
SECTION 2: INTRODUCTION	7
Foreword	7
Tool Data	7
Contact Info	7
SECTION 3: SET UP	8
Unpacking	8
Inventory	
Assembly	9
Controls	
SECTION 4: OPERATIONS	10
Spraying	10
Atomizing Cap and Fan Adjustments	12
SECTION 5: MAINTENANCE	13
Cleaning	13
Lubrication	14
Troubleshooting	15
Parts Breakdown	
WARRANTY AND RETURNS	18

SECTION 1: SAFETY

AWARNING

For Your Own Safety Read Instruction Manual Before Operating This Equipment

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.



Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

▲WARNING **▲**CAUTION

Indicates a potentially hazardous situation which, if not avoided, <u>COULD</u> result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, <u>MAY</u> result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

This symbol is used to alert the user to useful information about proper operation of the equipment.

AWARNINGSafety Instructions For Pneumatic Tools

- KEEP ALL SAFETY DEVICES IN PLACE and in working order.
- REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before operation.
- KEEP WORK AREA CLEAN.
 Cluttered areas and benches invite accidents.
- DO NOT USE IN DANGEROUS ENVIRONMENT. Do not use pneumatic tools in damp or wet locations, or where any flammable or noxious fumes may exist. Keep work area well lighted.

- KEEP CHILDREN AND VISITORS AWAY. All children and visitors should be kept at a safe distance from work area.
- MAKE WORKSHOP CHILD PROOF by locking your shop and shutting off air valves.
- DO NOT FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
- USE THE RIGHT TOOL. Do not force tool or attachment to do a job for which it was not designed.
- DO NOT USE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL.

AWARNING

Safety Instructions For Pneumatic Tools

- 10. USE PROPER AIR HOSE for the tool. Make sure your air hose is in good condition and is long enough to reach your work without stretching.
- 11. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear a protective hair covering to contain long hair.
- 12. ALWAYS USE SAFETY GLASSES. Also use a face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
- WEAR APPROVED HEARING PROTECTION.
- 14. SECURE WORK. Use clamps or a vise to hold work when practical. It is safer than using your hand and frees both hands to operate tool.
- DO NOT OVERREACH. Keep proper footing and balance at all times.
- 16. MAINTAIN TOOLS WITH CARE. Keep tools lubricated and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 17. REDUCE THE RISK OF UNINTENTIONAL STARTING. Do not carry tool with hand on trigger and always disconnect from air when not in use.

- DISCONNECT TOOLS before servicing and changing accessories.
- 19. USE THE RECOMMENDED ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury.
- 20. CHECK DAMAGED PARTS.

 Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
- 21. NEVER LEAVE UNATTENDED TOOL CONNECTED TO AIR. Disconnect the air hose and do not leave tool until it is relieved of any built up pressure.
- 22. NEVER ALLOW UNTRAINED USERS TO USE THIS TOOL WHILE UNSUPERVISED.
- 23. IF YOU ARE UNSURE OF THE INTENDED OPERATION, STOP USING THE TOOL. Seek formal training or research books or magazines that specialize in pneumatic tools.

AWARNING

Additional Safety Instructions for HVLP Spray Guns

- READ THIS MANUAL. This manual contains proper operating instructions for this spray gun.
- READ MATERIAL LABELS and MATERIAL SAFETY DATA SHEETS (MSDS). Read and know all the instructions on the packaging label and the MSDS before opening the package. This information could save your life.
- 3. ALWAYS WEAR A NIOSH APPROVED RESPIRATOR WHEN SPRAYING OR WORKING AROUND FINISHING MATERIALS.
- FIRE EXTINGUISHERS. Always have a fully charged multi class or class B fire extinguisher in the immediate area.
- FLAMMABLE MATERIAL. NEVER spray near open flame or where any spark could occur.
- FRESH AIR. Always provide adequate exhaust to keep area free of built up vapors, NEVER spray in an enclosed space.
- DISCONNECT COMPRESSED
 AIR. Always disconnect the spray gun from compressed air before cleaning, changing attachments or when performing maintenance of any kind on this tool.

- PROTECTIVE CLOTHING. Protect exposed skin from overspray by wearing a protective suit or other approved garment.
- INAPPROPRIATE USE. DO NOT point or shoot spray gun directly at yourself or another person or animals. Do not attempt to use the spray gun for any other use than it was intended.
- STORAGE. Thoroughly clean and dry spray gun before storage. Store in an approved cabinet.
- SOLVENTS. Always store solvents and shop towels soaked in solvent in approved containers.
- 12. EYE PROTECTION. Wear eye protection whenever spraying or cleaning. Solvents and chemicals can cause serious eye injury, which could lead to blindness.
- 13. OPERATING PRESSURE. DO NOT exceed the recommended inlet air pressure. Excessive pressure could cause the spray gun to burst or cause other internal equipment damage.
- 14. LOCAL LAWS. Consult local authorities regarding exhaust and waste disposal requirements.

SECTION 2: INTRODUCTION

Foreword

We are proud to offer the Grizzly Model H7669 HVLP Spray Gun. This model is part of a growing Grizzly family of fine tools. When used according to the guidelines set forth in this manual, you can expect years of trouble-free, enjoyable operation, and proof of Grizzly's commitment to customer satisfaction.

The Model H7669 is designed to be used for bigger jobs where larger volumes of material are needed. The Model H7669 features HVLP technology, which has greater transfer efficiency than suction feed spray guns and reduces overspray, saving on material costs.

It is our pleasure to provide this manual with the Model H7669. It was written to encourage safety considerations and guide you through general operating procedures and maintenance.

The specifications, details, and photographs in this manual represent the Model H7669 as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly.

Tool Data

Туре	HVLP Gravity Feed
Fluid Tip	1.4 mm
Air Consumption	7 CFM
Inlet Air Pressure	2-3.5 Bar /29-50 PS
Fluid Pressure	>10 PS
Material Capacity	600 ml / 20 fl oz

Contact Info

If you have any comments regarding this manual, please write to us at the following address:

Grizzly Industrial, Inc.
C/O Technical Documentation
P.O. Box 2069
Bellingham, WA 98227-2069

Most importantly, we stand behind our tools. If you have any service questions or parts requests, please call or write us at the location listed below.

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663

Fax: (800) 438-5901 E-Mail: techsupport@grizzly.com Web Site: http://www.grizzly.com

AWARNING



Read the manual before operation. Become familiar with this spray gun, its safety instructions, and its operation before beginning any work. Serious personal injury may result if safety or operational information is not understood or followed.

SECTION 3: SET UP

Unpacking

Your spray gun left our warehouse in a carefully packed box. If you discover the spray gun is damaged after you have signed for delivery, please immediately call Customer Service at (570) 546-9663 for advice.

Save the containers and all packing materials for possible inspection by the carrier or its agent. Otherwise, filing a freight claim can be difficult.

When you are completely satisfied with the condition of the shipment, you should inventory the equipment.

Inventory

After you have unpacked the carton you should find the following:

Model H7669 Inventory (Figure 1)

A.	Spray Gun	1
В.	Cup 600 ml	1
C.	Cleaning Brush	1
D.	Service Wrench	1
E.	Filters	2
F.	Baffle Wrench	1
G.	Regulator/Gauge	1

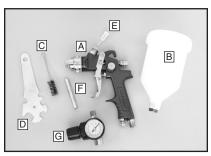


Figure 1. Model H7669 inventory.

Assembly

 Insert the filter into the gun body (see Figure 2).



Figure 2. Installing filter.

- 2. Screw the cup onto the top of the body.
- Attach the air hose to the spray gun with a ¹/₄" NPS quick connect set-up (not included).

Note: You have the option of attaching the regulator/guage directly to the gun as shown in the photos. Some may find this awkward and would rather mount the regulator/gauge closer to the air source.

4. Attach the spray gun to an air hose regulated between 29 and 50 PSI.

Note: For the best results, use a hose that will be dedicated for spray use only. Do not use a hose that has been used with an in-line oiler or other possible contaminant.

If you need additional help with this assembly, call our Technical Support at: (570) 546-9663.

Controls

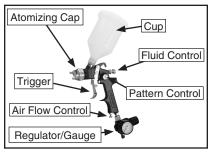


Figure 3. Controls.

- Fluid Control: Controls the volume of material that travels through the fluid tip.
- Pattern Control: Adjusts the spray pattern from a round pattern to a wide fan.
- **3. Air Flow Control:** Controls the fluid pressure inside the spray gun.
- Atomizing Cap: Controls the spray pattern from vertical to horizontal.
- Trigger: Two stage trigger. Stage one only releases compressed air for blowing off the work piece. Stage two sprays material.
- Cup: 600 ml plastic cup allows easy viewing of material level. Includes a vented cap.
- Regulator/Gauge: Regulates inlet air pressure to the spray gun. It can be attached directly to the gun for onthe-spot air adjustments or directly from the air source.

Note: DO NOT attach to an unregulated air source that exceeds 120 PSI.

SECTION 4: OPERATIONS

▲DANGER



EXPLOSION HAZARD! DO NOT smoke or have any source of flame or spark near spraying. Vapors will explode if ignited.

AWARNING



RESPIRATORY HAZARD! Always use respirator rated for organic vapor and solvent use when using spray equipment. Failure to protect your lungs can lead to respiratory illness and nervous system damage.

AWARNING



TOXIC FUMES! Always use an approved spray booth or well ventilated area when spraying. NEVER spray in an confined space where toxic fumes and flammable vapors can accumulate to deadly levels.

Spraying

The Model H7669 HVLP spray gun is designed to spray medium to high solid materials like lacquers, stains, primers, multi-component paints, clear coats, acrylics, epoxies etc. It is ideal for auto body and, woodworking projects and can be used with waterborne materials.

To use your spray gun:

- Read and follow the material manufacturer's instructions for spraying, mixing, safety, disposal, and any other instruction on the label or Material Safety Data Sheet (MSDS).
- Ensure the cup is securely tightened and all other fittings are secure to avoid air leaks or material spills.
- Set the inlet air pressure (the air coming to the spray gun) to the lowest pressure recommended in Tool Data on Page 7 or to the material manufacturer's recommendations.
- Adjust the atomizing cap to vertical or horizontal. See Atomizing Cap and Fan Adjustments on Page 12 for further explanation.
- 5. Fill the cup with material.
- 6. Trial and error are necessary to achieve the results you want along with a fair amount of practice. Test your material flow and spray pattern on a piece of cardboard or some scrap of material similar to your project.

- 7. Adjust the fluid control knob to start with a low volume of material and keep the atomization as low as possible. You will need to use a combination of fluid control, inlet air pressure, air flow control and stroke speed to achieve the results you want. Spray so the material wets out nicely without running or sagging.
- **8.** Use the pattern control knob to adjust the spray fan to your desired pattern.
- 9. Keep the gun tip perpendicular, parallel and 6-8" from the work at all times when spraying as shown in Figure 4. Do not allow your wrist to bend. This will cause the gun to arc across the surface and distribute the material unevenly, possibly creating sags and dry spots.

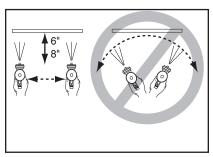


Figure 4. Spray technique.

NOTICE

Tipping spray gun may cause material to spill out of the cup. Always hold the spray gun perpendicular to the ground to avoid potential spills and gravity feed problems.

- 10. Begin spraying 2-3 inches before the work and continue to the end of the work. Continue the motion for a few inches past the work until you are ready for the return stroke.
- Maintain an even speed when spraying.
- 12. Overlap each stroke by 50%. This will ensure even coverage as shown in Figure 5. Less than 50%, as shown in the figure to the right, may lead to missed spots or streaky results.

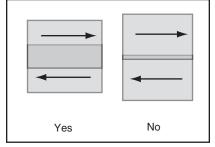


Figure 5. Overlap technique.

Spray stroke should have even consistency and parallel edges. If it doesn't please refer to Troubleshooting on Page 15.

Atomizing Cap and Fan Adjustments

The atomizing cap needs to be adjusted for horizontal or vertical spraying patterns. Spraying in the wrong direction may lead to material build up on the atomizing cap horn. Many performance problems are caused by clogged atomizing holes on the atomizing cap horns (see **Cleaning** on **Page 13**).

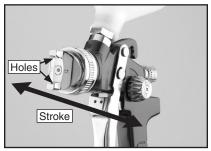


Figure 6. Set up for horizontal stroke direction with vertical fan pattern.

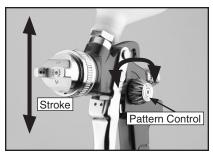


Figure 7. Set up for vertical spray stroke with horizontal fan pattern.

Rotating the pattern adjustment control in **Figure 7** will give you a range between the two patterns in **Figure 8**.




Figure 8. Fan adjustment.

SECTION 5: MAINTENANCE

Cleaning

Proper cleaning is the best way to ensure trouble free performance from your spray gun. If your gun is not thoroughly cleaned, damage and poor spraying will result. Problems caused by improper cleaning will not be covered by the warranty. Clean the spray gun immediately after each use.

To clean your spray gun:

1. Spray a small amount of solvent through the spray gun.

Note: Check with local laws regarding this practice. If you are spraying on a regular basis, spraying solvents into the air may be illegal. A cabinet style spray gun cleaner may be required.

- 2. Disconnect the gun from the compressed air!
- 3. Unscrew the cup.
- Disassemble the gun by unscrewing the fluid control knob, removing the spring and needle.

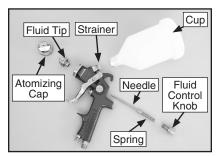


Figure 9. Disassembly for cleaning.

- Unscrew the atomizing cap with your fingers and the fluid tip with the service wrench. The fully disassembled gun should look like Figure 9.
- Rinse these parts thoroughly in solvent then dry with compressed air or let air dry.

Note: If the small holes in the atomizing cap become blocked, soak in clean solvent. If the blockage still exists, clear the blockage with a small needle, taking great care to not enlarge or damage the hole. Damage to the hole will create a disrupted spray pattern.

- Use the cleaning brush with solvent to clean the inner orifice and other hard to reach areas on the outside of the spray gun body.
- **8.** Wipe the rest of the gun body with a shop towel and dry.

AWARNING

EXPLOSION HAZARD! Chlorinated Solvents like Tricloroethane and Methylene Chloride (methyl chloride) can chemically react with aluminum and may explode. Many parts in spray guns are made of aluminum. Read solvent label carefully before using solvent.

NOTICE

DO NOT soak the spray gun body in solvent. Prolonged exposure to solvent will rapidly deteriorate the spray gun washers and seals. Ignoring this notice will void your warranty.

Lubrication

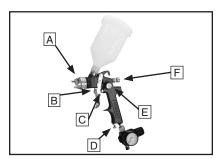


Figure 10. Lubrication points.

Lubricate the following areas with spray gun lube after cleaning.

- A. Atomizing Cap Threads
- B. Air Valve Packing
- C. Trigger Pin
- D. Air Flow Control Valve
- E. Pattern Control
- F. Fluid Control Knob


After each cleaning apply a thin film of petroleum jelly to the needle spring before reassembling.

Troubleshooting

Symptom	Possible Cause	Solution	
Fluttering or Spitting spray.	Dry or worn fluid tip seat permits air to seep into fluid passage.	Tighten fluid tip or replace seat with new one.	
=	2. Material level too low.	2. Add material.	
	3. Fluid tip or strainer obstructed.	3. Clean	
\"/	4. Dry needle packing.	4. Lubricate needle.	
Uneven top or bottom pattern.	Atomizing cap holes are obstructed.	1. Clear holes.	
	Build-up on top or bottom of fluid tip.	2. Clean.	
	Build-up on atomizing cap is on needle seat.	3. Clean.	
Right or left arc pattern.	Left or right side horn holes are plugged.	1. Clear holes.	
	Build-up on left or right side of fluid tip.	2. Clean.	
	Build-up of material inside atomizing cap.	3. Clean.	
Heavy deposit of material in center.	The material flow exceeds the atomizing cap capacity.	1. Lower fluid flow.	
	2. Inlet air pressure is too low.	2. Increase inlet air pressure.	
	3. Material is too thick.	3. Thin material.	
Narrow center pattern.	Volume control turned in too far.	1. Increase volume.	
pattern.	2. Inlet air pressure too high.	2. Reduce inlet air pressure.	
	3. Fluid pressure is too low.	3. Increase fluid pressure.	
	4. Material is too thin.	4. Adjust material.	
No spray output.	No pressure at gun. Fluid passages dirty.	Check air supply. Clean gun, remove any	
	Fluid control closed. Out of paint.	obstructions. 3. Open. 4. Refill.	
Nailer does not fire.	Nail is jammed in magazine or discharge area. Piston shaft is damaged. Air pressure too low.	Clear nailer magazine or discharge area. Replace piston shaft. Check/increase air pressure.	

Symptom	Possible Cause	Solution	
Excessive over- spray.	Fluid pressure too high. Gun is too far from surface. Spraying too fast.	Reduce fluid pressure. Keep gun at recommended distance. Slow down and maintain consistent, even parallel stroke.	
Unable to control spray fan.	Pattern adjustment screw is not seating properly. Atomizing cap is loose.	Clean or replace. Tighten atomizing cap.	
Runs and sags.	1. Damaged seal.	Replace damaged seals.	
Material leaks from cup.	 Cap not secure. Cup not tight on gun body. Leaking from cap vent hole. 	Tighten. Tighten. Hold gun upright do not tilt.	
Material leaks from gun.	Fluid tip loose. Dry or damaged seals. Excessive pressure.	 Tighten. Replace seals. Reduce pressure. 	
Thick dimpled finish aka "Orange Peel."	Holding gun too close to surface. Inlet air pressure too low. Material not properly mixed. Surface is dirty or oily.	Spray at recommended distance. Check inlet air pressure. Follow manufacturer's instructions. More surface prep is required.	
Dry Spray.	Inlet air pressure too high. Gun too far from surface. Gun stroke too fast.	Lower inlet air pressure. Keep gun at recommended distance. Slow down and maintain consistent even parallel stroke.	
Gun leaks from fluid tip.	Debris will not let the needle seat with the fluid tip.	Clean or replace both.	
Contaminated paint.	1. Water or oil in the air line.	Install an in-line air filter. Replace air line.	

Parts Breakdown

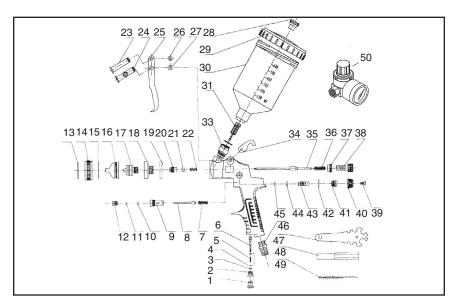

REF	PART #	DESCRIPTION	REF	PART #	DESCRIPTION
1	PH7669001	AIR ADJUSTMENT SCREW	26	PH7669026	SNAP RETAINER
2	PH7669002	AIR ADJUSTMENT KNOB		PH7669027	SNAP RETAINER
3	PH7669003	O-RING	28	PH7669028	VENTILATOR HEAD
4	PH7669004	SPECIAL WASHER	29	PH7669029	CUP COVER
5	PH7669005	AIR VALVE SPRING	30	PH7669030	CUP 600ML
6	PH7669006	AIR INLET VALVE	31	PH7669031	FILTER
7	PH7669007	SWITCH SPRING	33	PH7669033	FLUID INLET JOINT
8	PH7669008	AIR VALVE BODY	34	PH7669034	HOOK
9	PH7669009	SWITCH KNOB	35	PH7669035	FLUID ADJ NEEDLE
10	PH7669010	O-RING	36	PH7669036	FLUID NEEDLE SPRING
11	PH7669011	SPECIAL WASHER	37	PH7669037	LOCK NUT
12	PH7669012	DIRECTION SCREW	38	PH7669038	FLUID ADJ KNOB
13	PH7669013	PIN SPRING	39	PH7669039	KNOB SCR
14	PH7669014	CAP NUT	40	PH7669040	PATTERN ADJ
15	PH7669015	FLUID CAP WASHER	41	PH7669041	PATTERN ADJ KNOB
16	PH7669016	ATOMIZATION CAP	42	PH7669042	SPECIAL WASHER
17	PH7669017	FLUID NOZZLE 1.4MM	43	PH7669043	PATTERN ADJ SCREW
18	PH7669018	BAFFLE	44	PH7669044	O-RING
19	PH7669019	BAFFLE WASHER	45	PH7669045	SNAP RETAINER
20	PH7669020	DIRECTION SCREW	46	PH7669046	AIR INLET JOINT
21	PH7669021	PAINT NEEDLE WASHER	47	PH7669047	TOOL WRENCH
22	PH7669022	LOCKING SPRING	48	PH7669048	BAFFLE WRENCH
23	PH7669023	TRIGGER LEVER 1	49	PH7669049	CLEANING BRUSH
24	PH7669024	TRIGGER LEVER 2	50	PH7669050	AIR REGULATOR
25	PH7669025	TRIGGER			<u> </u>

WARRANTY AND RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of **1 year** to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Authorization Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the manual.

Grizzly Industrial, Inc. 1203 Lycoming Mall Circle Muncy, PA 17756 Phone: (570) 546-9663 Fax: (800) 438-5901

E-Mail: techsupport@grizzly.com

Web Site: http://www.grizzly.com

Thank you again for your business and continued support. We hope to serve you again soon!



NI a	dustrial, Inc.		
	me		
	eet		
		State	
		Email	
Mo	del #	Order #	Serial #
		on a voluntary basis. It will be used d services. All information is stri	
1.	Advertisement	?FriendCatalogWebsite Other:	•
2.	Which of the following maga	azines do you subscribe to?	
	Family Handyman Hand Loader Handy Home Shop Machinist Journal of Light Cont. Live Steam Model Airplane News Modeltec	Popular Science Popular Woodworking Practical Homeowner Precision Shooter Projects in Metal RC Modeler	Today's Homeowner Wood Wooden Boat Woodshop News Woodsmith Woodwork Woodworker West Woodworker's Journal Other:
3.	What is your annual househ\$20,000-\$29,000\$50,000-\$59,000	old income? \$30,000-\$39,000 \$60,000-\$69,000	\$40,000-\$49,000 \$70,000+
4.	What is your age group?20-2950-59	30-39 60-69	40-49 70+
5.	How long have you been a v	woodworker/metalworker? 2-8 Years8-20 Yo	ears20+ Years
6.	How many of your machines	s or tools are Grizzly? 3-56-9	10+
7.	Do you think your machine i	represents a good value?	No
8.	Would you recommend Griz	zly Industrial to a friend?	No
9.	Would you allow us to use y Note: We never use names	vour name as a reference for ou more than 3 times.	
10.	Comments:		

Send a Grizzly Catalog to a friend:

Name			
Street			
City	State	Zip	

FOLD ALONG DOTTED LINE



Place Stamp Here



GRIZZLY INDUSTRIAL, INC. P.O. BOX 2069 BELLINGHAM, WA 98227-2069

