

**Franklin**<sup>®</sup>

JCV-600

## Reflections by Johnny Cash


### User's Guide

www.franklin.com


Please read the following safety warnings and precautions before using your device. **Note:** If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

## 1. Unpacking

You will find the following items in the package:

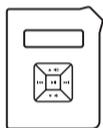


Player

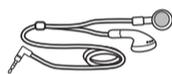

Earphones



2 Audio CDs

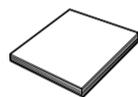


User's Guide

## 2. Installing Battery

Your device is powered by one AAA battery (not included). To install or replace it:

1. Turn your product off and turn it over.
2. Slide open the battery cover by pushing in the direction of the arrow.
3. Install the battery following the +/- markings in the battery compartment.

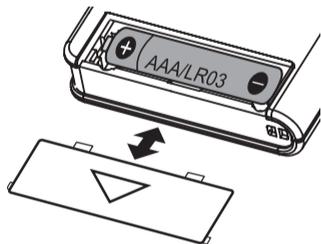

- **Important:** Be sure that the battery is installed correctly. Wrong polarity may damage the device.

### 4. Replace the battery cover.


### Battery Precautions

- Non-rechargeable batteries are not to be recharged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.


- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

## 3. Inserting the Earphones

Insert the earphones into the earphone jack (3.5mm).

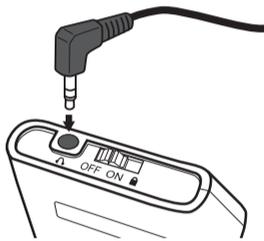


## 4. Key Guide


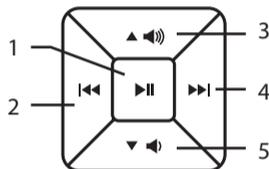


1. **▶||**
  - Starts playback
  - Pauses playback
  - Press and hold to stop playback
  - In menu search, press and hold to return to the main menu
  - In menu selection, selects the highlighted item
2. **◀◀**
  - Goes to the previous playback item
  - Press and hold to rewind through a playback item during playback
3. **▶▶**
  - In menu selection, scrolls up
  - While listening, increases the volume
  - When playback is paused, increases the screen contrast
4. **▶▶▶**
  - Goes to the next playback item
  - Press and hold to fast forward through a playback item during playback
5. **▼◀**
  - In menu selection, scrolls down
  - While listening, decreases the volume
  - When playback is paused, decreases the screen contrast


## 5. Switching ON and OFF

**SWITCH ON:** Slide the power switch to the ON position.

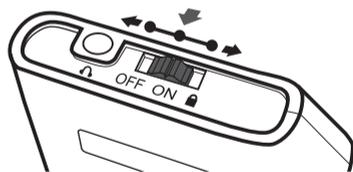

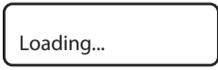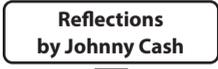- **Display**  
You see the following screens after switch on:  
  
switch on   
  
  
main menu 

**SWITCH OFF:** Slide the power switch to the OFF position.

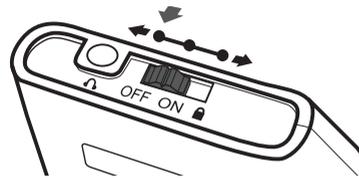

- The display is turned off.

## 6. Player's Content

Reflections by Johnny Cash is separated into two sections.

 Reflections by Johnny Cash Church & the Chose

- **Section 1**  
The music note (🎵) in front of the menu heading "Reflections by Johnny Cash", indicates the section in the player that the categories Mr. Cash discusses are accompanied with background music. The music note additionally indicates that this content is also on the Reflections by Johnny Cash CDs.  
See 7. *Highlighting a Category for Playback.*
- **Section 2**  
The menu headings without the music note, indicate the categories Mr. Cash reads his favorite verses from the Holy Bible, King James Version, without commentary and music.  
See 8. *Highlighting a Verse for Playback.*

### Content in the main menu

🎵 Reflections by Johnny Cash Church & the Chosen  
Comfort & Mercy  
Doing the Right Thing  
Faith  
Family  
Final Things  
God  
Grace  
Healing  
Jesus  
Joy  
Judgment & Justice  
Life  
Light  
Love  
Mankind in Nature  
Music  
Peace  
Praise & Prayer  
Prophecy  
Redemption, Resurrection, Rebirth  
Sin  
Spirit  
Teaching & Discipleship  
Temptation  
Wisdom  
Johnny Cash's Bonus Favorites

### Categories in "Reflection by Johnny Cash" with playback lengths


🎵 Church & the Chosen 2:24  
🎵 Comfort & Mercy 8:57  
🎵 Doing the Right Thing 7:05  
🎵 Faith 2:49  
🎵 Family 2:37  
🎵 Final Things 5:19  
🎵 God 6:35  
🎵 Grace 4:34  
🎵 Healing 2:29  
🎵 Jesus 4:39  
🎵 Joy 1:56  
🎵 Judgment & Justice 1:39  
🎵 Life 2:04  
🎵 Light 1:56  
🎵 Love 2:20  
🎵 Mankind in Nature 4:30  
🎵 Music 7:44  
🎵 Peace 2:20  
🎵 Praise & Prayer 4:24  
🎵 Prophecy 11:00  
🎵 Redemption, Resurrection, Rebirth 6:53  
🎵 Sin 6:20  
🎵 Spirit 2:28  
🎵 Teaching & Discipleship 5:42  
🎵 Temptation 3:17  
🎵 Wisdom 7:53

## 7. Highlighting a Category for Playback

### Example

To highlight the fourth category "Faith" in "Reflections by Johnny Cash":

1. In the main menu, press **▲◀** or **▼◀** to highlight "Reflections by Johnny Cash".

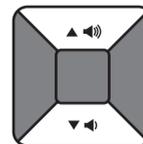


 Reflections by Johnny Cash Church & the Chose

- **Note:** This section is automatically highlighted if you are at the top of the main menu.

2. Press **▶||** to select "Reflections by Johnny Cash".



3. Press **▲◀** or **▼◀** three times to highlight the category "Faith".

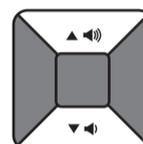


 Reflections by Johnny Cash Faith

## 8. Highlighting a Verse for Playback

### Example

To highlight the fourth verse "Mark 10:7-9" in the category "Family":

1. In the main menu, press **▲◀** or **▼◀** to highlight the category "Family".

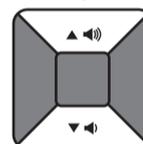


Family  
Final Things

2. Press **▶||** to select "Family".



3. Press **▼◀** four times to highlight the verse "Mark 10:7-9".

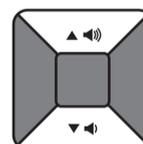

Family  
Mark 10:7-9

- If you have made a mistake during selection, press and hold **▶||** to return to the main menu.

## 9. Playback

Press **▶||** to play the highlighted playback item.




- **Display**  
In the playback screen, you see the title, battery level, playback status and elapsed playback time.

 Faith  
Play 0:00:12 

## 10. Volume Adjustment

During playback, press ▲ (volume up) or ▼ (volume down) to adjust the volume.

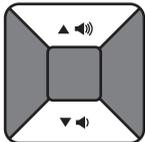

- **Display**  
You see the current volume level.
- 
- Press ► (power) when done, or the volume screen will disappear after a few seconds.

## 11. Pause


During playback, press ► (power) once to pause the playback.



- **Display**  
You see the playback status changes to "Pause".
- 

### 11.1 Adjusting Screen Contrast


During pause, press ▲ (volume up) or ▼ (volume down) to adjust the screen contrast. The setting determines how dark or light the screen is.

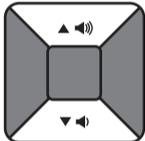


- **Display**  
You see the current contrast level.
- 
- Press ► (power) when done, or the contrast level screen will disappear after a few seconds.

### 11.2 Resume from Pause


During pause, press ► (power) once to resume the playback.

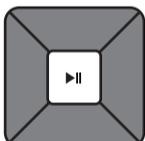

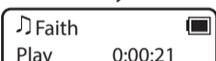- **Display**  
You see the playback status changes back to "Play".
- 


## 12. Skipping and Quick Search

- To go to the previous or next playback item during playback, press ◀ (previous) or ▶ (next), respectively.
- To fast rewind or forward through the playback item during playback, press and hold ◀◀ (fast previous) or ▶▶ (fast next), respectively.

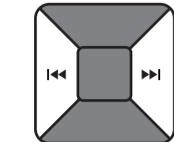

## 13. Locking Keys

During playback, slide the power switch to the LOCK (🔒) position to avoid accidental key activation.

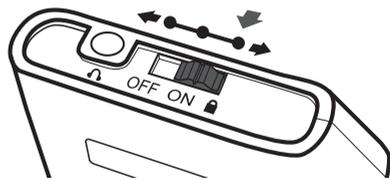

- **Display**  
You see a key lock message showing briefly when the key lock is activated.
- 
- Slide the power switch to the ON position to unlock the keys.

## 14. Stop Playback

During playback or pause, press and hold ► (power) until the playback is stopped.



- **Display**  
You see the main menu when playback is stopped. The part of the main menu you see depends on the last item you have listened to.



## 15. Specifications

**Model:** JCV-600 Reflections by Johnny Cash

**Battery:** 1 x AAA (not included)

**Size:** 7.9 X 6.2 X 1.5 mm (3.1 x 2.4 x 0.6 inch)

**Weight:** 30g (1 oz)

**Earphones:** included, for 3.5mm audio jack  
© 1999 -2013 Franklin Electronic Publishers, Inc., Burlington, N.J. U.S.A. All rights reserved.  
Scripture taken from the Holy Bible, King James Version.

This Class B digital apparatus complies with Canadian ICES-003. *Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.*

Imported to the European Community by:  
Franklin Electronic Publishers GmbH  
Kapellenstr. 13, 85622 Feldkirchen, Germany



## 16. Recycling and Disposal

### Device Disposal

 This device should be disposed through your local electronic product recycling system – do not throw into the trash bin.

### Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

### Battery Disposal

 Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by turning the power off and on, or by removing and replacing the batteries.

## 17. Product Care

Your device is designed to be light, compact and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage. In order to avoid damage to your device, please:

- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly

dispose of the product avoiding contact with your skin, then wash your hands immediately.

- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

## 18. License Agreement (U.S.)

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

### Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorised disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

## 19. FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

–Reorient or relocate the receiving antenna.

–Increase the separation between the equipment and receiver.

–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## 20. Warranty Information

### 20.1 Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

### 20.2 Limited Warranty (U.S.)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY, OR FITNESS FOR

A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

**Franklin Electronic Publishers, Inc.**

**Attn: Service Department**  
**One Franklin Plaza, 8 Terri Lane,**  
**Burlington, NJ 08016-4907**

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

### 20.3 Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

### 20.4 Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

### 20.5 Limited Warranty (Australia)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. This product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. If you think your product is defective, please contact Franklin to arrange for repair or replacement:  
FRANKLIN ELECTRONIC PUBLISHERS (AUST) PTY LTD.  
Unit 4, 25 Gibbes Street, Chatswood, NSW 2067, Australia

Contact person: Service Manager

Tel: 1800 882 588

Email: service\_au@franklin.com

Charges will be made for all repairs unless valid proof of purchase is provided. Your product will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time. The repair of your goods may result in the loss of any user-generated data. Please ensure that you have made a copy of any data saved on your goods. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

SHB-28002-00 Rev. A

Printed in China