

Portable CD player

**AZ7780**  
**AZ7781**  
**AZ7782**  
**AZ7783**  
**AZ7784**  
**AZ7880**  
**AZ7881**  
**AZ7882**  
**AZ7883**  
**AZ7884**



*Let's make things better.*



**PHILIPS**



Es necesario que lea cuidadosamente su instructivo de manejo.


	<b>PRECAUCIÓN - ADVERTENCIA</b>	
	<b>No abrir, riesgo de choque eléctrico</b>	
<b>ATENCIÓN</b>		
<b>Verifique que el voltaje de alimentación sea el requerido para su aparato</b>		
<b>Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.</b>		

Descripción: **Tocadiscos de CD portatil**  
 Modelo: **AZ 7780, AZ 7781, AZ 7782, AZ 7783, AZ 7784  
 AZ 7880, AZ 7881, AZ 7882, AZ 7883, AZ 7884**  
 Alimentación: **110-127/220-240 V; ~50-60 Hz**  
 Consumo: **4 W (AY 3170)  
 8 W (AY 3160)**  
 Importador: **Philips Mexicana, S.A. de C.V.**  
 Domicilio: **Norte 45, # 669, Col. Industrial Vallejo**  
 Localidad y Telefono: **C.P. 02300 México D.F., Tel. 728 42 00**  
 Exportador: **Philips Hong Kong, Ltd.**  
 País de Origen: **China**

Nº de Serie: \_\_\_\_\_

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO  
 ANTES DE USAR SU APARATO.**

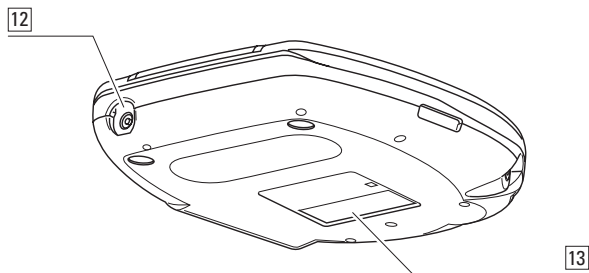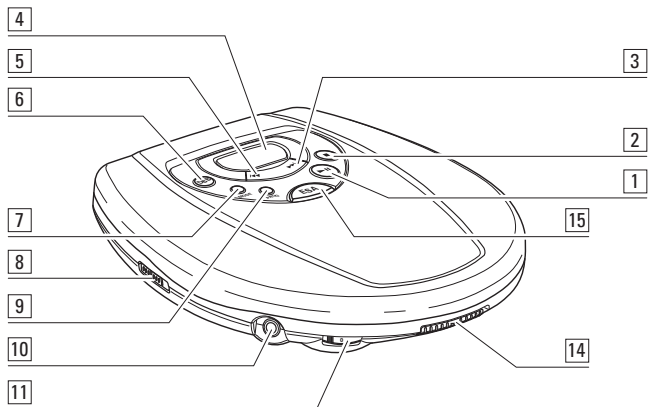



<b>English</b>	General information ..... 11
Controls ..... 6	CD play ..... 12–13
Quick start ..... 7	Features ..... 14–18
Power supply ..... 8–9	In-car connection ..... 19
Battery pack/Headphones ..... 10	Troubleshooting ..... 20–21


English

<b>Français</b>	Informations générales ..... 27
Commandes ..... 22	Lecture CD ..... 28–29
Mise en service rapide ..... 23	Fonctions spéciales ..... 30–34
Alimentation électrique ..... 24–25	Raccordement en voiture ..... 35
Bloc accumulateur/Écouteurs ..... 26	Pannes et remèdes ..... 36–37

Français

<b>Español</b>	Información general ..... 43
Controles ..... 38	Reproducción de CD ..... 44–45
Descripción rápida ..... 39	Características ..... 46–50
Suministro eléctrico ..... 40–41	Conexión para el automóvil ..... 51
Unidad de baterías/Auriculares ..... 42	Localización de averías ..... 52–53



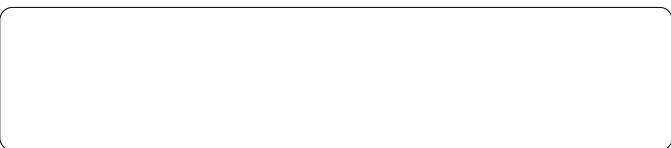




Español



中文

<b>Guarantees</b>	Philips product warranty for
Polizia de garantia	<b>Australia</b> ..... 72–73
<b>Mexico</b> ..... 70–71	Guarantee and service for
	<b>New Zealand</b> ..... 74


## CONTROLS, refer to the illustration on page 3

- 1  .....switches the set on, starts and interrupts CD play
- 2  .....stops CD play, erases a program, activates charging and switches the set off
- 3  .....skips and searches forward
- 4 .....display
- 5  .....skips and searches backward
- 6 DBB.....**DYNAMIC BASS BOOST** switches the bass enhancement on/off
- 7 MODE .....selects the different playing possibilities: **SHUFFLE**, **SHUFFLE REPEAT ALL**, **REPEAT**, **REPEAT ALL** and *SCAN*
- 8 RESUME .....stores the last position played  
**HOLD** .....**locks all buttons**  
OFF.....switches RESUME and HOLD off
- 9 PROG .....programs tracks and reviews the program
- 10  .....3.5 mm headphone and remote control socket
- 11 VOL  .....adjusts the volume
- 12 4.5V DC.....socket for external power supply
- 13 .....typeplate
- 14 OPEN  .....opens the CD lid
- 15 ESA.....**ELECTRONIC SHOCK ABSORPTION** ensures continuous playback regardless of vibrations and shocks



***This set complies with the radio interference requirements of the European Community***

# QUICK START


## 1 OPEN

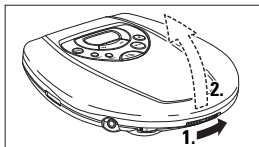


## 2 BATTERY

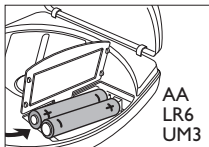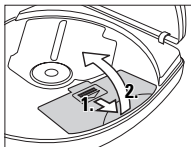


## 3 CD

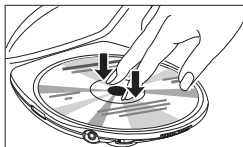


## 4 HEADPHONES

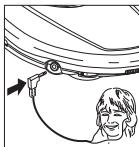




## 5 HOLD → OFF

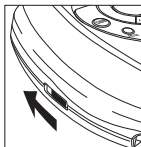

## 6 PLAY

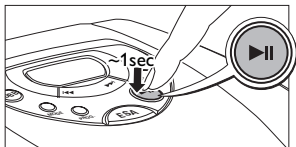

## 7 VOLUME

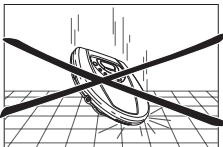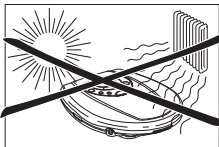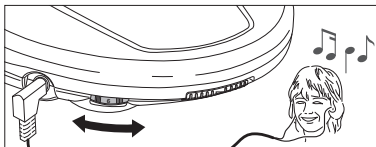

# POWER SUPPLY

## Batteries (supplied or optionally available)


With this set you can use either:

- normal batteries (preferably Philips),
- alkaline batteries (type **LR6**, **UM3** or **AA**), or
- the rechargeable Ni-Cd battery pack AY 3361. Make sure you purchase this special battery pack, as any pack other cannot be recharged.

### Inserting batteries


- 1 Push OPEN ► to open the CD lid.
- 2 Open the battery compartment and insert either 2 alkaline batteries or the rechargeable battery pack.

*Notes: – Old and new or different types of batteries should not be used in combination.  
– Remove batteries if they are empty or if the set will not be used for a long time.*

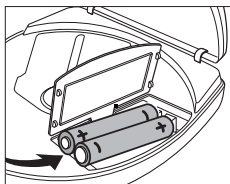

**Batteries contain chemical substances, so they should be disposed of properly.**

### Indication of empty batteries

- Replace the batteries or connect the mains adapter as soon as  is flashing and *бАт* is displayed.



### Average playing time of batteries under normal conditions


Battery type	ESA on	ESA off
Normal	3½ hours	3½ hours
Alkaline	14 hours	15 hours
Ni-Cd battery pack	4 hours	5 hours



## Mains adapter (supplied or optionally available)



Only use the AY 3170 or AY 3160 mains adapter (4.5 V direct current, positive pole to the center pin). Any other product may damage the set.

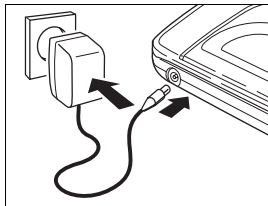- 1 Make sure the local voltage corresponds to the adapter's voltage.
- 2 Connect the mains adapter to the 4.5V DC socket of the player and to the wall socket.



*Note: Always disconnect the adapter when you are not using it.*

## Recharging the battery pack

- 1 Make sure you insert the rechargeable Ni-Cd battery pack AY 3361.
  - 2 Connect the mains adapter to the 4.5V DC socket of the player and to the wall socket.
  - 3 If necessary press **■** once or twice until the set is switched off.  
→  is flashing, **CHARGE** is displayed.
- Recharging stops when you switch on the set or when 8 hours have passed by.
- 4 When the battery pack is recharged fully,  is shown and **FULL** is displayed.



*Note: It is normal for the battery pack to become warm during recharging.*

# BATTERY PACK/HEADPHONES


## Battery pack handling


- Recharging already charged or half-charged batteries will shorten their lifetime. Therefore, after using the battery pack a few times, discharge it completely before recharging.
- To avoid a short circuit, the battery pack should not touch any metal objects.
- When the battery pack quickly becomes empty after recharging, the end of its lifetime has been reached.

## Headphones (AY 3677)

### Connecting the headphones

- Connect the supplied headphones to .

*Note:*  can also be used for connecting your HiFi system (signal lead) or your car radio (adapter cassette or signal lead). In both cases, the volume of the CD player must be set to position 8.

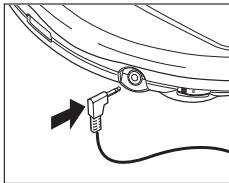


### Use your head when using headphones

- Hearing safety: Do not play your headset at a high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
- Traffic safety: Do not use while operating a motorized vehicle. It may create a traffic hazard and it's illegal in many areas. You should use extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

# GENERAL INFORMATION

## CD player and CD handling

- Do not touch the lens (A) of the CD player.
- Do not expose the set, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).
- You can clean the CD player with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.
- To clean the CD, wipe it in a straight line from the centre toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.
- The lens may cloud over when the set is moved suddenly from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.
- Active mobile phones in the vicinity of the CD player may cause malfunctions.
- Avoid dropping the set as this may cause damage.

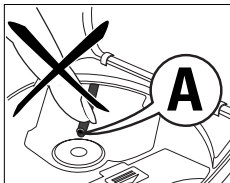

## Environmental information





- All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).
- Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

# CD PLAY

## Playing a CD

This CD player can play all kinds of **Audio Discs** such as CD Recordables and CD Rewritables. Do not try to play a CD ROM, CDi, CDV or computer CD.

- 1 Push the OPEN ► slider.  
→ The lid opens.
- 2 Insert an audio CD, printed side up, by pressing gently on the CD center so that it fits onto the hub. Close the lid by pressing it down on the left side.
- 3 Press ►|| for approximately 1 second to switch the set on and start playback.  
→ The current track number and the elapsed playing time are displayed.
  - You can interrupt playback by pressing ►||.  
→ The time where playback was interrupted is flashing.
  - Continue playback by pressing ►|| again.
- 4 Press ■ to stop playback.  
→ The total number of tracks and the total playing time of the CD are displayed.
- 5 Press ■ again to switch off the set.
- 6 To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

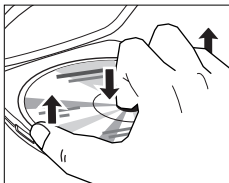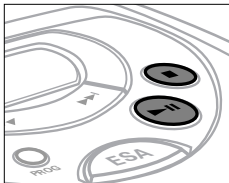
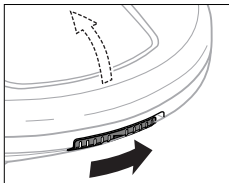


## Playback information

- If a CD Rewritable (CD Recordable) is not recorded properly, *RF d 15C* is displayed. In that case, use FINALIZE on your CD recorder to complete the recording.
- If you play a CD Rewritable, it takes 5–25 seconds after pressing ►II until sound reproduction starts.
- Playback will stop if you open the CD lid.
- While the CD is read, *d 15C* is flashing.
- If there is no activity for 90 seconds, the set will switch off automatically to save energy. In that case, settings like DBB, Program and ESA will be lost.

## Volume and sound adjustment

- Adjust the volume by using VOL ▲.
- Press DBB to switch the bass enhancement on or off.
  - **DBB** is shown if the bass enhancement is activated.

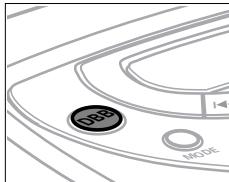


# FEATURES

## Selecting a track and searching

### Selecting a track during playback

- Briefly press ◀◀ or ▶▶ once or several times to skip to the current, previous or subsequent track start.
  - Playback continues with the selected track and its number is displayed.

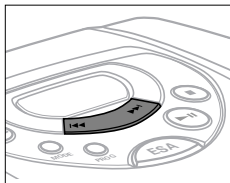

### Selecting a track when playback is stopped

- 1 Briefly press ◀◀ or ▶▶ once or several times.
  - The selected track number is displayed.
- 2 Press ▶▶ to start CD play.
  - Playback starts with the selected track.

### Searching for a passage during playback

- 1 Keep ◀◀ or ▶▶ depressed to find a particular passage in a backward or forward direction.
  - Searching is started and playback continues at a low volume. After 2 seconds the search speeds up.
- 2 Release the button when you reach the desired passage.
  - Normal playback continues from this very position.


Notes: – During SCAN, searching is not possible.

– During SHUFFLE, SHUFFLE REPEAT ALL, REPEAT or while playing a program searching is possible only within the particular track.

## Programming track numbers

You can select up to 99 tracks and store them in the memory in a desired sequence. You can store any track more than once.

- 1 While playback is stopped, select a track with ◀◀ or ▶▶.
- 2 Press PROG to store the track.
  - **PROGRAM** lights up, the track number programmed and  $P$  with the total number of stored tracks are displayed.

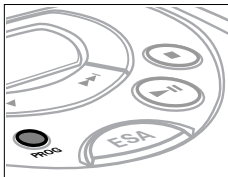

- 3 Select and store all desired tracks in this way.

- 4 Press ▶▶ to start playback of your selected tracks.
  - **PROGRAM** is shown and playback starts.



- You can review the program by pressing PROG for more than 2 seconds.
  - The display shows all stored tracks in sequence.

*Notes:* – If you press PROG and there is no track selected, *SELECE* is displayed.  
 – If you try to store more than 99 tracks, *FULL* is displayed.

## Erasing the program

- 1 If necessary, press ■ to stop playback.
- 2 Press ■ to erase the program.
  - *CLEAR* is displayed once, **PROGRAM** goes off and the program is erased.



*Notes:* The program will also be erased if you



- interrupt the power supply,
- open the CD lid, or
- the set is switched off automatically.

# FEATURES

## Storing the last position played – RESUME

You can store the last position played. When restarting, playback continues from where you have stopped.


- 1 Switch the slider to RESUME during playback to activate RESUME.  
→ **RESUME** is shown.
  - 2 Press ■ whenever you want to stop playback.
  - 3 Press ►|| whenever you want to resume playback.  
→ **RESUME** is shown and playback continues from where you have stopped.
- To deactivate RESUME, switch the slider to OFF.  
→ **RESUME** goes off.

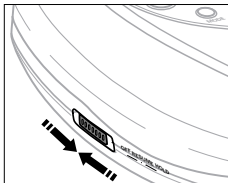

## Locking all buttons – HOLD

You can lock the buttons of the set. When a key is pressed, no action will be executed then.

- 1 Switch the slider to HOLD to activate HOLD.  
→ All buttons are locked. *Hold* is displayed by pressing any key. If the set is switched off, *Hold* is displayed only by pressing ►|| and ■.
- 2 To deactivate HOLD, switch the slider to OFF.

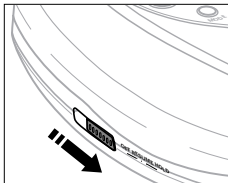




*Note: When you deactivate HOLD by switching the slider to RESUME and restart, playback continues from where you have stopped.*



## ESA

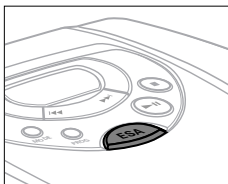With a conventional portable CD player, you might have experienced that the music stopped e.g. when you were jogging. The **ELECTRONIC SHOCK ABSORPTION** protects against loss of sound caused by vibrations and shocks. Continuous playback is ensured. However it does not protect the set against any **damage** caused by **dropping!**



- Press ESA during playback to activate the shock protection.
  -  is shown and the protection is activated.
- To deactivate the shock protection, press ESA again.
  -  goes off and the protection is deactivated.



## Acoustic feedback

The set is equipped with a feature that accompanies various key operations with an acoustic signal.

- Keep DBB pressed for more than 3 seconds.
  - If the acoustic signal was deactivated:*
    - *bEEP* is displayed and the acoustic signal is activated.
  - If the acoustic signal was activated:*
    - *no bEEP* is displayed and the acoustic signal is deactivated.




# FEATURES

## Selecting different playing possibilities – MODE

It is possible to play tracks in random order, to repeat a track or the CD and to play the first few seconds of each track.



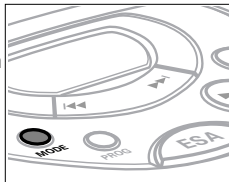

- 1 Press MODE during playback as often as necessary until the display shows either:
  - **SHUFFLE**: All tracks of the CD are played in random order until all of them have been played once.
  - **SHUFFLE REPEAT ALL**: All tracks of the CD are played repeatedly in random order.
  - **REPEAT**: The current track is played repeatedly.
  - **REPEAT ALL**: The entire CD is played repeatedly.
  - **SCAT**: The first 10 seconds of each of the remaining tracks are played in sequence.



- 2 Playback starts in the chosen mode after 2 seconds.
- 3 To return to normal playback, press MODE until the display indication disappears.

## Remote control (supplied or optionally available)

Use the AY 3764 cord remote control. The buttons on the remote control have the same functions as the corresponding buttons on the CD player.


- 1 If necessary press  once or twice until the set is switched off.
- 2 Firmly connect the remote control to  and the headphones firmly to the remote control's socket.
- 3 Turn the volume down with VOL  on the remote control and set VOL  on the CD player to position 8.



# IN-CAR CONNECTION

## In-car use (connections supplied or optionally available)


Only use the AY 3545 car voltage converter (4.5 V, DC, positive pole to the center pin) and the AY 3501 car adapter cassette. Any other product may damage the set.

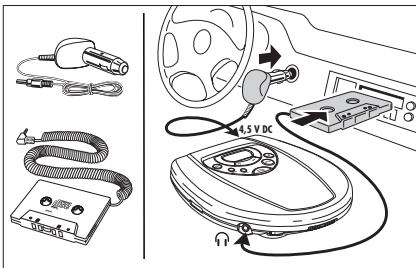- 1 Put the CD player on a horizontal, vibration-free and stable surface. Make sure it is a safe place, where the player is no danger or obstacle to the driver and passengers.



- 2 Connect the DC plug of the voltage converter to the 4.5V DC socket of the CD player (**only for a 12 V car battery, negative grounding**).
  - 3 Insert the voltage converter into the cigarette lighter socket. If necessary, clean the cigarette lighter socket to obtain a good electrical contact.
  - 4 Turn down the volume and connect the adapter cassette plug to the  socket of the CD player.
  - 5 Carefully insert the adapter cassette into the car radio's cassette compartment.
  - 6 Make sure the cord does not hinder your driving.
  - 7 Start the CD player, set VOL  to position 8 and adjust the sound with the car radio controls.
- Always remove the voltage converter from the cigarette lighter socket when the CD player is not in use.

*Notes: – Avoid excessive heat from the car heating or from direct sunlight (e.g. in a parked car in the summer).*

*– If your car radio has a LINE IN jack, it is the best to use it for the car radio connection instead of the adapter cassette. Connect the signal lead to this LINE IN jack and the  jack of the CD player.*

# TROUBLESHOOTING

## WARNING

*Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee.*

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>No power, playback does not start</b>	<b>Batteries</b>	
	Batteries inserted incorrectly	Insert the batteries correctly
	Batteries are empty	Change the batteries
	Contact pins are dirty	Clean them with a cloth
	<b>Mains adapter</b>	
	Loose connection	Connect the adapter securely
<b>In-car use</b>		
	Cigarette lighter is not powered when ignition is off	Switch on ignition or insert batteries
	<b>no disc indication</b>	
<i>no disc</i>	CD-RW (CD-R) is not recorded properly	Use FINALIZE on the CD Recorder to complete the recording
<b>no disc indication</b>	The CD is scratched badly or dirty	Replace or clean the CD
	CD is not or incorrectly inserted	Insert a CD, label upwards
	The laser lens is steamed up	Wait until the lens has cleared
<b>HOLD indication and/or no reaction to controls</b>	<b>HOLD is activated</b>	<b>Deactivate HOLD</b>
	Electrostatic discharge	Disconnect the set from power supply or take out the batteries for a few seconds

# TROUBLESHOOTING

If a fault occurs, first check the points listed, before taking the set for repair.

If you are unable to solve a problem by following these hints, consult your dealer or service center.

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
<b>The CD skips tracks</b>	The CD is damaged or dirty	Replace or clean the CD
	<b>RESUME, SHUFFLE</b> or <b>PROGRAM</b> is active	Switch off <b>RESUME, SHUFFLE</b> or <b>PROGRAM</b>
<b>No sound or bad sound quality</b>	<b>PAUSE</b> is activated	Press <b>▶II</b>
	Loose, wrong or dirty connections	Check and clean connections
	Volume is not adjusted	Adjust the volume
	Headphones worn the wrong way	Pay attention to the <b>L</b> (left) and <b>R</b> (right) indications
	Strong magnetic fields near the CD player	Change the player's position or connections
	<b>In-car use</b>	
	Adapter cassette is inserted incorrectly	Insert the adapter cassette correctly
Temperature inside the car is too high/low	Let the CD player adjust to the temperature	
Cigarette lighter socket is dirty	Clean the cigarette lighter socket	
Wrong playback direction of the car cassette player's autoreverse feature	Change the autoreverse direction	
<b>Battery recharging on board does not work</b>	Use of wrong batteries	Only use the Ni-Cd battery pack AY 3361
	Contacts are dirty	Clean them with a cloth

# POLIZA DE GARANTÍA

## ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los períodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor. Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación**, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestra central de servicio al tel.: 7284252, y en el interior del país LADA sin costo al 01 800 506 9200 en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles**, contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

**La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.**

**Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada y firmada por la casa vendedora**, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

### ESTA POLIZA NO SE HARÁ EFECTIVA EN LOS SIGUIENTES CASOS:

- Cuando el aparato sea utilizado en condiciones anormales y los daños o desperfectos que manifieste sean causados por mal trato, descuido o mal uso.
- Cuando el aparato no haya sido operado de acuerdo a su instructivo de uso, en donde se señalan las condiciones normales de operación, los valores nominales y las tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.
- Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.
- Cuando los datos de esta póliza hayan sido alterados o modificados.
- Por fenómenos naturales no imputables a la empresa tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos, etc.

### PERIODOS DE GARANTÍA

**12 MESES.** – Televisores, videocaseteras, proyectores, cámaras de video, decodificadores de señal (IRD), T.V. hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, equipos modulares, sintonizadores.

**6 MESES.** – Radio grabadoras con y sin compact disc, mini reproductores de cassette, reproductor de CD portátil, radio relojes, radios A.M.F.M., auto estéreos, teléfonos inalámbricos.

**3 MESES.** – Accesorios, controles remotos y bocinas.

# Philips Mexicana, S.A. de C.V.

Producto importado por:  
Philips Mexicana, S.A. de C.V.  
Norte 45 No. 669 Col. Ind. Vallejo  
Del. Azcapotzalco C.P. 02300  
Tels. 728 42 00 y 729 48 00

Centro de Información al Consumidor:  
Norte 45 No. 669 Col. Ind. Vallejo  
Del. Azcapotzalco C.P. 02300  
Tels. 368 77 88 Lada 01 800 504 62 00

Centro de Servicio Vallejo:  
Norte 45 No. 669 Col. Ind. Vallejo  
Del. Azcapotzalco C.P. 02300  
Tel. 368 20 33

En caso que en su producto se produzca alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres), de tener alguna duda, por favor llame a nuestra CENTRAL DE SERVICIO, en donde con gusto le atenderemos.

Asimismo cuando requiera refacciones y partes originales para su producto, acuda a los mismos centros de servicio. Para hacer efectiva la garantía de su producto, es necesario que presente usted esta póliza debidamente requisitada o de lo contrario presentar su factura de compra.

Modelo \_\_\_\_\_ N° de Serie \_\_\_\_\_ La presente garantía contará a partir de: \_\_\_\_\_ día \_\_\_\_\_ mes \_\_\_\_\_ año

Ciudad	EDO	Calle y N°	Colonia	C. P.	Nombre Comercial	Lada	Telefono	Fax
Acapulco	GRO	Av. Revolucion N° 28	M. Aleman	39300	Servicio Electronico Profesional	74	83 32 96	--
Cd. Juarez	CHIH.	Rancho el Becerro 3011	Pradera Dora	39300	Teleservicio Dominguez	16	18 21 28	18 21 28
Cd. Reynosa	TAMPS	Rosalinda Guerrero Esq. 5 de Febrero	Prof. Longoria	88699	Centro de Servicio Lugo	892	492 43	--
Chihuahua	CHIH.	Trasvía y Rates N° 3503-A	San Felipe	31240	Zener Electronica	14	14 01 16	26 50 41
Colima	COL.	Francisco I. Madero N° 426	Centro	28000	TV Antenas de Colim	331	403 01	403 01
Culiacan	SIN.	Venustiano Carranza N° 140-A Nte.	Centro	80090	Estereo Voz	67	16 15 10	--
Guadalajara	JAL.	Av. Vallarta N° 2250	Ladron de Guevara	44600	Leecom S.A. de C.V.	3	616 18 88 616 01 26	615 72 62
Leon	GTO	Hernandez Alvarez N° 726	Ssan Juan de Dios	37480	Tecnicos Especializados	47	47 70 26-99	15 58 64
Merida	YUC	Calle 70 N° 443 X 49 Depto. 8	Centro	97000	Servicentro	99	28 54 28	23 39 97
Mexicali	B.C.N.	Calz. Cuauhtemoc N° 866-2	Cuauhtemoc Nte.	21200	Baja Electronic's	619	67 49 16	67 49 16
Mexico	D.F.	Norte 45 N° 669	Industrial Vallejo	2300	Philips Mexicana S.A. de C.V.	5	368 20 33	728 42 72
Mexico	D.F.	Calz. Vallejo N° 904 Loc. 5	Industrial Vallejo	2300	Tecnologia y Servicio S.A. de C.V.	5	587 57 99	587 57 99
Mexico	D.F.	Pilares N° 519 Local C-3	Del Valle	03100	Cocesionario Pilares	5	605 42 15 605 42 67	605 43 46
Monterrey	N.L.	Juan Mendez N° 825 Nte.	Centro	64000	Monterrey Centro Electronico S.A.	8	375 16 17	374 85 42
Morelia	MICH.	Lago de Patzcuaro N°500-A	Ventura Puente	58020	Multiserv. Prof. de Zamora	43	12 03 17	--
Oaxaca	OAX	Huazares N° 207	Centro	68000	El Francistor S. de R.L. de C.V.	951	647 37	--
Pachuca	HGO	Pza. de las Americas Lote 28 Nucleo D	Valle de Sn Javier	42086	Frazare Electronica	77	14 15 81	--
Puebla	PUE	Av. 10 Poniente N° 2902-B	San Alejandro	72090	Concesionario Philips de Puebla	22	30 34 39	--
Queretaro	QRO	Bolivia 32	Lomas de Queretaro	76190	Electronica Zener	421	610 09	--
San Luis Potosi	S.L.P.	Fuente De La Glorieta N° 147	Balcones del Vale	78320	Servicios Electronicos	481	534 07	--
Tampico	TAMPS	Laredo N° 105	Mainero	89060	Concesionario Phillips Tampico	12	12 36 04	--
Tijuana	B.C.N.	Calle 1a. N° 1540-3	Centro	22000	Sistemas Inalambricos de Comunicacion	66	85 95 58	85 95 58
Toluca	EDO MEX	alle Toluca N° 505	Sanchez	50040	Concesionario Philips Toluca	72	14 83 09	17 03 21
Torreon	COAH	Mariano Lopez Ortiz N° 1126 Nte.	Centro	27000	Electronica Jomar	17	22 00 05	--
Tuxtla Gutierrez	CHIS	10 Nte. Ote 153-A	Centro	29000	KC-Video	96	18 19 08	--
Veracruz	VER	Av. Costa Verde N° 1116	Fracc. Costa Verde	94294	Servicios Esp. en Electronica	29	21 07 02	21 07 02
Villahermosa	TAB	Sanchez Marmol N° 206	Centro	86000	Tecnicentro	93	14 31 36	--

# AUSTRALIA

## Philips product warranty for Australia

Warranty conditions valid for Colour Television, Video Cassette Recorders, Audio Systems, and Portable Audio.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Sound and Vision warrants its products to the purchaser as follows and subject to the stated conditions.

### 12 months free service

Any defect in materials or workmanship in the product occurring within 12 months from the original date of purchase will be rectified free of charge by Philips Service or one of our authorised service centers.

### Conditions of warranty

1. All claims for warranty service should be made to your nearest Philips Service Branch or to a Philips authorised service dealer. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects occurring under normal use of the product when operated in accordance with the instructions.
3. Home service within the normal service area of Philips Service or one of our authorised service centres will be provided for television receivers with screen size 59cm and above. All other products are to be brought or sent to your nearest Philips Service Branch or to an authorised service centre.
4. This warranty does not cover:
  - a) Mileage or traveling time, pickup or delivery, cost of insurance.
  - b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
  - c) Product failures caused by misuse, neglect, normal wear and tear, accidental breakage, transit damage, inexpert repairs or modification by unauthorised persons, lightning strikes, vermin infestation or liquid spillage.
  - d) Cleaning of video or audio heads.
  - e) Inadequate receiving antennae.
  - f) Replacement of worn or used batteries, styli or other consumables.

The conditions contained in this warranty replace and override the provisions of the World-Wide Guarantee for Products sold in Australia.



## Philips Service Branches

To contact your nearest Philips Service Branch call **13 13 92** from anywhere in Australia.

### Sydney

Technology Park Australia Centre  
3 Figtree Drive  
Homebush NSW 2140

### Newcastle & Central Coast

984 Hunter Street  
Newcastle West NSW 2302

### Perth

1 Fredrick Street  
Belmont WA 6104

### Melbourne

Cnr Wellington & Springvale Roads  
Mulgrave VIC 3170

### Brisbane

10 Graystone Street  
Tingalpa QLD 4173

*Also Service Centres:*

### Adelaide

348 Torrens Road  
Croydon Park SA 5008

### Hobart

2A Pierce Street  
Moonah TAS 7009

### Wollongong

1/216 Corrimal Street  
Wollongong NSW 2500

### Canberra

Unit F, 66–70 Maryborough Street  
Fyshwick ACT 2609

Service is also provided through 1,200 accredited service dealers throughout Australia. To find out about your nearest centre, call **13 13 92**.

## Call us direct on the Philips Customer Helpline

Philips customer care lasts as long as you keep the product. Whenever you need any information on the care or operation of your product, remember it's always best to go straight to the source. Phone Philips Helpline direct on

**13 13 91**  
**7 days a week**

– your call is always welcome.

Please record the following information for your records and keep in a safe place.

Model No:.....

Serial No:.....

***Please retain your purchase receipt  
which is required to claim service under warranty.***

Philips Electronics Australia Limited  
ACN 008 445 743, 3 Figtree Drive  
Homebush NSW 2140

Version 2, 08/97, FPCP-030

# NEW ZEALAND

## Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### The Guarantee Controller

**Philips New Zealand Ltd.**


✉ P.O. Box 41.021

**Auckland**

☎ (09) 84 94 160

fax ☎ (09) 84 97 858








**Meet Philips at the Internet**  
**<http://www.philips.com>**

English

Français

Español

中文

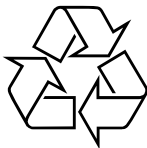

**CLASS 1**  
**LASER PRODUCT**

AZ7780	AZ7880
AZ7781	AZ7881
AZ7782	AZ7882
AZ7783	AZ7883
AZ7784	AZ7884