

PLA-4xx Series

Powerline Ethernet Adapter Series (PLA-400/400 v2/401/402/470)

User's Guide

Version 3.00
10/2007
Edition 1



About This User's Guide

Intended Audience

This manual is intended for people who want to configure the PLA-400, PLA-400 v2, PLA-401, PLA-402 and PLA-470 using the PLA-4xx Series Configuration Utility version 3.0.0(AG). You should have your basic Internet access or home network already set up.

Related Documentation

- Quick Start Guide
The Quick Start Guide is designed to help you get up and running right away. It contains information on making your hardware connections.
- Supporting Disk
Refer to the included CD for support documents.
- ZyXEL Web Site
Please refer to www.zyxel.com for additional support documentation and product certifications.

User Guide Feedback

Help us help you. Send all User Guide-related comments, questions or suggestions for improvement to the following address, or use e-mail instead. Thank you!

The Technical Writing Team,
ZyXEL Communications Corp.,
6 Innovation Road II,
Science-Based Industrial Park,
Hsinchu, 300, Taiwan.
E-mail: techwriters@zyxel.com.tw

Document Conventions

Warnings and Notes

These are how warnings and notes are shown in this User's Guide.



Warnings tell you about things that could harm you or your device.



Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

Syntax Conventions

- The PLA-400, PLA-400 v2, PLA-401, PLA-402 and PLA-470 may be referred to as the “PLA-4xx”, the “ZyXEL device”, the “device” or the “powerline adapter” in this User's Guide.
- The PLA-4xx Series Configuration Utility version 3.0.0(AG) may be referred to as the “configuration utility” or the “utility” in this User's Guide.
- Product labels, screen names, field labels and field choices are all in **bold** font.
- A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the “enter” or “return” key on your keyboard.
- “Enter” means for you to type one or more characters and then press the [ENTER] key. “Select” or “choose” means for you to use one of the predefined choices.
- A right angle bracket (>) within a screen name denotes a mouse click. For example, **Maintenance > Log > Log Setting** means you first click **Maintenance** in the navigation panel, then the **Log** sub menu and finally the **Log Setting** tab to get to that screen.
- Units of measurement may denote the “metric” value or the “scientific” value. For example, “k” for kilo may denote “1000” or “1024”, “M” for mega may denote “1000000” or “1048576” and so on.
- “e.g.,” is a shorthand for “for instance”, and “i.e.,” means “that is” or “in other words”.

Icons Used in Figures

Figures in this User's Guide may use the following generic icons. The PLA-4xx icons used may not be an exact representation of your device.

PLA-4xx 	Computer 	Notebook computer 
--	---	--

Safety Warnings



For your safety, be sure to read and follow all warning notices and instructions.

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- Do NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information. For devices that use any external cables or cords [e.g., not for wireless cards]
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adapter or cord for your device.
- Connect the power adapter or cord to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- Do NOT allow anything to rest on the power adapter or cord and do NOT place the product where anyone can walk on the power adapter or cord.
- Do NOT use the device if the power adapter or cord is damaged as it might cause electrocution.
- If the power adapter or cord is damaged, remove it from the power outlet.
- Do NOT attempt to repair the power adapter or cord. Contact your local vendor to order a new one.
- Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.
- Do NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- If you wall mount your device, make sure that no electrical lines, gas or water pipes will be damaged.

PLA-402 models only:

- Make sure that the cable system is grounded so as to provide some protection against voltage surges.

This product is recyclable. Dispose of it properly.

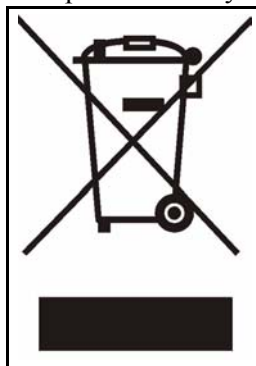


Table of Contents

About This User's Guide	3
Document Conventions.....	4
Safety Warnings.....	5
Table of Contents.....	7
List of Figures	9
List of Tables.....	11

Part I: Introduction..... 13

Chapter 1 **Introducing the PLA-4xx 15**

1.1 Overview	15
1.2 Expand Your Network with the PLA-4xx	15
1.3 Ways to Manage the PLA-4xx	16
1.4 Security	16
1.4.1 Passwords	16
1.4.2 Setting Up Security	16
1.5 Multiple Networks	17

Chapter 2 **Installing the Utility..... 19**

2.1 Overview of the Installation Process	19
2.2 Installing the Utility	19

Part II: Using the PLA-4xx 25

Chapter 3 **Managing Your PLA-4xx..... 27**

3.1 Overview	27
3.1.1 Powerline Network Security	28
3.1.2 Device Access Key (DAK)	28
3.2 Starting the Configuration Utility	28

3.3 Configuration Screen	28
3.4 Firmware Screen	30
3.5 Network Info Screen	31
3.6 Advanced Screen	32
3.7 About Screen	35
Chapter 4	
Powerline Network Setup Tutorial	37
4.0.1 Overview	37
4.0.2 Important Terms	38
4.0.3 Accessing Your Powerline Adapter	38
4.0.4 Adding a Powerline Adapter	39
4.0.5 Setting Up a New Network with a New Adapter	41
4.0.6 Splitting a Network into Two Networks	42
4.1 Troubleshooting	44
Chapter 5	
LEDs and Troubleshooting	47
5.1 LEDs	47
5.1.1 PLA-401	47
5.1.2 PLA-400/400 v2/402	48
5.1.3 PLA-470	49
5.2 Power and Light Problems	50
5.3 Configuration Utility Problems	51
5.4 Powerline Problems	52
Part III: Appendices and Index.....	53
Appendix A Product Specifications	55
Appendix B Customer Support	59
Appendix C Legal Information.....	65
Index.....	69

List of Figures

Figure 1 Expand Your Network with the PLA-4xx	15
Figure 2 .NET Framework Installation Prompt	20
Figure 3 Microsoft's Agreement	20
Figure 4 .NET Framework Installation Process	21
Figure 5 Microsoft's Agreement	21
Figure 6 InstallShield Wizard Start Screen	21
Figure 7 Customer Information Input	22
Figure 8 Install Destination Folder	22
Figure 9 Restart Screen	23
Figure 10 Example Network Setup	27
Figure 11 PLA-4xx Series Configuration Utility Icon	28
Figure 12 Configuration Screen	29
Figure 13 Firmware Screen	31
Figure 14 Network Info Screen	31
Figure 15 Priority Settings	34
Figure 16 Advanced Screen	34
Figure 17 About Screen	35
Figure 18 Plug Your Powerline Adapter into a Power Socket	38
Figure 19 Connect Your Powerline Adapter to a Computer	38
Figure 20 Click on the PLA-4xx Series Configuration Utility Icon	39
Figure 21 Add a Printer to Your Powerline Network	39
Figure 22 Adding a New Adapter	40
Figure 23 Adding an Adapter to an Existing Network	40
Figure 24 Network Name Pop-up	40
Figure 25 Add New Adapters to Make a Second Network	41
Figure 26 Making a New Network with the New Adapter	42
Figure 27 Local/Remote Adapters on a Powerline Network	42
Figure 28 Adding an Adapter to Your New Network	43
Figure 29 Incorrect DAK or No DAK	43
Figure 30 Correct DAK	43
Figure 31 An Adapter on Your New Network	44
Figure 32 Adapters on a New Powerline Network	44
Figure 33 PLA-401 Lights	47
Figure 34 PLA-400/402 Lights	48
Figure 35 PLA-470 Lights	49
Figure 36 Wall-mounting Example	58
Figure 37 RJ-45 Connector Pins	58

List of Tables

Table 1 Password Summary	16
Table 2 Configuration Screen	29
Table 3 Network Info Screen	32
Table 4 Priority Settings	33
Table 5 Advanced Screen	35
Table 6 About Screen	35
Table 7 PLA-401 Lights	47
Table 8 PLA-400/402 Lights	48
Table 9 PLA-400 v2 Lights	49
Table 10 PLA-470 Lights	50
Table 11 Hardware Specifications	55
Table 12 Firmware Specifications	56
Table 13 Performance	57
Table 14 Standards Supported	57
Table 15 RJ-45 Connector Pin Assignments	58

PART I

Introduction

[Introducing the PLA-4xx \(15\)](#)

[Installing the Utility \(19\)](#)

Introducing the PLA-4xx

1.1 Overview


This chapter introduces the main applications and features of the PLA-4xx HomePlug AV compliant powerline adapter. See [Appendix A on page 55](#) for detailed product specifications.

In this User's Guide the electrical wiring network and coaxial cable network are both referred to as the "powerline network". The HomePlug AV standard specifies how network devices communicate using standard electrical wiring.

1.2 Expand Your Network with the PLA-4xx

The PLA-4xx plugs into an ordinary power outlet to easily extend a cable or DSL broadband connection or existing Ethernet (LAN) network to any other electrical outlet in any room of a house, all without the need for any new cabling. Devices can securely communicate with each other at high data transfer rates. (See [Appendix A on page 55](#) for speeds currently supported by the PLA-4xx.) The PLA-4xx uses 128-bit Advanced Encryption Standard (AES) to ensure safe transfer of information.

Figure 1 Expand Your Network with the PLA-4xx

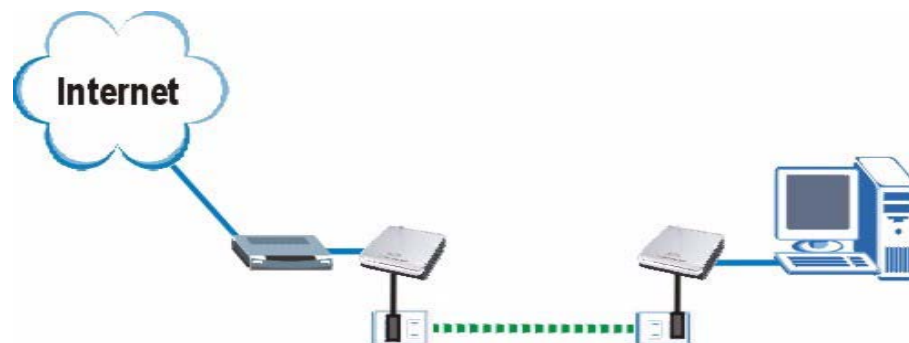

Connect your PLA-4xx to an Internet gateway such as a modem and plug it into an ordinary power outlet in your home. Plug a second PLA-4xx into another power outlet and connect a computer to the PLA-4xx for Internet access. Your network can be further expanded by plugging additional PLA-4xxs into other outlets in your home and connecting other computers or network devices (for example, a printer) to them.

Refer to your Quick Start Guide for hardware connection information. Refer to [Appendix A on page 55](#) for wall mounting instructions.

1.3 Ways to Manage the PLA-4xx

Use the **PLA-4xx Series Configuration Utility** (or utility, for short) to manage the PLA-4xx. See [Section 2.2 on page 19](#) for instructions on installing the utility.



This User's Guide describes the latest version utility. This utility is only compatible with a PLA-4xx which has the latest firmware installed. If you don't already have them, download the latest firmware and utility from the ZyXEL website.

1.4 Security

Since your powerline network may extend outside your premises, it is important to set up security on your PLA-4xx.

1.4.1 Passwords

You use two types of passwords in the HomePlug AV powerline network. The following table describes the differences between the passwords.

Table 1 Password Summary

PASSWORD	DESCRIPTION
Network Name	All powerline adapters that follow the HomePlug AV standard are shipped with the same powerline network name "HomePlugAV". Change this password via the PLA-4xx Series Configuration Utility to create a private network. See Section 3.3 on page 28 .
DAK (Data Access Key) Password	In order to manage the powerline adapters on your powerline network you must enter the adapters' DAK password in the PLA-4xx Series Configuration Utility . This password is printed on the powerline adapter itself. You don't need to add the password for the powerline adapter directly connected to the computer running the configuration utility (local powerline adapter), you only have to add the remote powerline adapters' passwords (those on your circuit, but not directly connected to your computer).

1.4.2 Setting Up Security

Use the **PLA-4xx Series Configuration Utility** to set up security on the PLA-4xx. Although the PLA-4xx is a "plug-and-play" network expanding solution there are several reasons for enabling security on the powerline network in your home.

- 1 It's easy and only requires you to change a password.
- 2 It's a good idea to ensure privacy of your communication. When you use the PLA-4xx and other powerline adapters, the electrical wiring in your home becomes an extension of your Ethernet network. Your network traffic flows freely within the electrical circuit of your home and is bounded in most cases by a power meter.

Without security (encryption) your information is accessible to anyone using a powerline adapter on the same electrical circuit. In some cases, a circuit can be shared by more than one household.

To prevent compromising your network security, you can create a private network. A private network uses a secret password to make sure that only permitted powerline adapters can communicate in your network. See [Section 3.3 on page 28](#) for information on setting up a private network.



Buildings and even streets may share a coaxial cable connection. If your powerline network uses a coaxial cable, the network will probably extend outside your premises. In this case make your network more secure with a private network name.

- 3 You may need to change the password to create multiple powerline networks. See the next section for more information on how to set up a multiple network.

1.5 Multiple Networks

Multiple powerline networks can coexist on a single powerline circuit. You might want to implement multiple powerline networks in a small office environment where you have two separate Ethernet networks.

- 1 Connect one powerline adapter to a router or switch on the first Ethernet network and assign a password (for example “Password1”) to this powerline adapter. Add additional powerline adapters to your network by plugging them into your powerline outlets and assigning them “Password1”. This completes the configuration of your first powerline network.
- 2 Connect another powerline adapter to a router or switch on the second Ethernet network and assign a different password (for example “Password2”) to this powerline adapter. Again, add additional powerline adapters and assign them “Password2”.
You now have two private networks on your powerline circuit. Information is not shared between the two networks as only powerline adapters with the same password can communicate with each other.

Installing the Utility

This chapter guides you through the installation of the configuration utility for your PLA-4xx.

2.1 Overview of the Installation Process

The installation of the configuration utility does the following:

- 1 Checks for and installs Microsoft's .NET Framework version 1.1 software on your computer. This software is necessary for the installation of the **PLA-4xx Series Configuration Utility**. If you already have .NET Framework version 1.1 installed on your computer this step will be skipped.
- 2 Installs ZyXEL's **PLA-4xx Series Configuration Utility**. This utility allows you to manage the network name (See [Section 3.3 on page 28](#) for more information) or view the devices recognized on your powerline network.



At the time of writing the utility is only compatible on Microsoft Windows XP and Microsoft Windows Vista (32-bit version) operating systems.




This User's Guide describes the latest version utility. This utility is only compatible with a PLA-4xx which has the latest firmware installed. If you don't already have them, download the latest firmware and utility from the ZyXEL website.

2.2 Installing the Utility

Follow the steps below to install .NET Framework version 1.1 and the **PLA-4xx Series Configuration Utility** on your computer.


- 1 Insert the included CD-ROM into your computer's CD-ROM drive. The Setup utility runs automatically. Alternatively this can also be done manually by double clicking the **setup.exe** file on the CD. A prompt appears asking you to install the .NET Framework version 1.1. Click **Yes** to continue with the installation.

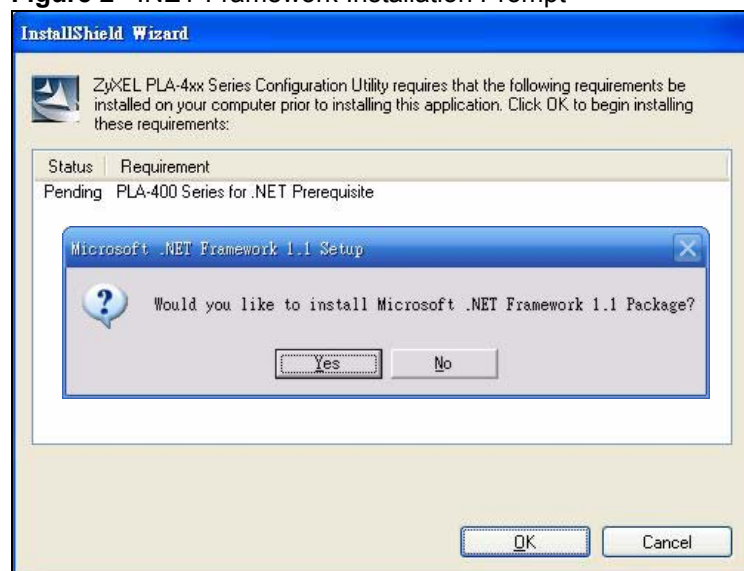Figure 2 .NET Framework Installation Prompt


- 2 Review Microsoft's **License Agreement**, select **I agree** and click **Install** to proceed.

Figure 3 Microsoft's Agreement


- 3 The next screen allows you to see the progress of the installation.

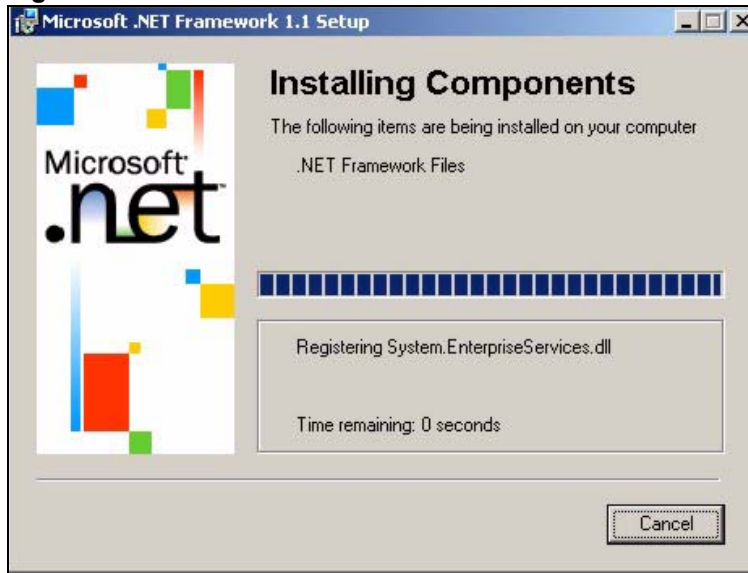Figure 4 .NET Framework Installation Process

- 4 Click **OK** to complete the installation process.

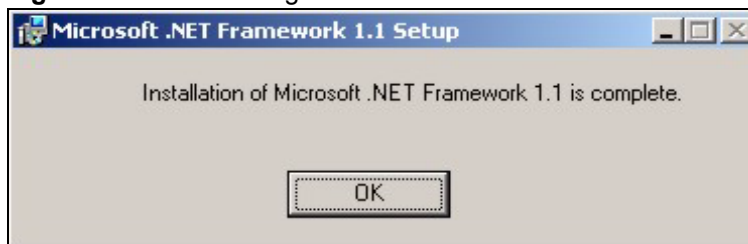
Figure 5 Microsoft's Agreement

- 5 The Setup utility runs automatically. Click **Yes** or **Next** to continue through the initial screen. Click **Cancel** only if you want to abort the installation.

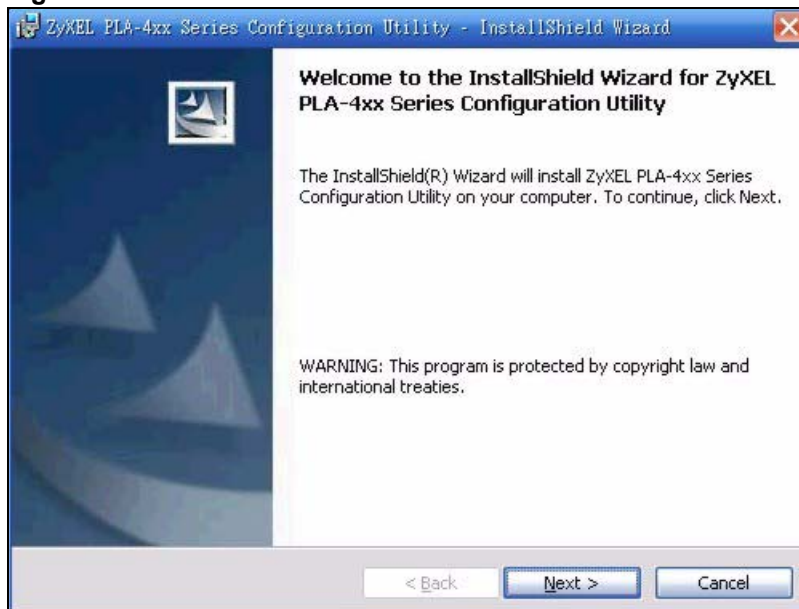Figure 6 InstallShield Wizard Start Screen

- 6 Fill in the **User Name** and **Company Name** fields (optional). If you want the utility to be only available to the currently logged in user, select **Only for me(...)**. Otherwise, click **Next** to continue and allow all users to use the configuration utility.

Figure 7 Customer Information Input

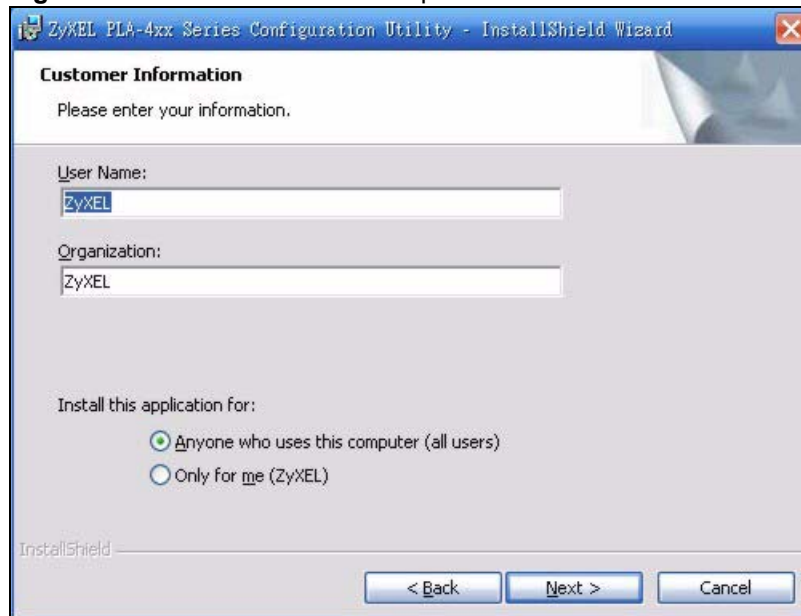


- 7 Click **Next** to install the utility to the default folder, or click **Change** to specify a different location on your computer.


Figure 8 Install Destination Folder



- 8 When the installation is finished, a screen appears to confirm the **InstallShield Wizard** has successfully installed the **PLA-4xx Series Configuration Utility** to your computer. Click **Finish** to exit the wizard.

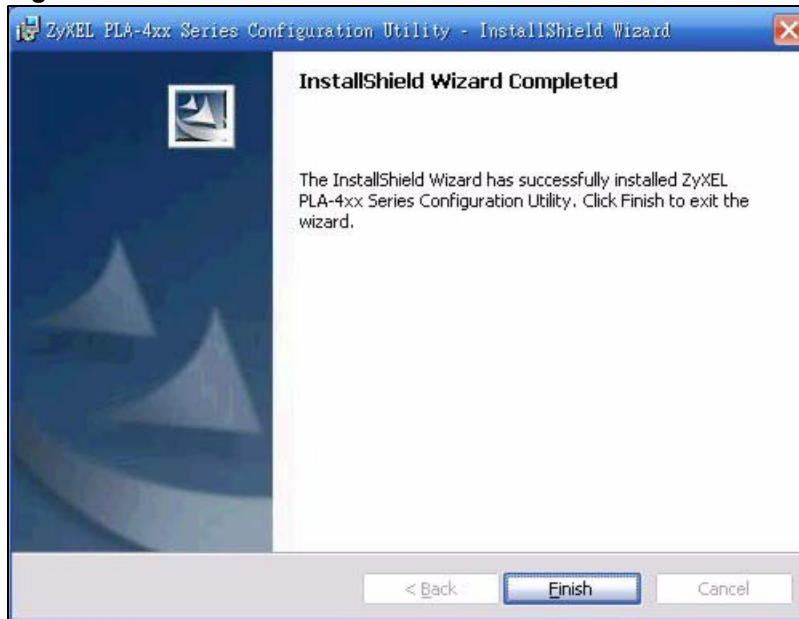Figure 9 Restart Screen

- 9** The following pop-up appears. Click **Yes** to restart your computer, or click **No** to restart your computer later.

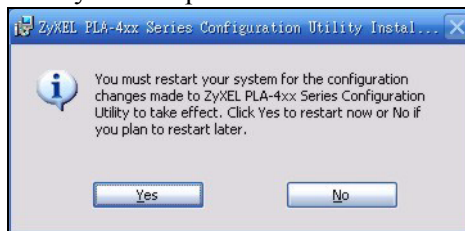

If you select “No, I will restart my computer later”, you will not be able to launch the utility until after a restart of your computer.

PART II

Using the PLA-4xx

[Managing Your PLA-4xx \(27\)](#)

[Powerline Network Setup Tutorial \(37\)](#)

[LEDs and Troubleshooting \(47\)](#)


Managing Your PLA-4xx

This chapter shows you how to use the utility to manage security and update software on the PLA-4xxs in your powerline network.

3.1 Overview

The PLA-4xx is designed as a plug-and-play network expanding solution. This means that once you complete your hardware connections, the PLA-4xxs in your network (without additional configuration) are able to communicate with each other by sending and receiving information over your home's electrical wiring (**A**). For the PLA-402 models you have the option to use coaxial cables (**B**) to expand your network.

Figure 10 Example Network Setup

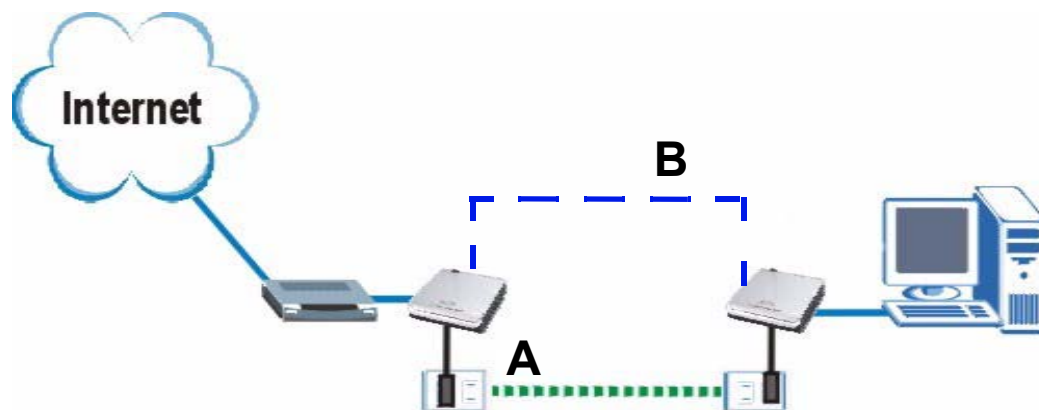

All HomePlug AV compliant powerline adapters within range can join your network. The range varies depending on the quality of your home's wiring. In the case of coaxial cable this can extend beyond the boundary of your home (for example your neighbor's house or apartment).



See [Section 3.1.1 on page 28](#) for more information on enhancing your powerline network security.

3.1.1 Powerline Network Security

When the PLA-4xxs communicate with each other, they use encryption to protect the information that is sent in the powerline network. Encryption is like a secret code. If you do not know the secret code, you cannot understand the message. The HomePlug AV standard uses 128-bit AES (Advanced Encryption Standard) to safely transmit data between powerline adapters.

For the powerline adapters to communicate with each other they all need to use the same network name. This password allows the powerline adapters to understand the encrypted information sent in the powerline network.

By default the PLA-4xxs are all configured with the password **HomePlugAV**, this allows you to simply plug the devices in and not worry about setting up security. If you want to enhance the security on your powerline network, you can change the network name on the powerline adapters you want to allow to communicate in your powerline network.

3.1.2 Device Access Key (DAK)


In order to manage the powerline adapters on your powerline network you must enter the adapters' password in the **PLA-4xx Series Configuration Utility**. This password is called the DAK (Device Access Key) password. This password is printed on the powerline adapter itself.

You don't need to enter the DAK password for the powerline adapter directly connected to the computer running the utility (local powerline adapter), you only have to add the remote powerline adapters' passwords (those in your powerline network, but not directly connected to your computer).

3.2 Starting the Configuration Utility

To launch the **PLA-4xx Series Configuration Utility** simply double click on the configuration icon on your desktop.

Figure 11 PLA-4xx Series Configuration Utility Icon

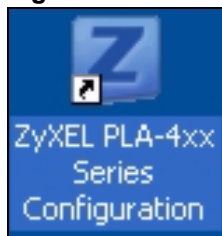

Alternatively, start the utility by browsing to it from the start menu. Click **Start > Programs > ZyXEL Communication Corporation > PLA-4xx Series Configuration Utility**.


3.3 Configuration Screen

Use the **Configuration** screen to see which devices are recognized by your powerline network, gain access to managing remote devices (those not directly connected to the computer running the utility) and change the powerline network name. This screen opens up when you launch the utility.



Use the  icon to view online help information in each screen of the utility.

Figure 12 Configuration Screen

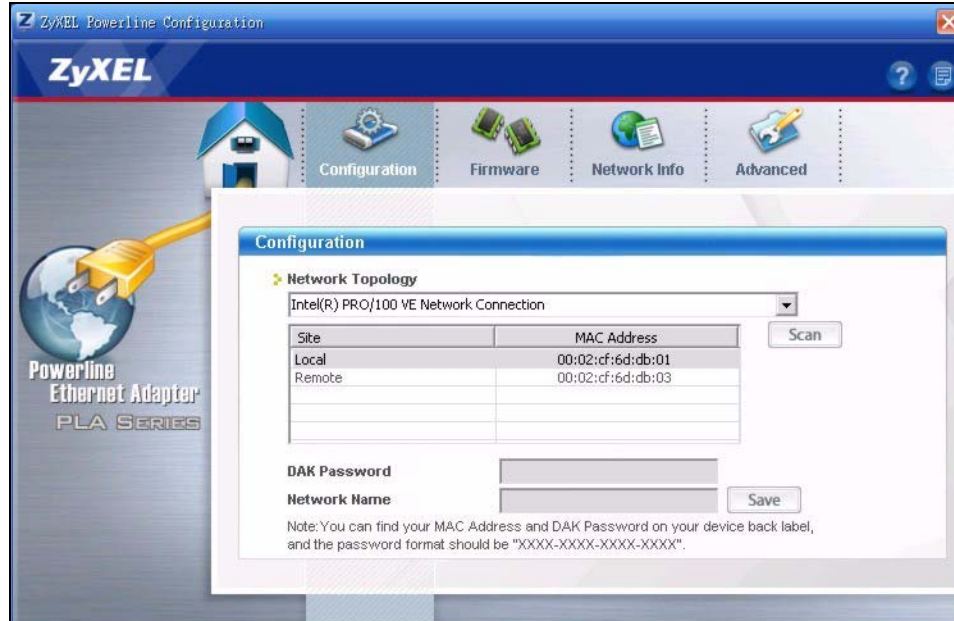

The following table describes the labels in this screen.

Table 2 Configuration Screen

LABEL	DESCRIPTION
Network Topology	Use this to select which powerline network information is displayed. Different powerline networks are identified by the Ethernet interface (network card) connected directly to the PLA-4xx. Typically there is only one connection, however, if your computer has two network cards and both are connected to a powerline device then you have two powerline networks.
The fields described below are used to identify the powerline adapters recognized on the powerline network. The configuration utility automatically updates this information every 10 seconds. Click Scan to refresh the information in these fields (immediately).	
Note: Only devices which share the same network name are displayed in this table.	
Site	This field displays • Local, if it is identifying the powerline adapter directly connected to the computer running the configuration utility. • Remote, if it is a powerline adapter in your powerline network but not directly connected to the computer running the configuration utility.
MAC Address	This is a read-only field which shows the MAC address of the powerline adapter you are configuring. You can find the MAC address of your PLA-4xx displayed on a sticker on the bottom of your device.

Table 2 Configuration Screen (continued)

LABEL	DESCRIPTION
DAK Password	DAK (Device Access Key) password is used to verify that you are authorized to perform changes on a remote device. You can find the DAK password printed on a sticker on the bottom of your PLA-4xx. Select the remote powerline adapter you want to manage by clicking the MAC address which corresponds to it in the MAC Address column. Enter the DAK Password value and click Save. Note: You must enter the DAK Password value exactly as it is printed on the label (all caps and with dashes “-”).
Network Name	The default network name (sometimes called a network password) of the PLA-4xx is “HomePlugAV”. HomePlug compatible devices use the same network name to recognize and communicate with each other over the powerline network. If you change the network name of one device on the network, it will no longer be recognized as part of that network. If you change the network name, make sure you change the network name for all of the powerline adapters that you want to be part of your powerline network. The network name can be from 1 to 64 alphanumeric characters in length; spaces are not allowed.
Save	Click this to apply your changes. The new Network Name is applied to the selected powerline adapter. Note: You must enter the correct DAK password for the selected powerline adapter before you can make changes to it.


3.4 Firmware Screen



To upgrade to the latest firmware, use the firmware upgrade tool available from the ZyXEL website (www.zyxel.com). Make sure you also upgrade the PLA-4xx Series Configuration Utility if you do so, as older version utilities are not compatible with PLA-4xxs using the latest firmware.




Be sure to upload the correct model firmware as uploading the wrong model firmware may damage your device.

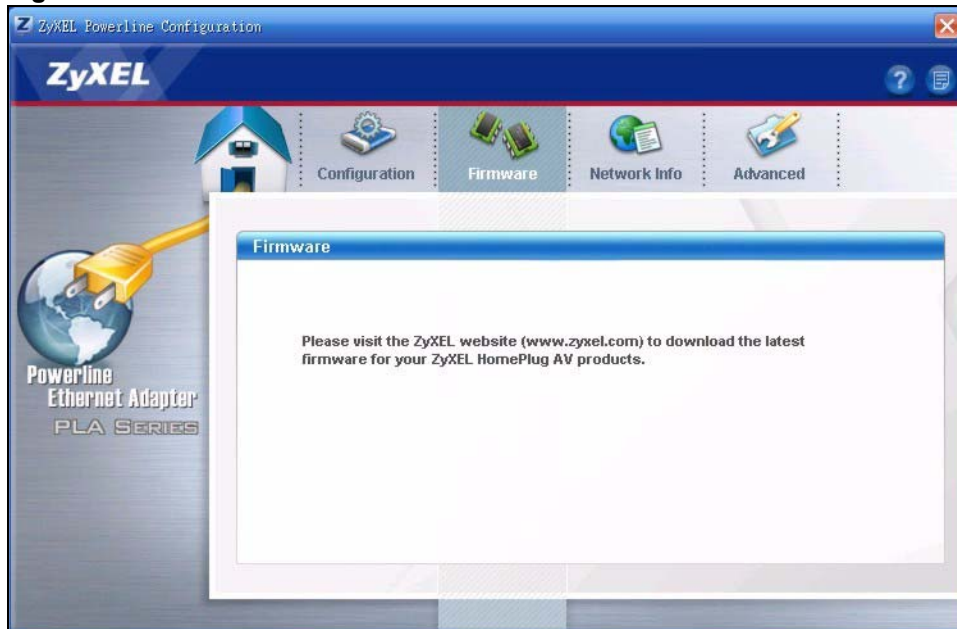Figure 13 Firmware Screen

3.5 Network Info Screen

Use the **Network Info** screen to see the rates at which a specific PLA-4xx is communicating with other powerline adapters on your powerline network.

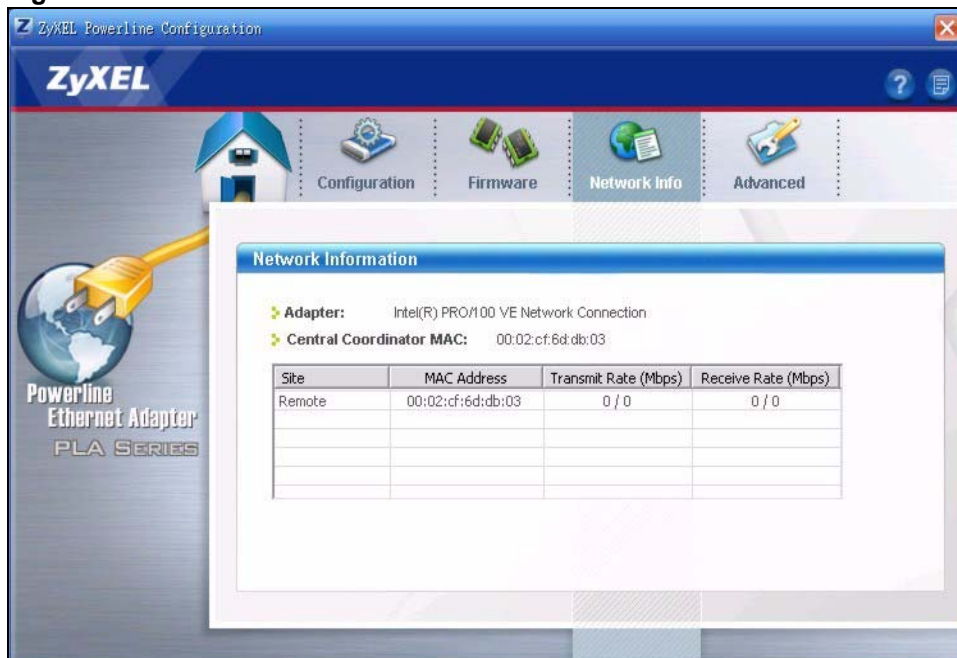Figure 14 Network Info Screen

The following table describes the labels in this screen.

Table 3 Network Info Screen

LABEL	DESCRIPTION
Adapter	This field identifies which powerline network information is displayed. Different powerline networks are identified by the Ethernet interface (network card) connected directly to the PLA-4xx. Typically there is only one connection, however, if your computer has two network cards and both are connected to a PLA-4xx, then you have two powerline networks.
Central Coordinator MAC	The Central Coordinator of the powerline network is the powerline adapter which keeps track of which devices are part of the network as well as synchronizes communication within the powerline network. If the Central Coordinator is removed from the powerline network then another powerline adapter takes its place. This field displays the MAC address of the PLA-4xx which is the Central Coordinator of the powerline network. This powerline adapters in your powerline network automatically select the Central Coordinator.
The information provided in the following table reflects transmission rate information about the powerline adapters which communicate in your powerline network. The powerline adapters listed in this table are all the powerline adapters in your powerline network except the powerline adapter selected in the Configuration page of the configuration utility. In other words, if the Local powerline adapter is selected in the Configuration screen, then this table will display the rates of transmission from the powerline adapter connected to the computer running the configuration utility to all the Remote powerline adapters.	
Site	This field displays: • Local, if it is the PLA-4xx directly connected to the computer running the configuration utility. • Remote, if it is a PLA-4xx in your powerline network but not directly connected to the computer running the configuration utility.
MAC Address	This field displays the MAC address of your powerline adapter. The MAC address of your powerline adapter can be found by looking at the label on your device. It consists of six pairs of hexadecimal characters (hexadecimal characters are "0-9" and "a-f"). In the case of the PLA-4xx, this label is on the bottom of the device.
Transmit Rate (Mbps)	This field displays how fast information is sent from the powerline adapter selected in the Configuration screen to this powerline adapter. The rate is given in the following format: "application data transmission rate / raw data transmission rate". Application data reflects more accurately how fast devices are transmitting application relevant traffic (for example Internet Protocol (IP) traffic). Raw data refers to the whole payload of the packets transmitted across the powerline network.
Receive Rate (Mbps)	This field displays how fast information is received from the powerline adapter selected in the Configuration screen to this powerline adapter. The rate is given in the following format: "application data transmission rate / raw data transmission rate". Application data reflects more accurately how fast devices are transmitting application relevant traffic (for example Internet Protocol (IP) traffic). Raw data refers to the whole payload of the packets transmitted across the powerline network.

3.6 Advanced Screen



This feature is only available with the latest version utility. Go to the ZyXEL website to download the latest utility and firmware for your ZyXEL HomePlug AV adapter.

You can configure the powerline adapters on your network to give priority to network traffic depending on its importance. When you set the priority of a powerline adapter, you set how quickly messages FROM your powerline adapter are sent in your powerline network. Transmissions TO your powerline adapter do not receive any priority.

For example, if you have a file server on your home network to deliver music and movie files to computers in your home, you should set the priority of the powerline adapter connected to this server to **Medium**. If video traffic is delivered too slowly, quality problems may occur.

On the other hand, a powerline adapter attached to a printer should have a low priority setting since the slow delivery of messages will not affect the print job.

Similarly, if you want to prioritize any downloads from the Internet, set the priority on the powerline adapter attached to your Internet gateway to **High**.

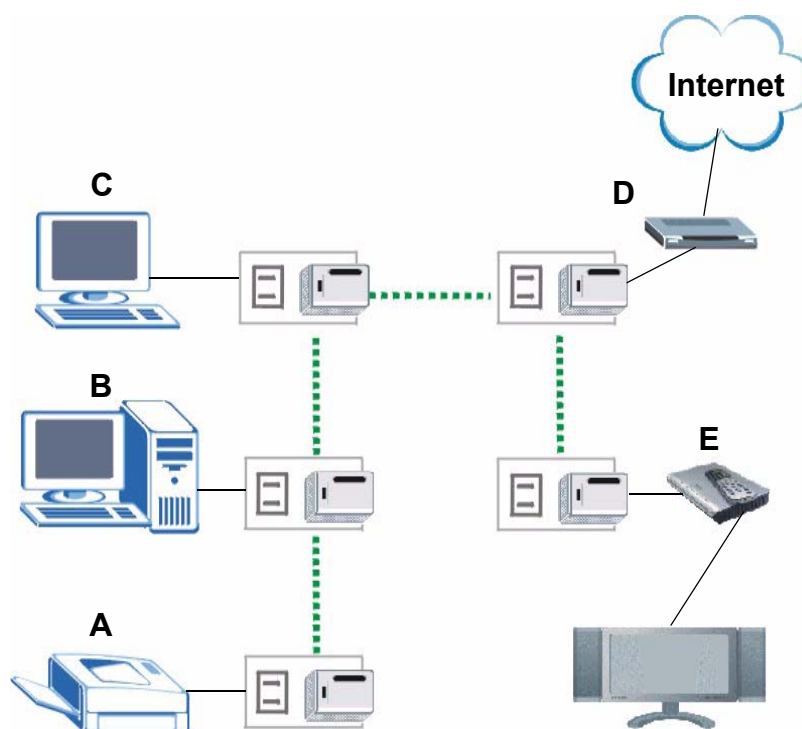
Allocate priority settings based on application type as follows.

Table 4 Priority Settings


PRIORITY LEVEL	APPLICATION
High	Voice Application
Medium	Video and Audio Applications
Normal	Data Applications
Low	Data Applications

The figure below shows an example powerline home network connected to the Internet.

- Device A is a printer and does not handle traffic with high importance, so the powerline adapter connected to it can be set to low priority.
- Device B is a file server, delivering audio or movie files to other users on the network. The powerline adapter attached to it should have a medium setting.
- Device C, a home computer which connects to the Internet, can receive a normal priority setting as it usually sends simple requests for data. For example, when you surf the Internet, your computer sends requests to open web pages.
- Device D is a modem attached to the Internet. It should receive a high priority setting if you want faster downloading through your network.
- Although device E receives audio or movie files, it does not send a lot of traffic, so the powerline adaptor attached to it can be set to a low priority.

Figure 15 Priority Settings

Use this screen to configure priority settings for traffic from the powerline adapters on your network.

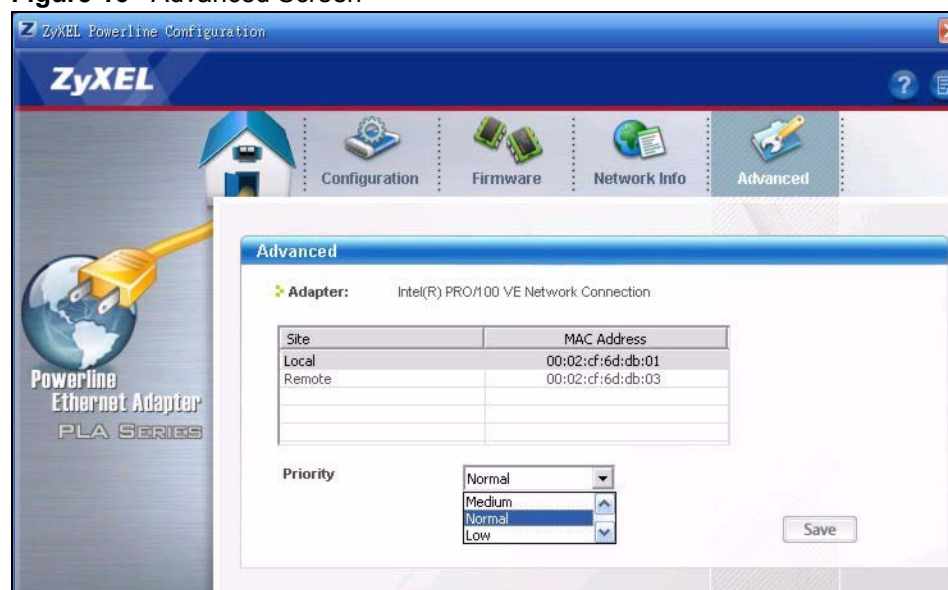Figure 16 Advanced Screen

The following table describes the labels in this screen.

Table 5 Advanced Screen

LABEL	DESCRIPTION
Adapter	This field identifies which powerline network information is displayed. Different powerline networks are identified by the Ethernet interface (network card) on your computer which is connected directly to a powerline adapter. Typically there is only one connection. However, if your computer has two network cards and both are connected to a powerline adapter, then you have two powerline networks.
Site	This field displays: • Local, if it is the PLA-4xx directly connected to the computer running the configuration utility. • Remote, if it is a powerline adapter in your powerline network but not directly connected to the computer running the configuration utility.
MAC Address	This is a read-only field which shows the MAC address of the powerline adapter you are configuring. You can find the MAC address of your PLA-4xx displayed on a sticker on the bottom of your device.
Priority	Select a priority setting from the drop-down box for traffic FROM your selected device. The options, in order of importance, are High , Medium , Normal and Low .
Save	Click this to apply your changes. The new Priority setting is applied to the selected powerline adapter.

3.7 About Screen

Use the **About** screen to view information regarding the configuration utility and firmware version of the PLA-4xx you are connected to. Click the  icon in the top right corner of the utility to view the **About** screen.

Figure 17 About Screen



The following table describes the labels in this screen.

Table 6 About Screen

LABEL	DESCRIPTION
Utility version:	This field displays the software version of the configuration utility.
Firmware version	This field displays the firmware version of the device you selected in the Device Selection field of the Configuration screen.
Released	This field displays the date when the firmware was released.
Close	Click the  button in upper right corner to close the About window.

Powerline Network Setup Tutorial

Use this tutorial to expand your existing powerline network.

4.0.1 Overview

After setting up your first home powerline network (instructions for that are in the Quick Start Guide for your ZyXEL powerline adapter) you may want to extend the network or create a new one by adding additional powerline adapters. This tutorial shows you the following.

- How to start up your new powerline adapter. You need to do this before you can begin the next sections.
- How to make your existing powerline network bigger by adding new powerline adapters.
- How to make a new network separate from your existing network with new powerline adapters.
- How to make a new, separate powerline network with the powerline adapters you have.

The tutorial uses the **PLA-4xx Series Configuration Utility** to set up your powerline adapter.

If you haven't already installed the utility, see [Chapter 4 on page 37](#) for instructions. If you do not have the CD with the utility, the utility software is also available for download at www.zyxel.com. Navigate to the powerline products section of the ZyXEL website to find this software. Follow the instructions provided by the software to install it on your computer.

See the product specifications in the User's Guide for a list of hardware and software compatible with the utility.



The PLA-4xx in this tutorial is an example only. Your powerline adapter may be different.

4.0.2 Important Terms

Network Name (NMK)	NMK = Network Membership Key. The network name allows a powerline adapter to connect with other powerline adapters that have the same network name. It provides security for your powerline network. The network name uses English letters or numbers, from 1 to 64 characters long, with no spaces allowed.
DAK Password	DAK = Device Access Key. The DAK Password lets you access the powerline adapter. You can find the DAK Password on a label on your powerline device.

4.0.3 Accessing Your Powerline Adapter


- 1 Attach the power cord that came in the package to your powerline adapter.
- 2 Plug the power cord of the powerline adapter you want to add to your network into a power socket and, if needed, switch the power socket on.

Figure 18 Plug Your Powerline Adapter into a Power Socket



- 3 Connect the powerline adapter to your computer.
- 4 Use a LAN or Ethernet cable (shown below) to connect the LAN or Ethernet port on your adapter to the same kind of port on your computer.

Figure 19 Connect Your Powerline Adapter to a Computer

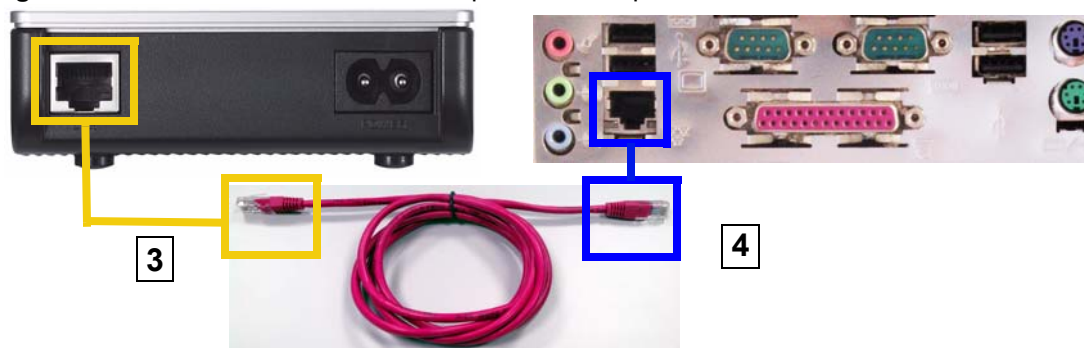

- 5 Open the **PLA-4xx Series Configuration Utility** on your computer. Go to **Start > (All) Programs > ZyXEL Communication Corporation > PLA-4xx Series Configuration Utility**, or click on the icon on your desktop shown below.


Figure 20 Click on the PLA-4xx Series Configuration Utility Icon

- 6 You are now ready to extend your powerline network or set up a second network.
- See [Section 4.0.4 on page 39](#) to add a new powerline adapter to your network.
 - See [Section 4.0.5 on page 41](#) to set up a second network with your new adapters.
 - See [Section 4.0.6 on page 42](#) to set up a second network with your existing adapters.

4.0.4 Adding a Powerline Adapter

This section shows you how to add a new powerline adapter to expand your existing network.

The figure below shows the family computer with Internet access on a powerline network. Expand the network by adding a new powerline adapter connected to a printer.

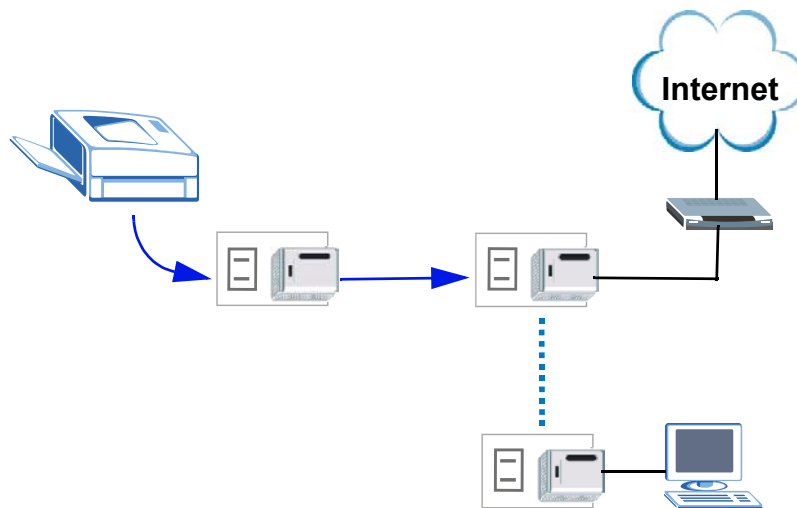Figure 21 Add a Printer to Your Powerline Network

You do not need to know the network name of the new adapter to add it to your network.

- 1 Connect your computer to the powerline adapter you want to add to your network and open the **PLA-4xx Series Configuration Utility** (see [Section 4.0.3 on page 38](#)).
- 2 The utility should open to the configuration tab. On this screen in the **Site** column your new powerline adapter should appear as **Local (A)**. Check the **Local** adapter's MAC address (**B**). It should match the MAC address listed on the label on the back of your powerline adapter.

Figure 22 Adding a New Adapter

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Local	00:02:cf:74:e9:1b

DAK Password

Network Name

Save

Scan

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- 3 Select your adapter by selecting **Local** and type the network name for your existing network in the **Network Name** field (C).

Figure 23 Adding an Adapter to an Existing Network

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Local	00:02:cf:74:e9:1b

DAK Password


Network Name

Save

Scan

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- 4 Click **Save** and click **OK** on the pop-up.

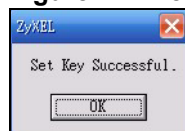Figure 24 Network Name Pop-up


- 5 Your new adapter will now have the same **Network Name** as your existing network and so has now joined your existing network.
- 6 Connect the adapter to the device you want to add to the network, for example, your Internet refrigerator in the kitchen.
- 7 Plug the adapter's power cord into a power outlet and, if required, switch the power outlet on.
- 8 Repeat this procedure for all additional powerline adapters that you want to add to your existing or new powerline network.

4.0.5 Setting Up a New Network with a New Adapter

This section shows you how to use your new powerline adapters to set up a new powerline network separate to your existing network.

The figure below shows two powerline networks in a house. The first network (1) shows the home computer connected to a printer and access to the Internet. The second network (2) has no Internet access but with a media adapter such as the ZyXEL DMA-1100P you can use your TV to watch movies and play games which are stored on a computer.

Figure 25 Add New Adapters to Make a Second Network

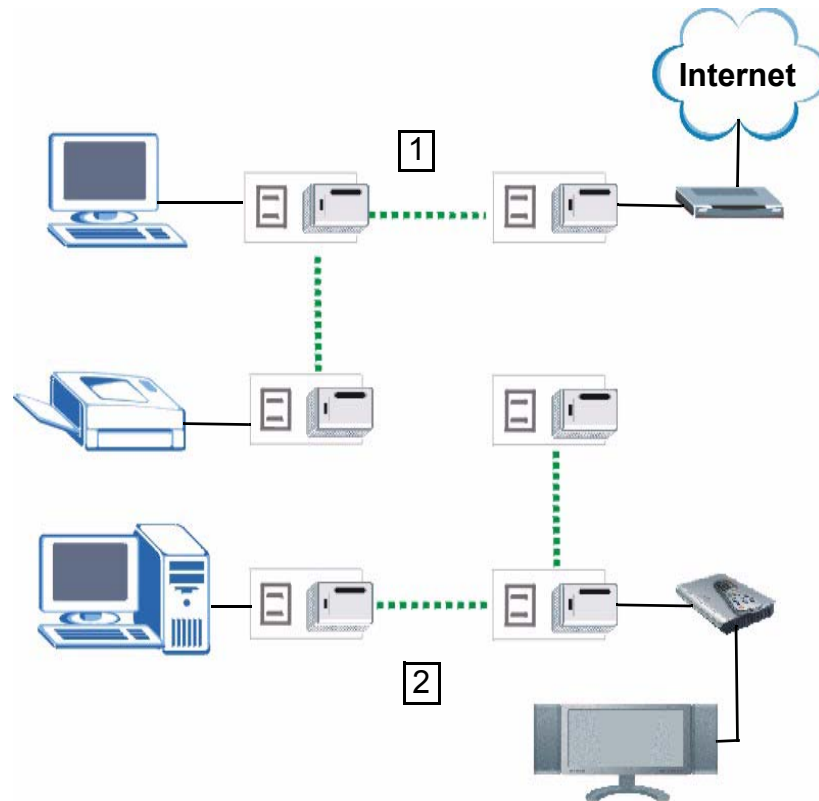

- 1 Connect your new powerline adapter and open the configuration utility as shown in [Section 4.0.5 on page 41](#). The screen shown below appears.
- 2 Type a **Network Name** that is different from the **Network Name** for your existing network. Make sure you use the same new **Network Name** for all new adapters you want to add to your new network.

Figure 26 Making a New Network with the New Adapter

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Local	00:02:cf:74:e9:1b

DAK Password

Network Name: **NEWnetworkname**

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- 3 After you have set up a new network, you are ready to connect each powerline adapter on your new network to devices, for example, a computer or a games console.

4.0.6 Splitting a Network into Two Networks

This section shows you how to split your existing network into two networks. This is useful if you want to set up a second powerline network in your home, for example, in your study connecting a laptop and printer. See [Figure 25 on page 41](#) for an example.

To set up your existing powerline network you had to set each powerline adapter with the same network name. To move some of these adapters to a new network, you need to give them a new network name.

- 1 Connect a powerline adapter to your computer and open the **PLA-4xx Series Configuration Utility** (see [Section 4.0.3 on page 38](#)).
- 2 The utility should open to the configuration tab as shown below. A list of powerline adapters on your network displays. These adapters all have the same network name as the adapter you are connected to. The adapter you are connected to will appear as **Local** in this table. All others are listed as **Remote**.

Figure 27 Local/Remote Adapters on a Powerline Network

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Local	00:02:cf:74:e9:1b
Remote	00:02:cf:74:e9:18
Remote	00:02:cf:74:e9:33


DAK Password

Network Name

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- 3 To set up a new powerline network, type the **DAK Password** and change the **Network Name** on all powerline adapters you wish to add to your network.
 - Look for the **DAK Password** on a label on your powerline adapter. The **DAK Password** lets you access the adapter.
 - Select the **Remote** adapter you want to add (A) and type the **DAK Password** in the **DAK Password** field (B).
 - Then type the new network name in the **Network Name** field.

Figure 28 Adding an Adapter to Your New Network

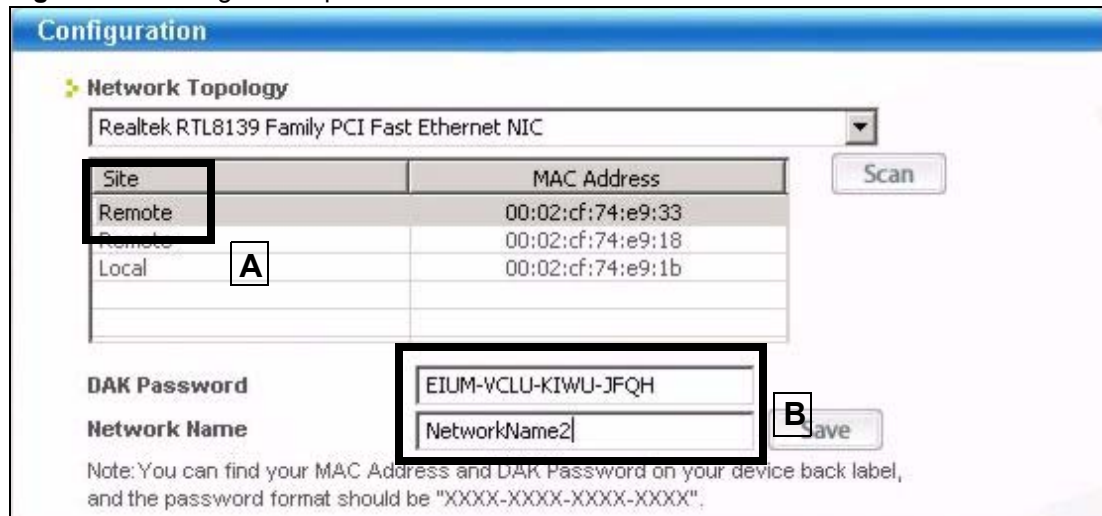

- 4 Click **Save**.
 - If you do not type the **DAK password** or type it incorrectly either of the following pop-ups appears. Click **OK** and type the **DAK Password** correctly in the **DAK Password** field.

Figure 29 Incorrect DAK or No DAK



- If you have correctly entered the **DAK Password**, click **OK** on the pop-up.

Figure 30 Correct DAK



- 5 The settings for the adapter will now grey out and the adapter will disappear from the table after a few minutes.

Figure 31 An Adapter on Your New Network

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Remote	00:02:cf:74:e9:18
Remote	00:02:cf:74:e9:1b
Local	00:02:cf:74:e9:33

DAK Password

Network Name

Save

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- 6 Go back to step 3 in this section to set the same, new **Network Name** for all remote adapters you want to add to your new network.
- 7 Check you have added the adapters correctly by changing the password for the local adapter. All adapters with the new **Network Name** now appear in the list of adapters on your network. These adapters are now part of your new network.

Figure 32 Adapters on a New Powerline Network

Configuration

Network Topology

Realtek RTL8139 Family PCI Fast Ethernet NIC

Site	MAC Address
Remote	00:02:cf:74:e9:1b
Remote	00:02:cf:74:e9:1a
Local	00:02:cf:74:e9:33

DAK Password

Network Name

Save

Note: You can find your MAC Address and DAK Password on your device back label, and the password format should be "XXXX-XXXX-XXXX-XXXX".

- If you want to access any of your new powerline networks using the **PLA-4xx Series Configuration Utility**, change the **Network Name** on your local adapter to the network name for the network you want to access. The adapters on that network will then display in the adapter table, allowing you to select and configure each one.

4.1 Troubleshooting

The LINK () LED (light) should light up on your adapter when it successfully connects to other adapters on your network. If it does not, try the following measures.

- Make sure the adapter is plugged in to a power socket and the power socket is turned on.
- Check you have entered the correct network name for your network.

- Check your powerline adapter is connected to the same electrical circuit as other powerline adapters on your network.

LEDs and Troubleshooting

This chapter describes the behavior of the LEDs (lights) and offers some suggestions to solve problems you might encounter.

5.1 LEDs

The following sections describes the lights on the PLA-400, PLA-400 v2 and PLA-402, the PLA-401, and the PLA-470.

5.1.1 PLA-401

The following figure is the front panel of the PLA-401. Use the lights to determine if the PLA-4xx is behaving normally or if there are some problems on your powerline network.

Figure 33 PLA-401 Lights



The following table describes the lights' behavior.

Table 7 PLA-401 Lights


LIGHT	ICON	STATUS	DESCRIPTION
POWER	⏻	On	The PLA-401 is on and receiving power.
		Off	The PLA-401 is not receiving power.
LINK	🏠	On	The POWER port detects another powerline adapter.
		Blinking	The PLA-401 is communicating with another powerline adapter.
		Off	The POWER port is not detecting another powerline adapter.

LIGHT	ICON	STATUS	DESCRIPTION
ETHERNET		On	The ETHERNET port is on and ready and the PLA-401 detects a device connected to it.
		Blinking	The PLA-401 is communicating with a router, modem, switch or a computer connected to it.
		Off	The PLA-401 does not detect any devices connected to its ETHERNET port.

5.1.2 PLA-400/400 v2/402

The following figure is the front panel of the PLA-400, PLA-400 v2 and PLA-402. Use the lights to determine if your PLA-4xx is behaving normally or if there are some problems on your powerline network.

Figure 34 PLA-400/402 Lights

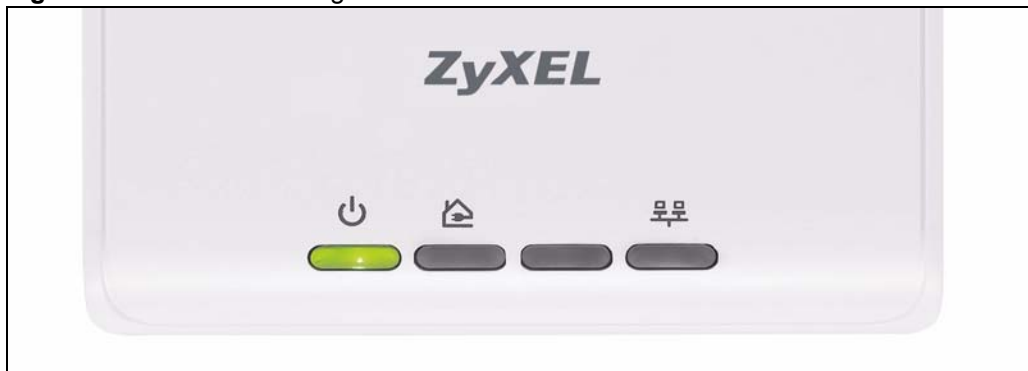

The following tables describes the lights' behavior.

Table 8 PLA-400/402 Lights

LIGHTS	ICON	STATUS	DESCRIPTION
POWER		On	The PLA-400/402 is on and receiving power.
		Off	The PLA-400/402 is not receiving power.
LINK		On	The POWER port detects another powerline adapter.
		Blinking	The PLA-400/402 is communicating with another powerline adapter.
		Off	The POWER port is not detecting another powerline adapter.
ETHERNET		On	The ETHERNET port is on and ready and the PLA-400 detects a device connected to it.
		Blinking	The PLA-400/402 is communicating with a router, modem, switch or a computer connected to it.
		Off	The PLA-400/402 does not detect any devices connected to its ETHERNET port.

Table 9 PLA-400 v2 Lights

LIGHTS	ICON	COLOR	STATUS	DESCRIPTION
POWER		Green	On	The PLA-400 v2 is on and receiving power. It also indicates a successful connection using the ENCRYPT button.
			Blinking	The PLA-400 v2 is trying to connect with another device using the ENCRYPT function. Blinking at the same time as the LINK light indicates an unsuccessful connection if you have used the ENCRYPT button.
			Off	The PLA-400 v2 is not receiving power.
LINK		Green	On	The PLA-400 v2 detects another powerline adapter. The data transfer rate is greater than 40 Mbps.
		Amber		The PLA-400 v2 detects another powerline adapter. The data transfer rate is between 10~40 Mbps.
		Red		The PLA-400 v2 detects another powerline adapter. The data transfer rate is between 0~10 Mbps.
		Green/ Amber/ Red	Blinking	The PLA-400 v2 is communicating with another powerline adapter. Data is being transmitted and/or received. Blinking at the same time as the POWER light indicates an unsuccessful connection if you have used the ENCRYPT button.
			Off	The LINK port does not detect another powerline adapter.
ETHERNET		Green	On	The ETHERNET port is on and ready and the PLA-400 v2 detects a device connected to it.
			Blinking	The PLA-400 v2 is communicating with a networking device connected to it.
			Off	The PLA-400 v2 does not detect any devices connected to its ETHERNET port.

5.1.3 PLA-470

The following figure is the front panel of the PLA-470. Use the lights to determine if the PLA-470 is behaving normally or if there are some problems on your powerline network.

Figure 35 PLA-470 Lights

The following table describes the lights' behavior.

Table 10 PLA-470 Lights

LIGHTS	ICON	STATUS	DESCRIPTION
POWER		On	The PLA-470 is on and receiving power.
		Off	The PLA-470 is not receiving power.
LINK		On	The POWER port detects another powerline adapter.
		Blinking	The PLA-470 is communicating with another powerline adapter.
		Off	The POWER port is not detecting another powerline adapter.
ETHERNET		On	The ETHERNET port is on and ready and the PLA-470 detects a device connected to it.
		Blinking	The PLA-470 is communicating with a router, modem, switch or a computer connected to it.
		Off	The PLA-470 does not detect any devices connected to its ETHERNET port.

5.2 Power and Light Problems



The PLA-4xx does not turn on. None of the lights turn on.

- 1 Make sure you are using the power cord included with the PLA-4xx.
- 2 Make sure the power cord is connected to the PLA-4xx and plugged in to an appropriate power source. Make sure the power source is turned on.
- 3 Disconnect and re-connect the power cord to the PLA-4xx.
- 4 Remove the powerline adapter from the outlet. Then connect an electrical device that you know works into the same power outlet. This checks the status of the power outlet.
- 5 If the problem continues, contact the vendor.



The ETHERNET light does not turn on.

- 1 Check the hardware connections. See the Quick Start Guide.
- 2 Inspect your cables for damage. Contact the vendor to replace any damaged cables.
- 3 Check the Ethernet adapter on your computer and make sure it's enabled and working properly.
- 4 If the PLA-4xx is connected to an Ethernet switch or router, make sure the device is working correctly, and that the LAN network is working and configured correctly as well.



The LINK light does not turn on.

- 1 Check all PLA-4xxs on your network have the latest firmware installed. PLA-4xxs with the latest firmware cannot communicate with PLA-4xxs using earlier versions of the firmware. Go to [Section 3.4 on page 30](#) for instructions on installing the latest firmware.
- 2 Use the **PLA-4xx Series Configuration Utility** to detect all other HomePlug devices on your powerline network. Make sure that the network name (sometimes called the network password) is the same on all of your powerline adapters. See [Section 3.3 on page 28](#) for instructions on checking the network name.
- 3 Check the DAK password and MAC address for all powerline adapters are typed correctly in the utility. See [Section 3.3 on page 28](#) for instructions on checking the DAK and MAC address.
- 4 Make sure that all your powerline adapters are HomePlug AV compliant. Check the package it came in or ask your vendor. This PLA-4xx can not detect earlier versions of HomePlug powerline adapters such as HomePlug 1.0 or 1.0.1. (Although they can coexist on the same electrical wiring without interfering with each other.)
- 5 Make sure that the powerline adapters on your network are all on the same electrical wiring. Connect another powerline adapter into an outlet close to your PLA-4xx's power outlet. They are probably now on the same electrical wiring. Check the LINK  light. If it now lights up your powerline adapter was probably previously on separate electrical wiring. Ask an electrician for more information on the electrical wiring in your building.
- 6 If your powerline network is using coaxial cable, check all powerline adapters are on the same coaxial cable.
- 7 If your powerline network is using electrical wiring (not coaxial cable), check you do not have a power meter between powerline adapters. Powerline signals cannot pass this.



The POWER and LINK light blink at the same time.

- You have pressed the ENCRYPT button for more than three seconds. Try setting up a connection again, this time pressing the ENCRYPT buttons on both devices for less than three seconds.

5.3 Configuration Utility Problems



The PLA-4xx Series Configuration Utility displays an error during installation.

- Make sure your computer is using Windows XP or Windows Vista (32-bit) operating system. At the time of writing, this is the only compatible operating system for the configuration utility.



The PLA-4xx Series Configuration Utility does not display all or any of my devices.

- Inspect the LEDs on your PLA-4xx and make sure that the ETHERNET and LINK LEDs are on or blinking. See [Section 5.2 on page 50](#) for troubleshooting LED related problems.
- Check all ZyxEL HomePlug AV devices on your network have the latest firmware installed. The latest utility cannot communicate with PLA-4xxs using earlier versions of the firmware. Go to [Section 3.4 on page 30](#) for instructions on installing the latest firmware.
- Check you are using the latest version utility. Earlier version utilities cannot communicate with PLA-4xxs using the latest firmware. If you do not have the latest utility, download it from the ZyXEL website.

5.4 Powerline Problems



The signal on my powerline network is weak.

- 1 Your powerline adapters may be connected to electrical surge protectors. Connect them to standard power outlets.
- 2 Your powerline adapters may be located close to large appliances such as refrigerators or air-conditioners that cause interference with the powerline signal. Move the adapters further away from such appliances to reduce interference.
- 3 Your powerline adapters may be placed close to electrical devices such as electrical insect-killers which produce radio waves. These may interfere with the powerline signals. Move the adapters further away from such electrical devices.
- 4 Your wiring may be old and/or low quality or with a long wiring path.

PART III

Appendices and Index

Product Specifications (55)

Customer Support (59)

Legal Information (65)

Index (69)

Product Specifications

The following tables summarize the PLA-4xx's hardware and firmware features.

Table 11 Hardware Specifications

Dimensions (W x D x H)	PLA-400/400 v2/402 112 (L) mm x 106 (D) mm x 28.5 (H) mm PLA-470 162 (L) mm x 118 (D) mm x 40 (H) mm
Power Input	100 - 240 VAC, 50/60 Hz, 0.12 A
Ethernet Port	Auto-negotiating: 10 Mbps or 100 Mbps in either half-duplex or full-duplex mode. Auto-crossover: Use either crossover or straight-through Ethernet cables.
RESET	Pressing this button in for less than 3 seconds resets the device to factory default settings. Network Name becomes HomePlugAV . Pressing this button in for more than 10 seconds resets the firmware to the previous version.
ENCRYPT	Pressing this button in for less than 3 seconds begins the connection setup process. Pressing this button in for more than 10 seconds resets the network name to a random value.
Operation Environment	Temperature: 0° C ~ 45° C Humidity: 5% ~ 95% Noncondensing
Storage Environment	Temperature: -10° C ~ 70° C Humidity: 10% ~ 85% Noncondensing
Cabling Type	PLA-400/400 v2/402/470 1 x Power Cord PLA-400/400 v2/402 1 x LAN UTP Category 5 or Better PLA-402 1 x Coaxial Cable PLA-470 4 x LAN UTP Category 5 or Better
Network Interface	PLA-400/400 v2/401/402/470 1 x 200 Mbps Powerline port compliant with HomePlug AV standard PLA-400/400 v2/401/402 1 x 10/100M BASE-T Ethernet port with Auto MDI/MDIX PLA-470 4 x 10/100 M Base-T Ethernet Ports with Auto MDI/MDIX PLA-402 1 x Coaxial Cable Port

Table 11 Hardware Specifications

Distance between the centers of the holes on the device's back.	PLA-400/400 v2/402 74 mm PLA-470 1150 mm
Recommended type of screws for wall-mounting	PLA-400/400 v2/402/470 M3 Tap Screw

Table 12 Firmware Specifications

FEATURE	DESCRIPTION
Powerline Functionality	The HomePlug AV standard specifies how network devices communicate using standard electrical wiring. It supports a data transfer rate of up to 200Mbps. Data is encrypted using 128-bit AES (Advanced Encryption Standard). HomePlug AV compatible devices co-exist with HomePlug 1.0 devices but do not detect each other. The range of a HomePlug AV network is 300 meters/984 feet in optimal conditions. HomePlug AV is compatible with all OSs. The maximum number of powerline devices on a single network is 16. Support for 64 devices communicating on a single network is planned for future firmware release. HomePlug AV devices using the latest version firmware cannot communicate with earlier version firmware.
Encryption	128-bit AES Encryption
Frequency Band	1.8 MHz ~ 30 MHz
Certifications	FCC, CE, CUL, UL, HomePlug AV, RoHS
Device Management	Use the PLA-4xx Series Configuration Utility version 3.0.0(AG) to easily configure the PLA-4xx. Note: The PLA-4xx Series Configuration Utility version 3.0.0(AG) is only compatible with PLA-4xxs with the latest firmware installed.
Network Name	Change the powerline network name to only allow the powerline adapters you specify to join your network.
Firmware Upgrade	Download new firmware (when available) from the ZyXEL website and use the configuration utility to install it. Note: You do not need the configuration utility to install the latest firmware. Follow the instructions in Section 3.4 on page 30 for installing the latest firmware. Note: Only install firmware for your specific model!

Table 13 Performance

FEATURE	DESCRIPTION
Throughput over PHYsical Transport Medium (PHY)	Supports up to 200 Mbps in half duplex mode
Throughput over UDP	Supports up to 150 Mbps over in-house power/coaxial lines (LAN port limits to 100 Mbps)
Number of devices in one powerline network	Supports up to 64 devices in 4 network groups

The following list, which is not exhaustive, illustrates the standards supported in the PLA-4xx.

Table 14 Standards Supported

STANDARD	DESCRIPTION
HomePlug AV	Designed for transmitting audio/video on a home powerline network.
RFC 868	Time Protocol.
RFC 1112	IGMP v1
RFC 1157	SNMPv1: Simple Network Management Protocol version 1
RFC 1901	SNMP v2c Simple Network Management Protocol version 2c
RFC 2236	Internet Group Management Protocol, Version 2.

Wall-mounting Instructions

Complete the following steps to hang your PLA-4xx on a wall.



See [Table 11 on page 55](#) for the size of screws to use and how far apart to place them.


- 1 Select a high position on a sturdy wall that is free of obstructions.
- 2 Drill two holes for the screws. The distance between the centers of the holes is listed in the product specifications appendix.



Be careful to avoid damaging pipes or cables located inside the wall when drilling holes for the screws.

- 3 Do not insert the screws all the way into the wall. Leave a small gap of about 0.5 cm between the heads of the screws and the wall.
- 4 Make sure the screws are snugly fastened to the wall. They need to hold the weight of the PLA-4xx with the connection cables.
- 5 Align the holes on the back of the PLA-4xx with the screws on the wall. Hang the PLA-4xx on the screws.

Figure 36 Wall-mounting Example

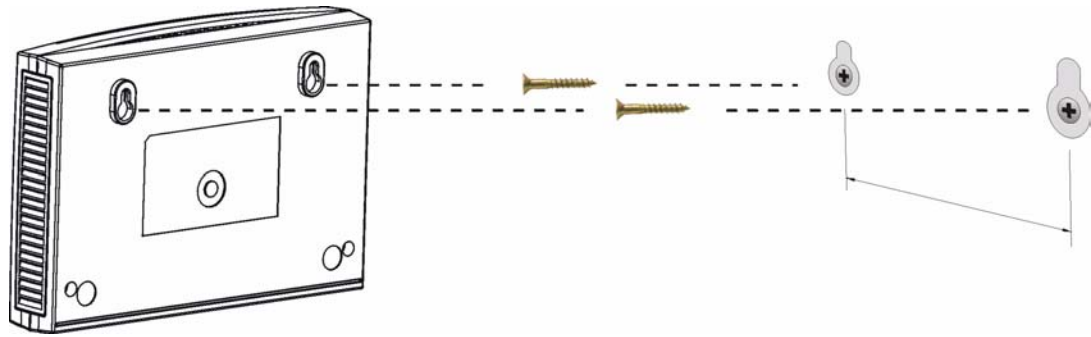

Cable Pin Assignments

RJ-45 Connector Pin Assignments

Figure 37 RJ-45 Connector Pins

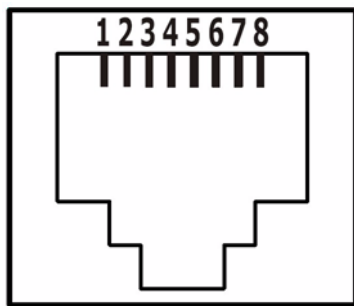


Table 15 RJ-45 Connector Pin Assignments

PIN NO	RJ-45 SIGNAL ASSIGNMENT
1	RxD +
2	RxD -
3	TxD +
4	Not connected
5	Not connected
6	TxD -
7	Not connected
8	Not connected

Customer Support

Please have the following information ready when you contact customer support.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

“+” is the (prefix) number you dial to make an international telephone call.

Corporate Headquarters (Worldwide)

- Support E-mail: support@zyxel.com.tw
- Sales E-mail: sales@zyxel.com.tw
- Telephone: +886-3-578-3942
- Fax: +886-3-578-2439
- Web: www.zyxel.com, www.europe.zyxel.com
- FTP: [ftp.zyxel.com](ftp://ftp.zyxel.com), [ftp.europe.zyxel.com](ftp://ftp.europe.zyxel.com)
- Regular Mail: ZyXEL Communications Corp., 6 Innovation Road II, Science Park, Hsinchu 300, Taiwan

Costa Rica

- Support E-mail: soporte@zyxel.co.cr
- Sales E-mail: sales@zyxel.co.cr
- Telephone: +506-2017878
- Fax: +506-2015098
- Web: www.zyxel.co.cr
- FTP: [ftp.zyxel.co.cr](ftp://ftp.zyxel.co.cr)
- Regular Mail: ZyXEL Costa Rica, Plaza Roble Escazú, Etapa El Patio, Tercer Piso, San José, Costa Rica

Czech Republic

- E-mail: info@cz.zyxel.com
- Telephone: +420-241-091-350
- Fax: +420-241-091-359
- Web: www.zyxel.cz

- Regular Mail: ZyXEL Communications, Czech s.r.o., Modranská 621, 143 01 Praha 4 - Modrany, Česká Republika

Denmark

- Support E-mail: support@zyxel.dk
- Sales E-mail: sales@zyxel.dk
- Telephone: +45-39-55-07-00
- Fax: +45-39-55-07-07
- Web: www.zyxel.dk
- Regular Mail: ZyXEL Communications A/S, Columbusvej, 2860 Soeborg, Denmark

Finland

- Support E-mail: support@zyxel.fi
- Sales E-mail: sales@zyxel.fi
- Telephone: +358-9-4780-8411
- Fax: +358-9-4780-8448
- Web: www.zyxel.fi
- Regular Mail: ZyXEL Communications Oy, Malminkaari 10, 00700 Helsinki, Finland

France

- E-mail: info@zyxel.fr
- Telephone: +33-4-72-52-97-97
- Fax: +33-4-72-52-19-20
- Web: www.zyxel.fr
- Regular Mail: ZyXEL France, 1 rue des Vergers, Bat. 1 / C, 69760 Limonest, France

Germany

- Support E-mail: support@zyxel.de
- Sales E-mail: sales@zyxel.de
- Telephone: +49-2405-6909-69
- Fax: +49-2405-6909-99
- Web: www.zyxel.de
- Regular Mail: ZyXEL Deutschland GmbH., Adenauerstr. 20/A2 D-52146, Wuerselen, Germany

Hungary

- Support E-mail: support@zyxel.hu
- Sales E-mail: info@zyxel.hu
- Telephone: +36-1-3361649
- Fax: +36-1-3259100
- Web: www.zyxel.hu
- Regular Mail: ZyXEL Hungary, 48, Zoldlomb Str., H-1025, Budapest, Hungary

India

- Support E-mail: support@zyxel.in
- Sales E-mail: sales@zyxel.in
- Telephone: +91-11-30888144 to +91-11-30888153
- Fax: +91-11-30888149, +91-11-26810715
- Web: <http://www.zyxel.in>
- Regular Mail: India - ZyXEL Technology India Pvt Ltd., II-Floor, F2/9 Okhla Phase -1, New Delhi 110020, India

Japan

- Support E-mail: support@zyxel.co.jp
- Sales E-mail: zyp@zyxel.co.jp
- Telephone: +81-3-6847-3700
- Fax: +81-3-6847-3705
- Web: www.zyxel.co.jp
- Regular Mail: ZyXEL Japan, 3F, Office T&U, 1-10-10 Higashi-Gotanda, Shinagawa-ku, Tokyo 141-0022, Japan

Kazakhstan

- Support: <http://zyxel.kz/support>
- Sales E-mail: sales@zyxel.kz
- Telephone: +7-3272-590-698
- Fax: +7-3272-590-689
- Web: www.zyxel.kz
- Regular Mail: ZyXEL Kazakhstan, 43 Dostyk Ave., Office 414, Dostyk Business Centre, 050010 Almaty, Republic of Kazakhstan

Malaysia

- Support E-mail: support@zyxel.com.my
- Sales E-mail: sales@zyxel.com.my
- Telephone: +603-8076-9933
- Fax: +603-8076-9833
- Web: <http://www.zyxel.com.my>
- Regular Mail: ZyXEL Malaysia Sdn Bhd., 1-02 & 1-03, Jalan Kenari 17F, Bandar Puchong Jaya, 47100 Puchong, Selangor Darul Ehsan, Malaysia

North America

- Support E-mail: support@zyxel.com
- Support Telephone: +1-800-978-7222
- Sales E-mail: sales@zyxel.com
- Sales Telephone: +1-714-632-0882
- Fax: +1-714-632-0858
- Web: www.zyxel.com

- Regular Mail: ZyXEL Communications Inc., 1130 N. Miller St., Anaheim, CA 92806-2001, U.S.A.

Norway

- Support E-mail: support@zyxel.no
- Sales E-mail: sales@zyxel.no
- Telephone: +47-22-80-61-80
- Fax: +47-22-80-61-81
- Web: www.zyxel.no
- Regular Mail: ZyXEL Communications A/S, Nils Hansens vei 13, 0667 Oslo, Norway

Poland

- E-mail: info@pl.zyxel.com
- Telephone: +48-22-333 8250
- Fax: +48-22-333 8251
- Web: www.pl.zyxel.com
- Regular Mail: ZyXEL Communications, ul. Okrzei 1A, 03-715 Warszawa, Poland

Russia

- Support: <http://zyxel.ru/support>
- Sales E-mail: sales@zyxel.ru
- Telephone: +7-095-542-89-29
- Fax: +7-095-542-89-25
- Web: www.zyxel.ru
- Regular Mail: ZyXEL Russia, Ostrovityanova 37a Str., Moscow 117279, Russia

Singapore

- Support E-mail: support@zyxel.com.sg
- Sales E-mail: sales@zyxel.com.sg
- Telephone: +65-6899-6678
- Fax: +65-6899-8887
- Web: <http://www.zyxel.com.sg>
- Regular Mail: ZyXEL Singapore Pte Ltd., No. 2 International Business Park, The Strategy #03-28, Singapore 609930

Spain

- Support E-mail: support@zyxel.es
- Sales E-mail: sales@zyxel.es
- Telephone: +34-902-195-420
- Fax: +34-913-005-345
- Web: www.zyxel.es
- Regular Mail: ZyXEL Communications, Arte, 21 5ª planta, 28033 Madrid, Spain

Sweden

- Support E-mail: support@zyxel.se
- Sales E-mail: sales@zyxel.se
- Telephone: +46-31-744-7700
- Fax: +46-31-744-7701
- Web: www.zyxel.se
- Regular Mail: ZyXEL Communications A/S, Sjöporten 4, 41764 Göteborg, Sweden

Thailand

- Support E-mail: support@zyxel.co.th
- Sales E-mail: sales@zyxel.co.th
- Telephone: +662-831-5315
- Fax: +662-831-5395
- Web: http://www.zyxel.co.th
- Regular Mail: ZyXEL Thailand Co., Ltd., 1/1 Moo 2, Ratchaphruk Road, Bangrak-Noi, Muang, Nonthaburi 11000, Thailand.

Ukraine

- Support E-mail: support@ua.zyxel.com
- Sales E-mail: sales@ua.zyxel.com
- Telephone: +380-44-247-69-78
- Fax: +380-44-494-49-32
- Web: www.ua.zyxel.com
- Regular Mail: ZyXEL Ukraine, 13, Pimonenko Str., Kiev 04050, Ukraine

United Kingdom

- Support E-mail: support@zyxel.co.uk
- Sales E-mail: sales@zyxel.co.uk
- Telephone: +44-1344-303044, 08707-555779 (UK only)
- Fax: +44-1344-303034
- Web: www.zyxel.co.uk
- FTP: ftp.zyxel.co.uk
- Regular Mail: ZyXEL Communications UK Ltd., 11 The Courtyard, Eastern Road, Bracknell, Berkshire RG12 2XB, United Kingdom (UK)

Legal Information

Copyright

Copyright © 2007 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Trademarks

ZyNOS (ZyXEL Network Operating System) is a registered trademark of ZyXEL Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Certifications

Federal Communications Commission (FCC) Interference Statement

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio/television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and the receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

CE-Konformität

Das Produkt entspricht den grundlegenden Anforderungen der Richtlinie 1999/5/EG (R&TTE) sowie den übrigen einschlägigen Bestimmungen des FTEG und ist zum Betrieb in der EU und Schweiz vorgesehen. Das Produkt ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Massnahmen durchzuführen.

Conformité CE

Le produit satisfait aux exigences techniques de la directive 1999/5/CE (R&TTE) et est conçu pour être utilisé au sein de la Communauté européenne et en Suisse. Le produit fait partie de la classe A, ce qui signifie que son exploitation peut entraîner des bruits parasites dans les zones d'habitation; le cas échéant, l'exploitant peut être tenu de prendre des mesures appropriées pour remédier au dérangement.

Conformità CE

Questo prodotto soddisfa le richieste tecniche della direttiva 1999/5/EG (R&TTE) ed è previsto per il funzionamento nella UE e in Svizzera. Il prodotto è dispositivo della classe A. Questo dispositivo può causare nel settore abitativo dei radiodisturbi.

In questo caso può essere richiesto al gestore di prendere opportune misure.

Notices

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Viewing Certifications

- 1 Go to <http://www.zyxel.com>.
- 2 Select your product on the ZyXEL home page to go to that product's page.
- 3 Select the certification you wish to view from this page.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in materials or workmanship for a period of up to two years from the date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact ZyXEL's Service Center for your Return Material Authorization number (RMA). Products must be returned Postage Prepaid. It is recommended that the unit be insured when shipped. Any returned products without proof of purchase or those with an out-dated warranty will be repaired or replaced (at the discretion of ZyXEL) and the customer will be billed for parts and labor. All repaired or replaced products will be shipped by ZyXEL to the corresponding return address, Postage Paid. This warranty gives you specific legal rights, and you may also have other rights that vary from country to country.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

Index

Symbols

.NET Framework [19](#)

A

about screen [35](#)
Advanced Encryption Standard, see AES [15](#)
AES [16, 27](#)
AES (Advanced Encryption Standard) [15](#)
applications [15](#)

C

cabling type [55](#)
CE [56](#)
certifications [56, 65](#)
 notices [66](#)
 viewing [66](#)
configuration screen [28](#)
connections overview [15](#)
contact information [59](#)
copyright [65](#)
customer support [59](#)

D

DAK [28, 29](#)
DAK (Data Access Password) [16](#)
Data Access Password, see DAK [16](#)
dimensions [55](#)
disclaimer [65](#)

E

electrical and cable wiring [27](#)
electrical circuit boundaries [27](#)

encryption [15, 27, 56](#)
ETHN LED [47](#)

F

FCC [56](#)
FCC interference statement [65](#)
frequency band [56](#)

H

HomePlug AV standard [15](#)
humidity, operation and storage [55](#)

I

installation
 overview [19](#)
 procedure [19](#)
 requirements [19](#)
InstallShield wizard [21](#)
introduction [15](#)

L

LED [47](#)
 ETHN [47](#)
 LINK [47](#)
 PWR [47](#)
LINK LED [47](#)
local vs. remote adapter [29](#)

M

MAC address [29](#)
management

- multiple networks [17](#)
- overview [27](#)
- managing the device
 - using the web configurator. See web configurator.
- multiple networks [17](#)

N

- network example [27](#)
- network information [31](#)
- network ports [55](#)

P

- passwords [28](#), [29](#), [30](#)
 - types of [16](#)
- plug-and-play [27](#)
- power specification [55](#)
- priority settings [32](#)
 - application type [33](#)
 - priority levels [35](#)
- private network [16](#)
- problems and solutions [47](#)
- product registration [67](#)
- PWR LED [47](#)

R

- receive rate [31](#)
- registration
 - customer information [22](#)
 - product [67](#)
 - user name [22](#)
- related documentation [3](#)

S

- safety warnings [5](#)
- screws [57](#)
- security [16](#), [17](#), [28](#)
 - passwords [16](#)
- starting the utility [28](#)
- syntax conventions [4](#)

T

- temperature, operation and storage [55](#)
- trademarks [65](#)
- transfer rates [15](#)
- transmit rate [31](#)
- troubleshooting [47](#)

U

- utility
 - launching [28](#)

W

- warranty [67](#)
 - note [67](#)
- web configurator [16](#)