

IOLAN DS Family

DS1 User's Guide

Version 1.0

Part #5500162-10

January 2005

Copyright Statement

This document must not be reproduced in any way whatsoever, either printed or electronically, without the consent of:

Perle Systems Limited,
60 Renfrew Drive
Markham, ON
Canada
L3R 0E1

Perle reserves the right to make changes without further notice, to any products to improve reliability, function, or design.

Perle, the Perle logo, and IOLAN are trademarks of Perle Systems Limited.

Microsoft, Windows 98, Windows NT, Windows 2000, Windows Server 2003, Windows XP, and Internet Explorer are trademarks of Microsoft Corporation.

Netscape and Mozilla are a trademark of Netscape Communications Corporation.

Solaris is a registered trademark of Sun Microsystems, Inc. in the USA and other countries.

Perle Systems Limited, 2004.

FCC Note The IOLAN Device Server has been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions in this Guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

EN 55022: 1998, Class A, Note

WARNING This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



Caution: the IOLAN Device Server is approved for commercial use only.



Table of Contents

Preface	13
About This Book	13
Intended Audience.....	13
Documentation.....	13
Typeface Conventions.....	14
Online Help	14
Contacting Technical Support.....	15
Making a Technical Support Query	15
Who To Contact	15
Have Your Product Information Ready	15
Making a support query via the Perle web page	15
Repair Procedure.....	16
Feedback on this Manual.....	16
Chapter 1 Introduction.....	17
About the IOLAN Device Server	17
Device Server Features	17
Hardware	17
Software	18
Security	18
Supported Products/Versions	18
Web Browsers.....	18

Typical Applications Summary	19
Managing the Device Server	19
Managing/Accessing devices attached to the Device Server.....	19
Network Security.....	19
Chapter 2 Installation	21
Introduction.....	21
IOLAN Device Server Components.....	21
What's Included	21
What You Need to Supply	21
Available Accessories	21
Powering Up the Device Server	22
Setting Jumpers	22
Setting an Initial IP Address	23
Using DeviceManager.....	23
Using a Direct Connection	24
Using DHCP/BOOTP	24
Using ARP-Ping	25
IPv6 Network	25
LED Guide	25
Pinouts	26
EIA-232 Cabling Diagrams	27
Terminal DB25 Connector.....	27
Modem DB25 Connector	27
PC DB9 Connector.....	28
Modem DB9 Connector	28

Chapter 3 Configuration Methods	29
Introduction	29
DeviceManager.....	29
WebManager.....	30
Using the WebManager.....	30
CLI	30
Menu.....	30
Accessing the Menu.....	30
Menu Conventions	31
DHCP/BOOTP	31
SNMP.....	31
Chapter 4 Configuring the Device Server	33
Introduction	33
Configuring the Device Server	33
General Device Server Configuration.....	33
Console Mode vs. Serial Mode.....	33
Device Server Services	34
Trueport.....	34
Hardware Configuration.....	34
Ethernet Connection	34
Serial Connection.....	35
Other	35
Machine To Machine Connections	35
Users Connecting to Serial Devices	36
Users Connecting to the LAN	36
Connecting To the Device Server	36
Connecting Through the Device Server	37

Setting Up Lines	37
Direct/Silent/Reverse Connections	37
Virtual Modems	38
BIDIR	38
UDP	38
Setting Up Users.....	39
User Accounts.....	39
User Levels.....	39
Sessions	40
Users From LAN to Device Server to Serial Device.....	40
Easy Port Access Menu	40
Reverse Sessions.....	40
Configuring Network Options	40
Hosts	40
Gateways	40
Syslog	41
SNMP.....	41
Configuring Time	41
Language support	41
Loading a Supplied Language.....	41
Translation Guidance	42
Software Upgrades and Language Files.....	42
Downloading Terminal Definitions	43
Creating Terminal Definition Files.....	43
TFTP Configuration	44
Resetting Configuration Parameters	45
Lost Admin Password	45
DHCP/BOOTP	45
DHCP/BOOTP Parameters	45

Chapter 5 Using the DeviceManager	47
Introduction	47
Starting a New Session	47
Manage Device Server Tab	48
Populating the Device Server List	48
Assigning a Temporary IP Address to a New Device Server	48
Adding/Deleting Static Device Servers	49
Configuration Tab.....	49
Connecting to a Device Server	50
Managing a Device Server	50
DeviceManager Work Flow	50
Creating/Editing Configuration Files	50
Working With the Device Server Configuration	50
Working With a Local Configuration File	51
Configuring the Server	51
Server.....	51
Services	52
Configuring Trueport Baud	53
Configuring the Hardware	53
Configuring Lines	54
Line Services	57
Raw Settings.....	57
Telnet Settings	58
BIDIR Settings.....	59
UDP Settings.....	59
VModem Settings.....	60
Configuring Modems.....	61
Configuring Users.....	61
Configuring Line Access	63
Configuring Sessions	64
Configuring the Default User.....	64

Configuring the Network	65
Configuring Hosts.....	65
Configuring SNMP	66
Configuring TFTP.....	67
Configuring Gateways.....	67
Configuring Syslog.....	68
Configuring Administration Tasks	69
Configuring Bootup Files.....	69
Configuring the MOTD File	69
Statistics	70
Tools	70
Saving a Configuration To File.....	70
Getting a Configuration File.....	70
Configuring Multiple Device Servers	70
Downloading Device Server Firmware.....	71
Setting the Device Server's Date and Time	72
Rebooting the Device Server	72
Resetting the Device Server to Factory Defaults.....	72
Resetting a Line	72
Custom Files	72
Saving Crashes to a Dump File.....	72
Downloading Terminal Definitions	72
Downloading a Language File	73
Setting DeviceManager Options.....	73
Chapter 6 Command Line Interface	75
Introduction	75
CLI Conventions	75
Command Syntax.....	75
Command Shortcuts.....	76
Command Options.....	76

Server Commands	77
Server Commands	77
Set Server	77
Set Service.....	78
Show Server.....	79
Hardware Commands.....	79
Set Ethernet	79
Show Hardware.....	79
Trueport Baud Commands	80
Set Trueport Remap-Baud	80
Show Trueport.....	80
User Commands	80
Logged Into the Device Server Commands	80
Admin	80
Help.....	80
Kill Line.....	80
Kill Session.....	80
Logout	81
Ping	81
Resume.....	81
Screen.....	81
Set Termtyp.....	81
Set User	82
Set User Session	82
Show Line Users	83
Syslog Console	83
Show Sessions.....	83
Show Termtyp	83
Start.....	83
Telnet	84
Version	85
Configuring Users	85
Add User	85
Delete User	85
Set Default User.....	85
Set User	87
Set User Session	89
Show Default User	89
Show User.....	89

Line Commands	90
Line Commands	90
Set Line	90
Set Line Interface	93
Set Line Service	94
Set Termtyp	95
Show Line.....	95
Line Service Commands	95
Set Telnet-Client.....	95
Set UDP.....	96
Set Vmodem.....	97
Show Interface.....	97
Show Telnet-Client	97
Show UDP	97
Show Vmodem	98
Modem Commands	98
Add Modem	98
Delete Modem	98
Show Modems.....	98
Network Commands	99
SNMP Commands	99
Add Community	99
Add Trap.....	99
Delete Community	99
Delete Trap.....	100
Set SNMP.....	100
Show SNMP	100
TFTP Commands	100
Set Server TFTP	100
Hosts Commands	101
Add Host.....	101
Delete Host.....	101
Set Host.....	101
Show Hosts	101
Gateway Commands	102
Add Gateway	102
Delete Gateway	102
Set Gateway	103
Show Gateways.....	103
Logging Commands	104
Set Syslog	104
Show Syslog.....	104

Time Commands	104
Set Time.....	104
Show Time	104
Time/Date Setting Commands.....	105
Set Date	105
Show Date.....	105
Administration Commands	105
Bootup Commands	105
Reboot.....	105
Reset.....	105
Reset Factory.....	105
Save	105
Set Bootup	105
Show ARP.....	106
Show Bootup.....	106
TFTP File Transfer Commands	106
Netload.....	106
Netsave	107
MOTD Commands	107
Set MOTD	107
Show MOTD.....	107
Statistic Commands	108
Configuration Statistics	108
Show Netstat.....	108
Show Netstat Statistics	108
Show Routes.....	108
Run-Time Statistics	108
Delete Arp	108
Show Arp.....	108
Show Serial	109
Uptime.....	109
Appendix A Troubleshooting	111
Introduction	111
Hardware Problems	111
Communication Issues.....	111
Host Problems.....	112
Login Problems	112

Problems with Terminals	112
Unknown IP Address.....	113
DHCP/BOOTP Problems	113
Language Problems	114
Long Reboot Cycle	114
Appendix B Utilities	115
Introduction.....	115
Trueport.....	115
Glossary	117
Index	119



Preface

About This Book

This guide provides the information you need to:

- configure the Device Server
- incorporate the Device Server into your production environment

Intended Audience

This guide is for administrators who will be configuring the Device Server.

Some prerequisite knowledge is needed to understand the concepts and examples in this guide:

- If you are using an external authentication application(s), working knowledge of the authentication application(s).
- Knowledge of TFTP, the transfer protocol the Device Server uses.

Documentation

The following documentation is included on the Device Server installation CD:



- *IOLAN DSI/SDSI Device Server Quick Start Guide*
- *IOLAN Device Server User's Guide*
- *Trueport User Guide*
- *Trueport Installation and Configuration Guide for Windows NT*
- Online Help in the DeviceManager (automatically installed with the DeviceManager application)
- Link to knowledge base

Typeface Conventions

Most text is presented in the typeface used in this paragraph. Other typefaces are used to help you identify certain types of information. The other typefaces are:

Typeface Example	Usage
At the C: prompt, type: add host	This typeface is used for code examples and system-generated output. It can represent a line you type in, or a piece of your code, or an example of output.
Set the value to TRUE .	The typeface used for TRUE is also used when referring to an actual value or identifier that you should use or that is used in a code example.
subscribe <i>project subject</i> run yourcode.exec	The italicized portion of these examples shows the typeface used for variables that are placeholders for values you specify. This is found in regular text and in code examples as shown. Instead of entering <i>project</i> , you enter your own value, such as <i>stock_trader</i> , and for yourcode , enter the name of your program.
File, Save	This typeface and comma indicates a path you should follow through the menus. In this example, you select Save from the File menu.
<i>SmartSockets User's Guide</i>	This typeface indicates a book or document title.
See Chapter 1, Introduction on page 17 for more information.	This indicates a cross-reference to another chapter or section that you can click on to jump to that section.

Online Help

Online help is provided in the DeviceManager. You can click on the What's This button ( or ) and then click on a field to get field-level help. Or, you can press the **F1** key to get window-level help. You can also get the *User's Guide* online by selecting **Help, Help Topics**.

Contacting Technical Support

Making a Technical Support Query

Who To Contact

Note: Perle offers free technical support to Perle Authorised Distributors and Registered Perle Resellers.

If you bought your product from a registered Perle supplier, you must contact their Technical Support department; they are qualified to deal with your problem.

Have Your Product Information Ready

When you make a technical support enquiry please have the following information ready:

Item	Write Details Here
Product Name	
Problem Description	
Your Name	
Company Name and Address	
Country	
Phone Number	
Fax Number	
Email Address	

Making a support query via the Perle web page

If you have an internet connection, please send details of your problem to Technical Support using the email links provided on the Perle web site in the **Support** area.

Click here to access our website at the following URL:

<http://www.perle.com>

Repair Procedure

Before sending a Device Server for repair, you must contact your Perle supplier. If, however, you bought your product directly from Perle you can contact directly.

Customers who are in Europe, Africa or Middle East can submit repair details via a website form. This form is on the Perle website, www.perle.com, in the **Support** area.

Click here to access our web site at the following URL:

http://www.perle.com/support/rma_form.html

Feedback on this Manual

If you have any comments or suggestions for improving this manual please email Perle using the following address;

Email: ptac@perle.com

Please include the **title**, **part number** and **date** of the manual (you can find these on the title page at the front of this manual).



Introduction

About the IOLAN Device Server

The Device Server is an ethernet communications/terminal server that allows serial devices to be connected directly to LANs. The Device Server can connect to a wide range of devices including:

- Terminals for multi-user UNIX systems
- Data acquisition equipment (manufacturing, laboratory, scanners, etc.)
- Retail point-of-sale equipment (bar coding, registers, etc.)
- PCs using terminal emulation
- Modems for remote access and Internet access
- ISDN adapters for branch remote access and Internet access
- All types of serial printers

The performance and flexibility of the Device Server allows you to use a wide range of high speed devices in complex application environments. The Device Server will work in any server environment running TCP/UDP/IP.

Device Server Features

The Device Server is a communications server with 1 port for making serial network connections. It attaches to your TCP/IP network and allows serial devices such as modems, terminals, or printers to access the LAN.

Hardware

The Device Server hardware features include:

- Auto sensing 10/100 RJ45 interface.
- Universal, software-selectable EAI-232/422/485 interface.
- Full modem control using DTR, DSR, CTS, RTS and DCD.
- Tx and Rx activity indicators.
- External AC power supply or power over serial.
- LEDs for diagnostic testing.
- Self-test on power-up.
- Reset switch.

Software

The Device Server software features include:

- Multiple ways to configure the Device Server:
 - DeviceManager, a fully functional Windows 98/NT/2000/ME/Server 2003/XP configuration/management tool
 - WebManager, a web browser option for configuring/managing the Device Server
 - Menu, a window-oriented menu interface for configuration and user access
 - CLI, a Command Line Interface option for configuration/management and user access
 - SNMP, allowing remote configuration via SNMP as well as statistics gathering
 - DHCP/BOOTP, a method of automatically updating the Device Server
- IPv6 support.
- Support for TCP/IP and UDP protocols for telnet.
- Virtual modem emulation.
- ‘Fixed tty’ support for several operating systems (Trueport).
- DHCP/BOOTP for automated network-based setup.
- Dynamic statistics displays and line status reporting for fast problem diagnosis.
- Multi session support on a single terminal.
- Interoperability with IP routing through gateway tables.

Security

The Device Server security features include:

- Supervisory and port (line) password.
- Port locking.
- Per user access level assignment.
- Logging via Syslog.
- Idle port timers, which close a connection that has not been active for a specified period of time.
- Ability to individually disable daemons/services that won’t be used by the Device Server.

Supported Products/Versions

Web Browsers

The WebManager has been tested on Windows and Linux with the following web browsers:

- **Netscape**—7.x
- **Internet Explorer**—6.x
- **Mozilla Firefox**—1.x

Typical Applications Summary

Managing the Device Server

The Device Server can be managed and configured by administrators through various methods, allowing them full configuration capabilities and easy access to management statistics and tools. Administrators can access the Device Server using the following methods:

- Connection through ethernet using the DeviceManager, a Windows-based configuration application.
- Connection through ethernet using WebManager, via a web browser.
- Direct connection to the serial port using a Serial Terminal or Terminal Emulation Software.
- From the network through the ethernet interface using reverse Telnet (Port 23).
- Through an SNMP agent, using the Device Server MIB.

Managing/Accessing devices attached to the Device Server

The Device Server can be configured to allow users or administrators to view or manage specific devices on the Device Server's serial port across the Ethernet interface using two different methods.

- **Direct Connect**—users can directly connect to the device on the serial port by Telnet or SSH (**Line Service** must be set to **Rev Telnet**) using the Device Server's configured IP address and the serial device's assigned TCP port number.
- **Easy Port Access**—users can connect to the Device Server using the configured Device Server's IP address by reverse Telnet (port number 23), and are provided with a device menu displaying the name of the device that the user has access to. This feature eliminates the need for administrators and users to recall the specific port number associated with a certain device connected to the Device Server. The user can simply connect to a specific device based upon the name of the device and then return to the device menu without disconnecting its initial reverse Telnet connection.

Network Security

The Device Server provides a comprehensive suite of security features to allow an organization to implement robust security planning to prevent unauthorized access. These include trusted host filtering and the ability to disable individual services.



Installation

Introduction

This chapter tells you what is packaged with your IOLAN Device Server, how to power up the Device Server to make sure it works correctly, and how to assign the Device Server an IP address through the LAN.

IOLAN Device Server Components

What's Included

When you open your IOLAN Device Server package, you should have the following components:

- The Device Server
- *External power supply

If the Device Server was bought in bulk, you must supply the power supply.

- *Quick Start Guide*
- Warranty Card
- A CD-ROM containing documentation, firmware, DeviceManager, etc.

What You Need to Supply

Before you can begin, you need to have the following:

- A serial cable
- An ethernet 10/100BASE-T cable if you are connecting the Device Server to the network

Available Accessories

The following accessory is available for purchase for the Device Server:

- DIN Rail Mounting Kit (35mm)

Contact your distributor for details.

Powering Up the Device Server

Before you attach the Device Server to your network or try to configure it, we suggest that you power it up to verify that it works properly. To power up the Device Server, perform the following steps:

1. Plug the external power supply into the Device Server and then into the electrical outlet.
2. If the Device Server is working correctly, you should see:
 - a. The Power/Ready LED starts out red.
 - b. The Power/Ready LED flashes green while the Device Server boots up.
 - c. The Power/Ready LED stays solid green, indicating that it is ready to configure/use.


You are now ready to begin communicating with your IOLAN Device Server. The last step of the installation process is to set an IP address for the Device Server; this is necessary before it can be configured and put into production.

Before you start to configure the Device Server, you should set the Device Server jumpers if you want to terminate the line.

Setting Jumpers

The Device Server contains jumpers that you might want to set before you configure it and put it into production. You can set the Device Server line termination to **on** or **off** (this is **off** by default) if you are using EIA-422/485. To change the settings, do the following:

1. Unplug the Device Server from the electrical outlet and disconnect everything from the box.
2. Open the case by unscrewing the two side screws, one on each side, and lifting off the top of the case. You should see the following:

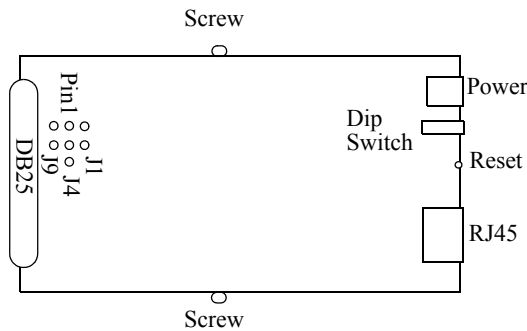

3. To turn line termination **on**, locate and jumper both J1 and J9.
4. Close the Device Server case by replacing the case lid and the two screws. You can now power it on with the new settings.

Setting an Initial IP Address

This section describes the different methods you can use to set the Device Server IP address.

Following is a list of methods for setting the Device Server IP address and a short explanation of when you would want to use that method:

- **DeviceManager**—Use this method when you can connect the Device Server to the network and access the Device Server from a Windows® PC. The DeviceManager is a Windows-based application that can be used for Device Server configuration and management.
- **Direct Connection**—Use this method when you can connect the Device Server directly to a dumb terminal, essentially logging directly into the Device Server. Using this method, you will need to configure and/or manage the Device Server using either the Menu or CLI.
- **DHCP/BOOTP**—Use this method when you have a BOOTP or DHCP server running and you can connect the Device Server to your network.
- **ARP-Ping**—Use this method when you can connect the Device Server to the network and want to assign a temporary IP address to the Device Server by specifying an ARP entry and then pinging it.
- **IPv6 Network**—When the Device Server is connected to an IPv6 network, its local link address should automatically be recognized by the network.

Regardless of which method you use, the Device Server must reside within the same network as the host you are accessing it from.

Once an IP address has been assigned to the Device Server, in most cases, you can continue to use the same method to configure and/or manage the Device Server. See [Chapter 3, Configuration Methods on page 29](#) for more information on the different methods you can use to manage/configure the Device Server.

Using DeviceManager

To use the DeviceManager, you must first install it on a Windows 98/2000/NT/ME/Server 2003/XP operating system (Windows NT requires Service Pack 4 or later) that resides in the same network as the Device Server. The DeviceManager installation wizard can be found on the CD-ROM included in the Device Server package.

1. Connect the Device Server to the LAN.
2. From the CD-ROM that was included in the Device Server packaging, select the DeviceManager link.
3. Click on the link under **Location** and click **Open** to automatically start the DeviceManager installation.
4. Install the DeviceManager by following the installation wizard. On the last window, check the **Yes, I want to launch DeviceManager now.** box and click the **Finish** button.
5. On the **Manage Device Server** tab, click the **Search Local Network** button.
6. Any Device Server that does not have an IP address will be displayed as **Not Configured**, with the **Model** and **MAC Address** to identify the Device Server. Highlight the Device Server that you want to assign an IP address to and click the **Assign IP** button.
7. Type in the IP address that you want to assign to this Device Server and click the **Assign IP** button.

Note: This is just a temporary IP address that you can use to open a session to the Device Server for configuration.

8. You are now ready to configure the Device Server. Double-click the Device Server you just assigned the temporary IP address to, to open a configuration session. Type **superuser** (the factory default Admin user password) in the Login window and click **OK**.

9. Expand the **Server Configuration** folder and select **Server**. You can choose to enter a permanent IP address in the **Internet Address** field of the Server window.
10. Click the **Apply** button when you're done with the Server window. To permanently assign the IP address, you need to download the new configuration file and then reboot the Device Server.
11. Download the configuration file to the Device Server by selecting **Tools, Download Configuration to Unit**.
12. Reboot the Device Server by selecting **Tools, Reboot Server**.

For more information on configuring the Device Server using DeviceManager, see [Chapter 5, Using the DeviceManager](#) on page 47.

Using a Direct Connection

You can connect to Device Server using a PC with a terminal emulation package, such as HyperTerminal or a terminal.

1. Connect the Device Server to your PC or dumb terminal. Make sure the dip switch is in Console mode (this sets the Device Server serial port to EIA-232). When connecting a terminal or PC directly (without modems), the EIA-232 signals need to be crossed over ('null modem' cable). See [EIA-232 Cabling Diagrams](#) on page 27 for cabling diagrams.
2. Using a PC emulation application, such as HyperTerminal, or from a dumb terminal, set the Port settings to 9600 Baud, 8 Data bits, No Parity, 1 Stop Bits, and No Hardware Flow control to connect to the Device Server.
3. When prompted, type **admin** for the User and **superuser** for the Password. You should now see the **DS1#** prompt.
4. You are now logged into the Device Server and can set the IP address by typing from the command line using the Command Line Interface (CLI):

```
set server internet <ipv4address>
```

Where **ipv4address** is the IP Address being assigned to the Device Server.

5. Type the following command:

```
save
```
6. If you are going to use another configuration method, such as WebManager or DeviceManager, unplug the Device Server. Change the Device Server dip switch to Off Serial (dip switch in the up position) and connect it to your serial device. Plug the Device Server back in, automatically rebooting the Device Server in the process.
7. If you want to complete the configuration using a direct connection, see [Chapter 3, Configuration Methods](#) on page 29 and/or [Chapter 6, Command Line Interface](#) on page 75. After you complete configuring the Device Server, unplug the Device Server. Change the Device Server dip switch to Off Serial (dip switch in the up position) and connect it to your serial device. Plug the Device Server back in, automatically rebooting the Device Server in the process.

Using DHCP/BOOTP

If you are using BOOTP, you need to add an entry for the Device Server that associates the MAC address (found on the back of the Device Server) and the IP address that you want to assign to the Device Server. Next, connect the Device Server to the network and plug it in to turn it on.

If you are using DHCP, just connect the Device Server to the network and plug it in to turn it on. View the DHCP server's IP address table to see what IP address was assigned to the Device Server.

You are now ready to configure the Device Server. See [Chapter 3, Configuration Methods](#) on page 29 for information on the different Device Server configuration methods.

Using ARP-Ping

You can use the ARP-Ping (Address Resolution Protocol) method to temporarily assign an IP address and connect to your Device Server to assign a permanent IP address. To use ARP-Ping to temporarily assign an IP address:

1. From a local UNIX/Linux host, type the following:

```
arp -s a.b.c.d aa:bb:cc:dd:ee:ff
```

On a Windows[®] 98 or newer system, type the following:

```
arp -s a.b.c.d aa-bb-cc-dd-ee-ff
```

(where **a.b.c.d** is the IPv4 address you want to temporarily assign to the Device Server, and **aa:bb:cc:dd:ee:ff** is the Ethernet (MAC) address of Device Server, found on the back of the unit.

2. Whether you use UNIX or Windows[®], you are now ready to ping to the Device Server. Here is a UNIX example of the sequence to use:

```
arp -s 192.168.209.8 00:80:d4:00:33:4e
ping 192.168.209.8
```

You are now ready to configure the Device Server. See [Chapter 3, Configuration Methods](#) on page 29 for information on the different Device Server configuration methods.

IPv6 Network

The Device Server has a factory default link local IPv6 address that takes the following format:

Device Server MAC Address: 00-80-D4-AB-CD-EF

Link Local Address: fe80::0280:D4ff:feAB:CDEF

The Device Server will also listen for IPv6 router advertisements to learn a global address. You do not need to configure an IPv4 address for a Device Server residing in an IPv6 network.


You are now ready to configure the Device Server. See [Chapter 3, Configuration Methods](#) on page 29 for information on the different Device Server configuration methods.

LED Guide

The Device Server LEDs display the following information:

- **Power/Ready**—(Green/Red) Shows red at power up. If this LED remains red, indicates that there is a critical error (return to factory). Flashes green to indicate that the Device Server is booting. Stays solid green to indicate that the Device Server is ready.
- **Link/10/100**
 - Green—10 Mbits
 - Yellow—100 Mbits
 - Off—no LAN connection
- **Activity**—Flashes Green for TX or RX data
- **Tx**—Flashes with transmit serial activity
- **Rx**—Flashes with receive serial activity

Pinouts

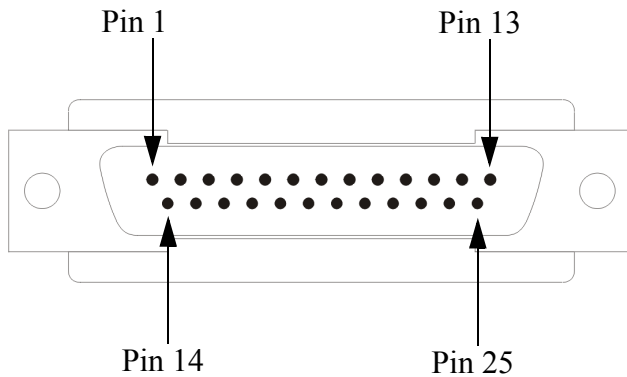

The following table provides pinout information:


Pinout	EIA-232	EIA-422	EIA-485 Full Duplex	EIA-485 Half Duplex
1	Shield	Shield	Shield	Shield
2 (out)	TxD			
3 (in)	RxD			
4 (out)	RTS			
5 (in)	CTS			
6 (in)	DSR			
7	GND	GND	GND	GND
8 (in)	DCD			
12	Power in	Power in	Power in	Power in
13		CTS-		
14		TxD+	TxD+	DATA+
15		TxD-	TxD-	DATA-
18		RTS+		
19		RTS-		
20 (out)	DTR			
21		RxD+	RxD+	
22		RxD-	RxD-	
25		CTS+		

EIA-232 Cabling Diagrams

This section shows how to create EIA-232 cables that are compatible with the Device Server.


Terminal DB25 Connector

The following diagram shows how the null modem cable should be configured when connecting to a terminal DB25.

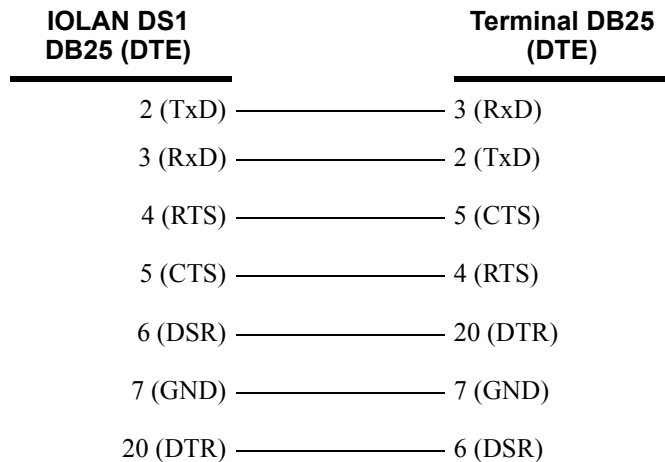


Modem DB25 Connector

The following diagram shows how a standard straight through cable should be configured when connecting to a DB25 modem.

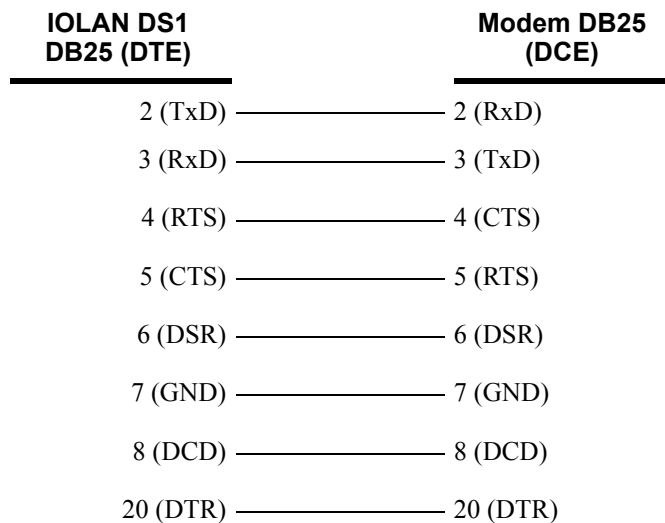


PC DB9 Connector

The following diagram shows how the null modem cable should be configured when connecting to a DB9 PC.

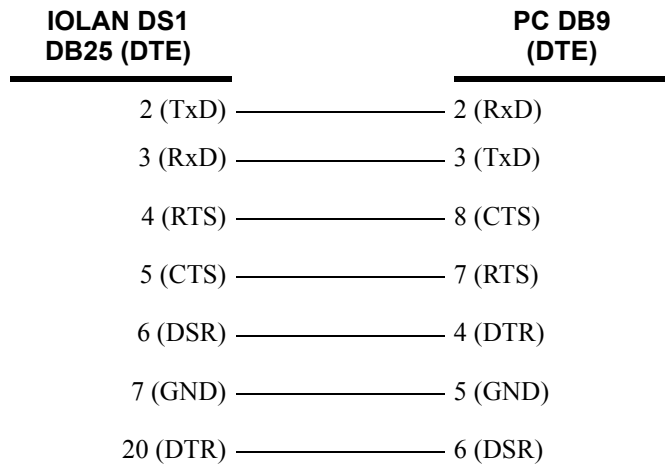

Modem DB9 Connector

The following diagram shows how the cable should be configured when connecting to a DB9 Modem.

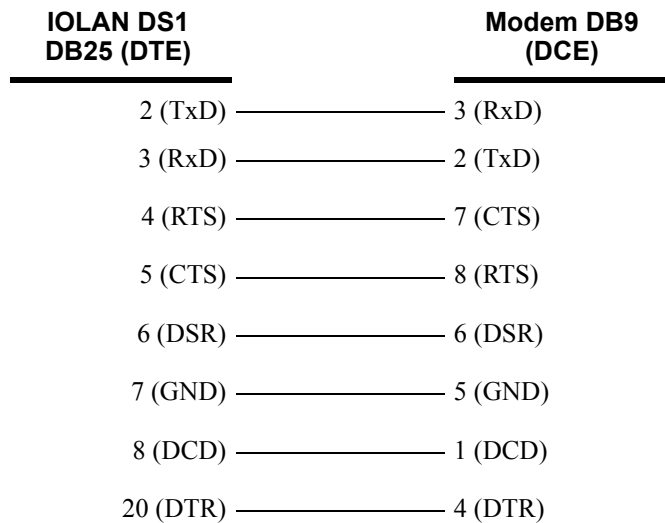



Configuration Methods

Introduction

This chapter provides information about the different methods you can use to configure the Device Server.

DeviceManager

The DeviceManager is a fully functional Windows 98/NT/2000/ME/Server 2003/XP Device Server configuration/management tool. You must install the DeviceManager from the CD-ROM included with the Device Server. Through the DeviceManager, you can:

- assign an IP address to new Device Servers.
- perform firmware updates.
- create configuration files, which can be immediately downloaded to the Device Server.
- save configuration files locally in the DeviceManager's native binary format or to a text file. The text configuration file can be edited with a text editor.
- open a session to a Device Server and import a (saved) configuration file.
- view statistics for a Device Server.
- download custom files, such as new terminal definitions and a custom language file.
- download a configuration file to multiple Device Servers.

You can use the DeviceManager as a stand-alone application to create configuration files that can be saved locally or you can use the DeviceManager to open a session to a Device Server to actively manage and configure it.

See [Chapter 5, Using the DeviceManager on page 47](#) for information on configuring/managing the Device Server with DeviceManager.

WebManager

The WebManager is a web-browser based method of configuring/managing a Device Server.

To access a Device Server through the WebManager, open up your web browser and type in the IP address of the Device Server that you want to manage/configure. A login screen will appear. Type in the Admin password.

Using the WebManager

The Server Configuration window is displayed after you first logon. The running Device Server configuration is displayed in the WebManager. You navigate through the different configuration windows by selecting the configuration window from the drop-down options in the upper-left hand corner of the browser.

When you have completed all the changes to a configuration window, click the **Submit** button. After you make all your configuration changes, click the **Save to FLASH** button. If you want your changes to take effect immediately, click the **Reboot** button. You can make changes to a line, **Submit** them, and then click the **Kill Line** button to test the changes immediately; however, if you do not click the **Save to FLASH** button, your changes will be lost the next time the Device Server reboots. After you click the **Reboot** button, you will need to reconnect and login to the Device Server.

Use the WebManager's drop-down menus to navigate through the WebManager. Do not use the browser's Back button.

CLI

The Command Line Interface (CLI) is a command line option for Device Server configuration/management and user access. See [Chapter 6, *Command Line Interface on page 75*](#) for a full explanation of how to use the CLI.

Menu

The Menu is a window-oriented Device Server configuration and user access option. To manage the Device Server, you will also need to use the CLI, WebManager, or DeviceManager, as you cannot download or upload files to the Device Server through the Menu.

Accessing the Menu

Menu access is available to any user whose Line Service is set to DSLogin, and whose User Service is set to DSPrompt. What the user sees depends on what the User Level is set to:

- **Menu**—Users with **User Level Menu** will only see the sessions that have been set up for them. They can start predefined sessions, kill (stop) a running session, resume a session, and logout of the Device Server.
- **Restricted**—Users with **User Level Restricted** can basically perform the same tasks as a Menu user, except that they have the option of performing these tasks via the Menu or the CLI.
- **Normal**—Users with **User Level Normal** can do everything a Restricted user can do, plus start a free session (connecting to any host on the network), set up their own user parameters (sessions, password, language, hotkey prefix), define their terminal, and become the Admin user (if they know the Admin password).
- **Admin**—Users with **User Level Admin** (not the Admin user), have complete access to the Device Server, the same as the Admin user. Through the Menu program, the Admin level user can configure the Device Server, although there are several tasks that can only be done in the CLI, such as downloading and uploading files and saving the configuration to FLASH.

Menu Conventions

You select an option from the Menu by using the keyboard up and down arrows to navigate the list. When the menu item you want to access is highlighted, press the **Enter** key to either get to the next list of options or to get the configuration screen, depending on what you select. When you are done configuring parameters in a screen, press the **Enter** key and then the **Enter** key again to **Accept and exit the form**. If you want to discard your changes, press the **Esc** key to exit a screen, at which point you will be prompted with **Changes will be lost, proceed? (y/n)**, type **y** to discard your changes or **n** to return to the screen so you can press **Enter** to submit your changes.

If there are a number of predefined options available for a field, you can scroll through those items by pressing the **Space Bar** or you can type **1** (lowercase L) to get a list of options, use the up/down arrows to highlight the option you want, and then press **Enter** to select it.

DHCP/BOOTP

If you have a DHCP/BOOTP server and the Device Server's Server Service DHCP/BOOTP is enabled, the Device Server can obtain its IP address and several configuration parameters from the DHCP/BOOTP server when it boots up. However, you must use another method for creating the configuration file, like the DeviceManager, WebManager, or the CLI. See [DHCP/BOOTP Parameters on page 45](#) for more information on the DHCP/BOOTP parameters that can be set for the Device Server.


When DHCP/BOOTP is enabled and there is a DHCP/BOOTP server within the network, the IP Address obtained from DHCP/BOOTP will always override the Device Server's configured IP Address when the Device Server is rebooted.

SNMP

Before you can configure/manage the Device Server using SNMP, you need to set the Device Server IP address and configure a read-write user for SNMP version 3 or a community for SNMP version 1 or 2. You can use DeviceManager, CLI, or the Menu to set the IP address and user/community (don't forget to reboot the Device Server before connecting with the SNMP manager to make your changes take effect).

Once the IP address and user/community have been set, load the perle-ds1.MIB file from the Device Server CD-ROM into your SNMP manager.

Connect to the Device Server through your SNMP manager using its IP address to configure/manage the Device Server. Expand the **PERLE-IOLAN-DS1-MIB** folder to see the Device Server's parameter folders. Below is an example of the configurable parameters under the **ServicesInfo** folder.

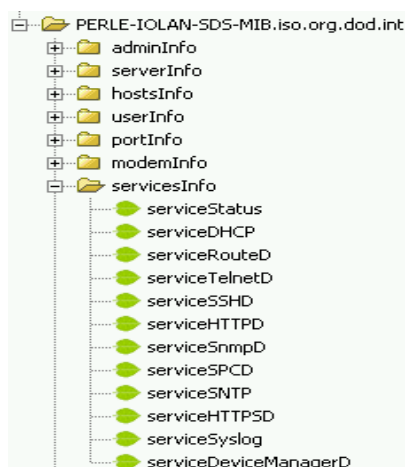

The first variable in each folder is the **Status** variable, for example, **serviceStatus**. When you perform a **GET** on this variable, one of the following values will be returned:

- **1**—Indicates that the container folder is active with no changes.
- **2**—Indicates that the container folder is active with change(s).

Once you have completed setting the variables in a folder, you will want to submit your changes to the Device Server. To do this, set the **Status** variable to **4**. If you want to discard the changes, set the **Status** variable to **6**.

- **4**—Indicates that the changes in the container folder are to be submitted to the Device Server.
- **6**—Indicates that the changes in the container folder are to be discarded.

If you want to save all the changes that have been submitted to the Device Server, you need to expand the **adminInfo** container folder and **SET** the **adminFunction** to **1** to write to FLASH. To make the configuration changes take effect, **SET** the **adminFunction** to **3** to reboot the Device Server.



Configuring the Device Server

Introduction

This chapter provides general information about configuring the Device Server for your production environment. Although this chapter is not specific to any configuration method, there should be enough information that you can apply the information to any of the configuration methods.

When you are configuring the Device Server, remember that none of your configuration changes will be permanent until you submit/apply your changes, save to FLASH, and reboot the Device Server.

Configuring the Device Server

General Device Server Configuration

At this point, you should already have assigned the Device Server an IP address. Therefore, you have your choice of how to configure the Device Server; using the DeviceManager, WebManager, Menu, CLI, or SNMP.

Console Mode vs. Serial Mode

You will notice a little switch at the back of the Device Server for switching the Device Server to either Console or Serial mode. Console mode is used when you have a direct connection between a serial device (like a terminal or a PC) and the Device Server, accessed by the Admin user to configure/manage the Device Server. Console mode also sets the **Serial Interface** to **EIA-232**, **Speed** to **9600**, **Flow Control** to **No**, **Bits** to **8**, **Stop Bits** to **1**, and **Parity** to **None**, in addition to displaying extra system messages.

Serial mode is used when the Device Server acts as a communications server, or anytime you are not connecting directly to the Device Server to configure it.

Device Server Services

In order to be as flexible and accessible as the Device Server is, it can run several predefined daemon and client applications. The Device Server can run the following daemon applications:

- TelnetD
- SPCD (the Trueport daemon)
- DeviceManagerD
- HTTPD
- SNMPD

If you disable any of the daemons, it can affect how the Device Server can be used or accessed. For example, if you disable HTTPD, you will not be able to access the Device Server with the WebManager. If you disable DeviceManagerD, the DeviceManager will not be able to connect to the Device Server. If you do not want to allow users to Telnet to the Device Server, you can disable TelnetD; therefore, disabling daemons can also be used as an added security method for accessing the Device Server.

The following client applications can run on the Device Server:

- Syslog
- DHCP/BOOTP

If you do not have a DHCP/BOOTP server in your network, we recommend that you disable the DHCP/BOOTP service to speed up Device Server reboots (otherwise, the Device Server waits for a DHCP/BOOTP packet until it times out on a reboot).

By default, all daemon and client applications are enabled and running on the Device Server.

Trueport

The Trueport utility acts as a com port redirector that allows applications to talk to serial devices across a network as though the serial devices were directly attached to the server. You can map the baud rate of the host COM port to a higher baud rate for the serial line that connects the serial device and the Device Server. You must be running the Trueport daemon on the host that is accessing the serial device for this to work. See [Trueport on page 115](#) for more information about the Trueport utility.

Hardware Configuration

Configure the ethernet interface that is connecting the Device Server to the LAN and the serial cable that is connecting the Device Server to the serial device.

Ethernet Connection

You need to know the ethernet interface speed and duplex as follows, unless you are using the Auto detect option:

- 10 Mbps half or full duplex
- 100 Mbps half or full duplex

Serial Connection

You also need to know the serial interface specifications as follows:

- EIA-232 and its speed
- EIA-422 and its speed
- EIA-485 and
 - its speed
 - half duplex with/without echo suppression or full duplex
 - TX driver control is automatic or RTS


Other

The most important thing to keep in mind when configuring the hardware parameters is to make sure that they are consistent with the serial device you have connected to the port. So, if you are connecting to a modem that sends out a DSR signal, you probably want to turn the **Monitor DSR** option on. Following is a list of just some of the other hardware configuration options:

- Data Bits—5 to 8
- Stop Bits—1, 1.5, 2
- Monitor DSR—on, off
- Monitor DCD—on, off
- Parity—None, Odd, Even, Space, Mark
- Flow—Software, Hardware, or None

Machine To Machine Connections

If you are using the Device Server to connect two hosts, allowing data to flow freely between them, you just need to configure the **Server** and the **Line** (no **User** required). In the following example, the serial device is a security Card Reader that needs to transmit and receive information to/from a host on the network that maintains the Card Reader's application every time an employee uses an access card to attempt to gain entry to the company.

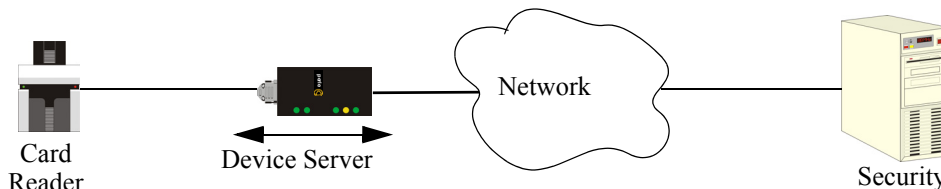

After configuring the **Server** parameters (**Server Name**, **IP Address**, **Ethernet** and **Serial** interfaces, etc.), the **Line Service** is set to **Sil Raw**, which creates an automatic, continuous connection between the Card Reader and its associated application on the Security host (though the Device Server), by specifying the Security host name (which must already be configured in the Device Server's Host Table) and TCP/IP port number. Therefore, the Card Reader can make a request to the Security host card reader application for employee verification, also logging access time, employee name, etc., and the Security host application can send back a code that does or does not unlock the door.

Users Connecting to Serial Devices

For a user to connect to the serial device connected to the Device Server from the LAN, the **Line Service** must be set to **Rev Telnet**. The user will either access the serial device directly or go through the Easy Port Access Menu, depending on the **User Level** setting.

Users who are **Level Admin** or **Normal** will access the serial device directly; the user must connect to the Device Server's IP address and port number (the **DS Port** parameter). The user will be asked to login with a user name and password; if this is successful, the user is automatically connected to the serial device.

Users who are **Level Restricted** or **Menu** can access the serial device through the Easy Port Access Menu, which displays the line number and name and a logout option; the user just needs to connect to the Device Server's IP address. The user will be asked to login with a user name and password; if this is successful, the Easy Port Access Menu is displayed. Note: if the **Line Service** is **Rev Telnet** and the user uses SSH to connect to the Device Server, nothing but **Logout** will be displayed on the Easy Port Access Menu; the connection protocol and the Line protocol must match.

Users Connecting to the LAN


For a user to connect to the LAN through the Device Server from a serial device, the **Line Service** can be set to any **Direct** or **Silent** setting, plus **Bidir** or **DSLogin**.

User accounts should be created when:

- authentication is being done locally by the Device Server.
- you want to create predefined sessions for a user to limit that user's access to the network.


Connecting To the Device Server

When a user connects to the Device Server, that user is authenticated and is usually set up with predefined sessions or given the opportunity to configure a **Free Session** to access any host using any protocol (must have a **Level** of at least **Normal** to configure a **Free Session**). In this example, the user must have a **Line** and **User Service** of **DSLogin** and **DSPrompt**, respectively. So, user Dennis is authenticated by the Device Server and then chooses to configure a **Free Session** to the HR_Server using the Telnet protocol (Dennis could have attempted to access any host on the network).

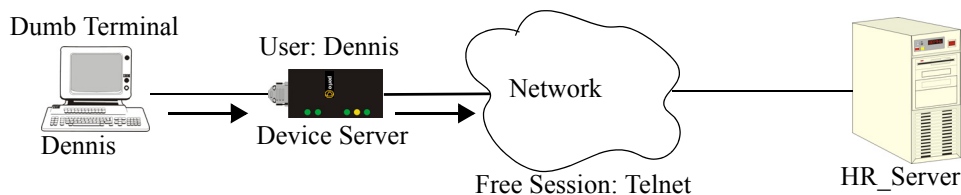

Connecting Through the Device Server

When a user connects through the Device Server, that user is authenticated and is usually set up with a **User Service** that, once authentication is completed successfully, passes the user onto the specified host. Therefore, the **Line Service** is set to **DSLogin** and the **User Service** is set to whatever protocol the user will use to access the host; in this example, the **User Service** is set to **Dir Telnet**. When **User Service Dir Telnet** is selected, the IP address of the HR_Server is specified as the target Host IP. User Dennis will always have to log into the same server with this configuration.

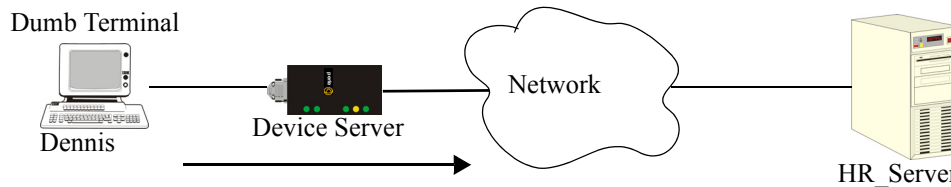

Setting Up Lines

Line and port is often used interchangeably. They are almost the same, that is, each line has an associated port number (Line 1 is port 10001 by default), so port buffering settings are the same as the buffering settings for the line.

How you set up a line is really determined by the device that is connected to the line. This section goes over some of the common ways a line is used and things that you will want to keep in mind when configuring the line.

Direct/Silent/Reverse Connections

Direct connections bypass the Device Server, enabling the user to log straight into a specific host. A direct connection is recommended where a user logging in to the Device Server is not required. It is also recommended where multiple sessions are not a requirement. Direct connections require user interaction: the message **Press return to continue** is displayed on the user's screen and the session to the host is not initiated until **Enter** is pressed, after which the host login prompt is displayed. The message is redisplayed on logout.

Silent connections are the same as direct connections except that they are permanently established. The host login prompt is displayed on the screen. Logging out redisplay this prompt. Silent connections, unlike direct connections, however, make permanent use of pseudo tty resources and therefore consume host resources even when not in use.

Reverse connections enable a host on the local network to establish a connection through the Device Server port to a serial device.

Virtual Modems

Vmodem is a feature of the Device Server that provides “modem like” communication between two Device Servers on a network or between a Device Server and a host. This feature behaves like two modems connected across a telephone line. Typically, you use the **Vmodem** feature when you have multiple devices communicating with a central site. With just a single IOLAN Device Server at each end of the network, you don’t need to use multiple modems, avoiding the associated costs of calls and connections.

The data is sent in raw format from the virtual modem and can be received by another Device Server or a host. This data can be sent automatically using the **Monitor DSR** option and then configuring the host and port number of the receiver; if the receiving side is also a Device Server, set the **Line Service** to **Rev Raw** or **Vmodem (Rev Raw** if the Device Server is only receiving, **Vmodem** to initiate bidirectional data flow) and the Device Server port that the data is coming in on (this should match the port number on the sending Device Server). Or, you can manually start a connection by typing **ADT<ip_address>,<port_number>** and end the connection by typing **+++ATH**. The **ip_address** can be in IPv4 or IPv6 formats and is the IP address of the receiver. For example,
 ADT123.34.23.43,10001

BIDIR

When you configure **BIDIR**, you are creating a bidirectional raw connection, meaning that the connection can be initiated from either the ethernet or serial side.

UDP

When you configure **UDP**, you are setting up a range of IP addresses and a port number that you will use to send UDP data to or receive UDP data from. For example:

UDP Entry	Start IP Address	End IP Address	Port	Direction
UDP Entry 1	172.16.1.1	172.16.1.25	33001	Both
UDP Entry 2	172.16.1.20	172.16.1.50	33010	In
UDP Entry 3	172.16.1.75	172.16.1.80	33009	Out
UDP Entry 4	0.0.0.0	0.0.0.0	0	None

The UDP configuration window, taken from the DeviceManager, is configured to:

- UDP Entry 1**
 All hosts that have an IP address that falls within the range of **172.16.1.1** to **172.16.1.25** and listen to **Port 33001** will receive UDP data from the serial device. The serial device will only receive UDP data from the hosts in that range with a source **Port** of **33001**.
- UDP Entry 2**
 All UDP data received from hosts that have an IP address that falls within the range of **172.16.1.20** to **172.16.1.50** and **Port 33010** will be sent to the serial device. The Device Server not send any data received on its serial port.

- **UDP Entry 3**
All hosts that have an IP Address that falls within the range of **172.16.1.75** to **172.16.1.80** and who listen to **Port 33009** will receive UDP data from the serial device. No UDP data will be sent to the serial device.

- **UDP Entry 4**
This entry is disabled since **Direction** is set to **None**.

If **Direction** is set to **In** or **Both**, and **Port** is set to **0** (zero), the Device Server will learn a host IP Address and Port number based on the first UDP packet it receives and will then only send and/or accept UDP data from that host.

Setting Up Users

You can create up to four users, in addition to the Admin user (who cannot be deleted).

A user can even represent a device, like a barcode or a card swipe device, that you want to be authenticated.

User Accounts

When a serial device (like a dumb terminal or a barcode reader) is trying to access a host through the Device Server, you will need to configure user accounts when users:

- are authenticated by the Device Server and then connect to a host.
- want a single or multiple session(s) on a host; here they initially login to the Device Server before starting that session. The Device Server is used to configure and start the session.

When a host is accessing a serial device (like a modem or a server), you will need to configure user accounts where users:

- are using a reverse telnet connection to manage a UNIX server or a router.

User Levels

There are four **User Levels: Admin, Normal, Restricted, and Menu**. Setting up users is only necessary when the users are actually connecting to the Device Server. Oftentimes, the Device Server is used as a gateway to a network and the user never actually logs into the Device Server itself. Users who do log into the Device Server (**Line Service** set to **DSLogin** and **User Service** set to **DSPrompt**) will have to navigate by either the Menu or CLI (except for users with **Menu** privileges, who can only use the Menu).

- **Admin**—Users with **Admin** privileges have full administrative access to the IOLAN Device Server. This is not the same as the Admin user, but has equal authority (the Admin user is a permanent, factory-set user on the IOLAN Device Server).
- **Normal**—Users with **Normal** privileges have access to the Sessions menu and associated CLI only. They can start sessions, define and predefine sessions, and can change their own user environment.
- **Restricted**—Users with **Restricted** privileges have access to a restricted Sessions menu and associated CLI; they can only open sessions predefined for them by the Admin user, but not alter their own environment or sessions. Predefined sessions can also be configured to start automatically at login.
- **Menu**—Users with **Menu** privileges have access to predefined session. All other functionality is unavailable.

When the Admin user logs into the Device Server, the prompt ends with a #, whereas all other users' prompts ends with a \$ or £, depending on the character set.

Sessions

Sessions are defined for users who are coming in through a serial device going to a host on the LAN. Users who have successfully logged into the Device Server (**User Service** set to **DSprompt**) can start up to four login sessions on LAN hosts. These users start sessions through the Menu option **Sessions**.

Multiple sessions can be run simultaneously on the same host or on different hosts. Users can switch between different sessions and also between sessions and the Device Server using hotkey commands.

Users with **Admin** or **Normal** privileges can define new sessions and connect through them, even configure them to start automatically on login to the Device Server. **Restricted** and **Menu** users can only start sessions predefined for them by the Admin user.

You can configure the User access rights to the port, such as **Read/Write** (RW), **Read Input** (RI), **Read Output** (RO) and **Read Both** (RI & RO).

Users From LAN to Device Server to Serial Device

Easy Port Access Menu

The Easy Port Access Menu is displayed when a **Restricted** or **Menu** level user logs into the box from the Ethernet side (**Line Service** set to **Rev Telnet**) to access a serial device. The Easy Port Access Menu displays the line number, line name, line protocol, and a logout option. You can only access the line if it has the same connection protocol as the one you used to log into the Device Server. So, if you used SSH to log into the Device Server and the **Line Service** is set for **Rev Telnet**, you will not be able to access the serial device connected to that line.

Reverse Sessions

You can specify the number of reverse connections (1 to 4, default 1) that are allowed at same time with the **Reverse Session Limit** parameter. If users are connecting to the Device Server IP address only, they will be automatically connected to the Device Server unless the **Reverse Session Security** parameter is enabled. If users are connecting to the Device Server IP address and port number, they will always have to log into the Device Server.

Configuring Network Options

Hosts

This is probably one of the first Device Server options you want to configure, since so many other configuration options require a preconfigured host. You can use any host name you want, since the host name is used only by the Device Server. You can configure up to 20 hosts using IPv4 or IPv6 internet addresses.

Gateways

Gateways are hosts that connect Local Area Networks (LANs) together. If you want to access a host that isn't on your local network, you will be connected via a gateway. Gateways route data via other gateways until the destination local network is reached. There are three types of gateways:

- **Default**—A gateway that provides general access beyond your local network.
- **Host**—A gateway reserved for accessing a specific host external to your local network.
- **Network**—A gateway reserved for accessing a specific network external to your local network.

You can specify up to twenty gateways.

Syslog

The system log is sent to the specified host. You can configure a primary and secondary host for the syslog information and specify the level for which you want syslog information sent.

SNMP

If you are using SNMP to manage/configure the Device Server, or to view statistics or traps, you must set up a User in SNMP version 3 or a Community in SNMP version 1,2 to allow your SNMP manager to connect to the Device Server; this can be done in the DeviceManager, WebManager, CLI, or Menu. You must then load the `perle-dsl.MIB` (found on the CD-ROM packaged with the Device Server) file into your SNMP manager before you connect to the Device Server.

Configuring Time

The Device Server has an internal clock that can be set, but it will be reset during a reboot or a power outage.

Language support

Two language files, in addition to English, are supplied on the supplemental CD, French and German. You can use any of these language files to create a translation into a language of your choice. You can download the language file (whether the language is supplied or translated) into the Device Server and select the **Language** option of **Customlang** (custom language), making the Menu, CLI, and WebManager field labels display in your language.

You can view Menu, CLI, or WebManager in one other language only (as well as English). If you download another language file, this new language will replace the first language you downloaded.

You can revert to English at any time; the English language is stored permanently in the Device Server and is not overwritten by your new language. Each user logged into the Device Server can operate in either English or the downloaded language.

Loading a Supplied Language

This section describes how to download a language file using the CLI, since it is the least intuitive method. French and German language files are provided on the supplemental CD.

To load one of the supplied languages into the Device Server, so the Menu, CLI and WebManager fields appear in another language, do the following:

1. Open the supplemental CD and identify the language file, either `Iolan_ds_French.txt` or `Iolan_ds_German.txt`, or supply one of your own translated files.
2. Copy the language file to a host machine on the network; place it in the main file system or on the main hard drive.
3. Either use the TFTP defaults in the Device Server or, configure as necessary, TFTP in the Device Server.
4. In the CLI of the Device Server, enter the host IP address and file name; for example,


```
netload customlang 172.16.4.1 /temp/Iolan_ds_French.txt
```

Do *not* enter a drive letter! Also, the path and/or file name must begin with the forward slash (/) character.

The Device Server will download the language file via TFTP.

5. To set an individual user to the new language, go to the **Users** menu and, in the **Language** field select **Customlang**. In the CLI (only) you can set individual users or all users to the new language; see the `set user *` command.
6. The user will see the change of language when he/she logs out (**Main Menu**, **Sessions Menu**, **Logout**) and logs back into the Device Server. If, as Admin user, you change your language setting to **Customlang**, you will see the text menus display in the new language when you save and exit the **Change User** form.

If you download a new software version, you can continue to use your language unchanged; however, we recommend translating the new strings, which will be added to the end of the language file. A **Reset to Factory Defaults** will reload the **Customlang** as English.

On successful download, the **Customlang** in the Device Server will be overwritten by the new language.

Translation Guidance

To help you with your translation, of supplied ASCII text language files we offer the following guidance:

- The Device Server will support languages other than English (and the supplied German and French languages). The English language file, `english.txt`, displays the character length of each line at the beginning of the line. If a translated line goes over that character length, it will be displayed truncated in the Menu, CLI, or WebManager.
- Translate line for line, do not omit lines if you do not know the translation; leave the original untranslated text in place. Also, you must maintain the same sequential order of lines. It is a good practice to translate the file using a text editor that displays line numbers, so you can periodically verify that the line sequence has not changed from the original file (by comparing it to the original file).
- Keep all translations in quotes, otherwise the line will not display properly.
- Each line must end with a carriage return.
- If a line contains only numbers, for example 38400, leave that line in place, unchanged (unless you are using a different alphabet).

Software Upgrades and Language Files

If you receive a software upgrade for the Device Server, the language files supplied on the supplemental diskette/CD might also have been updated. We will endeavour to provide a list of those changes in another text file on the same supplemental diskette/CD.

Note: The upgrade of your software (firmware) will not change the display of the language in the Menu, CLI, or WebManager.

If you are already using one of the supplied languages, French or German, you probably want to update the language file in the Device Server. Until you update the Device Server with the new language file, new text strings will appear in English.

If you are already using a language translated from an earlier version, you probably want to amend your translation. When a language file is updated, we will try to maintain the following convention:

1. New text strings will be added to the bottom of the file (not inserted into the body of the existing file).
2. Existing text strings, if altered, will be altered in sequence; that is, in their current position in the file.
3. The existing sequence of lines will be unchanged.
4. Until you have the changes translated, new text strings will appear in the Menu, CLI, or WebManager in English.

Downloading Terminal Definitions

All terminal types can be used on the Device Server. Some terminal types which are not already defined in the Device Server, however, are unable to use Full Screen mode (menus) and may not be able to page through sessions properly. When installed, the Device Server has several defined terminal types—Dumb, WYSE60, VT100, ANSI, TVI925, IBM3151, VT320, and HP700.

If you are not using, or cannot emulate, any of these terminal types, you can add up to three additional terminal definitions to the Device Server. The terminal definitions can be downloaded from a TCP/IP host.

To download terminal definitions, follow these steps:

1. Decide which TCP/IP host you are going to use. It must be a machine with TFTP enabled.
2. Configure TFTP in the Device Server as necessary.
3. Download the new terminal definition to the Device Server as **Term1**, **Term2**, or **Term3**.
4. In the **Line** configuration, select the **Terminal Type Termx** that you custom defined.

Creating Terminal Definition Files

To create new terminal definition files, you need to copy and edit the information from the terminfo database.

1. On a UNIX host, change directory to `/usr/lib/terminfo/x` (where **x** is the first letter of the required terminal type). For a Wyse60, for example, you would enter the command `cd /usr/lib/terminfo/w`.
2. The termcap files are compiled, so use the command `infocmp termfile` to read the required file (for example: `infocmp wy60`).
3. Check the file for the attribute `xmc#n` (where **n** is greater than or equal to 1). This attribute will corrupt menu and form displays making the terminal type unsuitable for using Menu mode.
4. If the terminal definition is suitable, change to a directory of your choice.
5. Rename and copy the file to the directory specified at step 4. using the command `infocmp termfile > termn` where **n** is greater than or equal to 1; (for example, `infocmp wy50 > term1`). Make sure the file has global read and execute permission for its entire path.
6. Edit the file to include the following capabilities in this format:

```
term=
acsc=
bold=
civis=
clear=
cnorm=
cup=
rev=
rmacs=
rmso=
smacs=
smso=
page=
circ=
```

For example:

```
term=AT386 | at386| 386AT |386at |at/386 console
acsc=jYk?lZm@qDtCu4x3
bold=\E[1m
civis=
clear=\E[2J\E[H
cnorm=
cup=\E[%i%p1%02d;%p2%02dH
rev=\E4A
rmacs=\E[10m
rmso=\E[m
smacs=\E[12m
smso=\E[7m
page=
circ=n
```

As you can see from the example, capabilities which are not defined in the terminfo file must still be included (albeit with no value). Each entry has an 80 character limit.

On some versions of UNIX, some of the capabilities are appended with a millisecond delay (of the form \$<n>). These are ignored by the Device Server and can be left out.

The 'acsc' capability, if defined, contains a list of character pairs. These pairs map the characters used by the terminal for graphics characters to those of the standard (VT100) character set.

Include only the following character pairs:

ix, kx, lx, mx, qx, tx, ux and *xx*

(where *x* must be substituted by the character used by the terminal). These are the box-drawing characters used to display the forms and menus of Menu mode. They must be entered in this order.

The last two capabilities will not be found in the terminfo file. In the **page** field you must enter the escape sequence used by the terminal to change screens. The **circ** field defines whether the terminal can use **previous page** and **next page** control sequences. It must be set to **y** or **n**. These capabilities can be found in the documentation supplied with the terminal.

TFTP Configuration

TFTP configuration consists of specifying the number of times the Device Server's TFTP client retries a file transfer and the how long the TFTP process will wait (timeout) before retrying to transfer a file.

You must have a TFTP server running on any host that you are uploading or downloading files to/from. If you are using the DeviceManager and transferring a local file to a Device Server, you still need to have a TFTP server running on your PC. When you specify the file path, the path must be relative to the default path set in your TFTP server software (do not use drive letters in the file path).

Resetting Configuration Parameters

You can reset the Device Server to its factory settings through any of the following methods:

- You can push in the recessed button at the back of the Device Server hardware
- DeviceManager, select **Tools, Reset to Factory Defaults**
- CLI, at the command line type, `reset factory`
- WebManager, click the **Factory Defaults** button
- Menu, select **Network Configuration, Reset to Factory Defaults**
- SNMP, in the **adminInfo** folder, set the **adminFunction** variable to **2**

Lost Admin Password

If the Admin user password is lost, there are only two possible ways to recover it:

- reset the Device Server to the factory defaults
- have another user that has **admin** level rights, if one is already configured, reset the Admin password

DHCP/BOOTP

You can use DHCP/BOOTP to perform the following actions on a single or multiple Device Servers on bootup:

- auto-configure with minimal information; for example, only an IP address
- auto-configure with basic setup information (IP address, subnet/prefix bits, etc.)
- download a new version of firmware
- download a full configuration file

DHCP/BOOTP is particularly useful for multiple installations: you can do all the Device Server's configuration in one DHCP/BOOTP file, rather than configure each Device Server manually.

Another advantage of DHCP/BOOTP is that you can connect a Device Server to the network, turn on its power and let autoconfiguration take place. All the configuration is carried out for you during the DHCP/BOOTP process.

DHCP/BOOTP Parameters

The following parameters can be set in the DHCP/BOOTP bootp file:

- **SW_FILE**—The full path, pre-fixed by hostname/IP address (IPv4 or IPv6), and file name of the firmware update.
- **CONFIG_FILE**—The full path, pre-fixed by hostname/IP address (IPv4 or IPv6), and file name of the configuration file. Note: these parameters include clear text user passwords.
- **GUI_ACCESS**—Access to the Device Server from the HTTP WebManager. Values are **on** or **off**.
- **SECURITY**—Restricts Device Server access to devices listed in the Device Server's host table. Values are **yes** or **no**.
- **TFTP_RETRY**—The number of TFTP attempts before aborting. This is a numeric value, for example, 5.
- **TFTP_TMOUT**—The time, in seconds, before retrying a TFTP download/upload. This is a numeric value, for example, 3.

- **CUSTOM_LANG**—The full path, pre-fixed by a hostname/IP address (IPv4 or IPv6), and file name of a translated language file. For example,
192.101.34.211 /accounting/german.txt.
- **EXTRA_TERM1**—(**EXTRA_TERM2**, **EXTRA_TERM3**) The full path, pre-fixed by a hostname/IP address (IPv4 or IPv6), and file name of a termcap file for a specific terminal type.

5


Using the DeviceManager

Introduction

This chapter provides information about configuring/managing the Device Server using the DeviceManager. It is assumed that the DeviceManager has already been installed; if you still need to install the DeviceManager, see [Using DeviceManager on page 23](#).

Starting a New Session

When you start the DeviceManager application, the New Session window is displayed.

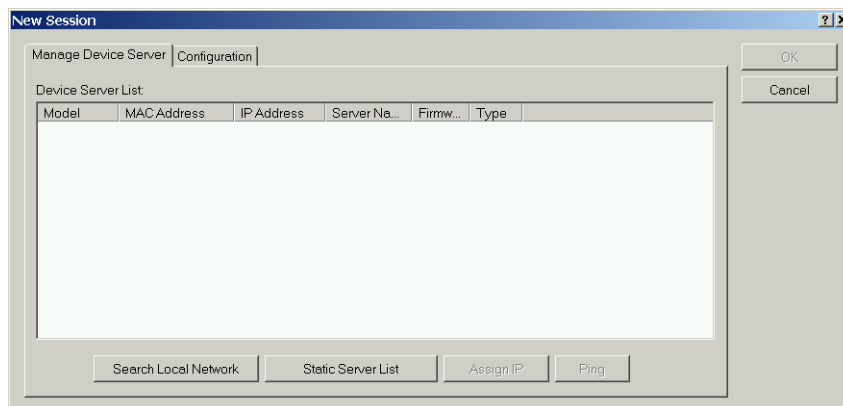

If you want to connect to a Device Server to manage/configure it, or assign a temporary IP address to a Device Server, select the **Manage Device Server** tab. If you want to create a new or edit an existing configuration file, select the **Configuration** tab.

Manage Device Server Tab

You can connect to Device Servers or assign a temporary IP address to a Device Server. Whenever you connect to a Device Server through the DeviceManager, you connect as the Admin user and must supply the password for the Admin user.

Populating the Device Server List

The first time you start the DeviceManager, the **Manage Device Server** tab will be empty. To add Device Servers to the **Device Server List**, you can do either of the following:


- Click the **Search Local Network** button. This searches the local network segment and automatically displays any Device Servers it finds. Any Device Servers found by this method will be displayed in **Type** column as **Dynamic**. Once you close the DeviceManager, any Device Servers that were displayed as **Dynamic** will not be there until you click the **Search Local Network** button again.
- Click the **Static Server List** button to add Device Servers to the **Device Server List** permanently. This also allows you to add Device Servers that are not found on the local network segment with the **Search Local Network** button. To connect to a Device Server that is not in the Device Server List and resides outside the local network, see [Adding/Deleting Static Device Servers on page 49](#).

For more information about managing a Device Server, see [Managing a Device Server on page 50](#).

Assigning a Temporary IP Address to a New Device Server

If your network does not use DHCP/BOOTP, you can temporarily assign an IP address to a Device Server that is connected to your local network segment, for the purpose of connecting to it and downloading a configuration file (containing a permanent IP address). To temporarily assign an IP address to a Device Server, do the following:

1. Click the **Search Local Network** button. The Device Server will be displayed in the **IP Address** column as **Not Configured**.
2. Select the new Device Server and click the **Assign IP** button. The following window is displayed:

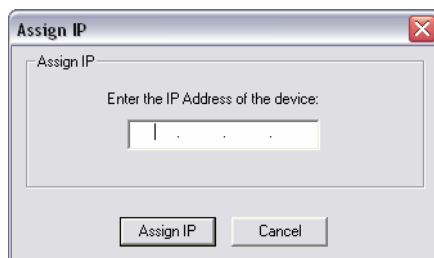


3. Type a valid temporary IP address into the address field and click the **Assign IP** button.
4. Double-click the Device Server in the **Device Server List**. If this is the first time you are accessing the Device Server, type in the factory default Admin password, **superuser**, and click **OK**. The DeviceManager will display a window indicating that it is trying to authenticate and connect you on the Device Server.
5. If the authentication and connection are successful, the Server Info window is displayed. You are now ready to configure the Device Server. If authentication was unsuccessful, try to connect to the Device Server again; you probably mistyped the password for the Admin user.

For more information about managing a Device Server, see [Managing a Device Server on page 50](#).

Adding/Deleting Static Device Servers


To permanently add or delete a Device Server to/from the **Device Server List**, select the **Static Server List** button. The following window is displayed:

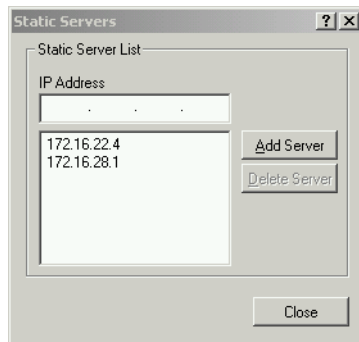

To permanently add a Device Server to the **Device Server List**, type in the IP address of the Device Server and click the **Add Server** button. To permanently delete a Device Server from the **Device Server List**, select the Device Server's IP address and click the **Delete Server** button.

Configuration Tab


Click on the **Configuration** tab to open an existing configuration file or to create a new configuration file. The **Configuration** tab displays:

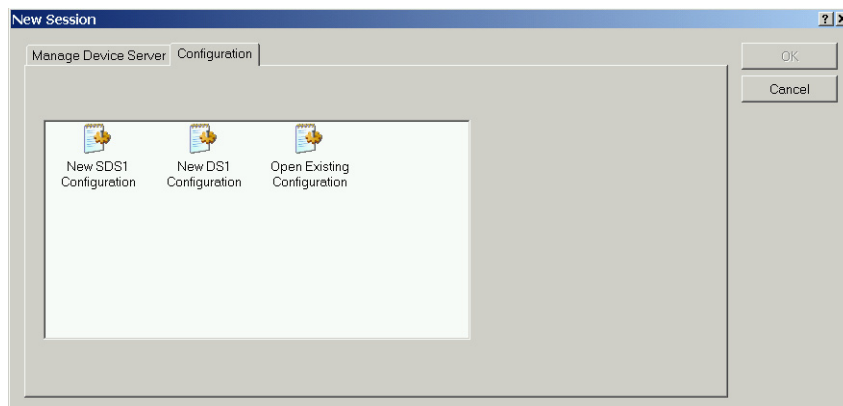

You can create a new configuration for your Device Server model or open an existing configuration file by double-clicking on the appropriate icon. Configuration files can be saved in the Device Server-native binary format (**.dme**) or as a text file (**.txt**), which can be edited with a text editor. Either configuration version can be imported into the DeviceManager.

Connecting to a Device Server

To connect to a Device Server, double-click on the Device Server in the **Device Server List**. You will be prompted for the Admin Password.

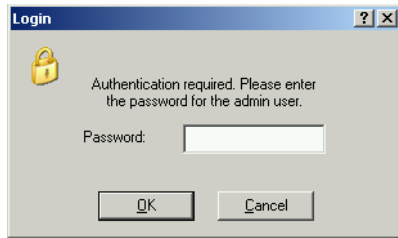

If the authentication and connection are successful, the Device Server's **Server Info** window is displayed.

If you cannot connect to a Device Server, you can highlight the Device Server and click the **Ping** button to verify that that DeviceManager can communicate with the Device Server's IP Address. If the ping times out, then you might need to set up a Gateway in your Device Server or verify that your network is communicating correctly.

Managing a Device Server

Once you are connected to a Device Server, you can edit its configuration, download a new configuration, save the configuration to file, perform administrative tasks, and view statistics about the Device Server and its network environment.

DeviceManager Work Flow

When you connect to a Device Server, the Device Server's configuration is automatically uploaded to the Device Server. Before you make any changes to the configuration, you probably want to save the configuration locally, to make a backup file of the configuration. Use the navigation panel to select the feature that you want to edit. After you make all your changes to a configuration window, you must click the **Apply** button to submit those changes. When you have completed all of your configuration edits, select **Tools, Download Configuration to Unit**. If you want your changes to take effect at this point, select **Tools, Reboot Server**.

Creating/Editing Configuration Files

You can create and edit Device Server configuration files. When you open a new configuration file, the configuration file contains the Device Server's factory default settings.

Working With the Device Server Configuration

When you connect to a Device Server, the configuration that is saved to FLASH is automatically uploaded to the DeviceManager. It is suggested that you save the working configuration to a file as a backup precaution by selecting **Tools, Save Configuration to File**. You can then make any edits to the configuration and download it back to the Device Server by selecting **Tools, Download Configuration to Unit**. The downloaded configuration does not take effect until you reboot the Device Server by selecting **Tools, Reboot Server**. If you want to continue managing/configuring the Device Server, you can reconnect to the Device Server after it has been rebooted.

Working With a Local Configuration File

You can also connect to a Device Server and open a saved configuration file by selecting **Tools, Get Configuration, Import from File**. This configuration can then be edited or just downloaded right to the Device Server by selecting **Tools, Download Configuration to Unit**. The downloaded configuration does not take effect until you reboot the Device Server by selecting **Tools, Reboot Server**. If you want to continue managing/configuring the Device Server, you can reconnect to the Device Server after it has been rebooted.

Configuring the Server

The following sections describe how to configure the Device Server's server parameters.

When you select **Server Configuration, Server** from the navigation panel, the following Server window is displayed.

The screenshot shows the 'Server' configuration window. It is divided into two main sections: 'Server' and 'Services'.

Server Section:

- Server Name: localhost
- Domain Name: (empty)
- Internet Address: 0 . 0 . 0 . 0
- Subnet/Prefix Bits: 0
- OEM Login: Off
- Password Limit: 3
- Bypass Password: Off
- Single Telnet: Off
- Flush On Close: Off
- Banner: Off
- Prompt With Name: Off

Services Section:

- TelnetD
- SPCD
- DeviceManagerD
- HTTPD
- SNMPD
- Syslog
- DHCP/BOOTP

Enter values in the Device Server parameters that you need for your production environment.

Server

- Server Name** You must supply a name for the Device Server.
- Domain Name** Unique name for your domain, your location in the global network. Like Hostname, it is a symbolic, rather than a numerical, identifier.
See [IPv6 Network on page 25](#) for information on how to determine your IPv6 address.
- Internet Address** The Device Server's unique IPv4 network IP address. If you are using the Device Server in an IPv6 network, this field can be left blank.
- Subnet/Prefix Bits** The number of bits in the subnet mask. For example, a subnet mask of 255.255.0.0 has 16 subnet/prefix bits. Valid values are 0-31. The default is 0. When the value is 0, the correct value is determined based on the class of the **IP Address**.
- OEM Login** When set, and a custom language file is in use, the login prompt will use the string defined in the language file as the login prompt instead of the default prompt, **login:.**
- Line Menu String** The string used to disconnect from the line and return to the Easy Port Access menu without the disconnecting the initial reverse SSH or reverse Telnet session. The default string is **~menu**.

Password Limit	The number of attempts a user is allowed to enter a password for a port. If this limit is exceeded, the port is disabled for 5 minutes. A user with Admin level rights can restart the port, bypassing the timeout, by issuing a kill on the disabled port. The default value is 3 .
Bypass Password	When set, authorised users who do not have a password set, with the exception of the Admin user, WILL NOT be prompted for a password at login with Local Authentication .
Single Telnet	<p>Sets all reverse connections (raw and telnet) to a one connection at a time mode. Server-side applications will get a (socket) connection refused until:</p> <ul style="list-style-type: none">• All data from previous connections on that serial port has drained• There are no other connections• Up to a 1 second interconnection poll timer has expired <p>This also enables a per-connection keepalive TCP keepalive feature. After approximately 3 minutes of network connection idle time, the connection will send a gratuitous ACK to the network peer, thus either ensuring the connection stays active OR causing a dropped connection condition to be recognised by the reverse service (all connections).</p> <p>Applications using Single Telnet need to be aware that there can be some considerable delay between a network disconnection and the port being available for the next connection attempt; this is to allow any data sent on prior connections to be transmitted out of the serial port. Application network retry logic needs to accommodate this feature. The default value is Off.</p>
Flush On Close	When enabled, deletes any pending data when a port is closed; as opposed to maintaining the port to send pending data. The default value is Off .
Banner	This parameter concerns the banner information (product name/software version). This banner information is presented to a user with a login prompt. For security reasons, you can turn off the display of this information. The default is Off .
Prompt With Name	Displays the Server Name field value instead of default product name. When enabled, the Server Name is displayed in the Device Server login prompt, CLI prompt, WebManager login screen, and the heading of the Menu. The default value is Off .

Services

Services are either daemon or client processes that run on the Device Server. You can disable any of the services for security reasons. If you disable the DeviceManagerD service, you will not be able to use DeviceManager to connect to a Device Server.

TelnetD	Telnet daemon process in the Device Server on port 23.
SPCD	SPC (Trueport) daemon process in the Device Server on port 688.
DeviceManagerD	DeviceManager daemon process in the Device Server. If you disable this service, you will not be able to connect to the Device Server with the DeviceManager application. DeviceManagerD listens on port 33812 and sends on port 33813.
HTTPD	HTTP daemon process in the Device Server on port 80.
SNMPD	SNMP daemon process in the Device Server on port 161.


Syslog	Syslog client process in the Device Server.
DHCP/BOOTP	DHCP/BOOTP client process in the Device Server.

Configuring Trueport Baud

The Trueport Baud configuration window allows you to map the baud rate coming out of the serial host to another baud rate that will run between the Device Server and the serial device. See [Appendix B, *Utilities* on page 115](#) for more information about Trueport.

Configuring the Hardware

You need to configure the ethernet interface that you are using to connect the Device Server to the LAN.

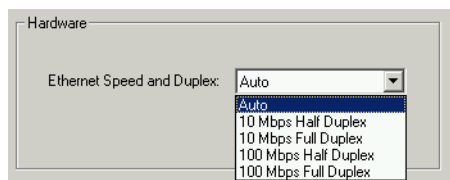

Select the appropriate option:

Ethernet Speed and Duplex Define the ethernet connection speed at one of the following:

- **auto**—automatically detects the ethernet interface speed and duplex
- **10 Mbps Half Duplex**
- **10 Mbps Full Duplex**
- **100 Mbps Half Duplex**
- **100 Mbps Full Duplex**

Configuring Lines

When you configure the Device Server **Line**, you are specifying how the port will be used and accessed. You can always make changes to **Line** parameters, click the **Apply** button, and then select **Tools, Kill Line** to test your changes. However, you still must select **Tools, Download Configuration to Unit** and **Tools, Reboot Server** to make your changes permanent and take effect.

The screenshot shows a configuration window titled 'Line'. It contains various settings for a device server line. The 'Service' is set to 'UDP'. The 'Serial Interface' is 'EIA-232', 'Speed' is '9600', and 'Duplex' is 'Full'. The 'Terminal Type' is 'Dumb' and 'Pages' is '5'. The 'Flowin' and 'Flowout' are both 'On'. The 'Initial Mode' is 'CLI'. Other settings include 'Parity: None', 'Hotkey Prefix: 1', 'DS Port: 10001', 'TX Driver Control: Auto', 'Echo Suppression: Off', 'Monitor DSR: Off', 'Monitor DCD: Off', 'Flow Control: None', 'Bits: 8', 'Stop Bits: 1', 'Reverse Session Security: Off', 'Dial: None', 'Modem: ', 'Phone: ', and 'Break: None'. There are also checkboxes for 'Reset: Off', 'Keep Alive: Off', 'MOTD: Off', 'Lock: Off', 'Idle Timer: 0', and 'Session Timer: 0'.

Configure the appropriate parameters:

- Service** Defines the **Line Service**, which determines how the line will be used. See [Line Services on page 57](#) for more information about configuring each **Line Service**.
- Line Name** Provide a name for the line so it can be easily identified. The **Remote Port Buffering** logging feature uses the **Line Name** when creating a file on the remote NFS server.
- Serial Interface** Specifies the type of line that is being used with the Device Server. Select either **EIA-232**, **EIA-422**, or **EIA-485**.
- Speed** Specifies the baud rate of the line; keep in mind that speed is affected by the length of the cable.
- Duplex** Specify whether the line is **Full Duplex** (communication both ways at the same time) or **Half Duplex** (communication in one direction at a time).
- TX Driver Control** Used with a **EIA-485** serial interface, if your application supports **RTS** (Request To Send), select this option. Otherwise, select **Auto**. Default is **Auto**.
- Echo Suppression** This parameter applies only to **EIA-485 Half Duplex** mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enabled in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data, echo suppression should be **On**. The default is echo suppression **Off**.
- Monitor DSR** Specifies whether the RS-232 signal DSR (data set ready) should be monitored. This is used with modems or any device that sends a DSR signal. When it is monitored and the Device Server detects a DSR signal, the line service is started. Default is **Off**. If both **Monitor DCD** and **Monitor DSR** are enabled, both signals must be detected before the line service is started.

Monitor DCD	Specifies whether the RS-232 signal DCD (Data Carrier Detect) should be monitored. This is used with modems or any other device that sends a DCD signal. When it is monitored and the Device Server detects a DCD signal, the line service is started. Default is Off . If both Monitor DCD and Monitor DSR are enabled, both signals must be detected before the line service is started.
Flow Control Bits	Defines whether the data flow is handled by the software (Hand), software (Soft), or none (None).
Stop Bits	Specifies the number of bits in a byte. The default is 8 .
Parity	Specifies if you are using Even , Odd , or No parity on the line. If you want to force a parity type, you can specify Mark for 1 or Space for 0.
DS Port	The Device Server port number.
Terminal Type	Specifies the type of terminal connected to the line: <ul style="list-style-type: none"> ● Dumb ● WYSE60 ● VT100 ● ANSI ● TVI925 ● IBM315ITE ● VT320 (specifically supporting VT320-7) ● HP700 (specifically supporting HP700/44) ● Term1, Term2, Term3 (user defined terminals)
Pages	For DSLogin line service, this is the number of video pages the terminal supports. Valid values are 1-7. The default is 5 pages.
User	For DSLogin line service, makes this a line that is dedicated to the specified user. Only this user will be able to log in on this line and they won't need to enter their login name - just their password.
Reverse Session Security	Enables/disables login/password authentication, locally or externally, on reverse Telnet connections. The default is Off .
Dial	Determines how a modem will work on the line. If your user is remote and will be dialing in via modem or ISDN TA, set this parameter to In ; if the Device Server is being used as a router, set this parameter to either In , Out , or Both , depending on which end of the link your Device Server is situated and how you want to initiate the communication.
Modem	The name of the predefined modem that is used on this line.
Phone	The phone number to use when Dial is set to Out .
Initial Mode	Specifies the initial interface a user navigates when logging into the line; either the Menu or a prompt for the CLI . The default is CLI .

Break	<p>Specifies how a break is interpreted:</p> <ul style="list-style-type: none">● None—The Device Server ignores the break key completely and it is not passed through to the host. This is the default setting.● Local—The Device Server deals with the break locally. If the user is in a session, the break key has the same effect as a hot key.● Remote—When the break key is pressed, the Device Server translates this into a telnet break signal which it sends to the host machine.● Brkintr—On some systems such as SunOS, XENIX, and AIX, a break received from the peripheral is not passed to the client properly. If the client wishes to make the break act like an interrupt key (for example, when the stty options -ignbrk and brkintr are set).
Hotkey Prefix	<p>The prefix that a user types to lock a line or redraw the Menu. The default value is hex 01, which corresponds to Ctrl-a (^a) (hex value 02 would be Ctrl-b (^b), etc.):</p> <ul style="list-style-type: none">● ^a l—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.● ^r—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly. <p>You can use the Hotkey Prefix key to lock a line only when the Line Lock parameter is On.</p>
Flowin	<p>Determines if input flow control is to be used. Default is On. This is active only when Line Flow Control is set to Soft, Hard, or Both.</p>
Flowout	<p>Determines if output flow control is to be used. Default is On. This is active only when Line Flow Control is set to Soft, Hard, or Both.</p>
Reset	<p>Resets the terminal type connected to the line when a user logs out.</p>
Keep Alive	<p>Enables a per-connection TCP keepalive feature; after approximately 3 minutes of network connection idle time, the connection will send a gratuitous ACK to the network peer, either ensuring the connection stays active OR causing a dropped connection condition to be recognised by the reverse raw service.</p> <p>Applications using this feature need to be aware that there might be some considerable delay between a network disconnection and the port being available for the next connection attempt; this is to allow any data sent on prior connections to be transmitted out of the serial port buffer. Application network retry logic needs to accommodate this feature.</p>
MOTD	<p>Enables/disables the message of the day on the line.</p>
Lock	<p>When enabled, the user can lock his terminal with a password using the Hotkey Prefix (default Ctrl-a) ^a l (lowercase L). The Device Server prompts the user for a password and a confirmation.</p>


- Idle Timer** Enter a time period, in seconds, for which the idle timer will run. Use this timer to close a connection because of inactivity. When the idle timer expires, the Device Server will end the connection. The maximum value is 4294967 seconds (about 49 days). The default value of **0** (zero) means the idle timer will not expire, so the connection is permanently open.
- Session Timer** Enter a time, in seconds, for which the session timer will run. Use this timer to forcibly close the session (connection). When the session timer expires the Device Server will end the connection. The default value is **0** seconds so the port will never timeout. The maximum value is 4294967 seconds (about 49 days).

Line Services

Line Services determine how line is defined. As a rule, when you are accessing a serial device through the Device Server, coming from the ethernet side, you want to set the **Line Service** to **Reverse Raw** or **Reverse Telnet**.

Raw Settings

When the **Line Service** is set to **Direct** or **Silent Raw**, data is sent through the connection in its original format. This raw TCP/IP connection is initiated from the Device Server to the configured host.

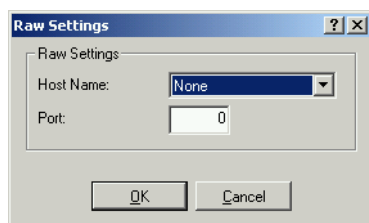


Configure the following parameters:

- Host Name** The name of the target host.
- Port** The port number the target host is listening on for incoming connections.

Telnet Settings

When the **Line Service** is set to **Direct** or **Silent Telnet**, data is sent through the connection in a telnet session. This telnet session is initiated from the Device Server to the configured host.

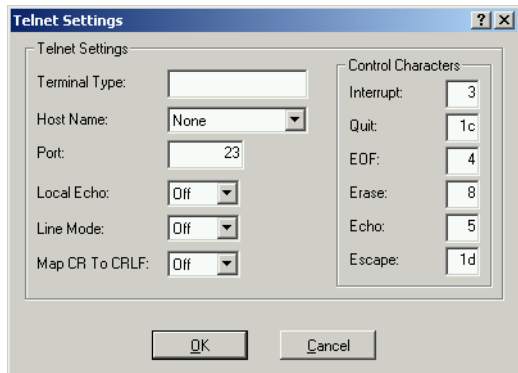

Configure the following parameters:

- | | |
|-----------------------|---|
| Terminal Type | Type of terminal attached to this line; for example, ANSI or WYSE60. |
| Host Name | The name of the target host. |
| Port | The port number the target host is listening on for incoming connections. |
| Local Echo | Toggles between local echo of entered characters and suppressing local echo. Local echo is used for normal processing, while suppressing the echo is convenient for entering text that should not be displayed on the screen, such as passwords. This parameter can only be used when Line Mode is On . Default is Off . |
| Line Mode | When On , keyboard input is not sent to the remote host until Enter is pressed, otherwise input is sent every time a key is pressed. Default is Off . |
| Map CR to CRLF | Maps carriage returns (CR) to carriage return line feed (CRLF). The default value is Off . |
| Interrupt | Defines the interrupt character. Typing the interrupt character interrupts the current process. This value is in hexadecimal with a default value of 3 (ASCII value ^C). |
| Quit | Defines the quit character. Typing the quit character closes and exits the current telnet session. This value is in hexadecimal with a default value of 1c (ASCII value FS). |
| EOF | Defines the end-of-file character. When Line Mode is On, entering the eof character as the first character on a line sends the character to the remote host. This value is in hexadecimal with a default value of 4 (ASCII value ^D). |
| Erase | Defines the erase character. When Line Mode is Off, typing the erase character erases one character. This value is in hexadecimal with a default value of 8 (ASCII value ^H). |
| Echo | Defines the echo character. When Line Mode is On, typing the echo character echoes the text locally and sends only completed lines to the host. This value is in hexadecimal with a default value of 5 (ASCII value ^E). |
| Escape | Defines the escape character. Returns you to the command line mode. This value is in hexadecimal with a default value of 1d (ASCII value GS). |

BIDIR Settings

When the **Line Service** is set to **BIDIR**, a bidirectional connection is created, with data flowing in both directions in its original format. This raw TCP/IP connection can be initiated from either the Device Server or the configured host.

Configure the following parameters:

- Host Name** The name of the target host.
- Port** The port number the target host is listening on for incoming connections.

UDP Settings

When the **Line Service** is set to **UDP**, the Device Server processes UDP packets according to the UDP settings.


Configure the following parameters:

- Start IP Address** The first host IP address in the range of IP addresses (for IPV4 or IPV6) that the Device Server will listen for messages from and/or send messages to.
- End IP Address** The last host IP address in the range of IP addresses (for IPV4, not required for IPV6) that the Device Server will listen for messages from and/or send messages to.
- Port** The port that the Device Server will use to receive messages from or relay messages to servers/hosts.

- Direction** The direction in which information is received or relayed:
- **None**—UDP service not enabled.
 - **In**—LAN to serial.
 - **Out**—Serial to LAN.
 - **Both**—Messages are relayed both directions.

VModem Settings

When the **Line Service** is set to **VModem**, the Device Server acts as a virtual modem. After a virtual modem connection is established, data will flow in both directions in its original format.

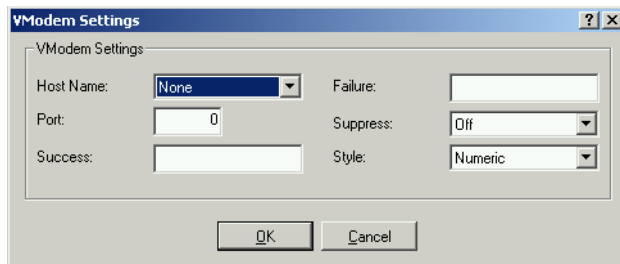


Configure the following parameters:

- Host Name** The target host name.
- Port** The port number the target host is listening on for messages.
- Success** String that is sent to the serial device when a connection succeeds. If no string is entered, then the string **CONNECT** will be sent with the connecting speed, for example **CONNECT 9600**.
- Failure** String that is sent to the serial device when a connection fails. If no string is entered, then the string **NO CARRIER** will be sent.
- Suppress** If set to **No**, connection success/failure indication strings are sent to the connected device, otherwise these indications are suppressed.
- Style** One of the following:
- **Verbose**—Return codes (strings) are sent to the connected device.
 - **Numeric**—The following characters can be sent to the connected device:
 - 1 Successfully Connected
 - 2 Failed to Connect
 - 4 Error

Configuring Modems

You need to configure a modem if there is a modem connected to the Device Server.

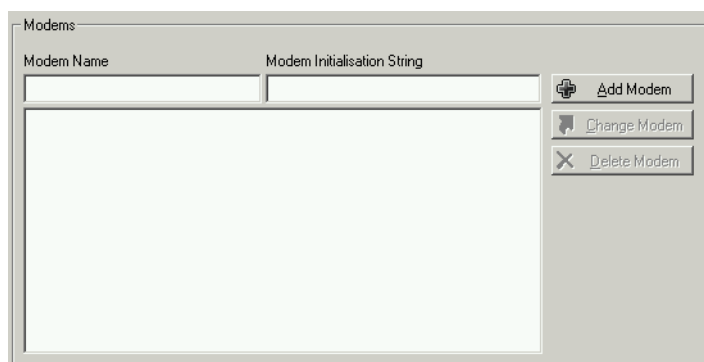


Configure the following parameters:

Modem Name The name of the modem. Do not use spaces.

Modem Initialisation String The initialisation string of the modem; see your modem's documentation.

Configuring Users

You can configure up to four users in the Device Server's local user database, in addition to the Admin user.

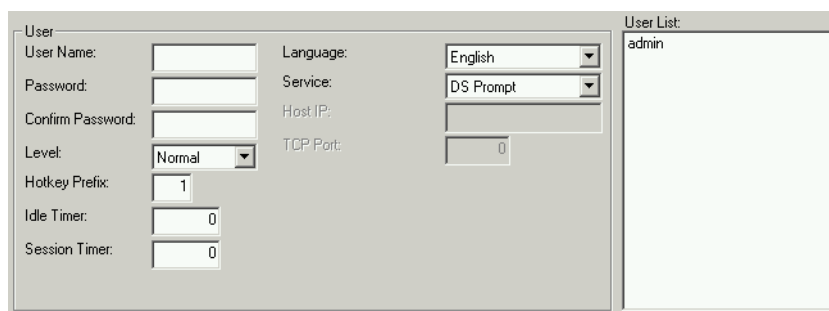

Configure the following parameters:

User Name The name of the user. Do not use spaces.

Password The password the user will need to enter to login to the Device Server.


Confirm Password Enter the user's password again to verify it is entered correctly.

Level	<p>The access that a user is allowed:</p> <ul style="list-style-type: none">● Admin—The admin level user has total access to the Device Server. You can create more than one admin user account but we recommend that you only have one. They can monitor or configure the Device Server through the CLI or Menu.● Normal—The Normal level user has limited access to the Device Server. Limited CLI commands and Menu access are available with the ability to configure the user's own configuration settings.● Restricted—The Restricted level user can only access predefined sessions or access the Easy Port Access menu. Can only view or monitor the Device Server using CLI commands to display information about the Device Server.● Menu—The menu level user will only be able to access predefined session or access the Easy Port Access menu. The Easy Port Access allows the user to connect to the accessible line without disconnecting their initial connection to the Device Server. Does not have any access to CLI commands.
Hotkey Prefix	<p>The prefix that a user types to control the current session. The default value is hex 01, which corresponds to Ctrl-a (^a) (hex value 02 would be Ctrl-b (^b), etc.):</p> <ul style="list-style-type: none">● ^a number—To switch from one session to another, press ^a and then the required session number. For example, ^a 2 would switch you to session 2. Pressing ^a 0 will return you to the Device Server Menu.● ^a n—Display the next session. The current session will remain active. The lowest numbered active session will be displayed.● ^a p—Display the previous session. The current session will remain active. The highest numbered active session will be displayed.● ^a m—To exit a session and return to the Device Server. You will be returned to where you left off. The session will be left running.● ^a l—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.● ^r—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly. <p>The User Hotkey Prefix value overrides the Line Hotkey Prefix value. You can use the Hotkey Prefix keys to lock a line only when the line Lock parameter is On.</p>
Idle Timer	<p>The amount of time, in seconds, that the idle timer will run. Use this timer to close a connection because of inactivity. When the idle timer expires, because there has been no exchange of data within the specified time, the Device Server will close the connection. The default value is 0 (zero), meaning that the idle timer will not expire (the connection is open permanently). The maximum value is 4294967 seconds. The User Idle Timer will override the Line Idle Timer, with the exception reverse Telnet sessions.</p>
Session Timer	<p>The amount of time, in seconds, that the session timer will run. Use this timer to forcibly close a user's session (connection). When the session timer expires, the Device Server will end the connection. The default value is 0 (zero), meaning that the session timer will not expire (the session is open permanently, or until the user logs out). The maximum value is 4294967 seconds. The User Session Timer will override the Line Session Timer, with the exception of reverse Telnet sessions.</p>

Language	You can specify whether a user will use English or Customlang as the language that appears in the Menu, CLI, or WebManager. The Device Server supports one custom language that must be downloaded to the Device Server; otherwise, Customlang defaults to English.
Service	The type of service that the user will use.
Host IP	When the User Service is set to Telnet or TCP_clear , the target host IP address. If 255.255.255.255 is specified in the configuration, the user will be prompted for an IP address or hostname. If no IP address is specified, the Host IP value in the Default User configuration will be used. The default is 0.0.0.0 .
TCP Port	When the User Service is Telnet , this is the target port number. The default value will change based on the type of Service selected; the most common known port numbers are used as the default values.

Configuring Line Access

Line Access defines the read/write privileges that a user has while accessing a line.

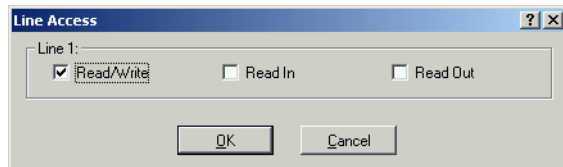


Configure the following options:

Line Access	<p>Specifies the user access rights to each Device Server device line. Options are:</p> <ul style="list-style-type: none"> ● Read/Write—Users are given read and write access to the line. ● Read In—Users are given access to read only outbound data, data that is going from the Device Server to the device. ● Read Out—Users are given access to read only inbound data, data that is going from the device to the Device Server. <p>Users can read data going in both directions by selecting both the Read In and Read Out options.</p>
--------------------	--

Configuring Sessions

You can configure user **Sessions** to limit the access the user has to the network and the way the user connects to a host. Users who are **Level Normal** or **Admin** can define **Free Sessions**, in addition to using defined sessions. Users who are **Level Restricted** or **Menu** can only access predefined sessions.

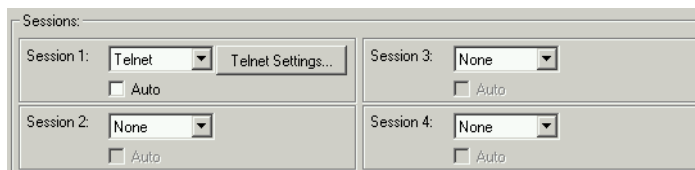

The screenshot shows a window titled "Sessions:" with four session configuration panels. Each panel contains a dropdown menu for the session name, a checkbox for "Auto", and a "Telnet Settings..." button. Session 1 is set to "Telnet" with "Auto" checked. Session 2 is set to "None" with "Auto" unchecked. Session 3 is set to "None" with "Auto" unchecked. Session 4 is set to "None" with "Auto" unchecked.

Configure the following parameters:

- Session** You can create up to four predefined sessions for each user. You can specify the connection service and its settings for each session.
- Auto** Specify whether or not the session(s) will start automatically when the user logs into the Device Server.

The following **Session** connections are available:

- **None**—No connection is configured for this session.
- **Telnet**—For information on the Telnet configuration window, see [Telnet Settings on page 58](#).

Configuring the Default User

When you add new users to the Device Server, they will initially inherit any parameters set in the **Default User** (the parameters can be changed on a per user basis).


For information on the **Default User** configuration parameters, see [Configuring Users on page 61](#).

Configuring the Network

The network configuration parameters define the network that the Device Server will be operating within.

Configuring Hosts

One of the first things you will probably want to configure is the hosts that the Device Server or Users will be interacting with, since most configuration windows require that the hosts already be configured. You can configure up to 20 hosts.

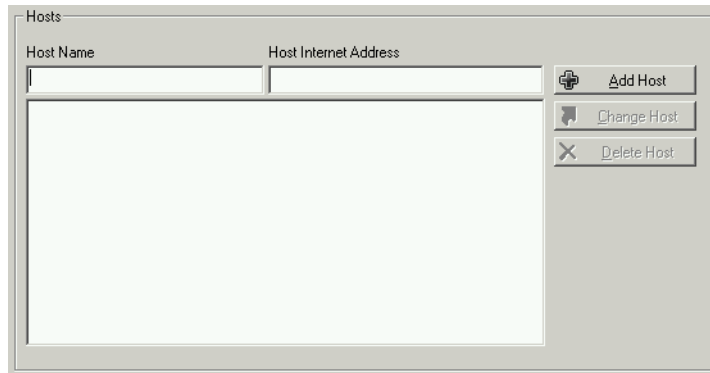

Configure the following parameters:

Host Name The name of the host.

Host Internet Address The host IP address.

Configuring SNMP

If you are using the Device Server SNMP MIB-based configuration/management option, you can use the DeviceManager to easily set up SNMP users, traps, and communities. The Device Server supports the SNMP traps for restart and SNMP community authentication error. For more information on SNMP, see [SNMP on page 31](#).

The image shows a graphical user interface for configuring SNMP. It is divided into four main sections:

- Contact Information:** Contains two text input fields labeled 'Contact:' and 'Location:'.
- Communities (Version 1 and Version 2):** A table with three columns: 'Community', 'Internet Address', and 'Permissions'. There are four rows, each with an empty text box for the community name, an empty text box for the IP address, and a dropdown menu currently set to 'None'.
- Users (Version 3):** Contains two text input fields labeled 'Read-Write User:' and 'Read-Only User:'.
- Traps:** A table with two columns: 'Trap' and 'Internet Address'. There are four rows, each with an empty text box for the trap name and an empty text box for the IP address.

Configure the appropriate parameters:

- Contact** The name and contract information of the person who manages this SMNP node.
- Location** The physical location of the SNMP node.
- Community** A name that will be sent to the Device Server from an SNMP manager. This name will define the permissions of the manager.
- Internet Address** The IP address of the SNMP manager that will send requests to the Device Server. If the address is 0 . 0 . 0 . 0, any SNMP manager with the **Community Name** can access the Device Server.
- Permissions** Permits the Device Server to respond to SNMP requests by:
- **None**—There is no response to requests from SNMP.
 - **Readonly**—Responds only to Read requests from SNMP.
 - **Readwrite**—Responds to both Read and Write requests from SNMP.
- Read-Write User** Specified user can view and edit SNMP variables.
- Read-Only User** Specified user can only view SNMP variables.
- Trap** An arbitrary trap community name.
- Internet Address** Defines the hosts (by IP address) that will receive trap messages generated by the Device Server. Up to four trap hosts can be defined.

Configuring TFTP

These parameters configure the TFTP settings for the Device Server's connections to hosts (as opposed to the TFTP settings under **Tools, Options**, which configure the TFTP settings for the DeviceManager's connection to a Device Server).

The screenshot shows a configuration window titled 'TFTP'. It contains three input fields: 'Timeout' with the value '3', 'Retry' with the value '5', and 'UDP Port' with the value '33814'.

Configure the following parameters:

- Retry** The number of times the Device Server will attempt to transfer (using TFTP) a file to/from a host. Enter a value between 0 and 5. The default is **5**. A value of **0** (zero) means that the Device Server will not attempt a retry should TFTP fail.
- Timeout** The time, in seconds, that the Device Server will wait for a successful transmit or receipt of TFTP packets before retrying a TFTP transfer. Enter a value between 3 and 10. The default is **3** seconds.
- UDP Port** The port that the DeviceManager will use to TFTP to hosts. The default port is 33814 (ports 33812 and 33813 are also in use by the DeviceManager).

Configuring Gateways

You can configure gateways to allow the Device Server access to hosts that are not within the local network segment.

The screenshot shows a configuration window titled 'Gateway'. It has a 'Gateway List' pane on the right which is currently empty. The main configuration area includes: 'Host' dropdown set to 'None', 'Service' dropdown set to 'Host', 'Destination Address' text box containing '0.0.0.0', and 'Subnet/Prefix Bits' text box containing '32'.


Configure the following parameters:

- Host** You can specify up to twenty hosts to act as gateways in your network. Each gateway host must be defined in the Device Server host table.
- Service** Specify the type of gateway:
- **Default**—A gateway which provides general access beyond your local network.
 - **Host**—A gateway reserved for accessing a specific host external to your local network.
 - **Network**—A gateway reserved for accessing a specific network external to your local network.
- Destination Address** When the gateway is a **Host** or **Network** gateway, you must specify the IP address of the target host machine/network.

- Subnet/Prefix Bits** When the gateway is a **Network** gateway, you must specify the subnet/prefix bits for that network. If the IP address is IPv4, then the Subnet/Prefix Bits range is 0-32. If the IP address is IPv6, then the Subnet/Prefix Bits range is 0-128.
- Gateway List** The list of defined gateways.

Configuring Syslog

You can configure where the system log messages are going to be sent and specify the lowest level message that the Device Server will send syslog messages for.

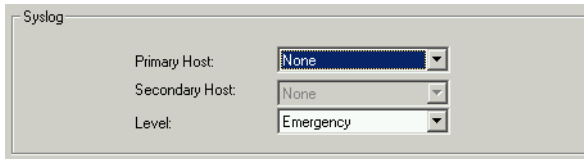

The screenshot shows a configuration window titled "Syslog". It contains three dropdown menus: "Primary Host" is set to "None", "Secondary Host" is set to "None", and "Level" is set to "Emergency".

Configure the following options:

- Primary Host** The first preconfigured host that the Device Server will attempt to send system log messages to; messages will be displayed on the host's monitor.
- Secondary Host** If the Device Server cannot communicate with the primary host, then the Device Server will attempt to send system log messages to this preconfigured host; messages will be displayed on the host's monitor.
- Level** Choose the event level that triggers a syslog entry:
- **Emergency**
 - **Alert**
 - **Critical**
 - **Error**
 - **Warning**
 - **Notice**
 - **Info**
 - **Debug**

When you select a **Level**, all the levels that appear above it in the list also trigger a syslog entry. For example, if you select **Error**, all **Error**, **Critical**, **Alert**, and **Emergency** events will be logged.

Configuring Administration Tasks

You can specify new configuration and firmware files that will go into effect the next time the Device Server is rebooted and a message of the day (MOTD) file, whose contents will be displayed when User's log into the Device Server.

Configuring Bootup Files

When you specify a configuration and/or firmware file(s), the files will be downloaded via TFTP to the Device Server the next time it is rebooted.

The screenshot shows a window titled 'Bootup Files'. It is divided into two sections. The top section is labeled 'Firmware' and contains two input fields: 'Host' and 'File'. The bottom section is labeled 'Configuration' and also contains two input fields: 'Host' and 'File'.

Configure the following parameters:

- Firmware Host** The host name or IP address of the server that contains the configuration or firmware file. If you use a host name, it must exist in the Device Server's host table or be resolved by DNS.
- Firmware File** The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the update software for the Device Server that will be loaded when the Device Server is rebooted.
- Configuration Host** The host name or IP address of the server that contains the configuration or firmware file. If you use a host name, it must exist in the Device Server's host table or be resolved by DNS.
- Configuration File** The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the configuration software for the Device Server that will be loaded when the Device Server is rebooted.

Configuring the MOTD File

You can specify a file whose content will be displayed to users after they connect to the Device Server, but before they log in. The Device Server will retrieve the file content every time a user connects to the Device Server, so you can change the content of the file without reconfiguring it within the Device Server.

The screenshot shows a window titled 'MOTD'. It contains two input fields: 'Host' and 'Filename'.

Configure the following parameters:

- Host** The host that the Device Server will be getting the Message of the Day file from.
- Filename** The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the file that contains a string that is displayed when a user connects to the Device Server.

Statistics

After you are connected to a Device Server, you can view statistics about the Device Server and its network environment. This can help you to troubleshoot problems or can provide valuable information about the Device Server's environment.

Tools

Saving a Configuration To File

When you connect to a Device Server, the Device Server's configuration is automatically uploaded to the DeviceManager. We suggest that you save the configuration to a file at this point, in case you need to revert to a working configuration in the future, by selecting **Tools, Save Configuration to File**. You can choose to save the configuration to the Device Server's native binary format or to a text file, which can be edited with a text editor. Either format can be reloaded into the DeviceManager at any time.


Getting a Configuration File

The DeviceManager can get a local configuration file (either binary or text) when you select **Tools, Get Configuration, Import from File**. The DeviceManager can also get the configuration from the Device Server it's connected to when you select **Tools, Get Configuration, Upload from Unit**; this can be useful if you've made changes to the Device Server's configuration that you would like to discard, you can simply reload the Device Server's current configuration into the DeviceManager.

Configuring Multiple Device Servers

You can configure multiple Device Servers at one time with the active configuration file. Any value in the configuration file's **Server Name** and **Internet Address** parameters will be overwritten by the values specified in the **Server Name** and **IP Address** fields (these fields cannot be left blank)


1. Select **Tools, Download Configuration to Multiple Units**. The Download Configuration to Multiple Units window is displayed.

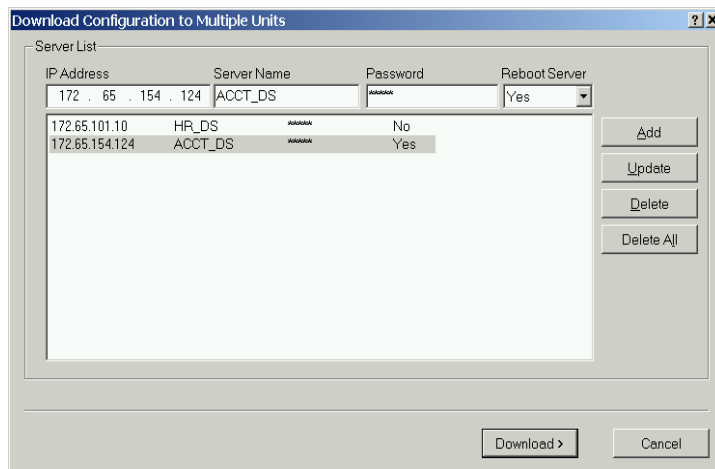

- Enter the following information for each Device Server that you want to configure with the same configuration file:

- IP Address** Enter the IP address of the Device Server that you want to download the configuration to.
- Server Name** The name of the Device Server. The Device Server name that you put in this field is passed into the configuration before it is downloaded to the Device Server and cannot be left blank.
- Password** Enter the Admin user password for the Device Server.
- Reboot Server** Determines whether or not the Device Server is rebooted after it has received the new configuration. The new configuration definitions will not go into effect until the Device Server is rebooted.

- Click **Add** to add the Device Server to the download list. You can also click on a Device Server and edit any information and then click **Update** to make the edits permanent.
- Click the **Download>** button to start the download process. A status window will display with the configuration download status.

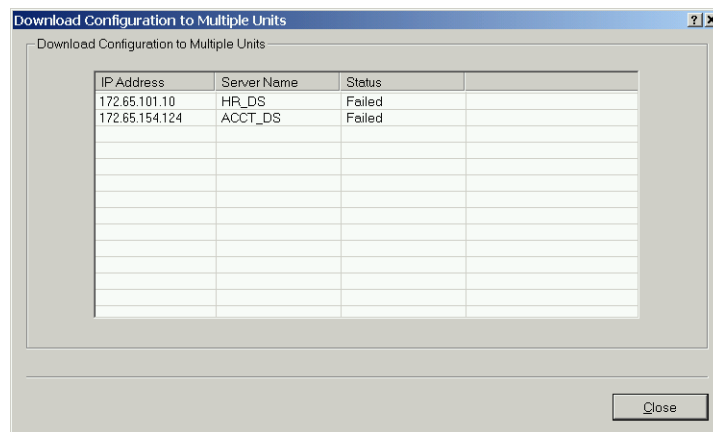


Downloading Device Server Firmware

To upgrade the Device Server firmware (software), select **Tools, Download Firmware to Unit**. Once the firmware download is complete, you will be prompted to reboot the Device Server. You can choose to reboot the Device Server at another time by selecting **Tools, Reboot Server**. Upgrading the firmware does not affect the Device Server's configuration file or downloaded custom files.

Setting the Device Server's Date and Time

To set the Device Server's system clock, select **Tools, Set Unit Time/Date**. The Set Date/Time window is displayed.

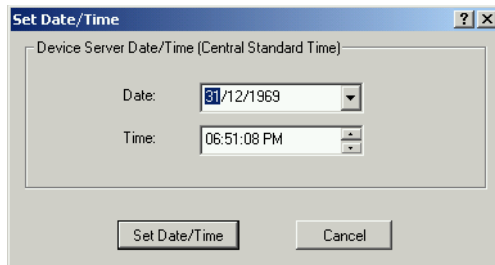

Configure the following parameters:

- Date** The Device Server's date, in the format *dd/mm/yyyy*.
- Time** The Device Server's time.

Rebooting the Device Server

When you download any file (configuration, keys, certificates, firmware, etc.) to the Device Server, you must reboot the Device Server for it to take effect by selecting **Tools, Reboot Server**.

Resetting the Device Server to Factory Defaults

You can reset the Device Server to its factory default configuration by selecting **Tools, Reset to Factory Default**. The Device Server will automatically reboot itself with the factory default configuration.

Resetting a Line

After you make changes to the **Line** configuration parameters and click the **Apply** button, you can reset the line to test the changes by selecting **Tools, Kill Line**. If you are happy with the configuration changes, you can download the configuration by selecting **Tools, Download Configuration to Unit**. Of course, your new configuration will not take effect until you reboot the Device Server by selecting **Tools, Reboot Server**.

Custom Files

Saving Crashes to a Dump File

If the Device Server should crash, you can save the crash information (dump) to a file that can be sent to Technical Support for interpretation. This should probably be done only under the guidance of Technical Support.

Downloading Terminal Definitions

You can create up to three custom terminal definitions and download them to the Device Server (if you need a terminal definition that is not currently defined within the Device Server). It is important that you remember which Device Server Terminal Definition you download your custom terminal definition under.

For example, if you download a custom terminal definition as **Terminal Definition 2**, you must select **Terminal Type Term2** in the **Line** window to use that terminal definition.

See [Creating Terminal Definition Files on page 43](#) for information on creating custom terminal definitions.

Downloading a Language File

You can download one custom language file that can be specified in the **User** configuration window. See [Language support on page 41](#) for information on creating custom language files.

Setting DeviceManager Options

When you select **Tools, Options**, you can set the following:

- **Confirmation Messages**—Specify whether you want to receive confirmation messages for all of the following selections:
 - **Tools, Download Configuration to Unit**
 - **Tools, Reboot Server**
 - **Tools, Reset to Factory Defaults**
 - **Tools, Reset SecurID Node Secret**
 - **Tools, Kill Line**
 - Anytime you click a **Delete** button
- **TFTP**—Sets the TFTP options for communication between the DeviceManager and a Device Server.
- **Statistics**—Specify whether or not you want to have the statistics automatically refresh and the refresh rate.



Command Line Interface

Introduction

This chapter provides the command line interface (CLI) options available for the Device Server. The commands are grouped by function.

CLI Conventions

This section explains how to interpret the CLI syntax.

Command Syntax

Each command is broken down into several categories:

- **Description**—Provides a brief explanation of how the command is used.
- **User Level**—Shows which user level(s) (Restricted, Normal, and/or Admin) can issue the command. Some commands have options that are available for one user level and not for another level; this usually occurs when a command is valid for both Normal and Admin user levels, where the Admin user level command will have extended options.
- **Syntax**—Shows the actual command line options. The options can be typed in any order on the command line. The syntax explanation will use the following command to break down the command syntax:

```
set service [dhcp/bootp on|off] [telnetd on|off] [httpd on|off]
[snmpd on|off] [spcd on|off] [syslog on|off] [dmgrd on|off]
```

- Square brackets ([]) show the options that are available for the command. You can type a command with each option individually, or string options together in any order you want. For example,
set service dhcp/bootp on telnetd off
- Angle brackets (<>) show that the text inside the brackets is a description for a variable value that you must fill in according to your requirements. In the **set server** command, you must determine the values for **domain**, **internet**, **name**, **password-limit**, and **subnet-bit-length**, if you wish to specify them and not use their defaults (default values provided in the **Options** description). The angle brackets can also contain a range that can be used.
- The pipe (|) shows an 'or' condition. For example, valid values for **telnetd** are either **on** or **off**.
- **Options**—Provides an explanation of each of the options for a command and the default value if there is one. Some commands do not have any options, so this category is absent.

Command Shortcuts

When you type a command, you can specify the shortest unique version of that command or you can press the **ESC** key to complete the command. For example, the following command:

```
set telnet-client map-to-crlf off
```

can be typed as:

```
set tel map off
```

or, you can use the **ESC** key to complete the lines as you go along:

```
set tel<ESC>net-client ma<ESC>p-to-crlf off
```

where the <ESC> key was pressed to complete the option as it was typed.

Command Options

When you are typing commands on the command line (while connected to the Device Server), you can view the options by typing a question mark (?) after any part of the command to see what options are available/valid. For example:

```
DS$ set vmodem ?
failure-string
host
port
style
success-string
suppress
DS$ set vmodem failure-string ?
<text>                30 characters maximum
DS$ set vmodem failure-string "Vmodem failed" ?
failure-string
host
port
style
success-string
suppress
Or press Enter to confirm command
DS$ set vmodem failure-string "Vmodem failed"
DS$ show vmodem
Host
Host Port
Success String
Failure String          "Vmodem failed"
Suppress                Off
Style                   Numeric
DS$
```

Server Commands

This section defines all the CLI commands associated with configuring the Device Server's server parameters.

Server Commands

Set Server

Description Sets server parameters.

User Level Admin

Syntax `set server [banner on|off] [bypass-password on|off]
[domain <string>] [flush-on-close on|off]
[internet <IPv4_address>] [name <string>] [oem-login on|off]
[password-limit <0-10>] [prompt-with-name on|off]
[single-telnet on|off] [subnet-bit-length <0-32>]`

`set server tftp [retry <integer>] [timeout <integer>]`

Options **banner**

This parameter concerns the banner information (product name/software version). This banner information is presented to a user with a login prompt. For security reasons, you can turn off the display of this information. The default is **Off**.

bypass-password

When set, authorised users who do not have a password set, with the exception of the Admin user, WILL NOT be prompted for a password at login with **Local Authentication**.

domain_name

Unique name for your domain, your location in the global network. Like Hostname, it is a symbolic, rather than a numerical, identifier.

flush-on-close

When enabled, deletes any pending data when a port is closed; as opposed to maintaining the port to send pending data. The default value is **Off**.

internet

The Device Server's unique IPv4 network IP address. If you are using the Device Server in an IPv6 network, this field can be left blank.

oem-login

When set, and a custom language file is in use, the login prompt will use the string defined in the language file as the login prompt instead of the default prompt, **login:**.

password-limit

The number of attempts a user is allowed to enter a password for a port. If this limit is exceeded, the port is disabled for 5 minutes. A user with Admin level rights can restart the port, bypassing the timeout, by issuing a kill on the disabled port. The default value is **3**.

prompt-with-name

Displays the **Server Name** field value instead of default product name. When enabled, the **Server Name** is displayed in the Device Server login prompt, CLI prompt, WebManager login screen, and the heading of the Menu. The default value is **Off**.

single-telnet

Sets all reverse connections (raw and telnet) to a one connection at a time mode. Server-side applications will get a (socket) connection refused until:

- All data from previous connections on that serial port has drained
- There are no other connections
- Up to a 1 second interconnection poll timer has expired

This also enables a per-connection keepalive TCP keepalive feature. After approximately 3 minutes of network connection idle time, the connection will send a gratuitous ACK to the network peer, thus either ensuring the connection stays active OR causing a dropped connection condition to be recognised by the reverse service (all connections).

Applications using Single Telnet need to be aware that there can be some considerable delay between a network disconnection and the port being available for the next connection attempt; this is to allow any data sent on prior connections to be transmitted out of the serial port. Application network retry logic needs to accommodate this feature. The default value is **Off**.

subnet-bit-length

The number of bits in the subnet mask. For example, a subnet mask of 255.255.0.0 has 16 subnet/prefix bits. Valid values are 0-31. The default is 0. When the value is 0, the correct value is determined based on the class of the **IP Address**.

retry

The number of times the Device Server will attempt to transfer (using TFTP) a file to/from a host. Enter a value between 0 and 5. The default is **5**. A value of **0** (zero) means that the Device Server will not attempt a retry should TFTP fail.

timeout

The time, in seconds, that the Device Server will wait for a successful transmit or receipt of TFTP packets before retrying a TFTP transfer. Enter a value between 3 and 10. The default is **3** seconds.

Set Service

Description Sets server service parameters.

User Level Admin

Syntax `set service [dhcp/bootp on|off] [telnetd on|off] [httpd on|off] [snmpd on|off] [spcd on|off] [syslog on|off] [dmgrd on|off]`

Options **dhcp/bootp**

DHCP/BOOTP client process in the Device Server.

telnetd

Telnet daemon process in the Device Server on port 23.

httpd

HTTP daemon process in the Device Server on port 80.

snmpd

SNMP daemon process in the Device Server on port 161.

spcd

SPC (Trueport) daemon process in the Device Server on port 688.

syslog

Syslog client process in the Device Server.

dmgrd

DeviceManager daemon process in the Device Server. If you disable this service, you will not be able to connect to the Device Server with the DeviceManager application. DeviceManagerD listens on port 33812 and sends on port 33813.

Show Server

Description Shows the parameters set for the server.

User Level Admin

Syntax `show server`

Hardware Commands

Set Ethernet

Description Sets the serial line speed and duplex.

User Level Admin

Syntax `set ethernet speed-and-duplex
auto|10-half|10-full|100-half|100-full`

Options `auto|10-half|10-full|100-half|100-full`

Define the ethernet connection speed at one of the following:

- **auto**—automatically detects the ethernet interface speed and duplex
- **10 Mbps Half Duplex**
- **10 Mbps Full Duplex**
- **100 Mbps Half Duplex**
- **100 Mbps Full Duplex**

Show Hardware

Description Shows the hardware settings/information.

User Level Normal, Admin

Syntax `show hardware`

Trueport Baud Commands

Set Trueport Remap-Baud

Description Sets the Trueport baud remapping values.

User Level Admin

Syntax `set trueport remap-baud`
50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|19200|
38400
50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|19200|
38400|57600|115200|230400|460800|921600|1843200|3686400

Options 50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|19200|38400

The configured baud rate of the Trueport client.

50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|19200|38400|
57600|115200|230400|460800|921600|1843200|3686400

The actual baud rate that runs between the Device Server and the connected serial device.

Show Trueport

Description Shows the Device Server Trueport remapping table.

User Level Normal, Admin

Syntax `show trueport`

User Commands

Logged Into the Device Server Commands

Admin

Description Changes a Normal-level user to the Admin user. When you press **Enter** after you type this command, you will be prompted for the Admin password.

User Level Normal

Syntax `admin`

Help

Description Displays help on using the command line interface (CLI).

User Level Restricted, Normal, Admin

Syntax `help`

Kill Line

Description Restarts a line.

User Level Normal, Admin

Syntax `kill line`

Kill Session

Description Kills an active session.

User Level Restricted, Normal, Admin

Syntax `kill session 1|2|3|4`

Options 1|2|3|4

The number of the session(s) you want to kill.

Logout

Description Logs the user out from the Device Server.

User Level Restricted, Normal, Admin

Syntax `logout`

Ping

Description Pings the specified host/IP address.

User Level Normal, Admin

Syntax `ping <hostname/IP_address> [<packet_size>] [<#_of_packets>]`

Options `<hostname/IP_address>`

The name (host name or DNS name) or IP address of the machine you are trying to ping (verify the connection with).

`<packet_size>`

Enter the number of data bytes to be sent. The maximum size is 2000 bytes.

`<#_of_packets>`

Enter the number of the packets you want to send.

Resume

Description Resumes a started session.

User Level Restricted, Normal, Admin

Syntax `resume 1|2|3|4`

Options `1|2|3|4`

The number of the session you want to resume.

Screen

Description Switches from the CLI mode to the Menu.

User Level Restricted, Normal, Admin

Syntax `screen`

Set Termtyp

Description Sets the type of terminal being used for the current session.

User Level Normal, Admin

Syntax `set termtyp`
`wyse60|vt100|ansi|dumb|tvi925|ibm3151te|vt320|hp700|term1|term2|term3`

Option `wyse60|vt100|ansi|dumb|tvi925|ibm3151te|vt320|hp700|term1|term2|term3`

Specifies the type of terminal connected to the line:

- **Dumb**
- **WYSE60**
- **VT100**
- **ANSI**
- **TVI925**
- **IBM3151TE**
- **VT320** (specifically supporting VT320-7)
- **HP700** (specifically supporting HP700/44)
- **Term1, Term2, Term3** (user defined terminals)

Set User

Description Sets the current user's settings.

User Level Normal, Admin

Syntax `set user . [hotkey-prefix <00-7f>] [language english|customlang] [password]`

Options **hotkey-prefix**

The prefix that a user types to control the current session. The default value is **hex 01**, which corresponds to **Ctrl-a (^a)** (hex value 02 would be Ctrl-b (^b), etc.):

- **^a number**—To switch from one session to another, press **^a** and then the required session number. For example, **^a 2** would switch you to session 2. Pressing **^a 0** will return you to the Device Server Menu.
- **^a n**—Display the next session. The current session will remain active. The lowest numbered active session will be displayed.
- **^a p**—Display the previous session. The current session will remain active. The highest numbered active session will be displayed.
- **^a m**—To exit a session and return to the Device Server. You will be returned to where you left off. The session will be left running.
- **^a l**—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.
- **^r**—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly.

The **User Hotkey Prefix** value overrides the **Line Hotkey Prefix** value. You can use the **Hotkey Prefix** keys to lock a line only when the line **Lock** parameter is **On**.

language

You can specify whether a user will use **English** or **Customlang** as the language that appears in the Menu, CLI, or WebManager. The Device Server supports one custom language that must be downloaded to the Device Server; otherwise, **Customlang** defaults to English.

password

The password the user will need to enter to login to the Device Server.

Set User Session

Description Sets the current user's session settings.

User Level Normal, Admin

Syntax `set user . session 1|2|3|4|* [auto on|off] [type off|telnet]`

```
set user . session 1|2|3|4|* telnet-options [host <config_host>]
[port <TCP_port>] [termttype <terminal_name>] [line-mode on|off]
[map-cr-crlf on|off] [local-echo on|off] [echo <00-7f>]
[eof <00-7f>] [erase <00-7f>] [intr <00-7f>] [quit <00-7f>]
```

Options **session**

Specifies the session number (or all, *) that you are configuring.

auto

Specify whether or not the session(s) will start automatically when the user logs into the Device Server.

telnet-options

See [Set Telnet-Client](#) on page 95.

Show Line Users

Description Shows the users who are on the line.

User Level Admin

Syntax `show line users`

Syslog Console

Description Starts/stops or displays the status of the syslog console.

User Level Admin

Syntax `syslog console start|stop`

`syslog console status`

Options `start|stop`

Start or stop console logging. When console logging is enabled, syslog messages will be echoed to the current console. These messages are filtered based on the level set in the (remote) syslog options.

status

Displays the current console logging status (enabled or disabled).

Show Sessions

Description Shows available sessions.

User Level Restricted, Normal, Admin

Syntax `show sessions`

Show Termtype

Description Shows the terminal type for the current session.

User Level Admin

Syntax `show termtype`

Start

Description Starts a predefined session. Only inactive sessions are displayed.

User Level Restricted, Normal, Admin

Syntax `start 1|2|3|4`

Options `1|2|3|4`

The number of the session that you want to start.

Telnet

Description Starts a telnet session to the specified host/IP address.

User Level Normal, Admin

Syntax `telnet <hostname/IP_address> [<tcp_port>]
[termtyp <terminal_name>] [line-mode on|off]
[map-cr-crlf on|off] [local-echo on|off]
[echo <00-7f>] [eof <00-7f>] [erase <00-7f>] [intr <00-7f>]
[quit <00-7f>] [escape <00-7f>]`

Options `<hostname/IP_address>`

The name of the target host.

`<tcp_port>`

The port number the target host is listening on for incoming connections.

termtyp

Type of terminal attached to this line; for example, ANSI or WYSE60.

line-mode

When **On**, keyboard input is not sent to the remote host until **Enter** is pressed, otherwise input is sent every time a key is pressed. Default is **Off**.

map-cr-crlf

Maps carriage returns (CR) to carriage return line feed (CRLF). The default value is **Off**.

local-echo

Toggles between local echo of entered characters and suppressing local echo. Local echo is used for normal processing, while suppressing the echo is convenient for entering text that should not be displayed on the screen, such as passwords. This parameter can only be used when **Line Mode** is **On**. Default is **Off**.

echo

Defines the echo character. When Line Mode is On, typing the echo character echoes the text locally and sends only completed lines to the host. This value is in hexadecimal with a default value of **5** (ASCII value **^E**).

eof

Defines the end-of-file character. When Line Mode is On, entering the eof character as the first character on a line sends the character to the remote host. This value is in hexadecimal with a default value of **4** (ASCII value **^D**).

erase

Defines the erase character. When Line Mode is Off, typing the erase character erases one character. This value is in hexadecimal with a default value of **8** (ASCII value **^H**).

intr

Defines the interrupt character. Typing the interrupt character interrupts the current process. This value is in hexadecimal with a default value of **3** (ASCII value **^C**).

quit

Defines the quit character. Typing the quit character closes and exits the current telnet session. This value is in hexadecimal with a default value of **1c** (ASCII value **FS**).

escape

Defines the escape character. Returns you to the command line mode. This value is in hexadecimal with a default value of **1d** (ASCII value **GS**).

Version

Description Displays firmware version and build.
User Level Normal, Admin
Syntax `version`

Configuring Users

Add User

Description Adds a user. You can add and configure up to four users in the Device Server.
User Level Admin
Syntax `add user <username>`
Option `<username>`
 The name of the user, without spaces. When you finish the command and press Enter, you will be prompted to enter and re-enter a password for the user.

Delete User

Description Deletes a user.
User Level Admin
Syntax `delete user <config_user>`
Option `<config_user>`
 You can see a list of users that can be deleted by typing `delete user ?`.

Set Default User

Description Configures the Default User.
User Level Admin
Syntax `set default user [hotkey-prefix <00-7f>]
 [idle-timer <0-4294967>] [ip-host <ip_address>]
 [language english|customlang]
 [level admin|normal|restricted|menu]
 [line-access readin|readout|readwrite on|off]
 [service dsprompt|telnet|tcp-clear] [sess-timer <0-4294967>]
 [port tcp-clear|telnet <tcp_port>]`

Options hotkey-prefix

The prefix that a user types to control the current session. The default value is **hex 01**, which corresponds to **Ctrl-a (^a)** (hex value 02 would be Ctrl-b (^b), etc.):

- **^a number**—To switch from one session to another, press **^a** and then the required session number. For example, **^a 2** would switch you to session 2. Pressing **^a 0** will return you to the Device Server Menu.
- **^a n**—Display the next session. The current session will remain active. The lowest numbered active session will be displayed.
- **^a p**—Display the previous session. The current session will remain active. The highest numbered active session will be displayed.
- **^a m**—To exit a session and return to the Device Server. You will be returned to where you left off. The session will be left running.
- **^a l**—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.
- **^r**—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly.

The **User Hotkey Prefix** value overrides the **Line Hotkey Prefix** value. You can use the **Hotkey Prefix** keys to lock a line only when the line **Lock** parameter is **On**.

idle-timer

The amount of time, in seconds, that the idle timer will run. Use this timer to close a connection because of inactivity. When the idle timer expires, because there has been no exchange of data within the specified time, the Device Server will close the connection. The default value is **0** (zero), meaning that the idle timer will not expire (the connection is open permanently). The maximum value is 4294967 seconds. The **User Idle Timer** will override the **Line Idle Timer**, with the exception reverse Telnet sessions.

ip-host

When the **User Service** is set to **Telnet** or **TCP_clear**, the target host IP address. If 255.255.255.255 is specified in the configuration, the user will be prompted for an IP address or hostname. If no IP address is specified, the Host IP value in the **Default User** configuration will be used. The default is **0.0.0.0**.

language

You can specify whether a user will use **English** or **Customlang** as the language that appears in the Menu, CLI, or WebManager. The Device Server supports one custom language that must be downloaded to the Device Server; otherwise, **Customlang** defaults to English.

level

The access that a user is allowed:

- **Admin**—The admin level user has total access to the Device Server. You can create more than one admin user account but we recommend that you only have one. They can monitor or configure the Device Server through the CLI or Menu.
- **Normal**—The Normal level user has limited access to the Device Server. Limited CLI commands and Menu access are available with the ability to configure the user's own configuration settings.
- **Restricted**—The Restricted level user can only access predefined sessions or access the Easy Port Access menu. Can only view or monitor the Device Server using CLI commands to display information about the Device Server.
- **Menu**—The menu level user will only be able to access predefined session or access the Easy Port Access menu. The Easy Port Access allows the user to connect to the accessible line without disconnecting their initial connection to the Device Server. Does not have any access to CLI commands.

password

The password the user will need to enter to login to the Device Server.

line-access

Specifies the user access rights to each Device Server device line. Options are:

- **Read/Write**—Users are given read and write access to the line.
- **Read In**—Users are given access to read only outbound data, data that is going from the Device Server to the device.
- **Read Out**—Users are given access to read only inbound data, data that is going from the device to the Device Server.

Users can read data going in both directions by selecting both the **Read In** and **Read Out** options.

phone-number

The phone number the Device Server will dial to callback the user (you must have set **Callback** to **On**). Enter the number without spaces. To change the phone number, overwrite the previous entry; to clear the phone number, set it to "" (double quotes without a space).

service

The type of service that the user will use.

sess-timer

The amount of time, in seconds, that the session timer will run. Use this timer to forcibly close a user's session (connection). When the session timer expires, the Device Server will end the connection. The default value is **0** (zero), meaning that the session timer will not expire (the session is open permanently, or until the user logs out). The maximum value is 4294967 seconds. The **User Session Timer** will override the **Line Session Timer**, with the exception of reverse Telnet sessions.

port

When the **User Service** is **Telnet**, this is the target port number. The default value will change based on the type of **Service** selected; the most common known port numbers are used as the default values.

Set User

Description Sets user's settings. Normal-level users can configure only their own settings.

Admin-level users can configure any user's settings, including their own (with the exception of their User Level, which must stay at Admin).

User Level Normal, Admin

Syntax `set user . [hotkey-prefix <00-7f>] [language english|customlang] [password]`

Admin `set user .|<username>|* [hotkey-prefix <00-7f>] [idle-timer <0-4294967>] [ip-host <ip_address>] [language english|customlang] [level admin|normal|restricted|menu] [password] [line-access readin|readout|readwrite on|off] [service dsprompt|telnet|tcp-clear] [sess-timer <0-4294967>] [port tcp-clear|telnet <tcp_port>]`

Options **hotkey-prefix**

The prefix that a user types to control the current session. The default value is **hex 01**, which corresponds to **Ctrl-a (^a)** (hex value 02 would be Ctrl-b (^b), etc.):

- **^a number**—To switch from one session to another, press **^a** and then the required session number. For example, **^a 2** would switch you to session 2. Pressing **^a 0** will return you to the Device Server Menu.
- **^a n**—Display the next session. The current session will remain active. The lowest numbered active session will be displayed.
- **^a p**—Display the previous session. The current session will remain active. The highest numbered active session will be displayed.
- **^a m**—To exit a session and return to the Device Server. You will be returned to where you left off. The session will be left running.
- **^a l**—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.
- **^r**—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly.

The **User Hotkey Prefix** value overrides the **Line Hotkey Prefix** value. You can use the **Hotkey Prefix** keys to lock a line only when the line **Lock** parameter is **On**.

idle-timer

The amount of time, in seconds, that the idle timer will run. Use this timer to close a connection because of inactivity. When the idle timer expires, because there has been no exchange of data within the specified time, the Device Server will close the connection. The default value is **0** (zero), meaning that the idle timer will not expire (the connection is open permanently). The maximum value is 4294967 seconds. The **User Idle Timer** will override the **Line Idle Timer**, with the exception reverse Telnet sessions.

ip-host

When the **User Service** is set to **Telnet** or **TCP_clear**, the target host IP address. If 255.255.255.255 is specified in the configuration, the user will be prompted for an IP address or hostname. If no IP address is specified, the Host IP value in the **Default User** configuration will be used. The default is **0.0.0.0**.

language

You can specify whether a user will use **English** or **Customlang** as the language that appears in the Menu, CLI, or WebManager. The Device Server supports one custom language that must be downloaded to the Device Server; otherwise, **Customlang** defaults to English.

level

The access that a user is allowed:

- **Admin**—The admin level user has total access to the Device Server. You can create more than one admin user account but we recommend that you only have one. They can monitor or configure the Device Server through the CLI or Menu.
- **Normal**—The Normal level user has limited access to the Device Server. Limited CLI commands and Menu access are available with the ability to configure the user's own configuration settings.
- **Restricted**—The Restricted level user can only access predefined sessions or access the Easy Port Access menu. Can only view or monitor the Device Server using CLI commands to display information about the Device Server.
- **Menu**—The menu level user will only be able to access predefined session or access the Easy Port Access menu. The Easy Port Access allows the user to connect to the accessible line without disconnecting their initial connection to the Device Server. Does not have any access to CLI commands.

password

The password the user will need to enter to login to the Device Server.

line-access

Specifies the user access rights to each Device Server device line. Options are:

- **Read/Write**—Users are given read and write access to the line.
- **Read In**—Users are given access to read only outbound data, data that is going from the Device Server to the device.
- **Read Out**—Users are given access to read only inbound data, data that is going from the device to the Device Server.

Users can read data going in both directions by selecting both the **Read In** and **Read Out** options.

service

The type of service that the user will use.

sess-timer

The amount of time, in seconds, that the session timer will run. Use this timer to forcibly close a user's session (connection). When the session timer expires, the Device Server will end the connection. The default value is **0** (zero), meaning that the session timer will not expire (the session is open permanently, or until the user logs out). The maximum value is 4294967 seconds. The **User Session Timer** will override the **Line Session Timer**, with the exception of reverse Telnet sessions.

port

When the **User Service** is **Telnet**, this is the target port number. The default value will change based on the type of **Service** selected; the most common known port numbers are used as the default values.

Set User Session

Description Configures a user's session settings. See [Set User Session on page 82](#) for the options descriptions.

User Level Admin

Syntax `set user .|<username> session 1|2|3|4|* [auto on|off]
[type off|telnet]`

```
set user .|<username> session 1|2|3|4|* telnet-options
[host <config_host>] [port <TCP_port>]
[termtype <terminal_name>] [line-mode on|off]
[map-cr-crlf on|off] [local-echo on|off]
[echo <00-7f>] [eof <00-7f>] [erase <00-7f>] [intr <00-7f>]
[quit <00-7f>]
```

Show Default User

Description Shows the Default User's settings.

User Level Admin

Syntax `show default user`

Show User

Description Shows user configuration settings.

User Level Admin

Syntax `show user <configured_user>|. .`

Options `<configured_user>`
Show the settings for the specified user.
.
Show the settings for the current user.

Line Commands

Line Commands

Set Line

Description Configures line parameters.

User Level Normal, Admin

Syntax `set line [data-bits 5|6|7|8] [dial none|in|out|both] [idle-timer <0-4294967>] [line-name <name>] [modem-name <config_modem>] [pages 1|2|3|4|5|6|7] [parity none|even|odd|mark|space] [phone-number <phone_number>] [rev-sess-security on|off] [sess-timer <0-4294967>] [stop-bits 1|2|1.5] [termtype wyse60|vt100|ansi|dumb|tvi925|ibm3151te|vt320|hp700|term1|term2|term3]`

Admin `set line ... [break on|off] [flowin on|off] [flowout on|off] [hotkey-prefix <00-7f>] [initial cli|menu] [keepalive on|off] [lock on|off] [motd on|off] [reset on|off] [user <name>] [nouser]`

Options **data-bits**

Specifies the number of bits in a byte. The default is **8**.

dial

Determines how a modem will work on the line. If your user is remote and will be dialing in via modem or ISDN TA, set this parameter to **In**; if the Device Server is being used as a router, set this parameter to either **In**, **Out**, or **Both**, depending on which end of the link your Device Server is situated and how you want to initiate the communication.

idle-timer

Enter a time period, in seconds, for which the idle timer will run. Use this timer to close a connection because of inactivity. When the idle timer expires, the Device Server will end the connection. The maximum value is 4294967 seconds (about 49 days). The default value of **0** (zero) means the idle timer will not expire, so the connection is permanently open.

line-name

Provide a name for the line so it can be easily identified. The **Remote Port Buffering** logging feature uses the **Line Name** when creating a file on the remote NFS server.

modem-name

The name of the predefined modem that is used on this line.

pages

For **DSLogin** line service, this is the number of video pages the terminal supports. Valid values are 1-7. The default is **5** pages.

parity

Specifies if you are using **Even**, **Odd**, or **No parity** on the line. If you want to force a parity type, you can specify **Mark** for 1 or **Space** for 0.

phone-number

The phone number to use when **Dial** is set to **Out**.

rev-sess-security

Enables/disables login/password authentication, locally or externally, on reverse Telnet connections. The default is **Off**.

sess-time

Enter a time, in seconds, for which the session timer will run. Use this timer to forcibly close the session (connection). When the session timer expires the Device Server will end the connection. The default value is **0** seconds so the port will never timeout. The maximum value is 4294967 seconds (about 49 days).

break

Specifies how a break is interpreted:

- **None**—The Device Server ignores the break key completely and it is not passed through to the host. This is the default setting.
- **Local**—The Device Server deals with the break locally. If the user is in a session, the break key has the same effect as a hot key.
- **Remote**—When the break key is pressed, the Device Server translates this into a telnet break signal which it sends to the host machine.
- **Brkintr**—On some systems such as SunOS, XENIX, and AIX, a break received from the peripheral is not passed to the client properly. If the client wishes to make the break act like an interrupt key (for example, when the stty options **-ignbrk** and **brkintr** are set).

flowin

Determines if input flow control is to be used. Default is **On**. This is active only when **Line Flow Control** is set to **Soft**, **Hard**, or **Both**.

flowout

Determines if output flow control is to be used. Default is **On**. This is active only when **Line Flow Control** is set to **Soft**, **Hard**, or **Both**.

hotkey-prefix

The prefix that a user types to lock a line or redraw the Menu. The default value is **hex 01**, which corresponds to **Ctrl-a (^a)** (hex value 02 would be Ctrl-b (^b), etc.):

- **^a l**—(Lowercase L) Locks the line until the user unlocks it. The user is prompted for a password (any password, excluding spaces) and locks the line. Next, the user must retype the password to unlock the line.
- **^r**—When you switch from a session back to the Menu, the screen may not be redrawn correctly. If this happens, use this command to redraw it properly.

You can use the **Hotkey Prefix** key to lock a line only when the **Line Lock** parameter is **On**.

initial

Specifies the initial interface a user navigates when logging into the line; either the **Menu** or a prompt for the **CLI**. The default is **CLI**.

keepalive

Enables a per-connection TCP keepalive feature; after approximately 3 minutes of network connection idle time, the connection will send a gratuitous ACK to the network peer, either ensuring the connection stays active OR causing a dropped connection condition to be recognised by the reverse raw service.

Applications using this feature need to be aware that there might be some considerable delay between a network disconnection and the port being available for the next connection attempt; this is to allow any data sent on prior connections to be transmitted out of the serial port buffer. Application network retry logic needs to accommodate this feature.

lock

When enabled, the user can lock his terminal with a password using the **Hotkey Prefix** (default Ctrl-a) **^a l** (lowercase L). The Device Server prompts the user for a password and a confirmation.

motd

Enables/disables the message of the day on the line.

user

For **DSLogin** line service, makes this a line that is dedicated to the specified user. Only this user will be able to log in on this line and they won't need to enter their login name - just their password.

nouser

Blanks out the User parameter, in case you want to change a dedicated user line to an undedicated line.

reset

Resets the terminal type connected to the line when a user logs out.

stop-bits

Specifies the number of stop bits that follow a byte.

term-type

Specifies the type of terminal connected to the line:

- **Dumb**
- **WYSE60**
- **VT100**
- **ANSI**
- **TVI925**
- **IBM3151TE**
- **VT320** (specifically supporting VT320-7)
- **HP700** (specifically supporting HP700/44)
- **Term1, Term2, Term3** (user defined terminals)

Set Line Interface

Description Configures line interface (hardware) parameters.

User Level Admin

Syntax

```
set line interface eia-232 [monitor-dcd on|off]
    [monitor-dsr on|off] [flow none|soft|hard|both]
    [speed 50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|
    19200|38400|57600|115200|230400]

set line interface eia-422 [flow none|soft|hard|both]
    [speed 50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|
    19200|38400|57600|115200|230400|460800|921600|1843200|3686400]

set line interface eia-485 [tx-driver-control auto|rts]
    [flow none|soft]
    [duplex full|duplex half [echo-suppression on|off]]
    [speed 50|75|110|134|150|200|300|600|1200|1800|2400|4800|9600|
    19200|38400|57600|115200|230400|460800|921600|1843200|3686400]
```

Options eia-232 | eia422 | 485

Specifies the type of line that is being used with the Device Server. Select either **EIA-232**, **EIA-422**, or **EIA-485**.

monitor-dcd

Specifies whether the RS-232 signal DCD (Data Carrier Detect) should be monitored. This is used with modems or any other device that sends a DCD signal. When it is monitored and the Device Server detects a DCD signal, the line service is started. Default is **Off**. If both **Monitor DCD** and **Monitor DSR** are enabled, both signals must be detected before the line service is started.

monitor-dsr

Specifies whether the RS-232 signal DSR (data set ready) should be monitored. This is used with modems or any device that sends a DSR signal. When it is monitored and the Device Server detects a DSR signal, the line service is started. Default is **Off**. If both **Monitor DCD** and **Monitor DSR** are enabled, both signals must be detected before the line service is started.

flow

Defines whether the data flow is handled by the software (**Soft**), hardware (**Hard**), or both (**Both**).

tx-driver-control

Used with a **EIA-485** serial interface, if your application supports **RTS** (Request To Send), select this option. Otherwise, select **Auto**. Default is **Auto**.

duplex

Specify whether the line is **Full Duplex** (communication both ways at the same time) or **Half Duplex** (communication in one direction at a time).

echo-suppression

This parameter applies only to **EIA-485 Half Duplex** mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enabled in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data, echo suppression should be **On**. The default is echo suppression **Off**.

speed

Specifies the baud rate of the line; keep in mind that speed is affected by the length of the cable.

Set Line Service

Description Sets the service for the line. For services that need further configuration, see [Line Service Commands on page 95](#) to find the Line Service that you want to configure.

User Level Admin

Syntax

```
set line service bidir <config_host> <server_port> <host_port>

set line service direct|silent raw <config_host> <host_port>

set line service direct|silent telnet <config_host> [<host_port>]

set line service reverse raw|telnet <server_port>

set line service dslogin|udp|vmodem
```

Options

bidir
Allows a bidirectional connection on a port.

<config_host>

The name of the target host.

<server_port>

The Device Server port number.

<host_port>

The port number the target host is listening on for incoming connections.

direct

Direct connections bypass the Device Server, enabling the user to log straight into a specific host. A direct connection is recommended where a user logging in to the Device Server is not required. It is also recommended where multiple sessions are not a requirement. The message **Press return to continue** is displayed on the user's screen. The user must press a key to display the host login prompt. The message is redisplayed on logout.

silent

Silent connections are the same as direct connections, except they are permanently established. The host login prompt is displayed on the screen. Logging out redisplay this prompt. Silent connections, unlike direct connections, however, make permanent use of pseudo tty resources and therefore consume host resources even when not in use.

raw

Creates a connection where no authentication takes place and data is passed unchanged.

telnet

Sets the line for a telnet connection.

reverse

Enables a TCP/IP host to establish a login connection on an external machine attached to a port. For example, to access machines like protocol converters, statistical multiplexors, or machines like routers, firewalls, servers, etc.

dslogin

The default connection. The Device Server displays a login on that line. For example, **DSLogin** is used when a System Administrator configures the Device Server or users starts a session(s) from the Device Server to hosts.

udp

Sets the line to listen for and/or send UDP data.

vmodem

The Device Server port behaves as if it were a modem to the attached device.

Set Termttype

Description Sets the terminal type for the current terminal session. term1, term2, and term3 refer to the user-uploadable custom terminal definitions. If these are not present, the default is wyse60.

User Level Restricted, Normal, Admin

Syntax `set termttype`
`[wyse60|vt100|ansi|dumb|tvi925|ibm3151te|vt320|hp700|term1|term2|term3]`

Option `wyse60|vt100|ansi|dumb|tvi925|ibm3151te|vt320|hp700|term1|term2|term3`

Specifies the type of terminal connected to the line:

- **Dumb**
- **WYSE60**
- **VT100**
- **ANSI**
- **TVI925**
- **IBM3151TE**
- **VT320** (specifically supporting VT320-7)
- **HP700** (specifically supporting HP700/44)
- **Term1, Term2, Term3 (user defined terminals)**

Show Line

Description Shows the line settings/information.

User Level Admin

Syntax `show line`

Line Service Commands**Set Telnet-Client**

Description Configures telnet parameters.

User Level Normal, Admin

Syntax `set telnet-client [termttype <terminal_name>] [line-mode on|off]`
`[map-cr-crlf on|off] [local-echo on|off] [echo <00-7f>]`
`[eof <00-7f>] [erase <00-7f>] [intr <00-7f>] [quit <00-7f>]`
`[escape <00-7f>]`

Options **termttype**

Type of terminal attached to this line; for example, ANSI or WYSE60.

line-mode

When **On**, keyboard input is not sent to the remote host until **Enter** is pressed, otherwise input is sent every time a key is pressed. Default is **Off**.

map-cr-crlf

Maps carriage returns (CR) to carriage return line feed (CRLF). The default value is **Off**.

local-echo

Toggles between local echo of entered characters and suppressing local echo. Local echo is used for normal processing, while suppressing the echo is convenient for entering text that should not be displayed on the screen, such as passwords. This parameter can only be used when **Line Mode** is **On**. Default is **Off**.

echo

Defines the echo character. When Line Mode is On, typing the echo character echoes the text locally and sends only completed lines to the host. This value is in hexadecimal with a default value of **5** (ASCII value **^E**).

eof

Defines the end-of-file character. When Line Mode is On, entering the eof character as the first character on a line sends the character to the remote host. This value is in hexadecimal with a default value of **4** (ASCII value **^D**).

erase

Defines the erase character. When Line Mode is Off, typing the erase character erases one character. This value is in hexadecimal with a default value of **8** (ASCII value **^H**).

intr

Defines the interrupt character. Typing the interrupt character interrupts the current process. This value is in hexadecimal with a default value of **3** (ASCII value **^C**).

quit

Defines the quit character. Typing the quit character closes and exits the current telnet session. This value is in hexadecimal with a default value of **1c** (ASCII value **FS**).

escape

Defines the escape character. Returns you to the command line mode. This value is in hexadecimal with a default value of **1d** (ASCII value **GS**).

Set UDP

Description	Configures the UDP settings for the serial line.
User Level	Normal, Admin
Syntax	set udp line entry 1 2 3 4 [both in out none <outbound_port>] [<start_ip_address>] [<end_ip_address>]
Options	both in out none The direction in which information is received or relayed: <ul style="list-style-type: none">● None—UDP service not enabled.● In—LAN to serial.● Out—Serial to LAN.● Both—Messages are relayed both directions. <outbound_port> The port that the Device Server will use to receive messages from or relay messages to servers/hosts. <start_ip_address> The first host IP address in the range of IP addresses (for IPV4 or IPV6) that the Device Server will listen for messages from and/or send messages to.

<end_ip_address>

The last host IP address in the range of IP addresses (for IPV4, not required for IPV6) that the Device Server will listen for messages from and/or send messages to.

Set Vmodem

Description Configures the vmodem settings for the serial line.

User Level Admin

Syntax `set vmodem line [failure-string <string>] [success-string <string>] [host <config_host>] [port <TCP_port>|0] [style numeric|verbose] [suppress on|off]`

Options **failure-string**

String that is sent to the serial device when a connection fails. If no string is entered, then the string **NO CARRIER** will be sent.

success-string

String that is sent to the serial device when a connection succeeds. If no string is entered, then the string **CONNECT** will be sent with the connecting speed, for example **CONNECT 9600**.

host

The target host name.

port

The port number the target host is listening on for messages.

style

One of the following:

- **Verbose**—Return codes (strings) are sent to the connected device.
- **Numeric**—The following characters can be sent to the connected device:
 - 1 Successfully Connected
 - 2 Failed to Connect
 - 4 Error

suppress

If set to **No**, connection success/failure indication strings are sent to the connected device, otherwise these indications are suppressed.

Show Interface

Description Shows the network interface information.

User Level Admin

Syntax `show interface [brief|ethernet]`

Show Telnet-Client

Description Shows the telnet client settings for a line.

User Level Admin

Syntax `show telnet-client`

Show UDP

Description Shows the UDP settings for the line.

User Level Admin

Syntax `show udp`

Show Vmodem

Description Show the vmodem settings for the line.

User Level Normal, Admin

Syntax `show vmodem`

Modem Commands

Add Modem

Description Adds a modem.

User Level Admin

Syntax `add modem <modem_name> <initialization_string>`

Options `<modem_name>`

The name of the modem. Do not use spaces.

`<initialization_string>`

The initialisation string of the modem; see your modem's documentation.

Delete Modem

Description Deletes a modem.

User Level Admin

Syntax `delete modem <config_modem_name>`

Option `<config_modem_name>`

You can see a the list of modems that can be deleted by typing `delete modem ?`.

Show Modems

Description Shows the Device Server modem table.

User Level Normal, Admin

Syntax `show modems`

Network Commands

SNMP Commands

The Device Server supports SNMP traps restart and SNMP community authentication error.

Add Community

Description Adds an SNMP community (version 1 and version 2).

User Level Admin

Syntax `add community <community_name> <config_host>|<ip_address>
none|readonly|readwrite`

Options `<community_name>`

A name that will be sent to the Device Server from an SNMP manager. This name will define the permissions of the manager.

`<config_host>|<ip_address>`

The host name of the SNMP community that will send requests to the Device Server.

The IP address of the SNMP manager that will send requests to the Device Server. If the address is 0.0.0.0, any SNMP manager with the **Community Name** can access the Device Server.

`none|readonly|readwrite`

Permits the Device Server to respond to SNMP requests by:

- **None**—There is no response to requests from SNMP.
- **Readonly**—Responds only to Read requests from SNMP.
- **Readwrite**—Responds to both Read and Write requests from SNMP.

Add Trap

Description Adds an SNMP trap.

User Level Admin

Syntax `add trap <trap_name> <config_host>|<ip_address>`

Options `<trap_name>`

An arbitrary trap community name.

`<config_host>|<ip_address>`

Defines the hosts (by IP address) that will receive trap messages generated by the Device Server. Up to four trap hosts can be defined.

Delete Community

Description Deletes an SNMP community (version 1 and version 2).

User Level Admin

Syntax `delete community <config_community_number>`

Option `<config_community_number>`

When you add an SNMP community, it gets assigned to a number. To delete the SNMP community, you need to specify the number of the community that you want to delete. To see which community is assigned to what number, type the `show snmp` command.

Delete Trap

Description Deletes an SNMP trap.

User Level Admin

Syntax `delete trap <config_trap_number>`

Option `<config_trap_number>`

When you add an SNMP trap, it gets assigned to a number. To delete the SNMP trap, you need to specify the number of the trap that you want to delete. To see which trap is assigned to what number, type the `show snmp` command.

Set SNMP

Description Configures SNMP settings.

User Level Admin

Syntax `set snmp [contact <string>] [location <string>]
[readonly user <username>] [readwrite user <username>]`

Options `contact`

The name and contract information of the person who manages this SMNP node.

`location`

The physical location of the SNMP node.

`readonly user`

(SNMP version 3) Specified user can only view SNMP variables.

`readwrite user`

(SNMP version 3) Specified user can view and edit SNMP variables.

Show SNMP

Description Shows SNMP settings, including communities and traps.

User Level Admin

Syntax `show snmp`

TFTP Commands

Set Server TFTP

Description Configures the Device Server's TFTP client settings.

User Level Admin

Syntax `set server tftp [retry <integer>] [timeout <integer>]`

Options `retry`

The number of times the Device Server will attempt to transfer (using TFTP) a file to/from a host. Enter a value between 0 and 5. The default is **5**. A value of **0** (zero) means that the Device Server will not attempt a retry should TFTP fail.

`timeout`

The time, in seconds, that the Device Server will wait for a successful transmit or receipt of TFTP packets before retrying a TFTP transfer. Enter a value between 3 and 10. The default is **3** seconds.

Hosts Commands

Add Host

Description Adds a host to the Device Server host table.

User Level Admin

Syntax `add host <hostname> <ip_address>`

Options `<hostname>`

The name of the host.

`<ip_address>`

The host IP address.

Delete Host

Description Deletes a host from the Device Server host table.

User Level Admin

Syntax `delete host <config_host>`

Option `<config_host>`

You can see a list of hosts that can be deleted by typing `delete host ?`.

Set Host

Description Configures a host in the Device Server host table.

User Level Admin

Syntax `set host <config_host> <ip_address>`

Options `<config_host>`

The name of the host.

`<ip_address>`

The host IP address.

Show Hosts

Description Shows the Device Server host table.

User Level Normal, Admin

Syntax `show hosts`

Gateway Commands

Add Gateway

Description Adds a gateway. You can configure up to twenty gateways.

User Level Admin

Syntax `add gateway <config_host> default`

`add gateway <config_host> host <dest_ip_addr>`

`add gateway <config_host> network
<dest_ipv4_addr>|<dest_ipv6_addr>
[<subnet_bits_0-32>|<subnet_bits_0-128>]`

Options `<config_host>`

You can specify up to twenty hosts to act as gateways in your network. Each gateway host must be defined in the Device Server host table.

default|host|network

Specify the type of gateway:

- **Default**—A gateway which provides general access beyond your local network.
- **Host**—A gateway reserved for accessing a specific host external to your local network.
- **Network**—A gateway reserved for accessing a specific network external to your local network.

`<dest_ip_addr>`

When the gateway is a **Host** or **Network** gateway, you must specify the IP address of the target host machine/network.

`<subnet_bits>`

When the gateway is a **Network** gateway, you must specify the subnet/prefix bits for that network. If the IP address is IPv4, then the Subnet/Prefix Bits range is 0-32. If the IP address is IPv6, then the Subnet/Prefix Bits range is 0-128.

Delete Gateway

Description Deletes a gateway.

User Level Admin

Syntax `delete gateway <config_gateway_host>`

Option `<config_gateway_host>`

You can view the configured gateways that can be deleted by typing `delete gateway ?`.

Set Gateway

Description Configures the gateway.

User Level Admin

Syntax `set gateway <config_gateway_host> default`

`set gateway <config_gateway_host> host <destination_ip>`

`set gateway <config_gateway_host>
network <dest_ipv4_addr>|<dest_ipv6_address>
[<subnet_bits_0-32>|<subnet_bits_0-128>]`

Options `<config_gateway_host>`

You can view the configured gateways that can be deleted by typing `delete gateway ?`.

default|host|network

Specify the type of gateway:

- **Default**—A gateway which provides general access beyond your local network.
- **Host**—A gateway reserved for accessing a specific host external to your local network.
- **Network**—A gateway reserved for accessing a specific network external to your local network.

`<dest_ip_addr>`

When the gateway is a **Host** or **Network** gateway, you must specify the IP address of the target host machine/network.

`<subnet_bits>`

When the gateway is a **Network** gateway, you must specify the subnet/prefix bits for that network. If the IP address is IPv4, then the Subnet/Prefix Bits range is 0-32. If the IP address is IPv6, then the Subnet/Prefix Bits range is 0-128.

Show Gateways

Description Shows configured gateways.

User Level Normal, Admin

Syntax `show gateways`

Logging Commands

Set Syslog

Description Configures the system log.

User Level Admin

Syntax `set syslog`
[**level** **emergency**|**alert**|**critical**|**error**|**warning**|**notice**|**info**|**debug**]
[**primary-host** <*config_host*>] [**secondary-host** <*config_host*>]

Options **level**

Choose the event level that triggers a syslog entry:

- **Emergency**
- **Alert**
- **Critical**
- **Error**
- **Warning**
- **Notice**
- **Info**
- **Debug**

When you select a **Level**, all the levels that appear above it in the list also trigger a syslog entry. For example, if you select **Error**, all **Error**, **Critical**, **Alert**, and **Emergency** events will be logged.

primary-host

The first preconfigured host that the Device Server will attempt to send system log messages to; messages will be displayed on the host's monitor.

secondary-host

If the Device Server cannot communicate with the primary host, then the Device Server will attempt to send system log messages to this preconfigured host; messages will be displayed on the host's monitor.

Show Syslog

Description Shows the syslog settings.

User Level Admin

Syntax `show syslog`

Time Commands

Set Time

Description Sets the Device Server's system clock.

User Level Admin

Syntax `set time <hh:mm[:ss]>`

Option <hh:mm[:ss]>

Sets the Device Server's system time, using military time format.

Show Time

Description Shows the Device Server's system clock.

User Level Normal, Admin

Syntax `show time`

Time/Date Setting Commands

Set Date

Description Sets the Device Server's system clock.

User Level Admin

Syntax `set date <dd/mm/yyyy>`

Show Date

Description Shows the date, according to the Device Server system clock.

User Level Normal, Admin

Syntax `show date`

Administration Commands

Bootup Commands

Reboot

Description Reboots the Device Server. You will be prompted to save configuration to FLASH, if there have been unsaved configuration changes.

User Level Admin

Syntax `reboot`

Reset

Description Resets the user profile or serial line to the default factory configuration.

User Level Admin

Syntax `reset user|line`

Reset Factory

Description Resets the Device Server to the factory configuration.

User Level Admin

Syntax `reset factory`

Save

Description Saves the configuration to FLASH.

User Level Admin

Syntax `save`

Set Bootup

Description Specifies remote the TFTP host and pathname for files to be loaded after a Device Server reboot.

User Level Admin

Syntax `set bootup firmware host <hostname> [file <path_filename>]`

`set bootup configuration host <hostname> [file <path_filename>]`

Options `firmware file`

The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the update software for the Device Server that will be loaded when the Device Server is rebooted.

configuration file

The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the configuration software for the Device Server that will be loaded when the Device Server is rebooted.

host

The host name or IP address of the server that contains the configuration or firmware file. If you use a host name, it must exist in the Device Server's host table or be resolved by DNS.

Show ARP

Description Shows the current contents of the ARP cache.

User Level Admin

Syntax `show arp`

Show Bootup

Description Shows the Firmware and Configuration files specified for Device Server bootup.

User Level Admin

Syntax `show bootup`

TFTP File Transfer Commands

Netload

Description Transfers a file from a remote host to the Device Server using the TFTP protocol.

User Level Admin

Syntax `netload firmware|configuration|customlang|term1|term2|term3
<hostname/ip_address> <filename>`

Options **firmware**

Specifies that you are going to download a new firmware file to the Device Server.

configuration

Specifies that you are going to download a new configuration file to the Device Server.

customlang

Specifies that you are going to download a custom language file to the Device Server.

term1|term2|term3

You can create and download up to three custom terminal definitions to the Device Server.

<hostname/ip_address>

The IP address or host name where the file you are downloading to the Device Server resides. If you are using a host name, it must be resolved in either the Device Server's **Host Table** or a DNS server.

<filename>

The complete path and file name (cannot use a drive letter) of the file you are downloading to the Device Server.

Netsave

Description Transfers a file from the Device Server to a remote host using the TFTP protocol.

User Level Admin

Syntax **netsave configuration|crash** *<hostname/ip_address>* *<filename>*

Options **configuration**

Specifies that you are going to upload a configuration file from the Device Server to the specified host or IP address.

crash

Specifies that you are going to upload a crash file from the Device Server to the specified host or IP address.

<hostname/ip_address>

The IP address or host name for where the file you are uploading from the Device Server is going. If you are using a host name, it must be resolved in either the Device Server's **Host Table** or a DNS server.

<filename>

The complete path and file name (cannot use a drive letter) for the file you are uploading from the Device Server.

MOTD Commands

Set MOTD

Description Specifies the server/file that contains the message of the day (MOTD) that is displayed when users log into the Device Server.

User Level Normal, Admin

Syntax **set motd host** *<hostname>* **file** *<path_filename>*

Options **host**

The host that the Device Server will be getting the Message of the Day file from.

file

The path and file name (do not use a drive letter), relative to the default path of your TFTP server software, of the file that contains a string that is displayed when a user connects to the Device Server.

Show MOTD

Description Show the Message of the Day (MOTD) settings.

User Level Admin

Syntax **show motd**

Statistic Commands

Configuration Statistics

Show Netstat

Description Shows currently used TCP/UDP sockets/ports.

User Level Admin

Syntax `show netstat [all] [listening] [tcp] [udp] [tcpv6] [udpv6]`

Options `all`

Displays all ports, including server (listening) ports; by default, listening ports are not displayed.

listening

Displays server (listening) ports; by default, listening ports are not displayed.

tcp

Displays TCP port statistics.

udp

Displays UDP port statistics.

tcpv6

Displays TCPv6 port statistics.

udpv6

Displays UDPv6 port statistics.

Show Netstat Statistics

Description Shows protocol (IP/ICMP/TCP/UDP) counters.

User Level Admin

Syntax `show netstat statistics [ip] [ipv6] [icmp] [icmpv6] [tcp] [udp] [udp6]`

Show Routes

Description Shows current information about IPv4 or IPv6 network routes.

User Level Admin

Syntax `show routes [ipv6]`

Run-Time Statistics

Delete Arp

Description Delete entries from the Device Server's ARP cache. Takes effect immediately; not related to configuration.

User Level Admin

Syntax `delete arp`

Show Arp

Description Shows the current contents of the ARP cache.

User Level Admin

Syntax `show arp`

Show Serial

Description Shows statistics on the serial port.

User Level Admin

Syntax `show serial`

Uptime

Description Displays the elapsed time (in days, hours, minutes, and seconds) since the last reboot/power cycle.

User Level Admin

Syntax `uptime`



Troubleshooting

Introduction

This chapter provides information that can help resolve problems with the Device Server.

Hardware Problems

If the Device Server Power/Ready LED is red and stays red for over 10 seconds, you have a hardware problem that is going to require factory service. If you purchased the Device Server less than 30 days before this problem appears, contact your distributor; otherwise, see the Perle web site (www.Perle.com) for factory service information. Note: no factory service can be done on a Device Server that has not been registered.

Communication Issues

General communication checks and practices are as follows:

- Are your cables connected and correctly configured? If you are using EIA-232, see [EIA-232 Cabling Diagrams on page 27](#) to verify that your cables are correctly configured.
- Ping your host? If you can ping but packet loss is reported, ping another host/device on the same network. This will tell you whether the problem is specific to the host/device or general to the network.
- After entering or changing IP information for your Device Server, *reboot* the Device Server (does not apply when using BOOTP or DHCP). Once the Device Server has rebooted, other network devices should be able to communicate with it (ping, telnet, etc.). Also, protocols such as ARP and proxy-ARP will work properly.
- Use the `show routes` command (command line only) or view the **Routes** statistics. Is there a route to the host?
- If the WebManager or DeviceManager cannot communicate with the Device Server, verify that the **Server Services HTTP** is enabled for WebManager and **DeviceManagerD** is enabled for DeviceManager.

Host Problems

Cannot access a host on a local network, verify:

- The network address is correct.
- The subnet mask is set correctly and reflects the network configuration.
- The broadcast address is set correctly and reflects the network configuration.

Cannot access a host on a remote network:

- Use the **show route** command to verify that there is a route to the remote host. If no gateway is specified, verify that a default gateway is specified. Ping the default gateway to check if it is working.
- Consider the situation beyond the gateway; for example, are intermediate gateways and the remote host available? Also, check the messages returned by the **ping** command; for example, that a particular host or gateway is unreachable.

Gateways added into the gateway table are ignored by the Device Server:

- Have you used BOOTP and entered a single static gateway in the bootptab file entry? If yes, the other gateways will be ignored.

Access to host lost after a few minutes.

- If the route to this host goes through routers, make sure those routers are all sending RIP packets across the networks.

Login Problems

You have lost or don't know your password (as Admin user).

- You must reset the Device Server to its factory default settings using the **Reset** switch on the rear panel. There is no procedure to access the Device Server without a password.

Problems with Terminals

The following section concerns problems with the appearance of data on your terminal screen.

The Device Server logs me out after a few minutes:

- Check the **Idle Timer** value set for the user. The default setting for the **Idle Timer** for all users is 0 seconds (does not timeout).

Corrupt data.

- Check your line settings (baud rate, stop bits, etc.)

Missing data.

- Verify that the same type of flow control is set in both your terminal and on the Device Server's port.

Error message not permitted on a dumb terminal after typing the CLI command screen.

- Set your **Line** to **Termtypes** VT100, ANSI or WYSE60 (or other form of terminal emulation, if you have downloaded one). The default line type in the Device Server is **Dumb**, which does not support the graphics characters necessary to view the text-based menus.

Screen corruption when using the text-based menu system.

- Verify that the terminal setup in the Device Server matches your terminal.
- Verify that entries in the term file match your terminal setup.
- If using a PC/computer, verify that the type of terminal emulation selected in your application matches those supported by the Device Server.

When using the function keys on your keyboard, nothing happens or your sessions keep swapping.

- Change your **Hotkey Prefix** character. The function keys on the keyboards of some terminals (like WYSE60) send character sequences which begin with **^a**; unfortunately, **^a** is also the default **Hotkey Prefix**, which you use to switch between sessions. A valid alternative would be **^b** (hex=02). If you are the system administrator, you can change any user's **Hotkey Prefix** character.

When using a downloaded terminal definition, you are having problems using arrow keys.

- Use Ctrl-K, Ctrl-J, Ctrl-H and Ctrl-L for up, down, left and right respectively.

When switching from a session back to the text menus, both screen images are superimposed.

- Press **^r** to redraw the screen.

INIT: Error in terminal file <filename>

- This error indicates that you have exceeded the 80 character limit for one or more of the terminal capabilities defined in the reported file.

INIT: Error on line *n* in terminal file <filename>

- You have omitted the = sign from the reported line.

Unknown IP Address

You have a Device Server already configured and you do know your password, but have lost, misconfigured, or don't know the IP address of the Device Server, and you cannot obtain a login.

- If the Device Server resides within the local network segment, you can use DeviceManager to find the Device Server.
- You can connect directly to the serial port of the Device Server, as explained in [Using a Direct Connection](#) on page 24.

DHCP/BOOTP Problems

Messages: host name too long or filename too long.

- The Device Server can only accept host names of 14 characters or file names of 64 characters, so verify that you are not attempting to pass a string that is longer than those maximums.

DHCP or BOOTP have been set up to configure my Device Server, but does not seem to have done anything.

- Check that the server DHCP/BOOTP service is set to on, if not set it to on and reboot.
- Check that your BOOTP server is configured for your Device Server or that your DHCP server has an active lease pool (scope) with at least 1 free IP address.

You observe TFTP errors when the Device Server boots, for example:

TFTP: File not found : filename

TFTP: Timed out

This has a number of causes, including:

- The file names you specified to DHCP/BOOTP do not exist or are in the wrong place.
- The server for any of the downloadable files in your bootfile has no TFTP server running.
- Verify that lease data in your DHCP server manager is correct.
- Reset or restart the DHCP server.

Language Problems

In a customised language, the text strings appear in the wrong place in the Menu, CLI, or WebManager.

- Check the original ASCII text file you used to translate to your customised language. The sequence of the line much match exactly (be aware that comments don't affect line sequence, but can affect the actual line that the strings appear on). So, if you strip out all comments, if the original file says line 1000 should be string **none**, then line 1000 (stripped of comments) should be the translated version of **none**.

Long Reboot Cycle

Rebooting the Device Server takes a long time.

If you are not using DHCP/BOOTP, disable this within the Server Services; otherwise, the Device Server waits to timeout for a request to DHCP/BOOTP.



Utilities

Introduction


This chapter provides information on the Trueport utility.

Trueport

Trueport is a com port redirector utility for the Device Server. It can be run in two modes:

- **Trueport mode**—This mode allows complete device control and operates exactly like a directly connected serial port. It provides a complete COM port interface between the attached serial device and the network.
- **Trueport Lite mode**—This mode provides a simple raw data interface between the device and the network. Although the port will still operate as a COM port, control signals are ignored. In this mode, the serial communications parameters must be configured on the Network Access Server.

You use Trueport when you want to connect extra terminals to a server using a Device Server rather than a multi-port serial card. Trueport is especially useful when you want to improve security, for example, to see which user is logged onto which terminal. When run on UNIX, Trueport allows you to print directly from a terminal to an attached printer (transparent printing). You can also remap the slow baud rate of your UNIX server to a faster baud rate, as shown below.

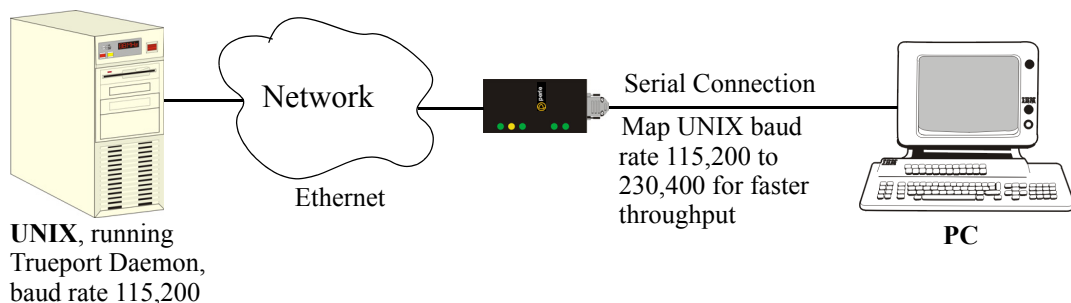

Currently, Trueport is supported on:

- AIX 4.x, 5.x
- Solaris (x86) 2.6, 2.7, 2.8, 2.9
- Solaris (SPARC) 2.8, 2.9, supporting both 32-bit and 64-bit modes
- SCO Unixware 7 (and SCO Open UNIX 8)
- SCO OpenServer 5.0x
- NCR SVR4 (Trueport Lite only)
- LINUX
- Windows 2000/Server 2003/NT/XP
- HPUX 10.x, 11.x

For more information, see the *Trueport User Guide* or the *Trueport Installation and Configuration Guide for Windows NT* on the CD-ROM.



Glossary

This chapter provides definitions for Device Server terms.

BOOTP (BOOTstrap Protocol)	An Internet protocol that enables a diskless workstation to discover its own IP address, the IP address of a BOOTP server on the network, and a file to be loaded into memory to boot the machine. This enables the workstation to boot without requiring a hard or floppy disk drive.
Community (SNMP)	An SNMP community is the group that devices and management stations running SNMP belong to. It helps define where information is sent.
DHCP (Dynamic Host Configuration Protocol)	A TCP/IP protocol that provides static and dynamic address allocation and management.
Direct Connection	Connections that bypass the Device Server enabling the user to log straight into a specific host. A direct connection is recommended where a user logging in to the Device Server is not required.
Ethernet	A high-speed (10Mbps,100Mbps) cable technology that connects devices to a LAN, using one or more sets of communication protocols.
Local Authentication	Uses the user ID and password stored within the Device Server User database.
Modem Initialization String	A series of commands sent to the modem by a communications program at start up. These commands tell a modem how to set itself up in order to communicate easily with another modem.
MOTD	Message of the day. This is defined by a file whose contents display when users log into the Device Server.
Multicast	The broadcasting of messages to a specified group of workstations on a LAN, WAN, or internet.
NAK (Negative Acknowledgment)	A communication control character sent by the receiving destination indicating that the last message was not received correctly.
Reverse Connection	Connections that originate from a host that go directly to a serial device through the Device Server.
Silent Connection	Silent connections are the same as direct connections except that they are permanently established. The host login prompt is displayed on the screen. Logging out redispays this prompt. Silent connections, unlike direct connections, however, make permanent use of pseudo tty resources and therefore consume host resources even when not in use.
SNMP (Simple Network Management Protocol)	A protocol for managing network devices.
Subnet/Prefix Bits	Identifies the device's IP address, which portion constitutes the network address and which portion constitutes the host address.



Index

A

admin

- default password 23
- level 39
- lost password 45

ARP-Ping, setting an IP address 25

B

bidir

- general 38
- parameters 59

binary configuration file 49

BOOTP

- parameters 45
- setting an IP address 24

bootup files, configuring 69

browsers, supported 18

C

cabling, EIA-232 27

CLI

- command shortcuts 76
- syntax 75

configuration files

- downloading to multiple servers 70
- editing 50
- formats 49

configuring hardware 34

configuring multiple Device Servers 70

connecting to Device Server

- setting IP address 23

connecting to the Device Server

- console mode 33
- serial mode 33

connections

- direct/silent/reverse 37

console mode 33

D

definitions 117

Device Servers, configuring multiple 70

DeviceManager

- overview 29
- setting an IP address 23

DHCP

- parameters 45
- setting an IP address 24

direct connect

- setting an IP address 24

direct connections 37

E

easy port access menu 40

ethernet configuration 34

F

factory defaults, resetting to 45

files, downloading 44

G

gateway parameters 67

H

hardware configuration 34

host parameters 65

I

IPv6, setting an IP address 25

J

jumpers

- line termination 22
- setting 22

L

language

- translating 42
- upgrading firmware 42

LED guide 25**levels, user** 39**line access parameters** 63**line parameters** 54**line termination, setting jumper** 22**M**

Menu

- conventions 31
- using 30

menu level 39**MIB** 31**mode**

- console 33
- serial 33

modem parameters 61**MOTD parameters** 69**N**

normal level 39**O**

online help, using 14**P**

parameters

- bidir 59
- BOOTP/DHCP 45
- bootup files 69
- gateways 67
- hardware 53
- hosts 65
- line 54
- line access 63
- modems 61
- MOTD 69
- raw 57
- server 51
- sessions 64
- SNMP 66
- syslog 68
- telnet 58
- TFTP 67
- UDP 59
- user 61
- vmodem 60

password

- admin default 23
- lost 45

pinouts 26**product repair** 16**R**

raw parameters 57**resetting to factory defaults** 45**restricted level** 39**reverse connections** 37**reverse sessions** 40**S**

serial configuration 35**serial mode** 33**server parameters** 51**services** 34

- bidir 38
- UDP 38
- vmodem 38

session parameters 64**sessions** 40**setting an IP address**

- ARP-Ping 25
- BOOTP/DHCP 24
- DeviceManager 23
- direct connect 24
- IPv6 25

silent connections 37**SNMP**

- parameters 66
- using 31

syslog parameters 68**T**

technical support

- contacting 15
- online 15
- product information 15
- product repair 16
- via the internet 15

telnet parameters 58**terminal definitions**

- creating 43
- downloading 43

text configuration file 49**TFTP** 44**TFTP parameters** 67**Trueport utility** 115

U

UDP

- configuring [38](#)
- parameters [59](#)

user levels [39](#)

user parameters [61](#)

user sessions [40](#)

utility

- Trueport [115](#)

V

virtual modem [38](#)

vmodem

- overview [38](#)
- parameters [60](#)

W

WebManager

- overview [30](#)
- using [30](#)

