

COMPETENCE B8920

Built In Fan/Steam Oven

Operating Instructions

Installation Instructions



Dear Customer,

Please read through these instructions carefully.

Pay special attention to the "Tips on Safety" on the first pages.

Please keep the instructions in a safe place and refer to them when necessary. If re-selling the appliance, pass the instructions on to the new owner.

The following symbols are used in the text:

Safety tips



Caution! Notes that warn of a risk of serious injury.



Caution! Notes that concern your personal safety.



Important: Notes that show how to avoid damage to the appliance.



Useful hints and tips



Environmental information

1. These numbers are used to list the various steps for operating the appliance.
2. ...
3. ...

Your local AEG SERVICE FORCE centre is available at all times to deal with technical problems (addresses and telephone numbers are listed under "Customer Service Centres").

For additional information, also see the section "Service".

Printed on paper produced from recycled materials.
Those who think ecologically, act ecologically...

Contents

Operating Instructions	5
Safety	5
Disposal	7
Description of the Appliance	8
General Overview	8
Control Panel	8
Oven Features	9
Oven Accessories	10
Before Using for the First Time	11
Setting the Clock	11
Initial Cleaning	12
Operating the Oven	13
The Electronic Oven Control	13
Display Field	13
Control Field	13
Oven Functions	15
Inserting the Oven Shelf, Tray, and All-Purpose Tray	19
Clock Functions	22
Child Safety Device	29
Oven Safety Cut-out	30
Steam Cooking Functions	31
Usage, Tables and Tips	33
Steam Cooking	33
Vigorous Steam Cooking	34
Vigorous Steam Cooking Table	35
Vigorous Steam and Fan Cooking in succession	36
Vigorous Steam and Fan Cooking in Succession Table	36
Steam Interval Cooking	37
Steam Interval Cooking Table	37
Baking	38
Baking Table	40
Tips on Baking	43
Pies and Gratin Table	44
Frozen Ready Meals Table	45

Roasting	46
Roasting Table	48
Meat Probe Table	50
Grill Sizes	51
Grilling Table	51
Defrosting	52
Defrosting table	52
Drying	53
Drying Table	53
Low Temperature Cooking	54
Low Temperature Cooking Table	54
Bio Functions	55
Making Yoghurt	55
Raising yeast dough	56
Making Preserves	57
Preserving Table	58
Cleaning and Care	59
Exterior of the Appliance	59
Oven Interior	59
Accessories	59
Side Rails	60
Steam Generation System	62
Oven Light	63
What to do if	65
Service Symbol and Error Codes	66
Technical Data	67
Oven Internal Dimensions	67
Regulations, Standards, Directives	67
Installation Instructions	68
Safety Instructions for the Installer	68
Index	74
Service & Spare parts	75

Operating Instructions



Safety

Electrical Safety

- This appliance must be connected by a **specially licensed technician** only.
- In the event of a fault or damage to the appliance, take out the fuses, or switch off.
- For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.
- **Repairs** to the appliance must be carried out by a **specially licensed technician** only. Considerable danger may result from incorrect repairs. If repairs become necessary, please contact our Customer Services, or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety during Operation

This appliance should be used only for the cooking, roasting, baking, etc. of household foods.

- Be careful if connecting electrical appliances to sockets near to this appliance. Electrical leads and cables should **not** be allowed to come near the hotplates or to become caught under the hot oven door.
- **Caution! Danger of burns!** When in use, the oven interior surfaces become very hot!
- **Caution! Do not in any circumstances open the oven door during steam cooking.** The escaping steam can cause moisture damage to furniture. Avoid any direct contact with escaping steam.
- If alcohol ingredients are placed inside the oven, these can give rise to a mildly inflammable air/alcohol mixture. In this case, be careful when opening the door. Do not use any sources of direct heat, sparks, or naked flames, near the oven.

Avoiding damage to the appliance:

- Do not lay aluminium foil, or place baking trays , pots, etc. on the oven floor, as the heat built up will damage the oven surface enamel.
- Fruit juices dripping from the baking tray will leave stains, which become indelible. For very moist cakes, use the all-purpose tray.
- Do not put any strain on the oven door.
- Never pour water directly into the oven. This could cause electrical faults, or damage to the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any inflammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven surface enamel.



Disposal

Disposing of the packaging material

All materials used can be fully recycled.

Plastics are marked as follows:

- >PE< for polyethylene, as used for the outer wrapping and the bags inside.
- >PS< for polystyrene foam, e.g., as used for the padding materials. They are completely free of CFCs.

Disposal of old appliances



Warning: Before disposing of old appliances please make them inoperable so that they cannot be the source of danger.


To do this, disconnect the appliance from the mains supply and remove the mains lead.

To protect the environment, it is important that worn out appliances are disposed of in the correct manner.


- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates or public refuse disposal sites from your local refuse department or council.

Description of the Appliance


General Overview

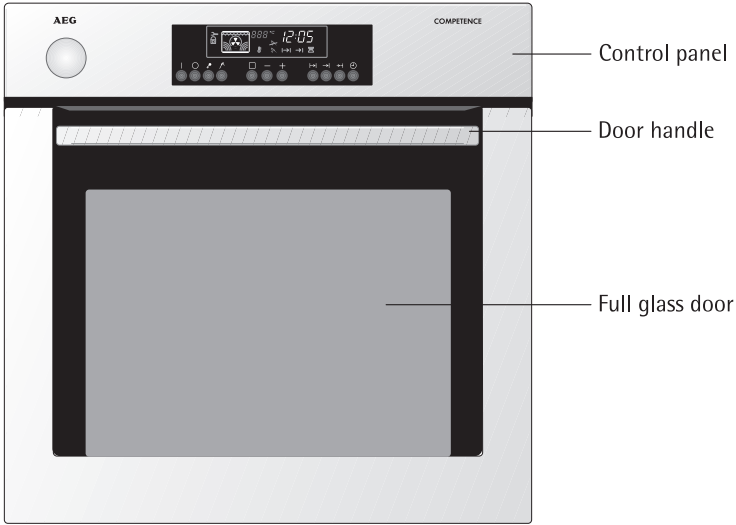

Control Panel

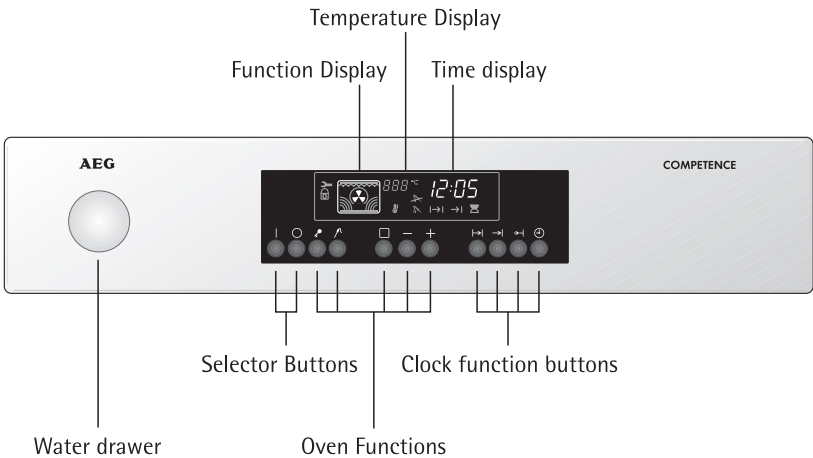


Oven Features

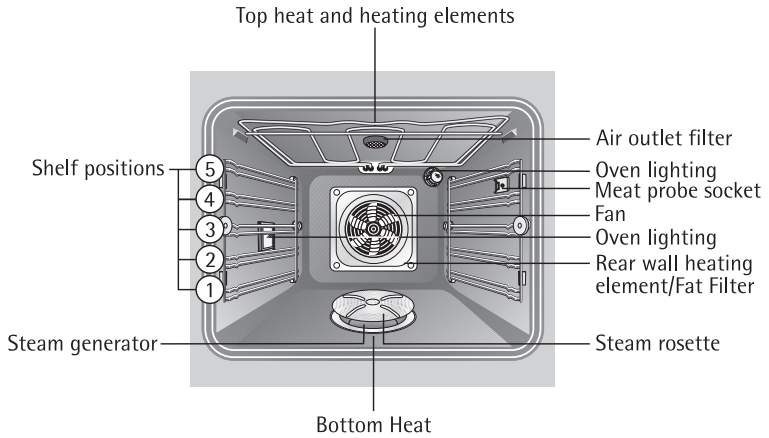

Oven Accessories


Combination shelf

For dishes, cake tins, roasting and grilling trays.

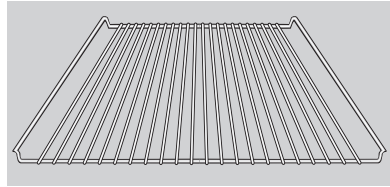


Baking Tray

For cakes and biscuits
(not suitable for steam cooking)

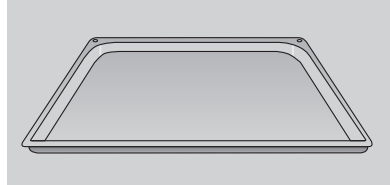


All-Purpose Tray

For roasting, or collecting meat juices or fat (not suitable for steam cooking)

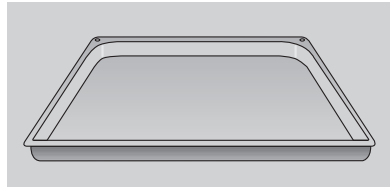


Inner tray

For fatty meat (for positioning in the All-Purpose tray, not suitable for steam cooking)

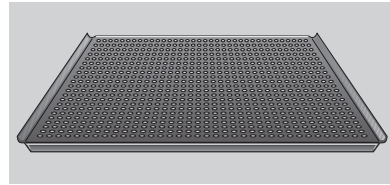

Meat Probe


Used to determine the condition of meats while cooking (not suitable for steam cooking)

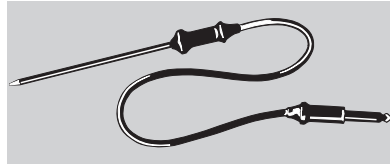


Before Using for the First Time

Setting the Clock


- i** The oven only operates when the clock has been set.
 «12:00» flashes on the clock display when the appliance is first connected, or after a power cut.

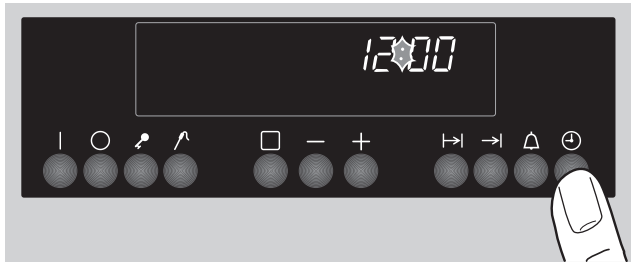

1. Press the CLOCK  button. «:» flashes.

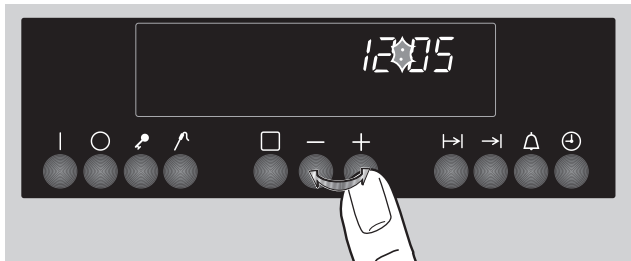

2. Start setting the current time within 4 seconds, using the + or — buttons.

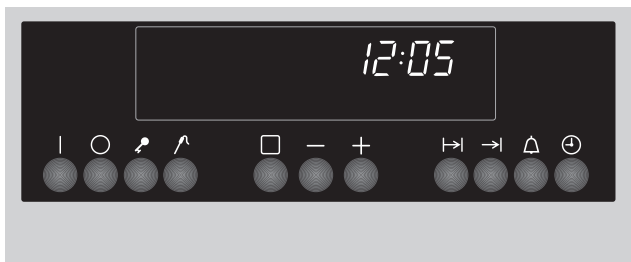

Wait for about 4 seconds. The clock stops flashing and shows the set clock time.

The appliance is now ready to use.

Initial Cleaning

You should clean the oven thoroughly before using for the first time.



Important: do not use sharp or abrasive cleaning materials!
These could damage the oven surface.




For ovens with metal fronts, use commercially available cleaning agents.

1. Press the ON | button: the oven light comes on.
Open the door.
2. Clean all oven trays and accessories, and the side rails, with warm water and washing-up liquid.
3. Wash the oven in the same way, with warm water and washing-up liquid, and leave to dry.
4. Wipe the front of the appliance with a damp cloth.


Operating the Oven

The Electronic Oven Control

Display Field

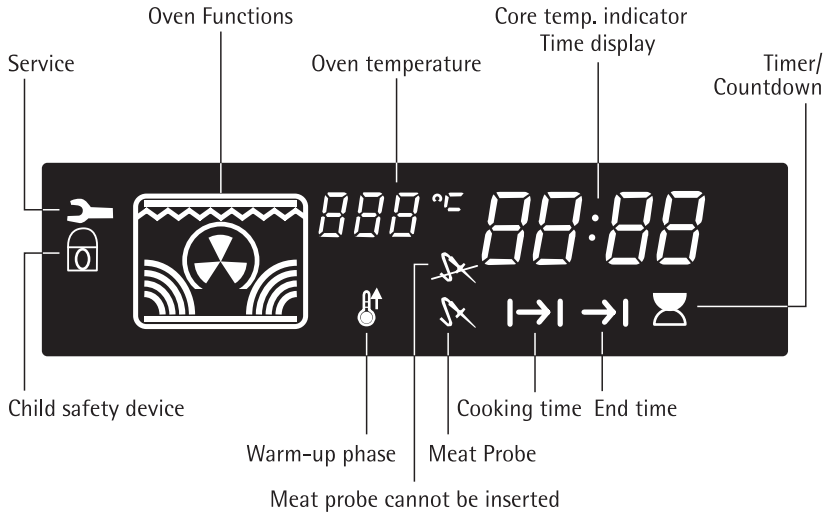

Control Field

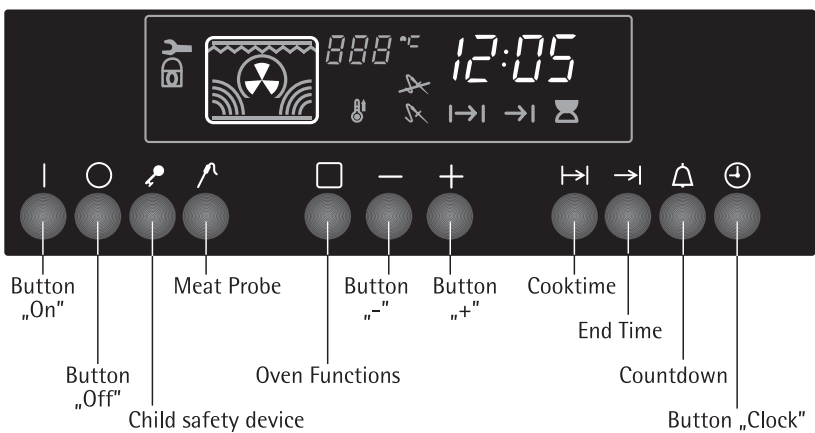



General Tips

- The sensors behind the glass panel react to a deliberate (not too short) touch with the fingertip on one of the touch-control buttons (dipped finger guide).

The following are ineffective:

- touching with the fingernail only,
 - putting the fingertip near the touch control button,
 - a short touch with the fingertip,
 - touching a touch-control button when wearing a glove.
-
- Always switch the oven on first with the ON | button.
Exception: COUNTDOWN 🔔.
 - Begin selecting the desired settings within 4 seconds. An audible signal confirms that the 4 seconds have elapsed.
When the desired function button has been pressed, new settings can be selected.
 - Three short audible signals indicate an incorrect setting. In this case, press the OFF ○ button and start again with the ON | button.
 - Switch off the oven with the OFF ○ button.

Oven Functions

The oven has the following functions:

Vigorous Steam Cooking

Fixed temperature setting: 96°C.

For vegetables, potatoes, rice, pasta or special side-dishes.

Steam generator and fan are on.

Steam Interval

Suggested temperature: 180°C.

For **baking, cooking** and warming up frozen or chilled foods.

Hot air and steam generator operate alternately.

Fan Cooking

Suggested temperature: 150°C.

For **baking on up to three oven levels**, and for **roasting**.

The fan and the rear heating element are on.

Pizza Setting

Suggested temperature: 230°C.

For **baking** cakes on **one oven level**, and pastries or biscuits that require more intensive browning and a crispy base or crust. This might include, for example, pizzas, quiche, fruit cakes, cheesecake, etc.

Bottom heat, rear heating element, and fan are on.

Rotitherm

Suggested temperature: 180°C.

For **roasting** larger joints of meat or poultry on **one oven level**.

This function is also suitable for **gratin** and **soufflés**.

The grill heating element and fan operate alternately.

 **Single Grill**

Suggested temperature: 230°C.

For **grilling** flat foods **placed in the centre of the shelf**, for example, steaks, escalopes, fish; or for **toasting**.

The grill heating element is on.

 **Dual Grill**

Suggested temperature: 230°C.

For **grilling** flat foods in **large quantities**, for example, steaks, escalopes, fish; or for **toasting**.

Top heat and grill heating element are on.

 **Conventional Use (Top/Bottom Heat)**

Suggested temperature: 200°C.

For **baking** and **roasting** on **one oven level**.

Top/bottom heating elements are on.

 **Defrost/ Dry**

Suggested temperature: 40°C.

For **defrosting** or **drying** herbs, fruit, and vegetables.

Bottom heating element and fan are on.

 **Low Temperature Cooking**


Temperature setting: 120/80°C.

For preparing especially tender, juicy roasts.


Rear heating element and fan are on.

Switching on the Oven Function

1. Switch on the oven with the ON | button.

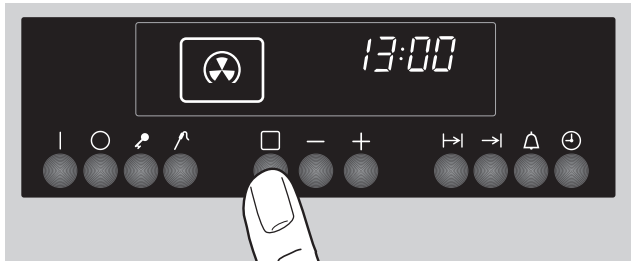


2. Press the OVEN FUNCTION button till the desired function is lit.

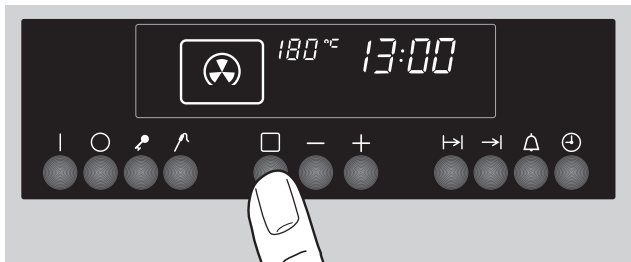


The symbol for the selected function appears in the display field.
A suggested temperature appears on the temperature display.

Changing the oven temperature

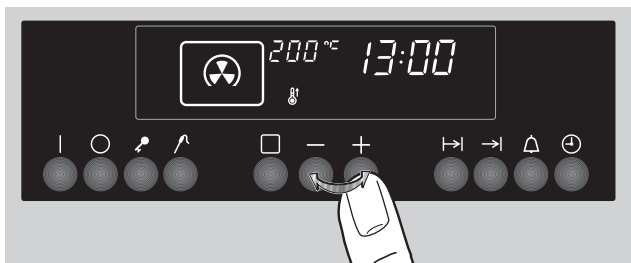


Press the + or - button, to raise or lower the temperature.
The setting changes in steps of 5°C.

Changing the oven function

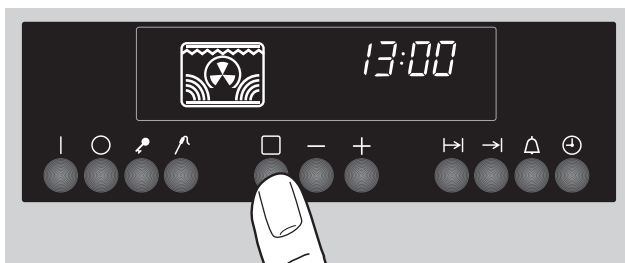

Press the OVEN FUNCTION button as often as necessary, till the desired function is lit.

Switching off the oven

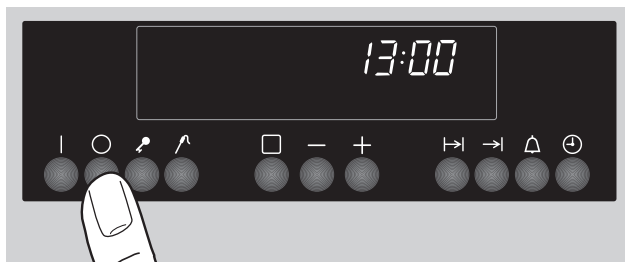

Switch off the oven with the OFF button.



Cooling fan

When the oven is switched on, the fan comes on automatically to keep the oven surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off.



Residual Heat Indicator

The residual heat is indicated until the temperature has gone down to 40°C.

Inserting the Oven Shelf, Tray, and All-Purpose Tray



Anti-tip device


All trays and shelves have a little curve on the left and right edges. This curve serves as an **anti-tip device** and must always be turned towards the back of the oven.

Inserting the shelf:

Insert the shelf at the desired level.

Inserting the tray and all-purpose tray:

Insert the tray and/or all-purpose tray at the desired level.

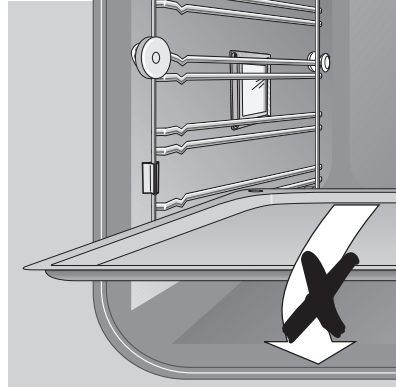

Meat Probe

For switching off the oven when the temperature at the centre of a roast reaches a set temperature.



The meat probe is used with the Conventional (Top/Bottom heating) , Fan Cooking  and Rotitherm  functions.



There are two temperatures to be set:

- Oven temperature (see Chapter "Type of use, Tables...: Roasting Tables")
- Core temperature (see Chapter "Type of use, Tables...: Meat Probe Table")




Important: Use only the meat probe supplied! If replacing, please use only original replacement parts.

1. Where possible, push the meat probe fully into the meat, so that the point is in the centre.
2. Plug the meat probe into the socket on the side of the oven, pushing in fully.
 is lit red.
3. Set the desired oven function and temperature.
 is lit white.

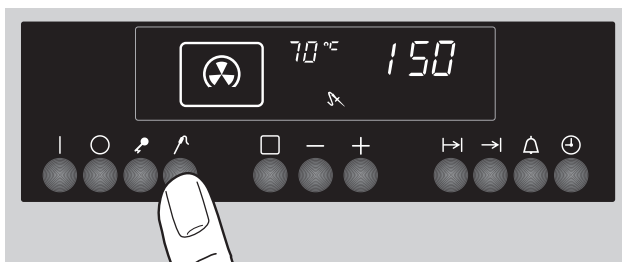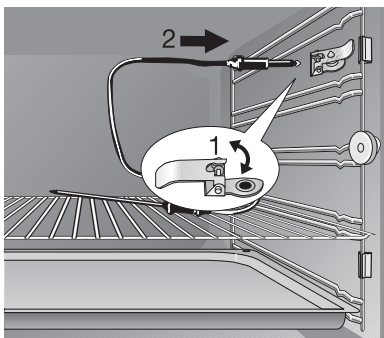

4. Press the MEAT PROBE  button.

The temperature display indicates 70°C as the **suggested temperature** for the **core temperature of the roast**.

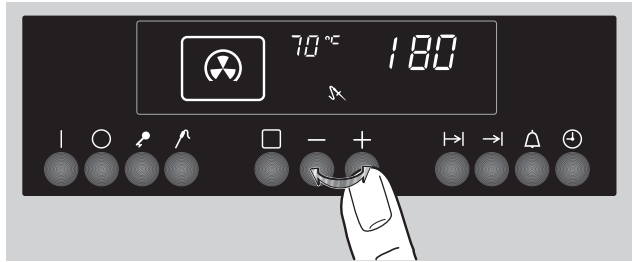



5. You can change the core temperature to the desired setting using the + or – buttons.

After about 5 seconds, on the **right** of the time display appears the current **core temperature** of the roast.



The core temperature is displayed starting from 30°C.

Checking or changing the core temperature

- Press the MEAT PROBE  button to show the set core temperature.
- Press the MEAT PROBE  button, and then press the + or – button several times to adjust the selected core temperature.

When the core temperature **detected** reaches the **selected** core temperature, an audible signal is sounded and the function display flashes. The heating is switched off automatically.

6. Stop the signal by pressing the + or – button.

Switch off the oven with the OFF  button.




Caution! The meat probe becomes very hot. Be careful when taking out the plug and extracting the meat probe!

7. Remove the meat probe plug from the socket, and take the meat out of the oven with the meat probe still inserted.



After 2 minutes, the appliance switches off automatically.

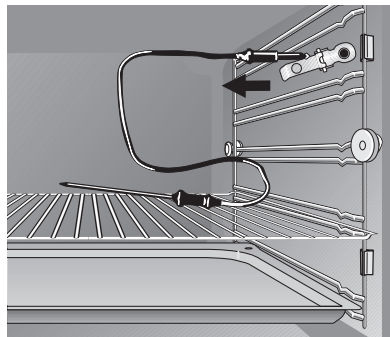

Clock Functions



Countdown

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

Cook time

To set how long the oven is to be in use.

End time

To set when the oven is to switch off again.

Time

To set, change or check the time.


(See also section "Before Using for the First Time".)






General Tips

- After a Clock function has been selected, the clock display flashes for about 4 seconds. While it flashes, the desired time can be set using the + or – buttons.
- When the desired time has been set, the display flashes again for around 4 seconds. The function concerned is then lit. The set time begins to run.
- Press any of the Clock function buttons to stop the audible signal.

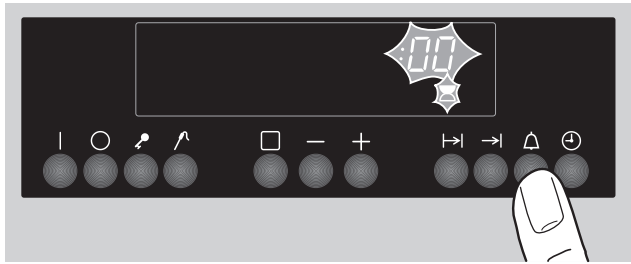
COUNTDOWN




1. Press the COUNTDOWN  button.
 flashes.

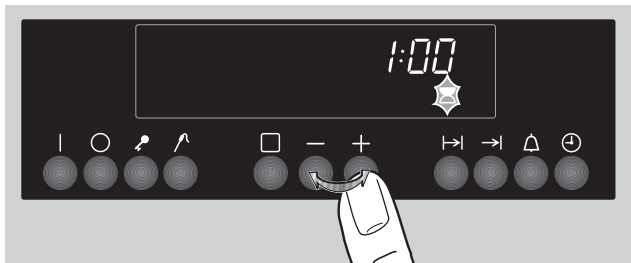

2. The desired Countdown time can be set with the + or – button, up to 9 hours 59 minutes).

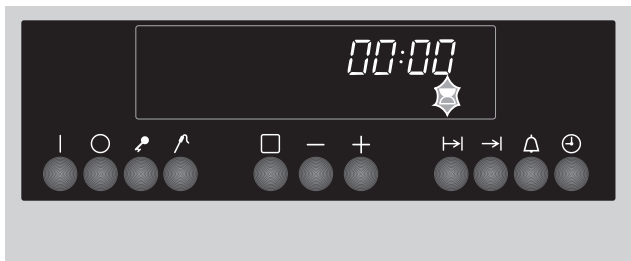




When the set time has elapsed,  flashes, and an audible signal is sounded for 2 minutes.


To turn off the audible signal:
 Press the COUNTDOWN  button.

COOK TIME


1. Switch on the appliance.
2. Select the desired oven function and temperature.

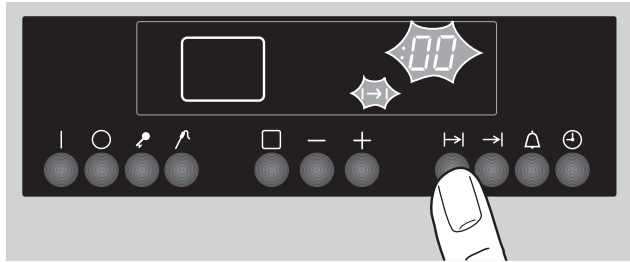


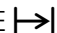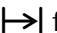
3. Press the COOK TIME  button.
 flashes.

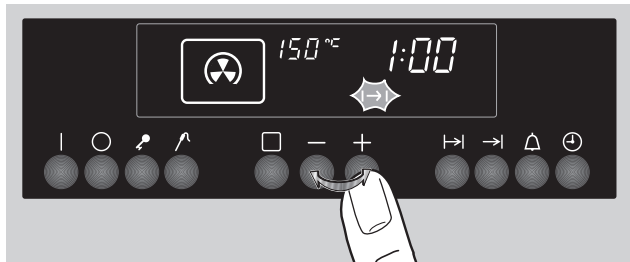

4. Set the desired cooking time with the + or - button.

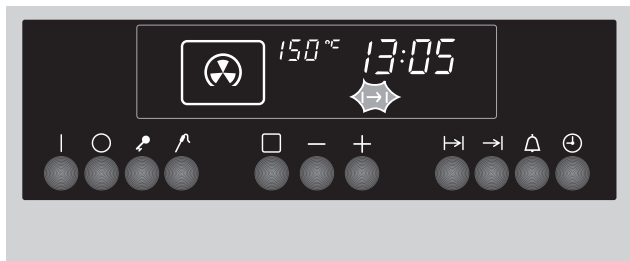


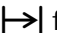When the time has elapsed,  flashes, an audible signal sounds for 2 minutes, and the oven switches itself off.


To turn off the audible signal:
Press the OFF  button.

END


1. Switch on the appliance.
2. Select the desired oven function and temperature.

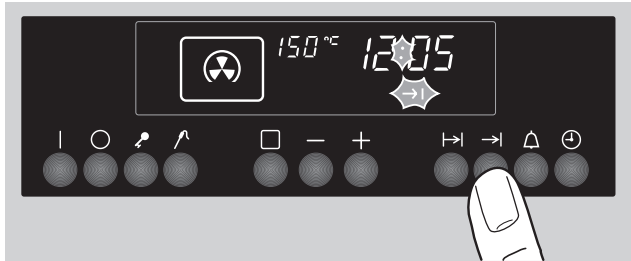

3. Press the END →| button.
→| and «:» are flashing.

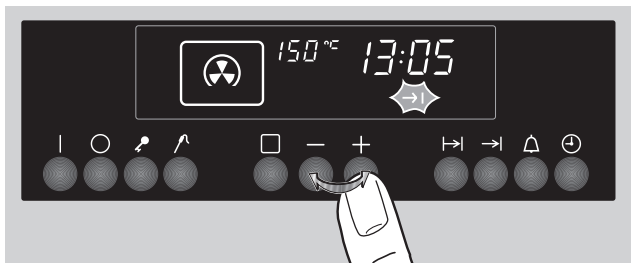

4. Set the desired switch-off time with the + or - button.

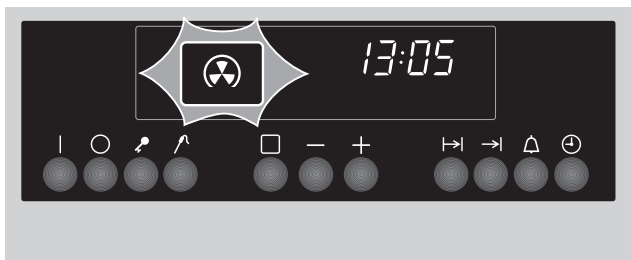


When the time has elapsed, the oven function flashes, an audible signal is sounded for 2 minutes, and the oven switches itself off.

To turn off the audible signal:
Press the OFF ○ button.


Combining the COOK TIME and END functions

i The COOK TIME $\text{⏸} \rightarrow$ and END \rightarrow functions can be combined, to switch the oven on or off automatically **at a later time**.


1. Switch on the appliance.
2. Select the desired oven function and temperature.

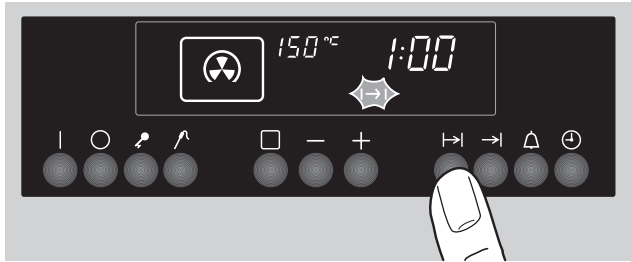


3. Using COOK TIME $\text{⏸} \rightarrow$, set the time required for cooking the dish concerned, for example, 1 hour.

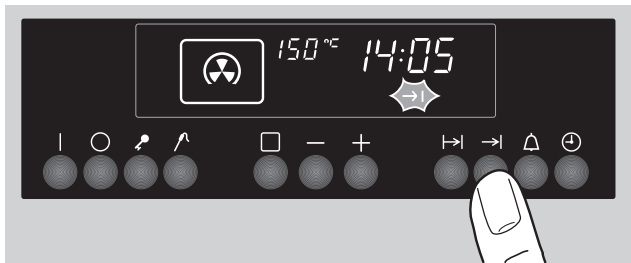

4. Using END \rightarrow , set the time at which the dish should be ready, for example, 14:05.

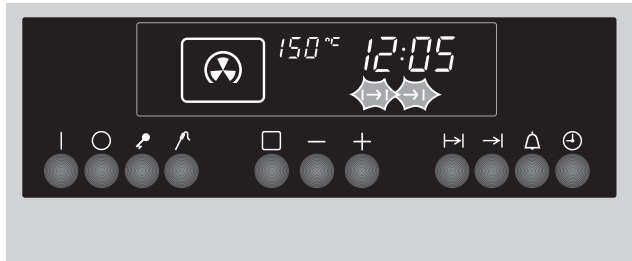


Oven functions COOK TIME $\rightarrow|$ and END $\rightarrow|$ are lit on the display, and the current time appears, in this case 12:05. The oven switches off automatically when the set time is reached, for example, 13:05.

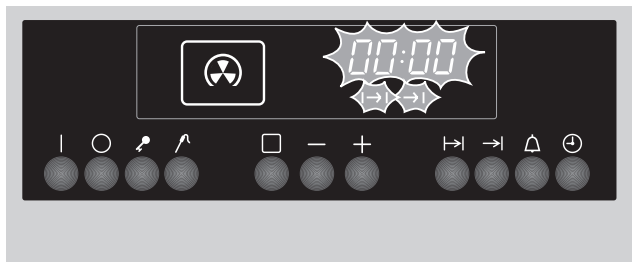


When the set cooking time has elapsed, an audible signal is sounded for 2 minutes and the oven switches itself off, for example, 13:05. COOK TIME $\rightarrow|$ and END $\rightarrow|$ appear flashing on the display.


Adjusting the clock TIME

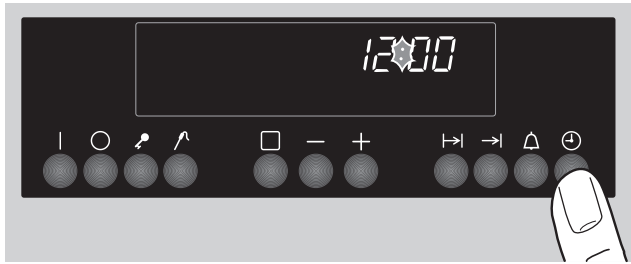

1. Press the CLOCK  button.

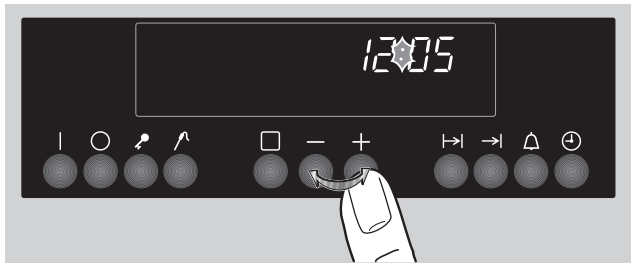

2. Set the current time with the + or – button.

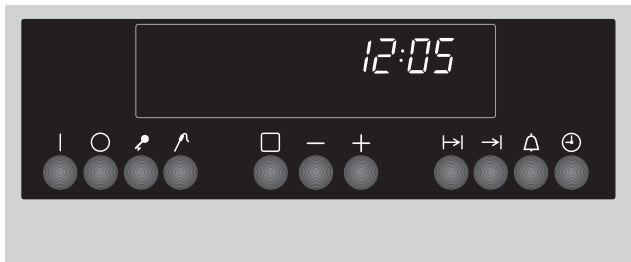

After about 4 seconds, the clock stops flashing and shows the set clock time.

The appliance is now ready to use.



The clock can only be adjusted if the oven is off and the Child Safety device has not been set.


Child Safety Device




The oven is fitted with a child safety device. When the child safety device is engaged, the oven cannot be switched on.





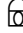
To engage the child safety device, **none** of the oven functions must be currently selected.

Activating the child safety device

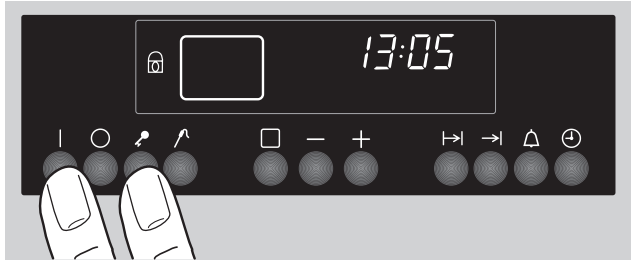

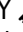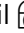1. Press and hold the CHILD SAFETY  button, then press and hold the ON | button for around 4 seconds, until  appears on the display field.
2. Switch off the oven with the OFF  button.
The child safety device is now engaged.

Releasing the Child Safety Device

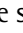Press OFF  and CHILD SAFETY  at the same time, until  disappears from the display.

The child safety device is now released, and the oven is ready for use.



Switching off the oven with the OFF  button does not release the Child Safety device.

Oven Safety Cut-out



If not switched off after a certain time, or if the temperature does not change, the oven switches off automatically.

The oven switches off at temperatures of:

< 120°C	after	16 hours
120°C up to < 230°C	after	8 hours
230°C or >	after	4 hours

Switching on after a safety cut-out

Switch the oven off completely.

It can then be switched on again.

Steam Cooking Functions



Important: The Steam functions must always be used in conjunction with the Clock functions COOK TIME $\rightarrow|$ or END $\rightarrow|$ (see Chapter "Clock functions: COOK TIME/END").



Important: Always use water **only!**

A dial tone is sounded when the water has been used up. When more water is added, the dial tone goes off again.



To prevent limescale forming, use softened water only, for example, through a water filtering appliance.




Due to the automatic steam dispersal period of about 5 minutes at the end of cooking time, and the warm-up period of around 2 minutes, settings under 10 minutes have little effect.



During steam dispersal, the oven door can mist up slightly. Steam will also escape when the door is opened. The slight misting on the control panel quickly evaporates.



Vigorous steam

1. The water (about 700 ml) is not poured directly into the steam generator, but **into the drawer** in the control panel.

The water supply lasts for around 30 minutes.

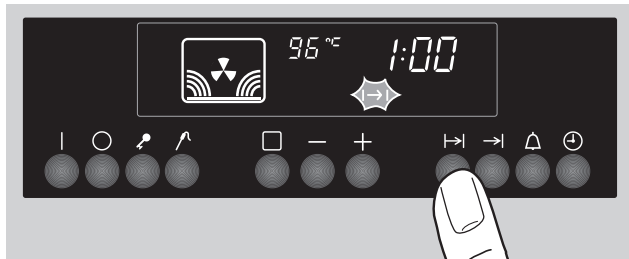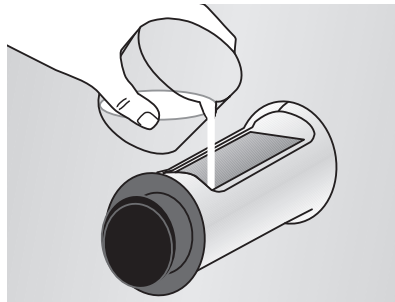2. Switch the oven on with the ON | button.
3. Using the OVEN FUNCTION button \square , select the Vigorous Steam  function.




4. Press the COOK TIME  or END  button and, using the + or — button, set the desired cooking time or switch-off time.

After about 2 minutes, the first steam appears.

A single audible signal indicates when the cooking temperature of around 96°C is reached.

Three signals are sounded at the end of cooking time.

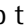5. Stop the signal and switch off the oven by pressing the OFF  button.

After the oven has cooled down, soak up any remaining water from the steam generator and wipe if necessary with a few drops of vinegar.


Leave the door open to let the oven dry out.



Steam Interval


Changing from hot air to steam takes place automatically.



1. The water (about. 250 ml) is not poured directly into the steam generator, but **into** the drawer in the control panel.

The water supply lasts for around 60 minutes.

2. Switch the oven on with the ON  button.

3. Using the OVEN FUNCTION button , select the Steam Interval function  and set the desired temperature with the + or — button.

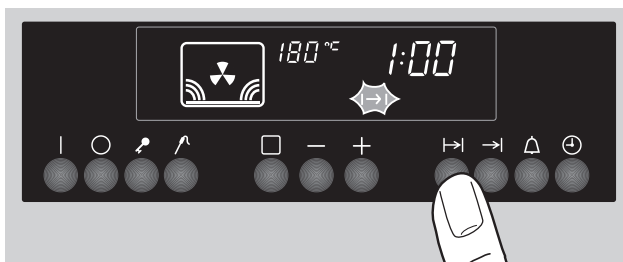

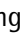

4. Press the COOK TIME  or END  button and, using the + or — button, set the desired cooking time or switch-off time.

Then proceed as for Vigorous Steam.

Usage, Tables and Tips

Steam Cooking

For steam cooking, use either the Vigorous Steam  or Steam Interval  oven functions.



Caution! During steam cooking, do not in any circumstances open the oven door !



Important: Always use water **only!**

Steam Cooking Dishes



- Ordinary oven tins, heat-resistant tins, and roasting dishes are suitable for steam cooking.
- Do not use enamelled baking tins!
Chrome steel food containers are also very suitable.

Oven levels

- The appropriate oven level can be found in the following table.
- Be careful to count oven levels starting from the bottom.



General Tips


- For cooking times longer than 30 minutes, or larger items, top up with water if necessary.
- With Vigorous Steam  and Steam Interval , **take out the grease filter**; otherwise, cooking time is longer.
- If not used for long periods, thoroughly rinse out the water drawer, connecting hoses, and steam generator (see Chapter "Care and Cleaning").

How to use the Steam Cooking Tables

The tables give the required temperature settings, cooking times, and oven levels for a selection of typical dishes.

- Temperatures and steam cooking times are for guidance only, as these will depend on the consistency and size of the food, quantity, and type of oven tin or dish.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- Unless otherwise stated, the values given in the tables assume that steam cooking is started with the oven cold.


Vigorous Steam Cooking

Vigorous Steam  cooking is suitable for all types of food, fresh or frozen. It can be used for cooking, defrosting, warming, poaching, or blanching vegetables, meat, fish, pastries, rice, sweet corn, semolina, and eggs.



A complete menu can be prepared at one time, on the serving dishes, irrespective of quantity or cooking time.



The following table provides a guide.

Vigorous Steam Cooking Table

Type of recipe	Vigorous Steam 	
	Oven Level	Time in mins.
Risotto	2	25-30
Rice	2	35-40
Jacket potatoes	2	35-45
Boiled potatoes	2	35-40
Sauerkraut	2	50-60
Ratatouille	2	25-30
Brussels sprouts	2	30-35
Cauliflower, whole	2	35-40
Tomatoes, whole	2	15-20
Beetroot, whole	2	60-70
Kohlrabi / Celery / Fennel, chopped	2	35-40
Courgettes, chopped	2	20-25
Carrots, chopped	2	30-35
Defrosting and cooking vegetables	2	30-35
Blanching beans	2	20-22
Blanching vegetables	2	12-15
Smoked loin of pork 600-1000 g	2	45-55
Meat loaf in 1 cm slices	2	20-25
Trout, 170-300 g	2	15-25
Eggs, soft	2	8-10
Eggs, medium	2	10-12
Eggs, hard	2	15-20

Vigorous Steam and Fan Cooking in succession


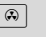




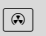



Vigorous Steam  and Fan Cooking  can be combined, using one after the other, then using them together to cook vegetables, meat, side-dishes in the oven, so that they will be ready to serve at the same time.

- Cook roast meats with the Fan Cooking  function.
- Prepare the vegetables and side-dishes, put in heat-proof dishes, and place in the oven.
- Start Vigorous Steam , and cook it all together till ready.




Before using the Vigorous Steam  function, the oven must be cooled to a temperature of around 85°C (check temperature display). For faster cooling, open the oven door.

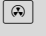Vigorous Steam and Fan Cooking in Succession Table

Type of Recipe	Vigorous Steam  and Fan Cooking  in Succession					
	Oven Function	Temp. in °C	Meat Time in mins.	Change oven function	Meat and side-dishes Time in mins.	Oven level
Roast meat 1 kg, Brussels sprouts, Polenta		180	50-60		30-35	1 3
Roast pork 1 kg, Potatoes, Vegetables, Sauce/gravy		180	40-50		30-35	1 3
Roast veal 1 kg, Rice, Vegetables		180	40-50		30-35	1 3
Chicken 1 kg Roast potatoes Tomatoes au gratin		190	40-50		30 10	1 4


Core temperature of meat should be around 60-63°C before switching to Vigorous Steam.

Steam Interval Cooking

Steam Interval  cooking is particularly suitable for roasting large joints of meat, and defrosting or re-heating food portions cooked previously.




Steam Interval Cooking Table

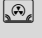Cooking on more than one oven level




Type of food	Steam Interval 		
	Temperature in °C	Time in mins.	Oven Level
Complete meal recombined 6 plates, dia. 24 cm	120	15-20	1, 3 and 5
Roast pork 1 kg	180	55-65	2
Roast meat 1 kg	180	55-65	2
Roast veal 1 kg	180	45-55	2
Meat loaf, uncooked, 500 g	180	30-40	2
Veal sausage	90	15-20	2
Frankfurter	90	15-20	2
Smoked loin of pork 600-1000 g	180	35-45	2
Chicken , 1 kg	180	45-55	2
Duck, 1.5-2 kg	180	55-65	2
Goose, 3 kg	170	130-170	1
Fish fillet	90	10-15	2
Potatoes au gratin Leek/potatoes au gratin	180	40-50	2
Pasta soufflé	180	35-45	2
Lasagne	180	45-50	2
Misc. types of bread 500-1000 g	190-200	50-60	2
Rolls 50-60 g	200-210	20-25	2

Cut open a whole roast before warming.



Baking

For baking, use either the Fan Cooking , Pizza setting  or Conventional  oven functions.


Baking Tins

- For Conventional  baking (Top/Bottom heat), use dark metal or coated tins.
- For Fan Cooking  or the Pizza setting , bright metal tins are also suitable.


Oven levels

- Conventional baking  is only possible on one level.
- With Fan Cooking , you can bake biscuits and cookies on up to 3 baking trays at the same time.


1 Baking tray:
for example, oven level 3

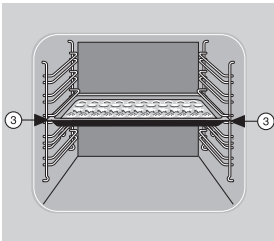


1 Baking tin:
for. example, oven level 1

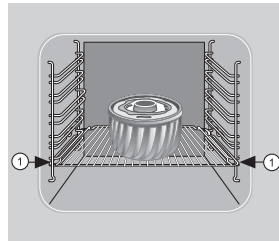

2 baking trays
Oven levels 1 and 4

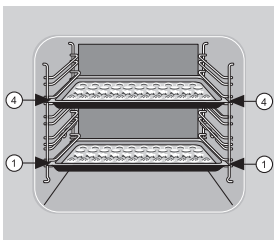

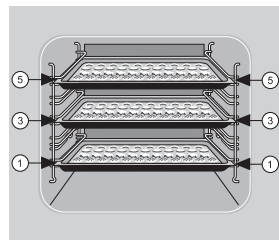

3 baking trays:
Oven levels 1, 3 and 5





General Tips

- **When baking, take out the grease filter**, as otherwise baking time is prolonged and top surfaces are browned unevenly.
- Be careful to count oven levels starting from the bottom.
- Insert the baking tray with the bevel at the front!
- Always place cakes in tins in the middle of the shelf.
- With Fan Cooking  or Conventional  baking, you can simultaneously bake two tins placed beside each other on the shelf. This does not significantly increase baking time.

How to use the Baking Tables

The tables give the required temperature settings, baking times, and oven levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, volume, and the type of baking tin.
- We recommend starting with the lower temperature, and then choosing a higher setting as necessary, for example, if a deeper browning is required, or baking time is too long.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist cakes (for example, pizzas, fruit cakes, etc.) are baked on one level.
- Cakes and pastries of different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.





With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to make use of the residual heat.

Unless otherwise stated, the values given in the tables assume that baking is started with the oven cold.

Baking Table

Baking on one level

Recipe type	Fan Cooking 		Conventional <input type="checkbox"/>		Time for both functions Hrs. mins.
	Oven level, from bottom	Tempera- ture °C	Oven level, from bottom	Tempera- ture °C	
Cakes in tins					
Ring cake or brioche	1	150-160	1	160-180	0:50-1:10
Short bread/'gallettes'	1	140-160	1	150-170	1:10-1:30
Sponge biscuit	1	150-160	1	160-180	0:25-0:40
Flan base - Short pastry	3	170-180	2	190-210 ¹	0:10-0:25
Flan base - Cake mixture	3	150-170	2	170-190	0:20-0:25
Apple pie	1	150-170	1	170-190	0:50-1:00
Spicy cakes and flans (for example, Quiche Lorraine)	1	160-180	1	190-210	0:30-1:10
Cheese cake	1	140-160	1	170-190	1:00-1:30
Cakes on baking trays					
Plaited buns/pastries	3	160-170	3	170-190	0:30-0:40
Christmas loaf	3	150-170 ¹	3	160-180¹	0:40-1:00
Bread (rye bread) at firstthen	1	180-200 ¹ 140-160	2	230¹ 160-180	0:20 0:30-1:00
Vol-au-vent / Eclairs	3	160-170¹	3	190-210	0:15-0:30
Swiss Roll	3	150-170 ¹	3	180-200¹	0:10-0:20
Dry streusel cake	3	150-160	3	160-180	0:20-0:40
Butter/sugar cakes,	3	160-170 ¹	3	190-210¹	0:15-0:30
Fruit cakes (made with yeast dough/ cake mixture) ²	3	150-170	3	170-190	0:25-0:50


Recipe type	Fan Cooking 		Conventional <input type="checkbox"/>		Time for both Hrs. mins.
	Oven level, from bottom	Tempera- ture °C	Oven level, from bottom	Tempera- ture °C	
Fruit cakes made with short pastry ¹	3	160-170	3	170-190	0:40-1:20
Tray cakes with delicate toppings/fillings for example, cottage cheese, cream, sugar and almond toppings)	-	.	3	160-180 ¹	0:40-1:20
Pizza (with many toppings) ²	1	180-200	1	190-210 ¹	0:30-1:00
Pizza (thin crust)	1	200-220	1	230 ¹	0:10-0:25
Unleavened bread	1	200-220	1	230 ¹	0:08-0:15
Tarts (CH)	1	180-200	1	210-230	0:35-0:50
Biscuits					
Short pastry biscuits	3	150-160	3	170-190 ¹	0:06-0:20
Dressed biscuits	3	140-150	3	160-180	0:10-0:40
Biscuits made with biscuit/cake mixture	3	150-160	3	170-190	0:15-0:20
Pastries made with egg white, meringues	3	80-100	3	100-120	2:00-2:30
Macaroons	3	100-120	3	120-140	0:30-0:60
Biscuits made with yeast dough	3	160-170	3	170-190	0:20-0:40
Puff pastries	3	160-170-180 ¹	3	190-210 ¹	0:20-0:30
Rolls	3	180-200 ¹	3	180-220 ¹	0:20-0:35

1) Pre-heat the oven!

2) Use the all-purpose tray!

The numbers printed in bold indicate the recommended **oven setting**.



Baking on more than one oven level

Recipe type	Fan Cooking 			Time Hrs.: mins.
	oven level, from bottom		Temperature in °C	
	2 levels	3 levels		
Cakes/pastries on baking tray				
Vol-au-vent / Eclairs	1/4	-	160-180¹	0:35-0:60
Dry streusel cake	1/4	-	140-160	0:30-0:60
Biscuits				
Short pastry biscuits	1/4	1/3/5	150-160	0:15-0:35
Dressed biscuits	1/4	1/3/5	140-150	0:20-0:60
Biscuits made with biscuit/ cake mixture	1/4	-	160-170	0:25-0:40
Pastries made with egg white, meringues	1/4	-	80-100	2:10-2:50
Macaroons	1/4	-	100-120	0:40-1:20
Biscuits made with yeast dough	1/4	-	160-170	0:30-0:60
Puff pastries	1/4	-	170-180¹	0:30-0:50
Rolls	1/4	-	180-190¹	0:30-0:55

Tips on Baking

Baking Results	Possible Cause	Remedy
The cake is not browned enough at the bottom	Wrong oven level	Place cake further in or, Place the shelf at a different level
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the dough	Use less liquid next time. Pay attention to mixing times, especially if using mixing machines
Cakes are too dry	Oven temperature too low	Set a slightly higher oven temperature next time
	Baking time too long	Set a shorter baking time
Cakes brown unevenly	Oven temperature too high and baking time too short	Set a slightly lower temperature and longer baking time
	Yeast is spread unevenly	Spread the dough evenly on the baking tray
	Grease filter is inserted	Take out the grease filter
Baking time too long	Temperature too low	Set a slightly higher oven temperature next time
	Grease filter is inserted	Take out the grease filter





Pies and Gratin Table

	Conventional 		Rotitherm 		Time
	Shelf position from bottom	Temp. °C	Shelf position from bottom	Temp. °C	Hrs: Mins.
Pasta bake	1	180-200	1	160-170	0:45-1:00
Lasagne	1	180-200	1	160-170	0:25-0:40
Vegetables au gratin ¹	1	200-220	1	160-170	0:15-0:30
Pizza baguettes ¹	1	200-220	1	160-170	0:15-0:30
Sweet soufflés	1	180-200	-	-	0:40-0:60
Fish pies	1	180-200	1	160-170	0:30-1:00
Stuffed vegetables	1	180-200	1	160-170	0:30-1:00

1) Pre-heat the oven.

Information printed in bold type indicates the **preferred oven function** for the dish.

Frozen Ready Meals Table



Food to be cooked	Shelf position from bottom	Oven function	Temperature	Time
Frozen pizza	3	Conventional 	in accordance with the maker's instructions	in accordance with the maker's instructions
Chips ¹ (300-600 g)	3	Rotitherm 	200-220 °C	15-25 Mins.
Baguettes	3	Conventional 	in accordance with the maker's instructions	in accordance with the maker's instructions
Fruit flan	3	Conventional 	in accordance with the maker's instructions	in accordance with the maker's instructions

1) Comment: Turn chips 2-3 times during cooking.



When frozen foods are used the trays inserted may distort during cooking. This is because of the large differences in temperature between the frozen item and the oven. Once the trays have cooled the distortion will disappear again.

Roasting

For roasting, use either the Rotitherm  or Conventional  oven functions.

Roasting dishes

- Any heat-resistant ovenware is suitable for roasting (please read the manufacturer's instructions).
- for roasting dishes with plastic handles, make sure that these are heat-resistant (please read the manufacturer's instructions).
- Large roasts can be **placed directly in the all-purpose tray, or on the shelf with the all-purpose tray placed underneath**, (for example, turkey, goose, 3-4 chickens, 3-4 knuckles of veal).
- For lean meats, we recommend **roasting these in a casserole with a lid** (for example, veal, braised beef, deep-frozen meats). This makes the meat juicier.
- To make crackling, meats can be roasted in the **casserole without the lid** (for example, pork, mince, lamb, mutton, duck, knuckles of veal, chicken, small poultry, roast beef, fillet of beef, game fowl).





Tip: Roasting inside ovenware keeps the oven cleaner!

Oven levels

The appropriate oven level can be found in the following table.

How to use the Roasting Table

The table gives the required temperatures, cooking times, and oven levels for various types of meat. These are for guidance only.

- We recommend cooking meat and fish **from 1 kg in weight** in the oven.
- In general, the Conventional  oven function is particularly suitable for lean meats and fish. For all other types of meat, we recommend using the Rotitherm  oven function.
- To prevent meat juices or fat from burning and sticking to the dish, we recommend adding some liquid.
- Turn the meat as required (at about 1/2 - 2/3 of cooking time).



Tip: Baste large roasts and poultry with their juices several times while roasting. This will give better results.



Switch the oven off 10 minutes before the end of roasting time, to make use of the residual heat.

Roasting Table

Type of Meat	Quantity	Conventional <input type="checkbox"/>		Rotitherm <input checked="" type="checkbox"/>		Time
	Weight	Oven Level from Bottom	Temperature °C	Oven Level from Bottom	Temperature °C	Hrs. mins.
Beef						
Pot roast	1-1.5 kg	2	200-230	-	-	2:00-2:30
Roast beef or fillet						each cm. thick
- inside raw	each cm. thick	2	230 ¹	2	190-200	0:05-0:06
- inside rare	each cm. thick	2	230 ¹	2	180-190	0:06-0:08
- well done	each cm. thick	2	210-230 ¹	2	170-180	0:08-0:10
Pork						
Shoulder, Neck, Ham	1-1.5 kg	2	210-220	2	160-180	1:30-2:00
Cutlet, Loin	1-1.5 kg	2	180-190	2	170-180	1:00-1:30
Meat loaf	750 g-1 kg	2	170-180	2	160-170	0:45-1:00
Knuckles of pork (pre-cooked)	750 g-1 kg	2	210-220	2	150-170	1:30-2:00
Veal						
Roast veal	1 kg	2	210-220	2	160-180	1:30-2:00
Knuckles of veal	1.5-2 kg	2	210-225	2	160-180	2:00-2:30
Lamb						
Leg of lamb, Roast lamb	1-1.5 kg	2	210-220	2	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg	2	210-220	2	160-180	1:00-1:30

Type of Meat	Quantity	Conventional <input type="checkbox"/>		Rotitherm <input type="checkbox"/>		Time
	Weight	Oven Level from Bottom	Temperature °C	Oven Level from Bottom	Temperature °C	Hrs. mins.
Game						
Chine of hare, Leg of hare	up to 1 kg	3	220-230¹	3	160-170	0:25-0:40
Saddle of venison	1.5-2 kg	2	210-220	2	160-180	1:15-1:45
Haunch of venison	1.5-2 kg	2	200-210	2	160-180	1:30-2:15
Poultry						
Poultry portions 4-6 pieces	each 200-250g	3	220-230	3	180-200	0:35-0:50
Chicken halves 2-4 pieces	each 400-500 g	3	220-230	3	180-200	0:35-0:50
Chicken, Fatted chicken	1-1.5 kg	2	220-230	2	170-180	0:45-1:15
Duck	1.5-2 kg	2	210-220	2	160-180	1:00-1:30
Goose	3.5-5 kg	2	200-210	2	150-160	2:30-3:00
Turkey	2.5-3.5 kg 4-6 kg	2	200-210 180-200	2	150-160 140-150	1:30-2:00 2:30-4:00
Fish (steamed)						
Whole fishes	1-1.5 kg	2 / 3	210-220	2 / 3	160-170	0:45-1:15



1) Pre-heat the oven.

Information printed in bold indicates the **best oven function**.

Meat Probe Table

Food to be Cooked	Meat Core Temperature
Beef	
Pot roast	90 - 95 °C
Rib steak or fillet steak rare	45 - 50 °C
medium	60 - 65 °C
well done	75 - 80 °C
Pork	
Shoulder of pork, ham joint, neck	80 - 82 °C
Chop (saddle), smoked pork loin	75 - 80 °C
Meat loaf	75 - 80 °C
Veal	
Roast veal	75 - 80 °C
Knuckle of veal	85 - 90 °C
Mutton / lamb	
Leg of mutton	80 - 85 °C
Saddle of mutton	80 - 85 °C
Roast lamb, leg of lamb	75 - 80 °C
Game	
Saddle of hare	70 - 75 °C
Leg of hare	70 - 75 °C
Whole hare	70 - 75 °C
Saddle of venison	70 - 75 °C
Leg of venison	70 - 75 °C

Grill Sizes

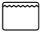For grilling, use either the Single Grill  or Dual Grill  oven functions with the 230°C temperature setting.



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated for 3 minutes!**

Ovenware for grilling

- For grilling, use the oven shelf with the all-purpose tray placed underneath.

Oven Levels

- For grilling flat foods, **the 4th oven level** is normally used.

How to use the Grilling Table

These grilling times are for guidance only, and will depend on the type and quality of the meat, or fish.


- Grilling is particularly suitable for flat pieces of meat or fish.
- Turn the grilled food at about half way through the grilling time.

Grilling Table

Item	Oven Level from Bottom	Grilling time	
		1st Side	2nd Side
Rissoles	4	8-10 Min.	6-8 Min.
Pork fillet	4	10-12 Min.	6-10 Min.
Sausages	4	8-10 Min.	6-8 Min.
Beef steaks, Veal steaks	4	6-7 Min.	5-6 Min.
Fillet of beef (about 1 kg)	3	10-12 Min.	10-12 Min.
Toast ¹	3	2-3 Min.	2-3 Min.
Toast with topping	3	6-8 Min.	-

1) Use the shelf without the all-purpose tray.

Defrosting

For defrosting, use the Defrost/Dry oven function  with the 40°C temperature setting.

Defrosting dishes

- Unpack the food and set it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.

Oven levels

- For defrosting, place the shelf in the oven at the first level.

How to use the Defrosting Table

The following table provides a guide for defrosting times.

Defrosting table

Item	Defrosting time (mins).	Re-heating time (mins).	Comments
Chicken , 1000 g	100-140	20-30	Set the chicken on an overturned saucer placed on a large plate. Half way through cooking time, turn the chicken, or cover with foil.
Meat, 1000 g	100-140	20-30	Half way through cooking time, turn over, or cover with foil.
Meat, 500 g	90-120	20-30	Half way through cooking time, turn over, or cover with foil.
Trout, 150 g	25-35	10-15	Do not cover.
Strawberries, 300 g	20-30	10-20	Do not cover.

Drying

For drying, use the Defrost/Dry  oven function.

Defrosting ovenware

- Use the shelf or baking tray, spread with grease-proof or baking paper.

Oven levels

- You can dry food on 2 oven levels at the same time.
- Place the shelf or baking tray on the **1st and 4th levels from the bottom**.


How to use the Drying Table

- Distribute the food evenly over the shelf or baking tray.
- At half way through the time, turn the food.
- Take the food out when no more juice is coming out, and while it is still bendable.


Drying Table


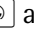

Food	Temperature °C	Time Hrs.
Vegetables		
Beans	75	6 - 8
Hot peppers (sliced)	75	6 - 8
Vegetables for soup	75	5 - 6
Mushrooms	50	6 - 8
Herbs	40 - 50	2 - 3
Fruits		
Damson plums	75	8 - 10
Apricots	75	8 - 10
Apple segments	75	6 - 8
Pears	75	6 - 9

Low Temperature Cooking


With the Low Temperature cooking  $L T^{\circ}C$ function, meat becomes fine and tender, and stays especially juicy.

1. Switch the oven on with the ON | button.

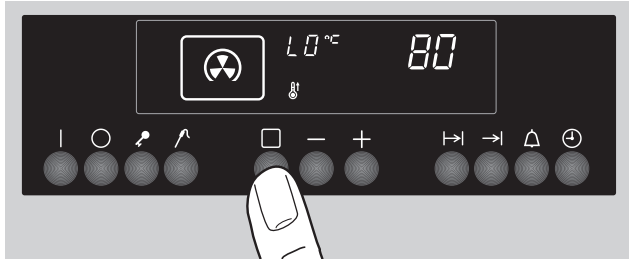

2. With the OVEN FUNCTION button  select the Low Temperature Cooking oven  $L T^{\circ}C$ function. The  and $L T^{\circ}C$ symbols appear on the display.




The first 10 minutes of the programme are used to heat the empty oven to 120°C. The pre-heating time is indicated on the time display. The  symbol is also lit.

When the pre-heating time is completed, an audible signal is sounded. The oven switches automatically to 80°C.

3. In the meantime, sear the meat in the tray.
4. Place the meat on a roasting dish, or directly on the oven shelf with the all-purpose tray underneath, and place in the pre-heated oven.
For cooking times, see Low Temperature Cooking Table.

Low Temperature Cooking Table

LOW TEMPERATURE COOKING  $L T^{\circ}C$					
Type of meat	Weight kg	Pre-heating	Cooking		
		Temperature °C	Temperature °C	Time mins.	Oven level
Roast beef	1-1,5	120	80	90-100	2
Fillet of beef	1-1,5	120	80	90-100	2
Roast veal	1-1,5	120	80	90-100	2

Bio Functions

The low temperatures that can be set with this oven can be used to make yoghurt, or to raise yeast dough.



Important: the suggested temperatures have to be changed with all Bio functions!



Low temperature cooking uses up to 20 % less energy than conventional cooking.

Making Yoghurt

For making yoghurt, use the Conventional oven setting.

Ovenware

- To hold the yoghurt, use cups or glasses of around 150 ml capacity, covered with foil or a lid.

Oven level

- Place the shelf on the **3rd level from the bottom**.

1. Bring some milk to the boil (for example, 1 Litre for 6-8 servings).
2. Let the milk cool to 40°C.
3. Stir in a carton of natural yoghurt (about 150 g), then pour into containers and cover.
4. Place the containers on the shelf.
5. Select the Conventional oven function and **change the suggested temperature to 40°C**.
6. After about 5-8 hours (or when it has set), take out the yogurt.

Raising yeast dough

For raising yeast dough, use the Conventional oven setting.


Ovenware

- To contain the dough, use a bowl that is heat-resistant to 40°C.

Oven level

- Place the shelf on the **2nd. level from the** bottom.
1. Put the dough in the bowl, cover with transparent film, and place on the shelf.
 2. Select the Conventional oven function and change the suggested temperature **to 40°C**.
 3. Leave the dough till it has doubled in volume.

Making Preserves

For preserving, use the Steam Interval  oven function.

Preserving Jars

- For preserving, use only commercially available preserve jars, of the same height.



Jars with twist-off or bayonet type lids, and metal tins, are not suitable.

Oven levels

- For preserving, use the **lowest oven level**.

Tips on Preserving

- Use the all-purpose tray. This has enough room for up to six preserving jars of one litre capacity each.
- The preserving jars should all be filled to the same level, and clamped shut.
- Place the preserving jars on the all-purpose tray so that they are not touching each other.

Preserving Table

Preserve	Temperature °C	Leave until drops form mins.	Continue cooking at 100°C mins.	Leave to stand with the oven off mins.
Soft fruit				
Strawberries, Blueberries, Raspberries, Ripe gooseberries	140-150	35-45	---	---
Unripe gooseberries	140-150	35-45	15	---
Stone-fruit				
Pears, Quince, Plums, Damsons, Hard-flesh fruits	140-150	35-45	15	---
Vegetables				
Carrots	140-150	50	15	60
Mushrooms	140-150	45	30	60
Mixed pickles	150-160	50	15	---
Kohlrabi, Peas, Asparagus, Beans	150-160	50	80-120	45-60

Cleaning and Care



Warning: For safety reasons cleaning the appliance with a steam jet cleaner or high-pressure water cleaner is **not permissible!**

Exterior of the Appliance

Wipe the front of the appliance with a soft cloth dipped in warm soapy water.

- Do not use scourers, caustic cleaners or abrasive items.
- Use commercially available cleaners for metal fronts.


Oven Interior



Caution! Make sure the oven has cooled down before cleaning.

Clean the appliance after each use. In this way, dirt is easier to clean off, and is not allowed to burn in.

- To clean, press the ON | button: the oven light comes on.
- Wipe the oven with water and washing-up liquid and allow to dry. Do not use abrasive materials.

If necessary, soak any dirt first, or switch on Vigorous Steam  for a short time.

- Clean stubborn dirt with a special oven cleaner.



Important: If using an oven spray, please follow the manufacturer's instructions!

Accessories


Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Side Rails


To clean the sides of the oven, the left and right side rails can be removed.

Taking out the side rails


1. Loosen the screw.

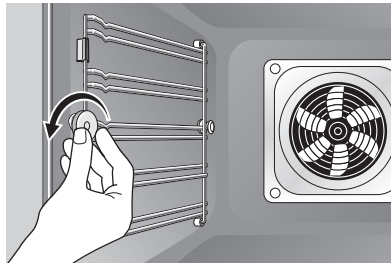

2. Pull the rails sideways (1).

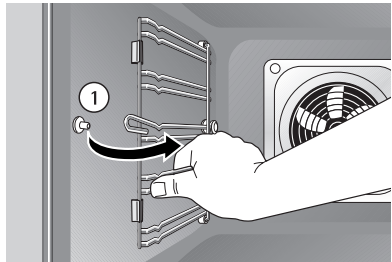

3. Lift the rails off the side attachments (2).

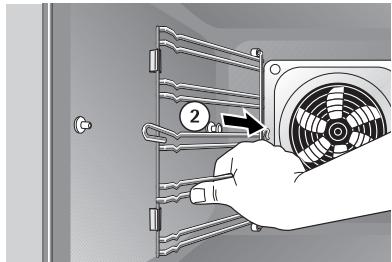


The silicone pads must grip the vertical bar (to protect the oven surface enamel).


To remove/replace the side rails, open the cover on the meat probe socket.

Replace the side rails

1. Set the rails in the rear attachment and press into the grip on the side (1).

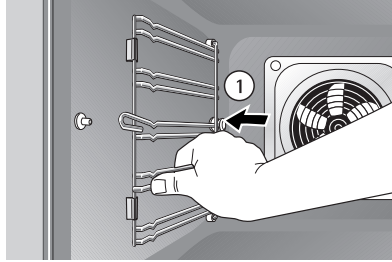

2. Insert the screw and tighten (2).

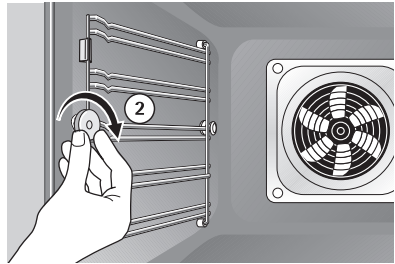

Steam Generation System



Important! Wipe the steam generator dry after **each** use. Soak up water with a sponge.

Remove any lime residue with water and vinegar.

To prevent the build-up of limescale, use only distilled or softened water, for example, from a water filtering appliance.




Important! Chemical de-scaling agents can damage the oven's surface enamel. Always follow the manufacturer's instructions.

Water Drawer and Steam Generator

1. The water and vinegar mixture (about 200 ml) is not poured directly into the steam generator, but **into the drawer** in the control panel.

Leave for about 10 minutes in the steam generator to take effect.

2. Remove the water and vinegar with a non-abrasive sponge.
3. Rinse the steam generation system **through the water drawer** with clear, softened water (100-200 ml).
4. Soak up remaining water from the steam generator with the sponge, and wipe dry.
5. Leave the door open to let the oven dry out.

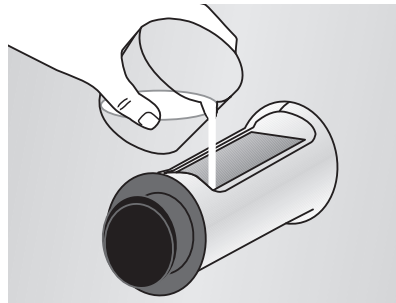

Oven Light



Danger of electric shock! Before replacing the oven light bulb:


- Switch off the oven.
- Disconnect the oven from the mains supply.




To protect the oven light bulb and the glass cap, lay a cloth on the bottom of the oven.

Replacing the rear oven light bulb/cleaning the glass cap

1. Take off the cap by turning to the left.
2. Remove seals and metal ring, and clean the glass cap.
3. If necessary:
**replace bulb with a 25 Watt,
230 V, 300 °C heat-resistant oven
light bulb.**


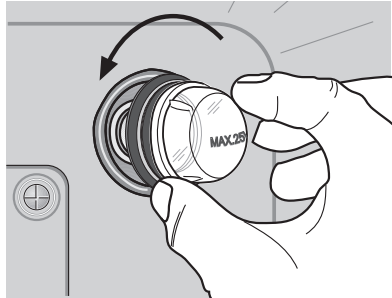


4. Fit seals and metal ring to the glass cap.
5. Re-fit the glass cap.

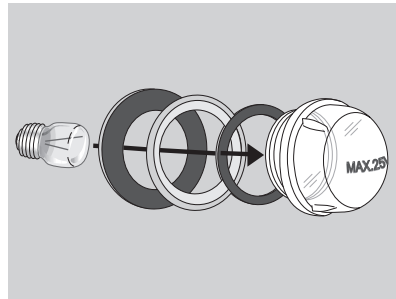

Replacing the oven side light bulb/cleaning the glass cap

1. Take out the side rails.
2. Unscrew the metal frame using a cross-tip screwdriver.
3. Take off the metal frame and seal, and clean.
4. If necessary:
replace bulb with a 25 Watt, 230 V, 300 °C heat-resistant oven light bulb.
5. Put the metal frame and seal back in place, insert screws, and tighten.
6. Replace the side rails.

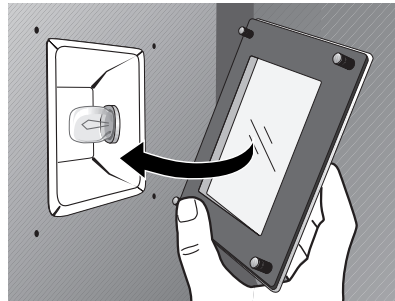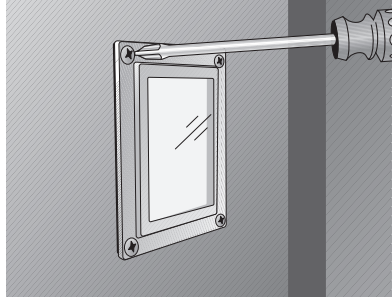

What to do if ...

Fault	Possible Cause	Remedy
The oven does not heat	The oven is not switched on.	Switch the oven on.
	The clock is not set.	Set the clock (see Chapter "Before using for the first time").
	The required settings are not applied.	Check the settings.
	Fault in the power supply. The electrical protection system or fuse has tripped.	Check the fuses or protection system. If this happens repeatedly, call an authorised electrician.
Even though oven function and temperature have been selected, the oven does not heat up.	An automatic programme has been set to run at a later time.	Cancel the automatic clock settings, or set them again.
The meat probe does not work.	The meat probe is not inserted correctly, or is faulty.	Check the meat probe socket.
The Service symbol appears, along with an error code.	Fault in the electronic system.	Call your local Service Force Centre.
The time display flashes on the electronic clock.	Power cut.	Set the clock (see Chapter "Before using for the first time").
The oven light does not come on.	The oven light bulb is faulty.	Replace the oven light bulb (see Chapter "Care and Cleaning").

If you are unable to remedy the fault by following the above suggestions, please contact your local Service Force Centre.




Caution! Repairs to the appliance must be carried out by a **specially licensed technician** only! Considerable danger may result from incorrect repairs.





Caution! Do not use the appliance if damaged. In the event of a fault or failure, **switch off at the mains /fuse box** or take out the fuses.

In the event of a fault, visits by technicians from Customer Service or dealer may not be covered by guarantee, even during the warranty period.

Service Symbol and Error Codes

Any faults in the electronic control system are indicated by  on the display field, and an error code replaces the temperature display.

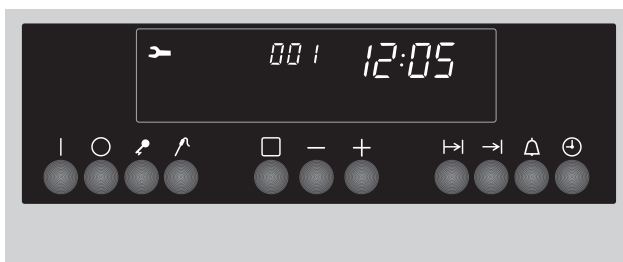

- Switch off the circuit-breaker.
- Switch on again after several minutes.
- Switch on the oven again.
- If the  symbol appears again, contact your local Service Force Centre and give the model number (see Chapter "Service") and Error Code, for example, "001".



Cooling continues to operate for safety reasons. If necessary, switch off the appliance at the circuit-breaker again.

Technical Data

Oven Internal Dimensions

Height x Width x Depth	31,5 cm x 40,8 cm x 40,6 cm
Volume (useful capacity)	52,0 l

Regulations, Standards, Directives

This appliance meets the following standards:

- EN 60 335-1 and EN 60 335-2-6
relating to the safety of electric appliances for household use and similar purposes and
- EN 60 350 or DIN 44546 / 44547 / 44548
relating to the operating features of household electric cookers, hobs, ovens, and grills.
- EN 55014-2 / VDE 0875 Part 14-2
- EN 55014 / VDE 0875 Part 14 / 1999-10
- EN 61000-3-2 / VDE 0838 Part 2
- EN 61000-3-3 / VDE 0838 Part 3
relating to basic requirements for electromagnetic compatibility (EMC).

CE This appliance complies with the following EC directives:

- 73/23/EEC dated 19.02.1973 (Low Voltage), including amendment 90/683/EEC
- 89/336/EEC dated 03.05.1989 (EMC) including Amendment 92/31/EEC
- 93/68/EWG (markings and labelling).

Installation Instructions




Important: Any electrical installation work must be carried out by a qualified electrician/competent person.

The oven must be installed according to the instructions supplied.




Safety Instructions for the Installer


- Protection against access to live parts must be guaranteed by the installation.
- The unit in which the appliance is fitted must satisfy the requirements of DIN 68930 in respect of stability.
- This oven must be installed by qualified personnel to the relevant Standards.
- This oven is heavy. Take care when moving it
- Remove all packaging, both inside and outside the oven before using the oven.
- Do not attempt to modify the oven in any way.
- The built-in cooker and hobs are fitted with special connector systems. They may only be combined with units of the corresponding system.

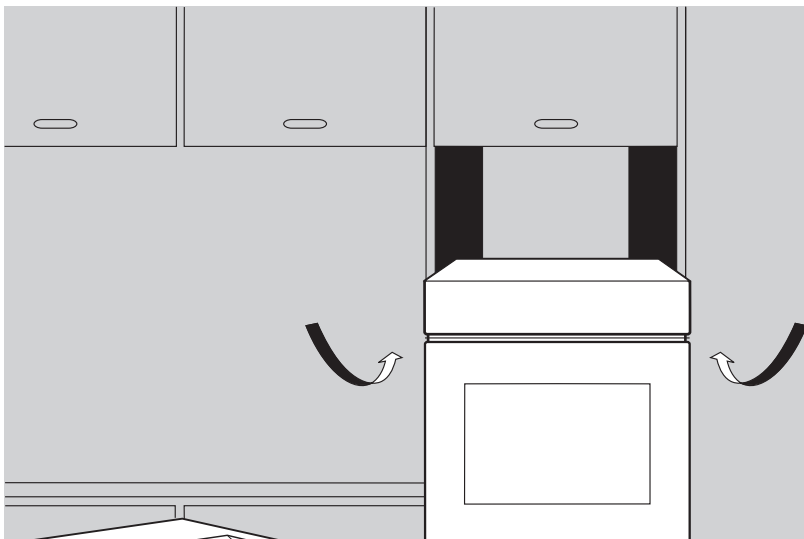


1

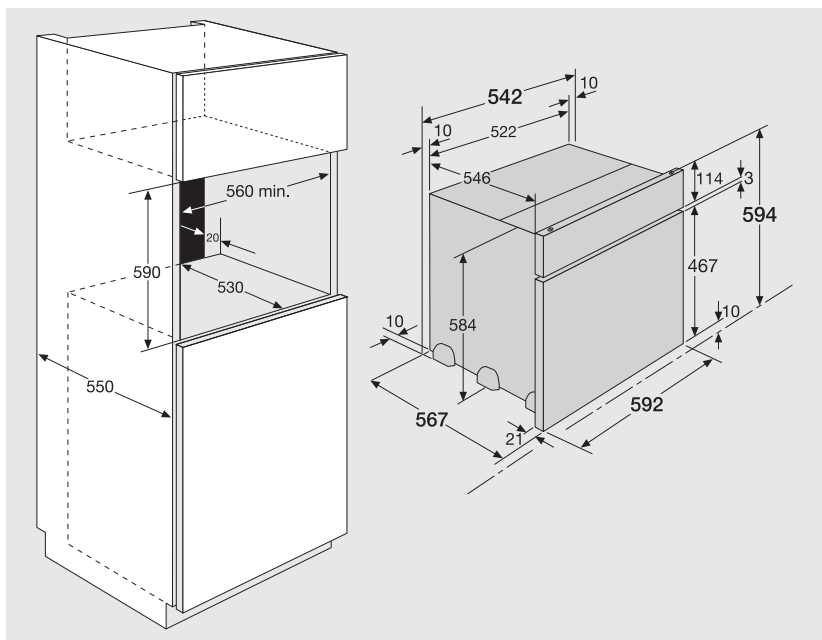


2

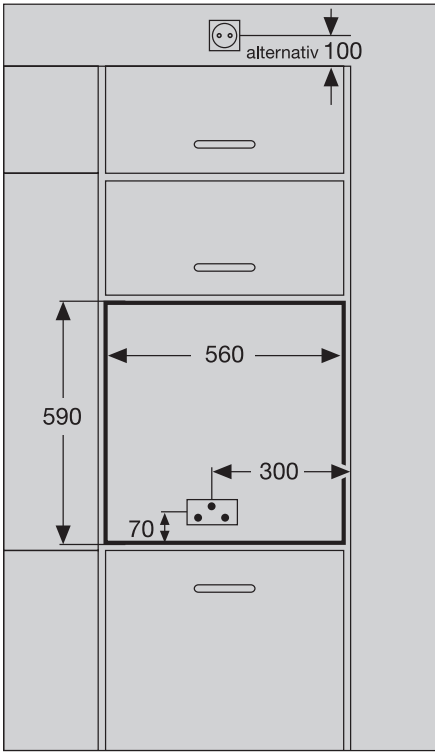


3

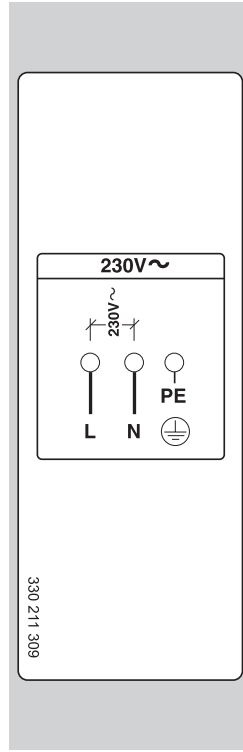


4

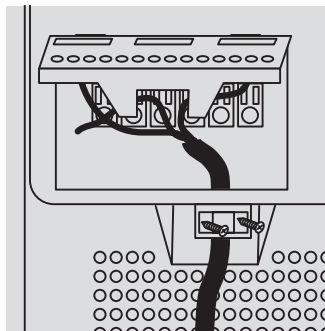


5

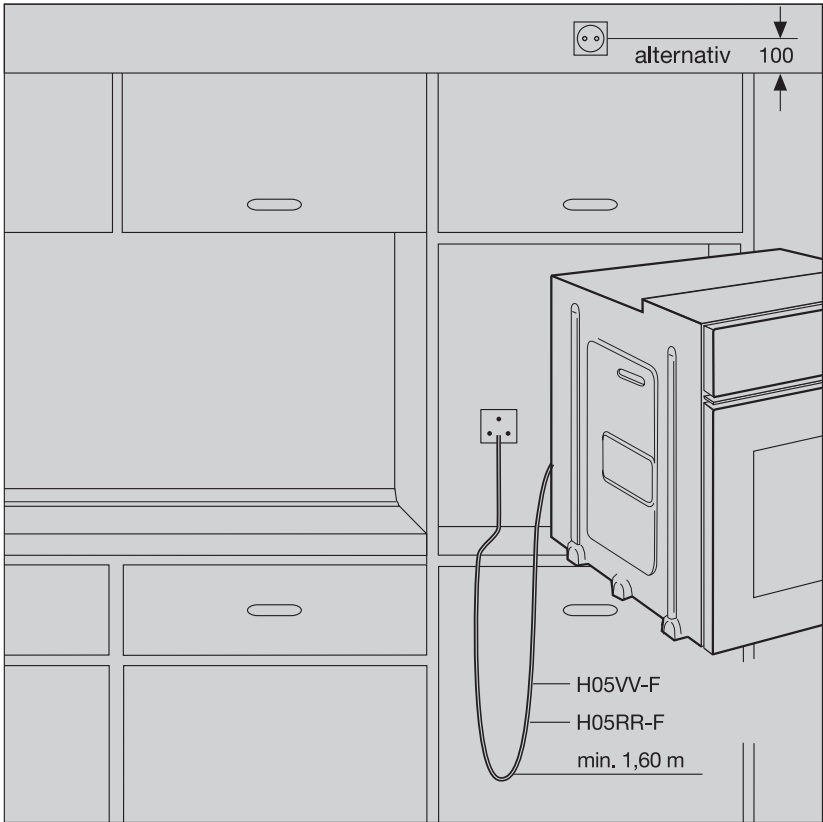


6

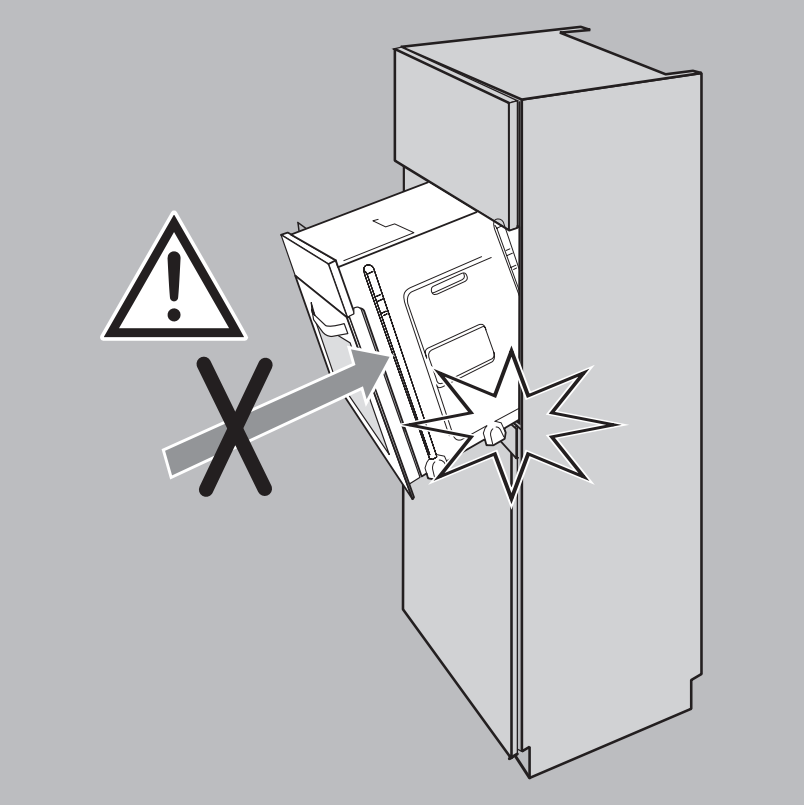

7

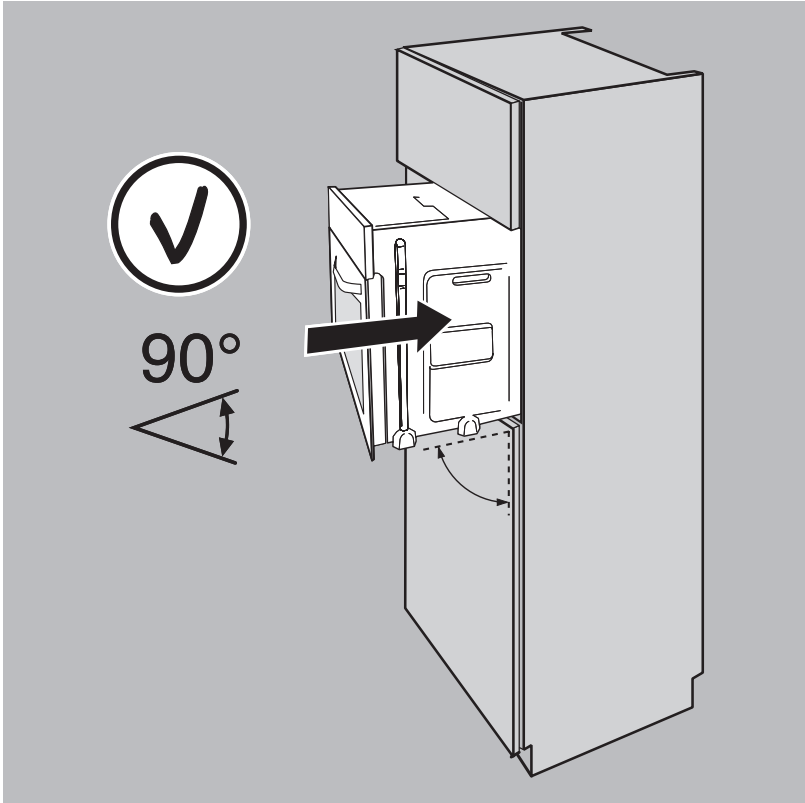

8

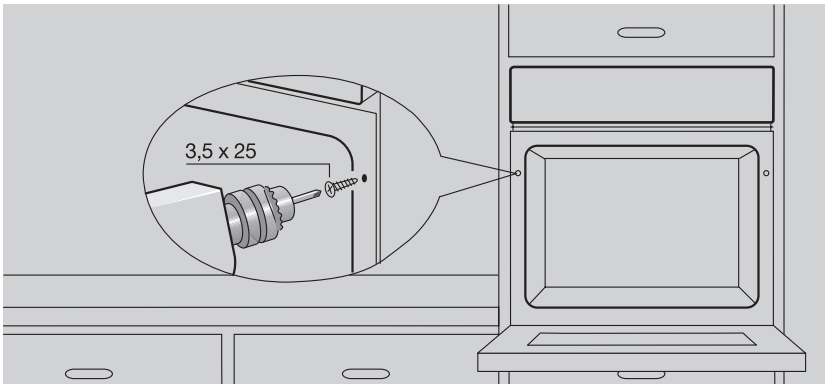

9

Index

A

- Accessories 19
- All-purpose tray10, 19
- Anti-tip device 19

B

- Baking 38
- tray 10

C

- Child safety device 29
- Cleaning 59
 - accessories 59
 - before first use 12
 - Side rails 60
 - Steam generation system 62
 - the oven interior 59
- Clock 13
 - Adjusting the clock time 28
 - functions 22
 - Setting cooking time 24
 - Setting END time 25
 - Setting the Clock 11
 - Setting the Countdown 23
 - setting the time 22
- Control panel 8
- Conventional 16

D

- Defrost 52
- Description of the appliance 8
- Dishes with toppings 44
- Display Field 13
- Disposal 7
- Drying 16
- Dual Grill 16

F

- Fan cooking 15

G

- Grilling 51

L

- Low temperature cooking16, 54

M

- Making preserves 57
- Meat probe10, 20

O

- Oven 10
 - Accessories10
 - Cooling fan18
 - functions15
 - light bulb63
 - operating13
 - Residual heat indicator18
 - safety cut-out30

P

- Pizza setting15

R

- Ready meals45
- Repairs5
- Roasting46
- Rotitherm15

S

- Safety5
- Service Symbol and Error Codes66
- Shelf19
- Side rails60
- Single grill16
- Soufflés44
- Steam cooking functions31
- Steam interval cooking15

T

- Tables and tips33

V

- Vigorous steam cooking15

W

- What to do if65

Service & Spare parts

If you wish to purchase spare parts or require an engineer, contact your local AEG Service Force Centre by telephoning:


08705 929 929

Your telephone call will be automatically routed to the Service Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at **www.serviceforce.co.uk**.

When you contact the Service Centre they will need the following information:

1. Your name & address, including post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model, serial and production number. This information can be found on the rating plate. The rating plate is on the inner edge of the door on the right.
5. Date of purchase. Please note that it will be necessary to provide proof of purchase for any in guarantee service call.

In-guarantee customers should ensure that the chapter headed „What to do if...“ has been read, as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

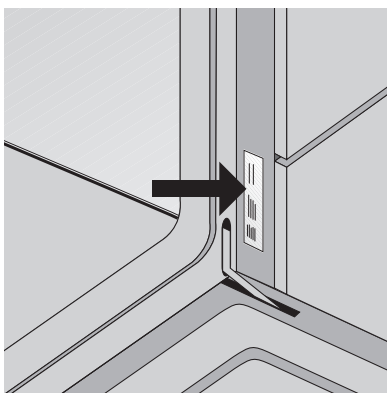

Customer Care

For general enquiries concerning your AEG appliance or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.aeg.co.uk**.

Customer Care Department
AEG Domestic Appliances
55-77 High Street, Slough
Berkshire, SL1 1DZ

Tel. 08705 350 350 (*)

(*) Call may be recorded for training purposes.

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

315 6251 13-A-141002-02

Subject to change without notice