



Changing Entertainment. Again.

User's Guide

Find Inside:

- *Connecting* page 6
- *Menus* page 9
- *Remote Controls*..... page 17
- *The Basic Menus*..... page 21
- *Features* page 24
- *Other Information*.. page 31
- *Troubleshooting* page 34



Model J27F636 is pictured above.



www.rca.com/television

Important Information

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. This apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, black borders (sides, top and bottom), etc. may cause similar damage. This damage is not covered by your warranty.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card (packed separately) and return it immediately. For US customers: Your RCA Consumer Electronics product may also be registered at www.rca.com/productregistration. Registering this product allows us to contact you if needed.

Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No. _____

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See following example.

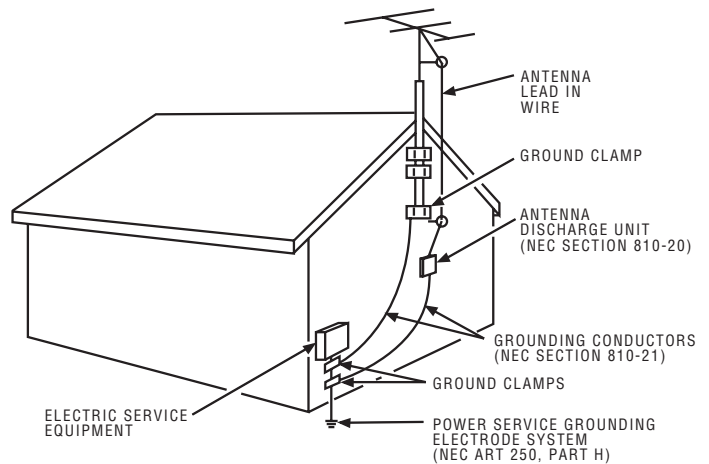


Table of Contents

| | | | |
|---|----|---|----|
| Important Information | 2 | Chapter 3: Using the Menu System | 21 |
| IMPORTANT SAFETY INSTRUCTIONS | 3 | The Basic Menu System | 21 |
| Chapter 1: Connections & Setup | 5 | Sound Menu | 21 |
| Things to Consider Before You Connect | 5 | Picture Menu | 21 |
| Remote Controls | 5 | Channel Guide Menu | 21 |
| Protect Against Power Surges | 5 | Parental Control Menu | 22 |
| Protect Components from Overheating | 5 | Time Menu | 22 |
| Position Cables Properly to Avoid Audio | | Language & CC Menu | 23 |
| Interference | 5 | The TV can be "Decommercialized" | 23 |
| Important Stand and Base Safety Information | 5 | Chapter 4: Using the TV's Features | 24 |
| Use Indirect Light | 5 | Channel Banner | 24 |
| Get the Picture | 6 | Parental Controls and V-Chip | 24 |
| Receiving Digital Channels | 6 | How V-Chip Works | 24 |
| Receiving Analog Channels | 7 | USA V-Chip Rating System | 25 |
| Additional Jacks and Cables | 7 | Canadian English V-Chip Rating System | 25 |
| The Front of Your TV | 8 | Canadian French V-Chip Rating System | 26 |
| Front Input Jacks | 8 | USA V-Chip TV Rating Limit | 26 |
| Front Panel Buttons | 8 | Blocking Specific Content Themes | 28 |
| Start-up | 8 | Viewing Specific Content Themes | 28 |
| Put Batteries in the Remote | 8 | Blocking Canadian V-Chip Ratings | 29 |
| Plug in the TV and Turn it On | 8 | V-Chip Movie Rating Limit | 29 |
| Place All Available Channels Into Memory | 9 | V-Chip Exempt Program Block | 29 |
| Set the Time | 9 | Front Panel Lock | 30 |
| The ClonePRO™ | 9 | Creating A Password | 30 |
| Understanding the Menus | 10 | Chapter 5: Other Information | 31 |
| Master Menus | 10 | Using the ClonePRO™ | 31 |
| Basic Menus | 10 | Modes of operation | 31 |
| Using Master and Basic Menus | 10 | DSCI mode | 31 |
| Exiting a Menu | 10 | IR mode | 32 |
| Setting Limits in Master Menus | 10 | Cloning a TV | 33 |
| Sound Menu | 11 | General Troubleshooting | 33 |
| Picture Menu | 12 | Troubleshooting | 34 |
| Access and Power Options Menu | 12 | Menu Problems | 36 |
| Parental Control | 14 | Care & Cleaning | 36 |
| Time Menu | 15 | Warranty | 37 |
| Setup Menu | 15 | | |
| Chapter 2: Using the Remote Control | 17 | | |
| Types of Remote Controls | 17 | | |
| Basic Remote Buttons (R130K1 & R130K2) | 17 | | |
| Additional Remote Buttons (R130K2) | 18 | | |
| Using the INPUT Button | 19 | | |
| Using the SYSTEM Button | 19 | | |
| ClonePRO™ Remote Buttons | 20 | | |

Things to Consider Before You Connect

Remote Controls

You will need a master remote (R130K2) or ClonePRO™ to set up the TV. Contact your RCA commercial distributor to purchase these. To locate an RCA commercial distributor call 1-800-333-7221.

Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet.
- Turn off the TV and/or component before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safeguards sheet packed with your TV.

Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- If you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

Position Cables Properly to Avoid Audio Interference

- Insert each cable firmly into the designated jack.
- If you place components above the TV, route all cables down the side of the back of the TV instead of straight down the middle of the TV.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.


Important Stand and Base Safety Information

Choose the location for your TV carefully. Place the TV on a stand or base that is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safeguards sheet packed with your TV.

Use Indirect Light

Don't place the TV where sunlight or room lighting will be directed toward the screen. Use soft or indirect lighting.

Connections & Setup

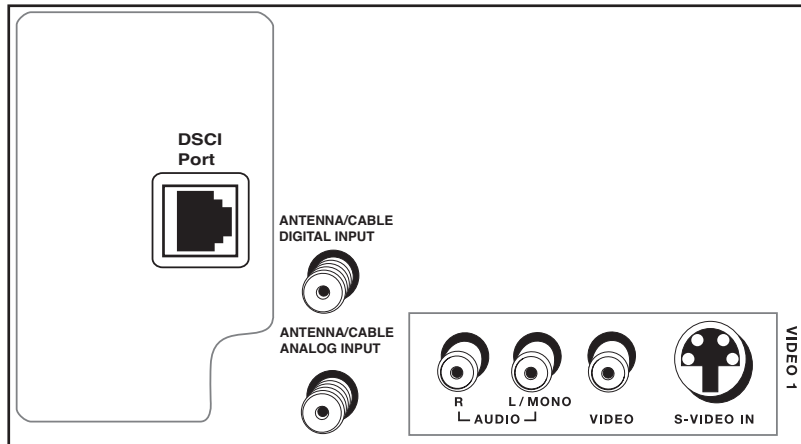


Get the Picture


The first part of connecting your TV is to get a signal. The back panel of your TV allows you to receive analog channels by using the ANTENNA/CABLE ANALOG INPUT and digital channels by using the ANTENNA/CABLE DIGITAL INPUT. The graphic to the left shows these inputs.

Note: You may experience a delay of several seconds before digital pictures appear, both when you first turn on the digital signals and when you change channels. This is normal. Check with your local cable company for available content.


Receiving Digital Channels

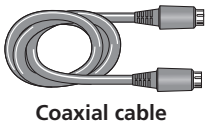

Coaxial cable

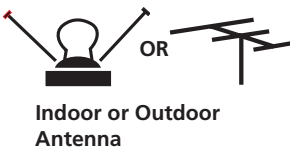

Indoor or Outdoor Antenna

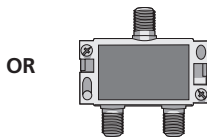

OR

What You Need

- Antenna (“rabbit ears”) or outdoor antenna with a coaxial cable. Plug the antenna or coaxial cable from the wall outlet into the ANTENNA/CABLE DIGITAL INPUT to receive free off-air local digital channels.

OR


- Coaxial cable from a cable outlet. Plug the coaxial cable into the ANTENNA/CABLE DIGITAL INPUT to receive digital cable channels only.

OR

- You can use a signal splitter (shown at left) to divide the signal from one cable or antenna source to connect to both the ANTENNA/CABLE ANALOG INPUT and ANTENNA/CABLE DIGITAL INPUT jacks on the TV. When you get to the Auto Channel Search screen in the Initial Setup, make sure you set the signal type to *Both* (digital and analog).

What You Need to Know


- Visit www.antennaweb.org to get help deciding what type of antenna to use to receive the off-air local digital channels available to you. By entering where you live, this mapping program tells you what local analog and digital stations are available using a certain antenna.
- When you get to the Auto Channel Search menu in the Initial Setup, make sure you set the Signal Source to Digital. (You can also choose Both for digital and analog). Then set the Signal Type. Choose Antenna or Cable (depending on your connection). To complete a channel search now, go to page 9.
- When you are ready to watch digital channels, make sure you are tuned to the Digital Input. Press the ANTENNA button to tune to the digital Input. Go to page 24 for more information.

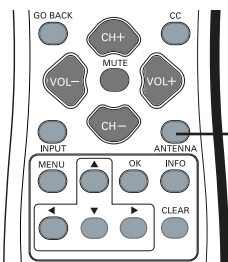


When using the ANTENNA/CABLE DIGITAL INPUT and/or the ANTENNA/CABLE ANALOG INPUT jacks, use the ANTENNA button on the remote to toggle between the digital and analog signals.

**ANTENNA
button**

Receiving Analog Channels

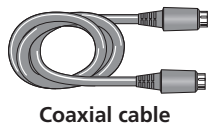

Coaxial cable



Indoor or Outdoor Antenna

What You Need


- Antenna (“rabbit ears”) or outdoor antenna with coaxial cable. Plug the antenna or coaxial cable from the wall outlet into the ANTENNA/CABLE ANALOG INPUT to receive analog channels.

OR

- Coaxial cable from a cable outlet. Plug the coaxial cable from the source outlet into the ANTENNA/CABLE ANALOG INPUT to receive cable channels.

What You Need to Know



- Visit www.antennaweb.org to get help deciding what type of antenna to use to receive the local analog channels available to you. By entering where you live, this mapping program tells you what local analog and digital stations are available using a certain antenna.
- When you get to the Auto Channel Search menu in the Initial Setup, make sure you set the *Signal Source* to *Analog*. (You can also choose *Both* for digital and analog). Then set the *Signal Type*. Choose *Antenna* or *Cable* (depending on your connection). To complete a channel search now, go to page 9.
- When you are ready to watch analog channels, make sure you are tuned to the analog input. Press the ANTENNA button to tune to the analog input. (Look for a A at the bottom of the channel banner). Go to page 24 for more information.

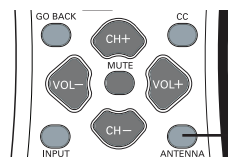

When using the ANTENNA/CABLE ANALOG INPUT and/or the ANTENNA/CABLE DIGITAL INPUT jacks, use the ANTENNA button on the remote to toggle between the digital and analog signals.

ANTENNA button

Additional Jacks and Cables

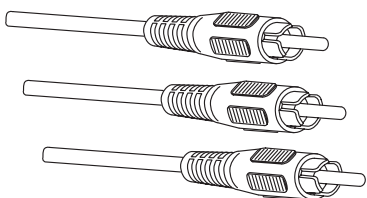

S-VIDEO IN

VIDEO 1


VIDEO, AUDIO R and L/MONO INPUTS Used to connect components such as a VCR, DVD player, camcorder, or video game consoles with audio/video outputs. These jacks are used for most audio/video connections between components.

Note: If your component has only one input for audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't connect the right audio part of the cable.

- **R (RIGHT) AUDIO** Provides right audio connection. The right audio cable is usually red.
- **L (LEFT)/MONO AUDIO** Provides left audio connection. The left audio cable is usually white.
- **VIDEO** Provides composite video connection. The video cable is usually yellow.
- **S-VIDEO** Provides better picture quality than the video jacks because the color part of the signal is separated from the black and white part of the picture. When using S-VIDEO IN, make sure to connect left and right audio cables to the L/MONO and R AUDIO Input jacks (an S-Video cable is required).



DSCI PORT This port is used to transfer information between a TV and other devices, such as a clone box or interactive system. This port is an eight-pin telephone-type port. When the TV receives a message via the DSCI (digital serial communications interface) port, it will act in accordance with the digital instructions received. For more information on its connection and operation, please contact your distributor or the supplier of the interactive system.

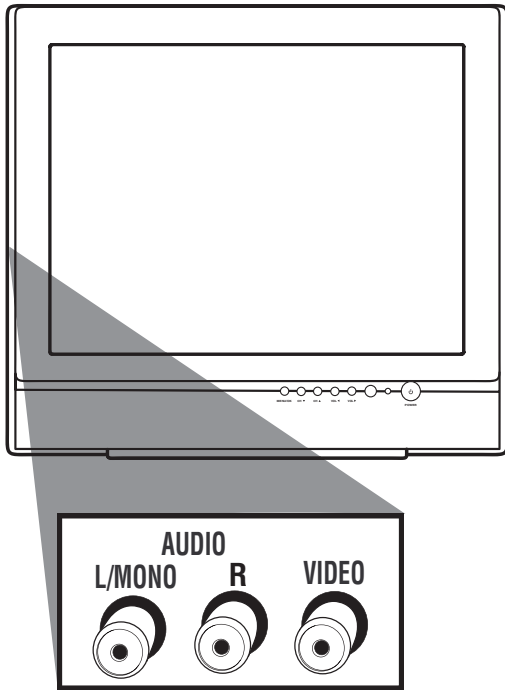

The Front of Your TV

Front Input Jacks

Your model has a set of audio/video inputs for your convenience. These jacks are towards the front of the TV on the side. To access the component you connected to the front of the TV, press the INPUT button on your remote until FRNT appears on the screen. The jacks are ideal for connecting a DVD player, video game console, digital camera or a camcorder.

Note: When connecting a component that only has one audio jack, such as some camcorders, use the TV's AUDIO L/MONO jack to hear the audio.

L/MONO and R AUDIO Receives audio from another component such as a DVD player, VCR, camcorder, digital camera or video game console.

VIDEO Receives video from another component such as a DVD player, VCR, camcorder, or video game console.

Note: Video Input Channels (VID, SVID, etc.) must be added to the active channel list separately before they can be accessed. Refer to the Setup menu section at the end of this chapter for more information on the Channel menu and List & Labels.

Front Panel Buttons

If you cannot locate your remote, you can use the front panel buttons of your TV to operate many of the TV's features.

MENU/OK Brings up the Main menu. In the menu system, it selects highlighted items.

CH v Scans down through the current channel list. In the menu system, acts like the down arrow button on the remote control and adjusts menu controls.

CH ^ Scans up through the channel list. In the menu system, acts like the up arrow button on the remote control and adjusts menu controls.

VOL < Decreases the volume. In the menu system, acts like the left arrow button on the remote control and adjusts menu controls.

VOL > Increases the volume. In the menu system, acts like the right arrow button on the remote control and adjusts menu controls.

POWER Turns the TV on and off.

Start-up


The steps below get your TV connected and ready to watch.

Put Batteries in the Master Remote (R130K2)


1. Slide off the cover of the battery compartment.
2. Place the two AA batteries into the remote, matching the + and – end of each battery in the compartment.
3. Replace the cover.

Plug in the TV and Turn it On

Plug the end of the power cord into a grounded wall outlet. Insert the plug completely into the outlet. Press POWER on the TV or remote.

| | | |
|---|---------------------|--------------|
|  | AUTO CHANNEL SEARCH | |
| | Go Back | |
| | Channel List | List A... |
| | Signal Source | Both... |
| | Ana. Sig Type | Cable... |
| | Dig. Sig Type | Antenna... |
| ⇒ | Start | ▶ Running... |
| | Progress | 21% |
| | Channel | 012 |
| | Channels Found | 16 |

The Master menus are available while using the Master Remote (R130K2).

| | | |
|---|---------------|-------------------------------------|
|  | TIME | |
| | Go Back | |
| ⇒ | Time | ◀▶ 08:00 am |
| | Time Access | Basic |
| | Sleep Timer | Off |
| | Wake-Up Timer | <input checked="" type="checkbox"/> |
| | Wake-Up Time | 07:00 am |
| | Wake-Up Ch. | 08 |
| | Schedule | ... |

Place All Available Channels Into Memory

1. To go to the *Setup* menu, with the master remote (R130K2), press MENU then select *Auto Channel Search*. In this menu you'll be able to set your *Signal Source*. Choose from *Analog*, *Digital* or *Both*. This choice will depend on what connections you've made to the ANTENNA/CABLE ANALOG INPUT and/or the ANTENNA/CABLE DIGITAL INPUT jacks. Now set your signal type. The TV will search for all channels viewable through your antenna or cable TV system.
2. Scroll up to select which channel list you'd like to find channels for (List A is the default).
3. Press the down arrow button to select *Start*. Press the OK button to start searching. The TV searches for active channels and places them in the channel list.

Note: Video Input Channels (VID, SVID, etc.) must be added to the active channel list separately before they can be accessed. Refer to the *Setup* menu section at the end of this chapter for more information on the Channel menu and List & Labels.

Set the Time

The current time options might not be available to the basic user, depending on how they've been set by the master user.


To set the time, from the Main menu select *Time*. If the current time has not been set, use the arrow and number buttons on the remote control to set it.

1. From the Main menu, highlight *Time* and press OK.
2. *Time* is highlighted. To set the time, use the number buttons to set the hour. Press the right and left arrow button to add or subtract minutes. The OK button changes *am* and *pm*.

Note: The *Wake-Up Timer* and *Wake-Up Time* options are unavailable unless *Time* has been set.

The ClonePRO™

If several TVs need to be programmed with the same menu settings, an optional ClonePRO remote can be used to copy all of the menu settings from one TV into other TVs to reduce installation time. Information can be both downloaded to and uploaded from the ClonePRO using the DSCI port on the TV's back panel or using the IR sensor. A ClonePRO can be obtained from your RCA commercial distributor. Chapter 2 has information about this remote, see page 20. If you want to set other menu options before using the ClonePRO, continue on in this chapter. You can use the ClonePRO at any time.

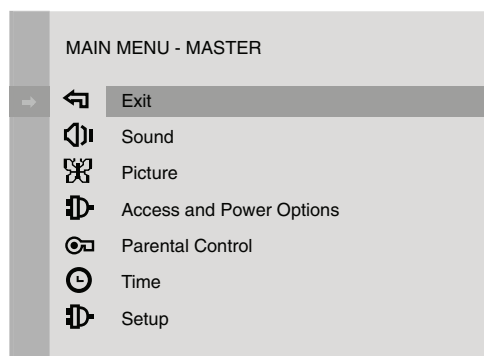

The Master Main menu.

Understanding the Menus

This television displays two levels of menus: master and basic.


Master Menu

The master menus are accessible by pressing MENU on the master remote (R130K2). This menu shows all menu options. The person who chooses the settings available to the basic end user is called the “master user.”

Basic Menu

The basic menus are accessible by pressing MENU on a basic remote (R130K1 or other remote) or the front panel. The choices available on the basic menus and control panels will vary depending on limits set by the master user and the input selected. You can turn off the basic menu completely through the *Access and Power Options* menu. For more information on the effects of master user choices on the basic menu and basic user functionality, continue reading this chapter.

Note: Options set in the master menu are stored in nonvolatile memory. If any options are changed in the basic menu, and then the TV is turned off, the TV defaults to the master menu settings once it's turned back on.

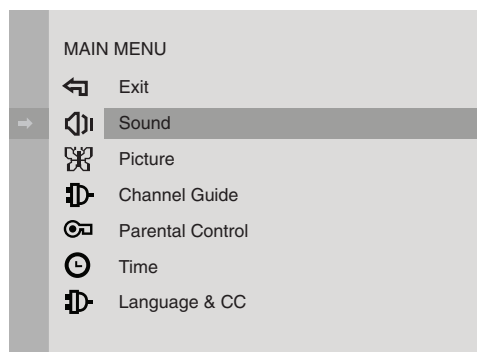

The Basic Main menu. The choices available in this menu change according to limits set by the master user in the Master menus.

Using Master and Basic Menus

Menus and choice lists use the “point and select” rule to navigate, but control panels use a variety of methods to adjust features on your TV. The following pages detail how to use these controls to customize the functions of your TV.

Press MENU on the remote (master remote for master menu; basic remote for basic menu) or on the front panel (basic menu) to bring up the Main menu.

To select a menu item:

- Navigate with the arrows and then select OK.
- Navigate with the arrows and then select with the right arrow button (unless it's a choice list).


Exiting a Menu

There are three ways to exit a menu. Note that not all methods work in all menus:

- Highlight *Exit* and press OK.
- Press MENU on the remote control.
- Press CLEAR, the on-screen displays are cleared from the screen and you return to TV viewing.

Setting Limits in Master Menus

Some screens in the master menus are not available in the basic menus. There also might be some options you want to make unavailable to the basic user. These next few pages describe these types of menu options. To make all options unavailable, set the basic menus in the *Access and Power Options* menu to *Disabled*. For information on basic menu options, go to Chapter 3.

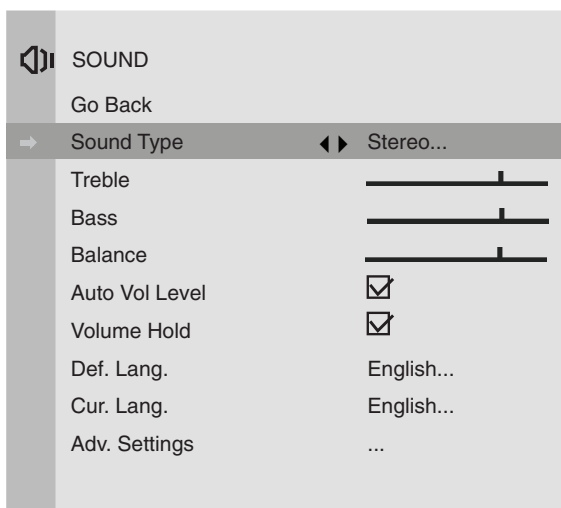

The master user determines what functions the basic user can access.

Sound Menu

Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.

Sound Type Choose from *Mono*, *Stereo*, *Enhanced*, and *SAP*. Stereo splits the incoming stereo audio signal into left and right channels. Most TV programs and recorded materials have stereo audio. The word Stereo appears on the TV when you tune to a program that is broadcast in stereo.

Treble Increases or decreases the high frequency audio.

Bass Increases or decreases the low frequency audio.

Balance Fades between the left and right speakers.

Auto Volume Level Reduces volume blasts during commercial breaks. Eliminates the need to constantly adjust volume control. Set it On or Off. The default is Off.

Volume Hold Locks the volume at its' current setting. When this feature is turned on, mute and other volume controls are disabled.

Default Language Press the right arrow button to choose the language you prefer for dialog on digital channels. If your preferred language is being broadcast with a program, the TV will play it. If not, then the TV will play the default audio for the program (usually English in the U.S.). The default digital channel audio language options are *English*, *Spanish*, *German*, *Italian*, *Japanese*, *Chinese* and *Korean*.

Note: The Default Language menu is available for digital stations only when using the ANTENNA/CABLE DIGITAL INPUT jack.







Current Language Press the right arrow button to choose the audio language for the program you're watching. The language you choose becomes your preferred audio language for all channels on the digital tuner until you turn the TV off. If the language you choose here is not being broadcast with a program, then the TV will play the default audio for the program (usually English in the U.S.).

Advanced Settings Press the right arrow button to choose advanced settings.

Initial Volume Sets the TV's volume to the specified level every time it is turned on.

Minimum Volume Re-scales the volume control slider so that the far left position is always the minimum allowable volume (but not necessarily the minimum possible volume).

Maximum Volume Re-scales the volume control slider so that the far right position is always the maximum allowable volume (but not necessarily the maximum possible volume).

| | |
|---|--|
|  | PICTURE |
| | Go Back |
| → | Picture Preset ◀▶ Bright... |
| | Pict. Enhance High... |
| | Color Warmth Normal... |
| | Brightness  |
| | Color  |
| | Contrast  |
| | Sharpness  |
| | Tint  |

Picture Menu

The *Picture* menu items allow you to adjust the appearance of on-screen images for each video input source. Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.

Picture Preset Choose between *Soft*, *Natural*, *Bright* or *Personal*. The default setting is *Natural*.

Picture Enhance Controls the level of automatic color correction. Choose between *Medium*, *High* or *Off*.

Color Warmth Choose between *Cool*, *Normal* or *Warm*. The default setting is *Normal*.


Brightness Adjusts the brightness of the picture.

Color Adjusts the richness of the picture.

Contrast Adjusts the contrast of the picture.

Sharpness Adjusts the sharpness of the picture. When the component inputs are used, this selection is grayed out (disabled).

Tint Adjusts the balance between the red and green levels of the picture.

| | |
|---|---|
|  | ACCESS AND POWER OPTIONS |
| | Go Back |
| → | Remote Config. ▶ TV1.... |
| | Basic Access Enabled... |
| | TV Power On Always.... |
| | Energy Saver Disabled... |
| | Front Panel Enabled... |
| | Par. Controls Basic... |
| | Min Stby Power Enabled... |
| | Legacy Mode <input checked="" type="checkbox"/> |
| | Info Menu <input checked="" type="checkbox"/> |
| | Channel Guide <input checked="" type="checkbox"/> |
| | Ignore PSIP <input checked="" type="checkbox"/> |

Note: The *Sleep Timer*, *Schedule* and *Energy Saver* settings are unavailable when *On Always* has been activated (in the *TV Power* menu), even if they were set prior to choosing this option.

Access and Power Options Menu

The *Access and Power Options* menu allows the master user to specify which features and functions basic users will be able to access. Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.

Remote Configuration This feature allows the master user to determine which TVs the remote operates. Choose from *TV1*, *TV2*, *TV3*, *TV1&2*, *TV1&3*, *TV2&3*, *All* or *Disabled*. The default setting is *All*. If *Disabled* is chosen, the TV will not respond to the basic remote, but pressing MENU on the master remote will work.

Note: When *Remote Config.* is set to *Disabled*, the *MENU* button on the master remote turns on the TV.

Basic Access This setting allows you to determine whether the TV's basic menus are accessible. Choose *Enabled* or *Disabled*. When the basic menu is disabled, users cannot access menus through the basic remote or front panel.

TV Power This setting allows you to determine whether the TV can be turned on or off with the POWER button on the remote or the front panel. Choose between:

On Always The TV is always on and cannot be turned off; the *Sleep Timer*, *Schedule* and *Energy Saver* settings are disabled.

Note: When the *DSCI* (*Digital Serial Communications Interface*) port is used to turn the TV on and off, the *On Always* setting is overridden.

Switched The TV can be turned on or off; Sleep Timer, Schedule and Energy Saver can be enabled. This is the default setting.

Energy Saver When enabled, this feature turns the TV off after a specified period of inactivity (no remote or front panel button presses). You can toggle between Disabled, 2-hour, 1-hour, and 30-minute settings. Disabled is the default setting. If *TV Power* is set to *On Always*, *Energy Saver* settings are ignored. A warning message will be displayed prior to the TV shutting off.

Front Panel This setting determines whether the front panel buttons are active (able to be used to control the TV) or not.

Note: *When Front Panel is set to Disabled, the MENU button on the master remote turns on the TV.*

Parental Controls This feature determines the amount of access basic users have to Parental Controls. Blocking age-based rating and content themes is described in Chapter 3. Choose between:

Basic & Password Basic users are able to enter the Parental Control menu and change the password. Basic users can watch blocked programming by entering the system password. This is the default setting.

Basic Basic users are able to enter the Parental Control menu but cannot change the password. Basic users can watch blocked programming by entering the system password.

No Basic Parental Control does not appear on the basic Main menu. Basic users can watch blocked programming by entering the system password.

If Parental Controls is set to *No Basic*, Movie Rating Access, TV Rating Access, Unrated Program Block, and Channel Block will not be available to basic users, regardless of what those items have been set to individually in the Parental Controls menu.

Minimum Standby Power When enabled, keeps power consumption levels compliant with ENERGY STAR® guidelines. The TV is shipped with this enabled.

Note: *Min Stby Power must be disabled to use the DSCI port.*


Legacy Mode When turned On, allows the TV to work with earlier DSCI versions. Thus making the set usable with older DSCI systems. Off is the default setting.

Info Menu Allows the Master user to set whether the channel information is displayed when the INFO button is pressed on the remote.

Channel Guide Allows the Master user to determine whether the Channel Guide is displayed by pressing the GUIDE button on the remote. The default is *On*.

Ignore PSIP When enabled, Digital Tuning ignores all PSIP data including virtual channel remapping. This allows the DSCI device to tune channels by the physical frequency. This option should be activated (the box has a check mark) when a DSCI device is attached.

Note: *Your digital channel lists can be cleared when you change the Ignore PSIP status. Perform a digital channel search after changing this option.*

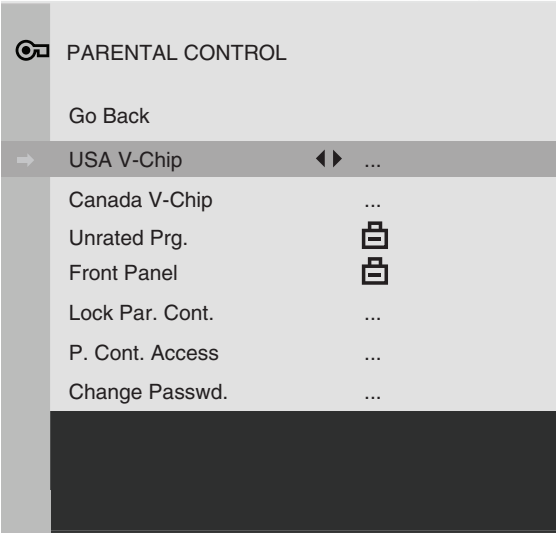

Note: The master user is always able to enter Parental Controls and change the password.

Parental Control

This menu shows all Parental Control menu options. As the master user, you choose which options are available to the basic end user. Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.

USA V-Chip Displays settings for the US version of V-Chip. If you live within the United States, choose this option.

Canada V-Chip Displays settings for the Canadian version of V-Chip. If you live in Canada, choose this option.


Unrated Program This setting allows the master user to determine whether they will allow unrated programs to be shown. Choose *Unlocked* for all unrated programs to be shown. Choose *Locked* and all unrated programs are not available. For more information, go to page 29.

Front Panel This setting allows you to disable (lock) the TV's front panel buttons and can be used as a Parental Control method. When doing so, remove access to any remote capable of operating the TV. The remote still tunes in the channels.

Lock Parental Controls Puts into effect the settings made in the Parental Control menu. A password is required.

Parental Control Access This feature allows you to choose which Parental Control menu item is accessible through the basic menus. If basic users are able to access the Parental Control menu, the master user can still set limited access within the menu through the *Parental Control Access* menu. The setting toggles between *Allow Basic* and *Disable Basic*. The options within the access menu are: *Movie Ratings*, *US TV Ratings*, *CA Eng. Rating*, *CA French Rating*, and *Unrated Program*.

Change Password This option lets you create a new password at any time. Once you enter a new password, it is the password you use until you change it again.

| | |
|---|---|
|  | TIME |
| | Go Back |
| → | Time ◀▶ 08:00 am |
| | Time Access Basic |
| | Sleep Timer Off |
| | Wake-Up Timer <input checked="" type="checkbox"/> |
| | Wake-Up Time 07:00 am |
| | Wake-Up Ch. 08 |
| | Schedule ... |

Note: The master user determines what functions the basic user can access.

Time Menu

This control panel lets you control several time-related functions. Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.

Time Displays the current time if the master user has set the time. If allowed by the master user, the basic user can set the time. Press OK to toggle between *am* and *pm*.

Time Access The master user selects who is able to set and change the current time:

Basic Basic users are able access the current time information and can make changes.

Disabled If the master user has set the time, the time information is available but cannot be changed.

Automatic Basic users are able to access the current time information but cannot make changes. With this option, if the master user doesn't set the time, the TV software will try to acquire time information from broadcasts that provide it.

Sleep Timer Lets you set the TV to turn off after a given time. Press the right arrow to add 15 minutes to the clock (up to four hours).


Wake-Up Timer Lets the master user set availability to this timer On or Off.

Note: When the ClonePRO remote is used via the TV's DSCI (Digital Serial Communications Interface) port to turn the TV on and off, Sleep Timer and Wake-Up Timer settings are nonfunctional.

Wake-Up Time Lets you select the time you want the TV to turn itself on when the *Wake-Up Timer* is set.

Wake-Up Channel Lets you select a specific channel the TV tunes to when the *Wake-Up Timer* is set.

Schedule Lets you set the TV to turn on and off at specified times on a specified channel--one time or daily.

| | |
|---|-------------------------|
|  | SETUP |
| | Go Back |
| → | Language ◀▶ English... |
| | Weak Sig. Disp. None... |
| | Auto Ch. Search ... |
| | List & Labels ... |
| | Ch. Selection ... |
| | Channel Guide ... |
| | Closed Caption ... |

Setup Menu

Use this menu for choosing options to get you started watching TV. Scroll to the feature you want to set. Use the right arrow button to change the setting.

Go Back Takes you to the previous menu.



Language Lets you select your preferred language for the menus.

Weak Signal Display When the signal is weak or there isn't a signal, allows you to select between these options:

Mute & Blank Displays a gray screen with the message "Unusable Signal" with the sound muted until a usable signal is found.

None No message is displayed.

Continues on next page...

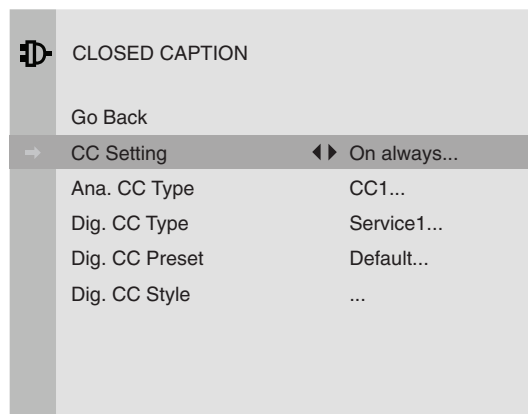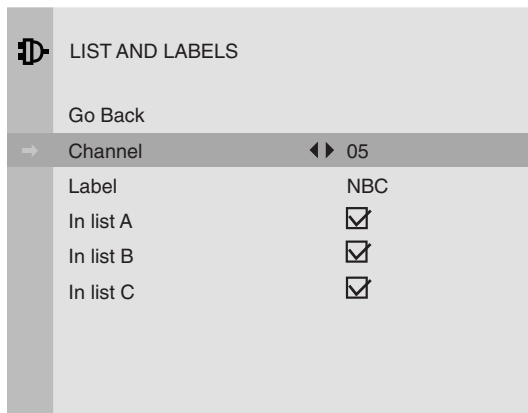

Auto Channel Search Allows the TV to search for available channels to be saved into memory.

List & Labels Lets you edit the channels in the list or choose labels for each channel. To delete a channel from the channel list, highlight *Channel* and use the left or right arrow to select the channel. Then highlight which list the channel appears, *In list A, B or C* and press the OK button. The box should no longer display a check mark. To add a label to a channel, select the channel in the *Channel* option. Press the down arrow to highlight *Label*. Press the right arrow to highlight the first space. Use the up or down arrow to ascend or descend through the characters. Continue to press the right arrow to highlight the space and the up or down arrow to add a character. Press OK when you're done adding the label.

Channel Selection Allows the master user to set the initial channel and to select which of the three channel lists will be active (accessible to the basic user). If no initial channel is selected, the TV tunes to the last channel when turned on. If *Hold* is selected, the user won't be able to select any channel other than the current channel.

Channel Guide Lets you view channels from the channel list.

Closed Caption Lets you choose the way closed captioning information is shown on the screen.

CC Setting The options are *Off*, *On always* and *Mute=On*.

Off No captioning information displayed. This is the default option.

On Captioning information shown always, when available.

Muted=On Captioning information is shown when the MUTE button is pressed.

Dig CC Type The options are *Service 1*, *Service 2*, *Service 3...* *Service 6*.

Dig CC Preset The options are *Default* and *Custom*.

Dig CC Style The options are *Default* and *Custom*. Allows you to customize the size, font, opacity, color and background color options for digital closed caption text. You can choose from a variety of fonts (Ashley, Floridian etc.).


“Monotype” is a trademark of Monotype Imaging, Inc. registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions.

“iType” is a trademark of Monotype Imaging, Inc. and may be registered in certain other jurisdictions.


“Floridian”, “Plate Gothic”, and “Screen” are trademarks of The Monotype Corporation and may be registered in certain other jurisdictions.

“Ashley” is a trademark of The Monotype Corporation Registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions.

Chapter 2: Using the Remote Control

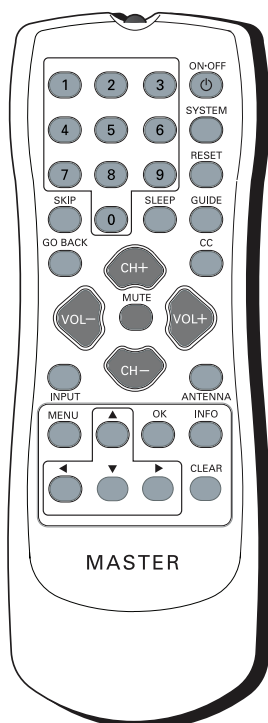

Master Remote R130K2

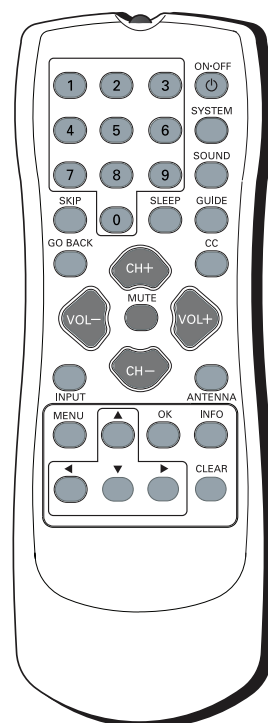

Basic Remote R130K1

Types of Remote Controls

All of the remote controls mentioned here, in addition to other remotes and accessories, are available from your RCA distributor. Descriptions of the remote buttons and how they work are on the next pages. Except as otherwise specified, the master remote is the remote described throughout the manual for operating the TV and setting up the TV's features.

Master Remotes

The master remote control (R130K2) accesses all of the TV's menus. It is used to customize the TV's functionality for specific users or specific situations.

Basic Remotes

The basic remote control (R130K1) is used by the viewer for basic operating functions. It is designed so that the viewer cannot alter certain master remote-specified features. The Sleep, Closed Captioning, and Channel Guide features can be accessed directly with remote buttons.

ClonePRO

The ClonePRO has main operating buttons that function the same as the master remote.

Basic Remote Buttons (R130K1 & R130K2)

ANTENNA When using both ANTENNA/CABLE ANALOG and ANTENNA/CABLE DIGITAL INPUTS this button toggles between signals. Refer to page 6 for more information.

Arrow Buttons and OK Use the arrow buttons to highlight your choices and navigate the menu system. Use the OK button to select your choice.

CC (Closed Captioning) Displays the Closed-Caption Display. Subsequent presses change the display mode.

CH+/- (Channel up or down) Scans up and down through channels in the TV's memory.

CLEAR Clears menus and displays from the screen.

GO BACK Tunes the TV to the last selected channel or video input channel.

GUIDE Displays the Channel Guide (when the menus aren't being accessed).

INFO Displays channel information. Press again to clear channel information.

INPUT Switches between TV (channels 01-125) and other available inputs. See description later in this chapter for more details.

MENU Brings basic menus to the screen and moves from menu to menu. Also, clears the current menu from the screen.

MUTE Lowers the volume to its minimum level. Press again to restore volume.

Number Buttons (0-9) Selects an available channel number. Two digits must be pressed for each channel. Press 0 then 6 for channel 6. For three-digit channel numbers, press and hold 1 until "1--" appears on the screen. Then press the other two digits.

ON•OFF Turns the TV on or off.

Continues on next page...

Using the Remote Control


SKIP (Commercial Skip- R130K1) Press once before changing the channels and the TV waits 30 seconds before returning to the original channel. Each subsequent press adds 30 seconds to the skip time. Press **CLEAR** to cancel.

SLEEP Displays the *Sleep Timer* control panel, which allows the user to set a time for the TV to turn itself off.

SOUND Displays the Sound menu.

SYSTEM Allows the remote to be programmed for TV1, TV2 and TV3 modes. It also allows access to system-defined functionality, when available. See the description later in this chapter for more details.

VOL (Volume up or down) Decrease or increase the TV's volume (unless Volume Hold is on) and displays the Volume Control slider. Go to Chapter 1 for more information on Volume Hold.

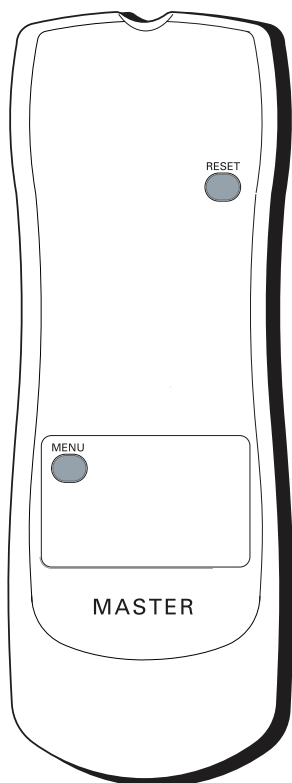


Master Remote R130K2

Additional Remote Buttons (R130K2)

MENU (MASTER) Brings up the master menu screen. This is different from the basic user menu screen.

RESET (MASTER) Returns the picture to the original settings and displays the *Picture Presets* choice list.

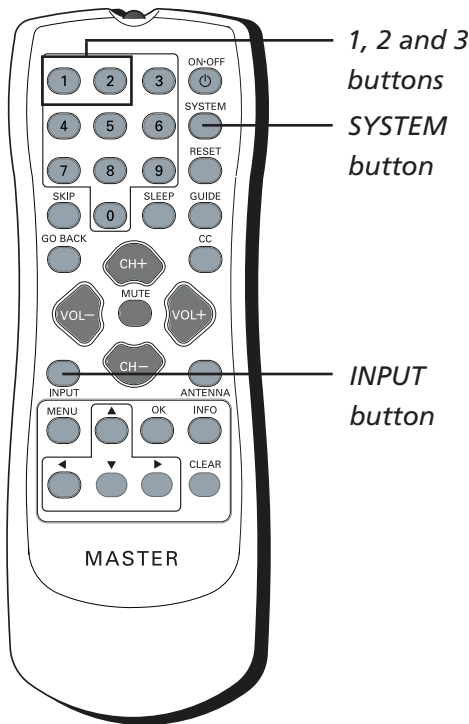

Using the INPUT Button

In addition to a cable or antenna signal, you might have VCR, DVD etc. or other signals coming in to your TV (not all inputs are available on all models). Use the INPUT button to select the desired signal source.

1. Make sure that the component you want to view is turned on.
2. Press INPUT until you have selected the desired input source.

Inputs and On-Screen Displays

The Status Display shows which input signal(s) is selected. The following table shows which display term usually corresponds with which input.

| <u>Input Signal</u> | <u>TV Display</u> |
|-------------------------|-------------------|
| ANTENNA/CABLE jack | (channel digit) |
| Rear A/V jacks | VID |
| S-Video and Audio jacks | S-VID |
| Front Jacks | FRNT |

Using the SYSTEM Button

When the television is connected to an interactive system or similar device, the SYSTEM button allows you to access system programming or other special functionality through the DSCI jack.

On a master or basic remote, the SYSTEM button can also allow independent remote control of two TVs. Once you have specified TV1, TV2 or TV3 status for the TVs, see the Access and Power Options menu on page 12. Follow these steps to tell the remote which TV you want to operate:


1. On the remote control, simultaneously press and hold the SYSTEM button and 1 (for TV1), 2 (for TV2) or 3 (for TV3).
2. After several seconds, release the buttons. The specified TV will respond to that remote.
3. To control the other TV, simply repeat the process using the other (1, 2 or 3) button.

Using the Remote Control


ClonePRO™ Remote Buttons

The ClonePRO can be used as a master remote. First, press ON to turn the remote on. Some of the buttons only apply when using the ClonePRO to download or upload information to or from a TV. Those buttons are described in Chapter 5.

Note: After 30 seconds of inactivity the remote will turn itself off.

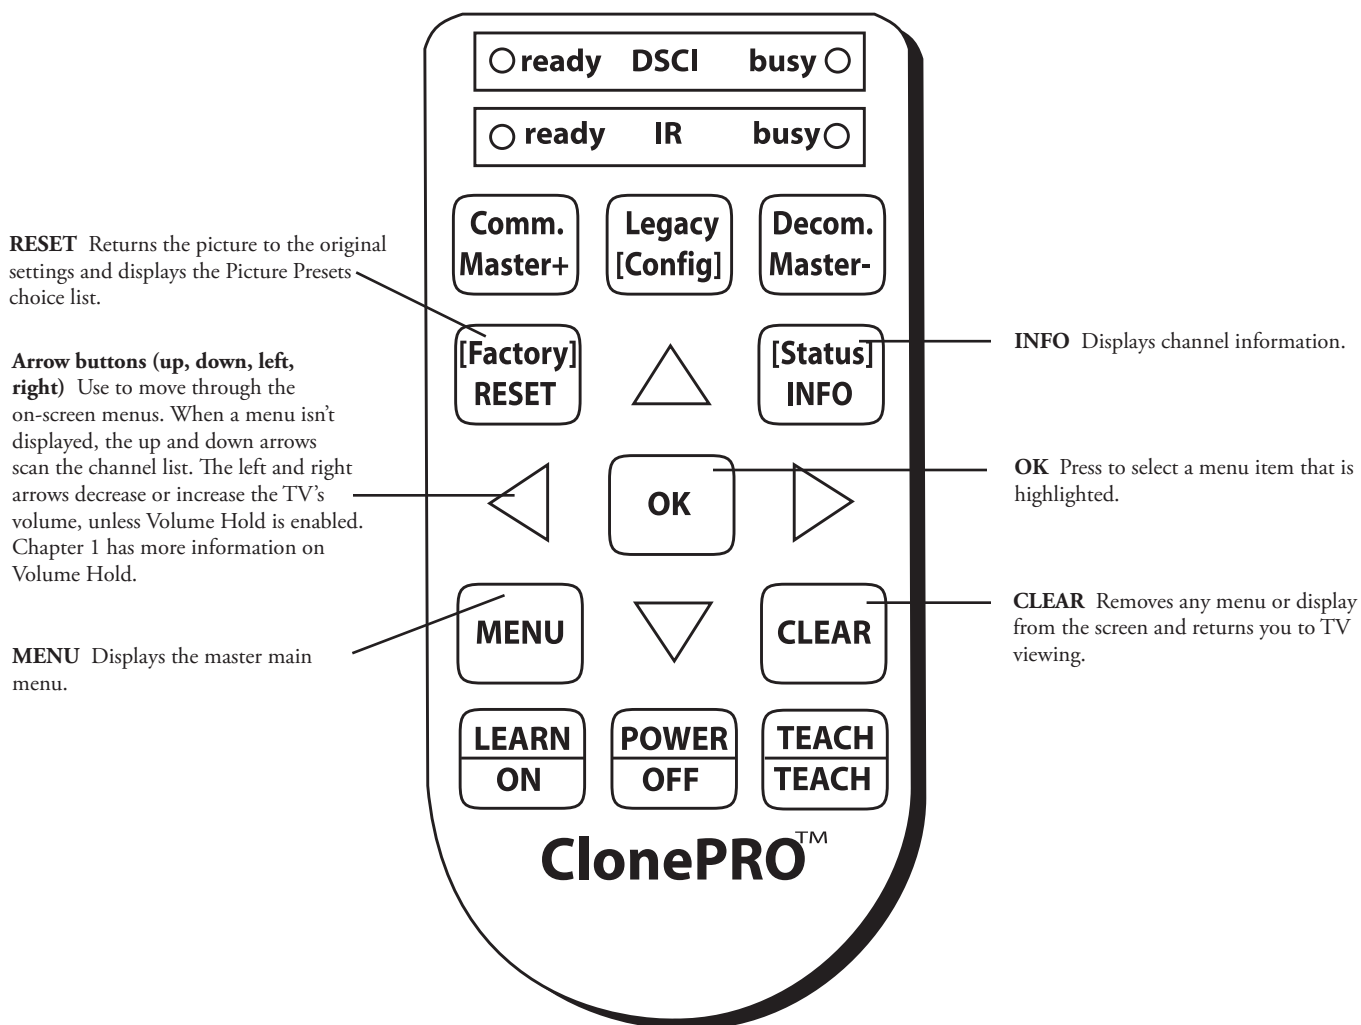

Chapter 3: Using the Menu System

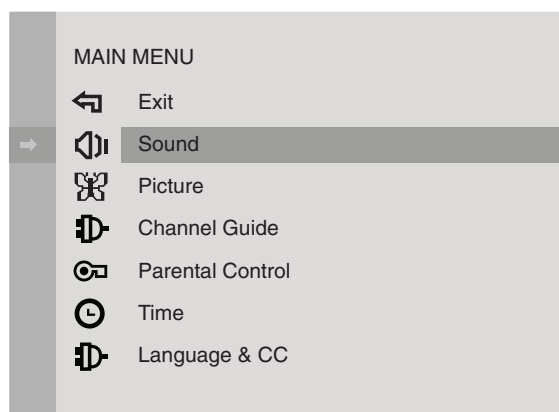

The Basic Menu System

The basic menus are accessible through basic remote controls and the front panel. Which menu items are available will depend on the restrictions set by the master user and the active input. For instance, if Basic Menu Access has been set to Disabled in the Access and Power Options menu, the basic menus and many features will not be available. Also, except for some Parental Controls settings, many of the changes made in the basic menu will revert back to their master menu settings the next time the TV is turned on. Many of the basic menu items function exactly the same as their master menu counterparts. (See Chapter 1 for more details on the master menus).



Note: The Sound menu is available for analog stations only when using the ANTENNA/CABLE ANALOG INPUT jack.

Sound Menu

Go Back Takes you to the previous menu.

Sound Type Choose *Stereo*, *Enhanced*, *SAP* or *Mono*. If you connect to VID or the front jacks, choose from *Stereo* or *Left*. Stereo splits the incoming stereo audio signal into left and right channels. Most TV programs and recorded materials have stereo audio. Stereo or Mono is displayed in the Channel banner when chosen. *SAP* (Second Audio Program) plays the program's audio in a second language, if one is available. This selection is displayed in the Channel banner when chosen.




Picture Menu

The basic *Picture* menu items allow you to adjust the appearance of on-screen images.

Go Back Takes you to the previous menu.


Picture Preset Choose between *Soft*, *Natural*, *Bright* or *Personal*. The default setting is *Natural*.

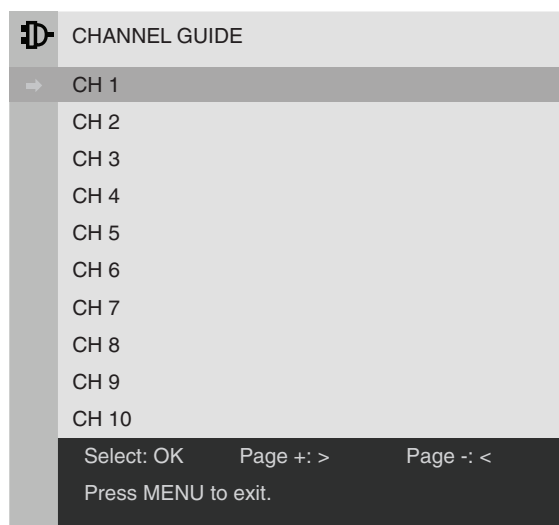


Channel Guide Menu

The basic *Channel Guide* menu is the same as the master Channel Guide menu. It will only display the channels chosen by the master user.

Using the Menu System

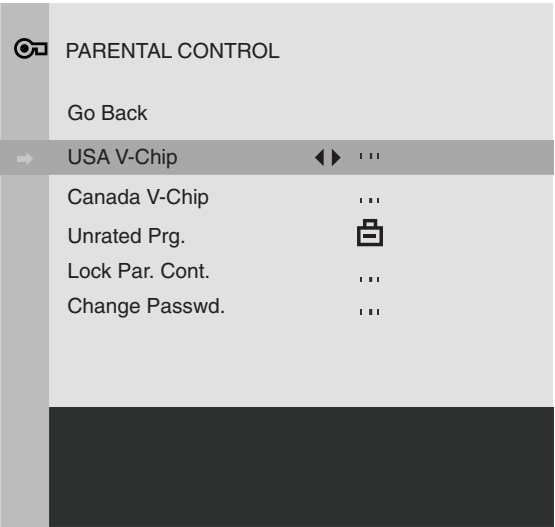

Parental Control is the master menu that controls which menus are available to the basic end user. Chapter 1 reviews the Master menus.

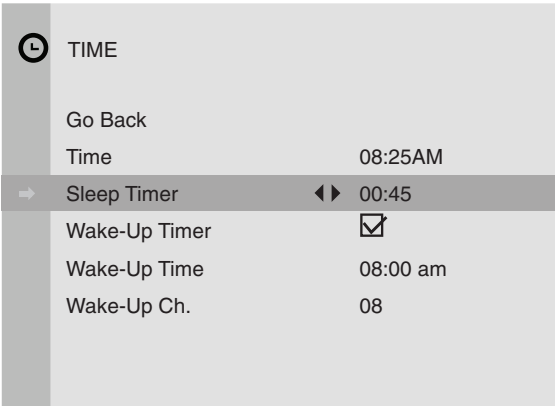

The Sleep Timer and Energy Saver settings are unavailable when On Always has been activated, even if they were set prior to choosing this option.

Parental Control Menu

The basic *Parental Control* menu will depend on the options set by the master user. If the master user chooses *Allow Basic* on menu items, then all options are available. To set movie and TV ratings, content themes, etc., go to Chapter 4.

Go Back Takes you to the previous menu.

USA V-Chip Displays settings for the US version of V-Chip. If you live within the United States, choose this option.

Canada V-Chip Displays settings for the Canadian version of V-Chip. If you live in Canada, choose this option.

Unrated Program This setting allows the master user to determine whether they will allow unrated programs to be shown. *Unlocked-* All unrated programs are shown. *Locked-* All unrated programs are not available. Page 29 has more information.

Lock Parental Controls Puts into effect settings made in the Parental Control menu. A password is required.

Change Password Enter a new password to access Parental Controls. You must know the prior password for it be accepted.

Time Menu

The functions of the basic Time menu will depend on the options set by the Master user.

Go Back Takes you to the previous menu.

Time Displays the current time if the master user has set the time.

Sleep Timer Lets you select the amount of time (in 15 minute increments) you want to give the TV before it shuts itself off (up to four hours). A message is displayed as a warning before the TV turns off. Select 00:00 to stop this function. This feature won't work if *TV Power* in the master menu is set to *On Always*. The default setting is 00:00.

Wake-Up Timer Displays a menu that lets you enter the time and channel you want your TV to turn to when it turns on.

Wake-Up Time Lets you select the time you want the TV to turn itself on when the Wake-Up Timer is set.

Wake-Up Channel Lets you select a specific channel the TV tunes to when the Wake-Up Timer is set.

| | |
|-----------------|---------------|
| LANGUAGE & CC | |
| Go Back | |
| → Language | ◀▶ English... |
| CC Setting | On... |
| Analog CC Type | CC1... |
| Digital CC Type | Service1... |

Language & CC Menu

Go Back Takes you to the previous menu.

Language Displays your preferred language for the menus. Select *English*, *Français* (French) or *Español* (Spanish).

CC Setting Use the CC button on the remote to choose whether closed captioning information is shown on the screen.

Analog CC Type Displays the CC modes for analog stations: CC1, CC2, CC3, CC4, T1, T2, T3 or T4.

Digital CC Type Choose which captioning mode to be displayed for digital channels.

The TV can be "Decommercialized"


If you no longer want your TV to function as a commercial one, the steps below describe how to make it a non-commercial TV. Many features and options found in non-commercial TVs are included for your use.

- Make sure the TV is off.
- Press VOL- on the front of the TV and MENU on the remote for a few seconds simultaneously.
- The TV will turn on and activate the decommercialization sequence.


Note: In the case of inadvertent decommercialization, the user can reverse the TV to a commercial set by using the same button combination above. The decommercialized TV will turn on and reset to a commercial set.

When using the ClonePro remote, it has buttons to decommercialize and commercialize the TV. Go to page 31 for more information.

Chapter 4: Using the TV's Features



Channel Banner menu for an analog channel.



Channel Banner menu for a digital channel.

Channel Banner

There are several items that might appear on-screen when you press the TV or INFO button on the remote. This display is called the Channel Banner. The following list describes the items on the Channel Banner screen (left to right and top to bottom).

| | |
|----------------|--|
| SAP | Displayed when the current channel is broadcasting SAP (Second Audio Program) information. |
| English | Displays the audio language for digital programming. Go to the Presets menu to choose your current and default language settings. Refer to page 11 for more information. |
| 📺 | Displayed when V-Chip has been activated. |
| CC | Displayed when Closed Captioning is available on the current channel. |
| Stereo or Mono | Stereo is displayed when the current channel is broadcasting in stereo. Mono is displayed when the current channel is broadcasting in mono. |
| Skip: 0:30 | Corresponds to the SKIP button. Shows the amount of time left before the TV switches back to the previous channel. |
| 07:18 am | Displays the current time. |
| 06 ABCDEF | Displays the current channel and label assigned to the channel. |
| 🔇 | Displayed when you mute the sound. |

Parental Controls and V-Chip

The choices in the *USA V-CHIP* menu involve software inside your TV (referred to as V-Chip) which allows you to block TV programs and movies based on violence, sex, or other content you may believe children should not view.

Once you block programs, you can unblock programs by entering a password.

By default, the V-Chip software inside your TV is turned “off.”

How V-Chip Works

V-Chip reads the program's age-based rating (TV-MA, TV-14, etc.) and content themes [(Violence (V), Adult Language (L), etc.)]. If you have blocked the rating and/or content themes that the program contains, you will receive the message, "This channel has not been approved for viewing". Change channel or press OK to enter password and temporarily deactivate the Parental Control.

Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block out programs that have been given a rating of Not Rated, and programs that are considered unrated. The TV age-based ratings and content themes you can block follow:

USA V-Chip Rating System

TV-MA (Mature Audience Only) Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).

TV-14 (Parents Strongly Cautioned) Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).

TV-PG (Parental Guidance Suggested) Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).

TV-G (General Audience) Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).

TV-Y7 (Directed to Children 7 years and older) Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence (FV) or comedic violence, or may frighten children under the age of 7.

TV-Y (All Children) Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.

Canadian English V-Chip Rating System

18+ (Adults) Programming intended for adults 18 and older. It may contain elements of violence, language, and sexual content which could make it unsuitable for viewers under 18. Violence Guidelines: May contain violence integral to the development of the plot, character or theme, intended for adult audiences. Other Content Guidelines: May contain graphic language and explicit portrayals of nudity and/or sex.

14+ (Viewers 14 and over) Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens. Violence Guidelines: May contain intense scenes of violence. Could deal with mature themes and societal issues in a realistic fashion. Other Content Guidelines: May contain scenes of nudity and/or sexual activity. There could be frequent use of profanity.

PG (Parental Guidance) Programming intended for a general audience but which may not be suitable for younger children (under the age of 8). Parents may consider some content inappropriate for unsupervised viewing by children aged 8-13. Violence Guidelines: Depictions of conflict and/or aggression will be limited and moderate; may include physical, fantasy, or supernatural violence. Other Content Guidelines: May contain infrequent mild profanity, or mildly suggestive language. Could also contain brief scenes of nudity.

G (General Audience) Programming considered acceptable for all ages groups. While not designed specifically for children, it is understood younger viewers may be part of the audience. Violence Guidelines: Will contain very little violence, either physical or verbal or emotional. Will be sensitive to themes which could frighten a younger child, will not depict realistic scenes of violence which minimize or gloss over the effects of violent acts. Other Content Guidelines: There may be some inoffensive slang, no profanity and no nudity.

C8+ (Children 8 and Older) Programming generally considered acceptable for children 8 years and over to watch on their own. Violence Guidelines: Violence will not be portrayed as the preferred, acceptable, or only way to resolve conflict or encourage children to imitate dangerous acts which they may see on television. Any realistic depictions of violence will be infrequent, discreet, of low intensity and will show the consequences of the acts. Other Content Guidelines: There will be no profanity, nudity or sexual content.


C (Children) Programming intended for children under age 8. Violence Guidelines: Careful attention is paid to themes which could threaten children's sense of security and well being. There will be no realistic scenes of violence. Depictions of aggressive behavior will be infrequent and limited to portrayals that are clearly imaginary, comedic or unrealistic in nature. Other Content Guidelines: There will be no offensive language, nudity or sexual content.

Continues on next page...

Using the TV's Features

Canadian French V-Chip Rating System

- 18+ (Adults) Programming is for adults only. This program contains sustained violence or extremely violent scenes.
- 16+ (Viewers 16 and over) Programming is not suitable for those under age 16. This program contains frequent scenes of violence or intensely violent scenes.
- 13+ (Viewers 13 and over) Programming may not be suitable for children under the age of 13. This program either contains several violent scenes or one or more scenes that are violent enough to affect them. Viewing in the company of an adult is therefore strongly recommended for children under the age of 13.
- 8+ (Viewers 8 and over) Not recommended for young children. This program is suitable for most audiences, but it contains mild or occasional violence that could upset young children. Viewing in the company of an adult is therefore recommended for young children (under the age of 8) who do not distinguish between reality and imagination.
- G (General Audience) This program is suitable for audiences of all ages. It contains no violence, or any violence that it does contain is either minimal or is presented in a humorous manner, as a caricature, or in an unrealistic way.

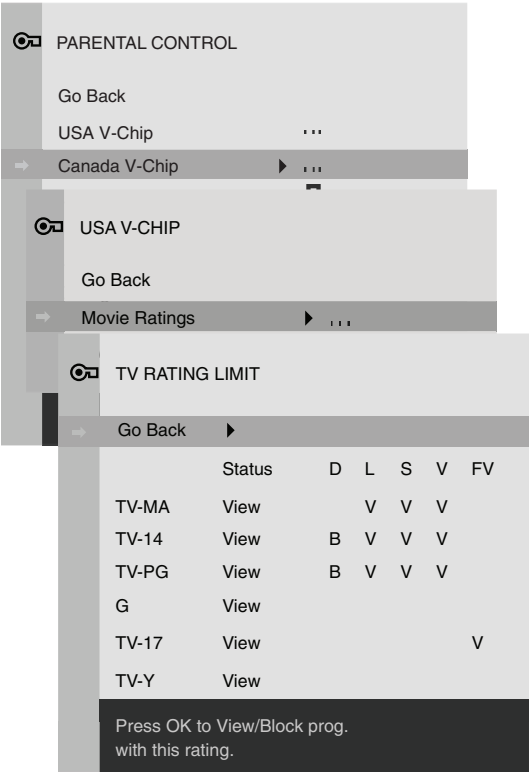

USA V-Chip TV Rating Limit

The V-Chip TV Rating Limit lets you decide which TV programs can and cannot be viewed.

To set TV programming limits:


1. Choose *Parental Control* from the Main menu (the PASSWORD screen appears the first time you enter the Parental Control menu). Create your password using the number buttons on the remote.
2. Highlight and select *USA V-Chip*. Then select *TV Ratings*.
3. Once you get to the TV RATING LIMIT screen, use the arrow buttons and OK on your remote to change the status of a TV program rating or content theme from View to Block.

The following sections give you more details about how to change the status of TV program limits.

Note: If you forget your password you can reset it. Make sure the TV is off. Simultaneously press and hold VOL- on the TV's front panel and CLEAR on the remote for approximately 5 seconds. Enter a new password the next time you access the PARENTAL CONTROL menu.

The V-Chip Rating Screen

The following is an example of where items are located within the TV RATING LIMIT screen.

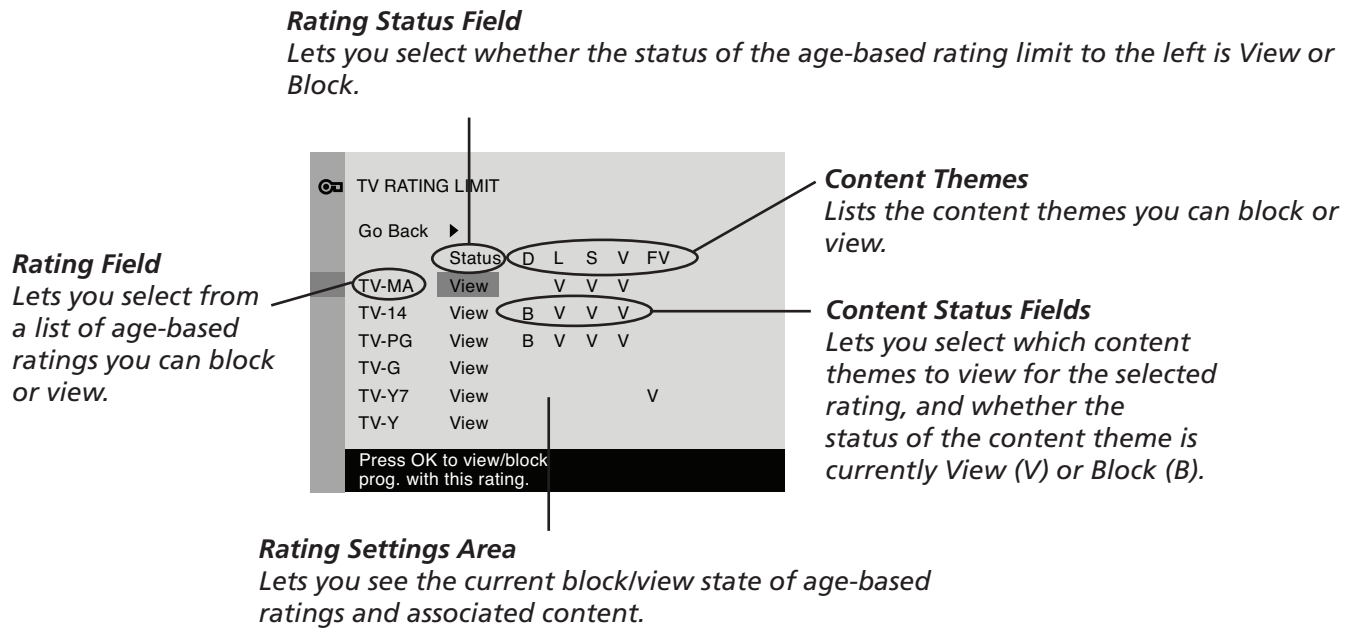

| Hierarchy of Age-Based Ratings | |
|--------------------------------|--|
| TV-MA | Mature Audience Only |
| TV-14 | Parents Strongly Cautioned |
| TV-PG | Parental Guidance Suggested |
| TV-G | General Audience |
| TV-Y7 | Directed to Children 7 years and older |
| TV-Y | All Children |

Blocking Age-Based Ratings

You can automatically block all program ratings above a specified age-based rating level.

To block programs with higher ratings:

1. Press the up or down arrow button to scroll to the rating corresponding with the lowest rating you do not want the child to watch.
2. Press the OK button to toggle between View and Block. The status for the rating listed to the left and all higher ratings automatically changes to Block.
3. Press the up or down arrow button to highlight *Go back* and press OK.
4. Turn on V-Chip active in the PARENTAL CONTROL menu (box has check mark) for rating limits to take effect.

Viewing Age-Based Ratings

After you block age-based ratings, you can change some of the ratings back to *View*.

1. Press the up or down arrow button to select the rating with a status of Block.
2. Press OK to select *View*.

Using the TV's Features

| Content Themes | |
|----------------|-----------------------------------|
| <i>D</i> | <i>Sexually explicit dialogue</i> |
| <i>L</i> | <i>Adult language</i> |
| <i>S</i> | <i>Sexual situations</i> |
| <i>V</i> | <i>Violence</i> |
| <i>FV</i> | <i>Fantasy Violence</i> |

Blocking Specific Content Themes

You can block programs based on their content. (Content is represented by the D, L, S, V and FV on your screen.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

To block program content:

1. Determine the content themes you want to block.
2. Press the down arrow button to scroll to the rating whose content theme you want to change.
3. Press the right arrow button to move the highlight to a particular content theme status.
4. Press the OK button to change its status to B. (In the example to the left, you block the language (L) corresponding with TV-14. The language for TV-MA is blocked as well).

Notes: Broadcasters are not required to provide content themes or age-based ratings.



You must remember to activate Parental Controls for rating limits to take effect.

Viewing Specific Content Themes

If you block specific content themes, you have the option of going back and changing some of the content themes back to (V) View:

1. Determine the content themes you want to change to (V) View.
2. Press the down arrow button to scroll to the rating whose content theme you want to change, such as B under language (L) corresponding with TV-14.
3. Press the right arrow button to move the highlight to a particular content theme status.
4. Press the OK button to change the status back to V. Your child would then be able to watch programs with the TV-14 adult language content, but not programs with TV-MA language content.

Note: Only the content theme status corresponding to TV-14 (L) language changes to (V) View. Higher rated content themes, such as that for TV-MA language, do not change.

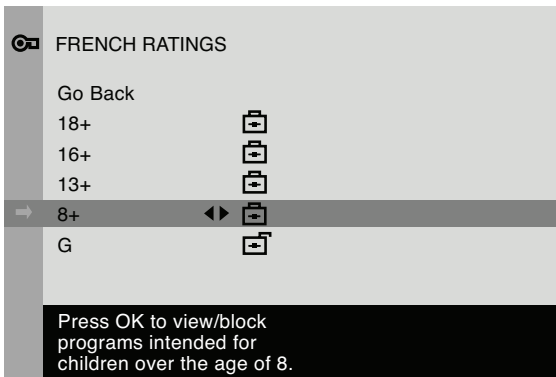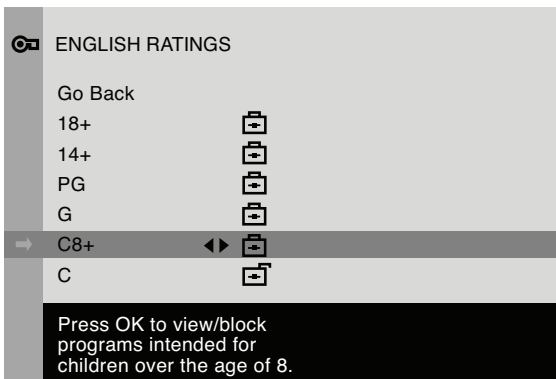

Blocking Canadian V-Chip Ratings

If you receive Canadian programs you can block Canadian English and French V-Chip by ratings only. When you block a particular rating, you automatically block the higher rated programs as well.

To block Canadian English and French program ratings:

1. Select *Canada V-Chip* from the PARENTAL CONTROL menu.
2. Highlight *English Ratings* or *French Ratings* and press OK.
3. Determine the rating you want to block.
4. Press the down arrow button to scroll to the rating you want to change.
5. Press the OK button to change its status to block (the lock icon appears and all ratings above the one you selected change to lock).

V-Chip Movie Rating Limit

Set movie rating limits by blocking movies rated above a specified level.

To access the Movie Rating Limit menu:

1. Press MENU on the remote control (the MAIN MENU appears).
2. Select *Parental Control*.
3. Select *USA V-Chip*.
4. Select *Movie Ratings*.

Blocking Movie Ratings

Once you are in the Movie Rating Limit menu, follow the same steps described for blocking Canadian V-Chip Ratings.

V-Chip Exempt Program Block

The *Exempt Prgms.* option lets you decide if programs that the V-Chip recognizes as unrated can be viewed. Unrated TV programs may include news, sports, political, religious, local and weather programs, emergency bulletins, public announcements, and programs without ratings. The Exempt option applies to both USA and Canadian unrated programs and Canadian programs rated *E*.

Unlocked All unrated programs are available.

Locked All unrated programs are not available.

Press the down arrow to highlight *Exempt Prgms.* Then press the right arrow to toggle between the lock and unlock icon.

Using the TV's Features

Front Panel


Selecting this option lets you lock (disable) or unlock (enable) the TV's front panel. The remote still tunes to any channel. When using this as a Parental Control method, remove access to any remote that is capable of operating the television.

1. From the PARENTAL CONTROL menu, press the up or down arrow to highlight *Front Panel*.
2. Press the right or left arrow to turn on (lock is closed) or off (lock is open) front panel lock.

Creating A Password

Selecting this option lets you create a new password. Enter a new password from the *Password* menu in the *Lock Parental Control* menu, this is the password you use until you change it.

Using the ClonePRO™

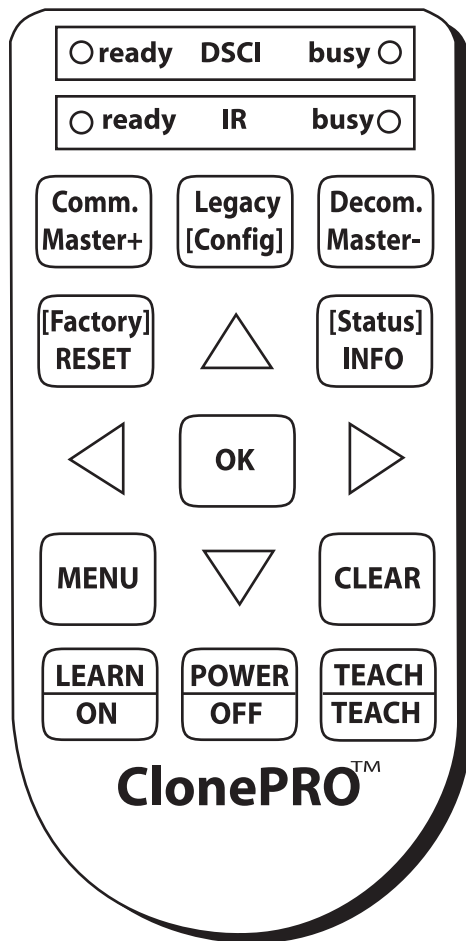

Modes of operation

The ClonePRO operates from one of two modes:

DSCI Connect a DSCI cable to the ClonePRO remote and to the TV's DSCI port on the back panel.

IR (Infrared) This operation is wireless. Press ON to begin using the remote in IR mode.

The corresponding "ready" light indicates the mode of operation, and the corresponding "busy" light indicates activity in this mode.

Buttons with black labels function similarly in both modes, while green labels operate DSCI mode and red labels operate IR mode.

DSCI mode

The ClonePRO enters this mode when it is connected to the TV's Digital Serial Communications Interface port via a cable (included).

- Any standard (no-flip, 1-to-1) 8-conductor computer-networking cable may be used.
- No battery is required in this mode.
- If the unit is already in IR mode, press OFF to speed the transition to DSCI mode.

DSCI (green) buttons

Comm Restores the TV to normal commercial operation, essentially undoing the effect of the Legacy and Decom buttons.

Decom "Decommercializes" the TV to facilitate aftermarket resale.

[Factory] Available in certain models only.

Note: Pressing FACTORY overwrites any settings already in the TV.

LEARN Begins the process of learning the settings from a TV that has been setup as desired.

Note: Pressing LEARN overwrites any settings already in the ClonePRO.

Legacy Places the TV in a mode in which it emulates the behavior of older models. This is a required part of the configuration for some applications.

POWER Turns on the TV. It is recommended, though not required, when in DSCI mode to view on-screen displays.

[Status]: Press and hold the INFO button for several seconds to display settings stored in the ClonePRO and the TV. For example:

Mem: CB:36 TV:36

This tells you the ClonePRO and the TV have 36 pages of information stored in memory.

Continues on next page...

Other Information

Across the screen are red dashes. Press any button on the remote control you are using. Red pulses should appear, telling you the TV is recognizing the remote and is able to send out that information. If red pulses don't appear, contact your RCA distributor.

TEACH: This begins the process of teaching the settings stored in the ClonePRO to the TV to which it is connected.

Note: *Pressing TEACH overwrites any settings already in the TV.*

After successful teaching, the TV will turn off and reboot.

If the memory-image stored in the clone-box is not valid for the TV, an on-screen message will advise of the conflicting memory-sizes.

IR mode

The ClonePRO enters the IR mode when any button on the bottom row of the keypad is pressed (without connection to a TV DSCI port).

A standard 9V battery (accessed via a small rear panel) is required to enable this mode.

Notes: *Like any IR (infrared) remote control, the ClonePRO requires a reasonable line of sight between it and the TV for proper signaling. Obstructions, long distances, sharp angles and certain specialty lighting can reduce the effective range.*

If the "IR ready" light stays on longer than 1 minute by itself, temporarily remove the battery to reset it.

Remove the battery prior to long-term storage.

IR (red) Buttons

Note: *You must press the ON button for the IR buttons to operate.*

Master+ & Master- The Master- button disables access to the TV's master menus via the master remote. (Some third-party devices, attached to the TV's DSCI port as part of a larger system, may disable access to master menus even after they are disconnected.) To enable the master menus, press Master+.

OFF Turns the TV off, and turns the ClonePRO off.

ON Turns the TV on, and turns on the ClonePRO IR mode, ready for subsequent buttons. Note that the unit will automatically turn itself off 30 seconds after the last button has been pressed to extend battery-life.

TEACH Begins teaching the settings stored in the ClonePRO to the TV, effectively "Cloning" the initially configured TV. May be made more reliable for older models by first filling the memory of the example TV with channel-labels on unused channels.

After an IR TEACH, older-model TVs do not need to reboot.

Note: *Pressing TEACH overwrites any settings already in the TV.*

- A TV must be turned on before being taught in IR mode.
- After successful teaching, the TV turns off and turns on with the new settings.
- If the TV displays the message *Cloning Timeout* or *Cloning Aborted*, press TEACH again to retry, experimenting with the ClonePRO at different distances and angles from the TV.
- If no valid settings have been stored via a DSCI LEARN, the IR ready light will come on but nothing will appear on the TV screen.

Note: *The ClonePRO cannot be used to cross clone (to copy the memory of older models into newer models, or vice versa), because the two have completely different memory-maps, memory-sizes, features and settings.*

[Config]: Pressing and holding this button in IR mode toggles the "decommercialization" and aftermarket resale of older-model televisions. Note that this is not reversible after turning-off older-model TVs.

Cloning a TV

Use the ClonePRO or a master remote to complete any necessary setup steps to the TV, such as *Auto Channel Search*, changing *Access and Power Options*, etc. Go to Chapter 1 for more information on setting up the TV. When you have finished setting up the TV, you can use it as your example TV.

1. Connect the ClonePRO to the example TV's DSCI port.
2. It is recommended, though not required, to turn on the TV. Press the POWER button.
3. Press the LEARN button to begin the cloning process. When it is complete, *Cloning Complete* is displayed on-screen.
4. Take the ClonePRO to each subsequent TV and then (in either DSCI or IR mode) TEACH each TV, monitoring the process on-screen.

The settings learned by the ClonePRO remain indefinitely, ready to TEACH the next TV until overwritten by a new LEARN operation.

The ClonePRO remote is capable of cloning the following items:

1. Settings in the *Main Menu - Master*.
2. All analog channels located in the channel lists A, B, and C.
3. Channel labels for channels 2-99.
4. Up to 30 digital channels from the digital channel list.

Note: The TEACH function should be performed in analog mode due to the interlaced bus traffic in digital mode.

General troubleshooting

Problems with the DSCI mode

- Make sure the TV is plugged into a live electrical outlet.
- Make sure the ClonePRO is plugged into the TV's DSCI port.
- The connecting cable should have at least 6 wires, mapping 1-to-1 (not flipped).

ClonePro remote isn't working

- Check the battery. Place a new 9V battery in the unit if the battery is old.
- Make sure the ClonePRO is pointed at the TV with a clear line of sight.
- If you are trying to TEACH, make sure there is a valid memory stored in the ClonePRO (Check by going into DSCI-mode [Status].)

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the Troubleshooting list that follows.

TV Problems

TV won't turn on

- Press the TV button.
- Make sure the TV is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is “live” by plugging in something else.
- Something might be wrong with your remote control. Press the POWER button on the front of the TV. If the TV turns on, check the remote control solutions on the next page.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting *Front Panel* in the *Access and Power Options* menu and choosing *Enabled*.

Controls don't work

- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting *Front Panel* in the *Access and Power Options* menu and choosing *Enabled*.
- Unplug the TV for two minutes and then plug it back in. Turn the TV on and try again.

TV turns off unexpectedly

- A Schedule Recurrence may have been set. In the master menu system go to *Time* then *Schedule*.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again. If this happens frequently, the voltage in your house may be abnormally high or low.
- *Sleep Timer* or *Energy Saver* may have been set. Chapter 1 has more details.

TV turns on unexpectedly

- *Wake Timer* might have been set. Go to page 15 for instructions.
- You might have pressed CH+, CH- or OK on the remote accidentally.

Blank screen

- Make sure the component connected to the TV is turned on, and the TV is tuned to the correct Video Input Channel (Channel 3/4, VID, S-VID, etc.)
- Try another channel.
- Press RESET, in case the picture controls are set too low.
- Press the ANTENNA button.

No sound, picture okay

- Maybe sound is muted. Press the volume up button to restore sound.
- Maybe Initial Volume is set low. Go to the master *Sound menu* to check.
- If using S-Video, remember to also connect the component's left and right audio output jacks to the TV.

Can't select certain channel

- Channel may be blocked or not approved in the *Parental Control* menu.

Noisy stereo reception

- The station might be weak. Change the *Sound Type* in the *Sound* menu from stereo to mono.

No picture, no sound but TV is on

- Maybe the cable/air setting is set to the wrong position. Select *Signal Type* from the master *Setup* menu. Go to Chapter 1 for more information.
- The channel might be empty — change channels.
- If you're trying to watch content from a component that's connected to the TV (like a DVD player or VCR), press the INPUT button on the remote control until the content appears.

Sound okay, picture poor

- Check antenna connections. Make sure all of the cables are firmly connected to the jacks.
- Try adjusting sharpness function to improve weak signals. Go to page 12 for more instructions.

Volume buttons not adjusting volume

- Check to make sure volume isn't limited by the minimum/maximum volume feature. Go to page 11 for more instructions.

Black box appears on the screen

- Closed-captioning might be on. Check *Closed-Caption* in the *Setup* menu. Go to page 15 for more information.

Device connected through the DSCI port isn't working with the TV

- Go to the *Access and Power Options* menu. Make sure *Min Stby Power* is disabled to power the DSCI port. Go to pages 13 and 31 for more information.

ANTENNA button doesn't switch to the digital tuner

- Digital channels must be present in the *List & Labels* channel list in order to access. Run the *Auto Ch Search* to find the available channels. Go to page 16 for more information.

The Remote Control Doesn't Work

- Something might be between the remote and the remote sensor on the component. Make sure there is a clear path.
- Maybe batteries in remote are weak, dead or installed incorrectly. Put new batteries in the remote.
- You might need to reset the remote: remove batteries and press the number 1 button for at least 60 seconds. Release the 1 button and replace the batteries.
- Operation of certain remote control buttons might be restricted by master menu settings.
- Maybe remote is in wrong configuration (TV1, TV2 or TV3) for that TV. Check the *Remote Config.* settings in the *Access and Power Options* menu.

Problems with V-Chip/Parental Controls

The rating limits don't work

- You must lock the settings. Go to the Main menu, select *Parental Control*, then *Lock Parental Controls* to save your settings.

I don't remember my password and I want to unlock the TV

- Use the master remote to access the *Password* option in the *Lock Par. Controls* portion of the *Parental Controls* menu.

The V-Chip won't let me watch a program even though it's not rated as violent.

- Maybe the movie was given an NR (Not Rated) status. After you block movie ratings, you must set *NR* to *View* separately in order to view movies with an NR rating.
- Video Input Channels (VID, SVID, FRNT) aren't available unless they have been manually added to the channel list.

What Else Can I Do?

If you've been through the Troubleshooting section and nothing has fixed your problem, try rebooting your TV. Note that after a reboot you may need to run your TV through the setup process again. To do a reboot, unplug the power cord from the wall outlet, power strip, etc. Keep your TV unplugged for about 5 minutes. Then plug the TV back in, turn on the TV, and see if the problem is fixed. If the problem remains, then please visit www.rca.com/television or contact RCA Customer Support at the support number provided in your Warranty under *How You Get Service*.

Other Information

Menu Problems

- Menu access may be blocked by ClonePRO programming.
- Try unplugging the TV for two minutes and then plug it back in and turn it on.
- The Energy Saver settings won't work if the *TV Power* is set to *On Always* in the *Access and Power Options* menu.
- The basic menu options might be restricted by master menu settings.
- The ClonePRO might have disabled master menus.
- Sleep and Schedule functions won't work if the *TV Power* is set to *On Always*.

Care and Cleaning

CAUTION: Turn OFF your TV before cleaning.

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

Limited Warranty

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year for labor charges.
- One year for parts.
- One year for picture tubes.

(The warranty begins at time of first installation or 45 days after shipment, whichever comes first.)

What we will do:

- Pay any Authorized RCA Commercial Television Service Center the labor charges to repair your television.
- Pay any Authorized RCA Commercial Television Service Center for the new or, at our option, refurbished replacement parts and picture tube required to repair your television.

How you get service:

- Request service from any Authorized RCA Commercial Television Service Center, provided that your television is located within the geographic territory covered by an Authorized Commercial RCA Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your location.
- To identify your nearest Authorized RCA Commercial Television Service Center, ask your distributor, visit www.rcacommercial.com, look in the Yellow Pages, or call 1-800-880-5966.
- Show the Authorized Service Center Representative your sales receipt or other evidence of purchase date or first rental.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your distributor or sales representative.)
- Installation and related adjustments.
- Acts of God, such as, but not limited to lightning damage.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Damage from images burnt onto the screen.
- A television that has been modified or incorporated into other products.
- A television purchased or serviced outside the USA.
- In-room service.

Product registration:

- Please complete and mail the Product Registration Card packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY TTE TECHNOLOGY, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

Continues on next page...

Other Information

- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TTE TECHNOLOGY, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your distributor for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

This page intentionally left blank.



As an ENERGY STAR® Partner, TTE Technology, Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

ENERGY STAR AND THE ENERGY STAR mark are registered U.S. registered marks.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.”

Visit the RCA website at www.rca.com/television

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

TTE

TTE Technology, Inc.

101 West 103rd Street
Indianapolis, IN 46290

©2006 TTE Technology, Inc.

RCA and associated marks are trademarks of THOMSON S.A. used under license to TTE Corporation.

Printed in USA

TOCOM 16729080