Canon

PUB. DIE-0399-000

HD Camcorder Instruction Manual



HFM36 **LEGRIA**

LEGRIA

HFM307



PAL

Important Usage Instructions

WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

To reduce the risk of electric shock, do not expose this product to dripping or splashing.

The Mains plug is used as the disconnect device. The Mains plug shall remain readily operable to disconnect the plug in case of an accident.

While using the compact power adapter, do not wrap it or cover it with a piece of cloth, and do not place it in confined narrow spaces. Heat may build up, the plastic case may deform and it could result in electric shock or fire.

CA-570 identification plate is located on the bottom.



Using any device other than the Compact Power Adapter CA-570 may damage the camcorder.

European Union (and EEA) only.



These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC), the Battery Directive (2006/66/EC) and/or your national laws implementing those Directives.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canon-europe.com/environment.

(EEA: Norway, Iceland and Liechtenstein)

Trademark Acknowledgements

- . SD, SDHC and SDXC logos are trademarks of SD-3C, LLC.
- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- . Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- . "x.v.Colour" and the "x.v.Colour" logo are trademarks.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- · YouTube is a trademark of Google Inc.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.
- This device incorporates exFAT technology licensed from Microsoft.
- ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH
 THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY
 PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH
 LICENSE IS AVAILABLE FROM MPEG I.A. L.L.C. 250 STEFLE STIRET. SUITE 300. DENVER. COLORADO 80206.
- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4
 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and noncommercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant
 video. No license is granted or implied for any other use for MPEG-4 standard.



Exciting Features and New Functions





High-Definition Video



Your camcorder's full high-definition image sensor (Full HD CMOS) captures video at a resolution of 1,920 x 1,080 pixels². Videos are then recorded in the memory in high definition, using AVCHD specifications³.

With your new HD camcorder, capturing

the special moments in your life with amazing image quality and in lifelike vibrant colors is easy and fun!



HFM36 Dual Flash Memory

You can record in the built-in memory or on commercially available memory cards (33).

HFM36 Relay Recording



The built-in memory almost full? Use the memory card slot to keep on recording video without interruption (36).

¹ "Full HD 1080" refers to Canon camcorders compliant with high-definition video composed of 1,080 vertical pixels (scanning lines).

² Video is recorded at this resolution only when the recording mode is set to MXP or FXP mode. In other recording modes, the picture is recorded at 1,440 x 1,080 pixels.

³ AVCHD is a standard for recording high-definition video. With AVCHD specifications, the video signal is recorded using MPEG-4 AVC/H.264 compression and the audio signal is recorded in Dolby Digital.

Smart AUTO (40)

Smart AUTO automatically selects the best scene mode for the scene you want to shoot. You get spectacular recordings every time without worrying about settings.



Just point the camcorder and it will automatically select the best settings for your subject



Video Snapshot

Shoot or capture short scenes and arrange them into a video clip set to your favorite background music.



Face Detection (\$\sum 63\$)


The camcorder automatically detects people's faces and adjusts the focus and other settings accordingly for beautiful results.

Image Stabilization



Dynamic IS (61) compensates for camcorder shake when you shoot video while walking. Powered IS (62) will produce stable shots when you zoom in on distant subjects (full telephoto).

Enjoying your Recordings on Other Devices

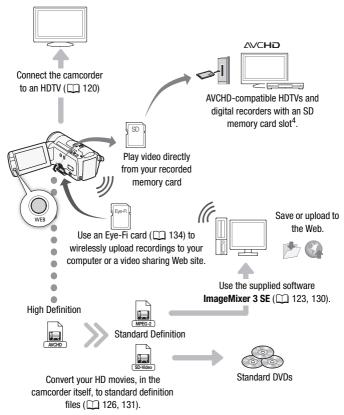

⁴ Refer to the instruction manual of the device. Depending on the device used, correct playback may not be possible even if the device is AVCHD-compatible. In such case, play back the recordings on the memory card using the camcorder.

Table of contents

Intr	oduction
4 12	Exciting Features and New Functions About this Manual
14 14 16	Getting to Know the Camcorder Supplied Accessories and CD-ROMs Names of Parts
Pre	parations
19 19 22 24	Getting Started Charging the Battery Pack Preparing the Accessories Adjusting the Position and Brightness of the LCD Screen
26 26 27 28	Basic Operation of the Camcorder Using the Touch Screen Operating Modes Using the Menus
31 31 32 32	First Time Settings Setting the Date and Time Changing the Language Changing the Time Zone
33	Using a Memory Card Memory Cards Compatible for Use with the Camcorder

Inserting and Removing a Memory Card

#FM36 Selecting the Memory for the Recordings

Initializing the Built-in Memory (HFM36 only) or

HFM36 Relay Recording of Movies

Memory Card

35

35

36 37

■ Dual Shot Mode

39 Basic Recording

- 39 Shooting Video and Taking Photos in Dual Shot Mode
- 40 About the Smart AUTO mode
- 43 Zooming
- 44 Quick Start Function

■ Video

46 Basic Playback

- 46 Playing Back the Video
- 49 The Index Selection Screen: Selecting the Content to Play Back
- 51 3D Flip View
- Narrowing Down the Scenes Shown in the Index Screen
- 53 Deleting Scenes

55 Advanced Functions

- 55 Shooting Video in **M** Manual Mode
- 56 Selecting the Video Quality (Recording Mode)
- 57 Special Scene Recording Programs
- 60 Cinema Mode: Giving a Cinematic Look to your Recordings
- 61 Advanced Image Stabilization
- 62 Pre-Recording
- 63 Face Detection
- 65 Touch & Track
- 65 Video Snapshot
- 66 Digital Effects
- 67 Manually Setting the Shutter Speed or Aperture
- 70 Manual Exposure Adjustment
- 71 Automatic Gain Control (AGC) Limit
- 71 Manual Focus Adjustment
- 73 White Balance74 Image Effects
- 74 Image Ellects
- 75 Mini Video Light
- 77 Self Timer
- 78 Audio Recording Level
- 79 Using Headphones

81 81 83 84 86 89	Using the Mini Advanced Shoe Using an External Microphone Using a Zoom Remote Controller Selecting the Playback Starting Point Playing Back Scenes Set to Background Music Onscreen Displays and Data Code
90 90	Playlist and Scene Operations Editing the Playlist: Adding, Deleting, Moving and Playing Back
92	Capturing Photos and Video Snapshot Scenes from a Movie
94	Dividing Scenes
Phot	tos
96	Basic Playback
96	Viewing Photos
98	Deleting Photos
100	Additional Functions
100	Taking Photos in M Manual Mode
101	Selecting Photo Size and Quality
103	Flash
104	Drive Mode: Continuous Shooting and Exposure Bracketing
106	Taking Photos while Recording Movies (Simultaneous Recording)
107	Light Metering Mode
108	Slideshow
108	Magnifying Photos during Playback
109	Rotating Photos
109	Histogram Display
110	Protecting Photos
112	Printing Photos
112	Printing Photos (Direct Print)
114	Print Orders

■ External Connections

116 117	Terminals on the Camcorder Connection Diagrams
120	Playback on a TV Screen
121 121 123 126	Saving and Sharing Your Recordings (IFM33 Copying Recordings to a Memory Card Saving Recordings on a Computer (IFM33 Saving Movies onto Standard-Definition Discs (DVD)
129 130	Copying Recordings to an External Video Recorder (IFM36) Uploading Movies to Video Sharing Web Sites
Addi	tional Information
136 136 140	Appendix: Menu Options Lists FUNC. Panel Setup Menus
152	Appendix: Onscreen Icons and Displays
157 157 164	Trouble? Troubleshooting List of Messages
173 173 178 179	Do's and Don'ts Handling Precautions Maintenance/Others Using the Camcorder Abroad
180 180 181 186 190	General Information Accessories Optional Accessories Specifications Index

About this Manual

Thank you for purchasing the Canon LEGRIA HF M36 / LEGRIA HF M307. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to *Troubleshooting* (


157).

Conventions Used in this Manual

- (IMPORTANT: Precautions related to the camcorder's operation.
- 1 NOTES: Additional topics that complement the basic operating procedures.
- POINTS TO CHECK: Restrictions or requirements regarding the function described.
- \square : Reference page number within this manual.
- PHOTO: Refer to the 'Photo Application' Instruction Manual, included as a PDF file in the supplied Camcorder Supplemental Disc.
- HFM36: Text that applies only to the model shown in the icon.
- The following terms are used in this manual:
 - When not specified as "memory card" or "built-in memory", the term "memory" by itself refers to both.
 - "Scene" refers to one movie unit from the point you press the START/STOP button to start recording until you press again to pause the recording.
- The photos included in this manual are simulated pictures taken with a still camera. Unless indicated otherwise, illustrations and menu icons refer to the [IFM36].

imindicates that a function is available in the operating mode indicated and imindicates that the function is not available. For a detailed explanation refer to Operating Modes (<u>U</u>27).

Brackets [] are used to refer to control buttons and menu options you will touch on the screen and to other onscreen messages and displays.

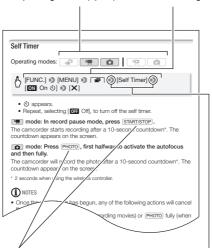

The names of physical buttons and switches on the camcorder are indicated within a "button" frame.
For example [FURC.].

The № arrow is used to abbreviate menu selections. For a detailed explanation on how to use the menus, refer to *Using the Menus* (☐ 28). For a concise summary of all available menu options and settings, refer to the appendix *Menu Options Lists* (☐ 136).

Supplied Accessories and CD-ROMs

The following accessories are supplied with the camcorder:



CA-570 Compact Power Adapter (incl. power cord)

BP-808 Battery Pack◀





►WL-D89 Wireless Controller (incl. CR2025 lithium button battery)

STV-250N Stereo Video Cable
✓ Yellow • Red • White plugs





►CTC-100/S Component Cable Red • Green • Blue plugs

IFC-300PCU USB Cable◀





■ Quick Guide

The following CD-ROMs and software are supplied with the camcorder:


- PIXELA Application Disc 1 CD-ROM* and 'PIXELA Applications' Installation Guide
 - ImageMixer 3 SE Transfer Utilities Software for saving and transferring movies and music files you can use as background music.
- PIXELA Application Disc 2 CD-ROM*
 - ImageMixer 3 SE Video Tools Software for managing, editing, and playing back movies.
- - Full-version instruction manual of the camcorder (this PDF file).
 - Photo Application Software for saving, managing, and printing photos*.
- Music files that can be used as background music during playback**.

^{*} The CD-ROM includes the instruction manual of the software (on PDF file).


^{**}These music files are for exclusive use with the supplied software **ImageMixer 3 SE**. The disc cannot be played back on CD players. For more details, refer to 'ImageMixer 3 SE Software Guide' on the PIXELA Application Disc 1 CD-ROM.

Names of Parts


Left side view

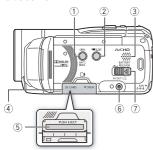

Right side view

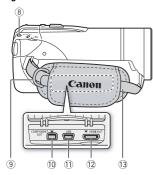


Front view




- ① DISP. (onscreen display) button (□ 89)/ BATT. INFO button (□ 156)
- 3 Speaker (48)
- ④ Memory card slot cover
- ⑤ Memory card slot (☐ 35)
- 7 BATTERY RELEASE switch (QQ 20)
- 8 ACCESS indicator (39, 55, 100)
- Strap mount (23)
- ① COMPONENT OUT terminal (116, 118)
- ① USB terminal (116, 119)
- 12 HDMI OUT terminal (1116, 117)
- (3) Grip belt (QQ 23)
- (14) Instant AF sensor (11) 141)
- (5) Stereo microphone (78)
- 6 Mini video light (75)
- ① Flash (1103)

Top view

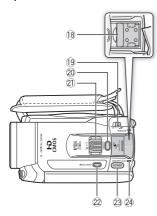

LCD panel



Back view




- (8) Mini advanced shoe (11) 81)
- 19 Mode switch (27)
- 20 PHOTO button (11 39, 100)
- 2 Zoom lever (43)
- ② VIDEO SNAP (video snapshot) button (□ 65)
- 23 POWER button
- ② ON/OFF (CHG) (charge) indicator: Green – ON Orange – Standby (44)
- Red − Charging (☐ 19)

 ② Remote sensor (☐ 22)
- 26 LCD touch screen (24, 26)
- POWERED IS button (\$\square\$ 62)/ WEB button* (\$\square\$ 130)
- Battery attachment unit (19)
- 29 START/STOP button (39, 55)
- 30 DC IN terminal (11) 19)
 - * HFM36 only.

Bottom view


3) 32

3) Serial number



32 Tripod socket (11114)

Wireless Controller WL-D89

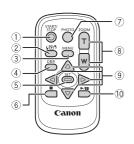

- ① START/STOP button (CC) 39, 55)
- ② 4 (index selection) button (49) Press and hold for more than 2 seconds to switch between shooting and playback mode.
- ③ MENU button (29, 140)
- ④ DISP. (onscreen display) button(☐ 89)
- ⑤ SET button
- ⑥ **■** (stop) button (□ 46)
- ⑦ PHOTO button (39, 100)
- 8 Zoom buttons (43)
- Navigation buttons (▲/▼/◄/►)
- 10 ►/II (play/pause) button (☐ 46)



Preparations

This chapter describes basic operations, such as using the touch panel, navigating the menus, and first time settings to help you learn more about your camcorder.


Getting Started

Charging the Battery Pack

The camcorder can be powered with a battery pack or directly using the compact power adapter. Charge the battery pack before use. For approximate charging times and recording/playback times with a fully charged battery pack, refer to *Charging Times* (182) and *Recording and Playback Times* (182).


- Connect the power cord to the compact power adapter.
- 2 Plug the power cord into a power outlet.
- Connect the compact power adapter to the camcorder's DC IN terminal.
- 4 Attach the battery pack to the camcorder.

Press the battery pack softly into the battery attachment unit and slide it up until it clicks in place.

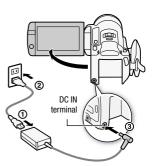

5 Charging will start when the camcorder is turned off.

- If the camcorder was on, the green ON/OFF (CHG) indicator will go out when you turn off the camcorder. After a moment, the ON/OFF (CHG) indicator will start flashing in red (battery pack charging). The red ON/ OFF (CHG) indicator will go out when the battery pack is fully charged.
- If the indicator flashes quickly, refer to Troubleshooting (157).

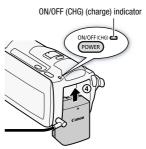

To remove the battery pack

- 1 Slide BATTERY RELEASE in the direction of the arrow and hold it pressed down.
- 2 Slide the battery pack down and then pull it out.



BATTERY RELEASE switch

IMPORTANT

- Turn off the camcorder before connecting or disconnecting the compact power adapter. After pressing POWER to turn off the camcorder, important data is updated in the memory. Be sure to wait until the green ON/OFF (CHG) indicator goes out.
- We recommend charging the battery pack in temperatures between 10 °C and 30 °C. Outside the temperature range of 0 °C to 40 °C, charging will not start.
- Do not connect to the camcorder's DC IN terminal or to the compact power adapter any electrical equipment that is not expressly recommended for use with this camcorder.

To prevent equipment breakdowns and excessive heating, do not connect the supplied compact power adapter to voltage converters for overseas travels or special power sources such as those on aircraft and ships, DC-AC inverters, etc.

(i) NOTES


- The battery pack will be charged only when the camcorder is off.
- If remaining battery time is an issue, you can power the camcorder using the compact power adapter so the battery pack will not be consumed.
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- We recommend that you prepare battery packs to last 2 to 3 times longer than you think you might need.

Preparing the Accessories

Wireless Controller

First, insert the supplied CR2025 lithium button battery into the wireless controller.


- Press the tab in the direction of the arrow and pull out the battery holder.
- 2 Place the lithium button battery with the + side facing up.
- 3 Insert the battery holder.



To use the wireless controller

Point the wireless controller at the camcorder's remote sensor when you press the buttons.

You can rotate the LCD panel 180 degrees to use the wireless controller from the front of the camcorder.

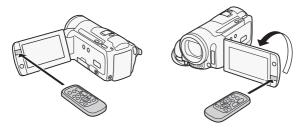

(i) NOTES

 The wireless controller may not work properly when the remote sensor is situated under strong light sources or direct sunlight.


Fasten the grip belt.

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the START/STOP button with your thumb.



To remove the grip belt

- 1 Lift the padded handgrip's flap and detach the strap from the Velcro pad.
- 2 Pull the strap to remove it first from the front bracket on the camcorder, then to unthread it from the handgrip and finally to remove it from the rear bracket on the camcorder.





To attach an optional wrist strap


Pass the attaching end of the wrist strap through the rear bracket on the camcorder, thread the wrist strap through the loop and fasten.

You can also attach the wrist strap to the strap mount on the grip belt to use both for extra convenience and protection.



To attach an optional shoulder strap

Pass the ends of the shoulder strap through the strap mount on the grip belt and adjust the length of the strap.




Adjusting the Position and Brightness of the LCD Screen

Rotating the LCD Panel

Open the LCD panel 90 degrees.

- You can rotate the panel 90 degrees downward.
- You can rotate the panel 180 degrees toward the lens. Rotating the LCD panel 180 degrees can be useful in the following cases:
 - To include yourself in the picture when recording with the self timer.
 - To allow the camcorder to be operated with the wireless controller from the front.






Subject can monitor the LCD screen

(i) NOTES

About the LCD screen: The screen is produced using extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green dots. This has no effect on the recorded image and does not constitute a malfunction.

LCD Backlight

When recording in bright places it may be difficult to use the LCD screen. Turn on the LCD backlight to make it brighter.



With the camcorder on, hold <code>DISP</code> pressed down for more than 2 seconds.

Repeat this action to switch the LCD backlight between off (normal) and on (bright).



- The LCD backlight does not affect the brightness of the recordings.
- Using the bright setting will shorten the effective usage time of the battery pack.
- You can further adjust the brightness of the LCD screen with the
 CD Brightness] setting, or dim it with the
 ECD Screen Dimmer] setting to use in places where the light from the LCD screen can be a nuisance.

Basic Operation of the Camcorder

Using the Touch Screen

The control buttons and menu items that appear on the touch screen change dynamically depending on the operating mode and the task you are performing. With the intuitive touch screen interface you have all the controls at your fingertips.


Touch

Touch a menu item to select it, or a control button to perform the corresponding action. For some functions, such as Touch & Track (65) and face detection (63), you can touch a subject that appears on the touch screen to select it and have the camcorder choose the optimal settings.



Drag

Swipe your finger up and down or left and right across the screen to scroll menus, to browse through index screen pages or to adjust slider controls (for example, to adjust the volume).





IMPORTANT

- The camcorder uses a pressure-sensitive touch screen. Press firmly when using touch operations.
- In the following cases, you may not be able to perform touch operations correctly.
 - Operating the touch screen with wet or gloved hands or using your fingernails or other hard-tipped objects such as ballpoint pens.
 - Applying excessive force or forcefully scratching the touch screen.
 - Attaching commercially available screen protectors or adhesive film onto the touch screen's surface.

• For details about how to take care of the touch screen, refer to *Handling Precautions* (173), *Cleaning* (178).

Operating Modes

Recording

Operating

When recording video or photos, the camcorder's operating mode is determined by the position of the mode switch and the onscreen control buttons.

mode	Mode switch	Onscreen icon	Operation		
	ual Shot Record video and take photos easily, letting the camcorder take care of all the ettings – Great for beginners or if you just prefer not to bother with detailed camcorder ettings.				
, Š	⊕. M	AUTO*	Easy recording of movies and photos (39).		
Flexible recording Use one of the dedicated recording modes to enjoy full access to the menus and advanced functions and change the camcorder's settings to your preference.					
	•∰•M	·	Touch [¹♠] to record movies (☐ 55).		
۵		<u></u>	Touch [♠] to record photos (◯ 100).		

^{*} The mode icon displayed will change according to the optimal mode selected by the Smart AUTO function (\(\supersetting 40\).

Playback

Press the camera/play button [substitution in the camcorder between camera (recording) mode and playback mode. The playback mode you switch into depends on the initial recording mode.



You can press when the camcorder is off to turn it on directly in playback mode.

Initial mode	Operating mode	Operation
Press in mode.	Ĭ	Playing back movies ([Original] index screen) (☐ 46).
Press in mode.		Viewing photos ([Photos] index screen) (96).

(i) NOTES

- **IFM35** When switching to a playback mode, the memory selected for playback will be the same currently used for recording.
- You can also press and hold (ID) on the wireless controller for more than 2 seconds to switch between recording and playback mode.

Using the Menus

Many of the camcorder's functions can be adjusted from the FUNC. panel and the setup menus. In mode, however, menus cannot be accessed and, except in a few cases, most menu settings will return to their default values.

For details about the available menu options and settings, refer to the appendix *Menu Options Lists* (136).

Operating modes:

The FUNC. Panel and Edit Panel

In \blacksquare and \blacksquare mode, the FUNC. panel shows a convenient overview of frequently used shooting functions. Touch [FUNC.] to access the FUNC. panel and then touch the function you want to set or adjust. You may need to drag your finger up and down along the scroll bar to find the control button of the desired function.

Touch the control button of the desired function



Drag your finger up and down along the scroll bar to display the rest of the panel In pand mode, touch [Edit] to display a similar panel containing the various operations that are available after selecting one or more scenes or photos (for example, deleting, adding scenes to the playlist, protecting photos, etc.). Touch the control button of the desired operation.

Example of the Edit panel in \blacksquare mode

Touch the control button of the desired operation



The Setup Menus

- 1 mode only: Touch [FUNC.]
- 2 Touch [MENU] to open the setup menus.

You can also press [MENU] on the wireless controller to open the setup menus.



- 3 Touch the tab of the desired menu.
- 4 Drag your finger up and down along the scroll bar to bring the setting you want to change into the orange selection bar. Menu items not available appear grayed out.
- 5 When the desired menu item is in the orange bar, touch inside the frame on the right.
- 6 Touch the desired option and touch [★].
 You can touch [★] to close the menu at any time.

(i) NOTES

A small font size is used in menu screens so you can see the options currently selected. You can enlarge the font size by setting F >> [Font Size] to [A Large] but only the icons of the currently selected options will appear on the screen.

First Time Settings

Setting the Date and Time

You will need to set the date and time of the camcorder before you can start using it. The [Date/Time] screen will appear automatically when the camcorder's clock is not set.

When the [Date/Time] screen appears, the year will be selected.



- 1 Touch a field you want to change (year, month, day, hours or minutes).
- 2 Touch [▲] or [▼] to change the field as necessary.
- 3 Set the correct date and time by changing all the fields in the same way.
- 4 Touch [Y.M.D], [M.D,Y] or [D.M.Y] to select the date format you prefer.
- 5 Touch [24H] to use 24-hour clock or leave this control unchecked to use 12-hour clock (AM/PM).
- 6 Touch [OK] to start the clock and close the setup screen.

(i) NOTES

- When you do not use the camcorder for about 3 months, the built-in rechargeable lithium battery may discharge completely and the date and time setting may be lost. In such case, recharge the built-in lithium battery (1176) and set the time zone, date and time again.
- To change the date and time later on (not during the initial setup), open the [Date/Time] screen from the setup menus:




* Only when performing the procedure in a recording mode.

Changing the Language

The default language of the camcorder is English. You can set it to one of 26 other languages.

Operating modes:



- * Only when performing the procedure in a recording mode.
- (i) NOTES
- Some control buttons, such as [ZOOM], [FUNC.] or [MENU], will appear in English regardless of the language selected.

Changing the Time Zone

Change the time zone to match your location. The default setting is Paris.

Operating modes:

1 Open the [Time Zone/DST] screen.



- * Only when performing the procedure in a recording mode.
- 2 Touch [♠] to set the home time zone, or [★] to set the time zone of your destination when you are traveling.
- 3 Touch [▲] or [▼] to set the desired time zone. If necessary, touch [*] to adjust for daylight saving time.
- 4 Touch [X] to close the menu.

Using a Memory Card

Memory Cards Compatible for Use with the Camcorder

You can use commercially available Secure Digital (SD) cards with this camcorder. However, depending on the memory card, you may not be able to record movies. Refer to the table below.

As of May 2010, the movie recording function has been tested using SD/SDHC memory cards made by Panasonic, Toshiba and SanDisk, and SDXC memory cards made by Panasonic and Toshiba.

Memory card	Capacity	SD Speed Class	Recording movies
	64 MB or less	_	_
≤≥ SD	128 MB or more	_	•*
memory cards		CLASS@ CLASS@ CLASS@ CLASS@	•
≨ SDHC		CLASS(2) CLASS(4)	
memory cards	Over 2 GB	CLASS® CLASS®	•
SDXC memory cards	Over 32 GB	CLASS@ CLASS@ CLASS@	•

^{*} Depending on the memory card used, it may not be possible to record movies.

(i) NOTES

About the SD Speed Class: The SD Speed Class is a standard that indicates the minimum guaranteed data transfer speed of SD/SDHC/SDXC memory cards. When you buy a new memory card, look for the Speed Class logo on the package.

We recommend using memory cards rated Speed Class 4, 6 or 10.

SDXC Memory Cards

As of May 2010, SDXC memory cards have been tested to work under Windows 7. For details on whether your computer's operating system is SDXC-compatible, check with your computer's manufacturer.

IMPORTANT

- If you use an SDXC memory card with a computer OS that is not SDXCcompatible, you may be prompted to format the memory card. In such case, cancel the operation to prevent data loss.
- To use an SDXC memory card with external devices, such as card readers or digital recorders, make sure the external device is SDXC-compatible.
- After repeatedly recording, deleting and editing scenes (fragmented memory), it will take longer to write data on the memory and recording may stop. Save your recordings and initialize the memory.

Eve-Fi Cards

This product is not guaranteed to support Eye-Fi card functions (including wireless transfer). In case of an issue with an Eve-Fi card. please check with the card manufacturer.

Also note that an approval is required to use Eve-Fi cards in many countries or regions. Without approval, use of the card is not permitted. If it is unclear whether the card has been approved for use in the area, please check with the card manufacturer.

Inserting and Removing a Memory Card

Make sure to initialize (37) all memory cards before using them with this camcorder.

- 1 Turn off the camcorder.
 - Make sure the ON/OFF (CHG) indicator is off.
- 2 Open the memory card slot cover.
- 3 Insert the memory card straight, with the label facing up, all the way into the memory card slot until it clicks.
- 4 Close the memory card slot cover. Do not force the cover closed if the memory card is not correctly inserted.



To remove the memory card

Push the memory card once to release it. When the memory card springs out, pull it all the way out.




Memory cards have front and back sides that are not interchangeable.
 Inserting a memory card facing the wrong direction can cause a malfunction of the camcorder. Be sure to insert the memory card as described in step 3.

HFM36 Selecting the Memory for the Recordings

You can select to record your movies and photos in the built-in memory or on a memory card. The built-in memory is the default memory for recording both.

Operating modes:

POINTS TO CHECK



* When selecting the memory, you can check the approximate available recording time/number of photos, based on currently used settings.



EFM36 Select to record movies in the built-in memory if you later want to convert the movies to standard definition in order to upload them to the Web or to create standard DVDs.

HFM36 Relay Recording of Movies

You can activate the relay recording so if the built-in memory becomes full while recording movies, the recording will continue uninterrupted on the memory card.

Operating modes:

- 1 Insert a memory card that contains no video recordings into the camcorder.
- 2 Activate the relay recording.



* The approximate available recording time will now reflect the combined space in the built-in memory and on the memory card.



- Any of the following actions will deactivate the relay recording function:
 - Turning off the camcorder.
 - Opening the memory card slot cover.
 - Changing the position of the mode switch.
 - Changing the camcorder's operating mode.
 - Selecting the memory card as the memory for recording movies.

Initializing the Built-in Memory (HFM36 only) or Memory Card

Initialize memory cards when you use them with this camcorder for the first time. You can also initialize a memory card or the built-in memory (HFM36) only) to permanently delete all the recordings it contains.

IFM36 At the time of purchase, the built-in memory comes pre-initialized and contains music files for use as background music during playback.


Operating modes:





- 1 Power the camcorder using the compact power adapter.
 Do not disconnect the power source or turn off the camcorder until the initialization is completed.
- 2 Initialize the memory.

HFM36



HFM307



- * Touch this option if you want to physically erase all the data rather than just clear the file allocation table of the memory.
- **If you selected the [Complete Initialization] option, you can touch [Cancel] > [OK] to cancel the initialization while it is in progress. All recordings will be erased and the memory can be used without any problem.

- Initializing a memory card will permanently erase any music files you
 may have transferred from the supplied Camcorder Supplemental Disc
 to the card. (IFM36 The music files that come pre-installed in the built-in
 memory will be restored after it is initialized.)
 - Windows users: Use the supplied software **ImageMixer 3 SE** to transfer music files from the supplied Camcorder Supplemental Disc to a memory card connected to the computer. For details, refer to the 'ImageMixer 3 SE Software Guide' (PDF file).
- At the time of purchase, Eye-Fi cards contain the necessary network configuration software. Be sure to install the software and complete the required configuration setup before you initialize the Eye-Fi card prior to using it with this camcorder.



Dual Shot Mode


This chapter covers how to easily record video and photos in the all-automatic Dual Shot mode, and how to use basic shooting functions like zoom and Quick Start. To enjoy full access to menus and more advanced functions, refer to the relevant chapters for video (55) and photos (100).

Basic Recording

Shooting Video and Taking Photos in Dual Shot Mode

Operating modes:

- 2 Turn on the camcorder.
 - IFM36 By default, movies and photos are recorded in the built-in memory. You can select the memory that will be used to record movies and photos (\$\subseteq\$ 35).
 - Please read the IMPORTANT section (41) before using an Eye-Fi card.

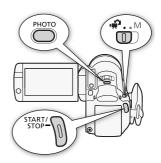

To record video

Press START/STOP to begin recording.

Press START/STOP again to pause the recording.

To take photos

1 Press PHOTO halfway.

Once the focus is automatically adjusted, ① will turn green and one or more AF frames will appear.

2 Press PHOTO fully.

The ACCESS indicator will flash as the photo is being recorded.

When you have finished recording

- 1 Make sure that the ACCESS indicator is off.
- 2 Turn off the camcorder.
- 3 Close the LCD panel.

About Dual Shot

- Only the following functions are available in mode.
 - Zoom (43).
 - Quick Start (44).
 - Video snapshot (\$\sum 65).

 - Face detection (\square 63) to get beautiful shots of people every time, tracking the subject even if the person moves.
 - Touch & Track (65) to track other moving subjects, keeping them in focus and using the best settings to record them.

About the Smart AUTO mode

When shooting in mode, the camcorder will automatically detect certain characteristics of the subject, background, lighting conditions, etc. It will then adjust various settings (focus, exposure, color, image stabilization, image quality, among others), selecting the best settings for the scene you want to shoot. The Smart AUTO mode icon will change to one of the following icons.

Smart AUTO icons

$\begin{array}{c} \text{Background} \ \rightarrow \\ \text{(color of the icon)} \\ \\ \text{Subject} \downarrow \end{array}$	Bright (grey)	Blue skies (light blue)	Vivid colors (green/red)	Sunsets (orange)
People (stationary)			2	
	(💇)	(💽)	(🚅)	_
People (moving)				_
	(🚅)	(🗐)	(🔎)	_
Subjects other than people,	AUTO	AUTO	AUTO	34
such as landscapes	(3/1)	(5/1)	(🚮)	F-4
Close objects	2		*	
		()	(💓)	

The icon in parentheses appears under backlight conditions.

Background → (color of the icon)	Dark (dark blue)			
Subject ↓		Spotlight	Night scene	
People (stationary)		_	_	
People (moving)	₽	_	_	
Subjects other than people, such as landscapes	AUTO	A		
Close objects	~	_	_	

■ IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss or damage to the memory.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.

- Be sure to save your recordings regularly (
 — 121), especially after making important recordings. Canon shall not be liable for any loss or corruption of data.
- When recording photos on an Eye-Fi card, photos will be uploaded automatically if you are within the range of a configured network. Always verify that Eye-Fi cards have been approved in the country/region of use. See also *Using an Eye-Fi card* (\(\sum 134\)).

(i) NOTES

. When taking photos:

- If the subject is not suitable for autofocus, ⊙ turns yellow. Set the camcorder to node and adjust the focus manually (□ 71).
- When the subject is too bright, [Overexp.] will flash on the screen. In such case, use the optional FS-H37U ND filter.
- - menu: [AF mode], [Auto Slow Shutter], [POWERED IS Button].
 - menu: [Video Snapshot Length], [Rec Media for Movies]*, [Recording Mode], [Rec Media for Photos]*, [Photo Quality/Size], [Simultaneous Recording].
 - F menu: All settings.
 - * **HFM36** only.

Zooming

Operating modes:









There are three ways you can zoom in and out: using the zoom lever on the camcorder, using the zoom buttons on the wireless controller or using the zoom controls on the touch screen.


In addition to the 15x optical zoom*, in mode, you can turn on the 300x digital zoom with the [] [Digital Zoom] setting.

* When [Image Stabilizer] (FUNC, panel) is set to [W Dvnamic], you can use the advanced zoom to magnify the image up to 18x.

Using the Zoom Lever or Wireless Controller

Move the zoom lever toward W (wide angle) to zoom out. Move it toward T (telephoto) to zoom in.

- By default, the zoom lever operates at a variable speed - press gently for a slow zoom: press harder for faster zooms.
- You can also use the zoom buttons on the wireless controller.

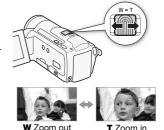

Using the Touch Screen's Zoom Controls

Display the zoom controls on the touch screen.



- * Not necessary in mode.
- The zoom controls appear on the left side of the screen.

T 700m in

2 Touch the zoom controls to operate the zoom.

Touch anywhere within the **W** area to zoom out or anywhere within the **T** area to zoom in. Touch closer to the center for a slow zoom ([Speed 1]); touch closer to the **W**/**T** icons for faster zooms ([Speed 3]).



3 Touch [X] to hide the zoom controls.

(i) NOTES

- Keep at least 1 m away from the subject. At full wide angle, you can focus on a subject as close as 1 cm.
- In ☐ or or or mode, you can also set ☐ / ☐ / ☐ >
 [Zoom Speed] to one of three constant speeds (3 is the fastest, 1 the slowest).
- When [Zoom Speed] is set to [VAR Variable]:
 - When you use the **T** and **W** buttons on the wireless controller, the zoom speed will be constant at [Speed 3].
 - The zoom speed will be faster in record pause mode than when actually recording, except when pre-recording (62) is activated.
- See Specifications (口 188) for notes about this function when the recording program is set to [w Underwater] or [会 Surface].

Quick Start Function

When you close the LCD panel with the camcorder on, the camcorder enters the standby mode. In standby mode the camcorder consumes only about 1/3 the power used when recording, saving energy when you are using a battery pack. Additionally, when you open the LCD panel, the camcorder is ready to start recording in approximately 1 second*, allowing you to record the subject right away.

* The actual time required varies depending on the shooting conditions.

Operating modes:

1 With the camcorder on and in a recording mode, close the LCD panel.

A beep will sound and the green ON/OFF (CHG) indicator will change to orange to indicate the camcorder entered standby mode.

2 When you wish to resume recording, open the LCD panel.

The ON/OFF (CHG) indicator turns back green and the camcorder is ready to record.

IMPORTANT

 Do not disconnect the power source during standby mode (while the ON/OFF (CHG) indicator is lit in orange).

i NOTES

The camcorder will not enter standby mode if the LCD panel is closed
while the ACCESS indicator is on or flashing or while a menu is being
displayed. The camcorder may also not enter standby mode if the LCD
panel is closed while the memory card slot cover is open or when the
battery charge is too low. Check that the ON/OFF (CHG) indicator
changes to orange.

. About standby mode and auto power off:

- The camcorder will power off automatically if left in standby mode for 10 minutes. Press POWER to turn on the camcorder.
- The usual 5-minute auto power off setting of [Power Saving Mode] is not applicable while the camcorder is in standby mode.
- Changing the position of the mode switch while the camcorder is in standby mode will reactivate the camcorder in the operating mode selected.



Video

This chapter covers functions related to movies, including play-back, advanced shooting, advanced functions and playlist and scene operations. For details about basic video shooting, refer to *Dual Shot Mode* (39).

Basic Playback


Playing Back the Video

Operating modes:




1 Press 🛒 🖘 🕒 .

You can also press and hold () on the wireless controller for more than 2 seconds to switch between shooting and playback mode.

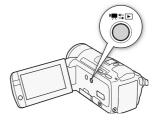

2 Open the [Original] index screen, if it is not displayed.



3 Look for the scene you want to play back.


Move the zoom lever toward ${\bf W}$ to show 15 scenes per page; move it toward ${\bf T}$ to show 6 scenes per page.



- Memory being read
- 2 Index screen currently displayed
- 3 Drag your finger left for the next index page*
- 4 Drag your finger right for the previous index page*
- Select a different index screen to read different content or from a different memory (HFM36 only) (49)
- 6 Scene's timeline (84) and recording information
- Narrow down the scenes shown in the index screen
 (□ 52)
- * While browsing through index pages, a scroll bar will appear at the bottom of the screen for a few seconds. When you have a large number of scenes it may be more convenient to drag your finger along the scroll bar.

4 Touch the desired scene to play it back.

- Playback will start from the scene selected and continue until the end of the last scene in the index screen.
- Touch the screen during playback to display the playback controls.



- 1 Stop the playback.
- 2 Jump to the beginning of the scene. Double-tap to jump to the previous scene.
- 3 Pause the playback.
- 4 Drag your finger left and right along the volume bar to adjust the volume.
- 5 Touch anywhere else to hide the playback controls.
- 6 Fast playback backward*.
- 7 Jump to the next scene.
- 8 Fast playback forward*.
- * Touch several times to increase the playback speed to approximately 5x → 15x → 60x the normal speed. During fast playback, touch anywhere on the screen to return to normal playback.

During playback pause:



- Resume playback.
- 2 Slow playback backward*.
- Slow playback forward*.
- * Touch several times to increase the playback speed 1/8 → 1/4 the normal speed. During slow playback, touch anywhere on the screen to return to playback pause.

IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.
- You may not be able to play back with this camcorder movies recorded on a memory card using another device.

(i) NOTES

- Depending on the recording conditions, you may notice brief stops in video or sound playback between scenes.
- During fast/slow playback, you may notice some anomalies (blocky video artifacts, banding, etc.) in the playback picture.
- The speed indicated on the screen is approximate.
- Slow reverse playback will look the same as continuous frame reverse.

The Index Selection Screen: Selecting the Content to Play Back

From the index selection screen you can select the content you want to play back (original scenes, playlist, or photos, for example). HEM36 only: You can also select the memory from which you want to play back your recordings.

Operating modes:

In any index screen, touch [45].

During single photo view, touch the screen once to display the controls then touch $[\ensuremath{\mathbb{E}}]$ to open the $[\ensuremath{\text{Photos}}]$ index screen.



- HFM36 Touch the tab of the desired memory: built-in memory or memory card.
- 2 Touch a control button to select the content you want to play back.

Options

[Original] Original movies as you recorded them.

[Playlist] Scenes that were added to the playlist (90) and may have been rearranged to your liking.

[3D Flip View] See the following section (\$\sum 51\$).

[Photos] Display the photo index screen.

[SD Scenes] (☐FM36 Only when the memory card is selected)
Scenes that were converted to standard definition to upload
them to the Web (☐ 130) or to create standard DVD discs
(☐ 126). Touch [SD Scenes] and then [For Web (MPEG-2)] or
[For DVD (SD-VIDEO)] as necessary.


[Video Snapshot] To display only video snapshot scenes. Touch this control button first and then [Original] or [Playlist] as necessary.

(i) NOTES

 Fast/slow playback modes are not available for scenes converted to standard definition. Scenes in the [SD Scenes] index screens can only be played back at normal speed. 3D Flip View is a fun way to display your video recordings (original scenes) in a 3D layout, organized by recording date.

In any index screen, touch [🕩 🖔] 🔊 [3D Flip View].

During single photo view, touch the screen once to display the controls then touch $[\ensuremath{\mathbb{R}}]$ to open the $[\ensuremath{\text{Photos}}]$ index screen.



- Drag your finger up and down to browse through the scenes recorded in the displayed date.
- 2 Drag your finger left to go to the next date with recordings.
- 3 Touch the scene in the front to play it back.
- 4 Currently selected recording date.
- **5** Drag your finger right to go to the previous date with recordings.
- 6 Current scene / Total number of scenes recorded on the selected date.

Narrowing Down the Scenes Shown in the Index Screen

From the [Original] index screen, you can narrow down the scenes shown, leaving only scenes that were recorded on a specific date or only those scenes in which people's faces were detected.

Operating modes:






Showing Only Scenes that Contain People's Faces

This will narrow down the scenes shown in the [Original] index screen, leaving only scenes that were recorded using face detection (63) and in which people's faces were detected.

1 Open the [Original] index screen, if it is not displayed.



2 Narrow down the scenes shown.



• [달 Faces] appears instead of [All Scenes]. To show all scenes again, touch [짷 달 Faces] and then [All Scenes].


Showing Only Scenes Recorded on a Specific Date

This will narrow down the scenes shown in the [Original] or [Video Snapshot] \rightarrow [Original] index screen, leaving only scenes that were recorded on the date you choose.

1 Open the [Original] or [Video Snapshot] \rightarrow [Original] index screen.



2 Open the calendar screen.



- Dates that contain scenes (that is, movies were recorded on that date) appear in black against a silver background. Dates without recordings appear grayed out.
- Touch [◄] or [►] to jump to the previous/next calendar month that contains recordings.
- 3 Touch the desired date.

The selected date appears instead of [All Scenes]. To show all scenes again, touch [뿧 (the date displayed on the screen)] and then [All Scenes].

(i) NOTES

 You can change on what day to start the week for the calendar display with the (Calendar Start Day) setting.

Deleting Scenes

You can delete those scenes that you are not interested in keeping. Deleting scenes allows you also to free up space on the memory. See also *Deleting Scenes from the Playlist* (\square 91).

- 1 Open the index screen that contains the scenes you want to delete.
 - [Original] or [Video Snapshot] → [Original] index screen: To delete all the scenes recorded on a specific date, narrow down the scenes shown to scenes recorded on that date (□ 52).
- 2 Touch [∅] to open the scene selection screen.
- 3 Touch on the individual scenes you want to delete.
 - A checkmark ✓ will appear on scenes selected. Touch a selected scene again to remove the checkmark.

- To select all the scenes at once: Touch [Select All] instead of touching individual scenes. (Remove in advance any checkmarks from scenes you may have selected individually.)
- 4 Delete the scenes.



* Touch [Stop] to interrupt the operation while it is in progress. Some scenes may be deleted nevertheless.

IMPORTANT

- Be careful when deleting original recordings. Once deleted, original scenes cannot be recovered.
- Save copies of important scenes before deleting them (123).
- Observe the following precautions while the ACCESS indicator is on or flashing (while scenes are being deleted).
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.

(i) NOTES

- Deleting a scene from the [Original] index screen also deletes that scene from the playlist.

Advanced Functions

Shooting Video in M Manual Mode

When the mode switch is set to **M** (Manual mode), you can enjoy full access to the menus and manually adjust the exposure, focus, white balance and many more of the camcorder's settings to your preference. Even in mode, though, the camcorder can help you with the settings. For example, by using Special Scene recording programs (57).

Operating modes:






- 1 Set the mode switch to M.
- 2 Turn on the camcorder.

IFM36 By default, movies are recorded in the built-in memory. You can select the memory that will be used to record movies (35).

3 Press START/STOP to begin recording.

Press START/STOP again to pause the recording.

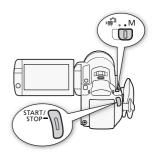

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss or damage to the memory.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.
- Be sure to save your recordings regularly (
 — 121), especially after making important recordings. Canon shall not be liable for any loss or corruption of data.



 The zoom, Quick Start function, power saving modes, etc. operate the same way in mode as in mode. For details, refer to Dual Shot Mode (139).

Selecting the Video Quality (Recording Mode)

The camcorder offers 5 recording modes. Changing the recording mode will change the recording time available on the memory. Select MXP or FXP mode for better movie quality; select LP mode for longer recording times. The following table gives approximate recording times.





i NOTES

- The camcorder uses a variable bit rate (VBR) to encode video so the actual recording times will vary depending on the content of the scenes.
- The camcorder retains the last setting used even if you set the camcorder to mode.

Approximate recording times

Default value

Recording mode \rightarrow Memory \downarrow	MXP ¹	FXP ¹	XP+	SP◆	LP
4 GB Memory card	20 min.	30 min.	40 min.	1 hr. 10 min.	1 hr. 30 min.
8 GB Memory card/ HFM36 Built-in memory ²	40 min.	1 hr.	1 hr. 25 min.	2 hr. 20 min.	3 hr.
16 GB Memory card	1 hr. 25 min.	2 hr. 5 min.	2 hr. 50 min.	4 hr. 45 min.	6 hr. 5 min.
32 GB Memory card	2 hr. 55 min.	4 hr. 10 min.	5 hr. 45 min.	9 hr. 35 min.	12 hr. 15 min.

¹ Recorded in 1,920 x 1,080 resolution. Movies recorded using other recording modes are recorded in 1,440 x 1,080 resolution.

Special Scene Recording Programs

Recording in a very bright ski resort or capturing the full colors of a sunset or a fireworks display becomes as easy as selecting a Special Scene recording program.

Operating modes:











🔥 [FUNC.] 🔊 [Rec. Programs] 🔊 [🔊 Portrait] 🔊 Desired recording program (X)

Options (Default value)

[Portrait] The camcorder uses a large aperture, to achieve a sharp focus on the subject while blurring the background.



² HFM36 At the time of purchase, the built-in memory contains about 75 MB of music files

[Sports] To record sports scenes such as tennis or golf.



[A Night Scene] To record nightscapes with lower noise.



[*8*Snow] To record in bright ski resorts without the subject being underexposed.



[Beach] To record on a sunny beach without the subject being underexposed.



[Sunset] To record sunsets in vibrant colors.



[Low Light] To record in low-light situations.



[ASpotlight] To record spotlit scenes.



[*Fireworks] To record fireworks.



[wunderwater] To record underwater scenes in natural colors.



[★Surface] To record after getting out of the water, such as on a boat after diving.



(i) NOTES

- Portrait]: The blur effect of the background increases the more you zoom in (T).
- [** Snow]/[Beach]: The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.
- [Low Light]:
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - White points may appear on the screen.
 - Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- [★ Fireworks]:
 - To avoid camcorder blur (blur due to the camcorder moving) we recommend using a tripod.
 - In one mode, slower shutter speeds are used so blur is more likely to occur. Stabilize the camcorder, for example, by mounting it on a tripod.
- - Use these recording programs when making recordings while the camcorder is in the optional WP-V2 Waterproof Case.
 - The [﴿ Underwater] recording program is for making recordings underwater*. When using underwater lighting equipment or making recordings while on land, we recommend using the [秦 Surface] recording program.
 - To switch the recording program between [w Underwater] and [会 Surface] while the camcorder is in the waterproof case, turn on the camcorder while holding PHOTO pressed down.

- Will appear on the screen when the camcorder's temperature becomes too high. If this happens, turn off the camcorder, take it out of the waterproof case and keep it in a cool place until the temperature goes down. If the camcorder becomes too hot, it will turn off automatically.
- When making recordings underwater with the [*(Underwater] recording program, the image on the LCD screen will appear redder than the actual subject. This will not affect the recording.
- When a commercially available wide-converter or other accessory is attached to the waterproof case, the camcorder may focus on the accessory. In such case, move the zoom lever toward T to focus on the subject.
- See Specifications (口 188) for additional notes about the [他 Underwater] and [会 Surface] recording programs.
- * Underwater is a unique environment that is ever-changing, depending on factors such as the weather and water conditions. In addition, water absorbs red light, which causes objects to appear bluer and greener.

Cinema Mode: Giving a Cinematic Look to your Recordings

Give your recordings a cinematic look by using the [LL Cine Mode] recording program. Combine this recording program with the 25 fps progressive frame rate [PF25] PF25] to get the enhanced effect of the 25p Cinema Mode.



Operating modes:









To set the [☐ Cine Mode] recording program

 $\begin{picture}(100,0) \put(0,0){\line(0,0){100}} \put(0,0){\line(0,0){10$

Operating modes:)Ü		Ġ
	- 77			- L	

To change the frame rate



Advanced Image Stabilization

The image stabilizer reduces camcorder blur (blur due to the camcorder moving) so you can get nice, stable shots. Select the image stabilization mode according to the shooting conditions.



In mode:



Options (* Default value in 📜 mode)


- Standard]*, [On] Compensates for a lower degree of camcorder shake, such as when shooting while remaining stationary, and is suitable for shooting natural-looking scenes. Use this setting when recording movies with the optional Wide-converter or Tele-converter.
- Offi Use this setting when the camcorder is mounted on a tripod.
- * In The mode, if you change the IS mode to one of these settings, you may notice a slight change in the field of view while zooming in close to the telephoto end.

Powered IS

When shooting video, you can use Powered IS to make the image stabilization even more powerful. Powered IS is most effective when you are stationary and zooming in on far subjects using high zoom ratios (the more you approach the telephoto end). Holding the LCD panel with your left hand will add to the stability of the shot.

Press and hold POWERED IS as long as you want to activate Powered IS.

- appears in yellow, while Powered IS is activated.
- You can change the operation of the POWERED IS button (long press or toggle on/off) with the P
 POWERED IS Button] setting.

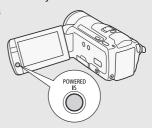


(i) NOTES

- If the degree of camcorder shake is too high, the image stabilizer may not be able to fully compensate.
- Powered IS is not available in **not** mode.
- For surveying and following shots, when you pan the camcorder from side to side or tilt it up and down, we recommend setting the IS mode to [Dynamic] or [Standard].

Pre-Recording

The camcorder will start recording 3 seconds before you press START/STOP, ensuring you do not miss important shooting opportunities. This is especially useful when it is difficult to predict when to start recording.

1 Activate the pre-recording function.



- **6** appears.
- Repeat, selecting [OFF Off], to turn off pre-recording.
- 2 Press START/STOP.

The scene recorded in the memory will start 3 seconds before START/STOP was pressed.

(i) NOTES

- While pre-recording is activated, the camcorder will not emit any notification sounds.
- The camcorder will not record the full 3 seconds prior to pressing [START/STOP] if the button was pressed within 3 seconds of having turned on pre-recording or having finished the previous recording.
- Any of the following actions will deactivate the pre-recording function.
 - Leaving the camcorder without any operation for 5 minutes.
 - Pressing TSD or VIDEO SNAP.
 - Changing the position of the mode switch.
 - Changing the camcorder's operating mode.
 - Setting the camcorder to standby mode.
 - Changing any of the setup menu settings or changing the following settings in the FUNC. panel: [Rec. Programs], [White Balance], [AGC Limit], [Digital Effect] or [Image Stabilizer].

Face Detection

The camcorder automatically detects people's faces and uses this information to select the optimal settings for beautiful videos and photos.

Operating modes:



Select a recording program other than [→ Night Scene],
 [♠ Low Light], [★ Fireworks] or [♠ Underwater].

By default, face detection is activated. If the function was turned off, perform the following procedure to turn it on.



To select the main subject

If there is more than one person in the picture, the camcorder will automatically select one person it determines is the main subject. The main subject is indicated by a white face detection frame and the camcorder will optimize the settings for that person. Other faces will have gray frames.

Touch a different face on the touch screen to optimize the camcorder's settings for that person.



Main subject



- The camcorder may mistakenly detect the faces of non-human subjects. In such case, turn face detection off.
- In certain cases, faces may not be detected correctly. Typical examples include:
 - Faces extremely small, large, dark or bright in relation to the overall picture.
- Faces turned to the side, at a diagonal or partially hidden.
- Face detection cannot be used when the shutter speed used is slower than 1/25 or when the digital zoom is activated at more than 60x zoom (dark blue area on the zoom bar).
- When face detection is activated, the slowest shutter speed used by the camcorder is 1/25.

Touch & Track

When recording people, face detection (as will track the main subject and keep it always in focus. But also when recording other moving subjects such as your pet, a moving vehicle or people not facing the camera directly, you can use Touch & Track to keep your subject in focus at all times.

Operating modes:

- 1 Make sure face detection is activated (\square 63).
- 2 Point the camcorder at a moving subject and touch the subject on the touch screen.
 - A white double frame will appear around the subject and track it as it moves.
 - \bullet Touch [Cancel $\[\[\] \] \]$ to remove the frame and cancel the tracking.

(i) NOTES

- In certain cases, Touch & Track may not be able to track the subject.
 Typical examples include:
 - Subjects extremely small or large in relation to the overall picture.
 - Subjects too similar to the background.
 - Subjects lacking sufficient contrast.
 - Fast moving subjects.
 - When shooting indoors with insufficient lighting.

Video Snapshot

Record a series of short scenes or capture short scenes from a movie you have previously recorded. Play your video snapshot scenes set to your favorite music (\$\subseteq\$ 86) to create your own fun music video. You will be surprised how by changing the background music, you can give your scenes an entirely new feel.

Recording Video Snapshot Scenes

1 Press VIDEO SNAP .

- A blue border appears on the screen.
- Press VIDEO SNAP again to return to normal video recording mode.

2 Press START/STOP.

- By default, the camcorder records for about 4 seconds (the blue frame serves as a visual progress bar) and then automatically returns to record pause mode. You can
 - and then automatically returns to record pause mode. You can change the length of video snapshot scenes with the [] > [Video Snapshot Length] setting.
- When the camcorder stops recording, the screen will momentarily turn black as if a camera shutter had released.
- In index screens, video snapshot scenes are indicated with the mark.


(i) NOTES

 Changing the camcorder's operating mode will deactivate the video snapshot mode.

Digital Effects







- * You can preview the digital effect on the screen.
- The icon of the selected digital effect appears in green. Effects are applied immediately.

To fade in/out

Press START/STOP in record pause mode (●II) to start recording with a fade in. Press START/STOP while recording (●) to fade out and pause the recording.

Options (◆ Default value)

- [辭 **0ff]** Select this setting when you do not intend to use the digital effects.
- [**Black & White**]* Records movies and photos in black and white.
- [E2 Sepia]* Records movies and photos in sepia tones for an "old" look.
- [30 Fade Trigger/Once], [30 Fade Trigger/Always], [52 Wipe/Once], [30 Wipe/Always] Select one of the faders to begin or end a scene with a fade from or to a black screen. You can choose to activate the fader only once, or every time you press START/STOP] to begin or end a scene.
- Only these digital effects are available in mode.

(i) NOTES

- When you apply a fader, not only the picture but also the sound will fade in or out. When you apply an effect, the sound will be recorded normally.
- Faders cannot be used when recording video snapshot scenes or when pre-recording is activated.

Manually Setting the Shutter Speed or Aperture

[**P** Programmed AE] is the default automatic exposure (AE) recording program; using it, you can change functions like the white balance or image effects. Select one of the other AE recording programs to control the shutter speed or aperture.

♦

[FUNC.] ▶ [Rec. Programs] ▶ [Tv Shutter-Pri. AE] or [Av Aperture-Pri. AE] ▶ Drag your finger left and right along the dial to set the desired shutter speed (Tv) or aperture value (Av) ▶ [X]

Options (◆ Default value)

- [P Programmed AE]* The camcorder automatically adjusts the aperture and shutter speed to obtain the optimal exposure for the subject.
- [TV Shutter-Pri. AE] Set the shutter speed value. The camcorder automatically sets the appropriate aperture value.
- [AV Aperture-Pri. AE] Set the aperture value. The camcorder automatically sets the appropriate shutter speed.

i NOTES

- [Tv Shutter-Pri. AE]:
 - On screen only the denominator is displayed [TV 250] indicates a shutter speed of 1/250 second, etc.
 - When recording in dark surroundings, you can obtain a brighter picture by using slow shutter speeds; however, image quality may not be as good and autofocus may not work well.
 - The image may flicker when recording with fast shutter speeds.
- [Av Aperture-Priority AE]: The actual range of values available for selection will vary depending on the initial zoom position.
- When setting a numeric value (aperture or shutter speed), the number displayed will flash if the aperture value or shutter speed is not appropriate for the recording conditions. In such case, select a different value.
- During exposure lock, the aperture value/shutter speed cannot be changed. Set the aperture value or shutter speed before manually adjusting the exposure.

Shutter Speed and Aperture Value Guidelines With slower shutter speed you can add a nice motion blur and sense of movement. With faster shutter speeds you can "freeze the action" for powerful images of moving subjects. mode ▶ ■ mode 1/2 1/12 1/25 1/50 1/120 . 1/250 1/500 1/3 1/6 1/1000 . 1/2000 Low-light situations Fast moving subjects or shooting from a Most ordinary conditions moving car or train Indoor sports Outdoor sports on sunny days With small aperture values only the subject is in focus and the background is softly blurred. Great for portraits or to isolate a single object. With large aperture values every part of the image is clearly in focus. Good for landscapes and architectural shots.

F2.0

F2.4

F1.8

More light

Shallow

F2.8

F3.4


■ Lens aperture ▶

■ Depth of Field ▶

F4.0

F4.8

F5.6



Manual Exposure Adjustment

At times, backlit subjects may appear too dark (underexposed) or subjects under very strong lights may appear too bright or glaring (overexposed). To correct this, you can adjust the exposure manually or use the Touch AE function to automatically set the optimal exposure for the subject you select. This is convenient when the brightness of the subject you want to shoot is noticeably brighter/darker than the general brightness of the image.

Operating modes:





- Select a recording program other than [** Fireworks].
- 1 Open the exposure adjustment screen.



- 2 Touch a subject that appears inside the **½** frame.
 - The Touch AE mark (*\(\) will flash and the exposure will be adjusted automatically so the area you touched will be correctly exposed. You have the option to further adjust the exposure manually as necessary.
 - You can touch [M] instead to adjust the exposure manually without activating the Touch AE function.
 - The manual adjustment dial appears and the adjustment value is set at ±0.
 - Touch [M] again to return the camcorder to automatic exposure.
- 3 Drag your finger up and down along the dial to set the exposure adjustment value.

The adjustment range may vary depending on the initial brightness of the image, and some values may be grayed out.

4 Touch [X] to lock the exposure at the selected value.

(i) NOTES

- If the recording program is changed during exposure lock, the camcorder will return to automatic exposure.

Automatic Gain Control (AGC) Limit

When recording in dark surroundings, the camcorder will automatically increase the gain to try to get a brighter picture. However, using higher gain values may result in more noticeable video noise. You can select the AGC limit to curb the amount of noise by setting the maximum gain value to be used. The smaller the AGC limit, the picture will be darker but will have less the noise.





- * Touch [A Automatic] to remove the limit for the automatic gain control.
- The AGC limit selected appears on the screen.

Manual Focus Adjustment

Autofocus may not work well on the following subjects. In such case, focus manually.


- Reflective surfaces
- Subjects with low contrast or without vertical lines
- · Fast moving subjects
- Through wet windows
- · Night scenes







- Adjust the zoom before you start the procedure.
- 1 Open the manual focus screen.



2 Touch a subject that appears inside the **()** frame.

- The Touch AF mark (**,) will flash and the focusing distance will be adjusted automatically. You have the option to further adjust the focus manually as necessary.
- You can touch [MF] instead to adjust the focus manually without activating the Touch AF function.
- The manual focus controls and the current focusing distance appear.
- Touch [MF] again to return the camcorder to autofocus.

3 Touch and hold [▲] or [♣] to adjust the focus.

- The center of the screen will be magnified to help you focus more easily. You can also turn off this function with the Fig. (Focus Assistance) setting.
- The focusing distance displayed will change as you adjust the focus.
 You can change the units used for the distance display with the
 Distance Units setting.
- If you wish to focus on faraway subjects such as mountains or fireworks, touch and hold [▲] until the focusing distance changes to .
- 4 Touch [X] to lock the focus at the selected distance.

 During manual focus, [MF] will appear on the screen.



 While the optional Wide-converter or Tele-converter is attached, the focusing distance displayed will be incorrect.


White Balance

The white balance function helps you to accurately reproduce colors under different lighting conditions so that white objects will always look truly white in your recordings.

Operating modes:



Select a recording program other than the Special Scene recording programs.



^{*} When you select [♣ Custom WB], Set the custom white balance with the following procedure before touching [★].

To set the custom white balance

Point the camcorder at a white object, so it fills the whole screen, and touch [Set WB].

When the adjustment is completed, so stops flashing and disappears. The camcorder will retain the custom white balance even if you turn it off.

Options (◆ Default value)

- [## Automatic] The camcorder automatically sets the white balance for natural looking colors.
- [* Daylight] To record outdoors on a bright day.
- [Cloudy] To record on a cloudy day.
- [**# Fluorescent**] To record under warm white, cool white or warm-white-type (3-wavelength) fluorescent lighting.
- [**端 Fluorescent H**] To record under daylight or daylight-type (3-wavelength) fluorescent lighting.
- [* Tungsten] To record under tungsten and tungsten-type (3-wavelength) fluorescent lighting.

i NOTES

- When you select the custom white balance:
 - Set [Digital Zoom] to [OFF Off].
 - Reset the white balance when you change locations or the lighting or other conditions change.
 - Depending on the light source, ♣ may keep flashing. The result will still be better than with [# Automatic].
- Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps and certain types of fluorescent lights
- Depending on the type of fluorescent light, optimal color balance may not be obtained with [※ Fluorescent] or [端 Fluorescent H]. If the color looks unnatural, select [쌔 Automatic] or [』 Custom WB].


Image Effects

You can use the image effects to change the color saturation and contrast to record movies and photos with special color effects.

Operating modes:







Select a recording program other than the Special Scene recording programs.



* When you select [♠c Custom Effect], set the custom image effect with the following procedure before touching [★].

To set the custom image effect

- 1 Touch [+1], [-1] or [0] to set the desired [Color Depth] level.
- 2 Touch [◄] or [►] to select [Sharpness], [Contrast] and [Brightness] and adjust their levels the same way.

Options (Default value)

- [**OFF Off**] Records with no image enhancing effects.
- $[A_N \text{ Neutral}]$ Tones down the contrast and color saturation.
- [**£Ls Low Sharpening**] Records subjects with softened outlines.
- [& Soft Skin Detail] Softens the details in the skin tone area for a more complimentary appearance. To obtain the best effect, use this setting when recording a person in close-up. Note that areas similar to the skin color may lack in detail.
- [\$\mathcal{A}_c\$ Custom Effect] Allows you to adjust the color depth, brightness, contrast, and sharpness of the image.

[Color Depth]: (-1) Shallower, (+1) Richer.

[Sharpness]: (-1) Softer, (+1) Sharper.

[Contrast]: (-1) Softer, (+1) Sharper.

[Brightness]: (-1) Darker, (+1) Brighter.

Mini Video Light


You can turn on the mini video light to shoot video or take photos in dark places.

Operating modes:









- * appears on the screen.
- Repeat, selecting [OFF Off], to turn off the mini video light.

i NOTES

 We recommend not using the mini video light while the optional Wideconverter or Tele-converter is attached; its shadow can appear on the screen.

Using an External Video Light

You can use the optional VL-5 Video Light or VFL-2 Video Flash Light when you need a video light that is stronger than the built-in mini video light.

Attach the optional video light to the mini advanced shoe.

- Refer to Using the Mini Advanced Shoe (81).
- "§" appears when you turn on the optional video light (ON or AUTO).
 For details about using the optional video light, refer to the instruction manual of the accessory used.

i NOTES

 When an optional video light is attached to the mini advanced shoe, the built-in mini video light will be disabled. To use the built-in mini video light, turn off the optional video light.

Self Timer



- 🖒 appears.
- Repeat, selecting [OFF Off], to turn off the self timer.

mode: In record pause mode, press START/STOP.

The camcorder starts recording after a 10-second countdown*. The countdown appears on the screen.

mode: Press PHOTO, first halfway to activate the autofocus and then fully.

The camcorder will record the photo after a 10-second countdown*. The countdown appears on the screen.

* 2 seconds when using the wireless controller.

i NOTES

- Once the countdown has begun, any of the following actions will cancel the self timer.
 - Pressing <u>START/STOP</u> (when recording movies) or <u>PHOTO</u> fully (when recording photos).
 - Turning off the camcorder.
 - Changing the camcorder's operating mode.
 - Setting the camcorder to standby mode.

Audio Recording Level

You can adjust the audio recording level of the built-in or an external microphone. You can display the audio level indicator while recording.

Operating modes:



Manual Adjustment of the Audio Recording Level

1 Open the manual audio recording level adjustment screen.



- The audio level indicator and current audio recording level will appear on the screen.
- Touch [A Automatic] to return the camcorder to automatic audio recording levels.



2 Touch and hold [◄] or [▶] to adjust the audio recording level as necessary.

As a guideline, adjust the audio recording level so that the audio level meter will go to the right of the -12 dB mark (yellow area) only occasionally.

3 Touch [X] to lock the audio recording level at the current level.

To display the audio level indicator

Usually, the audio level indicator will be displayed only after activating the manual adjustment of the audio recording level. You can choose to display it also when the audio level is adjusted automatically.



(i) NOTES

- When the audio level meter reaches the red point (0 dB), the sound may be distorted.
- If the audio level is too high and the sound gets distorted, activate the microphone attenuator with the [Microphone Attenuator] setting.
- We recommend using headphones to check the sound level while adjusting the audio recording level or when the microphone attenuator is activated.

Using Headphones

Use headphones for playback or to check the audio level while recording. The headphones are connected to the AV OUT/ Ω terminal, which is used for both the headphones and the audio/video output. Before connecting the headphones, follow the procedure below to change the function of the terminal from AV output to Ω (headphones) output.



* Headphones can be used also in node but the function of the terminal cannot be changed in this mode. Change the setting in advance in one of the other operating modes.

[FUNC.]* [MENU] [AV/Headphones] [Headphones] [X]

To close the menu: [X]

To continue adjusting the volume:

▶ [♠] Nolume
▶ Drag your finger left and right along the volume bar to adjust the volume
▶ [★]

- * Only when performing the procedure in mode.
 - Ω appears.



To adjust the volume during playback

In \blacksquare mode, and in \blacksquare mode during slideshow playback, adjust the headphones volume the same way you adjust the speaker's volume (\square 48).

- When using headphones, make sure to lower the volume to an appropriate level.
- Do not connect the headphones to the AV OUT/Ω terminal if the Ω icon does not appear on the screen. The noise output in such case may be harmful to your hearing.

(i) NOTES

- Use commercially available headphones with a Ø 3.5 mm minijack and a cable no longer than 3 m.
- Even if [AV/Headphones] was set to [
 Ω Headphones] in a playback
 mode, the function of the AV OUT/
 Ω terminal will return automatically to
 AV output when you turn off the camcorder.

Using the Mini Advanced Shoe

Using the mini advanced shoe, you can attach to the camcorder a range of optional accessories to expand its functionality. For details about optional accessories available for use with your camcorder, refer to *Accessories* (180). For details about how to attach and use the accessories, refer also to the instruction manual of the accessory used.

- Retract the mini advanced shoe cover in the direction of the arrow.
- 2 Attach the optional accessory to the mini advanced shoe.

When a compatible accessory is attached to the mini advanced shoe, "" will appear on the screen.



Example: Attaching an optional DM-100 Directional Stereo Microphone.

(i) NOTES

 Accessories designed for the Advanced Accessory Shoe cannot be used with this camcorder. Look for video accessories bearing this logo to ensure compatibility with the mini advanced shoe.



Using an External Microphone

When recording in very quiet surroundings, the built-in microphone may pick up the sound of the camcorder's internal machinery. In such case, we recommend using an external microphone.

Using the SM-V1 Surround Microphone or DM-100 Directional Stereo Microphone

Using the SM-V1 you can add a sense of depth and presence to your recordings with 5.1ch surround sound. Using the DM-100 you can accurately record audio coming directly from the direction you are recording.

Operating modes:







Attach the optional SM-V1 Surround Microphone or DM-100 Directional Stereo Microphone to the mini advanced shoe.

Refer to Using the Mini Advanced Shoe (\$\superscript{\subscript{\sinctript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\subscript{\sinctript{\s

" papears. For details about using the optional external microphone, refer to the instruction manual of the accessory used.



(i) NOTES

- Playing back recordings made with the optional SM-V1 Surround Microphone: You can enjoy 5.1ch surround sound playback on HDTVs compatible with 5.1ch surround sound connected to the camcorder using an HDMl cable. Audio output from the AV OUT/
 ∩ terminal (including headphone output) will be converted to 2ch stereo. The camcorder's built-in speaker is monaural.

Using a Zoom Remote Controller

By attaching the optional RA-V1 Remote Control Adapter to the mini advanced shoe, you can use the optional ZR-2000 or ZR-1000 Zoom Remote Controller. Doing so will allow you to use certain functions while viewing the picture on an external monitor without touching the camcorder. This is particularly useful while the camcorder is mounted on a tripod and you want to ensure maximum stability of a shot.

Operating modes:

Attach the optional RA-V1 Remote Control Adapter to the mini advanced shoe.

Refer to Using the Mini Advanced Shoe (\$\square\$ 81).

"5" appears. For details about using the adapter, refer to the instruction manual of the RA-V1. For details about using the zoom remote controller, refer to the instruction manual of the ZR-2000 or ZR-1000.

Functions Available with the Zoom Remote Controller

Using the ZR-2000 or ZR-1000: turning the power on/off, starting/stopping a recording, zoom, focus adjustment and displaying on-screen displays on an external monitor.

Using the ZR-2000 only: switching between autofocus and manual focus, Push AF* and focus assistance (MAGNIFYING button).

* The Push AF function allows you to switch to autofocus temporarily during manual focus.




 In mode, the only available functions are turning the power on/off, starting/stopping a recording, and zoom.

Selecting the Playback Starting Point

If you have a very long scene, you may want to start playing back the scene from a certain point. You can use the movie timeline to break the scene to segments at fixed time intervals ranging from 6 seconds to 6 minutes. If you recorded movies using face detection (\square 63), you can display the scene divided into segments every time the camcorder registered a change in the main subject of the scene.

Operating modes:

- 1 Open the [Original] or [Playlist] index screen.
- 2 Open the scene's [Timeline] screen.



The [Timeline] screen appears. The large thumbnail will show the first frame of the scene. Below it, the timeline ruler shows frames taken from the scene at fixed intervals.

3 Touch the desired frame in the timeline ruler to start playing back the scene from that point.



- 1 Touch twice to return to the index screen.
- ² Previous/next scene.
- 3 Drag your finger left along the ruler to display the next 5 frames.
- 4 Current scene / Total number of scenes.
- 5 Scene's recording mode and length.
- 6 Recording date and time.
- Drag your finger right along the ruler to display the previous 5 frames.
- 8 Currently selected interval between frames (or [ট্রি Faces]).

To change the interval between frames



To display changes in the scene's main subject



• The timeline ruler will show frames taken from the scene every time the main subject detected by the camcorder changed.

(i) NOTES

• For a single scene, up to 100 changes in main subject will appear in the [Timeline] screen when [[] Faces] is selected.

Playing Back Scenes Set to Background Music

You can play back video snapshot scenes, scenes in the playlist and photo slideshows set to background music (instead of the original sound) using one of the supplied music tracks.

Using the Supplied Music Tracks as Background Music

The supplied Camcorder Supplemental Disc contains 3 music tracks you can use as background music. IFMEG: The music files comes preinstalled in the built-in memory.



- To play back scenes or a slideshow of photos recorded on a memory card, you will need to transfer, in advance, the music tracks to the memory card when it is connected to a computer.
 - Windows users: For details, refer to the 'ImageMixer 3 SE Software Guide' (PDF file). Mac OS users: Use Finder to transfer music files from the [MUSIC] folder on the supplied Camcorder Supplemental Disc. Refer to About the music files (189) for the folder structure on the memory card.
- 1 Open the [Playlist], [Video Snapshot] \rightarrow [Original]/[Playlist] or [Photos] index screen.
- 2 Open the music track selection screen.



* Touch [OFF] Off] to play back the scenes with the sound recorded originally or to play back the photo slideshow without any music.



- 1 Select the desired music track.
- 2 Play back the original sound (no background music).
- 3 Delete the music track selected.
- 4 Listen to the music track selected. Touch again (■) to stop the playback.
- 3 Back in the index screen, touch a scene to start the playback set to the selected music track.

In \blacksquare mode, touch a photo to go to single photo view and continue with the slideshow procedure (\square 108).

To delete a music track

In the music track selection screen, touch $[\blacktriangle]$ or $[\blacktriangledown]$ to select the track you want to delete.



IMPORTANT

 If you use copyrighted songs and music tracks in your video creations, remember that music under copyright may not be used without permission from the copyright holder, except for cases permitted under applicable laws, such as for personal use. Make sure to follow applicable laws when using music files.

(i) NOTES

- You can also add to the playlist just the video snapshot scenes you want to watch and arrange their playback order.
- Initializing a memory card will permanently erase any music files you
 may have transferred from the supplied Camcorder Supplemental Disc
 to the card. (HFM36 The music files that come pre-installed in the built-in
 memory will be restored connected to the computer.)
 - Windows users: Use the supplied software **ImageMixer 3 SE** to transfer music files from the supplied Camcorder Supplemental Disc to a memory card connected to the computer. For details, refer to the 'ImageMixer 3 SE Software Guide' (PDF file).
- Transfer music files from the supplied Camcorder Supplemental Disc to the memory card that contains the recordings you want to play back with background music when the memory card is connected to a computer.

Onscreen Displays and Data Code

You can turn most onscreen displays on or off.

Operating modes:









Repeatedly press DISP to turn the onscreen displays on/off in the following sequence:

mode:

- All displays on
- Most displays off¹

mode²:

- All displays on
- · Only data code on
- All displays off



- mode²:All displays on
- Only recording date and time on
- All displays off

² Touch the screen to display the playback controls.

About the Data Code

With every scene or photo recorded, the camcorder keeps a data code (date/time of recording, information about the camera setup, etc.). In mode, this information is displayed within the Exif information panel while the playback controls are displayed on the screen; in mode, you can select the information to be displayed with the mode, you can select the information to be displayed with the mode, you can select the information to be displayed with the mode.

Pressing DISP will turn off most of the icons and displays that appear automatically but will not remove onscreen displays that were turned on manually (for example, onscreen markers or the audio level meter).

Playlist and Scene Operations


Editing the Playlist: Adding, Deleting, Moving and Playing Back

Create a playlist to play back only the scenes you prefer and in the order of your choice. You can play back the scenes in the playlist using one of the supplied music tracks as background music (86).

Operating modes:

Adding Scenes to the Playlist

- 1 Open the [Original] or [Video Snapshot] → [Original] index screen.
 To add to the playlist all the scenes recorded on a specific date, narrow down the scenes shown to scenes recorded on that date (☐ 52).
- 2 Touch [6] to open the scene selection screen.
- 3 Touch on the individual scenes you want to add to the playlist.
 - A checkmark ✓ will appear on scenes selected. Touch a selected scene again to remove the checkmark.
 - To select all the scenes at once: Touch [Select All] instead of touching individual scenes. (Remove in advance any checkmarks from scenes you may have selected individually.)
- 4 Add the scenes to the playlist.



 IFM36 Scenes are added to the playlist on the same memory they are recorded on.

- (i) NOTES
- Deleting or moving scenes in the playlist will not affect the original recordings.
- Scenes that were edited using the supplied software ImageMixer 3 SE and were then written back to a memory card connected to the computer cannot be added to the playlist.

 IFM36 You can copy scenes from the built-in memory to the memory card (\(\sum_121\)) to include in the memory card's playlist also scenes that were originally recorded in the built-in memory.

Deleting Scenes from the Playlist

Deleting scenes from the playlist will not affect your original recordings.

1 Open the [Playlist] index screen.

You can touch [45] (Video Snapshot] (Playlist) to open the playlist of video snapshot scenes.

- 2 To delete a single scene, touch [i] and touch the scene you want to delete.
 - The [Timeline] screen appears.
 - This step is not necessary to delete the entire playlist.
- 3 Delete the scenes from the playlist.



* If you selected to delete all the scenes in the playlist, touch [Stop] to interrupt the operation while it is in progress. Some scenes will be deleted nevertheless.

Moving Scenes in the Playlist

Move the scenes in the playlist to play them back in the order of your choice.


1 Open the [Playlist] index screen.

You can touch [4 🗹 5] 🌒 [Video Snapshot] 🌒 [Playlist] to open the playlist of video snapshot scenes.

2 Touch [i] and touch the scene you want to move.

The [Timeline] screen appears.

3 Move the scene.





- Destination icon.
- 2 Move the scene to the position indicated by the destination icon.
- 3 Touch an empty box to select it as the destination.
- ⁴ Scene selected to be moved.
- 5 Original position of the scene and currently selected destination

Capturing Photos and Video Snapshot Scenes from a Movie

You can capture video snapshot scenes, single photos or a series of continuous photos from a previously recorded scene. For example, you may want to print photos from video recorded at a party or create a small video clip using video snapshot scenes from the highlights of an event.

Operating modes:

Capturing a Video Snapshot Scene

- 1 Open the index screen that contains the scene from which you want to capture the video snapshot scene.
- 2 Play back the desired scene.
- 3 Press START/STOP to capture the video snapshot scene.

 The camcorder captures the video snapshot scene for about 4 seconds (the blue frame serves as a visual progress bar), and then enters playback pause mode. You can change the length of video snapshot scene you capture with the Video Snapshot Length setting.
- 4 Touch [■] to return to the index screen.

(i) NOTES

- A video snapshot scene can be captured only during playback; it cannot be captured during playback pause mode.
- IFM36 The captured video snapshot scene is saved to the same memory that contains the source scene.
- Video snapshot scenes cannot be captured from any of the following types of scenes.
 - Scenes shorter than 1 second
 - Scenes that were edited using the supplied software ImageMixer 3 SE and were then written back to a memory card connected to the computer.
- When the source scene is itself a video snapshot scene, you may not be able to capture a video snapshot scene depending on the length of the source scene and the length currently selected for video snapshot scenes.
- When you start capturing a video snapshot scene less than 1 second from the end of the scene, the video snapshot scene will be captured starting from the beginning of the following scene.
- During the playback of video snapshot scenes captured from a previously recorded movie, you may notice some anomalies in the picture/ sound at the point where the playback switches to a new scene.

Capturing Photos

You can capture a single photo or a series of photos. The size of the captured photos will be [MW 1920x1080] and it cannot be changed, but you can select the photo quality.

Please read the IMPORTANT section (94) before using an Eye-Fi card.

Operating modes:

To select the photo capture settings

<u>}</u>	[MENU] >		
	Continue from the same menu:		
	[Photo Capture Quality] ▶ Desired photo quality* ▶ [X]		

^{*} The number displayed indicates the approximate number of photos that can be recorded with the current quality setting.

To capture the photos

- 1 Play back the scene from which you want to capture the photo.
- 2 Pause the playback at the point you want to capture.
- 3 Press PHOTO fully.

To capture a photo sequence, hold PHOTO pressed down. The scene will be played back by frames and each frame captured as a separate photo.

4 Touch [■] to return to the index screen.

 When capturing photos on an Eye-Fi card, photos will be uploaded automatically if you are within the range of a configured network. Always verify that Eye-Fi cards have been approved in the country/region of use. See also *Using an Eye-Fi card* (
 134).

i NOTES

- The data code of the photos will reflect the date and time of recording of the original scene.
- Photos captured from a scene with a lot of fast movement may be blurred.
- IFM36 Photos will be recorded on the memory selected for recording photos.
- [Photo Sequence]:
 - Up to 100 photos can be captured at a time.
 - The photo sequence capture will stop when the end of the
 - scene is reached (playback will pause at the beginning of the following scene).
 - Photos will be captured at intervals of 1/25 second.


Dividing Scenes

You can divide scenes (original scenes only) in order to leave out the best parts and later cut out the rest.

Operating modes:

1 Open the [Original] index screen.

- 2 Select the scene you want to divide and touch it to start playing it back.
- 3 Pause the playback at the point where you want to divide the scene.
- 4 Open the scene division screen.



- 5 Bring the scene to a precise point, if necessary.
 - During playback pause: Touch [▶] to play back the scene. Touch [◄II] or [II▶] to jump a frame backward/forward.
 - During playback: Touch [■] to pause the playback. Touch [■] or [▶] for fast playback backward/forward.
- 6 Divide the scene.



 The video from the division point to the end of the scene will appear as a new scene in the index screen.

i NOTES


- When advancing/reversing frames while dividing the scenes, the interval between frames is about 0.5 seconds.
- If the scene cannot be divided at the point where you paused the playback, advance/reverse a frame and then divide the scene.
- During the playback of a scene that was divided, you may notice some anomalies in the picture/sound at the point where the scene was cut.
- The following scenes cannot be divided:
 - Video snapshot scenes and other scenes that are too short (less than 3 seconds).
 - Scenes that were edited using the supplied software ImageMixer 3 SE and were then written back to a memory card connected to the computer.
- Scenes cannot be divided within 1 second from the beginning or the end of the scene.




Photos

Refer to this chapter for details on taking photos (advanced shooting functions), viewing photos and printing them. For details about basic photo shooting, refer to *Dual Shot Mode* (\square 39).

Basic Playback

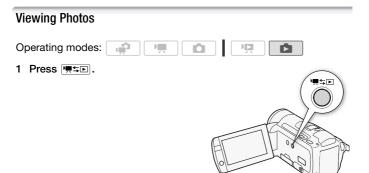

2 Open the [Photos] index screen, if it is not displayed.



3 Look for the photo you want to play back.

Move the zoom lever toward ${\bf W}$ to show 15 photos per page; move it toward ${\bf T}$ to show 6 photos per page.



- 1 Memory being read.
- 2 Index screen currently displayed.
- 3 Drag your finger left for the next index page.
- 4 Drag your finger right for the previous index page.
- Select a different index screen to read different content or from a different memory (HFM36 only) (49).

4 Touch the photo you wish to view.

- The photo is displayed in single photo view.
- Drag your finger left/right to browse through the photos one by one.

To return to the index screen from single photo view

- 1 Touch the screen to display the playback controls.
- 2 Touch [].

Photo Jump Function

When you have recorded a large number of photos, you can jump easily through the photos using the scroll bar.

- 1 Touch the screen to display the playback controls.
- 2 Jump through the photos using the scroll bar.



IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.
- Even if you transfer the following types of image files to a memory card connected to the computer, the images may not be displayed correctly on the camcorder.
 - Images not recorded with this camcorder.
 - Images edited on a computer.
 - Images whose file names have been changed.


Deleting Photos

You can delete those photos that you are not interested in keeping.

Operating modes:

Deleting a Single Photo


- 1 In single photo view, select the photo you want to delete.
- 2 Touch the screen to display the playback controls.
- 3 Delete the photo.



4 Drag your finger left/right to select another photo to delete or touch [X].

Deleting Photos from the Index Screen

1 Open the [Photos] index screen.



2 Touch [1] to open the photo selection screen.

3 Touch on the individual photos you want to delete.

- A checkmark ✓ will appear on photos selected. Touch a selected photo again to remove the checkmark.
- To select all the photos at once: Touch [Select All] instead of touching individual photos. (Remove in advance any checkmarks from photos you may have selected individually.)

4 Delete the photos.



* Touch [Stop] to interrupt the operation while it is in progress. Some photos will be deleted nevertheless.

■ IMPORTANT

- Be careful when deleting photos. Deleted photos cannot be recovered.
- Protected photos cannot be deleted.

Additional Functions


Taking Photos in M Manual Mode



2 Turn on the camcorder.

Operating modes:

- HFM36 By default, photos are recorded in the built-in memory.
 You can select the memory that will be used to record photos (\$\sum_3\$5).
- Please read the IMPORTANT section before using an Eye-Fi card.

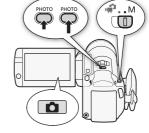

- 3 Touch [to switch to mode.
- 4 Press PHOTO halfway.

Once the focus is automatically adjusted, \odot will turn green and one or more AF frames will appear.

5 Press PHOTO fully.
The ACCESS indicator will flash as the photo is being recorded.

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.
- When recording photos on an Eye-Fi card, photos will be uploaded automatically if you are within the range of a configured network. Always verify that Eye-Fi cards have been approved in the country/region of use. See also *Using an Eye-Fi card* (\(\sum 134\)).

(i) NOTES

- If the subject is not suitable for autofocus, ⊙ turns yellow. Adjust the focus manually (☐ 71).
- When the subject is too bright, [Overexp.] will flash on the screen. In such case, use the optional FS-H37U ND filter.


Deleting a Photo Right After Recording It

You can delete a photo you have just recorded while reviewing it within the time set for the

| You can delete a photo you have just recorded while reviewing it within the time set for the | Photo Review Time | option.



While reviewing the photo immediately after recording:



i NOTES

 If you press DISP during the photo review time, the photo will continue to be displayed indefinitely. Press PHOTO halfway to return to normal shooting mode.

Selecting Photo Size and Quality

Photos are recorded as JPG files. As a general rule, select a larger photo size for higher quality. Select the [LW 2304x1296] size for photos with an aspect ratio of 16:9.



[FUNC.] [MENU] [Photo Quality/Size] Desired photo quality* (top row) Desired photo size* (bottom row) [X]

* The number displayed on the right corner indicates the approximate number of photos that can be recorded with the current quality/size setting.

Options

Large capacity memory cards, like those usually used for video recording, can contain a very large number of photos. As a reference, the number of photos that can be recorded on a 1 GB memory card is given in the following table.



- The actual number of photos that can be recorded will vary depending on the subject and shooting conditions.
- The camcorder retains the last setting used even if you set the camcorder to memory mode.
- When printing photos, use the following guidelines as a reference for selecting the print size.
 - L 2100x1575: To print photos up to A4 size (21 x 29.7 cm).
 - M 1600x1200: To print photos up to L size (9 x 13 cm) or postcard size (10 x 14.8 cm).
 - \$ 640x480: To send photos as e-mail attachments or to post on the Web.
 - LW 2304x1296, MW 1920x1080, SW 848x480: To print photos with a 16:9 aspect ratio. (Wide-sized photo paper is required.)

Approximate number of photos available on a 1 GB memory card

Default value

Memory card	Photo quality			
Photo size ↓	S [Super Fine]	♠ Fine • [Fine] • [■ [Normal]	
L 2100x1575*	420	630	1,265	
LW 2304x1296	465	700	1,390	
M 1600x1200	720	1,075	2,115	
MW 1920x1080 ¹	670	1,000	1,970	
S 640x480	4,395	6,350	11,430 ³	
SW 848x480 ²	3,360	4,760	9,525	

 $[\]frac{1}{2}$ This size is only available for capturing photos from a movie (\square 92).

² This size is only available for simultaneous recording in mode or mode.

³ Approximate number of photos that can actually be recorded on the memory card. (The maximum number of remaining photos displayed on the screen is 9999.)

Flash

You can use the flash to take photos in dark places.

Operating modes:



- Select a recording program other than [※ Fireworks], [⑥ Underwater] or [会 Surface].
- 1 Select the flash mode.



- The icon of the selected flash mode appears. *A disappears after 4 seconds.
- 2 Press PHOTO, first halfway to activate the autofocus and then fully to record the photo.

Depending on the setting selected and shooting conditions, the flash will fire.

Options ([♦] Default value)

- [\$^ Automatic]* The flash fires automatically according to the brightness of the subject.
- [Red-Eye Auto] The flash fires automatically according to the brightness of the subject. The assist lamp lights up to reduce the red-eye effect.
- [Flash 0n] The flash always fires.
- [Flash Off] The flash does not fire.

Using the VFL-2 Video Flash Light

You can use the optional VFL-2 Video Flash Light as an external flash when its POWER switch is set to ② ON. The procedure for setting the external flash is the same as for the built-in flash.

Attach the optional VFL-2 Video Flash Light to the mini advanced shoe.

Refer to Using the Mini Advanced Shoe (81).

"ś" appears when you turn on the video flash light (§ ON). For details about using the video flash light, refer to the instruction manual of the VFL-2.

(i) NOTES

- The flash will not fire in the following cases:
 - When the flash mode is set to [♣ Automatic] or [� Red-Eye Auto] and you manually adjust the exposure.
 - During auto exposure bracketing.
 - When the flash mode is set to [♣ Automatic] or [� Red-Eye Auto] and the recording program is set to [♣ Night Scene].
 - When using an optional video light.
- About the AF-Assist Lamp: While you press PHOTO halfway, if the surroundings of the subject are too dark, the mini video light may light up briefly in order to enable the camcorder to focus more accurately (AFassist lamp).

 - The camcorder may not be able to focus even if the AF-assist lamp is on.
- The practical range of the flash is approx. 1 to 2 m. The practical range with the VFL-2 attached is approx. 1 to 4 m. In any case, the actual range will depend on the recording conditions.
- The range of the flash decreases in continuous shooting mode.
- For red-eye reduction to be effective, the subject needs to look at the assist lamp. The degree of reduction depends on the distance and on each individual.
- The flash mode cannot be selected when the exposure is locked.
- We recommend not using the flash while the optional Wide-converter or Tele-converter is attached; its shadow can appear on the screen.

Drive Mode: Continuous Shooting and Exposure Bracketing

Take a series of photos of a moving subject or record the same picture in 3 levels of exposure in order to choose later the photo you like the best.

Operating modes:



• Select a recording program other than [** Fireworks].



Options (◆ Default value)

[☐ Single] Arecords a single photo.

[AE Bracketing] The camcorder records 3 photos using 3 different exposures (dark, normal, light in 1/2 EV steps), allowing you to choose the photo you like the best.

[밀 Continuous], [빌 Hi-Speed Cont.]

Captures a series of up to 60 photos as long as you hold PHOTO pressed down. There are two continuous shooting speed settings: normal (approx. 2.5 photos/second) and high speed (approx. 4.1 photos/second).

Continuous Shooting/Hi-Speed Continuous Shooting

- 1 Press PHOTO halfway to activate the autofocus.
- 2 Press PHOTO fully and hold it pressed down.

Auto Exposure Bracketing

Press [PHOTO], first halfway to activate the autofocus and then fully to record the 3 photos.

i NOTES

- Continuous shooting speeds are approximate and vary depending on recording conditions and subjects.
- When the flash is used, continuous shooting speed will decrease to approx. 1.7 photos/second. Continuous shooting speed will decrease also when using slow shutter speeds (1/25 or slower).

Taking Photos while Recording Movies (Simultaneous Recording)

You can record photos even while the camcorder is set to Moreover, you can capture the photo at the same time you are recording video. Photos recorded with simultaneous recording will have the same aspect ratio of movies (16:9).

Please read the IMPORTANT section ($\ \square$ 106) before using an Eye-Fi card.

Operating modes:

[FUNC.] [MENU] [Simultaneous Recording] Desired photo quality* (top row)** Desired photo size* (bottom row) [X]

**Touch [if you do not intend to use simultaneous recording.

Operating modes:

While recording, or in record pause mode, press $\boxed{\mbox{PHOTO}}$ to capture the photo.

In mode, the size/quality of photos taken while recording video (simultaneous recording) will be determined by the setting selected with this procedure; the size/quality of photos taken in record pause mode will be determined by the photo size set in mode (1101).

● IMPORTANT

 When recording photos on an Eye-Fi card, photos will be uploaded automatically if you are within the range of a configured network. Always verify that Eye-Fi cards have been approved in the country/region of use. See also *Using an Eye-Fi card* (
134).

(i) NOTES

 Photo quality will be higher when photos are recorded in mode or in mode during record pause.

^{*} The number displayed on the right corner indicates the approximate number of photos that can be recorded with the current quality/size setting.

- IFM36 Photos will be recorded on the memory selected for recording photos.
- Photos cannot be recorded simultaneously while the digital zoom or a digital effect is activated.
- In mode, when the IS mode is set to Dynamic, if you zoom in to full telephoto you can record video using a zoom ratio larger than 15x. Photos taken simultaneously at that time, however, will show a maximum zoom ratio of 15x so the video and the photo will not show exactly the same picture.

Light Metering Mode

The camcorder measures the light reflected from the subject in order to calculate the optimal exposure settings. Depending on the subject, you may want to change the way the light is measured and evaluated.



POINTS TO CHECK

Select a recording program other than the Special Scene recording programs.



Options (Default value)

- [Evaluative] Appropriate for standard shooting conditions, including backlit scenes. The camcorder divides the picture into several areas and the light is measured in all of them to achieve the optimal exposure for the subject.
- [Canter-Wt. Avg.] Averages the light metered from the entire screen, giving more weight to the subject in the center.
- [Spot] Meters only the area within the spot AE point frame. Use this setting to adjust the exposure to match the subject in the center of the screen.

Slideshow

You can play a slideshow of all the photos and even set it to music.

Operating modes:



- ig b
- 1 Open the [Photos] index screen.
- 2 Select the background music to use when playing back the photo slideshow (86).
- 3 Touch the screen to display the playback controls, then touch [▶] to play back the slideshow set to the selected music track.

To change the slideshow's transition effects



Magnifying Photos during Playback

In single photo view, photos can be magnified up to 5 times. % will appear for photos that cannot be enlarged.

Operating modes:





- 1 Move the zoom lever toward T.
 - The photo is magnified by 2 times and a frame appears indicating the position of the magnified area.
 - To further enlarge the photo, move the zoom lever toward T. To reduce the magnification times, move it toward W.





2 Drag your finger across the photo to display the area you want to see enlarged.

To cancel the magnification, move the zoom lever toward \boldsymbol{W} until the frame disappears.

Rotating Photos

You can rotate photos 90 degrees to change their orientation.

Operating modes:

- 1 In single photo view, select the photo you want to rotate.
- 2 Touch the screen to display the playback controls.
- 3 Rotate the photo.



4 Drag your finger left/right to select another photo to rotate or touch [X].

Histogram Display

In single photo view, you can display the histogram and the icons of all the functions used at the time of recording (Exif information panel). The histogram will be displayed also immediately after taking a photo. Use the histogram as a reference to verify the correct exposure of the photo.

Operating modes: * In **n** mode the histogram will be dis-Pixel Count played while a photo is reviewed immediately after having taken the photo. Touch the screen to display the Shadows <

playback controls. The histogram and Exif information

panel are displayed as well. Press DISP. to hide the histogram and Exif information panel.

The area to the right of the histogram represents highlights and the left side represents shadows. A photo whose histogram skews to the right is relatively bright; while one whose histogram peaks to the left, is relatively dark.

Protecting Photos

You can protect photos from accidental erasure.

Operating modes:

Protecting Single Photos

- 1 In single photo view, select the photo you want to protect.
- 2 Touch the screen to display the playback controls.
- 3 Protect the photo.



- appears and the photo cannot be deleted. Touch [Om] again to remove the protection.
- 4 Drag your finger left/right to select another photo to protect or touch [X].

Protecting Photos from the Index Screen

- 1 Open the [Photos] index screen.
- 2 Touch [1] to open the photo selection screen.
- 3 Touch on the individual photos you want to protect.
 - A checkmark ✓ will appear on photos selected. Touch a selected photo again to remove the checkmark.
 - To select all the photos at once: Touch [Select All] instead of touching individual photos. (Remove in advance any checkmarks from photos you may have selected individually.)
- 4 Protect the photos.



* Touch [Remove Protection] to remove the protection from the selected photos.



 Initializing the memory will permanently erase all recordings, including protected photos.

You can also use the following functions...

The following functions and features of the camcorder can be used either for shooting video or for taking photos. The way to set and use them was already explained in detail, so we refer you to the relevant page in the "Video" section.

- Zoom (<u>11</u> 43)
- Quick Start (QQ 44)
- Recording programs (\$\sum 57, 67)\$
- Face detection (63)
- Touch & Track (65)
- Digital effects (\$\sum 66\$)
- Manual exposure adjustment (\$\superscript{\subscript{\sinct{\sintem\sint\sint\sinth\sint\sinth\sint\sinth\si
- Manual focus adjustment (71)
- White balance (\$\sum 73\$)
- Image effects (T4)
- Mini video light (75)
- Self timer (77)

Printing Photos

Printing Photos (Direct Print)

The camcorder can be connected to any PictBridge-compatible printer. You can mark in advance the photos you want to print and set the desired number of copies as a print order (114).

Canon printers: SELPHY printers of the CP, DS and ES series and inkjet printers carrying the PictBridge logo.



Operating modes:





Connecting the Camcorder to the Printer

- 1 In single photo view, select a photo you want to print.
- 2 Turn on the printer.
- 3 Connect the camcorder to the printer using the supplied USB cable.
 - Connection 4. Refer to Connection Diagrams (119).
 - - appears and changes to \(\mathcal{K} \).

IMPORTANT

- If
 continues to flash (for more than 1 minute) or if
 does not appear, the camcorder is not correctly connected to the printer. In such case, disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to mode and restore the connection.
- During the following operations, even if you connect a printer to the camcorder it will not be recognized.
 - Deleting all photos
 - Removing all print orders

(i) NOTES

- \(\mathbb{M} \) will appear for photos that cannot be printed.
- We recommend powering the camcorder using the compact power adapter.
- Refer also to the printer's instruction manual.

112 + Photos

 For best performance when connecting the camcorder to a PictBridgecompatible printer, we recommend keeping the number of photos in the memory to no more than 100 photos.

Printing a Single Photo

With the camcorder correctly connected to the printer and the photo you want to print displayed in single photo view:



- Printing starts. When the printer finishes printing the photo, the camcorder will return to single photo view.
- Touch [Stop] > [Yes] to interrupt the printing in progress.
- Drag your finger left/right to select another photo to print.

To change the paper size



(i) NOTES

 Print setting options and the [Default] paper size vary depending on the printer used. For details, refer to your printer's instruction manual.

When you have finished printing

Disconnect the USB cable from the camcorder and printer and turn off the camcorder.

Print errors

If an error occurs while printing, an error message (for example, [No paper]) will appear on the camcorder's screen. Solve the problem referring to the error message list (170) and to the printer's instruction manual.

- Canon's PictBridge-compatible printers: If printing does not resume automatically after you solved the problem, touch [Continue] to resume printing. If that option is not available, touch [Stop] and then restart printing from the beginning.
- Other printers or if the error still persists with a Canon printer: If printing
 does not resume automatically, disconnect the USB cable and turn off
 the camcorder. After a short while, turn on the camcorder and restore
 the USB connection.

Print Orders

You can mark in advance photos you want to print from those recorded on the memory card, and set the desired number of copies as a print order. Later, you can easily print out the print orders by inserting the memory card into the SD memory card slot of DPOF-compatible printers or self-serviced digital photo kiosks. You can set print orders for up to 998 photos.

Operating modes:

Marking Single Photos with Print Orders

- 1 In single photo view, select the photo you want to mark with a print order.
 - Check that you are viewing photos recorded on the memory card. (see appears next to the photo number.)
- 2 Touch the screen to display the playback controls.
- 3 Mark the photo with a print order.

 $\begin{tabular}{ll} \bigwedge [Edit] \end{tabular} [Print Orders] \end{tabular} \begin{tabular}{ll} \lozenge [A] or [\end{tabular}] to set the number of copies \end{tabular}$

 The total number of copies in the DPOF print order appears next to the icon.

- To cancel the print order, set the number of copies to 0.
- 4 Drag your finger left/right to select another photo to mark with a print order or touch [X].

Setting Print Orders from the Index Screen

- 1 Open the [Photos] index screen.
 - Check that you have selected the Ez tab (memory card).
- 2 Touch [☑] to open the photo selection screen.
- 3 Touch on the individual photos you want to mark with a print order.
 - A checkmark ✓ will appear on photos selected. Touch a selected photo again to remove the checkmark.
 - To select all the photos at once: Touch [Select All] instead of touching individual photos. (Remove in advance any checkmarks from photos you may have selected individually.)
- 4 Mark the photos with print orders.



Options

[One Copy Each] Sets a print order of 1 copy of each of the selected photos.

[Remove Print Orders] Removes all the print orders from the selected photos.

(i) NOTES


 IFM36 To set print orders for photos recorded in the built-in memory, copy the photos to the memory card in advance.



External Connections

This chapter explains how to connect your camcorder to an external device such as a TV, VCR, or computer.

Terminals on the Camcorder



①COMPONENT OUT Terminal*

Access: Open the rear terminal cover.
The component video terminal is for video only.
When you use connection 2 do not forget the audio connections using the AV OUT/?
terminal



2USB Terminal

Access: Open the side terminal cover.

3HDMI OUT Terminal*

Access: Open the side terminal cover.
The HDMI OUT terminal offers a high-quality digital connection that combines audio and video in a single convenient cable.





⊕AV OUT/ ○ Terminal

Access: Open the LCD panel.

Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder. Adjust the volume on the connected TV


* When connecting a cable to the camcorder, make sure to align the triangle marks on the cable's connector and on the camcorder's terminal.





Connection Diagrams

In the following connection diagrams, the left side shows the terminals on the camcorder and the right side shows (for reference only) an example of terminals on a connected device.

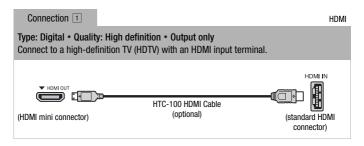

About the HDMITM connection

The HDMI (High-Definition Multimedia Interface) connection (1) is a convenient all-digital connection using a single cable for both video and audio. When you connect the camcorder to an HDTV equipped with an HDMI terminal, you can enjoy video and audio playback at the highest quality.


- The HDMI OUT terminal on the camcorder is for output only. Do not connect it to an HDMI output terminal on an external device, as this may damage the camcorder.
- While the camcorder is connected to an HDTV using connection 1, there will be no video output from other terminals.
- Correct operation cannot be guaranteed when connecting the camcorder to DVI monitors.
- Depending on the HDTV, correct playback of personal video content may not be possible using connection 1. Try one of the other connections.

Connection 2 Component Video

Type: Analog • Quality: High Definition • Output only

Connect to a high-definition TV (HDTV) with component video input terminals. Change the following settings on the camcorder:

- [AV AV]

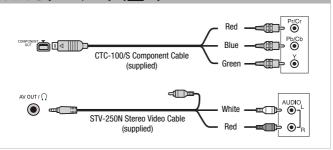

Connection 3 Composite Video


Type: Analog • Quality: Standard definition • Output only


Connect to a standard TV or a VCR with audio/video input terminals. Change the following settings on the camcorder:

- TTV Type] according to the TV set (widescreen or 4:3), if the TV cannot automatically detect and change the aspect ratio
- [AV/headphones] to [AV AV]



In all respects, exactly the same connection as connection 3. Connect to a standard TV or VCR with SCART input terminal. Requires a SCART adapter (commercially available).



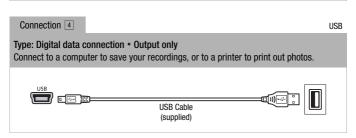

Playback on a TV Screen

Connect the camcorder to a TV to enjoy your recordings with family and friends. Playback on an HDTV using one of the high-definition connections will ensure the best playback quality.

Operating modes:

- 1 Turn off the camcorder and the TV.
- 2 Connect the camcorder to the TV.

Refer to Connection Diagrams (117) and select the most appropriate connection for your TV.

3 Turn on the connected TV.

On the TV, select as the video input the same terminal to which you connected the camcorder. Refer to the instruction manual of the connected TV

- 4 Turn on the camcorder and set it to p or mode. Play back the movies or photos.
- (i) NOTES
- To correctly play back movies recorded with x.v.Colour (
 145) on an
 HDTV compatible with this standard, additional settings may be
 required on the connected HDTV. Refer to the TV's instruction manual.
- We recommend powering the camcorder using the compact power adapter.
- Connection 3 or 3: When you play back your 16:9 movies on standard TV sets with a 4:3 aspect ratio, the TV set will switch automatically to widescreen mode if it is compatible with the WSS system. Otherwise, change the aspect ratio of the TV manually.

Saving and Sharing Your Recordings

HFM36 Copying Recordings to a Memory Card

You can copy your recordings only one-way: from the built-in memory to the memory card. Scenes and photos will be copied from the index screen you selected to the corresponding index screen on the memory card.

Please read the IMPORTANT section (\(\superscript{\subscript{\sinte\sinttinit{\sinttinit{\sintinity}\sintinit{


Copying Scenes



- 1 Open the index screen that contains the scenes you want to copy.
 - Check that you have selected the 🖾 tab (built-in memory).
 - [Original] or [Video Snapshot] → [Original] index screen: To copy all
 the scenes recorded on a specific date, narrow down the scenes
 shown to scenes recorded on that date (☐ 52).
- 2 Touch [∅] to open the scene selection screen.

When you copy scenes from the [Playlist] index screen (including the playlist of video snapshot scenes), you cannot select individual scenes; instead, the entire playlist will be copied. Skip directly to step 4.

- 3 Touch on the individual scenes you want to copy.
 - A checkmark ✓ will appear on scenes selected. Touch a selected scene again to remove the checkmark.
 - To select all the scenes at once: Touch [Select All] instead of touching individual scenes. (Remove in advance any checkmarks from scenes you may have selected individually.)
- 4 Copy the scenes.



^{*} Touch [Stop] to interrupt the operation while it is in progress.

Copying a Single Photo



- 1 In single photo view, select the photo you want to copy.
 Check that you are viewing photos recorded in the built-in memory. (
 appears next to the photo number.)
- 2 Touch the screen to display the playback controls.
- 3 Copy the photo.



4 Drag your finger left/right to select another photo to copy or touch [X].

Copying Photos from the Index Screen



- 1 Open the [Photos] index screen.
 - Check that you have selected the (tab (built-in memory).
- 2 Touch [☑] to open the photo selection screen.
- 3 Touch on the individual photos you want to copy.
 - A checkmark ✓ will appear on photos selected. Touch a selected photo again to remove the checkmark.
 - To select all the photos at once: Touch [Select All] instead of touching individual photos. (Remove in advance any checkmarks from photos you may have selected individually.)
- 4 Copy the photos.



* Touch [Stop] to interrupt the operation while it is in progress.

IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the camcorder's operating mode.
- When copying photos onto an Eye-Fi card, photos will be uploaded automatically if you are within the range of a configured network. Always verify that Eye-Fi cards have been approved in the country/region of use. See also *Using an Eye-Fi card* (
 134).

(i) NOTES

- If the memory card slot cover is open, or the LOCK switch on the memory card is set to prevent writing, you will not be able to copy recordings to the memory card.
- If there is not enough space on the memory card, as many photos as possible will be copied before stopping the operation.

Saving Recordings on a Computer

Movies recorded with this camcorder are saved in the built-in memory (IFMSO only) or on the memory card. Because space is limited, make sure to save your recordings on a computer on a regular basis. Carefully read the information in SDXC Memory Cards (III) 34) before performing the procedure using recordings made on an SDXC memory card.

Saving Movies

With the supplied software **ImageMixer 3 SE** you can save scenes to your computer. If necessary, video files previously saved on a computer can be restored back to a memory card connected to the computer. The software also offers many options for organizing your video library, editing video, creating discs and more.

Installation

See 'PIXELA Applications' Installation Guide.

Using the software

See 'ImageMixer 3 SE Software Guide' (PDF file on the **Transfer Utilities** CD-ROM).

Saving Photos

With the supplied software **Photo Application** you can save photos to your computer, and easily organize and edit them.

Installation

Install the software before you connect the camcorder to the computer for the first time. See also the relevant sections in the 'Photo Application' Instruction Manual (PHOTO) PDF file).

Install the Photo Applications module on the supplied Camcorder Supplemental Disc.

PHOTO Refer to Installing Photo Application.

First-time connection to a computer running Windows

Windows users only: The first time you connect the camcorder to the computer, you also need to select the CameraWindow auto-launch setting.

PHOTO Refer to Starting CameraWindow.

Using the software

- 1 Power the camcorder using the compact power adapter.
- 2 Set the camcorder to node, in single photo view.
- 3 Connect the camcorder to the computer using the supplied USB cable.
 - Connection $\boxed{4}$. Refer to Connection Diagrams ($\boxed{\square}$ 119).
- 4 Save the photos onto the computer.

PHOTO Refer to Downloading Still Images to the Computer.

IMPORTANT

- When the camcorder is connected to a computer: Do not open the memory card slot cover and do not remove the memory card.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- If you wish to use the image files on your computer, make copies of them first. Use the copied files, retaining the originals.
- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the USB cable.
 - Do not turn off the camcorder or the computer.
 - Do not change the camcorder's operating mode.
- While restoring to a memory card connected to the computer video files that were previously saved to the computer, do not disconnect the memory card or card reader and do not turn off the computer. Doing so may result in scenes that cannot be played back on the camcorder.

(i) NOTES

- Refer also to the computer's instruction manual.
- Users of Windows 7, Windows Vista, Windows XP and Mac 0S X: Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to transfer photos (JPEG only) simply by connecting the camcorder to a computer using the supplied USB cable, without having to install the supplied software Photo Application.
- If you connect the camcorder to the computer while it is set to mode, the process of creating scene thumbnails will start automatically. If your intention was to save photos to the computer, you can touch [Skip] to stop the process and use the computer's Safely Remove Hardware function (Windows) or Eject function (Mac OS) to end the connection to the camcorder. Disconnect the USB cable, set the camcorder to mode and restore the connection.

HFM36 Saving Movies onto Standard-Definition Discs (DVD)

You can convert your high-definition video recordings into standard definition in the camcorder and then use the supplied software **Image-Mixer 3 SE** to save the converted scenes and burn them onto standard DVDs in your computer. These are ideal for sharing your videos with family and friends since, unlike AVCHD or Blu-ray discs, standard DVDs can be played back on most DVD players and computers' DVD drives.

Installation

See 'PIXELA Applications' Installation Guide.

Using the software

See 'ImageMixer 3 SE Software Guide' (PDF file on the **Transfer Utilities** CD-ROM).

Operating modes:

Converting Scenes into Standard Definition

- 1 Power the camcorder using the compact power adapter.
- 2 Make sure there is a memory card in the camcorder with sufficient available space.
- 3 Open the [Original], [Playlist] or [Video Snapshot] → [Original]/ [Playlist] index screen.
 - Check that you have selected the tab (built-in memory).
 - [Original] or [Video Snapshot] → [Original] index screen: To convert all
 the scenes recorded on a specific date, narrow down the scenes
 shown to scenes recorded on that date (☐ 52).
- 4 Touch $[\ensuremath{\ensuremath{\,\boxtimes}}]$ to open the scene selection screen.

When you convert scenes from the [Playlist] index screen (including the playlist of video snapshot scenes), you cannot select individual scenes; instead, the entire playlist will be converted. Skip directly to step 6.

- 5 Touch on the individual scenes you want to convert.
 - A checkmark ✓ will appear on scenes selected. Touch a selected scene again to remove the checkmark.

- To select all the scenes at once: Touch [Select All] instead of touching individual scenes. (Remove in advance any checkmarks from scenes you may have selected individually.)
- conversion screen.
 - If a copyright notice appears, read it carefully and touch [OK] if you agree.
 - touch [1 to change the conversion settings as described below.
- 7 Touch [Yes] (OK).

Touch [■] to interrupt the operation while it is in progress.

To embed the recording date and time

The recording date and time will always be displayed on the converted scene.



To select the bit rate

Using a higher bit rate will result in better video quality for the converted scenes.



、[✔] 🔊 [Bit Rate (Quality)] 🔊 Desired option 🔊 [ᆂ] 🔊

i) NOTES

- When converting scenes in the [Playlist] or [Video Snapshot] → [Original]/ [Playlist] index screen:
 - The scenes are converted with the selected background music (86) instead of the original sound.
- When converting scenes in the [Playlist]:
 - All the scenes are merged into one converted scene.
 - If the converted scene is too large, it will be split into 2 GB-sized scenes.
 - The playlist cannot be converted when its total playback time exceeds 2 hours and 30 minutes.

 The time required to convert scenes is approximately equal to the total playback time of the converted scenes. In most cases this is still faster than converting the scenes in the computer so we recommend you convert scenes in the camcorder.

Connecting to the Computer and Creating DVD Discs

- 1 Power the camcorder using the compact power adapter.
- 2 Open the [For DVD Burning] index screen on the memory card.



- 3 Connect the camcorder to the computer using the supplied USB cable.
 - Connection 4. Refer to Connection Diagrams (☐ 119).
 - On the computer, ImageMixer 3 SE will start up automatically and the startup screen (ImageMixer 3 Launcher) will appear.
- 4 Click [Disc writing] and continue the operation on the computer following the software's indications.

See also 'ImageMixer 3 SE Software Guide' (PDF file on the **Transfer Utilities** CD-ROM).



- While the camcorder is connected to the computer, do not open the memory card slot cover and do not remove the memory card.
- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the USB cable.
 - Do not disconnect the compact power adapter or turn off the camcorder or the computer.

Copying Recordings to an External Video Recorder

In High Definition

Connect the camcorder to AVCHD-compatible digital video recorders to make perfect copies of your movies in high definition. If the external digital video recorder has an SD memory card slot, you can use the memory card to copy your movies without connecting the camcorder. Details will vary depending on the device used so be sure to refer to the instruction manual of the digital video recorder.

In Standard Definition

You can copy your movies by connecting the camcorder to a VCR or a digital video recorder with analog audio/video inputs. Video output will be in standard definition, although the original scenes are in high definition.



Connecting

Recording

- 1 External device: Load a blank cassette or disc and set the device to record pause mode.
- 2 Turn on the camcorder and set it to mode.

 Verify that (AV) → [AV/Headphones] is set to [AV] AV].
- 3 Camcorder: Locate the scene you wish to copy and pause the playback shortly just before the desired scene.
- 4 Camcorder: Resume playback.
 - By default, onscreen displays will be embedded in the output video signal. You can change the displays by repeatedly pressing DISP. (
 39).
- 5 External device: Start recording when the scene you wish to copy appears; stop recording when it ends.
- 6 Camcorder: Stop playback.



 We recommend powering the camcorder using the compact power adapter.

HFM36 Uploading Movies to Video Sharing Web Sites

You can convert your high-definition video recordings into standard definition in order to upload them to your favorite video sharing Web site.

If you are using an Eye-Fi card, after converting your video recordings into standard definition scenes you can upload your movies wirelessly, directly from the camcorder. Refer to Eye-Fi's homepage for the latest information on compatible Web sites.

You can complete the conversion to standard definition in the camcorder and then use the supplied software **ImageMixer 3 SE** to upload your videos to the Web.

Installation

See 'PIXELA Applications' Installation Guide.

Using the software

See 'ImageMixer 3 SE Software Guide' (PDF file on the **Transfer Utilities** CD-ROM).




Converting Scenes into Standard Definition

- 1 Power the camcorder using the compact power adapter.
- 2 Make sure there is a memory card in the camcorder with sufficient available space.
- 3 Open the [Original], [Playlist] or [Video Snapshot] → [Original]/ [Playlist] index screen.
 - Check that you have selected the (tab (built-in memory).
 - [Original] or [Video Snapshot] → [Original] index screen: To convert all the scenes recorded on a specific date, narrow down the scenes shown to scenes recorded on that date (52).
- 4 Touch [∅] to open the scene selection screen.

When you convert scenes from the [Plavlist] index screen (including the playlist of video snapshot scenes), you cannot select individual scenes: instead, the entire playlist will be converted. Skip directly to step 6.

- 5 Touch on the individual scenes you want to convert.
 - A checkmark ✓ will appear on scenes selected. Touch a selected scene again to remove the checkmark.
 - To select all the scenes at once: Touch [Select All] instead of touching individual scenes. (Remove in advance any checkmarks from scenes you may have selected individually.)
- 6 Press WEB and touch [Yes].
 - If a copyright notice appears, read it carefully and touch [OK] if you agree.
 - · Before touching Yesl, you can touch [1] to change the conversion settings as described below.
 - Touch [■] to interrupt the operation while it is in progress.

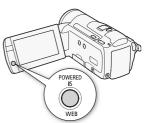

7 When the conversion is completed, a confirmation screen will appear.

Connect the camcorder to the computer at this point (1133) to continue uploading the converted videos to the Web or touch [End Without Connecting to connect to the computer later.


To embed the recording date and time

The recording date and time will always be displayed on the converted scene.



To select the bit rate

Using a higher bit rate will result in better video quality for the converted scenes, while a lower bit rate will result in smaller file sizes and faster uploads.



To convert only part of a scene

Instead of steps 4 and 5 above, touch on the scene you want to convert to start playing it back. Pause the playback at the point where you want the conversion to begin and continue with step 6.


i NOTES

- When converting scenes in the [Playlist] or [Video Snapshot] \to [Original]/ [Playlist] index screen:
- When converting scenes in the [Playlist]:
 - All the scenes are merged into one converted scene.
 - If the converted scene is too large, it will be split into smaller 10minute long scenes.
 - When converting only part of a scene, the maximum length of the converted scene will be 10 minutes from the starting (playback pause) point.
 - The playlist cannot be converted when its total playback time exceeds 2 hours and 30 minutes.
- The time required to convert scenes is approximately equal to the total playback time of the converted scenes. In most cases this is still faster than converting the scenes in the computer so we recommend you convert scenes in the camcorder.

Connecting to the Computer and Uploading your Videos

If you are connecting the camcorder to the computer immediately after the conversion described in the previous section, start this procedure from step 3 below. Otherwise, start this procedure from the beginning.

- 1 Power the camcorder using the compact power adapter.
- 2 Open the [For Web Upload] index screen on the memory card.



- 3 Connect the camcorder to the computer using the supplied USB cable.

 - On the computer, ImageMixer 3 SE will start up automatically and the startup screen (ImageMixer 3 Launcher) will appear.
- 4 Click [Web upload] and continue the operation on the computer following the software's indications.

See also 'ImageMixer 3 SE Software Guide' (PDF file on the $\bf Transfer$ $\bf Utilities$ CD-ROM).

■ IMPORTANT

- While the camcorder is connected to the computer, do not open the memory card slot cover and do not remove the memory card.
- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the USB cable.
 - Do not disconnect the compact power adapter or turn off the camcorder or the computer.

Uploading your Videos Wirelessly

If you are using an Eye-Fi card, you can automatically upload the movies from the [For Web Upload] index screen to your favorite video sharing Web site. You will need to have installed the software supplied with your Eye-Fi card and completed all the required configuration setup in advance. Refer to the instruction manual of the Eye-Fi card. Please read the IMPORTANT section (

134) before using an Eye-Fi card.

- 1 Insert your Eye-Fi card into the camcorder and make sure there is sufficient available space on the memory card.
- 2 Convert the desired movies (1131).
 - When the conversion is completed, touch [End Without Connecting].
 - If you are within the range of a configured network, Web upload will start automatically.
 - The status of the wireless communication is shown by the Eye-Fi icon as follows:
 - 🛜 (grayed out) Communication not established
 - 膏 (white, flashing) Connecting; 膏 (white, continuously on) Wireless upload on standby
 - 🛜 (animated) Wireless upload in progress
 - 🎧 [Eye-Fi Communication] is set to [OFF Off]
 - Wireless upload stopped by the camcorder (□ 162)
 - The Error reading from the Eye-Fi card (161)

■ IMPORTANT

Using an Eye-Fi Card

- This product is not guaranteed to support Eye-Fi card functions (including wireless transfer). In case of an issue with an Eye-Fi card, please check with the card manufacturer. Also note that an approval is required to use Eye-Fi cards in many countries or regions. Without approval, use of the card is not permitted. If it is unclear whether the card has been approved for use in the area, please check with the card manufacturer.
- Do not use Eye-Fi cards on airplanes and in other places where wireless communication is forbidden. Remove the Eye-Fi card from the camcorder beforehand.

(i) NOTES

- Depending on the amount of data to be uploaded and the network's wireless connection conditions, it can take some time to upload video files. If the wireless connection is too weak, the wireless upload may fail and the video files will be registered as incomplete uploads.
- About power saving:
 Wireless communication drains the power of the battery pack faster than usual. We recommend powering the camcorder using the
 - compact power adapter.

 While files are being uploaded wirelessly, the camcorder's automatic power off function will be disabled.
- While recording audio with an external microphone, the interference caused by wireless communications may result in noise being picked up and recorded with the sound. We recommend turning off the wireless communication while recording.



*This menu option will appear only when using an Eye-Fi card.

- If the LOCK switch on the Eye-Fi card is set to prevent writing, you will
 not be able to turn the wireless communication on/off and the status
 icon will change to . To use wireless communication make sure the
 switch on the Eye-Fi card is not in the LOCK position.
- While using an Eye-Fi Card, the ACCESS indicator may flash from time to time.



Additional Information

This chapter contains troubleshooting advice, screen messages, handling and maintenance tips, and other information.

Appendix: Menu Options Lists

Menu items not available appear grayed out. For details about how to select an item, refer to *Using the Menus* (\square 28). For details about each function, see the reference page. Menu options without a reference page are explained after the tables. Underlined menu options indicate default values.

FUNC. Panel

FUNC. Panel - Recording Modes

Control Button	Setting options/Function	*	۵	
[MENU]	Open the menus	•	•	29
[Rec. Programs]	[P Programmed AE], [TV Shutter-Pri. AE], [AV Aperture-Pri. AE]	•	•	67
	[E Cine Mode]	•	•	60
	[今 Portrait], [《 Sports], [名 Night Scene], [•	•	57
[WB White Balance]	[臘 Automatic], [樂 Daylight], [♠ Shade], [♣ Cloudy], [樂 Fluorescent], [樂 Fluorescent H], [樂 Tungsten], [♣ Custom WB]	•	•	73
[⊈ Mic. Level]	[A Automatic], [M Manual] [Audio Level Indicator]: Toggle on (●) or off (○)	•	_	78

Control Button	Setting options/Function	*	Ò	Ш
[Flash]	[‡ Automatic], [Red-Eye Auto], [‡ Flash On], [\$ Flash Off]	-	•	103
[Focus]	[MF] (manual focus): Toggle on (●) or off (○), Touch AF frame	•	•	71
[Exposure]	[M] (manual exposure): Toggle on (●) or off (○), Touch AE frame	•	•	70
[Z00M]	Zoom controls, START/STOP control	•	•	43
[AGC AGC Limit]	[A Automatic], [M Manual]]: (0 dB - 24 dB)	•	_	71
[Metering Mode]	[E Spot] Center-Wt. Avg.],	-	•	107
[★ Video Light]	[ON On], [OFF Off]	•	•	75
[Pre REC]	[ON On], [OFF Off]	•	-	62
[Drive Mode]	[Single],[AE Bracketing], [Continuous], [Hi-Speed Cont.]	-	•	104
[Digital Effects]	[野 Off], [雪 Black & White], [雪 Sepia], [雪 Fade Trigger/Once], [雪 Fade Trigger/Always], [雪 Wipe/Once], [沙 Wipe/Always]	•	_	66
	[辭 Off], [雪 Black & White], [章 Sepia]	-	•	
[Image Stabilizer]	[Dynamic], [Standard], [Off]	•	-	61
[Image Stabilizer]	[@ On], [@ Off]	-	•	

[Edit] Panel - Mode

Original scenes

: Playlist scenes (including the playlist only of video snapshot scenes)

: Original video snapshot scenes

SD scenes on the memory card (HFM36 only)

Control Button	Target Scenes/Function	λŬ		1	逾	
(HF M36)	[Selected Scenes]	•	_	•	-	121
[Copy (■ → ≤≥)]	[All Scenes]	•	•	•	-	
(50 7 22)]	[This Scene] (from the Timeline screen)	•	_	•	-	
HFM36	[Selected Scenes]	•	-	•	-	126
[Convert	[All Scenes]	•	•	•	-	
HD→SD (DVD)]	[This Scene] (from the Timeline screen)	•	_	•	-	
[Delete]	[Selected Scenes]	•	_	•	-	53, 91
	[All Scenes]	•	•	•	•	
	[This Scene] (from the Timeline screen or playback pause)	•	•	•	-	
[Add to Playlist]	[Selected Scenes], [All Scenes]	•	-	•	-	90
	[This Scene] (from the Timeline screen)	•	-	•	-	
[Move]	[This Scene] (from the Timeline screen)	_	•	_	-	91
[Divide]	[This Scene] (from the Timeline screen or playback pause)	•	_	_	_	94

[Edit] Panel - 🔼 Mode

Control Button	Index Screen	Single Photo View	
HFM36 [Copy (□ → ≤→)]	[Selected Photos], [All Photos]	•	122
[Delete]		•	98
[Protect]		•	110
[Print Orders]		•	114
[Rotate]	_	•	109

Setup Menus

Camera Setup

Menu item	Setting options	•		
[Digital Zoom]	[OFF Off], [60x 60x], [300x 300x]	•	-	-
[Zoom Speed]	[WAR Variable], [SSS Speed 3], [SSS Speed 2], [SSS Speed 1]	•	•	43
[AF Mode]	[I.AF] Instant AF], [AF] Normal AF]	•	•	-
[AF-Assist Lamp]	[A Automatic], [OFF Off]	-	•	104
[Focus Priority]	[ATAF AiAF Frames], [• Center Frame], [OFF Off]	-	•	_
[Focus Assistance]	[ON On], [OFF Off]	•	•	-
[Face Detection & Tracking]	[ON On [3]], [OFF Off]	•	•	63
[Auto Backlight Correction]	[ON On], [OFF Off]	•	•	71
[Auto Slow Shutter]	[ON On], [OFF Off]	•	-	-
[Image Effects]	[⑤FF Off], [ੳv Vivid], [ੳN Neutral], [S. Low Sharpening], [S. Soft Skin Detail], [C. Custom Effect]	•	•	74
[Wind Screen]	[A Automatic], [OFF Off %] ♣	•	-	-
[Microphone Attenuator]	[ON On ATT], [OFF Off]	•	_	_
[Surround Mic Directionality]*	[51th Surround], [55th Zoom], [55th Shotgun]	•	_	_
[Onscreen Markers]	[Off Off], [□ Level (White)], [□ Level (Gray)], [UV Grid (White)], [Grid (Gray)]	•	•	_
[POWERED IS Button]	[Press and Hold], [Toggle On/Off]	•	-	62

^{*} Option available only when the optional SM-V1 Surround Microphone is attached to the camcorder after having updated the camcorder's firmware using the memory card supplied with the SM-V1.

[Digital Zoom]: Determines the operation of the digital zoom. The color of the indicator indicates the zoom.

- When activated, the camcorder will switch automatically to digital zoom when you zoom in beyond the optical zoom range.
- With the digital zoom the image is digitally processed, so the image resolution will deteriorate the more you zoom in.

Optical zoom	Digital zoom			
WI	T			
White	Light blue	Dark blue		
Up to 18x*	18x* - 60x	60x - 300x		

^{* 15}x when [Image Stabilizer] is set to [Standard] or [Sp Off].

[AF Mode]: Select how fast the autofocus will operate.

- With [LAF] Instant AF] the autofocus adjusts quickly to a new subject.
 This is convenient for example when changing the focus from a near
 subject to a far subject in the background, or when recording moving
 subjects.
- When the optional Wide-converter or Tele-converter is attached to the camcorder, it may partially obstruct the Instant AF sensor. Set the AF mode to [AF Normal AF].
- When the recording program is set to [¼ Underwater] or [♣ Surface], the AF mode is automatically set to [Æ Normal AF].

[Focus Priority]: When the focus priority is activated, the camcorder records a photo only after the focus has been adjusted automatically. You can also select which AF frames to use.

[MAT] AIAF Frames]: One or more AF frames out of the nine frames available are automatically selected and the focus is fixed on them.

© Center Frame]: A single focusing frame appears in the center of the screen and the focus is automatically fixed on it.

Off: No AF frame will appear and the photo will be recorded immediately after you press PHOTO.

- When the recording program is set to [※ Fireworks], focus priority is automatically set to [OFF Off].

[Focus Assistance]: When focus assistance is activated, the image at the center of the screen is magnified to help you focus manually (71).

 Using focus assistance will not affect the recordings. It will be cancelled automatically after 4 seconds or when you start recording.

[Auto Slow Shutter]: The camcorder automatically uses slow shutter speeds to obtain brighter recordings in places with insufficient lighting.

- Minimum shutter speed used: 1/25; 1/12 when the frame rate is set to [PF25] PF25].
- The auto slow shutter can only be activated when the recording program is set to [P Programmed AE], but the setting will not change even if you set the camcorder to me mode.
- If a trailing afterimage appears, set the slow shutter to [OFF Off].
- If (a) (camcorder shake warning) appears, we recommend stabilizing the camcorder, for example, by mounting it on a tripod.
- When the recording program is set to [W Underwater] or [Surface], the auto slow shutter is automatically set to [OFF Off].

[Wind Screen]: The camcorder automatically reduces the background sound of wind when recording outdoors.

• Some low-frequency sounds will be suppressed along with the sound of wind. When recording in surroundings unaffected by wind or if you want to record low-frequency sounds, we recommend setting the wind screen to [OFF Off 除♠].

[Microphone Attenuator]: Helps prevent audio distortions due to high audio recording levels.

- Set the microphone attenuator to [ON On ATT] when the audio recording level (Q 78) is set correctly but the audio still sounds distorted. When the microphone attenuator is activated, ATT appears on the screen.

[Surround Mic Directionality]: Sets the directionality mode of the optional SM-V1 Surround Microphone.

[5.1th] Surround]: Records 5.1ch surround sound.

[Zoom]: Records 5.1 audio channels. Additionally, the audio is linked to the zoom position. The larger the subject appears on the screen, the louder the sound will be as well.

[Sim Shotgun]: Records monaural audio with a highly directional setting that is most sensitive to sound coming directly from the front of the camcorder/microphone.

[Onscreen Markers]: You can display a grid or a horizontal line at the center of the screen. Use the markers as a reference to make sure your subject is framed correctly (vertically and/or horizontally).

• Using the onscreen markers will not affect the recordings.

[POWERED IS Button]: Determines the operation mode of the POWERED IS button.

Press and Hold]: Powered IS will be activated while you hold the button pressed down.

Toggle On/Off]: Each press of the button will turn the Powered IS function on and off.

Recording & Connections Setup

Menu item	Setting options	•	Δ	λĎ	۵	
[Self Timer]	[ON On 🖒], [OFF Off]	•	•			77
[Video Snapshot Length]	[2sec 2 Sec], [4sec 4 Sec], [8sec 8 Sec]	•	_	•	_	65, 92
[Rec Media for Movies]	[■] (built-in memory), [☑] (memory card)	•	-	_	-	35
[Recording Mode]	[MXP High Quality 24 Mbps], [FXP High Quality 17 Mbps], [XP+ High Quality 12 Mbps], [SP Standard Play 7 Mbps], [LP Long Play 5 Mbps]	•	_	_	_	56
[Frame Rate]	[50i 50i (Standard)], [PF25 PF25]	•	_	_	-	_
[Rec Media for Photos]	[∰] (built-in memory), [☞] (memory card)	•	•	•	_	35
[Simultaneous Recording]	[off Off], [<u>LW 2304x1296],</u> [SW 848x480]	•	_	_	_	106
	[Super Fine], [Fine], [Normal]					

Menu item	Setting options	•	Ò	λŬ	۵	
[Photo Quality/Size]	[LW 2304x1296], [L 2100x1575], [M 1600x1200], [S 640x480]	_	•	_	_	101
	[Super Fine], [Fine], [Normal]					
[Photo Capture from Video]	[☐ Single Photo], ☐ Photo Sequence]	_	_	•	_	93
[Photo Capture Quality]	[AM Super Fine / 1920x1080], [AM Fine / 1920x1080], [AM Normal / 1920x1080]	_	_	•	_	93
[Memory Info]	[∰] (built-in memory), [☑] (memory card)	•	•	•	•	_
[x.v.Colour]	[ON On color], [OFF Off]	•	-	-	-	_
[Auto Rotate]	[ON On], [OFF Off]	_	•	-	-	_
[Photo Review Time]	[OFF Off], [2sec 2 sec], [4sec 4 sec], [6sec 6 sec], [8sec 8 sec], [10sec 10 sec]	_	•	_	_	_
[Photo Numbering]	[Continuous]	•	•	•	•	_
[Paper Settings]	[Default], [9 x 13 cm], [13 x 18 cm], [10 x 14.8 cm], [Credit Card], [4 x 6 in.], [8.5 x 11 in.], [A3], [A4], [4 x 7.1 in.]	_	_	_	•	113

[Frame Rate]: Selects the frame rate to be used when recording. **[PF25]**: 25 frames per second, progressive. Using this frame rate will give your recordings a cinematic look. When combined with the **[□ Cine Mode]** recording program (□ 60), the cinematic look will be enhanced.

[Memory Info]: Displays a screen where you can verify how much of the built-in memory (IIIM3 only) or the memory card is currently in use (III total recording time and Io total number of photos) and how much space remains available for recording.

 Estimated figures about available movie recording time and available number of photos are approximate and based on the recording mode and photo quality/size settings currently in use.

- In the information screen of a memory card you can also check its Speed Class.
- IIFM36 The [Total space] shown for the built-in memory indicates actually
 usable space. It may be slightly smaller than the nominal built-in memory capacity listed in the Specifications.

[x.v.Colour]: Uses a color space with an extended gamut to achieve deeper colors, closer to real life.

 Use this function to record video only when you intend to play back your recordings on an HDTV compatible with x.v.Colour, connected to the camcorder using an HDMI cable. If recordings made with x.v.Colour are played back on a non-compatible TV, colors may not be reproduced correctly.

[Auto Rotate]: Photos that were recorded in portrait orientation (by turning the camcorder on its side), will be rotated automatically and displayed correctly during playback.

[Photo Review Time]: Selects the time to display a photo after it has been recorded.

 The review time can only be set when the drive mode is set to [Single].

[Photo Numbering]: Select the photo numbering method to be used on a new memory card. Photos are automatically assigned consecutive numbers from 0101 to 9900, and stored in folders containing up to 100 photos. Folders are numbered from 101 to 998.

[Reset]: Photo numbers will restart from 101-0101 every time you insert a new memory card.

[Continuous]: Photo numbers will continue from the number following that of the last photo recorded with the camcorder.

- If the memory card you insert already contains a photo with a larger number, a new photo will be assigned a number one higher than that of the last photo on the memory card.
- We recommend using the [Continuous] setting.
- The photo number indicates the name and location of the file on the memory card. For example, the file name of a photo numbered 101-0107 is "IMG_0107.JPG", stored under the folder "DCIM\101CANON".

Playback Setup

Menu item	Setting options	λŬ		\square
[Select Music]	[OFF Off], [ON On] When [ON On] - list of music tracks	•1	•	86
[Data Code]	[Date], [Time], [Date and Time], [□ Camera Data]	•	_	-
[Slideshow Transition]	[OFF Off], [See Dissolve], [Slide Image]	-	•	108
[TV Type] ²	[4:3 Normal TV], [16:9 Wide TV]	•	-	-

Option available only from the [Playlist] or [Video Snapshot] → [Original]/[Playlist] index screen.

[Data Code]: Displays the date and/or time when the scene was recorded. [* Camera Data]: Displays the aperture (f-stop) and shutter speed used when recording the scene.

[TV Type]: When you connect the camcorder to a TV using the supplied STV-250N Stereo Video Cable, select the setting according to the type of TV in order to display the picture in full and in the correct aspect ratio.

Normal TV: TV sets with 4:3 aspect ratio.

[6:9 Wide TV]: TV sets with 16:9 aspect ratio.

 When the TV type is set to [AB] Normal TV], during the playback of video originally recorded with an aspect ratio of 16:9, the picture will not be displayed fullscreen.

System Setup

Menu item	Setting options	>	۵	Ä		
[Font Size]	[A Large], [A Small]	•	•	•	•	-
[Output Onscreen Displays]	[ON On], [OFF Off]	•	•	•	•	_

Option not available when the camcorder is connected to an HDTV using an HDMI cable.

Menu item	Setting options	•	Δ	λĎ	۵	
[Language]	[Česky], [Dansk], [Deutsch], [Ελληνικά], [English], [Español], [Français], [Italiano], [Magyar], [Melayu], [Nederlands], [Norsk], [Polski], [Português], [Română], [Suomi], [Svenska], [Τürkçe], [Русский], [Українська], [ボルリー], [シールー], [カーカープリルロ], [商体中文], [繁體中文], [シ云어], [日本語]	•	•	•	•	32
[LCD Brightness]	**	•	•	•	•	_
[LCD Screen Dimmer]	[ON On], [OFF Off]	•	•	•	•	-
[AV/Headphones]	[AV AV], [\(\Omega\) Headphones]	•	-	•	•	79
[Volume]	Speaker:	_	_	•	•	48, 79
	Headphone:	•	_	•	•	
[Notification Sounds]	['=')) High Volume], ['=' Low Volume], [OFF Off]	•	•	•	•	_
[Wireless Remote Control]	[ON On], [OFF Off 111 1/2]	•	•	•	•	_
[Power Saving Mode]	[Auto Power Off]: [ON 0n], [OFF Off] [Quick Start (Standby)]: [OFF Off], [Omn 10 min], [20mm 20 min], [20mm 30 min]	•	•	•	•	-
HFM36 [Initialize	[■ Built-in Mem.], [☑ Mem. Card]	•	•	•1	•	37
	[Complete Initialization]: Toggle on (●) or off (○)					
HFM307 [Initialize 🛂]	[Complete Initialization]: Toggle on (●) or off (○)					

Menu item	Setting options	•	Ò	λŬ	۵	
[Time Zone/DST]	[♠] (home time zone) or [★] (travel time zone): [Paris], list of world time zones [★] (DST adjustment)	•	•	•	•	32
[Date/Time]	[Date/Time]: -	•	•	•	•	31
	[Date Format]: [Y.M.D], [M.D,Y], [D.M.Y] (Y- year, M- month, D- day) [24H]: Toggle On (●, 24-hour clock) or Off (○, 12-hour clock)					
[Calendar Start Day]	[Saturday], [Sunday], [Monday]	-	_	•	_	-
[Battery Info]	_	•	•	•	•	-
[Control for HDMI] ²	[ON On], [OFF Off]	•	•	•	•	_
[HDMI Status]	_	•	•	•	•	-
[Distance Units]	[m meters], [ft feet]	•	•	•	•	-
[Demo Mode]	[ON On], [OFF Off]	•	•	_	_	_
[Reset All]	[Yes], [No]	•	•	•	•	-
[Firmware]	-	-	_	-	•	-
[Eye-Fi Communication] ³	[A Automatic], [OFF Off]	•	•	•	•	134

¹ Option not available from the [Playlist] index screen.

[Font Size]: Changes the size of the font for the menu and other screens.

When the font size is set to [A Large], some information may be displayed in shortened form (icons only, etc.). Some screens will be displayed using the small font size regardless of the setting.

[Output Onscreen Displays]

 When set to [on On], the camcorder's onscreen displays will appear also on the screen of a TV or monitor connected to the camcorder.

Option not available when the camcorder is connected to an HDTV using an HDMI cable.

³ Option available only when using an Eye-Fi card.

[LCD Brightness]: Adjusts the brightness of the LCD screen.

Changing the brightness of the LCD screen does not affect the brightness of your recordings or the brightness of the playback image on a TV.

[LCD Screen Dimmer]: When set to [ON], the LCD screen is dimmed. Doing so is ideal when using the camcorder in locations where the LCD's illumination could become a nuisance to others. Hold DISP pressed down for about 2 seconds to restore the LCD screen to its previous brightness setting.

- Dimming the LCD screen does not affect the brightness of your recordings or the brightness of the playback image on a TV.
- When the screen dimmer is set to [off] off], the LCD screen will return
 to the brightness level that was in use before the screen was dimmed.

[Notification Sounds]: A beep will accompany some operations like turning on the camcorder, the self-timer countdown, etc.

[Wireless Remote Control]: Allows the camcorder to be operated with the wireless controller.

[Power Saving Mode]: Controls the camcorder's automatic power off settings.

[Auto Power Off]: In order to save power when the camcorder is powered by a battery pack, it will automatically shut off if left without any operation for 5 minutes.

- Approximately 30 seconds before the camcorder shuts off, [Auto power off] will appear.
- In standby mode, the camcorder will shut off after the time selected for the [Quick Start (Standby)] setting.

[Quick Start (Standby)]: Select whether to activate the Quick Start function (44) when you close the LCD panel in a recording mode and the length of time after which the camcorder will end the standby mode and shut off automatically.

 You can set Quick Start to [OFF] Off], for example, if the camcorder is set on a fixed position and you want to keep recording video with the LCD panel closed in order to conserve the battery's power. **[Calendar Start Day]:** Select the day on which the week in the calendar screen (52).

[Control for HDMI]: Activates the HDMI-CEC (Consumer Electronics Control) function. When you connect the camcorder to an HDTV compatible with HDMI-CEC using an HDMI cable, you can control the camcorder's playback using the remote control of the TV.

- If set to [ON] On], when the camcorder is connected to a compatible HDTV using an HDMI cable, the video input on the TV will automatically be set to the camcorder's video input. Then, you can use the up/down/ left/right buttons and the OK or SET button on the TV's remote control to play back your recordings.
- Depending on the TV set, additional settings may be required on the TV itself to activate the HDMI-CEC function. Refer to the TV's instruction manual.
- Correct operation of the HDMI-CEC function cannot be guaranteed even when connecting the camcorder to compatible TV sets. If you cannot use the remote control of the TV, set [Control for HDMI] to [OFF Off] and operate the camcorder directly or use the camcorder's wireless controller.
- The remote control of the TV can only be used to play back movies or photos (moves or mode only). If the camcorder is connected to the TV while it is set to mode, depending on the TV used, turning off the TV will automatically turn off the camcorder even if it is recording at the time.
- We recommend not connecting more than 3 HDMI-CEC compatible devices at a time.

[HDMI Status]: Displays a screen where you can verify the standard of the output signal from the HDMI OUT terminal.

[Distance Units]: Selects the units to use for the focusing distance display during manual focus.


[Demo Mode]: The demonstration mode displays the camcorder's main features. It starts automatically when the camcorder is powered with the compact power adapter if you leave it turned on without a memory card for more than 5 minutes.

 To cancel the demo mode once it has started, press any button or turn off the camcorder. [Reset All]: Resets all the camcorder's settings to default values.

[Firmware]: You can verify the current version of the camcorder's firmware. This menu option is usually unavailable.

Appendix: Onscreen Icons and Displays


Recording Movies (in Dual Shot mode)

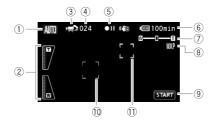

- ① Smart AUTO mode (QQ 40)
- ② Onscreen zoom controls (43)
- ③ Operating mode (27)
- ④ In record pause mode: Total number of scenes
- ⑤ Memory operation (156)
- 6 Remaining battery time (156)

- 7 Zoom (QQ 43)
- ® Recording mode (\$\square\$ 56)
- 10 Face detection frame (63)
- 1 Touch & Track frame (65)


Recording Movies (in **M** Manual mode)

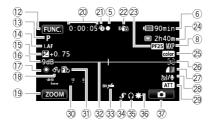

- ① Control button: Open the FUNC. panel (28)
- (1) Recording program (1) 57, 60, 67)
- Manual exposure (70)
- 16 AGC (automatic gain) limit (71)
- 17 White balance (73)
- 18 Image effect (III 74)
- (9 Control button: Last function used ([ZOOM] in this case)
- While recording/during playback: Scene counter (hours : minutes : seconds)
- 2 Pre-recording (62)
- ② Image stabilizer (61)
- ② PF25 progressive frame rate (60, 156)
- ② Remaining recording time
 ⑤ On the memory card
 ⑤ In the built-in memory*
 ⑥ Relay recording* (○ 36)
 - * HFM36 only.

- 25 x.v.Colour (145)
- 26 Face detection (63)
- Photo quality/size (simultaneous recording) (106)
- 28 Wind screen off (142)
- 29 Microphone attenuator (142)
- 30 Audio level indicator (78)
- 3) Digital effect (66)
- 32 Level marker (QQ 143)
- 33 Remote sensor off (111 149)
- 34 Mini advanced shoe (81)
- 35 Headphone output (79)
- 36 Mini video light (11 75)
- ③ Control button: Switch to photo recording (100)

Recording Photos (in M Manual mode)

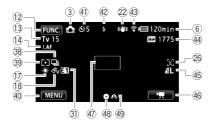

- 38 Drive mode (11 104)
- 39 Light metering mode (107)
- 40 Control button: Last function used ([MENU] in this case)
- 4) Self timer (77)
- 42 Flash (103)
- ④ Eye-Fi wireless communication (☐ 134)
- Number of available photos
 On the memory card
 In the built-in memory

- 45 Photo quality/size (101)
- Control button: Switch to movie recording (☐ 55)
- 47 AF frame (111111)
- 49 Camcorder shake warning (1142)


Playing Movies (during playback)



- 50 Playback control buttons (46)
- 51 Scene number

- Data code (89, 146)
- 53 Volume (46)

▶ Viewing Photos

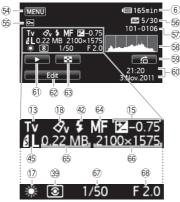

Exif information panel

- 6 Current photo / Total number of
- 57 Photo number (1111145)
- 58 Histogram (109)

photos

- 59 Control button: Photo jump (97)
- 60 Date and time of recording
- 6 Control button: Slideshow (1108)

- © Control button: Open the Edit panel (139)
- © Control button: Switch to [Photos] index screen (☐ 96)
- 64 Manual focus (71)
- 65 File size
- 66 Photo size (QQ 101)
- 67 Shutter speed (67)
- 68 Aperture value (QQ 67)

⑤ Memory operation

- Record. ●II Record pause. ► Playback. II Playback pause. ► Fast playback.
- Fast reverse playback. I► Slow playback. ISlow reverse playback.
- **II** ► Frame advance, **II** Frame reverse.

6 Remaining battery time

in minutes, next to the icon.

. The icon shows a rough estimate of the remaining charge as a percentage of the full charge of the



- When is displayed in red. replace the battery pack with a fully charged one.
- The first time you use a battery pack, fully charge it and then use the camcorder until the battery pack is completely exhausted. Doing so will ensure that the remaining recording time will be displayed accurately.
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.
- When the camcorder is off, press [BATT.INFO] to display the charge status of a battery pack. The Intelligent System will display the charge status (as a percentage) and the remaining recording time (in minutes) for 5 seconds. If the battery pack is exhausted, the battery information may not be displayed.

23 PF25 progressive frame rate

Select the PF25 progressive frame rate (60) to give your recordings a cinematic look. You can combine this frame rate with the [EE Cine Mode] recording program to enhance the effect.

24 Remaining recording time

When there is no more free space on the memory, [End] (built-in memory, HEM36 only) or [End] (memory card) will be displayed and the recording will stop.

44 Number of available photos

- in red: There is no memory card in the camcorder.
- in green: 6 or more photos in vellow: 1 to 5 photos in red: No more photos can be recorded.
- · When viewing the photos, the display will always be in green.
- Depending on the recording conditions, the number of available photos displayed may not decrease even after a recording has been made, or may decrease by 2 photos at once.

Troubleshooting

If you have a problem with your camcorder, refer to this section. Sometimes what you think is a malfunction of the camcorder may have the simplest of solutions - please read the "CHECK THIS FIRST" box before going on to the more detailed problems and solutions. Consult your dealer or a Canon Service Center if the problem persists.

CHECK THIS FIRST

Power supply

Is the battery charged? Is the compact power adapter correctly connected to the camcorder? (

19)

Recording

 Did you turn the camcorder on and correctly set it to a recording mode? (☐ 39, 55, 100) If you are recording on a memory card, is one correctly inserted into the camcoder? (☐ 35)

Playback

Did you turn the camcorder on and correctly set it to playback mode?
 (46, 96) If you are playing back recordings from a memory card, is one correctly inserted into the camcorder?
 (35) Does it contain any recordings?

Other

 Does the camcorder make a rattling sound? The internal lens fixture can move when the camcorder is turned off or in a playback mode. This is not a malfunction.

Power source

The camcorder will not turn on or it turns off by itself.

- The battery pack is exhausted. Replace or charge the battery pack.
- Remove the battery pack and reattach it correctly.
- When the recording program is set to [Underwater] or [Surface], the camcorder may turn off automatically if it becomes too hot. Turn off the camcorder and let it cool down.

Cannot charge the battery pack.

- Make sure the camcorder is off so charging can start.
- The temperature of the battery pack is outside the charging range. If the battery pack's temperature is below 0 °C, warm it before charging it; if it is above 40 °C, let the battery pack cool down before charging it.
- Charge the battery pack in temperatures between 0 °C and 40 °C.
- The battery pack is faulty. Replace the battery pack.

The camcorder cannot communicate with the battery pack attached. Such battery packs cannot be charged using this camcorder.

A noise can be heard from the compact power adapter.

A faint sound can be heard while the compact power adapter is connected to a power outlet.
 This is not a malfunction.

The battery pack is exhausted extremely quickly even at normal temperatures.

- The battery may have reached the end of its battery life. Buy a new battery pack.

Recording

Pressing START/STOP will not start recording.

- You cannot record while the camcorder is writing previous recordings onto the memory (while the ACCESS indicator is on or flashing). Wait until the camcorder has finished.
- The memory is full or it already contains the maximum number of scenes (3,999 scenes).
 Delete some recordings (☐ 53, 98) or initialize the memory (☐ 37) to free some space.

The point where [START/STOP] was pressed does not match the beginning/end of the recording.

There is a slight interval between pressing START/STOP and the actual start/end of recording. This is not a malfunction.

The camcorder will not focus.

- Autofocus does not work on the subject. Focus manually (\$\sum_71\$).
- The lens or Instant AF sensor is dirty. Clean the lens or sensor with a soft lens-cleaning cloth
 (178). Never use tissue paper to clean the lens.

When a subject flits across in front of the lens, the image appears slightly bent.

 This is a phenomenon typical of CMOS image sensors. When a subject crosses very quickly in front of the camcorder, the image may seem slightly warped. This is not a malfunction.

Changing the operating mode between recording (●)/record pause (●11)/playback (►) takes longer than usual.

Movies or photos cannot be recorded properly.

This may occur as movies and photos are recorded/deleted over time. Save your recordings
 (123) and initialize the memory (37).

Cannot record a photo in record a photo in

- You cannot take photos in this mode if
→ Simultaneous Recording is set to [Off] (106), or if either the digital zoom (141) or a digital effect (166) is activated.

After using the camcorder for a long time, it becomes hot.

The camcorder may become hot after using it continuously for long periods of time; this is not
a malfunction. If the camcorder becomes unusually hot or it becomes hot after using it only
for a short while, it may indicate a problem with the camcorder. Consult a Canon Service Center

Playback

Cannot add scenes to the playlist.

- The playlist can contain a maximum of 999 scenes. If the playlist includes scenes recorded in MXP or FXP mode, the maximum number of scenes in the playlist may be less than 999.
- You may not be able to add to the playlist scenes recorded or edited using another device and then transferred to a memory card connected to the computer.
- The memory is full. Delete some recordings (\$\sum_{2}\$ 53, 98) or initialize the memory (\$\sum_{2}\$ 37) to free some space.

Cannot move scenes in the playlist.

- The memory is full. Delete some recordings (53, 98) or initialize the memory (37) to free some space.

Cannot delete a scene.

 You may not be able to delete scenes recorded or edited using another device and then transferred to a memory card connected to the computer.

Deleting scenes takes longer than usual.

 When the memory contains a large number of scenes, some operations may take longer than usual. Save your recordings (☐ 123) and initialize the memory (☐ 37).

Cannot delete a photo.

- The photo is protected. Remove the protection (110).

Cannot capture a video snapshot scene from a movie.

- You cannot capture video snapshot scenes from scenes recorded or edited using another device and then transferred to a memory card connected to the computer.
- The memory is full. Delete some recordings (\$\sum 53\$, 98) or initialize the memory (\$\sum 37\$) to free some space.

When playing back scenes/slideshow with background music, the music track is not played back correctly.

- Music tracks will not play back correctly if the connection was interrupted while transferring the music files to a memory card connected to the computer. Delete the music tracks and transfer the music files again.
- The transfer rate of the memory card used is too slow. Use a recommended memory card (33).

Cannot divide scenes

- You cannot divide scenes recorded or edited using another device and then transferred to a memory card connected to the computer.
- The memory is full. Delete some recordings (53, 98) or initialize the memory (37) to free some space.

Cannot mark individual scenes/photos in the index screen with a checkmark \checkmark

 You cannot select more than 100 scenes/photos individually. Reduce the number of selected scenes/photos or use the [Select All] option.

Indicators and Onscreen Displays

lights up in red.

- Battery pack is exhausted. Replace or charge the battery pack.

appears on the screen.

 The camcorder cannot communicate with the battery pack attached so the remaining battery time cannot be displayed.

salights up in red.

- A memory card error occurred. Turn off the camcorder. Remove and reinsert the memory card. Initialize the memory card if the display does not change back to normal.

flashes in red on the screen.

- The camcorder has malfunctioned. Consult a Canon Service Center.

Even after stopping recording, the ACCESS indicator does not go off.

- The scene is being recorded in the memory. This is not a malfunction.

appears on the screen.

The camcorder has become hot while in the [Underwater] or [Surface] recording program.
 Turn off the camcorder and let it cool down.

The red ON/OFF (CHG) indicator flashes rapidly (** * * one flash at 0.5-second intervals).

Charging has stopped because the compact power adapter or the battery pack is faulty. Consult a Canon Service Center

The red ON/OFF (CHG) indicator flashes very slowly (*** one flash at 2-second intervals).

- The temperature of the battery pack is outside the charging range. If the battery pack's temperature is below 0 °C, warm it before charging it; if it is above 40 °C, let the battery pack cool down before charging it.
- Charge the battery pack in temperatures between 0 °C and 40 °C.
- The battery pack is damaged. Use a different battery pack.

appears on the screen

- The LOCK switch on the Eye-Fi card is set to prevent accidental erasure. Change the position
 of the LOCK switch.
- An error occurred when trying to read data from an Eye-Fi card. Turn the camcorder off then
 on again. If the icon appears often, there might be a problem with the Eye-Fi card. Contact the
 card manufacturer's customer care.

Picture and Sound

The screen appears too dark.

 The LCD screen was dimmed. Hold DISP pressed down for 2 seconds to restore the LCD screen to its previous brightness setting.

Screen displays turn on and off repeatedly.

- The battery pack is exhausted. Replace or charge the battery pack.
- Remove the battery pack and reattach it correctly.

Abnormal characters appear on the screen and the camcorder does not operate properly.

Disconnect the power source and reconnect it after a short time. If the problem still persists, use the () [Reset All] menu option to reset all the camcorder's settings to default values.

Video noise appears on screen.

 Keep a distance between the camcorder and devices that emit strong electromagnetic fields (plasma TVs, cellular phones, etc.).

Horizontal bands appear on the screen.

Noise can be heard along with the recorded sound

Sound is distorted or is recorded at lower levels.

When recording near loud sounds (such as fireworks, shows or concerts), sound may become
distorted or it may not be recorded at the actual levels. Activate the microphone attenuator
(142) or adjust the audio recording level manually (178).

The picture is displayed correctly but there is no sound from the built-in speaker.

- Speaker volume is turned off. Adjust the volume.
- If the STV-250N Stereo Video Cable is connected to the camcorder, disconnect it.
- The AV terminal is set to headphone output. Set 🔳 🔊 [AV/Headphones] to [AV].

Memory Card and Accessories

Cannot insert the memory card.

- The memory card was not facing the correct direction. Turn the memory card over and insert it.

Cannot record on the memory card.

- The memory card is full. Delete some recordings (53, 98) to free some space or replace the memory card.
- Initialize the memory card (37) when you use it with the camcorder for the first time.
- The LOCK switch on the memory card is set to prevent accidental erasure. Change the position of the LOCK switch.
- A compatible memory card must be used to be able to record movies on a memory card (33).
- The folder and file numbers have reached their maximum value. Set
 I photo Numbering to [Reset] and insert a new memory card.

The wireless controller will not work.

- Set [[Wireless Remote Control] to [On].
- Replace the battery of the wireless controller.

Cannot upload files wirelessly using an Eye-Fi card.

- **F** ≥ [Eye-Fi Communication] is set to [Off] (ô appears onscreen). Set it to [Automatic].
- Opening the LCD panel may help when the wireless connection is not strong enough.
- If certain conditions occur while uploading files, such as the camcorder becoming too hot or
 the wireless connection getting too weak, the camcorder may stop the wireless upload (
 appears onscreen). Turn off the camcorder and let it cool down or move to a location with a
 stronger wireless signal.
- Contact the card manufacturer's customer care.

Connections with External Devices

Video noise appears on the TV screen.

 When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter and the power or antenna cables of the TV.

Playback looks fine on the camcorder but there is no image on the TV screen.

 The video input on the TV is not set to the video terminal to which you connected the camcorder. Select the correct video input

There is no sound from the TV.

 When connecting the camcorder to an HDTV using the CTC-100/S Component Cable, make sure to connect also the audio connections using the white and red plugs of the STV-250N Stereo Video Cable.

The camcorder is connected using the optional HTC-100 HDMI Cable, but there is no picture or sound from the HDTV.

 Disconnect the HTC-100 HDMI Cable and then restore the connection or turn the camcorder off and then on again.

The camcorder is connected using the optional HTC-100 HDMI Cable, but HDMI-CEC does not work (cannot play back using the TV's remote control).

- Disconnect the HTC-100 HDMI cable and turn off the camcorder and the TV. After a short while turn them on again and restore the connection.
- [Control for HDMI] is set to [Off]. Set it to [On].
- HDMI-CEC is not activated on the connected TV. Activate this function on the TV.
- Even with TV sets compatible with HDMI-CEC the range of functions available differs depending on the type of TV. Refer to the instruction manual of the connected TV.

The computer does not recognize the camcorder even though the camcorder is connected correctly.

- Disconnect the USB cable and turn off the camcorder. After a short while, turn it on again and restore the connection.
- Connect the camcorder to a different USB port on the computer.
- The camcorder will not be correctly recognized if you connected the USB cable to the computer while the camcorder was deleting all the photos. Disconnect the USB cable and restore the connection once the operation is completed.

The printer is not working even though the camcorder and printer are connected correctly.

- Disconnect the USB cable and turn off the printer. After a short while turn it on again and restore the connection.
- Cannot connect to a PictBridge-compatible printer if the memory contains 2,500 photos or more.

After connecting the camcorder to a printer, the message [Busy] continues to appear on the screen

- Disconnect the USB cable and restore the connection after a short while.

Photos are not correctly printed

 You may not be able to print correctly, using a PictBridge-compatible printer, photos whose file names have been changed or that were recorded, created, edited or changed using another device and then transferred to a memory card connected to the computer.

Cannot save photos on my computer

- When the memory contains too many photos (Windows – 2,500 photos or more, Macintosh – 1,000 photos or more), you may not be able to transfer photos to a computer. Try using a card reader to transfer the photos on the memory card. HEM33 only: To transfer the photos in the built-in memory, copy them to the memory card in advance (121).

List of Messages (in alphabetical order)

Following the list of messages for the camcorder you can find separate lists for print-related messages (\(\superact{\su}\) 170).

Accessing the memory card. Do not remove the memory card.

You opened the memory card slot cover while the camcorder was accessing the memory card
or the camcorder started accessing the memory card as you opened the memory card slot
cover. Do not remove the memory card until this message disappears.

Back up recordings regularly

 This message may appear when you turn on the camcorder. In the event of a malfunction, recordings may be lost so back up your recordings regularly.

Buffer overflow. Recording was stopped.

 The data transfer rate was too high for the memory card in use and the recording was stopped. Replace the memory card with one rated Speed Class 2, 4, 6 or 10.

HFM36 Built-in memory error

- The built-in memory could not be read. Contact a Canon Service Center.

HFM36 Built-in memory is full

The built-in memory is full ("
 End" appears on the screen). Delete some recordings
 (
 153, 98) to free some space. Save your recordings (
 123) and initialize the built-in memory (
 137).

HFM36 Cannot access the built-in memory

- There is a problem with the built-in memory. Contact a Canon Service Center.

Cannot communicate with the battery pack. Continue using this battery pack?

- You attached a battery pack that is not recommended by Canon for use with this camcorder.
- If you are using a battery pack recommended by Canon for use with this camcorder, there
 may be a problem with the camcorder or battery pack. Consult a Canon Service Center.

HFM36 Cannot convert

- Cannot access the memory card. Check the memory card and make sure it is inserted correctly.
- You inserted a MultiMedia Card (MMC) into the camcorder. Use a recommended memory card (33)

HFM36 Cannot copy

- The total size of the scenes you selected to copy exceeds the available space on the memory card. Delete some recordings on the memory card (53, 98) or reduce the number of scenes to copy.
- The memory card already contains the maximum number of scenes (3,999 scenes). Delete some scenes (\$\sum_{2}\$ 53) to free some space.

Cannot divide the scene. Initialize only using the camcorder.

- The scene could not be divided because the camcorder's internal scene management data log is full. Save your recordings (121) and initialize the memory card (37). Write back the previously saved video file to the memory card when it is connected to the computer and try again to divide the scene on the memory card.
- Use the supplied software PIXELA ImageMixer 3 SE to save the scene and divide it on the computer.

Cannot edit

- Could not move a scene in the playlist. Delete some scenes from the playlist (2 91).

Cannot enter standby mode now

The camcorder cannot enter standby mode if the remaining battery charge is too low. Charge
or replace the battery pack (\$\sup\$19).

Cannot play back

 There is a problem with the memory. If this message appears often without apparent reason, contact a Canon Service Center.

HFM36 Cannot play back Cannot access the built-in memory

There is a problem with the built-in memory. Save your recordings (
 123) and initialize the
 built-in memory using the [Complete Initialization] option (
 37). If the problem persists,
 contact a Canon Service Center.

Cannot play back Check the memory card

There is a problem with the memory card. Save your recordings (
 123) and initialize the
memory card using the [Complete Initialization] option (
 37). If the problem persists, use a
different memory card.

HFM36 Cannot play the movies in the built-in memory Initialize only using the camcorder

Cannot play the movies on this memory card

 Movies cannot be played back from a 64 MB or smaller memory card. Use a recommended memory card (33).

Cannot play the movies on this memory card Initialize only using the camcorder

 The memory card in the camcorder was initialized using a computer. Initialize the memory card with this camcorder (37).

Cannot record

- You cannot capture video snapshot scenes from scenes recorded or edited using another device and then transferred to a memory card connected to the computer.
- There is a problem with the memory. If this message appears often without apparent reason, contact a Canon Service Center.

HFM36 Cannot record Cannot access the built-in memory

There is a problem with the built-in memory. Save your recordings (
 123) and initialize the
 built-in memory using the [Complete Initialization] option (
 137). If the problem persists,
 contact a Canon Service Center

Cannot record Check the memory card

There is a problem with the memory card. Save your recordings (
 123) and initialize the
memory card using the [Complete Initialization] option (
 37). If the problem persists, use a
different memory card.

HEM36 Cannot record movies in the built-in memory Initialize only using the camcorder

The camcorder's built-in memory was initialized using a computer. Initialize the built-in memory with this camcorder (\$\sum_{\text{3}}\$ 37).

Cannot record movies on this memory card

Cannot record movies on this memory card Initialize only using the camcorder

Change the battery pack

- Battery pack is exhausted. Replace or charge the battery pack.

Check the memory card

- Cannot access the memory card. Check the memory card and make sure it is inserted correctly.
- A memory card error occurred. The camcorder cannot record or display the image. Try removing and reinserting the memory card, or use a different memory card.
- You inserted a MultiMedia Card (MMC) into the camcorder. Use a recommended memory card (33).

If after the message disappears, appears in red, perform the following: Turn off the camcorder and remove and reinsert the memory card. If turns back to green you can resume
recording/playback. If the problem persists, save your recordings (123) and initialize the
memory card (137).

Could not add the scene(s) to the playlist

 One or more scenes could not be added to the playlist. The playlist can contain a maximum of 999 scenes. If the playlist includes scenes recorded in MXP or FXP mode, the maximum number of scenes in the playlist may be less than 999. Delete some scenes from the playlist
 (1) 91).

Do not disconnect the USB cable or the power source until you safely end the connection from the computer. Connect the compact power adapter

- When the camcorder is in mode and is connected to the computer with the supplied USB cable, the camcorder cannot be operated. Disconnecting the USB cable or power source while this message appears may result in permanent loss of the recordings in the camcorder. Use the computer's Safely Remove Hardware function to end the connection and disconnect the USB cable before using the camcorder.

Error writing on the memory card. Data may be recovered if the memory card has not been removed. Attempt recovering the data?

This message will appear the next time you turn on the camcorder if power supply was accidentally interrupted while the camcorder was writing on the memory card. Select [Yes] to try to recover the recordings. If you removed the memory card and used it with another device after this happened, we recommend you select [No].

File name error

Initialize only using the camcorder

LCD Screen has been dimmed

 Hold DISP pressed for 2 seconds to restore the LCD screen to its previous brightness setting.

May not be possible to record movies on this memory card

You may not be able to record movies on a memory card without a Speed Class rating.
 Replace the memory card with one rated Speed Class 2, 4, 6 or 10.

HEM36 Mem. Card Number of scenes already at maximum

The memory card already contains the maximum number of scenes (3,999 scenes); no further scenes can be copied onto the memory card. Delete some scenes (\$\subseteq\$ 53) to free some space.

Mem. Card Unable to recognize the data

 The memory card contains scenes recorded in a different television system (NTSC). Play back the recordings in the memory card with the device originally used to record them.

Memory card cover is open

- After inserting a memory card, close the memory card slot cover (35).

Memory card is full

 The memory card is full. Delete some recordings (53, 98) to free some space or replace the memory card.

Memory card is write-protected

 The LOCK switch on the memory card is set to prevent accidental erasure. Change the position of the LOCK switch

Need to recover files from the memory card. Change the position of the LOCK switch on the memory card.

This message will appear the next time you turn on the camcorder if power supply was accidentally interrupted while the camcorder was writing on the memory card and later the position of the card's LOCK switch was changed to prevent erasure. Change the position of the LOCK switch

No faces were detected in this scene

The camcorder did not detect any faces in the scene displayed. Be sure to turn on face detection (63) when shooting movies.

No memory card

- Insert a compatible memory card into the camcorder (35).

No photos

- There are no photos to play back. Have fun taking some photos (39, 55).

No scenes

- There are no scenes in the memory selected. Have fun shooting some video (39).
- After selecting [Scenes with Faces] when narrowing down the scenes shown in the index screen: No scenes contain people's faces or no scenes were recorded using the face detection function

HFM36 Not enough available space

 Delete some recordings on the memory card (53, 98) or select the [3Mbps] bit rate for the conversion to SD.

Number of scenes already at maximum

- The maximum number of scenes (3,999 scenes) has been reached. Delete some scenes
 (53) to free some space.
- The playlist can contain a maximum of 999 scenes.

Playlist is full. Cannot divide the scene.

Recording program: Underwater / Surface

Turn on the camcorder while holding PHOTO pressed down to change the recording program $\mbox{$\langle\psi\Leftrightarrow\red{\red{\mathcal R}}$}$.

Follow the instructions to switch the recording program between [Underwater] and [Surface] while the camcorder is secured inside the optional WP-V2 Waterproof Case.

Scene recorded using another device. Cannot divide the scene.

 Scenes recorded using another device and then transferred to a memory card connected to the computer cannot be divided with this camcorder.

Select the desired scene number

A number of scenes have the same recording date but different file control information. This
can occur for example when you edit photos and write the files back to the camcorder. Select
a number to display the corresponding group of scenes.

Some Om photos could not be deleted

Protected photos (Om) cannot be deleted. Remove the protection (III 110).

Some scenes could not be added to the playlist.

- You may not be able to add to the playlist scenes recorded using another device and then transferred to a memory card connected to the computer.
- The playlist can contain a maximum of 999 scenes. If the playlist includes scenes recorded in MXP or FXP mode, the maximum number of scenes in the playlist may be less than 999.
 Delete some scenes from the playlist () 91).

Some scenes could not be deleted

 Movies that were protected/edited with other devices and then transferred to a memory card connected to the computer cannot be deleted with this camcorder.

Task in progress. Do not disconnect the power source.

 The camcorder is updating the memory. Wait until the operation ends and do not disconnect the compact power adapter or remove the battery pack.

The camcorder is set to photo mode

You pressed START/STOP while recording photos (mode). Set the camcorder to mode or mode to record movies.

The lens cover is not fully open. Turn the camcorder off, then on again.

 The lens cover did not open fully. Turn the camcorder off, then on again. If this does not solve the problem, consult a Canon Service Center.

This memory card contains scenes. Delete all scenes to use relay recording.

Save your movies (
 123) if necessary, and delete all the movies from the memory card
 (
 53).

This photo cannot be displayed

 You may not be able to display photos taken with other devices or image files created or edited on a computer and then transferred to a memory card connected to the computer.

This On photo could not be deleted

- Protected photos (Om) cannot be deleted. Remove the protection (110).

This scene was recorded using another device and cannot be added to the playlist.

 Scenes recorded using another device and then transferred to a memory card connected to a computer cannot be added to the plavlist.

To record video on this memory card, it is recommended to use only the XP+/SP/LP recording modes

 Movies may not be recorded correctly on this memory card if the recording mode is set to MXP or FXP mode (□□ 56).

To use this function change the camcorder's mode from 🗗 to M

 You pressed a button that cannot be used in mode. Set the mode switch to M to set the camcorder to flexible recording mode.

Too many photos. Disconnect the USB cable.

- Disconnect the USB cable. Try using a memory card reader or decrease the number of photos on the memory card to fewer than 2,500 photos (printers, Windows computers), or 1,000 photos (Macintosh computers).
- If a dialog box appeared on the computer screen, close it. Disconnect the USB cable, and restore the connection after a short while.

HFM36 Total play time is too long

The playlist cannot be converted when its total playback time exceeds 2 hours and 30 minutes. Reduce the number of scenes in the playlist.

Unable to recognize the data

 You transferred to a memory card connected to the computer video files that were recorded with another device using a different television system (NTSC). Play back the recordings with the device originally used to record them.

Unable to recover data

Could not recover a corrupted file. Save your recordings (
 123) and initialize the memory using the [Complete Initialization] option (
 37).

Direct Print Related Messages

Data transfer error

- Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable.
- You attempted to print from a memory card that contains a large number of photos. Reduce the number of photos.

File error

 You attempted to print a photo that was recorded with another camcorder, has a different compression, or was edited on a computer.

Hardware error

- Cancel printing. Turn off the printer and turn it back on.
- Check the printer status.
- Ink tank errors have occurred. Replace the ink tank.

Ink absorber full

 Touch [Continue] to resume printing. Consult a Canon Service Center (refer to the list included with the printer) to replace the ink absorber.

Ink error

 The ink level cannot be detected correctly or the ink cartridge is out of ink. Replace the ink cartridge.

I ow ink level

- The ink cartridge needs to be replaced soon. Touch [Continue] to restart printing.

No ink

- The ink cartridge is not inserted or is out of ink. Replace the ink cartridge.

No paper

- Paper is not correctly inserted or there is no paper.

Paper error

- There is a problem with the paper. The paper is not correctly loaded or the paper size is wrong.
- If the paper output tray is closed, open it to print.

Paper jam

 The paper jammed during printing. Touch [Stop] to cancel printing. After removing the paper, set some paper again and retry printing.

Paper lever error

- Paper lever error occurred. Adjust the paper selection lever to the proper position.

Print head not installed

- No print head is installed in the printer or the print head is defective.

Printer cover open

Close the printer cover securely.

Printer error

- A malfunction has occurred that may require repairs. (Canon inkjet printers: the printer's green power lamp and orange error lamp flash alternately.)
- Disconnect the USB cable and turn off the printer. Unplug the printer's power cord from the power outlet and contact the appropriate customer support center or service center.

Printer in use

- The printer is in use. Check the printer status.

Printing error

- The printer does not support the paper size selected for [Paper Settings]. Set [Paper Settings] to [Default] or a paper size supported by the printer used.
- Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status.



About Canon Inkjet/SELPHY DS Printers: If the printer's error indicator flashes or an error message appears on the printer's operation panel, refer to the printer's instruction manual.

 If you cannot solve the problem even after consulting this list and the printer's instruction manual, contact the closest Canon Service Center (refer to the list included with the printer).

Handling Precautions

Camcorder

Be sure to observe the following precautions to ensure maximum performance.

- Save your recordings periodically. Make sure to transfer your recordings to an external device such as a computer or digital video recorder (121) and save them on a regular basis. This will protect your important recordings in case of damage and create more free space on the memory. Canon shall not be liable for any data loss.
- Do not carry the camcorder by the LCD panel. Be careful when closing the LCD panel. When using a wrist strap, do not allow the camcorder to swing and hit an object.
- Handle the touch screen with care. Do not apply excessive force and do not use ballpoint pens or other hard-tipped tools to operate the touch screen. This may damage the touch screen's surface or the pressure-sensitive layer beneath it.
- Do not attach protective film on the touch screen. The touch screen's operation is based on detecting applied pressure, so you may not be able to correctly operate the touch screen with an additional protective layer.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car parked under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof – avoid also water, mud or salt. If any of the above should get into the camcorder it may damage the camcorder and/or the lens.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.

 When mounting the camcorder on a tripod, make sure that the tripod's fastening screw is shorter than 5.5 mm.
 Using other tripods may damage the camcorder.



• When recording movies, try to get a calm, stable picture. Excessive cam-

corder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, stop the playback immediately and take a rest break as necessary.

Long-term storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 $^{\circ}$ C.

Battery Pack

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperature higher than 60 °C. Do not leave it near a heater or inside a car in hot weather.
- Do not try to disassemble or modify it.
- Do not drop it or subject it to shocks.
- Do not get it wet.
- Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.

Long-term storage

- Store battery packs in a dry place at temperatures no higher than 30 °C.
- To extend the battery life of the battery pack, discharge it completely before storing it.
- Charge and discharge all your battery packs fully at least once a year.

174 • Additional Information

Remaining battery time

If the remaining battery time displayed is not correct, charge the battery pack fully. Still, the correct time may not be displayed if a fully charged battery pack is used continuously in high temperatures or it is left unused for long periods of time. Also, the correct remaining time may not be displayed, depending on the battery life. Use the time shown on the screen as an approximation.

Regarding the use of non-Canon battery packs

- For your safety, battery packs that are not genuine Canon battery packs will not be charged even if you attach them to this camcorder or to the optional CG-800E Battery Charger.
- We recommend using genuine Canon battery packs bearing the Intelligent System mark.
- ntelligent Li-ion Battery
- If you attach to the camcorder battery packs that are not genuine Canon battery packs, will appear and the remaining battery time will not be displayed.

Memory Card

- We recommend backing up the recordings on the memory card onto your computer. Data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon shall not be liable for lost or corrupted data.
- Do not touch or expose the terminals to dust or dirt.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not leave memory cards in places subject to high humidity and high temperature.
- Do not disassemble, bend, drop, or subject memory cards to shocks and do not expose them to water.
- Check the direction before inserting the memory card. Forcing a memory card into the slot if it is not correctly oriented may damage the memory card or the camcorder.
- Do not attach any labels or stickers on the memory card.

 Secure Digital (SD) memory cards have a physical switch to prevent writing on the card so as to avoid the accidental erasure of the card's content. To write-protect the memory card set the switch to the LOCK position.



Built-in Rechargeable Lithium Battery

The camcorder has a built-in rechargeable lithium battery to keep the date/time and other settings. The built-in lithium battery is recharged while you use the camcorder; however, it will discharge completely if you do not use the camcorder for about 3 months.

To recharge the built-in lithium battery: Connect the compact power adapter to the camcorder and leave it connected for 24 hours with the camcorder off.

Lithium Button Battery

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled.
- Do not disassemble, modify, immerse in water, heat above 100 °C or incinerate the battery.
- Replace with a CR2025 battery made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
- Do not insert the battery into the mouth. If swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may cause internal injuries.
- Keep the battery out of the reach of children.
- Do not recharge, short-circuit or insert the battery in the wrong direction.
- The used battery should be returned to the supplier for safe disposal.
- Do not pick up the battery using tweezers or other metal tools, as this will cause a short circuit.
- Wipe the battery with a clean dry cloth to ensure proper contact.

176 • Additional Information

Disposal

When you delete movies or initialize the memory, only the file allocation table is altered and stored data is not physically erased. Take the necessary precautions when you dispose of the camcorder or memory card, for example by physically damaging it to prevent the leakage of private data.

If giving the camcorder or memory card to another person, initialize the built-in memory (IFM36 only) or memory card using the [Complete Initialization] option (\bigcirc 37). Fill it up with unimportant recordings, and then initialize it again using the same option. This makes recovering the original recordings very difficult.

Maintenance/Others

Cleaning

Camcorder Body

 Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloths or volatile solvents such as paint thinner.

Lens and Instant AF Sensor

- If the lens surface or Instant AF sensor is dirty, autofocus may not work properly.
- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens. Never use tissue paper.

LCD Touch Screen

- Clean the LCD touch screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:

- When the camcorder is moved quickly from cold to warm places
- When the camcorder is left in a humid room
- · When a cold room is heated rapidly

To avoid condensation

 Do not expose the camcorder to sudden or extreme changes in temperature. Remove the memory card and battery pack. Then, place the camcorder in an airtight plastic bag and let it adjust gradually to temperature changes before removing it from the bag.

When condensation is detected

The camcorder automatically shuts off.

The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. As a general rule, wait for 2 hours before resuming use of the camcorder.

Using the Camcorder Abroad

Power Sources


You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult a Canon Service Center for information on pluq adapters for overseas use.

Playback on a TV Screen

You can only play back your recordings on TVs compatible with the PAL system. PAL (or the compatible SECAM system) is used in the following regions/countries:

Europe: All of Europe and Russia. Americas: Only in Argentina, Brazil, Uruguay and French territories (French Guiana, Guadeloupe, Martinique, etc.). Asia: Most of Asia (except in Japan, the Philippines, South Korea, Taiwan and Myanmar). Africa: All of Africa and African islands. Australia/Oceania: Australia, New Zealand, Papua New Guinea; most Pacific islands (except for Micronesia, Samoa, Tonga and US territories like Guam and American Samoa).

Accessories (Availability differs from area to area)

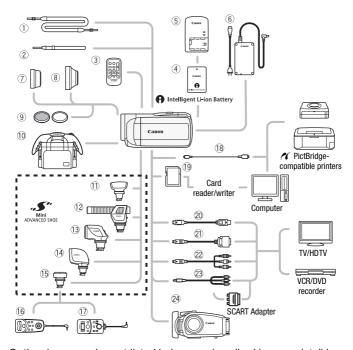

Optional accessories not listed below are described in more detail in the following pages.

- ① SS-600/SS-650 Shoulder Strap
- WS-20 Wrist Strap
- 3 WI -D89 Wireless Controller
- **©** CA-570 Compact Power Adapter
- TR-1000 Zoom Remote Controller
- 78-2000 Zoom Remote Controller

- [®] IFC-300PCU USB Cable
- Memory card
- 2 DTC-100 D Terminal Cable
- © CTC-100 Component Cable CTC-100/S Component Cable*
- 3 STV-250N Stereo Video Cable

^{*} Supplied with the camcorder; not available as an optional accessory.



 Accessories that are compatible with the Advanced Accessory Shoe cannot be attached to this camcorder. Look for the Mini ADVANCED SHOE logo to ensure compatibility with the mini advanced shoe.

Optional Accessories


Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

4 Battery Packs

When you need extra battery packs, select one of the following models: BP-808, BP-809(B)*, BP-809(S)*, BP-819, or BP-827.


 Please note that the shape/color of this battery does not match the external design of the camcorder.



When you use battery packs bearing the Intelligent System mark, the camcorder will communicate with the battery and display the remaining usage time (accurate to 1 minute). You can only use and charge these battery packs with camcorders and chargers compatible with Intelligent System.

⑤ CG-800E Battery Charger

Use the battery charger to charge the battery packs.



Charging Times

The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

Battery pack→ Charging conditions↓	BP-808 BP-809	BP-819	BP-827
Using the camcorder	150 min.	260 min.	385 min.
Using the CG-800E Battery Charger	105 min.	190 min.	260 min.

Recording and Playback Times

Recording and playback times given in the following tables are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc.

HFM36 Using the built-in memory

Battery pack	Usage time	Recording mode				
		MXP	FXP	XP+	SP	LP
BP-808 BP-809	Recording (maximum)	105 min.	105 min.	105 min.	110 min.	110 min.
	Recording (typical)*	65 min.	65 min.	70 min.	70 min.	70 min.
	Playback	170 min.	170 min.	170 min.	175 min.	175 min.
BP-819	Recording (maximum)	210 min.	210 min.	215 min.	220 min.	220 min.
	Recording (typical)*	135 min.	135 min.	135 min.	140 min.	140 min.
	Playback	335 min.	340 min.	340 min.	350 min.	350 min.
BP-827	Recording (maximum)	320 min.	325 min.	330 min.	335 min.	335 min.
	Recording (typical)*	210 min.	210 min.	210 min.	215 min.	215 min.
	Playback	520 min.	520 min.	525 min.	535 min.	535 min.


Using a memory card

Battery pack	Usage time	Recording mode				
		MXP	FXP	XP+	SP	LP
BP-808 BP-809	Recording (maximum)	100 min.	105 min.	105 min.	105 min.	105 min.
	Recording (typical)*	65 min.	65 min.	65 min.	70 min.	70 min.
	Playback	165 min.	165 min.	170 min.	170 min.	170 min.
BP-819	Recording (maximum)	205 min.	210 min.	215 min.	215 min.	215 min.
	Recording (typical)*	135 min.	135 min.	135 min.	135 min.	135 min.
	Playback	330 min.	330 min.	340 min.	340 min.	345 min.
BP-827	Recording (maximum)	315 min.	315 min.	330 min.	330 min.	330 min.
	Recording (typical)*	205 min.	210 min.	210 min.	210 min.	210 min.
	Playback	510 min.	510 min.	520 min.	525 min.	525 min.

^{*} Approximate times for recording with repeated operations such as start/stop, zooming, and power on/off.

7 TL-H37 Tele-converter

This Tele-converter lens increases the focal length of the camcorder lens by a factor of 1.5.





- The minimum focusing distance at full telephoto with the TL-H37 is 2.3 m.
- When the Tele-converter is attached, a shadow may appear in the picture when you use the flash.



This Wide-converter lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.


 When the Wide-converter is attached, a shadow may appear in the picture when you use the flash.





9 FS-H37U Filter Set

Neutral density and MC protector filters help you to control difficult lighting conditions.



10 SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.




11 SM-V1 Surround Microphone

Use 5.1ch surround sound to add a sense of presence to your movies. You can link the surround sound to the zoom position or use the microphone as a highly directional shotgun microphone (monaural).




② DM-100 Directional Stereo Microphone

This highly sensitive, super-directional microphone attaches to the camcorder's mini advanced shoe. It can be used as directional microphone (monaural) or stereo microphone.




13 VL-5 Video Light

This video light enables you to record brightly in color even in dark places. It attaches to the camcorder's mini advanced shoe for cable-free operation.



14 VFL-2 Video Flash Light

This video flash light allows you to record photos and movies even at night or in dark places. It attaches to the camcorder's mini advanced shoe for cable-free operation.




15 RA-V1 Remote Control Adapter

Attaching this adapter to the mini advanced shoe allows you to use the optional ZR-2000 or ZR-1000 Zoom Remote Controller, which is useful when operating the camcorder while it is mounted on a tripod.



20 HTC-100 HDMI Cable

Use this cable to connect the camcorder to an external device using an all-digital connection, allowing you to enjoy playback at the highest quality. This cable sends both video and audio signals.



24 WP-V2 Waterproof Case

This case allows you to record movies and take photos underwater without getting the camcorder wet.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Specifications

LEGRIA HF M36 / LEGRIA HF M307

System

Recording System

Movies: AVCHD Video compression: MPEG-4 AVC/H.264;

Audio compression: Dolby Digital 2ch; Dolby Digital 5.1ch*

Only when using the optional SM-V1 Surround Microphone.

Photos: DCF (Design rule for Camera File system), compatible with Exif* Ver. 2.2 and with DPOF

Image compression: JPEG (Super Fine, Fine, Normal)

* This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Television System

1080/50i*

* Recordings made with the [PF25] frame rate are converted and recorded on the memory as 50i.

· Recording Media

- HFM36 Built-in memory: 8 GB
- SD, SDHC (SD High Capacity) or SDXC (SD eXtended Capacity) memory card (not included)

• Maximum Recording Time (approximate figures)

HFM36 8 GB built-in memory:

MXP mode: 40 min. FXP mode: 1 hr. XP+ mode: 1 hr. 25 min.

SP mode: 2 hr. 20 min. LP mode: 3 hr.

Commercially available 16 GB memory card:

MXP mode: 1 hr. 25 min. **FXP** mode: 2 hr. 5 min. **XP+** mode: 2 hr. 50 min.

SP mode: 4 hr. 45 min. LP mode: 6 hr. 5 min.

Image Sensor

1/4-inch CMOS, approx. 3,890,000 pixels

Effective pixels: Movies:

[Dynamic] IS mode: approx. 2,990,000 (T) / 2,070,000 (W) pixels*

 Other IS modes:
 approx. 2,990,000 pixels

 Photos (L, M, S):
 approx. 3,310,000 pixels

 Photos (LW, MW, SW):
 approx. 2,990,000 pixels

* When two values are given, the first indicates the value at full telephoto (T) and the second the value at full wide-angle (W).

- LCD Touch Screen: 2.7 in., wide, TFT color, approx. 211,000 dots, touch operation
- Microphone: Stereo electret condenser microphone

Lens

f=4.1-61.5 mm, F/1.8-3.2, 15x optical zoom

35 mm equivalent: Movies:

[Dynamic] IS mode: 39.5 – 711 mm Other IS modes: 39.5 – 592.5 mm Photos: 39.5 – 592.5 mm

• Lens Configuration: 11 elements in 9 groups (1 double-sided aspheric element)

AF System

Autofocus (TTL + external distance sensor when set to [Instant AFI) or Manual focus

• Filter Diameter: 37 mm

• Minimum Focusing Distance

1 m; 1 cm at full wide angle

White Balance

Auto white balance, Custom white balance or Preset white balance settings: Daylight, Shade, Cloudy, Tungsten, Fluorescent, Fluorescent H

Minimum Illumination

0.4 lx ([Low Light] recording program, Shutter speed at 1/2)
4.5 lx ([Programmed AE] recording program. Auto slow shutter [On]. Shutter speed at 1/25)

- Recommended Illumination: More than 100 lx
- Image Stabilization: Optical-Shift Image Stabilizer

. Size of Video Recordings

MXP, FXP mode: 1920 x 1080 pixels; XP+, SP, LP mode: 1440 x 1080 pixels

. Size of Photos

mode: LW 2304x1296, L 2100x1575, M 1600x1200, S 640 x 480 pixels Simultaneous recording: LW 2304x1296, SW 848x480 pixels Capturing photos from a playback scene: MW 1920x1080 pixels

Terminals

 \varnothing 3.5 mm minijack; output only (dual purpose terminal also for headphones stereo output) Video: $\,$ 1 Vp-p / 75 Ω unbalanced

Audio: $-10 \text{ dBV } (47 \text{ k}\Omega \text{ load}) / 3 \text{ k}\Omega \text{ or less}$

• USB Terminal: mini-B, USB 2.0 (Hi-Speed USB); output only

• COMPONENT OUT Terminal (proprietary mini-D terminal)

Luminance (Y): 1 Vp-p / 75 Ω ; Chrominance (P_B/P_R (C_B/C_R)): ± 350 mV / 75 Ω 1080i (D3) compatible; output only

• HDMI OUT Terminal

HDMI mini connector; output only; compatible with HDMI-CEC and x.v.Colour

Power/Others

· Power supply (rated)

7.4 V DC (battery pack), 8.4 V DC (compact power adapter)

- . Power consumption: 3.3 W (SP mode, AF on, LCD normal brightness)
- Operating temperature: 0 40 °C
- Dimensions [W x H x D] (excluding the grip belt): 68 x 60 x 123 mm
- Weight (camcorder body only): 320 g
- When the recording program is set to [Underwater] or [Surface]
 - The following functions are not available: mini video light, flash, face detection (available only for [Surface]), Instant AF, auto slow shutter, AF-assist lamp, manual audio recording level adjustment, microphone attenuator, zoom speed adjustment (zoom speed is faster than [Speed3] when [Zoom Speed] is set to [Variable])
 - The following settings are adjusted: white balance, image effects, light metering
 - In the water: approx. 75 cm at full telephoto; approx. 5 cm at full wide angle in the air: approx. 1 m at full telephoto; approx. 5 cm at full wide angle in the air: approx. 1 m at full telephoto; approx. 5 cm at full wide angle

CA-570 Compact Power Adapter

- Power supply: 100 240 V AC, 50/60 Hz
- Rated output / consumption: 8.4 V DC, 1.5 A / 29 VA (100 V) 39 VA (240 V)
- Operating temperature: $0-40~^{\circ}\text{C}$
- Dimensions: 52 x 29 x 90 mm
- Weight: 135 g

BP-808 Battery Pack

- · Battery type
- Rechargeable lithium ion battery, compatible with Intelligent System
- Rated voltage: 7.4 V DC
- Operating temperature: 0 40 °C
- Battery capacity: 890 mAh
- Dimensions: 30.7 x 23.3 x 40.2 mm
- Weight: 46 g

About the music files

The specifications of the music files compatible with the camcorder are as follows.

Audio encoding: Linear PCM

Audio sampling: 48 kHz, 16 bits, 2 channels

Minimum length: 1 second

File extension: WAV

The music data is saved in the memory under the following folder structure.

CANON

MY_MUSIC

MUSIC_01.WAV to MUSIC_99.WAV

On the memory card:

CANON

PRIVATE

MY_MUSIC

MUSIC_01.WAV to MUSIC_99.WAV

Weight and dimensions are approximate. Errors and omissions excepted. The information in this manual is verified as of December 2010. Subject to change without notice.

Index

25p Cinema Mode	Continuous shooting
Abroad, using the camcorder	D Data code 89, 146 Date and time 31 Deleting 53, 91 Photos 98, 101 Digital effects 66 Dividing scenes 94 Drive mode 104 Dual Shot 27 E Edit panel 28, 138
Automatic backlight correction	Error messages
В	F
Background music	Face detection Playback 52 Recording 63 Fireworks (recording program) 58 Flash 103 Flexible recording 27 Focus assistance 141 Focus priority 141
С	Frame rate
Calendar	FUNC. panel
	FUNC. panel 28, 136

<u>I</u>	Photo size
Image effects	Playback
Image stabilizer 61	Movies
Index screens46	Photos
Index screen selection49	Playlist
Showing some/	Portrait (recording program) 57
all of the scenes 52	Power saving
Initialization (built-in memory*/	Powered IS
memory card)	Pre-recording
-	Print order
L	Printing photos
Language32	Progressive frame rates
LCD screen dimmer 149	PF24, PF30
LCD touch screen24, 26	Protecting photos 110
Light metering mode 107	Q
Low light (recording program)58	Quick Start
М	Quick Start44
	R
Magnifying photos	Recording
Maintenance	Movies 39, 55
Manual exposure	Photos
Manual focus	Recording mode
Markers	Recording programs 57, 60, 67
Memory card	Recording time 57
Microphone attenuator	Relay recording*
Mini advanced shoe81	Remote sensor
Mini video light	Resetting all camcorder
Mode switch	settings
N	Reviewing photos
••	Rotating photos 109, 145
Night scene (recording program)58	
Notification sounds	S
0	Saving recordings 121
Onscreen display selection89	Creating discs
Onscreen icons	Transferring to a computer 123
	Using external video
P	recorders
P (recording program)67	Selecting the memory*
PF25 progressive	for playback 49
frame rate 144, 156	for recording35
Photo numbers	Self timer
Photo quality	Serial number
, , ,	

Setup menus	U
Simultaneous recording 106	Underwater (recording program) 59 Uploading movies to
Slideshow108	video sharing Web sites* 130
Smart AUTO mode	USB terminal
Snow (recording program)58 Sports (recording program)58	V
Spotlight (recording program)	Video snapshot 65 Volume 48, 80
, ,,	W
T	White balance
Telephoto	Wide angle
Time 2011e/031	Wind screen
Touch & Track	Wireless controller
Touch AE	Z
Touch AF	Zoom
Tripod	Digital zoom
Ty (recording program) 67	Zoom speed

Canon

Canon Europa N.V.

Bovenkerkerweg 59-61, 1185 XB Amstelveen, The Netherlands www.canon-europa.com

Canon UK Ltd

CCI Service Centre, Unit 130
Centennial Park, Borehamwood, Hertfordshire, WD6 3SE, United Kingdom Telephone 0870-241-2161

Canon Australia Ptv Ltd

Tel: 13-13-83 (within Australia only) (61) 02-9805-2555 www.canon.com.au

Canon New Zealand Ltd

Tel: 0800-222-666 (within New Zealand only) (64) 09-489-0300 www.canon.co.nz

Canon Singapore Pte. Ltd

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632 Tel: (65) 6799 8888

Fax: (65) 6799 8882

Canon Hongkong Company Ltd

19/F, The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

Tel: +852 3191 2333, Fax: +852 2428 3963

Canon Latin America, Inc.

Sales & Enquiries:

703 Waterford Way, Suite 400, Miami, FL 33126 USA

For support concerning the supplied PIXELA applications, please call PIXELA customer support (details in the 'PIXELA Applications' Installation Guide).