

Intel 945 Series

Intel 945GC/945GZ/945GCT/945GZT

Socket LGA775 Processor Mainboard

User's Manual

Rev: 1.10, Oct 2007

P/N: 88EN945GC1

Disclaimer

The intellectual property of this manual belongs to our company. The ownership of all of the products, including accessories and software etc. belong to our company. No one is permitted to copy, change, or translate without our written permission.

We compiled this manual based on our careful attitude, but we can not guarantee the accuracy of the contents. This manual is purely technical documentation, without any hint or other meanings, and we won't commit users' misunderstanding of the typesetting error.

Our products are in continuous improvement and updating, Therefore, we retain the right that we won't give notice to the users in future.

Copyright

All of the trademark in this manual belong to their own registered company.

All of the products name is only for identification, its title belongs to its manufacturer or brand owner.

Table of Contents

Chapter 1 Introduction	3
1.1 Package Checklist	3
1.2 Specifications	4
1.3 Mainboard Layout	5
1.3.1 Intel 945GC(V1.0)	5
1.3.2 Intel 945GC(V2.0)	6
1.4 Connecting Rear Panel I/O Devices	7
Chapter 2 Hardware Setup	8
2.1 Choosing a Computer Chassis	8
2.2 Installing Mainboard	8
2.3 Installation of the CPU and CPU Cooler.....	9
2.3.1 Installation of the CPU	9
2.3.2 Installation of the CPU Cooler	10
2.4 Installation of Memory Modules.....	10
2.5 Connecting Peripheral Devices.....	11
2.5.1 Floppy and IDE Disk Drive Connectors	11
2.5.2 Serial ATA Connectors	11
2.5.3 PCI and PCI Express slots	11
Chapter 3 Jumpers & Headers Setup	12
3.1 Checking Jumper Settings	12
3.2 CMOS Memory Clearing Header	12
3.3 Keyboard Power Function	12
3.4 FAN Power Connectors	13
3.5 Front Panel Switches & Indicators Headers	13
3.6 Additional USB Port Headers	14
3.7 Front Panel Audio Connection Header.....	14
3.8 Internal Audio Connectors	15
3.9 ATX Power InputConnectors	15
Chapter 4 BIOS Setup Utility	16
4.1 About BIOS Setup	16
4.2 To Run BIOS Setup	16
4.3 About CMOS.....	16
4.4 The POST (Power On Self Test).....	16
4.5 BIOS Setup — CMOS Setup Utility.....	17
4.5.1 CMOS Setup Utility	17
4.5.2 Control Keys	18
4.5.3 Standard CMOS Features	19
4.5.4 Advanced BIOS Features	21
4.5.5 Advanced Chipset Features	24
4.5.6 Integrated Peripherals	26
4.5.7 Power Management Setup	30
4.5.8 PnP PCI Configuration	32
4.5.9 PC Health Status	33
4.5.10 Frequency/Voltage Control	34
4.5.11 Load Fail-Safe Defaults	35
4.5.12 Load Optimized Defaults	35
4.5.13 Set Supervisor/User Password	35
4.5.14 Save & Exit Setup	36
4.5.15 Exit Without Saving	36
Chapter 5 Driver Installation	37

Chapter 1 Introduction

1.1 Package Checklist

Thank you for choosing our product.

Please check the following packing and accessories, if there is any broken or part missing, please contact with your franchiser.

- HDD Cable X 1
- Serial ATA Cable X 1
- Rear I/O Panel X 1
- User's Manual X 1
- Driver/Utility CD X 1
- FDD Cable X 1 (Optional)
- Serial ATA Power Cable X 1 (Optional)


The items listed above are for reference only, and are subject to change without notice.

1.2 Specifications

CPU	<ul style="list-style-type: none"> - LGA775 socket for Intel® Core™2 Duo/Pentium® D/Pentium® 4/Celeron® D Processors - FSB 1333MHz/1066MHz(for Intel 945GC-A2 Chipset Only)、800MHz/533MHz - Hyper Threading Technology
Chipset	<ul style="list-style-type: none"> - Based on Intel 945GZ/945GC/945GC-A2 + ICH7 - ICH7: Intel FW82801GB
VGA	<ul style="list-style-type: none"> - Intel Graphics Media Accelerator 950
Main Memory	<ul style="list-style-type: none"> - 2x 240-pin DIMM slots support (for Intel 945GC(V1.0) Only) - 4x 240-pin DIMM slots support (for Intel 945GC(V2.0) Only) - Maximum memory capacity up to 2GB - Supports Dual Channel DDR2 667MHz(for Intel 945GC-A2 Chipset Only)(Optional) - Supports Dual Channel DDR2 533MHz
BIOS	<ul style="list-style-type: none"> - Supports Plug&Play - Supports Advanced Power Management ACPI - CPU temperature, Fan speed, System Voltage monitoring
Integrate Ports	<ul style="list-style-type: none"> - 1 X Floppy Drive, supports 360K/720K/1.2M/1.44M/2.88M floppy disk - 8 X USB 2.0 ports, USB 1.1 is compliant - 1 X COM port - 1 X VGA port - 1 X PS/2 Keyboard port - 1 X PS/2 Mouse port - 1 X RJ45 port - 1 X LPT connector (Optional) - 1 X eSATA port (Optional) - Provides 1* IDE connector, 2* IDE devices could be connected, support ATA 66/100 - Provides 4* SATA high speed HDD ports
Sound	<ul style="list-style-type: none"> - Onboard 6-channel/8-channel HD Audio Codec (Optional) - Supports 16 bit Audio Codec - Positioning Audio Support A3D, I3DL2 - Front Panel Jumper, provides stereo MIC port on front panel
Onboard LAN	<ul style="list-style-type: none"> - Onboard 10/100/1000Mbps compatible LAN (Optional)
Expansion Slots	<ul style="list-style-type: none"> - 1 X PCI Express x16 slot (Intel 945GZ Chipset works at 4 X) - 2 X PCI slots - Support PCI Bus interface v2.2 compliant
Form Factor	<ul style="list-style-type: none"> - Micro-ATX


1.3 Mainboard Layout

1.3.1 Intel 945GC(V1.0)

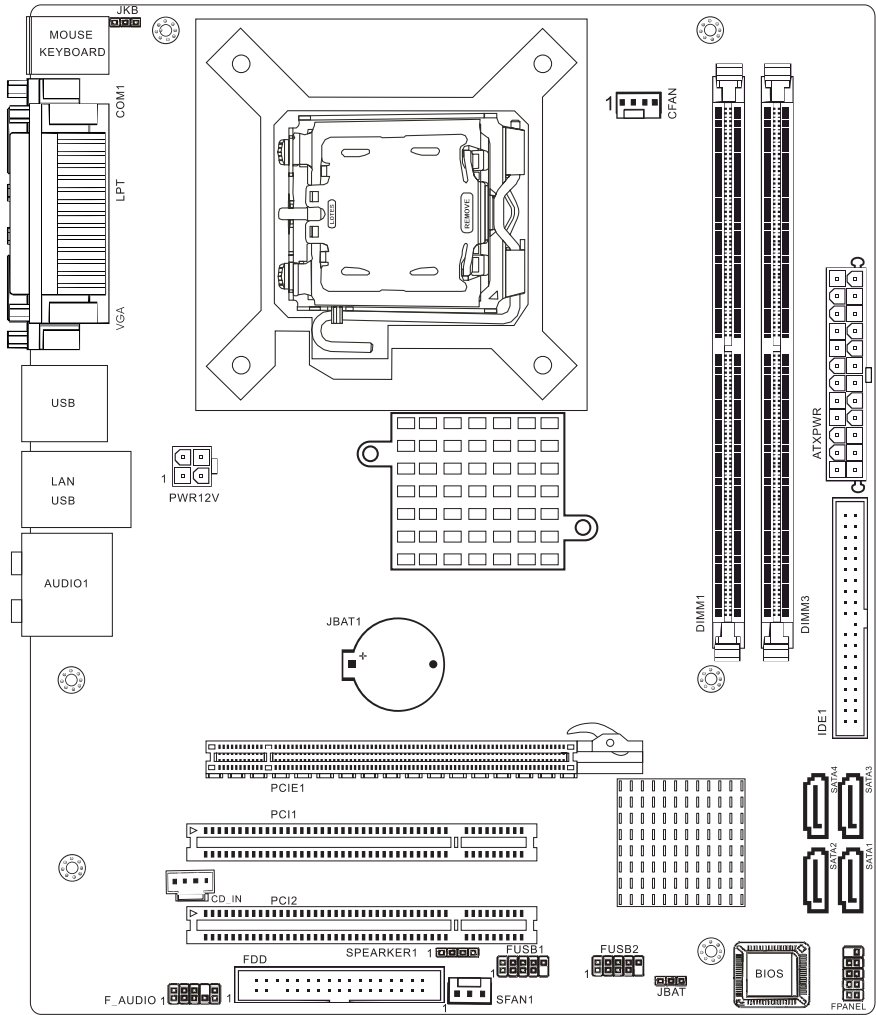

(This picture is only for reference)


1.3.2 Intel 945GC(V2.0)

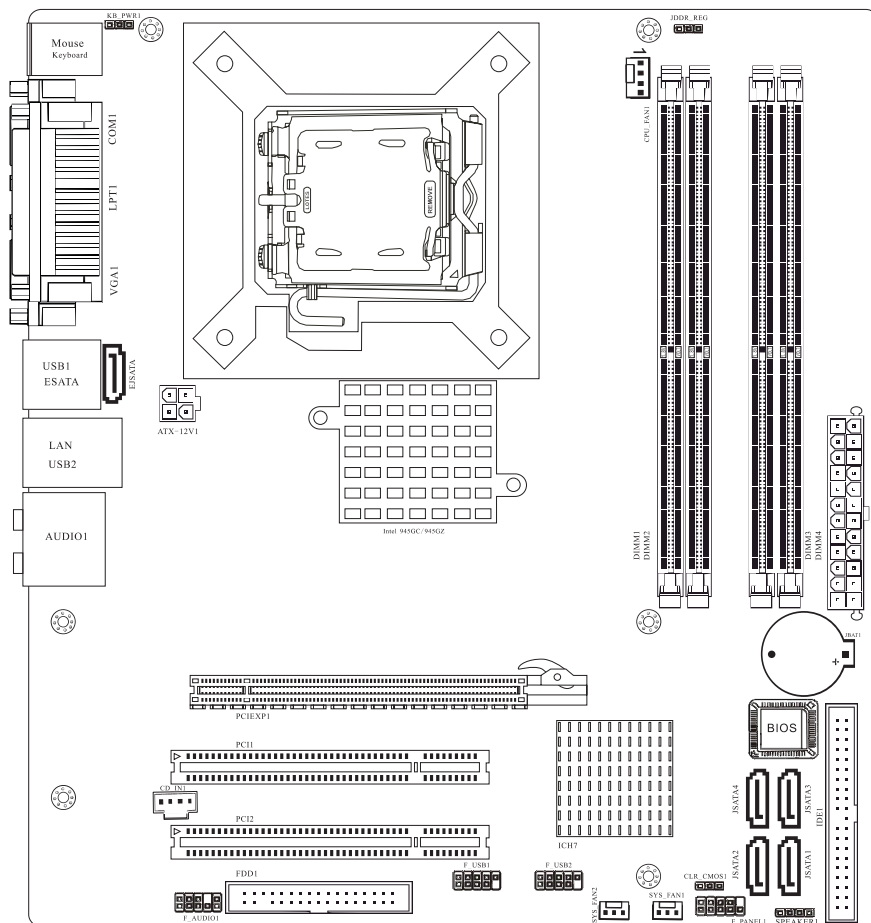

(This picture is only for reference)

1.4 Connecting Rear Panel I/O Devices

The rear I/O part of this mainboard provides the following I/O ports:

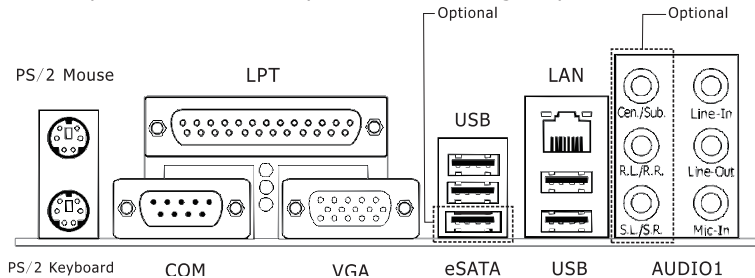

- **PS/2 Mouse:** Connect to PS/2 mouse.
- **PS/2 Keyboard:** Connect to PS/2 keyboard.
- **LPT:** Connect to printer or other devices that support this communication protocol.
- **COM:** Connect to external modem, mouse or other devices that support this communication protocol.
- **VGA:** Connect to monitor input.
- **LAN:** Connect to Local Area Network.
- **USB:** Connect to USB devices such as scanner, digital speakers, monitor, mouse, keyboard, hub, digital camera, joystick etc.
- **eSATA:** Connect to peripheral SATA devices. The peripheral SATA devices must connect inside SATA connectors. (Optional)
- **AUDIO1:**
 - Cen./Sub. (Center / Subwoofer): Connect to the center and subwoofer channel in the 7.1 channel audio system.
 - R.L./R.R. (Rear Left / Rear Right): Connect to the rear left and rear right channel in the 7.1 channel audio system.
 - S.L./S.R. (Surround Left / Surround Right): Connect to the surround left and surround right channel in the 7.1 channel audio system.
 - Line-In: Connect to the line out from external audio sources.
 - Line-Out: Connect to the front left and front right channel in the 7.1-channel or regular 2-channel audio system.
 - Mic-In: Connect to the plug from external microphone.

Chapter 2 Hardware Setup

2.1 Choosing a Computer Chassis




The mainboard and its component layouts illustrated in this chapter were based mainly on model "Intel 945GC(V1.0)", unless specifically stated.

- Choose a chassis big enough to install this mainboard.
- As some features for this mainboard are implemented by cabling connectors on the mainboard to indicators and switches or buttons on the chassis, make sure your chassis supports all the features required.
- If there is possibility of adopting some more hard drives, make sure your chassis has sufficient power and space for them.
- Most chassis have alternatives for I/O shield located at the rear panel. Make sure the I/O shield of the chassis matches the I/O port configuration of this mainboard. You can find an I/O shield specifically designed for this mainboard in its package.

2.2 Installing Mainboard

Most computer chassis have a base with many mounting holes to allow the mainboard to be securely attached, and at the same time, prevent the system from short circuits. There are two ways to attach the mainboard to the chassis base: (1) with studs, or (2) with spacers. Basically, the best way to attach the board is with studs. Only if you are unable to do this should you attach the board with spacers. Line up the holes on the board with the mounting holes on the chassis. If the holes line up and there are screw holes, you can attach the board with studs. If the holes line up and there are only slots, you can only attach with spacers. Take the tip of the spacers and insert them into the slots. After doing this to all the slots, you can slide the board into position aligned with slots. After the board has been positioned, make sure everything is OK before putting the chassis back on.

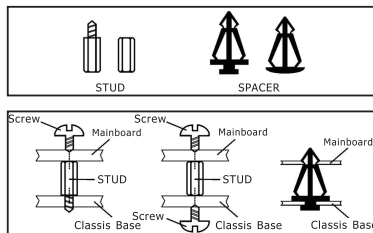

Always power off the computer and unplug the AC power cord before adding or removing any peripheral or component. Failing to do so may cause severe damage to your mainboard and/or peripherals. Plug in the AC power cord only after you have carefully checked everything.

To install this mainboard:

1. Locate all the screw holes on the mainboard and the chassis base.
2. Place all the studs or spacers needed on the chassis base and have them tightened.
3. Face the mainboard's I/O ports toward the chassis's rear panel.
4. Line up all the mainboard's screw holes with those studs or spacers on the chassis.
5. Install the mainboard with screws and have them tightened.



To prevent shorting the PCB circuit, please REMOVE the metal studs or spacers if they are already fastened on the chassis base and are without mounting-holes on the mainboard to align with.

2.3 Installation of the CPU and CPU Cooler

Before installing the CPU, please comply with the following conditions:

1. Please make sure that the mainboard supports the CPU.
2. Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
3. Please add an even layer of heat sink paste between the CPU and CPU cooler.
4. Please make sure the CPU cooler is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

2.3.1 Installation of the CPU

1. Open the socket lever by pushing the lever down and away from the socket (see Figure 1, 1 and 2).

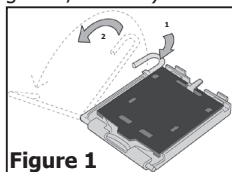


Figure 1

2. Lift the load plate. Do not touch the socket contacts (see Figure 2, 3 and 4)

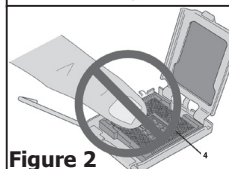
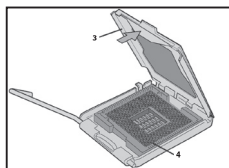


Figure 2

4. Remove the processor from the protective processor cover. Hold the processor only at the edges, being careful not to touch the bottom of the processor (see Figure 4). Do not discard the protective processor cover. Always replace the processor back to the package if the processor is removed from the socket.

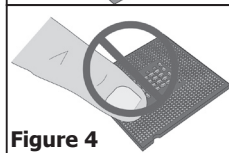
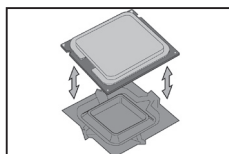


Figure 4

6. Pressing down on the load plate (Figure 6, 9) close and engage the socket lever (Figure 6, 10).

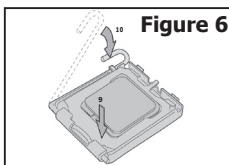


Figure 6

3. Remove the plastic protective socket cover from the load plate (see Figure 3, 5). Do not discard the protective socket cover. Always replace the socket cover if the processor is removed from the socket.

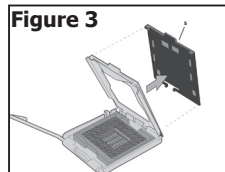


Figure 3

5. Hold the processor with your thumb and index fingers oriented as shown in Figure 5. Make sure fingers align to the socket cutouts (see Figure 5, 6). Align notches (see Figure 5, 7) with the socket see (Figure 5, 8). Lower the processor straight down without tilting or sliding the processor in the socket.

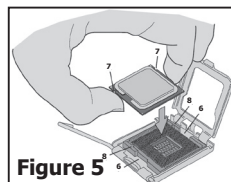



Figure 5

2.3.2 Installation of the CPU Cooler

For proper installation, please kindly refer to the instruction manuals of your CPU Cooler.


2.4 Installation of Memory Modules

This mainboard provides two 240-pin DDRII (Double Data Rate) DIMM slots (Intel945GC(V2.0) provides 4x) , and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install two identical (the same brand, speed, size and chip-type) memory modules in the DDRII DIMM slots to activate Dual Channel Memory Technology. Otherwise, it will operate at single channel mode.

 Static electricity can damage the electronic components of the computer or optional boards. Before starting these procedures, ensure that you are discharged of static electricity by touching a grounded metal object briefly.

To install system memory:

- 1. Power off the computer and unplug the AC power cord before installing or removing memory modules.
- 2. Locate the DIMM slot on the board.
- 3. Hold two edges of the DIMM module carefully, keep away from touching its connectors.
- 4. Align the notch key on the module with the rib on the slot.
- 5. Firmly press the module into the slots until the ejector tabs at both sides of the slot automatically snap into the mounting notch. Do not force the DIMM module in with extra force as the DIMM module only fits in one direction.
- 6. To remove the DIMM modules, push the two ejector tabs on the slot outward simultaneously, and then pull out the DIMM module.

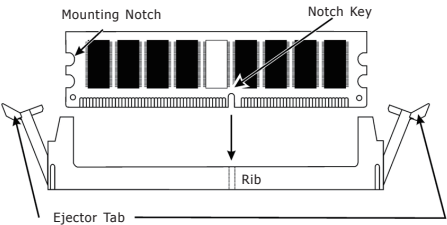

Dual-Channel Memory installation (For Intel 945GC(V2.0) Only)

The Intel 945GC(V2.0) includes 4 DIMM sockets, and each Channel has two DIMM sockets as following:

Channel 1 : DIMM1, DIMM2

Channel 2 : DIMM3, DIMM4


The following is a Dual Channel Memory configuration table:

(D: Double Side, S: Single Side, "--": Empty)

Channel 1		Channel 2		Dual Channel
DIMM1	DIMM2	DIMM3	DIMM4	
S	--	S	--	Enabled
S	--	--	S	Enabled
--	S	S	--	Enabled
--	S	--	S	Enabled
S	S	S	S	Enabled
D	--	D	--	Enabled
D	--	--	D	Enabled
--	D	D	--	Enabled
--	D	--	D	Enabled

2.5 Connecting Peripheral Devices

2.5.1 Floppy and IDE Disk Drive Connectors

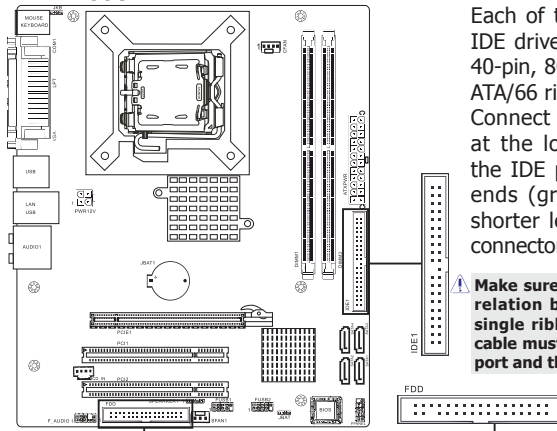

Each of the IDE port connects up to two IDE drives at Ultra ATA/100 mode by one 40-pin, 80-conductor, and 3-conductor Ultra ATA/66 ribbon cables.

Connect the single end (blue connector) at the longer length of ribbon cable to the IDE port of this board, the other two ends (gray and black connector) at the shorter length of the ribbon cable to the connectors of your hard drives.


Make sure to configure the "Master" and "Slave" relation before connecting two drives by one single ribbon cable. The red line on the ribbon cable must be aligned with pin-1 on both the IDE port and the hard-drive connector.

The FDD connector connects up to two floppy drives with a 34-wire, 2-conductor floppy cable. Connect the single end at the longer length of ribbon cable to the FDD on the board, the two connectors on the other end to the floppy disk drives connector. Generally you need only one floppy disk drive in your system.

The red line on the ribbon cable must be aligned with pin-1 on both the FDD port and the floppy connector.

2.5.2 Serial ATA Connectors

Each SATA connector serves as one single channel to connect one SATA device by SATA cable.

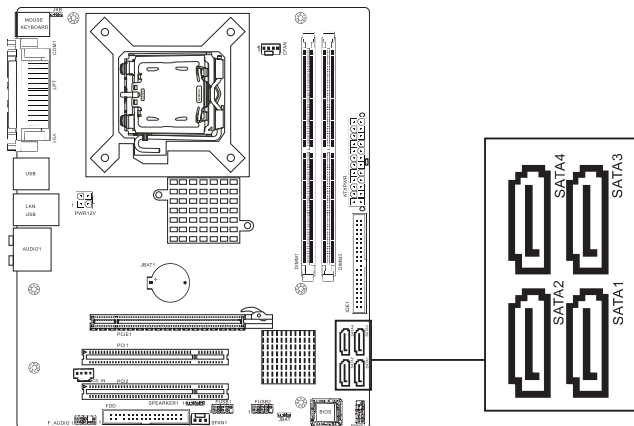

2.5.3 PCI and PCI Express slots

Install PCI Express X16 graphics card into slot "PCIE1".

Install PCI card into slots "PCI1" or "PCI2".


Chapter 3 Jumpers & Headers Setup

3.1 Checking Jumper Settings

- For a 2-pin jumper, plug the jumper cap on both pins will make it CLOSE (SHORT). Remove the jumper cap, or plug it on either pin (reserved for future use) will leave it at OPEN position.
- For 3-pin jumper, pin 1~2 or pin 2~3 can be shorted by plugging the jumper cap in.

How to identify the PIN1 jumpers?

Please check the mainboard carefully, the PIN1 is marked by "1" or white thick line.


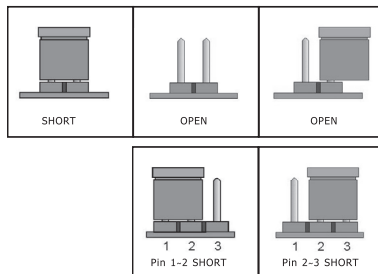


3.2 CMOS Memory Clearing Header

The time to clear the CMOS memory occurs when (a) the CMOS data becomes corrupted, (b) you forgot the supervisor or user password preset in the BIOS menu, (c) you are unable to boot-up the system because the CPU ratio/clock was incorrectly set in the BIOS menu, or (d) whenever there is modification on the CPU or memory modules.

This header uses a jumper cap to clear the CMOS memory and have it reconfigured to the default values stored in BIOS.

- Pins 1 and 2 shorted (Default): Normal operation.
- Pins 2 and 3 shorted: Clear CMOS memory.

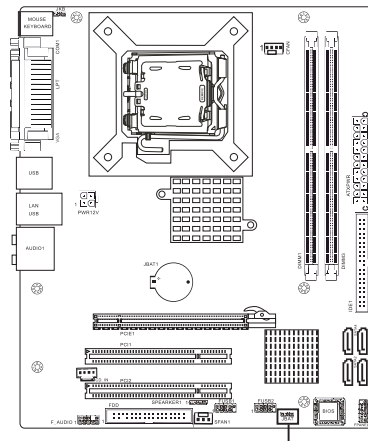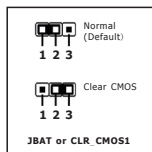


To clear the CMOS memory and load in the default values:

- Power off the system.
- Set pin 2 and pin 3 shorted by the jumper cap. Wait for a few seconds. Set the jumper cap back to its default settings --- pin 1 and pin 2 shorted.
- Power on the system.
- For incorrect CPU ratio/clock settings in the BIOS, press key to enter the BIOS setup menu right after powering on system.
- Set the CPU operating speed back to its default or an appropriate value.
- Save and exit the BIOS setup menu.


3.3 Keyboard Power Function(JKB)

Pin 1-2 short: Disabled power on by keyboard
Pin 2-3 short: Support power on by keyboard

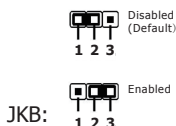


3.4 FAN Power Connectors

These connectors each provide power to the cooling fans installed in your system.


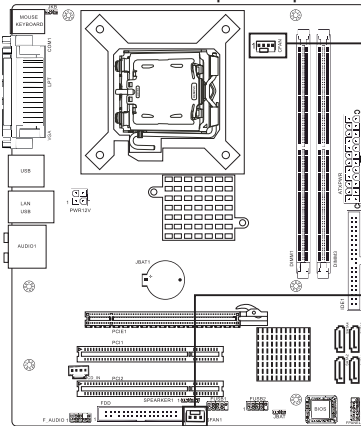


CFAN or CFAN1: CPU Fan Power Connector
 SYSFAN1: System Fan Power Connector
 SYSFAN2: System Fan Power Connector (Optional)

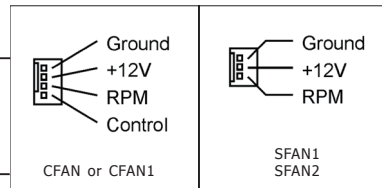

⚠ These fan connectors are not jumpers. **DO NOT** place jumper caps on these connectors.

3.5 Front Panel Switches & Indicators Headers

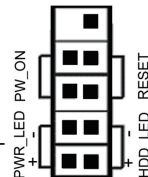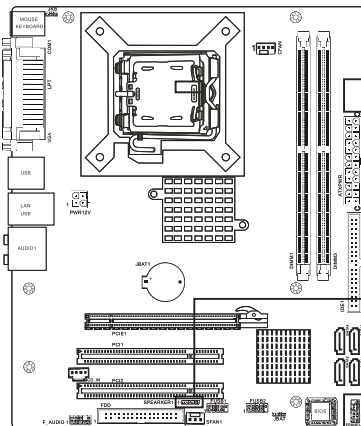

HDD_LED (Hard Driver LED Header)

Connect the HDD LED cable to these PINs, in order to see the HDD status

RESET (Reset Control)

This connector connects to the case-mounted reset switch for rebooting your computer without having to turn off your power switch. This is a preferred method of rebooting in order to prolong the life of the system's power supply.


PWR-ON (Power Button)

This connector connects to the case-mounted power switch to power ON/OFF the system.

SPEAKER (Speaker)

This 4-pin connector connects to the case-mounted speaker. You should follow the instruction of the speaker cable.

3.6 Additional USB Port Headers

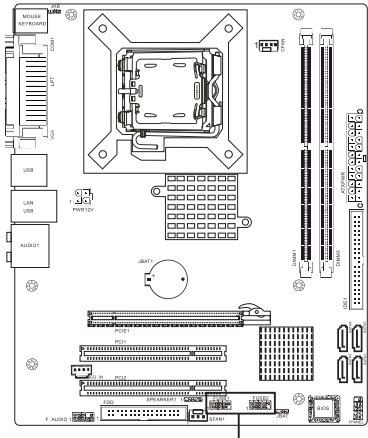


Pin	Pin Assignment	Pin	Pin Assignment
1	VCC	2	VCC
3	Data 0-	4	Data 1-
5	Data 0+	6	Data 1+
7	Ground	8	Ground
		10	NC



3.7 Front Panel Audio Connection Header

This header provides the connection to audio connector at front panel.

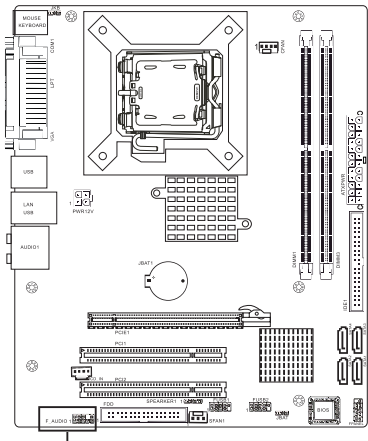

HD Audio:

Pin No.	Definition
1	MIC2_L
2	AGND
3	MIC2_R
4	NC
5	OUT_R
6	MIC2_JD
7	SENCE
8	No Pin
9	OUT_L
10	OUT_JD


AC'97 Audio:

Pin No.	Definition
1	MIC
2	GND
3	MIC Power
4	NC
5	Line Out (R)
6	NC
7	NC
8	No Pin
9	Line Out (L)
10	NC




3.8 Internal Audio Connectors

Connect CD-ROM or DVD-ROM audio out to the connector.

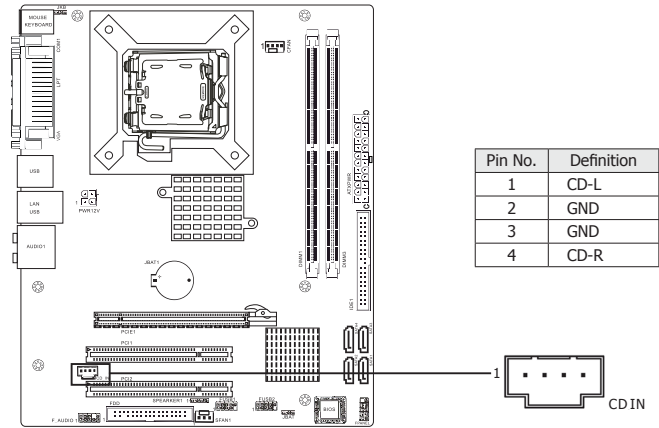

3.9 ATX Power Input Connectors

This mainboard provides two power connectors to connect power supplier.

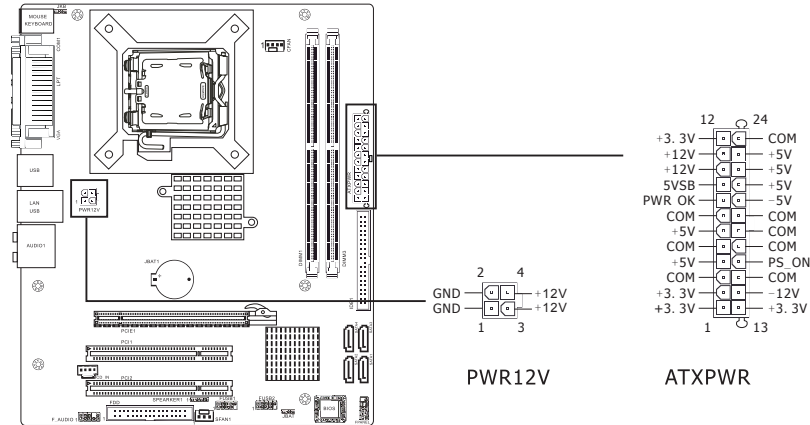

Chapter 4 BIOS Setup Utility

BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory (ROM) chip. Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of motherboard is stored in EEPROM, and is the first program to run when you turn on your computer.

BIOS performs the following functions:

1. Initializing and testing hardware in your computer (a process called "POST", for Power On Self Test).
2. Loading and running your operating system.
3. Helping your operating system and application programs manage your PC hardware by means of a set of routines called BIOS Run-Time Service.


4.1 About BIOS Setup

BIOS Setup is an interactive BIOS program that you need to run when:

1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

4.2 To Run BIOS Setup

First access BIOS setup menu by pressing key after "POST" is complete (before OS is loaded). BIOS will then display the following message:



DEL: SETUP

4.3 About CMOS

CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and check and configure the BIOS Setup for the new start.

4.4 The POST (Power On Self Test)

POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

4.5 BIOS Setup — CMOS Setup Utility



- *In order to increase system stability and performance, our engineering staff is constantly improving the BIOS menu. The BIOS setup screens and descriptions illustrated in this manual are for your reference only, and may not completely match with what you see on your screen.*
- *Do not change the BIOS parameters unless you fully understand its function.*


4.5.1 CMOS Setup Utility

After powering up the system, the BIOS message appears on the screen, the memory count begins, and then the following message appears on the screen:

Press DEL to enter SETUP

If this message disappears before you respond, restart the system by pressing <Ctrl> + <Alt>+ keys, or by pressing the Reset button on computer chassis. Only when these two methods should be fail that you restart the system by powering it off and then back on.

After pressing key, the main menu screen appears.

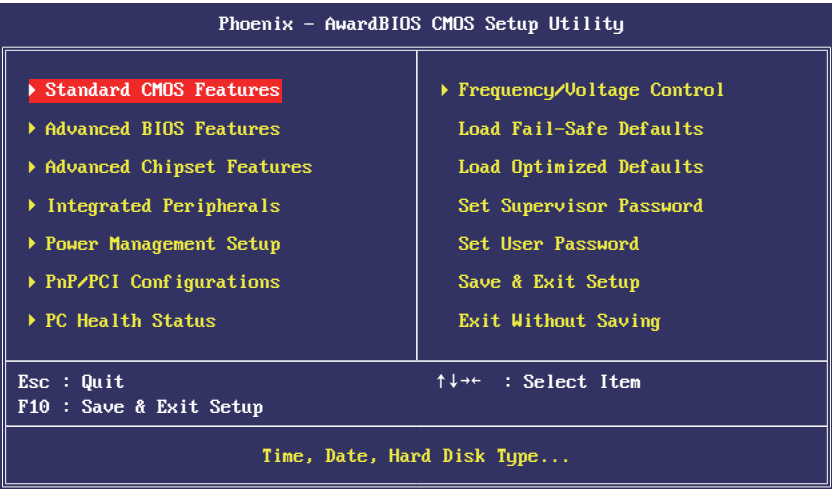

- **Standard CMOS Features**
This setup page includes all the items in standard compatible BIOS.
- **Advanced BIOS Features**
This setup page includes all the items of Award special enhanced features.
- **Advanced Chipset Features**
This setup page includes the Chipset features.
- **Integrated Peripherals**
This setup page includes all onboard peripherals.
- **Power Management Setup**
This setup page includes all the items of Green function features.
- **PnP/PCI Configurations**
This setup page includes all the configurations of PCI & PnP ISA resources.

- **PC Health Status**

This setup page is the System auto detect temperature, voltage, fan, speed.

- **Frequency/Voltage Control**

This setup page is control CPU clock and frequency ratio.

- **Load Fail-Safe Defaults**

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

- **Load Optimized Defaults**

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

- **Set Supervisor Password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

- **Set User Password**

Change, set, or disable password. It allows you to limit access to the system.

- **Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

- **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

4.5.2 Control Keys

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item.

Please check the following table for the function description of each control key.

Control Key(s)	Function Description
← / →	Move cursor left or right to select Screens
↑ / ↓	Move cursor up or down to select items
+ / - / PU / PD	To Change option for the selected items
<Enter>	To bring up the selected screen
<ESC>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<F1>	General help
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the fail-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F10>	Save all the CMOS changes

4.5.3 Standard CMOS Features

Phoenix - AwardBIOS CMOS Setup Utility		
Standard CMOS Features		
Date (mm:dd:yy)	Mon, Jun 11 2007	Item Help Menu Level ▶ Change the day, month, year and century
Time (hh:mm:ss)	13 : 19 : 44	
▶ IDE Channel 0 Master	[MAXTOR STM380215A]	
▶ IDE Channel 0 Slave	[None]	
▶ SATA Channel 1	[None]	
▶ SATA Channel 3	[None]	
▶ SATA Channel 2	[None]	
▶ SATA Channel 4	[None]	
Drive A	[1.44M, 3.5in.]	
Drive B	[None]	
Halt On	[All Errors]	
Base Memory	640K	
Extended Memory	1047552K	
Total Memory	1048576K	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Date (mm:dd:yy)**

This item sets the date you specify (usually the current date) in the format of [Month], [Date],and [Year].

- **Time (hh:mm:ss)**

This item sets the time you specify (usually the current time) in the format of [Hour], [Minute],and [Second].

- ▶ **IDE Channel 0 Master/Slave,SATA Channel 1~4**

Click <Enter> key to enter its submenu:

Phoenix - AwardBIOS CMOS Setup Utility		
IDE Channel 0 Master		
IDE HDD Auto-Detection	[Press Enter]	Item Help Menu Level ▶▶ To auto-detect the HDD's size, head... on this channel
IDE Channel 0 Master	[Auto]	
Access Mode	[Auto]	
Capacity	80 GB	
Cylinder	38309	
Head	16	
Precomp	0	
Landing Zone	38308	
Sector	255	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

IDE HDD Auto-Detection

This item allows you to detect the parameters of IDE drives by pressing <Enter> key. The parameters will be shown on the screen automatically.

IDE Channel 0 Master/Slave,SATA Channel 1~4

When set to [Auto], the BIOS will automatically check what kind of IDE or SATA hard drive you are using. If you want to define your own drive yourself, set it to [Manual] and make sure you fully understand the meaning of the parameters. Please refer to the instruction manual provided by the device's manufacturer to get the setting right.

Access Mode

This item selects the mode to access your IDE or SATA devices. Leave this item at its default [Auto] setting to detect the access mode of your HDD automatically.

Capacity

This item displays the approximate capacity of the disk drive. Usually the size is slightly greater than the size of a formatted disk given by a disk-checking program.

Cylinder

This item configures the numbers of cylinders.

Head

This item configures the numbers of read/write heads.

Precomp

This item displays the number of cylinders at which to change the write timing.

Landing Zone

This item displays the number of cylinders specified as the landing zone for the read/write heads.

Sector

This item configures the numbers of sectors per track.

• Back to Standard CMOS Features Setup Menu**• Drive A & Drive B**

This item sets the type of floppy drives (usually only Drive A) installed.

• Halt On

This item determines whether the system stops if an error is detected during system boot-up.

[All Errors]: The system-boot will stop whenever the BIOS detect a non-fatal error.

[No Errors]: The system-boot will not stop for any error detected.

[All, But Keyboard]: The system-boot will stop for all errors except a keyboard error.

[All, But Diskette]: The system-boot will stop for all errors except a diskette error.

[All, But Disk/Key]: The system-boot will stop for all errors except a diskette or keyboard error.

• Base Memory

This item displays the amount of base memory installed in the system. The value of the base memory is typically 640K for systems with 640K or more memory size installed on the mainboard.

• Extended Memory

This item displays the amount of extended memory detected during system boot-up.

• Total Memory

This item displays the total memory available in the system.

4.5.4 Advanced BIOS Features

Phoenix – AwardBIOS CMOS Setup Utility

Advanced BIOS Features

▶ CPU Feature	[Press Enter]	Item Help
▶ Hard Disk Boot Priority	[Press Enter]	
Virus Warning	[Disabled]	Menu Level ▶
CPU L1 & L2 Cache	[Enabled]	
CPU L3 Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[CDROM]	
Second Boot Device	[Hard Disk]	
Third Boot Device	[LSI20]	
Boot Other Device	[Enabled]	
Swap Floppy Drive	[Disabled]	
Boot Up Floppy Seek	[Enabled]	
Boot Up NumLock Status	[On]	
Gate A20 Option	[Fast]	
Typematic Rate Setting	[Disabled]	
× Typematic Rate (Chars/Sec)	6	
× Typematic Delay (Msec)	250	
Security Option	[Setup]	
APIC Mode	[Enabled]	
MPS Version Control For OS	[1.4]	
Singal CPU Work Mode	[Disabled]	
OS Select For DRAM > 64MB	[Non-OS2]	
Report No FDD For WIN 95	[No]	
Full Screen LOGO Show	[Enabled]	
Small Logo(EPA) Show	[Enabled]	

↑↓++:Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

▶ CPU Feature

Click <Enter> key to enter its submenu:

Phoenix – AwardBIOS CMOS Setup Utility

CPU Feature

Delay Prior to Thermal	[16 Min]	Item Help
Limit CPUID MaxVal	[Disabled]	
C1E Function	[Auto]	Menu Level ▶
Execute Disable Bit	[Enabled]	

↑↓++:Move Enter:Select +/-PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Delay Prior to Thermal

This item is CPU security technology supports, for setting CPU Throttle clocking time when the CPU temperature is too high.

Limit CUID MaxVal

When set to [Enabled], this item limits the CUID maximum value to 3, which is usually required for older OS like Windows NT4.0.

C1E Function

This item appears only for certain processors with the C1E (Enhanced Halt State) Function. When set to [Enabled], the processor will further reduce the total power consumption.

Execute Disable Bit

This item appears only for certain processors with the Execute Disable Bit (XD bit) feature. When set to [Enabled], this item allows the processor to prevent data pages from being used by malicious software to execute code and provide memory protection.

• Back to Advanced BIOS Features Setup Menu**• Hard Disk Boot Priority**

This item selects the hard disks booting priority. By pressing <Enter> key, you can enter its submenu where the hard disks detected can be selected for the booting sequence to boot up system.

• Virus Warning

Allow you to choose the VIRUS Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

• CPU L1 & L2 Cache

Enable or Disable the L1 & L2 cache which is built in the processor.

• CPU L3 Cache

The L3 cache is among the processor and memory which is built in the mainboard. L3 is slower than L1 or L2. This option for enable or disable the L3 cache.

• Quick Power On Self Test

When set to [Enabled], this item speeds up the Power On Self Test (POST) after powering on the system. The BIOS shorten or skip some check during the POST.

• First Boot Device/Second Boot Device/Third Boot Device/Boot Other Device

Select the drive to boot first, second and third in the [First Boot Device], [Second Boot Device], and [Third Boot Device] items respectively. The BIOS will boot the operating system according to the sequence of the drive selected. Set [Boot Other Device] to [Enabled] if you wish to boot from another device other than these three items.

• Swap Floppy Drive

If you have 2 floppy drives, you can change A to B, or change B to A.

• Boot Up Floppy Seek

During POST, BIOS will determine if the floppy disk drive installed if choose [Enable].

• Boot Up NumLock Status

This item defines if the keyboard Num Lock key is active when your system is started.

• Gate A20 Option

[Normal]: The A20 signal is controlled by keyboard controller or chipset hardware.
[Fast]: (default) The A20 signal is controlled by port 92 or chipset specific method.

• Typematic Rate Setting

Keystrokes repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be selected.

• Typematic Rate (Chars/Sec)

Set the number of times a second to repeat a keystroke when you hold the key down. The settings are: 6, 8, 10, 12, 15, 20, 24, and 30.

• Typematic Delay (Msec)

Set the delay time after the key is held down before it begins to repeat the keystroke. The settings are 250, 500, 750, and 1000.

- **Security Option**

This item determines when the system will prompt for password - every time the system boots or only when enters the BIOS setup.

[Setup]: The password is required only when accessing the BIOS Setup.

[System]: The password is required each time the computer boots up.



Note: Don't forget your password. If you forget the password, you will have to open the computer case and clear all information in the CMOS before you can start up the system. But by doing this, you will have to reset all previously set options.

- **APIC MODE**

This field is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance with PC2004 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQ resources for the system.

- **MPS Version Control For OS**

This item specifies which version of MPS (Multi-Processor Specification) this mainboard will use. Leave this item at its default setting.

- **Singal CPU Work Mode**

Change the Dual-Core CPU to the single core mode. This item will be enabled while using Dual-Core CPU.

- **OS Select For DRAM > 64MB**

Allow OS2 to be used with >64MB or DRAM. Settings are Non-OS/2 (default) and OS2. Set to OS/2 if using more than 64MB and running OS/2.

- **Report No FDD For WIN 95**

When set to [Yes], this item allows you to run some older operating system without floppy disk drive. Leave this item to its default setting.


- **Full Screen LOGO Show**

This item determines to show the full screen logo when booting.

- **Small Logo(EPA) Show**

EPA Logo is the sign at the top of the screen when POST. If you don't want to show this logo, please set "Disabled".

4.5.5 Advanced Chipset Features

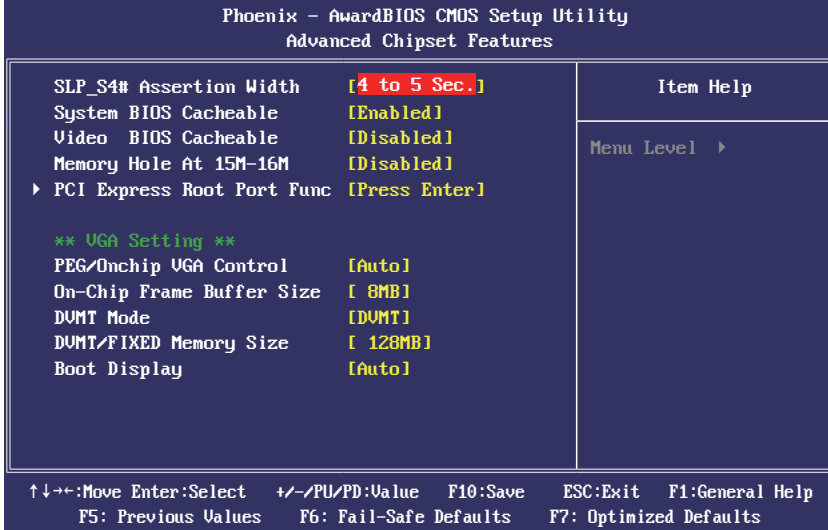

- **SLP_S4# Assertion Width**

Available options:[4 to 5 Sec],[3 to 4 Sec],[2 to 3 Sec],[1 to 2 Sec]

- **System BIOS Cacheable**

Available options: [Enabled],[Disabled]

- **Memory Hole At 15M-16M**


You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements.

- **Video BIOS Cacheable**

Select Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

- ▶ **PCI Express Root Port Func**

Click <Enter> key to enter its submenu:

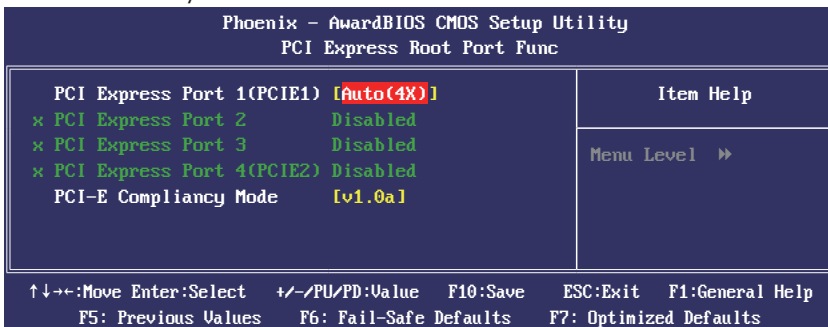

PCI Express Slot 1 ~ PCI Express Slot 4

This option enables or disables the PCI Express port function.

PCI-E Compliance Mode

This item selects the mode for PCI Express add-on card.

- **Back to Advanced Chipset Features Setup Menu**
- **PEG/Onchip VGA Control**
This option is for controlling the integrated graphics.
- **On-Chip Frame Buffer Size**
This option is for setting the VGA memory size.
- **DVMT Mode**
Available Options:[Fixed],[DVMT], [Both]. Generally, DVMT is the best choice, the system will distribute the VGA memory automatically.
- **DVMT/FIXED Memory Size**
We suggest you setting at 128M.
Available Options:[64M],[128M],[224M]
- **Boot Display**
Available options: [Auto], [CRT], [TV], [EFP]

4.5.6 Integrated Peripherals

Phoenix - AwardBIOS CMOS Setup Utility		
Integrated Peripherals		
▶ OnChip IDE Device	[Press Enter]	Item Help Menu Level ▶
▶ Onboard Device	[Press Enter]	
▶ SuperIO Device	[Press Enter]	
× KB Power ON Password	Enter	
× Hot Key Power ON	Ctrl-F1	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

▶ OnChip IDE Device

Click <Enter> key to enter its submenu:

Phoenix - AwardBIOS CMOS Setup Utility		
OnChip IDE Device		
IDE HDD Block Mode	[Enabled]	Item Help Menu Level ▶▶
IDE DMA transfer access	[Enabled]	
On-Chip Primary PCI IDE	[Enabled]	
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
*** On-Chip Serial ATA Setting***		
On-Chip Serial ATA	[Auto]	
× SATA PORT Speed Settings	Disabled	
× PATA IDE Mode	Primary	
SATA Port	P1,P3 is Secondary	
↑↓→←:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

IDE HDD Block Mode

Enable this field if your IDE hard drive supports block mode. Block mode enables BIOS to automatically detect the optimal number of block read and writes per sector that the drive can support. It also improves the speed of access to IDE devices.

IDE DMA transfer access

This item allows you to enable the transfer access of the IDE DMA then burst onto the PCI bus and nonburstable transactions do not.

On-Chip Primary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select [Enabled] to activate each channel separately.

IDE Primary Master/Slave PIO

Each IDE channel supports a master device and a slave device. These four items let you assign the kind of PIO (Programmed Input/Output) were used by the IDE devices. Choose Auto to let the system auto detect which PIO mode is best, or select a PIO mode from 0-4.

IDE Primary Master/Slave UDMA (Auto)

Each IDE channel supports a master device and a slave device. This mainboard supports UltraDMA technology, which provides faster access to IDE devices. If you install a device that supports UltraDMA, change the appropriate item on this list to Auto. You may have to install the UltraDMA driver supplied with this mainboard in order to use an UltraDMA device.

On-Chip Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select [Enabled] to activate each channel separately.

On-Chip Primary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select [Enabled] to activate each channel separately.

IDE Primary Master/Slave PIO

Each IDE channel supports a master device and a slave device. These four items let you assign the kind of PIO (Programmed Input/Output) were used by the IDE devices. Choose Auto to let the system auto detect which PIO mode is best, or select a PIO mode from 0-4.

IDE Primary Master/Slave UDMA (Auto)

Each IDE channel supports a master device and a slave device. This mainboard supports UltraDMA technology, which provides faster access to IDE devices. If you install a device that supports UltraDMA, change the appropriate item on this list to Auto. You may have to install the UltraDMA driver supplied with this mainboard in order to use an UltraDMA device.

On-Chip Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select [Enabled] to activate each channel separately.

IDE Secondary Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

IDE Secondary Master/Slave UDMA

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/33 and Ultra DMA/66, select Auto to enable BIOS support.

On-Chip Serial ATA

This option allows you choose SATA function mode(set in south bridge chipset).When set [Combined Mode],the PATA and SATA is a unit;[Enhanced Mode] can support 6 IDE devices.

SATA PORT Speed Settings

This option controls the maximum access speed allowed for the connected SATA devices, with the GEN I setting used for SATA-150 type devices and GEN II used for SATA II type devices.

PATA IDE Mode

This item determines the function mode for "IDE1"connector.

SATA Port

This item displays the variety modes for SATA Ports.

• Back to Integrated Peripherals Setup Menu**► Onboard Device**

Click <Enter> key to enter its submenu:

Phoenix - AwardBIOS CMOS Setup Utility		
Onboard Device		
USB Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	
USB Keyboard Support	[Disabled]	Menu Level »
USB Mouse Support	[Disabled]	
Azalia/AC97 Audio Select	[Auto]	
Onboard Lan Controller	[Enabled]	
BIOS Write Protect	[Disabled]	
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

USB Controller

This option enables or disables the USB controller.

USB 2.0 Controller

This option enables or disables the USB 2.0 controller.

USB Keyboard Support

This item allows you to select [BIOS] for using USB keyboard in DOS environment, or [OS] in OS environment.

USB Mouse Support

This item allows you to select [BIOS] for using USB mouse in DOS environment, or [OS] in OS environment.

Azalia/AC97 Audio Select

This options allows you choose Azalia audio or AC97 audio.

Onboard Lan Controller

This option enables or disables the LAN controller.

BIOS Write Protect

This option enables or disables the BIOS Write Protect function.

• **Back to Integrated Peripherals Setup Menu**

► **Super IO Device**

Click <Enter> key to enter its submenu:

Phoenix – AwardBIOS CMOS Setup Utility		
Super IO Device		
POWER ON Function	[BUTTON ONLY]	Item Help Menu Level ►
Onboard FDC Controller	[Enabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
× EPP Mode Select	EPP1.7	
× ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

POWER ON Function

This item selects the way you want your system to power on.

[Password]: Use a password to power on the system, select this option then press <Enter>. Enter your password. You can enter up to 5 characters. Type in exactly the same password to confirm, and then press <Enter>.

[Hot KEY]: Use any of the function keys between <Ctrl+F1> to <Ctrl+F12> to power on the system.

[Mouse Left]: Double click the mouse left button to power on the system.

[Mouse Right]: Double click the mouse right button to power on the system.

[Any KEY]: Use any keyboard keys to power on the system.

[Button Only]: Use only the power button to power on the system.

[Keyboard 98]: Use the power-on button on the "Keyboard 98" compatible keyboard to power on the system.

Onboard FDC Controller

This option enables or disables the onboard FDC controller.

Onboard Serial Port 1

This item determines which I/O addresses the onboard Serial Port controller will access.

[Auto]: The system automatically select an I/O address for the onboard Serial Port.

[3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3]: Allow you to manually select an I/O address for the onboard Serial Port.

[Disabled]: Disables the onboard Serial Port.

Onboard Parallel Port

This item specifies the I/O address used by the parallel port.

[Disabled]: This option prevents the parallel port from accessing any system resources. When the value of this option is set to [Disabled], the printer port becomes unavailable.

[378/IRQ7]: This option allows the parallel port to use [378/IRQ7] as its I/O port address. The majority of parallel ports on computer systems use IRQ7 and I/O Port 378H as the standard setting.

[278/IRQ5]: This option allows the parallel port to use [278/IRQ5] as its I/O port address.

[3BC/IRQ7]: This option allows the parallel port to use [3BC/IRQ7] as its I/O port address.

Parallel Port Mode

This item specifies the parallel port mode.

[Normal]: Allow the standard parallel port mode to be used.

[SPP]: (Standard Parallel Port) Allow bi-directional parallel port operation at normal speed.

[EPP]: (Enhanced Parallel Port) Allow bi-directional parallel port operation at maximum speed.

[ECP]: (Extended Capabilities Port) Allow bi-directional parallel port operation at a speed faster than the normal mode's data transfer rate.

[ECP+EPP]: Allow parallel port operation at ECP and EPP mode.

EPP Mode Select

This item selects the EPP mode.

ECP Mode Use DMA

This item selects the DMA channel of the parallel port.

PWRON after PWR-Fail

This item enables your computer to automatically restart or return to its last operating status after power returns from a power failure.

- **Back to Integrated Peripherals Setup Menu**
- **KB Power ON Password**
If you select [Password], this function will be activation. Press 'Enter', and input your password (1-5 characters), then press 'Enter' again.
- **Hot Key Power ON**
If you select [Hot Key], this function will be activation.
Available options: Ctr-F1~F12

4.5.7 Power Management Setup

Phoenix - AwardBIOS CMOS Setup Utility		
Power Management Setup		
ACPI Function	[Enabled]	Item Help
ACPI Suspend Type	S1(POS)	
Power Management	[User Define]	Menu Level ▶
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
MODEM Use IRQ	[3]	
Suspend Mode	[Disabled]	
HDD Power Down	[Disabled]	
Soft-Off by PWR-BTN	[Instant-Off]	
CPU THRM-Throttling	[50.0%]	
Wake-Up by PCI card	[Disabled]	
Power On by Ring	[Disabled]	
Resume by Alarm	[Disabled]	
x Date(of Month) Alarm	0	
x Time(hh:mm:ss) Alarm	0 : 0 : 0	
** Reload Global Timer Events **		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secpmdary IDE 1	[Disabled]	
FDD,COM,LPT Port	[Disabled]	
PCI PIRQ[A-D]#	[Disabled]	
↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **ACPI Function**
This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI).
- **ACPI Suspend Type**
This item allows you to select ACPI Suspend Type.
- **Power Management**
This option is for choose ACPI mode (or grade) etc.

Min Saving	If system activity is not detected for 1 hour, all devices except CPU will be shut off. If this item is selected, Doze/Standby/Suspend Mode are not available.
Max Saving	If system activity is not detected for 10 seconds, all devices except CPU will be shut off.

- **Video off Method**

V/HSYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS Support	Initial display power management signaling.(default)

- **Video Off In Suspend**

This determines the manner in which the monitor is blanked. The choices are Yes Video will off and No Video always on.

- **Suspend Type**

This item allows you to select ACPI Suspend Type.

- **MODEM Use IRQ**

This determines the IRQ in which the MODEM can use. Default option is IRQ3.

- **Suspend Mode**

If system activity is not detected for the length of time specified in this field, all devices except CPU will be shut off. Select [Disabled] can not suspend.

- **HDD Power Down**

If HDD activity is not detected for the length of time specified in this field, the HDD will be shut off.

- **Soft-Off by PWR-BTTN**

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state.

- **CPU THRM-Throttling**

This option allows you to adjust the CPU temperature. If the CPU temperature gets to the temperature you set, CPU frequency will be throttling. The range is 12.5% to 87.5%, increase by 12.5%.

- **Wake-Up by PCI card**

When set to [Enabled], the feature allows your system to be awakened from the Power saving modes through any event on PCI device.

- **Power On by Ring**

During Disabled, the system will ignore any incoming call from the modem. During Enabled, the system will boot up if there's an incoming call from modem.

- **Resume by Alarm**

The field is used to enable or disable the feature of booting up the system on a scheduled time/date.

- **Date (of Month) Alarm**

[0]: This option power-on the system everyday according to the time set in the "Time (hh:mm:ss) Alarm" item.

[1-31]: This option selects a date you would like the system to power-on. The system will power-on on the date set, and the time set in the "Time (hh:mm:ss) Alarm" item.

- **Time (hh:mm:ss) Alarm**

This item sets the time you would like the system to power-on.

- **Primary/ Secondary IDE 0/1**

When the Primary/Secondary IDE 0/1 devices are activity, whether cancel PC and IDE saving mode.

- **FDD, COM, LPT Port**

When the FDD, COM, LPT Port are activity, whether cancel the PC and IDE saving mode.

- **PCI PIRQ[A-D]#**

This option is for setting PCI PIRQ.

4.5.8 PnP PCI Configuration

Phoenix – AwardBIOS CMOS Setup Utility PnP/PCI Configurations		
Init Display First	[PCI Slot]	Item Help Menu Level ▶
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto(ESCD)]	
× IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
INT Pin 1 Assignment	[Auto]	
INT Pin 2 Assignment	[Auto]	
INT Pin 3 Assignment	[Auto]	
INT Pin 4 Assignment	[Auto]	
INT Pin 5 Assignment	[Auto]	
INT Pin 6 Assignment	[Auto]	
INT Pin 7 Assignment	[Auto]	
INT Pin 8 Assignment	[Auto]	
** PCI Express relative items **		
Maximum Payload Size	[4096]	
↑↓→←: Move Enter: Select +/~/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Init Display First**

This setting specifies which graphics card is your primary graphics adapter. We suggest you to keep the default setting.

- **Reset configuration data**

Usually you'd better keep this setting [Disabled].

- **Resource controlled by**

The plug and play bios from Award can configure all the booting devices and plug and play devices automatically.

- **IRQ Resources**

Press <Enter> to enter the sub-menu and the following screen appears. When "Resources Controlled By" sets to [Manual], this field is adjustable.

IRQ-3 assigned to PCI Device

IRQ-4 assigned to PCI Device

IRQ-5 assigned to PCI Device

IRQ-7 assigned to PCI Device

IRQ-9 assigned to PCI Device

IRQ-10 assigned to PCI Device

IRQ-11 assigned to PCI Device

IRQ-12 assigned to PCI Device

IRQ-14 assigned to PCI Device

IRQ-15 assigned to PCI Device

- **PCI/VGA Palette Snoop**

If this option sets to [Enabled], different VGA devices which work in different bus will manage the data from CPU with different palettes.

NOTE: This option can fix some issue that the VGA card is not standard. We suggest you to keep the default setting.

- **Maximum Payload Size**

This setting specifies the maximum TLP payload size for the PCI Express devices. The unit is byte.

4.5.9 PC Health Status

Phoenix - AwardBIOS CMOS Setup Utility		
PC Health Status		
Smart FAN Control	[Disabled]	Item Help
× FAN Target Temperture	30	Menu Level ▶
× FAN Min Speed	60 %	
** MainBoard Temperature Items **		
Sys Temp.	28°C/ 82°F	
CPU Temp.	30°C/ 86°F	
** MainBoard Fans Items **		
SYSFAN1.	0 RPM	
CPU FAN.	4218 RPM	
SYSFAN2.	0 RPM	
** MainBoard Voltage Items **		
CPU VCORE	1.27 V	
+ 12 V	12.09 V	
+3.3 V	3.26 V	
DIMM VCC	1.84 V	
VCC CHIP	1.49 V	
+ 5 V	5.12 V	
VBAT(V)	3.13 V	
3.3VSB	3.23 V	
Shutdown Temperature	[Disabled]	
Sensor Show On Post	[Enabled]	
↑↓←→:Move Enter:Select +/~/PU/PD:Value F10:Save ESC:Exit F1:General Help		
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

- **Smart FAN Control**

This item allows you to control the CPU fan speed. When set to [Enabled], the following items become selectable.

- **FAN Target Temperture**

This item sets the temperature mark for the "Smart Fan" function to take effect.

- **FAN Min Speed**

This item sets the speed ratio for the 4-pin CPU fan assembly connected at "CPUFAN1" fan power connector to start running.

- **All Voltages, Fans Speed and Thermal Monitoring**

These unchangeable items list the current status of the CPU and environment temperatures, fan speeds, and system power voltage.


- **Shutdown Temperature**

You can set the processor shutdown temperature here. If the processor temperature exceeds the settings value, system will force to shutdown to protect the processor not overheat.

- **Sensor Show On Post**

Show the system status when post.

4.5.10 Frequency/Voltage Control

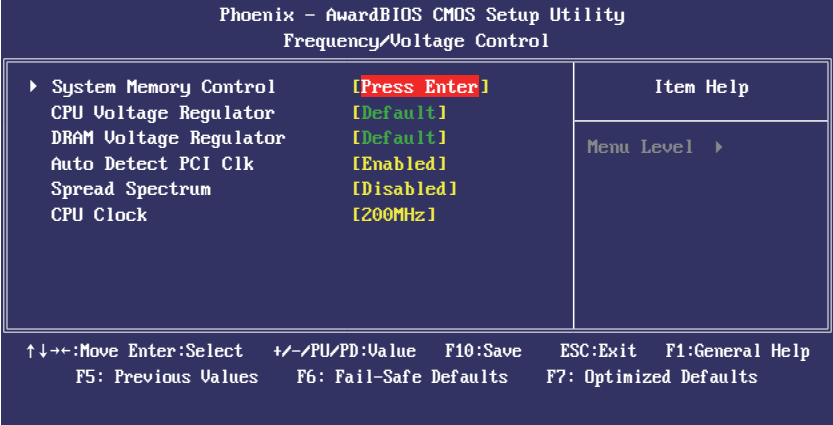

• **System Memory Control**

Click <Enter> key to enter its submenu.

You may manually set the DRAM timing parameters through its sub-items, or leave them at their default settings according to the SPD (Serial Presence Detect) data stored in the DRAM.

• **CPU Voltage Regulator**

This option is for setting the voltage of CPU.

• **DRAM Voltage Regulator**

This option is for setting the voltage of DIMM.

• **Auto Detect PCI Clk**

This setting allows auto detect PCI slots. When select [Enabled], the PCI clock will be disabled in order to reduce the EMI.

• **Spread Spectrum**

If you do not have any EMI problem, leave the setting at [Disabled] for optimal system stability and performance. But if you are plagued by EMI, select Enabled for EMI reduction.

• **CPU Clock**

This option can adjust CPU clock.



Incorrectly using these features may result in system instability or corruption. Doing a overclock or overvoltage on CPU, chipsets and memory modules may result in damages or shortened life expectancy to these components. Please be aware that the menu items are for power users only.

4.5.11 Load Fail-Safe Defaults

This option opens a dialog box that lets you install fail-safe defaults for all appropriate items in the Setup Utility. Press <Y> and the <Enter> to install the defaults. Press <N> and then <Enter> to not install the defaults. The fail-safe defaults place no great demand on the system and are generally stable. If your system is not functioning correctly, try installing the fail-safe defaults as a first step in getting your system working properly again. If you only want to install fail-safe defaults for a specific option, select and display that option, and then press <F6>.

A screenshot of a red dialog box with a double border. The text inside is "Load Fail-Safe Defaults (Y/N)? N".

Load Fail-Safe Defaults (Y/N)? N

4.5.12 Load Optimized Defaults

This option opens a dialog box that let you install optimized defaults for all appropriate items in the Setup Utility. Press <Y> and then <Enter> to install the defaults. Press <N> and then <Enter> to not install the defaults. The optimized defaults place demand on the system that may be greater than the performance level of the components, such as the CPU and the memory. You can cause fatal errors or instability if you install the optimized defaults when your hardware does not support them. If you only want to install setup defaults for a specific option, select and display that option, and then press <F7>.

A screenshot of a red dialog box with a double border. The text inside is "Load Optimized Defaults (Y/N)? N".

Load Optimized Defaults (Y/N)? N

4.5.13 Set Supervisor/User Password

When this function is selected, the following message appears at the center of the screen to assist you in creating a password.

A screenshot of a red dialog box with a double border. The text inside is "Enter Password:".

Enter Password:


Type the password, up to eight characters, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>.

A screenshot of a red dialog box with a double border. The text inside is "Confirm Password:".

Confirm Password:

You may also press <Esc> to abort the selection.

To disable password, just press <Enter> when you are prompted to enter password. A message will confirm the password being disabled. Once the password is disabled, the system will boot and you can enter BIOS Setup freely.



PASSWORD DISABLED !!!
Press any key to continue...

4.5.14 Save & Exit Setup

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility and exit the Setup Utility. When the Save and Exit dialog box appears, press <Y> to save and exit, or press <N> to return to the main menu.



SAVE to CMOS and EXIT (Y/N)? Y

4.5.15 Exit Without Saving

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Exit Without Saving dialog box appears, press <Y> to discard changes and exit, or press <N> to return to the main menu.



Quit Without Saving (Y/N)? Y

Chapter 5 Driver Installation

Check your package and there is Driver CD included. This CD consists of all drivers you need. In addition, this CD also include an auto detect software which can tell you which hardware is installed, and which drivers needed so that your system can function properly.

Insert CD into your CD-ROM drive and the menu should appear as below. If the menu does not appear, double-click My Computer / double-click CD-ROM drive or click Start / click Run / type X:\AUTORUN.EXE (assuming X is your CD-ROM drive).




(This picture is only for reference)

From the Main MENU you may make 4 selections:

1. **+Mainboard Driver installation Utility:** Click to enter the driver installation menu.
2. **+Useful Software Utility:** Click to enter the utilities installation menu.
3. **>Browse CD:** Click to browse the contents of this "Driver & Utility CD".
4. **Exit:** Click to exit this installation menu.

When you choose **Mainboard Driver installation Utility**, the drivers menu should appear as below:

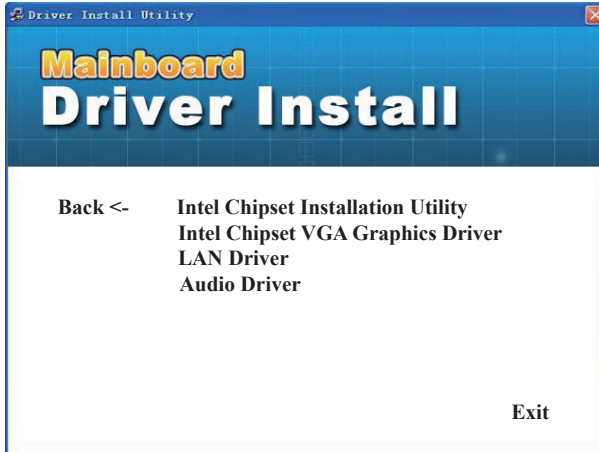

(This picture is only for reference)

From the Drivers MENU you may make 4 selections:

1. **Intel Chipset Installtion Utility**
2. **Intel Chipset VGA Graphics Driver**
3. **LAN Driver**
4. **Audio Driver**