


Palmcorder®  
PalmSight™

Panasonic®

VHS

Camcorder  
Operating Instructions

Models No. **PV-L50/PV-L60**

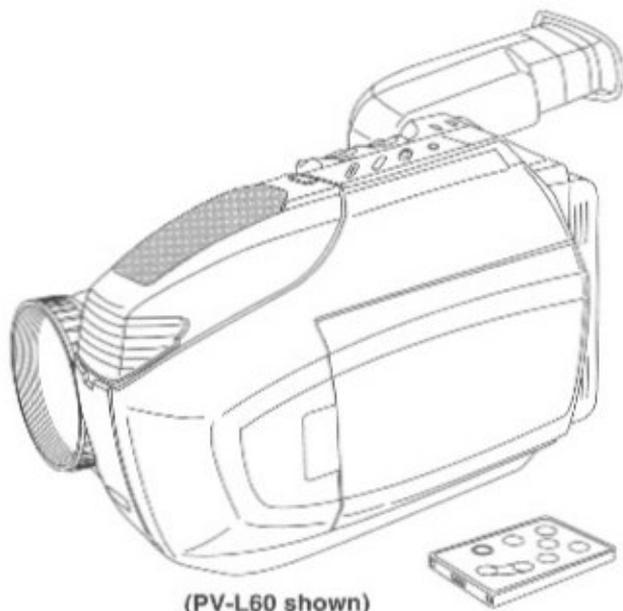

(PV-L60 shown)

150x/18x  
DIGITAL  
ZOOM

2.5"  
COLOR LCD  
MONITOR

(PV-L50)

4.0"  
COLOR LCD  
MONITOR

(PV-L60)

DIGITAL  
EIS  
SYSTEM OF 4 KHz

LED  
BUILT-IN LIGHT

MOTION  
SENSOR

PHRASE  
TITLER

Please read these instructions carefully before attempting to operate this product.  
Please save this manual.

Guía para rápida consulta en español está incluida.

For assistance, please call : 1-800-211-PANA(7262)  
or send e-mail to : [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

LSQT0267A

Getting Started

Basic Operation

Special Features

For Your Information

# Things You Should Know

## Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located on the rearside of your Camcorder. Be sure to **retain this manual** as your convenient Camcorder information source.

Date of Purchase

Dealer Purchased From

Dealer Address

Dealer Phone No.


Model No.

Serial No.

## Unpack your Camcorder

These accessories are provided in order to set up or use your Camcorder.

1 pc. AC Adaptor  
(PV-A17)  
with DC Power Cable  
(page 14)

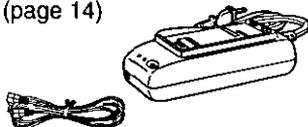


1 pc. Battery Pack (PV-BP15)  
(pages 11, 12, 13)




1 pc. Audio/Video Cable  
(LSJA0283/VJAW0032/  
VJAW0039) (pages 31, 33)



1 pc. Shoulder Strap  
(LSFC0012) (page 16)




1 pc. VHS PlayPak  
(PV-P1/VYMW0009) and  
one "AA" battery (page 32)

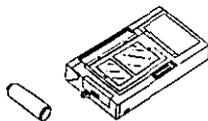


1 pc. CR2025 Clock Battery  
(VSBW0004)  
(installed in Camcorder)  
(page 50)



1 pc. Remote Control Holder  
(VGQ6893) (pages 16, 28)

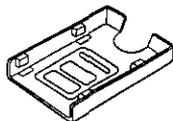

1 pc. 8-Function Remote  
(VSQW0038) with one  
CR2025 Battery. (page 28)



1 pc. Compact Video  
Cassette Tape  
(NV-TC30AH/NV-TC30H)  
(pages 15, 32) (PV-L60 only)



Remote has been loaded with  
battery. (page 50)

# Things You Should Know

## Safety Precautions

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

Your Compact VHS Camcorder is designed to record and play back in Standard Play (SP) and Super Long Play (SLP) modes. You can also play a Compact VHS Camcorder recording on your VHS VCR using the VHS PlayPak supplied.

This Camcorder is equipped with the **HQ** System to provide excellent video pictures, and is compatible with standard VHS equipment.

It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the **VHS-C** and/or **VHS** mark be used.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN			This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b>				This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

The above markings are located on the appliance bottom cover.

**FCC Warning:** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**Note:** This equipment has been tested and found to comply with Part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

# Important Safeguards

1. **Read Instructions** — All the safety and operating instructions should be read before the unit is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the unit and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and maintenance instructions should be followed.
5. **Cleaning** — Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
6. **Attachments** — Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
7. **Water and Moisture** — Do not use this video unit near water — for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. **Accessories** — Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **Ventilation** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **Power Sources** — This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.
11. **Grounding or Polarization** — This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin. The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
12. **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
13. **Outdoor Antenna Grounding** — If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
14. **Lightning** — For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

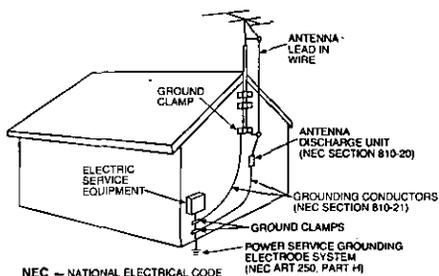

# Important Safeguards

15. **Power Lines** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Objects and Liquids** — Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. **Servicing** — Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service** — Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled onto, or objects have fallen into the video unit.
  - c. If the video unit has been exposed to rain or water.
  - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
  - e. If the video unit has been dropped or the cabinet has been damaged.
  - f. When the video unit exhibits a distinct change in performance — this indicates a need for service.
20. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. **Safety Check**— Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

## Precautions

### USE & LOCATION

- **TO AVOID SHOCK HAZARD ...** Your Camcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Camcorder if it gets wet. Your Camcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Camcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Camcorder from the power supply before cleaning.
- **DO NOT AIM YOUR CAMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS.**
- **DO NOT LEAVE THE CAMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF.**
- **DO NOT EXPOSE YOUR CAMCORDER TO EXTENDED HIGH TEMPERATURE ...** Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Camcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE ...** If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR CAMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR CAMCORDER ...** Store and handle your Camcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Camcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

### CARE

- **TO CLEAN YOUR CAMCORDER ...** Do not use strong or abrasive detergents when cleaning your Camcorder body.
- **TO PROTECT THE LENS ...** Do not touch the surface of the lens with your hand. Use a commercial camcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR CAMCORDER ...** Before handling your Camcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

# Table of Contents

## Getting Started

Things You Should Know .....	2
Important Safeguards .....	4
Precautions .....	5
Self Demo Mode .....	8
Quick Operation Guide .....	9
Supplying Power .....	11
Cassette Information .....	15
Attaching Shoulder Strap/Remote Holder .....	16
MENU Mode .....	17
Setting the Clock .....	19
Built-in Auto Light .....	22

## Basic Operation

Camera Recording .....	23
8-Function Remote Control .....	28
Playing Back Recordings .....	29
Copying your Tapes (dubbing) .....	33

## Special Features

Four-Speed Power Zoom .....	34
Backlight .....	34
Focus .....	35
High Speed Shutter .....	36
Tally Lamp .....	37
Auto Fade .....	38
Color Digital Fade .....	39
Digital Zoom .....	40
Digital Electronic Image Stabilization (E.I.S.) .....	41
Security Mode .....	42
Intelligent Titler .....	43

## For Your Information

Viewfinder/LCD Monitor Indications .....	46
Operation Notes .....	49
Replacing Clock/Remote Battery .....	50
Palmcorder Accessory System .....	51
Palmcorder Accessory Order Form .....	52
Specifications .....	53
Request for Service Notice .....	53
Before Requesting Service .....	54
Warranty .....	55
Index .....	57
Spanish Quick Use Guide/Guía Para Uso Rápido .....	59

# Table of Contents

This operating instruction book is designed for use with models **PV-L50** and **PV-L60**. Illustrations in this manual show the **PV-L60**. Features may vary, so please read carefully.

Getting Started

## Differences between models

Model Number	PV-L50	PV-L60
LCD Monitor	63.5 mm (2.5 inch) Liquid Crystal Display	101.6 mm (4.0 inch) Liquid Crystal Display
Compact Video Cassette Tape	Not included	Included

# Self Demo Mode

Self Demo mode is on when the screen at the right appears. Follow the steps below to turn it off.

## Before you begin...


- Connect Camcorder to power source.

EVF or LCD Monitor

## Panasonic

ITS TAPES PLAY  
IN YOUR VCR  
YES, IT'S VHS!

18x LENS / 150x D.ZOOM  
DIGITAL STABILIZATION  
FULL-SIZE HEAD SYSTEM  
AUTO/PHRASE TITLER

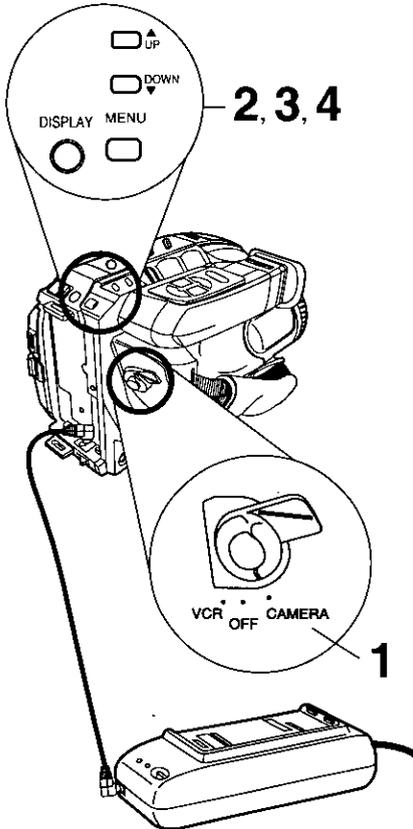

- 1 Set POWER to CAMERA.
- 2 Press MENU for MENU mode.  
Press UP ▲ or DOWN ▼ to select **SELF DEMO**.

PAGE 2/2

▲	DISP	: ON
▲	SELF DEMO	: OFF
▲	SECURITY	: OFF
▲	VIDEO EFFECTS	: FADE
▲		: BLACK
▲	SELECT :	PUSH ▲/▼ KEY
▲	SET :	PUSH DISP KEY
▲	END :	PUSH MENU KEY

- 3 Press DISPLAY to select OFF.
- 4 Press MENU to exit.

### Note:

- Self Demo stops automatically if battery is attached (page 12) and cassette tape is inserted (page 15).
- Inserting a tape alone (or attaching a partially charged battery) only temporarily stops Self Demo.
- Self Demo stops for 30 seconds when a function key other than Record/Pause Tape Speed Selector, Light, Play, Rewind search, Fast forward search, Stop, and Still is pressed.

### To turn Self Demo back on.


- Set to SELF DEMO : ON in MENU screen.

# Quick Operation Guide

## Charging the Battery Pack

Charge Battery Pack fully before operation (page 11).


- 2** Insert Battery.  
CHARGE Lamp lights and then goes out when charging is done.

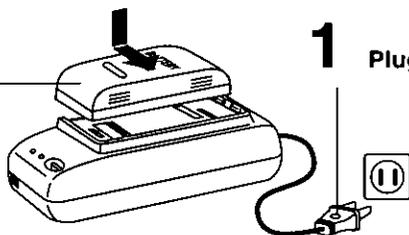

- 1** Plug in AC Adaptor.

## Insert Cassette

- 2** Slide TAPE EJECT to open door.

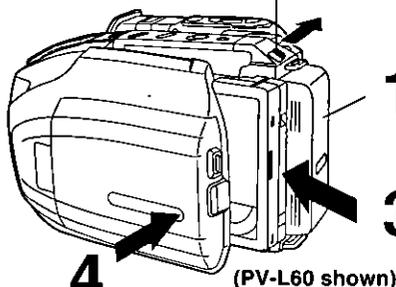


- 1** Attach fully charged Battery (pages 11, 12).

- 3** Insert cassette (page 15).

- 4** Press here to close door.

## Camera Recording

When the LCD monitor is open, the EVF automatically turns OFF (page 24).

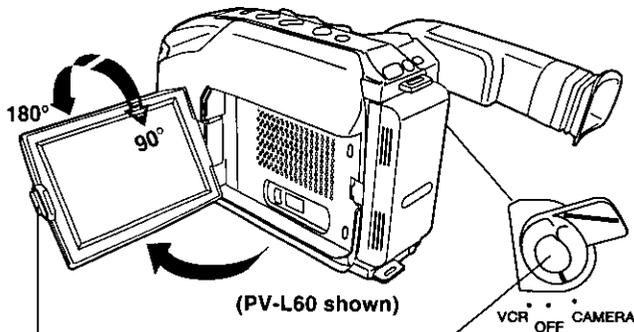

- 1** Press LCD-OPEN to unlock the LCD monitor. Swing it fully open and adjust the angle.

- 2** Set POWER to CAMERA.

- 3** Press RECORD/PAUSE to start recording.  
Press RECORD/PAUSE again to pause recording.

# Quick Operation Guide


## Playback using the LCD Monitor

When the LCD monitor is open, the EVF automatically turns OFF (page 29).


### Before you begin...

- Charge Battery Pack fully before operation (page 11).


- 1** Press **LCD-OPEN** to unlock the LCD monitor. Swing it fully open and adjust the angle.

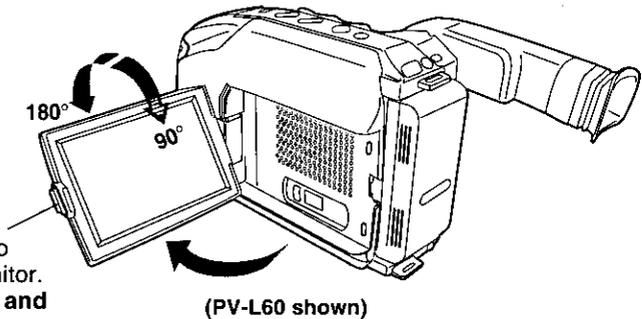

- 2** Set **POWER** to **VCR**.

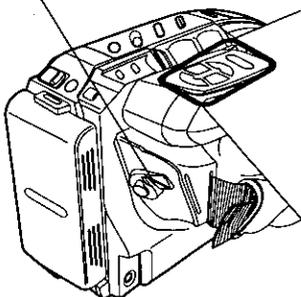

- 3** Press **REWIND/SEARCH** to rewind tape.

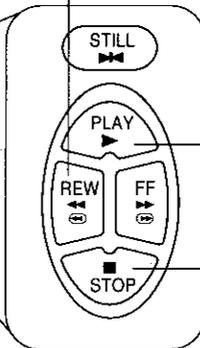


- 4** Press **PLAY** to start playback.
- 5** Press **STOP** to stop playback.

# Supplying Power


## Charging the Battery Pack

Charge Battery Pack fully before use.

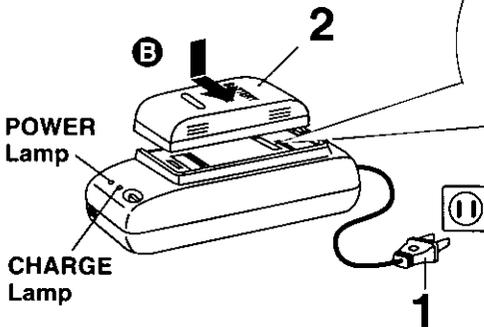

**1** Plug in AC Adaptor.  
POWER Lamp lights.

**2** Insert Battery.  
**A** Align right side of Battery with line on AC Adaptor.  
**B** Press Battery down and slide in direction of arrow.  
CHARGE Lamp lights and then goes out when charging is done. (approx. 1 hour)

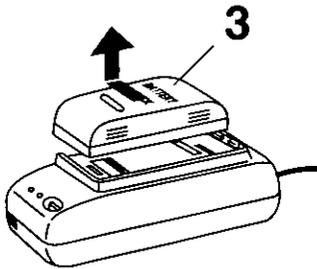

**3** Remove Battery.  
Slide Battery out and off.

### Battery Charging Confirmation Marker



Use this marker as a reminder to yourself when the battery is fully charged or in need of a charge. This marker performs no function and is for your reference only.


- Battery life gradually decreases after repeated use and recharging. If operation time becomes very short even after a sufficient charge, discard Battery properly (page 12).

**Note:**  
After recharging 5 times, use BATTERY REFRESH feature as explained on page 12.

# Supplying Power

## Using the Battery Pack

A fully charged Battery provides a maximum of about 1 hour 10 minutes of continuous use (LCD monitor off) or about 55 minutes (LCD monitor on). Actual time may vary due to operating conditions. Using the Built-in Light decreases operating time.

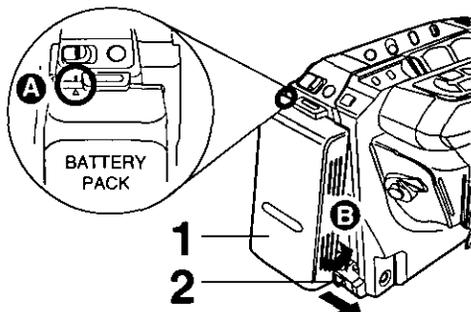


- 1 Attach Battery**
  - A** Align Battery with top of mounting surface.
  - B** Press and snap into place.
- 2 Remove Battery**

While sliding **BATTERY RELEASE**, remove Battery.

## Battery Refresh

This feature completely discharges Battery before recharging begins. Use after about every 5 charges for optimum Battery performance.


CHARGE Lamp

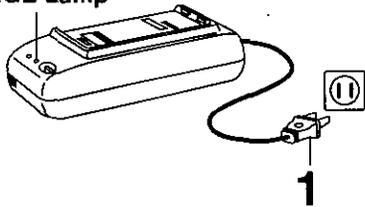

- 1 Plug in AC Adaptor.**
  - POWER Lamp stays on as long as Adaptor is plugged in.
- 2 Place Battery into Adaptor.**
- 3 Press BATTERY REFRESH.**

The CHARGE Lamp flashes during discharge then stays lit until charging is complete.

If **BATTERY REFRESH** is pressed by mistake, remove Battery from Adaptor and reinsert it for normal charging.

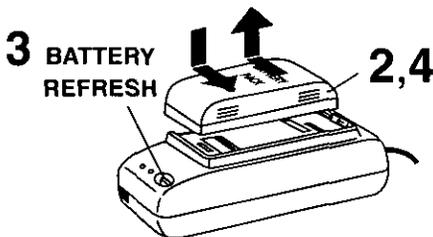

- 4 Remove Battery.**
  - Charging takes about 5 hours when Battery Refresh is used.
  - Battery will not operate in extremely high temperatures.

## Battery Care

### Caution:

- Charge only with specified charger.
- Battery can be charged within a temperature range of 10 °C (50 °F) and 35 °C (95 °F).
- Battery is normally warm after charging or just after use.
- Do not use an insufficiently charged or worn-out Battery.

### Safety precautions:

- Do not get Battery near, or dispose of in fire.
- Do not directly connect (short circuit) the positive (+) and negative (-) terminals.
- Never attempt to disassemble or reassemble Battery.

### To avoid Battery damage:

- Do not drop or jar Battery.
- Use Battery with specified units only.
- If Battery is used in extremely high temperatures, a safety device will automatically prevent operation.

### To prolong Battery life:

- While not in use, remove Battery from the Camcorder and AC Adaptor and store in a cool, dark, dry place.
- Keep Battery terminals clean.

## U.S.A. CONSUMERS:


### ATTENTION:

The product you have purchased is powered by a nickel cadmium battery which is recyclable. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.



# Supplying Power

## AC Adaptor

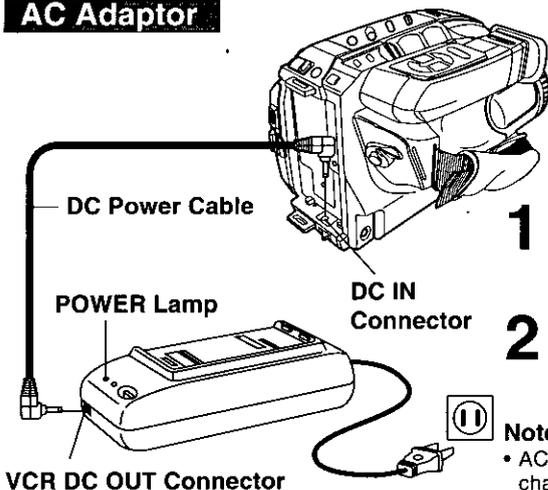

**1** Connect **AC Adaptor VCR DC OUT** to **Camcorder DC IN** with supplied DC Power Cable.

**2** Plug in AC Adaptor. POWER Lamp lights.


### Note:

- AC Adaptor cannot power Camcorder while charging Battery.
- When not in use, unplug AC Adaptor from AC outlet. (Adaptor uses 1.2 W of electricity while plugged in.)

### CAUTION:

This unit will operate on 110/120/220/240 V AC. An AC plug adaptor may be required for voltages other than 120 V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070) in an area which has special AC outlets.

## Car Battery Cord (Optional)

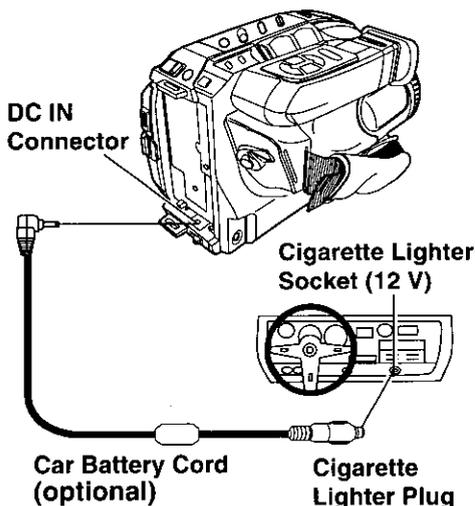

**1** Connect **PV-C16 Car Battery Cord (optional)** to **Camcorder DC IN**.

**2** **A** Start engine first.  
**B** Plug Car Battery Cord into Cigarette lighter socket.


- If Car Battery cord fuse needs replacing, use exact current rating (in amps).

### Note:

- This cord only works in vehicles equipped with **DC 12 V (negative ground)** battery. Check with your car/truck dealer. Use only specified car battery cord.
- To avoid blowing the car battery cord fuse, do step 2 in the proper order.
- Running vehicles must be well ventilated.
- When not in use, disconnect cigarette lighter plug.

# Cassette Information

## Cassette Insertion/Removal

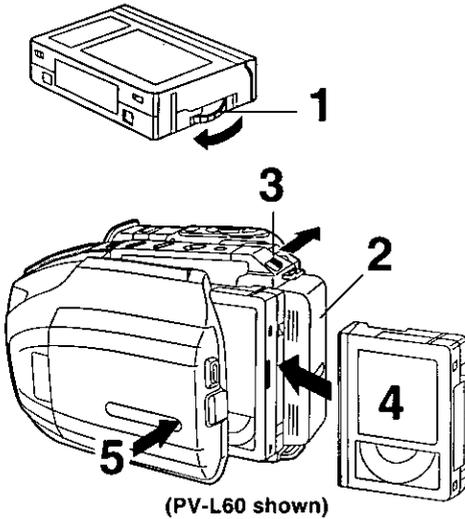

- 1 Turn **Tape Wheel** in direction of arrow until there is no slack.
  - 2 Attach **Battery** (page 12).
  - 3 Slide **TAPE EJECT** to open door.
  - 4 Insert **cassette** as shown.
  - 5 Press here to close door.
- To remove the cassette, slide the **TAPE EJECT** switch.


## Record/Playback Time

Use tapes with the **VIISG** mark in this unit.

Tape Speed Selector Position	Cassette type		
	TC-20	TC-30	TC-40
<b>SP</b> (Standard Play)	20 minutes	30 minutes	40 minutes
<b>SLP</b> (Super Long Play)	1 hour	1 hour 30 minutes	2 hours


- SLP playback may contain more picture noise.

## TAPE SPEED Selector

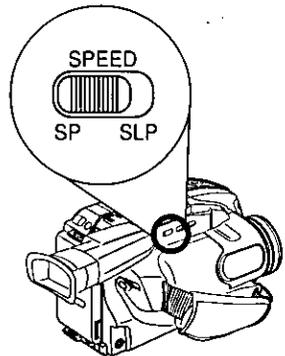

## Erase Protection Tab




A record tab ensures recordings are not accidentally erased.

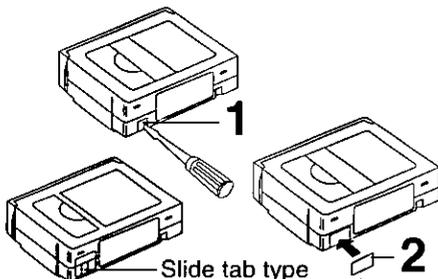

- 1 To prevent erasure, **break off tab** with screwdriver. (Or, slide tab open.)
- 2 To record again, **cover hole** with adhesive tape. (Or, slide tab closed.)

# Attaching Shoulder Strap/Remote Holder

Remove Battery Pack before doing steps.

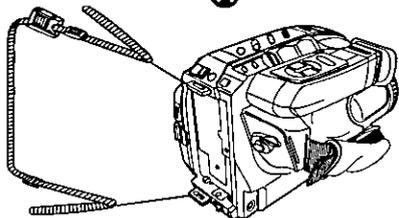


min. 25.4mm (1 inch)




- 1 Undo strap ends from buckles.
- 2 Remove one buckle.
- 3 **A** Thread strap (with no buckle) through Remote Holder so it faces outward.  
**B** Replace buckle.
- 4 Thread strap ends through Strap Rings on Camcorder.
- 5 Re-insert the strap ends into buckles.
- 6 Insert Remote into Holder when not in use.

## Adjusting the Length

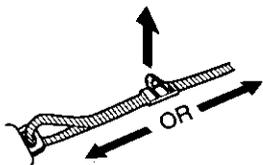

- 1 Pull a loop of strap from buckle.
- 2 Pull strap tight to shorten or lengthen.


## Hand Strap

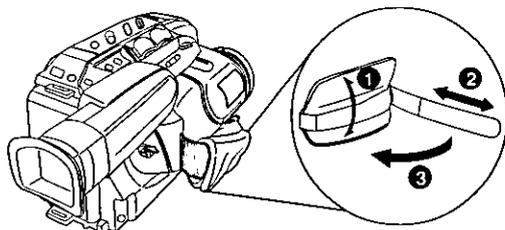

Adjust Hand Strap length to fit your hand as shown.

# MENU Mode

## Using MENU Mode

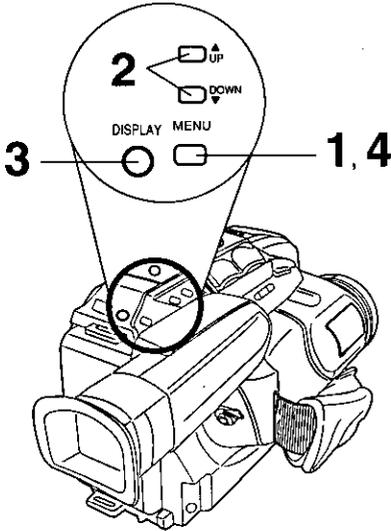

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

**1** Press MENU for MENU mode.

```
... MENU ... PAGE 1/2
PROGRAMMED REC
TITLE      : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH W/A KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
```

CAMERA MODE

```
... MENU ...
CLOCK SET
DISPLAY   : ON
SELECT : PUSH W/A KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
```

VCR MODE

**2** Press UP ▲ or DOWN ▼ to highlight a menu item.  
Select a desired item.

**3** Press DISPLAY to set selection.



**4** Press MENU to exit.

### Note:

- The Menu mode is canceled if UP/DOWN(▲/▼), DISPLAY, or MENU are not pressed within 5 minutes when Self Demo mode is off.
- The Menu mode is canceled if UP/DOWN(▲/▼), DISPLAY, or MENU are not pressed within 30 seconds when Self Demo mode is on.


# MENU Mode

## MENU Mode Screen (CAMERA MODE)

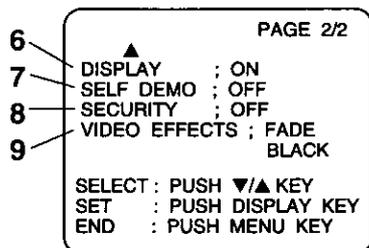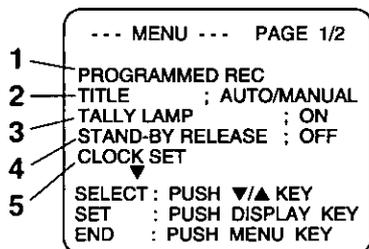

- 1 **PROGRAMMED REC** (page 27).  
Camcorder starts and stops recording at a preset time.
- 2 **TITLE** (pages 43~45).  
AUTO/MANUAL : 16 items  
PHRASE : 10 items
- 3 **TALLY LAMP** (page 37).  
ON: lamp lights during recording.
- 4 **STAND-BY RELEASE** (page 25).  
ON: enables quick resumption of recording from Stand-by mode.
- 5 **CLOCK SET** (pages 19~21).  
Select to set clock.
- 6 **DISPLAY** (page 46)  
ON: On-screen Display (OSD) screens are displayed.
- 7 **SELF DEMO** (page 8)  
ON: SELF DEMO screen is displayed.
- 8 **SECURITY** (page 42).  
ON: enables Motion Security recording.
- 9 **VIDEO EFFECTS** (pages 38, 39).  
AUTO FADE : BLACK or WHITE  
DIGITAL FADE : TYPE → 7 types  
COLOR → 8 colors

## MENU Mode Screen (VCR MODE)

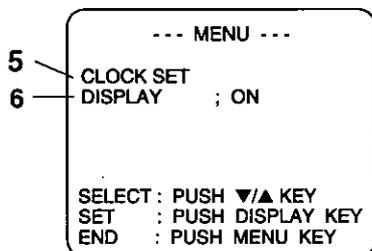

# Setting the Clock

Set the following items in order: Time Zone, Daylight Saving Time, Date and Time.

## Setting the Time Zone


The Camcorder is preset to Eastern time. To change time zone, do steps at right.

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

### Note:

- Clock may lose or gain up to 2 minutes per month. To adjust, see page 21.

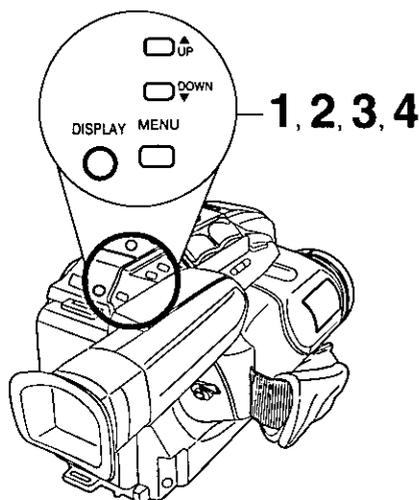

- 1 Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **CLOCK SET**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE      : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

CAMERA MODE

```

--- MENU ---
CLOCK SET
DISPLAY : ON
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

VCR MODE

- 2 Press **DISPLAY** for CLOCK SET menu. Press **UP ▲** or **DOWN ▼** to select **TIME ZONE**.

```

--- CLOCK SET ---
TIME ZONE : EASTERN
D. S. T.   : AUTO
DATE / TIME : 12:00:00AM
              JAN 1 2000
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

- 3 Press **DISPLAY** for SELECT TIME ZONE menu. Press **UP ▲** or **DOWN ▼** to select local time zone.


```

--- SELECT TIME ZONE ---
EASTERN   PACIFIC
ALASKA     ALASKA
CENTRAL    HAWAII
MOUNTAIN   SAMOA
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
    
```

- 4 Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.

- When traveling, repeat these steps and select one of the 8 listed time zones to set the clock to local time.

### Time Zone chart

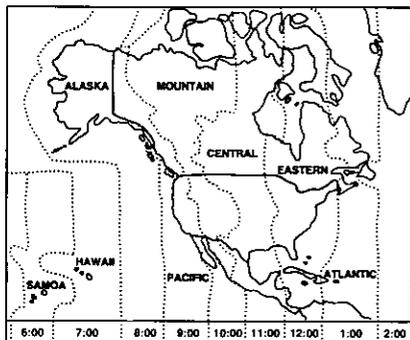

### Note:


When traveling outside the listed time zones, set clock to local time manually (page 21).

# Setting the Clock

## Auto Daylight Saving Time

Clock will auto-adjust to daylight-saving time (DST).

The Camcorder is preset to DST: **AUTO**. If DST is not observed in your area, set to **OFF** by doing the following steps.

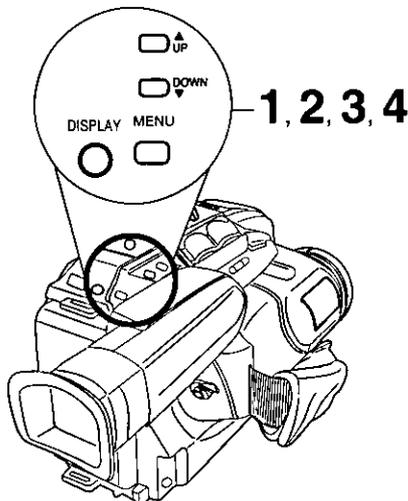

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

### Note:

- Auto DST does not function if time zone is set to Hawaii or Samoa (page 19).

# 1

Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **CLOCK SET**.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH  $\nabla/\blacktriangle$  KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

CAMERA MODE

```
--- MENU ---
CLOCK SET
DISPLAY : ON
SELECT : PUSH  $\nabla/\blacktriangle$  KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

VCR MODE

# 2

Press **DISPLAY** for CLOCK SET menu. Press **UP ▲** or **DOWN ▼** to select **D.S.T.**

```
--- CLOCK SET ---
TIME ZON : EASTERN
D.S.T. : AUTO
DATE/TIME : 12:00:00AM
JAN 1 2000
SELECT : PUSH  $\nabla/\blacktriangle$  KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

# 3

Press **DISPLAY** for DAYLIGHT SAVING TIME menu. Press **UP ▲** or **DOWN ▼** to select OFF or AUTO.


```
-- DAYLIGHT SAVING TIME --
AUTO
OFF
SELECT : PUSH  $\nabla/\blacktriangle$  KEY
SET : PUSH DISPLAY KEY
```

# 4

Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.


### Spring (First Sunday in April):

DST: AUTO = ahead one hour.

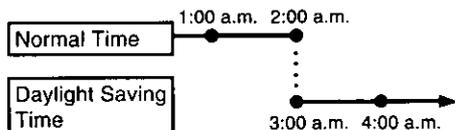

### Autumn (Last Sunday in October):


DST: AUTO = back one hour.

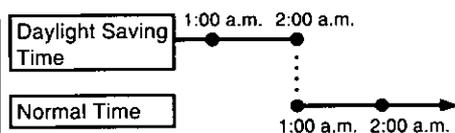

# Setting the Clock

## Setting Date and Time

Date and time including leap year are calculated up to DEC 31, 2098.

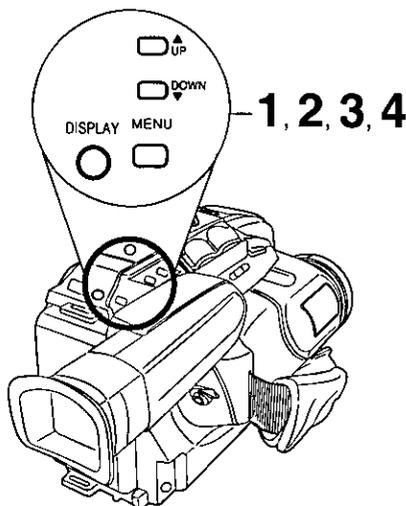

Getting Started

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA or VCR.

- 1** Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **CLOCK SET**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE      : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
  
```

CAMERA MODE

```

--- MENU ---
CLOCK SET
DISPLAY  : ON
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
  
```

VCR MODE

- 2** Press **DISPLAY** for **CLOCK SET** menu. Press **UP ▲** or **DOWN ▼** to select **DATE/TIME**.

```

--- CLOCK SET ---
TIME ZON  : EASTERN
D.S.T.    : AUTO
DATE/TIME : 12:00:00AM
           : JAN 1 2000
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
  
```

- 3** Press **DISPLAY** for **DATE/TIME** menu.

```


--- DATE/TIME SETTING ---
-12:00:00AM-
JAN 1 2000
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
  
```

- 4** Press or hold down **UP ▲** or **DOWN ▼** to select hour, then press **DISPLAY** to fix.

Repeat for minute, month, day, and year. Clock starts when year is entered and **DISPLAY** is pressed.

Press **MENU** twice to exit.


### EXAMPLE

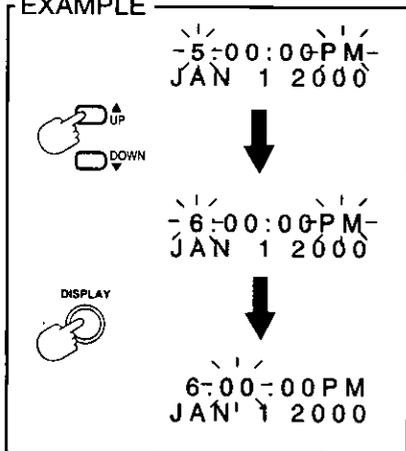


# Built-in Auto Light

## Using the Light

For recording in dim lighting.

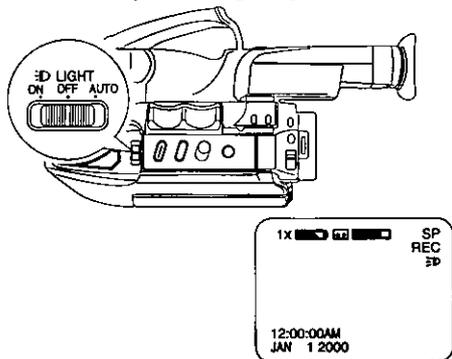

## Replacing the Bulb

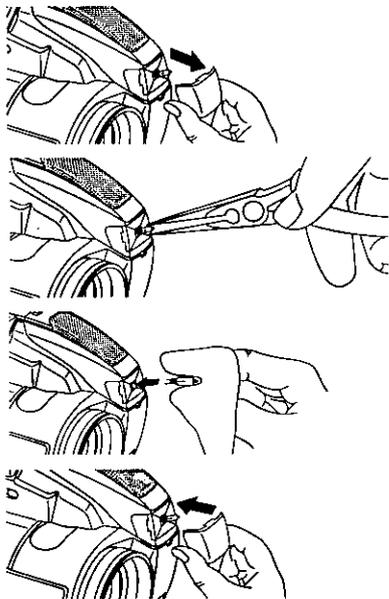

## DANGER:

Use only replacement bulb (PART NO. VLLW0015) supplied by Panasonic to reduce risk of fire.

Handle new bulb with cloth or tissue as skin oils will decrease bulb life.

Remove lens cover and allow bulb to cool before replacing to avoid possible burn hazard.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

## Set LIGHT to AUTO.

Light turns on/off automatically according to lighting conditions.

Or, set LIGHT to ON/OFF manually.

☞ appears in EVF or LCD Monitor when Light is on.

## Caution:

Light becomes hot. Never cover Light while on.

## Before you begin...

- Order Part No. VULS0001 (VLLW0015 and cushions) for replacement bulb unit.
- Set POWER to OFF.

- 1 Press in on both sides of lens cover and pull straight out and off.
- 2 Using Tweezers or needle-nose pliers, carefully remove bulb.
  - Take unit to service center if you need assistance.
- 3 Replace bulb using a clean cloth or tissue.
- 4 Replace lens cover.

## Note:


- Using Light reduces battery operating time.
- Provide proper ventilation when using Light extensively in hot environment.
- Using Light when the Camcorder is powered by a car battery may shorten bulb life.
- Set Light to OFF when not in use.
- Handle bulb gently. Excessive force may cause bulb to crack.

# Camera Recording

## Simple Recording

### Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 15).

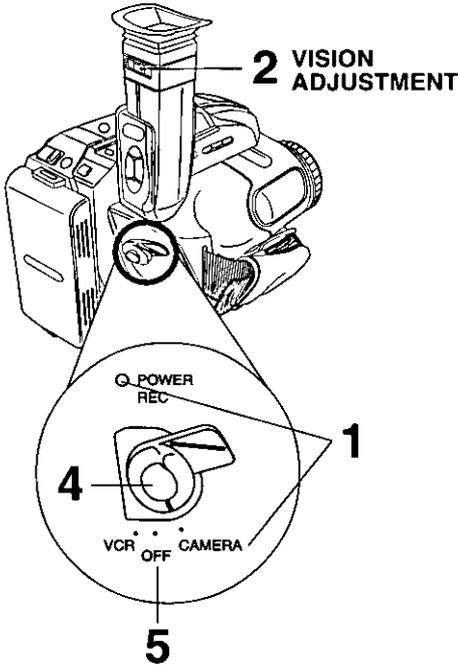


### 1 Set **POWER** to **CAMERA**.

Lens Cover opens.  
Power lamp lights.

**EVF or  
LCD Monitor**

- Be sure **POWER** is fully turned to **CAMERA** position.

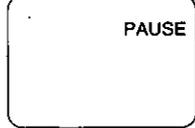

Record/Pause mode.

### 2 Look into **EVF** and adjust **VISION ADJUSTMENT** to your eyesight.

### 3 Slide **TAPE SPEED** to **SP** or **SLP** (page 15).

### 4 Press **RECORD/PAUSE** to start or pause recording. Tally lamp lights if set to **ON** (page 37).




### 5 Set **POWER** to **OFF** when finished.

- To remove cassette, slide **TAPE EJECT** in Record/Pause mode. (page 15).

### Note:


- When Camcorder is aimed at excessively bright objects, or bright lights, a vertical bar may appear in the picture. This is normal for the CCD pick-up. Try to avoid this when possible.

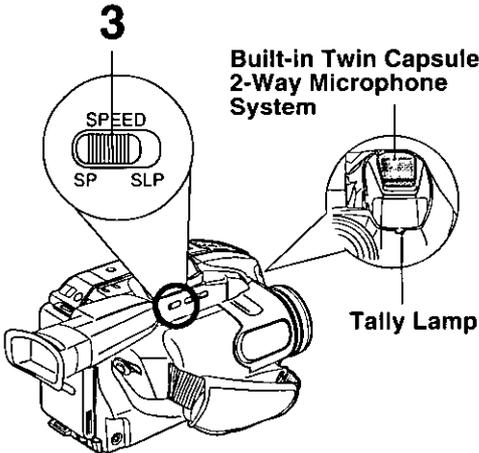

# Camera Recording

## Using the LCD Monitor

View recording scene on the LCD (Liquid Crystal Display) monitor.

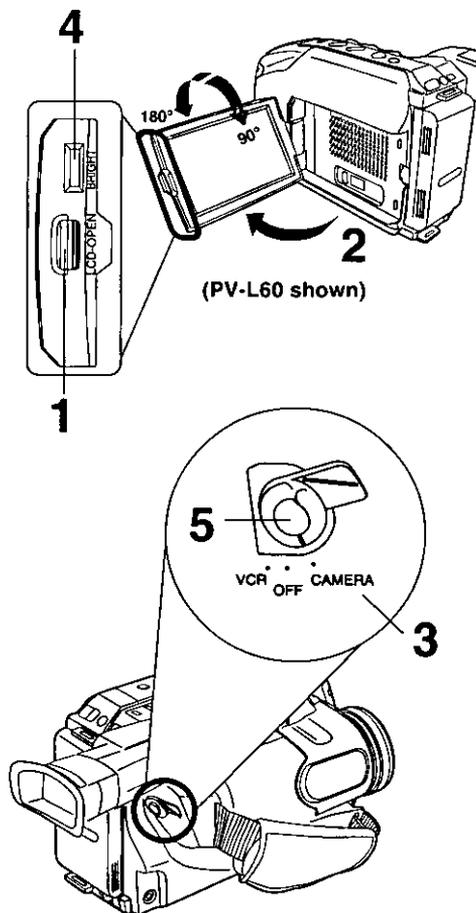

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 15).

**1** Press **LCD-OPEN** to unlock LCD monitor.

**2** Swing LCD monitor fully open and adjust viewing angle.

### Caution:

Rotating partially open LCD monitor may block cassette door and damage Camcorder body.

**3** Set **POWER** to **CAMERA**.

- EVF or LCD monitor turns on/off by the POWER switch.
- EVF shuts off when LCD monitor is opened and turns back on when LCD is closed.
- Both EVF and LCD monitor turn on when LCD is at 180° (see above left).  
This allows both you and the subject to view the recording.

**4** Turn **BRIGHT** control to adjust LCD monitor brightness level.

**5** Press **RECORD/PAUSE** to start recording (page 23).


### Note:

- Using LCD monitor reduces battery operation time.
- Return LCD monitor to locked position when not in use.

# Camera Recording

## Stand-by Quick Release


If left in RECORD/PAUSE mode for 5 minutes, Camcorder switches to Stand-by mode to conserve battery. When set to ON, Stand-by Quick Release lets you resume recording by pressing RECORD/PAUSE two times. New camcorders will default to OFF.

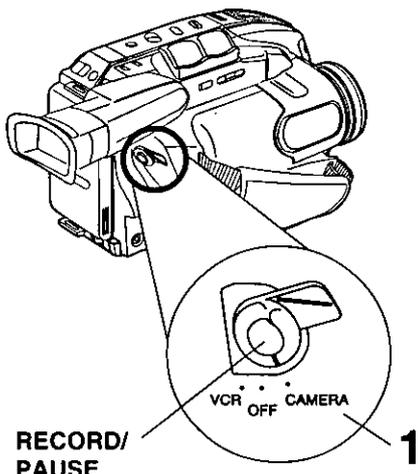

### Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 15).

- 1** Set POWER to CAMERA.
- 2** Press MENU for MENU mode. Press UP ▲ or DOWN ▼ to select STAND-BY RELEASE.

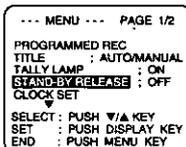


- 3** Press DISPLAY to select ON/OFF.

**ON:** From Stand-by mode, press RECORD/PAUSE two times to resume recording.

**OFF:** From Stand-by mode, set POWER to OFF, then to CAMERA. Press RECORD/PAUSE to record.


- 4** Press MENU to exit.

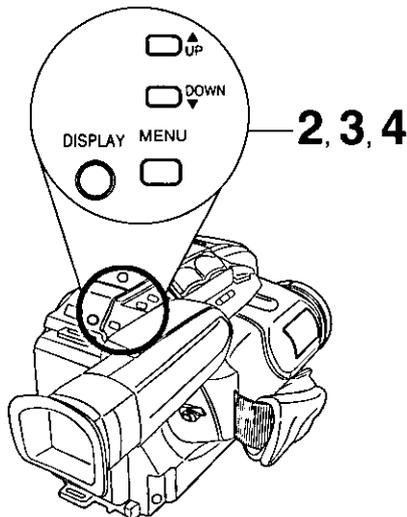

# Camera Recording

## Easy Edit Stand-by

For a smooth transition between scenes if recording is stopped, and then started within 24 hours.

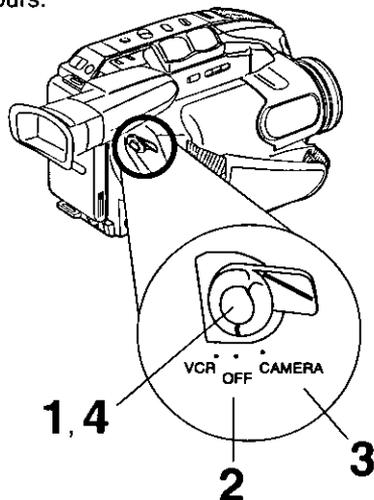

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 15).


- 1** Press **RECORD/PAUSE** to stop recording.
- 2** Set **POWER** to **OFF** and leave cassette in Camcorder.
- 3** To resume recording, set **POWER** to **CAMERA**.
- 4** Press **RECORD/PAUSE** to resume recording.

## Note:

- Use Manual Easy Edit (below) if more than 24 hours before recording is resumed.

## Manual Easy Editing

For proper continuity when taping from Stop mode or after attaching a new Battery.

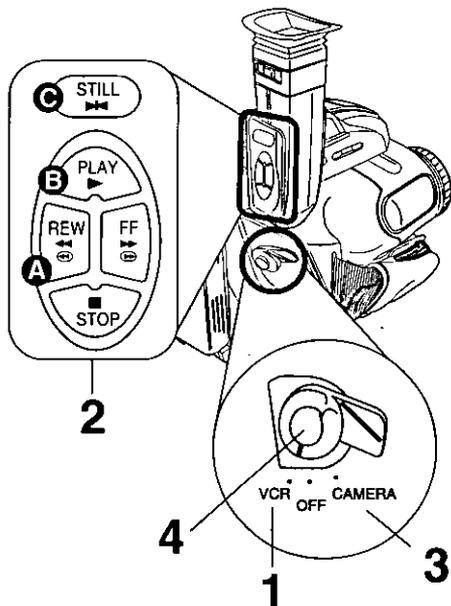

## Before you begin...


- Connect Camcorder to power source.
- Insert cassette with record tab (page 15).

- 1** Set **POWER** to **VCR**.
- 2** **A** Press **REWIND/SEARCH** to rewind a few seconds of tape.  
**B** Press **PLAY** to review recording.  
**C** Press **STILL** where you want to continue recording.
- 3** Set **POWER** to **CAMERA**.
- 4** Press **RECORD/PAUSE** to resume recording.

# Camera Recording

## Programmed Recording

Set a recording start and stop time. Or, set a 5 or 10 second interval recording to be done each minute.

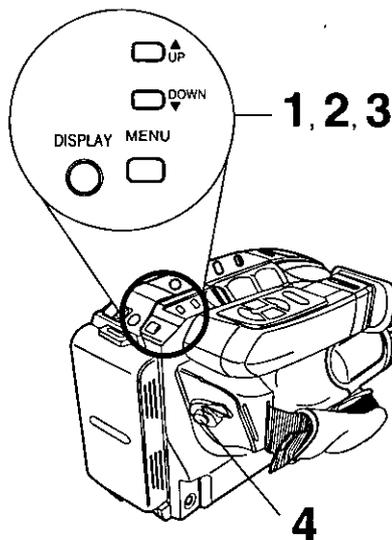

Before you begin...

- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 15).
- Set POWER to CAMERA.

- 1** Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **PROGRAMMED REC.**

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE      : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▲/▼ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
  
```

- 2** Press **DISPLAY**. (Current time is displayed.) Each additional press of **DISPLAY** increases start time by 30 minutes.

```

START : 10:20PM
REC TIME : 10MIN.

SELECT : PUSH ▲/▼ KEY
SET    : PUSH DISPLAY KEY
START  : PUSH RECORD KEY
CANCEL: PUSH MENU KEY

10:20:00PM
  
```

- 3** Press **DOWN ▼** to select **REC TIME**. Press **DISPLAY** repeatedly to select one of the options shown at the left.

```

START : 10:20PM
REC TIME : 10MIN.

SELECT : PUSH ▲/▼ KEY
SET    : PUSH DISPLAY KEY
START  : PUSH RECORD KEY
CANCEL: PUSH MENU KEY

10:20:00PM
  
```

To cancel the setup, press **MENU** twice.

- 4** Press **RECORD/PAUSE** to place Camcorder in stand-by mode.

```

STAND-BY
START : 10:20PM
REC TIME : 10MIN.

10:20:00PM
JUN 1 2000
  
```

← 10MIN. → 20MIN. → 30MIN. → TO TAPE END

INTERVAL \*2      INTERVAL \*1  
10 SEC/MIN.      5 SEC/MIN.

\*1 Interval 5 SEC/MIN:  
Record 5 seconds each minute.

\*2 Interval 10 SEC/MIN:  
Record 10 seconds each minute.


### Note:

- Start time may not be set over 24 hours from current time.
- Camcorder shuts off at tape end, or 12 hours after Interval Recording starts.
- To cancel, set **POWER** to **OFF**.

Recording will be done as scheduled.

# 8-Function Remote Control


## Remote Control Holder

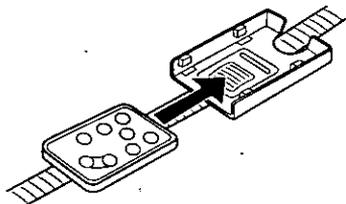

When not in use, slide remote into its holder on the shoulder strap (page 16).

## Remote Control Operation

Operate Camcorder's main function up to about 5 m (16 feet) away.  
Aim remote at sensor on Camcorder.

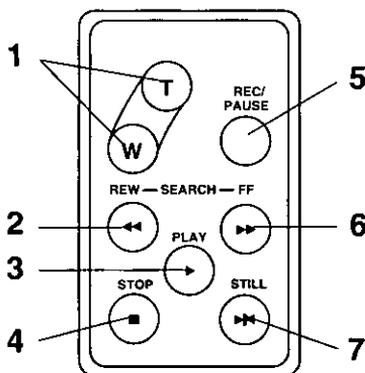


## Controlled Functions

- 1 POWER ZOOM**  
page 34.
- 2 REWIND/SEARCH**  
page 29.
- 3 PLAY**  
page 29.
- 4 STOP**  
page 29.
- 5 RECORD/PAUSE**  
page 23.
- 6 FAST FORWARD/SEARCH**  
page 30.
- 7 STILL**  
page 30.

## Important Note:

- After 5 minutes in Rec/Pause mode, the camcorder will shut off to conserve battery power. If recording is resumed within 30 minutes, press REC/PAUSE once. If over 30 minutes, set POWER to OFF, then CAMERA, then press REC/PAUSE.

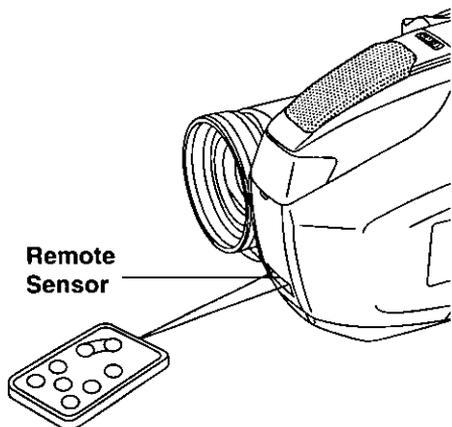


# Playing Back Recordings

## Playback on EVF or LCD Monitor

### Before you begin...


- Connect Camcorder to power source.
- Insert recorded tape.

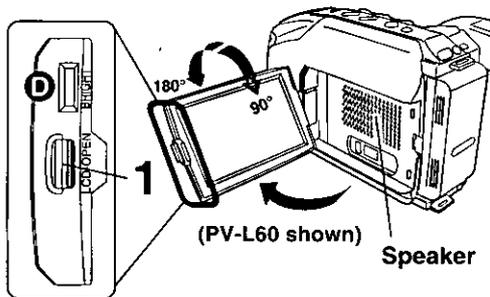

- 1** Press **LCD-OPEN** and swing LCD monitor fully open.
- If you want to playback on EVF, close and lock LCD monitor.

- 2** Set **POWER** to **VCR**.  
Power lamp lights.



- If tape has no record tab, auto playback begins.
- EVF or LCD monitor turns on/off by the POWER switch.
- EVF shuts off when LCD monitor is opened and turns back on when LCD is closed.

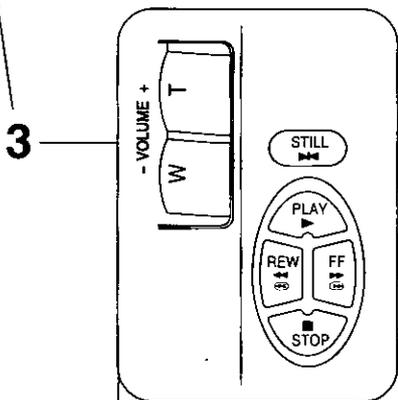

- 3** Playback function buttons.

- A** **REW(ind)** : rewind tape.
- B** **PLAY** : play tape.
- C** **STOP** : stop tape.
- D** **BRIGHT** : adjust LCD monitor brightness.
- E** **VOLUME** : Adjust volume of speaker.

Press "T" : Volume up(+).  
Press "W" : Volume down(-).

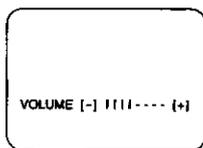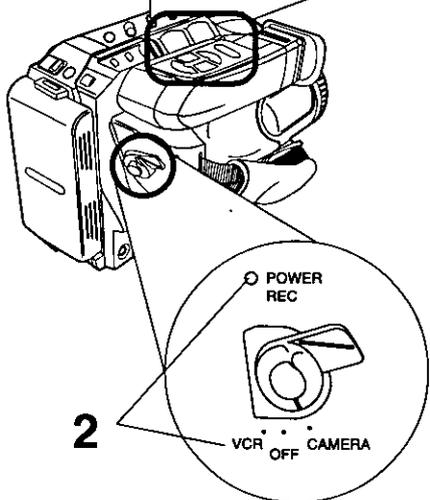


### Note:

- Using LCD monitor reduces battery operating time.
- Return LCD monitor to locked position when not in use.

# Playing Back Recordings


## Special Effects

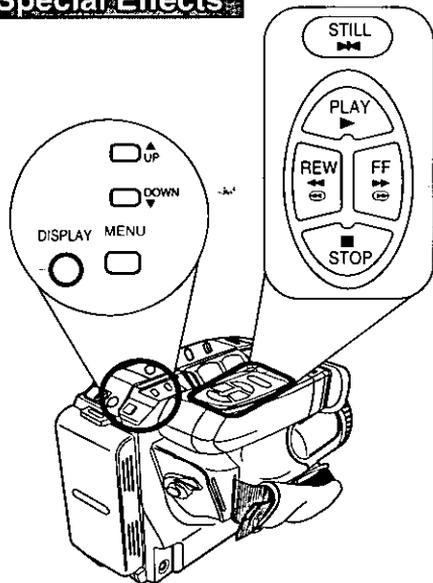

### Note:

- During search, horizontal noise bars will appear. Audio is muted.
- To protect video heads and tape, operating modes will revert as follows after 5 minutes:  
Still → Stand-by  
Stand-by → Power off (when Battery Pack is used).
- Tape auto-rewinds if played or fast forwarded to end.

## Tracking Control

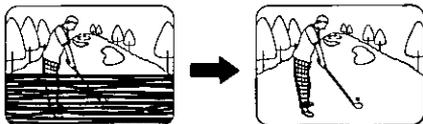

### Before you begin...

- Connect Palmcorder to power source.
- Insert recorded tape.
- Set POWER to VCR.

### Quick Visual Search

#### Search Speed

- SP (Standard Play) : 3 times normal.
- SLP (Super Long Play) : 9 times normal.

#### During playback, press:

**FF** : fast forward search

**REW** : rewind search

Press again or press **PLAY** for normal play.

#### Still Picture

Press **STILL** to freeze picture.

Press again for normal play.

This feature works best in SLP mode (page 15).

### Auto Tracking

Continuously analyzes each recording for optimum picture quality.

### Manual Tracking

Some recordings require manual adjustment to reduce noise.

Press **UP ▲** or **DOWN ▼** until Playback picture clears up.


Press **DISPLAY** to return to Auto Tracking.

# Playing Back Recordings


## TV Playback or Viewing

Connect Camcorder to a TV to view playback or recordings in progress.

### TV with AUDIO/VIDEO IN Jacks.

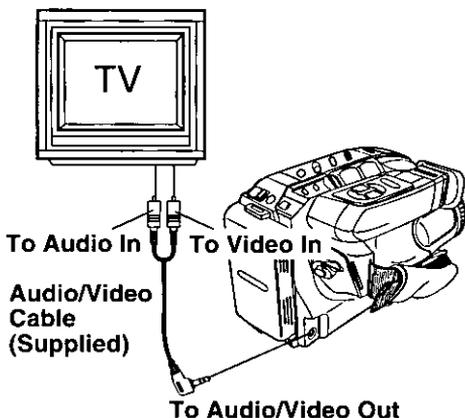

### TV without AUDIO/VIDEO IN Jacks.

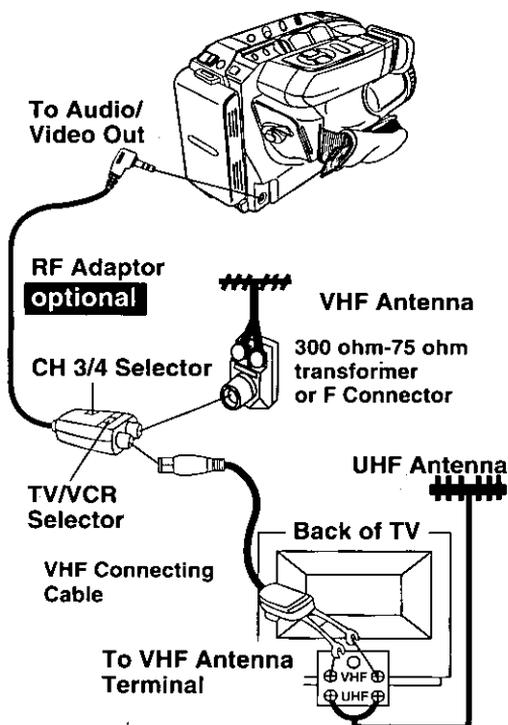

Before you begin...

- Connect Camcorder to power source.
- Make all TV-Camcorder connections.

- 1** Set **POWER** to:  
**VCR** → view playback.  
**CAMERA** → view picture as it is recorded.
- 2** Turn **TV ON** and set to **LINE INPUT**.  
See TV owner's manual.
- 3** Begin playback or recording.

Basic Operation

If TV has no **VIDEO/AUDIO IN** jacks, connect **PV-RF16 RF Adaptor (optional)**. Tune TV to **CH 3** or **4** to match RF Adaptor **CH 3/4 Selector**. Set Adaptor's **TV/VCR Selector** to **VCR** for playback.

To watch TV only,


- a Set Camcorder **POWER** to **OFF**.
- b Set RF Adaptor **TV/VCR Selector** to **TV**.
- c Turn **TV ON** and select channel.

### CATV System Installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

# Playing Back Recordings in a VCR


## Load Battery in PlayPak

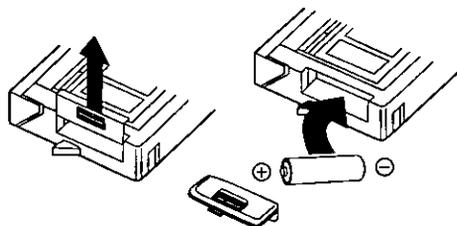

Remove Battery lid and insert AA battery.

- Do not reverse polarity.
- Replace battery when tape loading/unloading takes longer than usual.

## Insert VHS-C Cassette in PlayPak

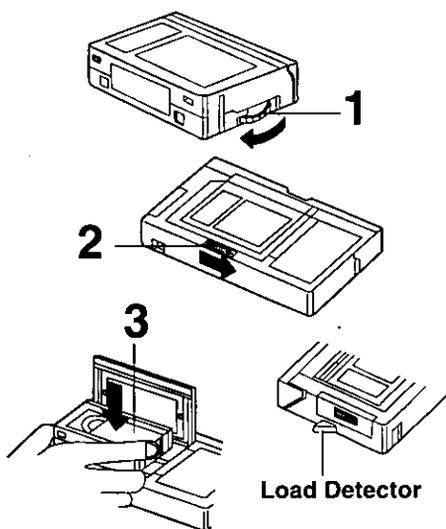


**1** Turn **VHS-C** cassette **Tape Wheel** in direction of arrow to take up any slack.


**2** Slide **RELEASE** to open cassette lid.

**3** Insert the **VHS-C** cassette with the window up and on the left, then snap lid shut.

- Do not obstruct cassette reel while loading.
- Allow PlayPak Load Detector to fully retract before using in VHS VCR.

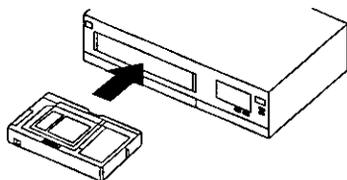

## Remove VHS-C Cassette

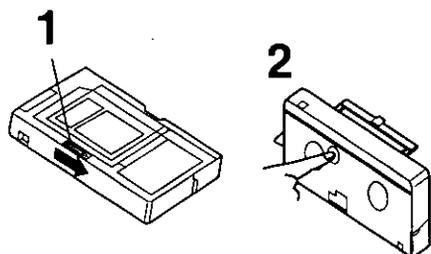


**1** Slide **RELEASE** and wait for lid to open.

**2** Push cassette out through hole in bottom of PlayPak with your finger.

# Copying your Tapes (dubbing)

## Connections

Source (Playing)  
Camcorder

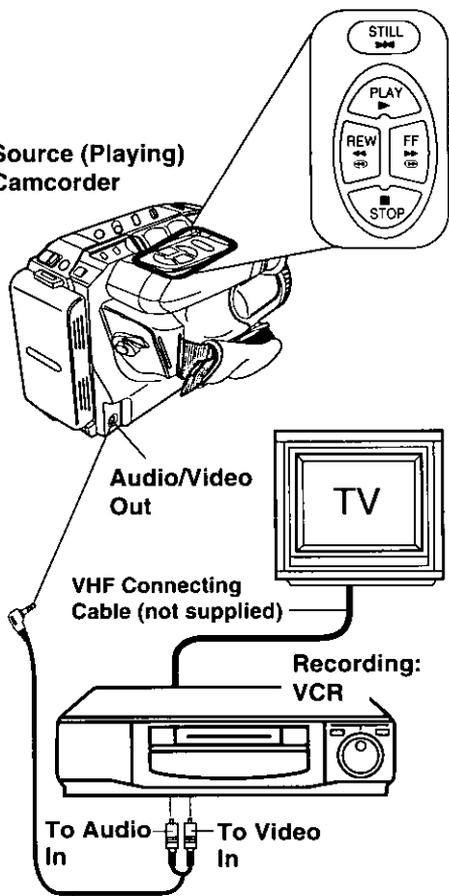

Audio/Video Cable  
(supplied)

## Monitor with your TV

- Turn TV on and tune to VCR channel (CH3 or CH4).
- Set TV/VCR Selector on VCR to VCR.

Before you begin...

- Make Camcorder-VCR connections (see left).
- Turn both units on.
- Set VCR input signal to LINE. Please see VCR owner's manual.
- Set Camcorder POWER to VCR.

- 1 Insert a pre-recorded tape into Camcorder and a blank tape with record tab into VCR.
- 2 Press PLAY on Camcorder, then press STILL at starting point.
- 3 Press REC, then STILL/PAUSE on VCR.
- 4 Press STILL on Camcorder and STILL/PAUSE on VCR again to start copying.
- 5 Press STOP on both units to stop copying.

Note:

- Camcorder will only playback tapes recorded in SP or SLP mode.
- Dubbing may reduce picture quality.


## CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

# Power Zoom / Backlight

## Four-Speed Power Zoom


Zoom in (close up) and out (wide angle) in one of four speeds ranging from slow (16 seconds) to fast (2 seconds).

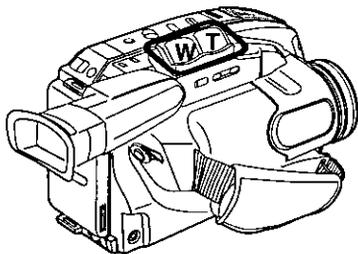

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

### Zoom In ("T")

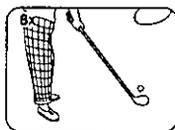

Zoom Out ("W")

## Zoom slowly:


Lightly press "T" (telephoto) or "W" (wide angle) POWER ZOOM button.

## Zoom quickly:


Apply more pressure to the button.

## Backlight

Use when subject is darker than surroundings, in shadowed area, or in front of the light source.

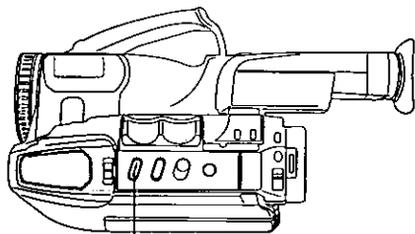

BACKLIGHT

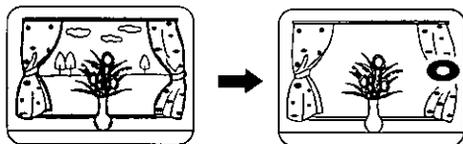


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


Press **BACKLIGHT** while recording to select the level of backlight compensation.

In normal lighting, press **BACKLIGHT** repeatedly until no indicator displayed.

## EVF or LCD Monitor

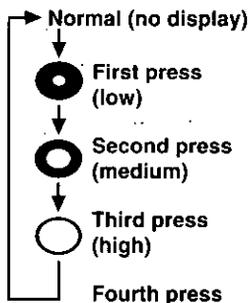

## Auto Focus

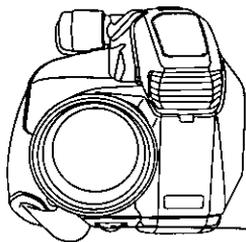


MANUAL FOCUS

## Manual Focus

Use Manual Focus (MF) when :


- recording through glass.
- lighting is poor.
- subject is far away with objects in foreground.
- subject has distinct horizontal lines.

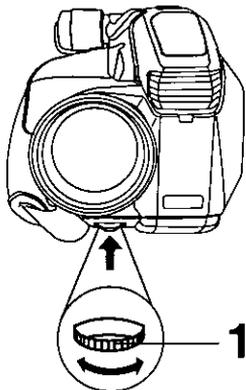

1, 3

2

4

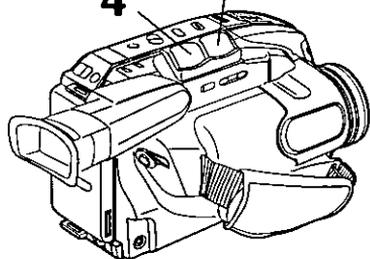

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

Camcorder automatically focuses on subject even during zooming.


Auto Focus is on when "MF" is not displayed in EVF or LCD monitor. Push **MANUAL FOCUS** to remove "MF" in EVF or LCD monitor if necessary.

- subject is not centered in EVF or LCD monitor.
- subject has shiny surface.
- subject is slanted.
- subject is bright and flat, like a white wall.
- subject has fast motion, like a golf swing.

1

Push **MANUAL FOCUS** so "MF" (Manual Focus) appears in EVF or LCD monitor.

EVF or LCD Monitor

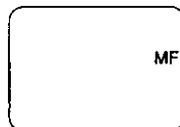

2

Hold down "**T**" (**telephoto**) on **POWER ZOOM** to maximum zoom in.

3

Turn **MANUAL FOCUS** until subject is in focus.

- Back away from subject if necessary.

4

Hold down "**W**" (**wide angle**) on **POWER ZOOM** as desired.

- Refocus as needed when aiming at new scenes.

## Macro Focus (close-ups)

Auto Focus functions up to 12.7 mm (1/2 inch) from subject.

Hold down "**W**" on **POWER ZOOM** to maximum wide angle.

Bring Camcorder up close to the subject.

# High Speed Shutter

Improves Still or Slow Motion playback picture of high speed subjects (e.g. a tennis stroke), when viewed on Camcorder or 3 or 4 head VCR.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Insert cassette with record tab (page 15).


## Auto Shutter

In AUTO mode (no indication in EVF or LCD Monitor), shutter speed is auto-adjusted from 1/60 to 1/350 according to subject brightness.


- AUTO mode is selected each time POWER is set to CAMERA.

## Manual Selection

The faster the shutter speed, the more light is needed for proper picture and color quality. High Speed Shutter indication flashes if light is inadequate. Provide additional light.

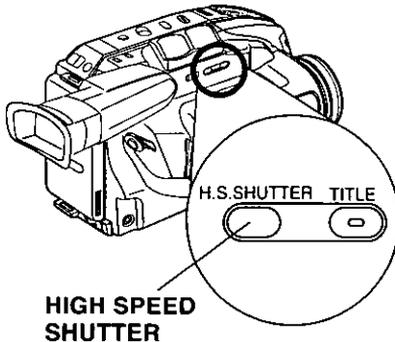

- 1 Press **HIGH SPEED SHUTTER** while recording.
- 2 Press repeatedly to change shutter speed.  
(See below, left.)

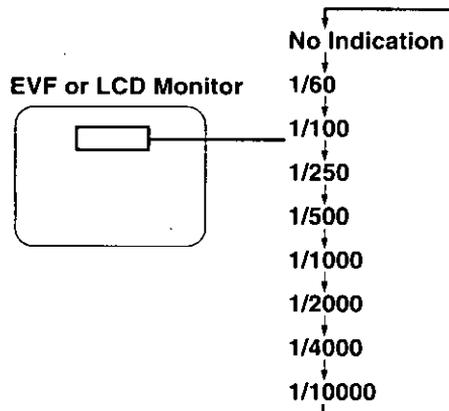



### Note:

- Provide additional halogen or tungsten light for use indoors or in poor light. Fluorescent light degrades picture.
- Auto Focus may not function properly if high speed shutter is used in inadequate light.
- Setting reverts to AUTO each time POWER is set to CAMERA.

# Tally Lamp

## Tally Lamp

The tally lamp can be set to come on or stay off during recording.  
New camcorder's default setting is ON.

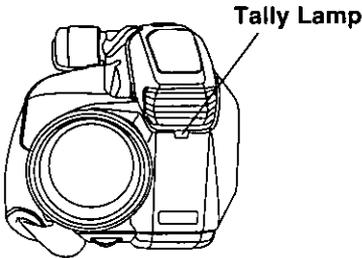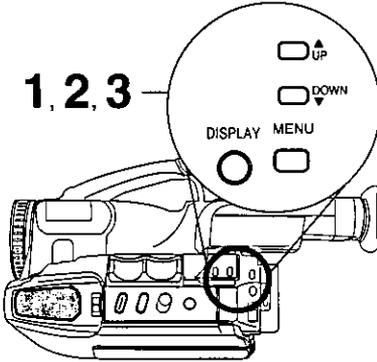

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Insert cassette with record tab (page 15).

- 1** Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **TALLY LAMP**.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE       : AUTO/MANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH  $\nabla/\blacktriangle$  KEY
SET     : PUSH DISPLAY KEY
END     : PUSH MENU KEY
```




- 2** Press **DISPLAY** to select:  
ON → lamp lights during recording.  
OFF → lamp stays off.

- 3** Press **MENU** to exit.

# Fade In/Out

## Auto Fade


An interesting way to open and close scenes.

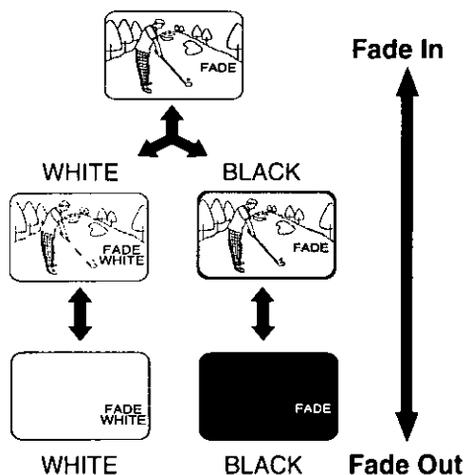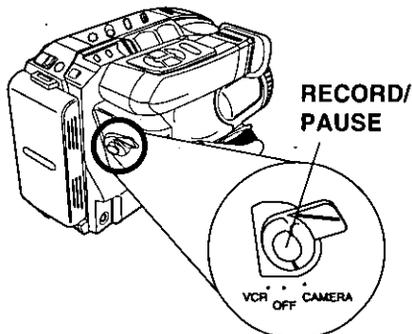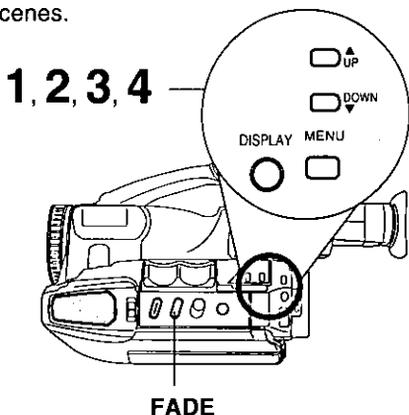


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


1. Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **VIDEO EFFECTS**.

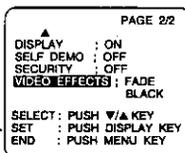

2. Press **DISPLAY** for VIDEO EFFECTS menu.  
Press **UP ▲** or **DOWN ▼** to select **AUTO FADE**.

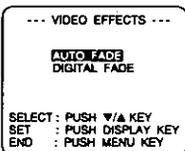

3. Press **DISPLAY** for AUTO FADE ; COLOR menu.  
Press **UP ▲** or **DOWN ▼** to select BLACK or WHITE.

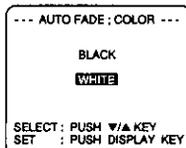

4. Press **DISPLAY** to confirm entry.  
Press **MENU** to exit.

## Fade In:

In **RECORD/PAUSE** mode, press **FADE** so "FADE" flashes in EVF or LCD Monitor.

Press **RECORD/PAUSE**.

Recording starts as picture and sound gradually fade in.

## Fade Out:

While recording, press **FADE** so "FADE" flashes in EVF or LCD monitor.


Press **RECORD/PAUSE**.

Picture and sound gradually fade out, and recording is paused.

If **FADE** is pressed accidentally, press again so "FADE" disappears in EVF or LCD monitor.

## Color Digital Fade


Choose from 7 fade effects in 8 different colors.

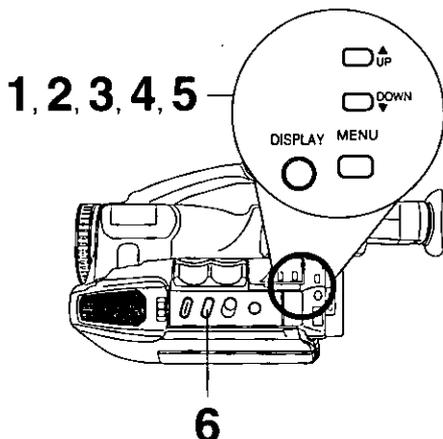


Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **VIDEO EFFECTS**.

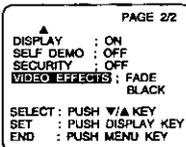


**2** Press **DISPLAY** for VIDEO EFFECTS menu. Press **DOWN ▼** to select **DIGITAL FADE**.

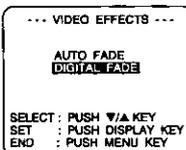


**3** Press **DISPLAY** for DIGITAL FADE menu. Press **UP ▲** or **DOWN ▼** to select **TYPE**. Press **DISPLAY** for TYPE menu. Press **UP ▲** or **DOWN ▼** to select from 7 types.

- A preview of each fade type is displayed as it is selected.

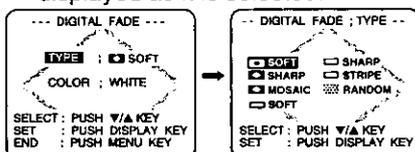

**4** Press **DISPLAY** for DIGITAL FADE menu. Press **DOWN ▼** to select **COLOR**. Press **DISPLAY** for COLOR menu. Press **UP ▲** or **DOWN ▼** to select from 8 colors.


- A preview of each color is displayed as it is selected.

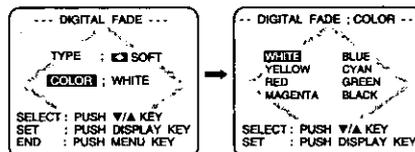

**5** Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.

**6** Press **FADE** for about 2 seconds to fade out during recording (selected fade type flashes). Press **FADE** again to fade in.

### EVF or LCD Monitor

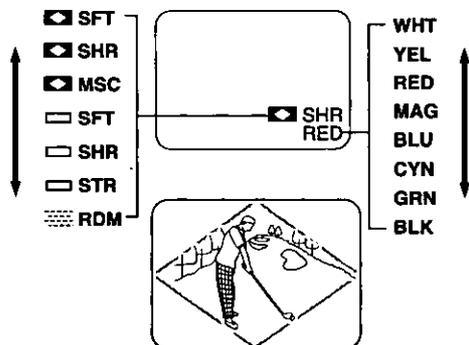

■ For more effects, stop fade in or fade out at any time (except RANDOM mode) by pressing **FADE**. Then, press **FADE** to resume fade.

### Note:


- Audio is not affected by fade.
- To cancel Digital Fade, do steps 1, 2, and 5. In step 2, select AUTO FADE.

# Digital Zoom

Power Zoom magnification is digitally increased.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

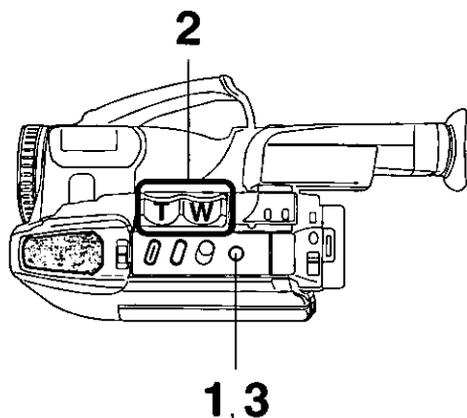

### 1

Press **DIGITAL ZOOM**.

D.ZOOM mode (150× maximum).

Higher digital magnification levels may cause picture distortion.

### 2


Hold down "**T**" on **POWER ZOOM**.

Digital Zoom starts when normal zoom reaches maximum (18×).

- Zoom level appears in EVF or LCD monitor.
- POWER ZOOM switch controls digital zoom level.
- Normal zoom resumes when level falls to 18×.


### 3

Press **DIGITAL ZOOM** to turn off Digital Zoom so no indication appears.

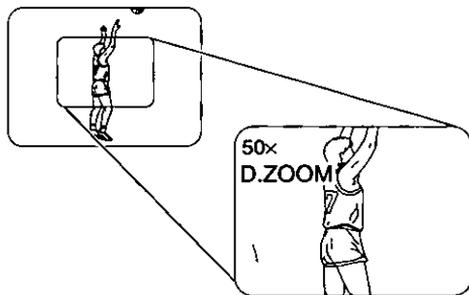

## Digital Electronic Image Stabilization (E.I.S.)


Helps stabilize picture when recording in unstable situations.

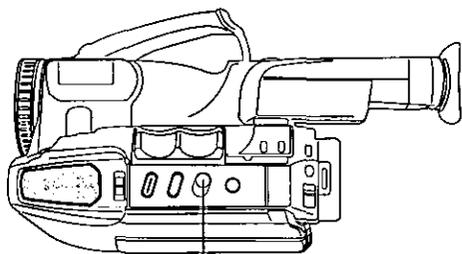

1.2



NORMAL

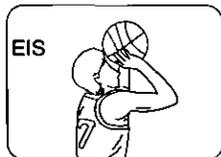

Digital EIS ON

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

1

Press **EIS** to display "EIS" in the EVF or LCD monitor.

- Image becomes slightly enlarged and shutter speed auto-adjusts from 1/80 to 1/350 according to brightness.
- Use High Speed Shutter (page 36) if needed. Shutter speed setting remains after EIS is canceled.


2

Press **EIS** again to cancel when not in use.

### E.I.S. may not function during...

- extreme Camcorder movement.
- recording of subject with distinct horizontal or vertical stripes.
- low light situations (EIS indicator flashes).
- intense fluorescent lighting situations.
- recording of very fast motion.


# Security Mode

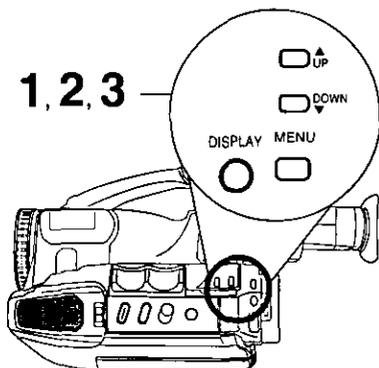

## Before you begin...


- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 15).
- Set POWER to CAMERA.
- Securely position and aim Camcorder.

- 1** Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **SECURITY**.

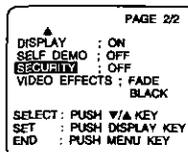

- 2** Press **DISPLAY** to select ON.

- 3** Press **MENU** to exit. (If cassette is not inserted, "REC" will flash.)

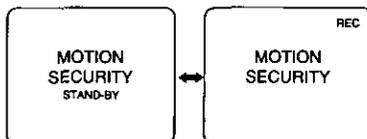

## Motion Security may mistakenly start when:

- background is plain, like a white wall, or has distinct vertical, horizontal, or slanted stripes, like a venetian blind.
- brightness suddenly changes.

## Motion Security may not start when:

- motion is very slow or fast.
- moving object is very small.
- motion occurs only in 1 corner of viewing area.
- in poor lighting (in this case, MOTION SECURITY flashes).
- background is plain, like a white wall, or has distinct horizontal or vertical stripes.

## Note:



- Security recording starts if Camcorder is bumped or repositioned.
- This feature is not available during normal recording.
- While in Security stand-by, the following functions are not available: Record/Pause, Stand-by mode, Digital E.I.S., Video Effects (Auto/Digital Fade).

- Recording will start about 3 seconds after motion is detected.
- Date and time are recorded if displayed in EVF or LCD monitor (page 21).
- Recording stops about 30 seconds after motion ceases.

To cancel Security Mode, set **POWER to OFF**.

## Automatic Title

Camcorder auto-displays title greeting on selected holidays when power is first turned on. See title list on page 44.

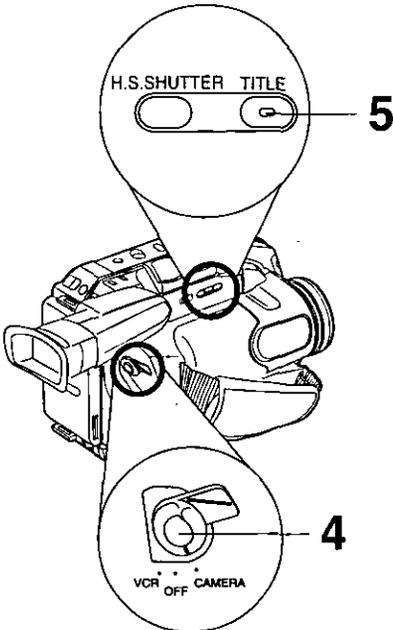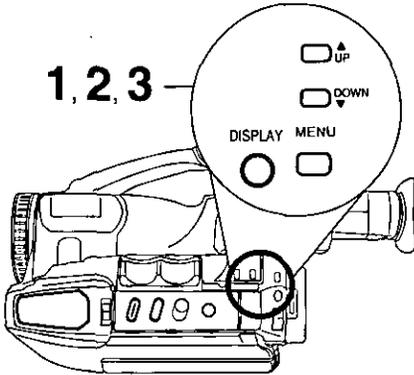

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 15).

- 1 Press **MENU** for **MENU** mode. Press **UP ▲** or **DOWN ▼** to select **TITLE**.

```
... MENU ... PAGE 1/2
PROGRAMMED REC
TITLE : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
▼
SELECT : PUSH ▲/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

- 2 Press **DISPLAY** to select **AUTO/MANUAL**.
- 3 Press **MENU** to exit.
- 4 To record the title, press **RECORD/PAUSE**.
- 5 Press **TITLE** while recording to remove title.

### Note:


- Once removed, title will not be auto-displayed. To redisplay, or select from other titles use Manual Title (page 44).

# Intelligent Titler

## Automatic/Manual Title Display List

Dec. 31–Jan. 1	HAPPY NEW YEAR! / CHEERS!
Feb. 14	VALENTINE'S DAY / BE MY VALENTINE
2nd Sunday in May	HAPPY MOTHER'S DAY / WE LOVE YOU!
Last Monday in May	MEMORIAL DAY
3rd Sunday in Jun.	HAPPY FATHER'S DAY / WE LOVE YOU!
Jul. 4	INDEPENDENCE DAY
1st Monday in Sep.	LABOR DAY
Oct. 31	HAPPY HALLOWEEN
4th Thursday in Nov.	HAPPY THANKSGIVING
Dec. 24–25	MERRY CHRISTMAS / HO! HO! HO!
These Titles must be displayed manually.	HAPPY EASTER HAPPY ANNIVERSARY HAPPY BIRTHDAY VACATION WEDDING DAY A SPECIAL DAY

## Manual Title

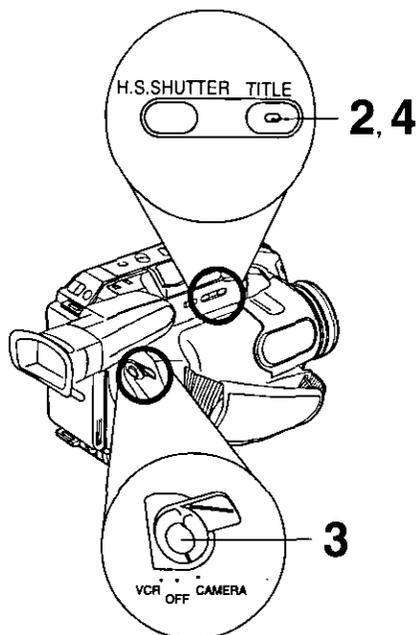

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 15).



- 1** Confirm that **TITLE: AUTO/MANUAL** is set in Menu mode (steps 1–3, page 43).
- 2** In Pause (Record mode), **press TITLE repeatedly** to display titles from list above.
- 3** To record the title, **Press RECORD/ PAUSE**.
- 4** Press **TITLE** while recording to remove title.

## Note:

- To redisplay title, press **TITLE** in Pause (Record mode).

# Intelligent Titler

## Phrase Title

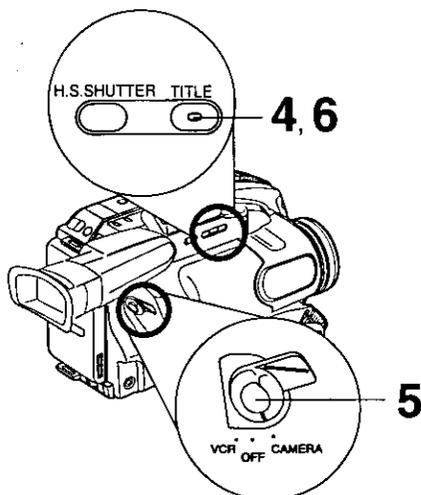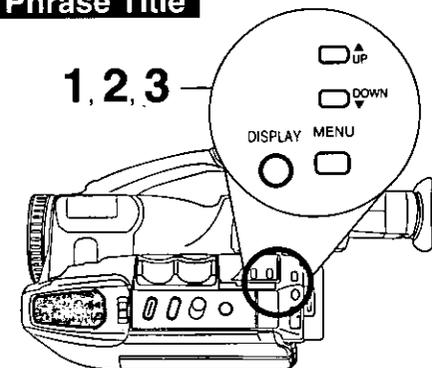

(no indication)

BEAUTIFUL

BRAVO!

CHEERS!

CONGRATULATIONS

GIMME A BREAK!

GOOD LUCK

I LOVE YOU

OOPS!

OUR LITTLE ANGEL


WAY TO GO

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 15).

### 1

Press **MENU** for **MENU** mode.  
Press **UP ▲** or **DOWN ▼** to select **TITLE**.

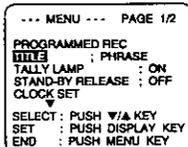

### 2

Press **DISPLAY** to select **PHRASE**.

### 3

Press **MENU** to exit.

### 4

In Pause (Record mode), press **TITLE** repeatedly to display phrases from list below, left.

### 5

To record the phrases, Press **RECORD/PAUSE**.

### 6


Press **TITLE** while recording to remove phrase.

## Note:



- To redisplay phrase, press **TITLE** in Pause (Record mode).

# Viewfinder/LCD Monitor Indications

Tape remaining and battery charge level can be displayed.

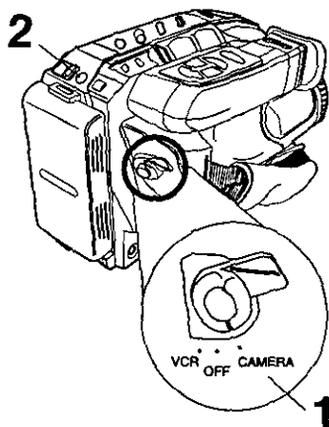


- 1 Set **POWER** to **CAMERA**.
- 2 Press **DISPLAY** repeatedly to select the following displays.

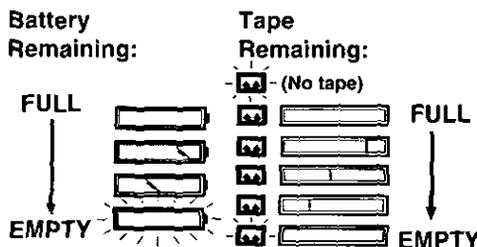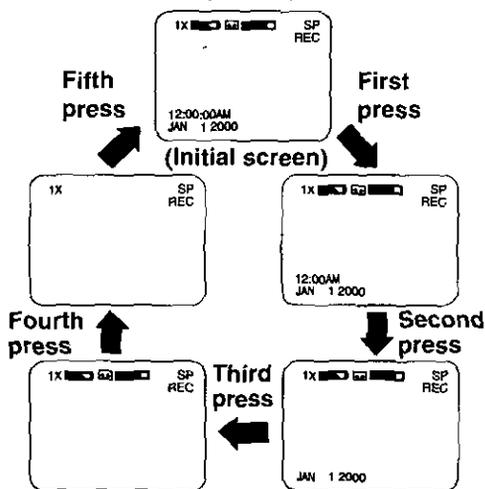

• Tape remaining indicator operates a few seconds after tape starts moving.

## Recording the Date and Time

- 1 Do steps 1 and 2 above to select time/date, date only, or no display.
- 2 Start a recording (page 23).
  - Only the Date and/or Time are recorded.

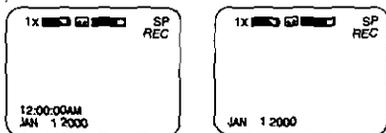

## Display-Off Mode


No Indication, except Intelligent Titler (pages 43-45), will be displayed.

- 1 Press **MENU** for **MENU** mode.  
Press **UP ▲** or **DOWN ▼** to select **DISPLAY**.
- 2 Press **DISPLAY** to select **OFF**.  
Press **MENU** to exit.
- 3 Press **DISPLAY** repeatedly to remove time/date.


Indications are restored when Camcorder is turned off, and then on again.

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA** or **VCR**.

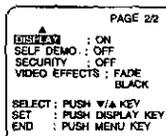

CAMERA MODE

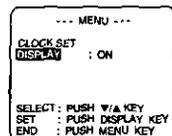


VCR MODE



# Viewfinder/LCD Monitor Indications

## CAMERA/VCR mode

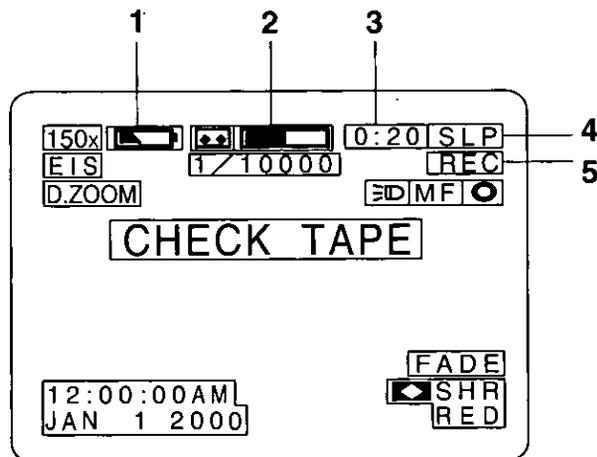

### 1 Battery Remaining (page 46)

"WARNING LOW BATTERY" appears and Power Lamp starts flashing 15 seconds before Camcorder shutoff.

### 2 Tape Remaining

- If **RECORD/PAUSE** is pressed with no cassette, or cassette has no record tab in Camera (RECORD) mode, "" flashes 1 minute and "CHECK TAPE" appears 5 seconds.
- If **PLAY**, **FF** or **REW** is pressed with no cassette inserted in VCR mode, "" flashes 1 minute and "CHECK TAPE" appears 5 seconds.
- As end of tape is reached, "" flashes and "TAPE END" appears 5 seconds.

### 3 10-Second Reminder

Each time a recording is started, a 10 second incremental display (up to 59:50) lets you monitor how long one scene is recorded.

0:00 0:10 0:20 . . . . . 59:50

  
(return to 0:00 and continue)


4 **TAPE SPEED** (pages 15, 23)  
(SP=standard play, SLP=super long play).

### 5 Operating Mode

- REC** (record)
- PAUSE**
- FF** (fast forward)
- PLAY**
- REW** (rewind)

# Viewfinder/LCD Monitor Indications

## CAMERA/VCR mode

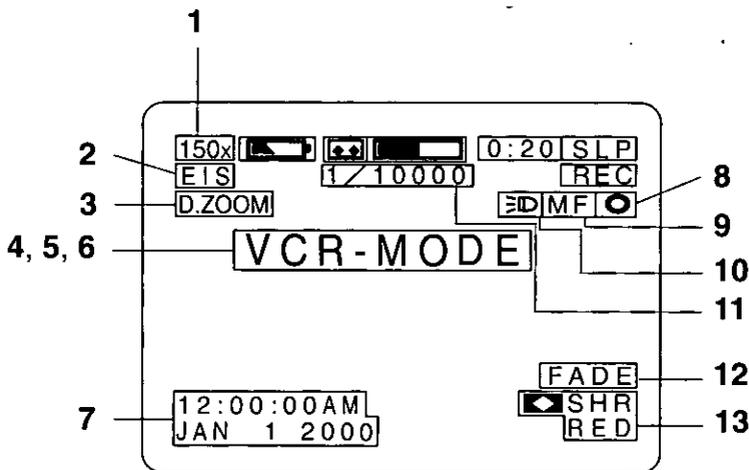

- 1 Zoom Magnification level** (page 34).
- 2 Digital E.I.S.** (page 41).
- 3 Digital Zoom** (page 40).
- 4 VCR-MODE**  
Appears 1 minute when POWER is set to VCR or if RECORD/PAUSE is pressed in VCR mode.
- 5 DEW**  
If moisture condensation occurs in unit, "WARNING DEW DETECTED" appears, Power Lamp flashes, and Camcorder will shutoff in 15 seconds. Wait until lamp no longer flashes when Camcorder is turned on to use.
- 6 Security Mode** (page 42).
- 7 Date and Time** (page 21).
- 8 Backlight** (page 34).
- 9 Manual Focus** (page 35).
- 10 Light ON/OFF** (page 22).
- 11 High Speed Shutter** (page 36).
- 12 Fade** (page 38).
- 13 Color Digital Fade** (page 39).


# Operation Notes

## Attaching Optional Filters and Lenses

When you remove the Lens Hood, pinch the Lens Hood and turn it counterclockwise as illustrated at right.

Then attach an optional filter or lens.

- Be careful not to touch the lens itself.
- Replace the Lens Hood after removing the accessory.

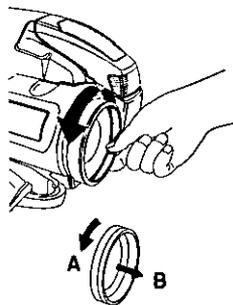

## Lens Hood Area Operation Caution


With a Wide or Telephoto conversion lens (optional) attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

When attaching the lens hood, a Wide or Telephoto conversion lens (optional), etc. after a filter (optional) has been attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

With two filters (optional) attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

## Cleaning EVF (Electronic Viewfinder)

To Remove

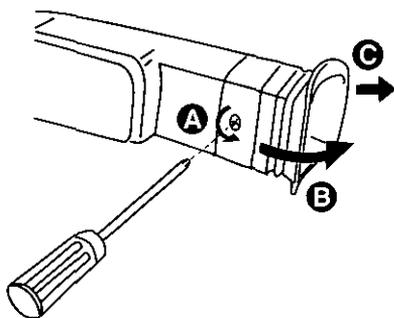

- 1** **A** Remove the screw with a Phillips screwdriver.  
Turn counterclockwise.  
**B** Turn the EVF Eyepiece.  
**C** Pull the EVF Eyepiece.
- 2** Remove any lint or dust particles with a soft clean cloth being careful not to scratch the glass surfaces.
- 3** Replace the EVF Eyepiece and the screw.

For Your Information

# Replacing Clock/Remote Battery


The clock and remote batteries are pre-installed. Follow the steps below if replacement becomes necessary.

## WARNING:

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion.

Caution: Battery may explode if mistreated. Dispose of used battery promptly. Keep away from children. Do not recharge, disassemble or dispose of in fire.

## Clock Battery

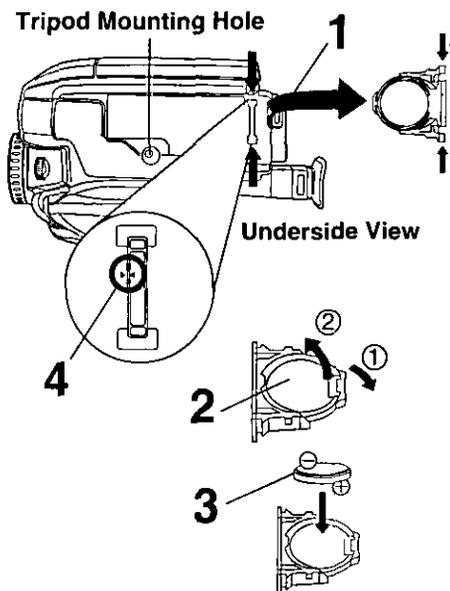


- 1 While pinching 2 tabs, pull Battery Tray out.
- 2 Bend 1 tab to remove Battery.
- 3 Snap new Battery (⊕ mark down) into Battery Tray.
  - Do not reverse the polarity.
- 4 Insert Battery Tray so the triangle marks meet.

### Note:

- Keep Battery out of children's reach. Swallowing it may be harmful.
- Improperly installed, discharged, or missing battery causes "CLOCK BATTERY" to appear when DISPLAY is pressed.
- Battery life is approximately 5 years.

## Remote Battery



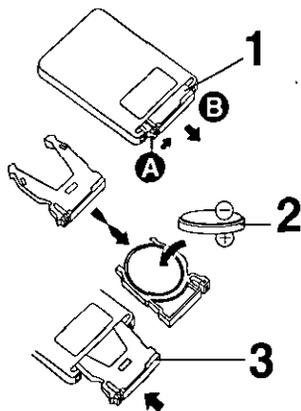


- 1 **A** While pressing stopper tab, **B** pull Battery Tray out.
- 2 Insert battery into tray with ⊕ mark down.  
Do not reverse polarity.
- 3 Replace Battery Tray.

# Palmcorder Accessory System

For ordering instructions, see the Accessory Order Form page.

- The listed standard battery use times are based on continuous recording using this Palmcorder.

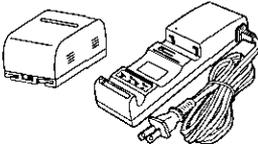Accessory #	Figure	Description	Price
PV-A17		AC Adaptor with DC Power Cable	\$130.00
HHR-V214A/K		6.0Ah / 6 hr Battery Pack with Universal Battery Charger	\$200.00
P-V215A/1B		3.0Ah / 3 hr Battery Pack	\$60.00
PV-BP17/ P-V214A/1B		2.4Ah / 2 hr 30 min Battery Pack	\$50.00
PV-BP18/ P-V611A/1B		1.8Ah / 2 hr Battery Pack	\$45.00
PV-BP15/ P-V213A/1B		1.2Ah / 1 hr 10 min Battery Pack	\$45.00
PV-AA6		"AA" Battery Case	\$20.00
PV-C16		Car Battery Cord	\$70.00
PV-RF16		RF Adaptor	\$40.00
PV-P1		VHS PlayPak	\$35.00
PV-H18A		Soft Sided Carrying Case	\$49.00

For Your Information

# Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				5.00
Total Enclosed				

3. Method of payment (check one)

- Check or Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA                      Credit Card # \_\_\_\_\_
- MasterCard              Expiration Date \_\_\_\_\_
- Discover                    Customer Signature \_\_\_\_\_

Make Check or Money Order to: MATSUSHITA ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms. \_\_\_\_\_

First                                      Last

Phone #:

Day (    ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night (    ) \_\_\_\_\_

City                                      State                      Zip

TO OBTAIN ANY OF OUR OMNIMOVIE/PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-5 PM M-F, 6 AM-10:30 AM SAT, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY  
ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

# Specifications

<b>Power Source:</b>	Compact VHS Camcorder: DC 6 V AC Adaptor: 110/120/220/240 V AC, 50/60 Hz Battery: Nickel-Cadmium Type DC 6 V
<b>Power Consumption:</b>	Compact VHS Camcorder: 6V DC 8.5 W (Max. 11.5 W) AC Adaptor: 24 W 1.2 W (when not in use.)
<b>Video Signal:</b>	EIA Standard (525 lines, 60 fields) NTSC color signal
<b>Video Recording System:</b>	2 rotary heads plus flying erase head. Helical scanning system
<b>Audio:</b>	1 track
<b>Pick-Up System:</b>	Sequential color difference field reverse system
<b>Pick-Up Device:</b>	One integral color filter Charge Coupled Device (CCD)
<b>Lens:</b>	18:1 zoom lens, F1:1.6 with auto iris control Focal length: 3.9 mm - 70.2 mm 4 speed power zoom function Lens filter diameter: 49 mm
<b>Viewfinder:</b>	10.2 mm (0.4 inch) Electronic Viewfinder
<b>LCD Monitor:</b>	63.5 mm (2.5 inch) Liquid Crystal Display (PV-L50) 101.6 mm (4.0 inch) Liquid Crystal Display (PV-L60)
<b>Minimum Illumination Required:</b>	0.8 lx (F1:1.6) 0.08 footcandles 7 lx (F1:1.6) 0.7 footcandles (EIA Standard)
<b>Operating Temperature:</b>	0 °C~40 °C ( 32 °F~104 °F)
<b>Operating Humidity:</b>	10 %~75 %
<b>Weight:</b>	Compact VHS Camcorder: 1.0 kg 2.2 lbs. (PV-L50) 1.04 kg 2.29 lbs. (PV-L60) AC Adaptor: 0.35 kg 0.77 lbs.
<b>Dimensions:</b>	Compact VHS Camcorder: 108 (W) × 118 (H) × 180 (D) mm 4-1/4 (W) × 4-5/8 (H) × 7-1/8 (D) inch AC Adaptor: 70 (W) × 41 (H) × 145 (D) mm 2-3/4 (W) × 1-5/8 (H) × 5-3/4 (D) inch

Weight and dimensions shown are approximate.

Designs and specifications are subject to change without notice.

## Request for Service Notice

Please photocopy this form when making a request for service notice.

### Request for Service Notice:

In the unlikely event this product needs service.

- Please include your **proof of purchase**.  
(Failure to do so will delay your repair.)
- To further speed your repair please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company  
1705 N. Randall Road  
Elgin, IL. 60123-7847  
Attn: Camcorder Repair

For Your Information

# Before Requesting Service

If a problem arises, you may be able to correct it yourself.  
See Symptom and Correction list below.

Symptom	Correction
No picture in EVF ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 12, 14)</li><li>• Set POWER to VCR or CAMERA. (pp. 23, 29)</li><li>• Check for Dew Indication. (p. 48)</li><li>• Use fully charged Battery. (p. 11)</li><li>• Firmly connect all needed cables. (p. 31)</li></ul>
Video cassette cannot be inserted ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 12, 14)</li><li>• Insert cassette, window side facing out. (p. 15)</li></ul>
Video cassette cannot be removed ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 12, 14)</li></ul>
Operation buttons do not work ...	<ul style="list-style-type: none"><li>• Check for Dew Indication. (p. 48)</li></ul>
Recording cannot be done ...	<ul style="list-style-type: none"><li>• Make sure record tab is intact. (p. 15)</li><li>• Check Battery Indicator. (p. 46)</li><li>• Check for Dew Indication. (p. 48)</li></ul>
Auto Focus does not operate ...	<ul style="list-style-type: none"><li>• Set FOCUS to AUTO. (p. 35)</li><li>• Set POWER to CAMERA. (p. 23)</li></ul>
Sound from microphone can't be monitored ...	<ul style="list-style-type: none"><li>• Set unit to REC or Record/Pause mode.</li></ul>
Camera picture is too dark ...	<ul style="list-style-type: none"><li>• Turn HIGH SPEED SHUTTER off. (p. 36)</li></ul>
No playback picture, or the playback picture is noisy or contains streaks ...	<ul style="list-style-type: none"><li>• Press UP ▲/DOWN ▼ button during playback (Tracking Control). (p.30)</li></ul>
"Panasonic ITS TAPES PLAY IN YOUR VCR ..." appears in EVF and LCD Monitor ...	<ul style="list-style-type: none"><li>• Set POWER to CAMERA, then set SELF DEMO : OFF in MENU screen to cancel Demo mode. (p. 8)</li></ul>
Top of playback picture waves back and forth excessively ...	<ul style="list-style-type: none"><li>• A playback signal is not as stable as an off the air TV signal, so the top of your TV screen may appear bent or unstable during playback. This is called, "Horizontal AFC time constant change." To correct, slowly turn the TV horizontal hold control. If you TV does not have this control, or adjusting it does not help, contact your TV service center. (Some nominal service charges may be required.)</li></ul>

## Video Head Cleaning



**Clogged Video Head**

While head cleaning is normally not needed, playing old or damaged tapes may clog the heads. When playback picture resembles example at the left, head cleaning is required.

Ideally, head cleaning should be performed by a qualified service technician. When this is not possible, purchase a head cleaning cassette. Be sure to follow cleaning cassette instructions exactly and only use when symptoms occur.

# Warranty

**Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America**  
 One Panasonic Way Secaucus, New Jersey 07094

**Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc.**  
 Ave. 65 de Infantería. Km. 9.5  
 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

## PANASONIC/QUASAR Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR	NINETY (90) DAYS
	CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT	NINETY (90) DAYS
	CRT - TWO (2) YEARS	CRT- NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

**Monitor-VCR In-home or carry-in Service: 22" (diagonal) CRT / LCD and Larger**  
**Monitor-VCR Carry-in Service: 21" (diagonal) CRT / LCD and smaller**

**Batteries** (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

**Tape** (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-211-PANA(7262), to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above. THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 10/20/97

For Your Information

# Warranty

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

1-800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7am, EST

Or send e-mail to: [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)

Web Site: <http://www.panasonic.com>

You can purchase parts, accessories or locate your nearest servicerenter by visiting our Web Site.

## Accessory Purchases:

1-800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032

(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)

(Visa, MasterCard, Discover Card, American Express, Check)

## Product Repairs

## Centralized Factory Servicerenter

MAIL TO :

Panasonic Services Company  
1705 N. Randall Road,  
Elgin, IL 60123-7847

Attention: Camcorder Repair

Please carefully pack and ship, prepaid and insured, to the Elgin centralized repair Factory Servicerenter. While there will be added handling delays, you may bring your unit to one of the following locations who will then forward the unit to Elgin for repair.

Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

## Factory Servicerenters Locations

### CALIFORNIA

6550 Katella Avenue  
Cypress, CA 90630

800 Dubuque Avenue  
S. San Francisco  
CA 94080

20201 Sherman Way  
Suite 102  
Canoga Park, CA 91306

3878 Ruffin Road  
Suite A  
San Diego, CA 92123

### COLORADO

1640 South Abilene  
Street Suite D  
Aurora, CO 80012

### FLORIDA

3700 North 29th Avenue  
Suite 102  
Hollywood, FL 33020

### GEORGIA

8655 Roswell Road  
Suite 100  
Atlanta, GA 30350

### ILLINOIS

9060 Golf Road  
Niles, IL 60714

1703 North Randall Road  
Elgin, IL 60123  
(Pick-up/drop-off only)

### MARYLAND

62 Mountain Road  
Glen Burnie, MD 21061

### MASSACHUSETTS

60 Glacier Drive  
Suite G  
Westwood, MA 02090

### MICHIGAN

37048 Van Dyke Avenue  
Sterling Heights,  
MI 48312

### MINNESOTA

7850-12th Avenue South  
Airport Business Center  
Bloomington, MN 55425

### OHIO

2236 Waycross Road  
Civic Center Plaza  
ForestPark, OH 45240

### PENNSYLVANIA

2221 Cabot Blvd. West  
Suite B  
Langhorne, PA 19047

### TENNESSEE

3800 Ezell Road  
Suite 806  
Nashville, TN 37211

### TEXAS

13615 Welch Road  
Suite 101  
Farmers Branch, TX  
75244

### WASHINGTON

20425-84th Avenue  
South  
Kent, WA 98032

### HAWAII

99-859 Iwaiwa Street  
Aiea, Hawaii 96701  
Phone (808) 488-1996  
Fax (808) 486-4369

## Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicerenter:

Ave. 65 de Infantería. Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910

<b>A</b>		<b>F</b>	
AC Adaptor	14	Fade	38, 39
Accessories (Optional)	51	FADE Button	38, 39
Accessories (Supplied)	2	FAST FORWARD/SEARCH Button	30
Audio/Video Cable	31, 33	Focus	35
Audio/Video Out	31, 33	<b>H</b>	
Auto Daylight Saving Time	20	Hand Strap	16
<b>B</b>		High Speed Shutter	36
Backlight	34	HIGH SPEED SHUTTER Button	36
BACKLIGHT Button	34	<b>L</b>	
Battery Pack	9, 11~13	LCD Monitor	9, 10, 24, 29
BATTERY RELEASE Button	12	LCD-OPEN Button	9, 10, 24, 29
BRIGHT Control	24, 29	Lens Cover	23
Built-in Twin Capsule 2-Way Microphone System	23	Light	22
<b>C</b>		LIGHT Switch	22
Camera Recording	23~27	<b>M</b>	
Car Battery Cord	14	MANUAL FOCUS Wheel	35
Charging Battery	11	MENU Button	8, 17, 19~21, 25, 27, 37~39, 42, 43, 45, 46
Clock Battery	50	MENU Mode	17, 18
Clock Set	19~21	<b>P</b>	
Copying your Tapes	33	PLAY Button	10, 29
<b>D</b>		Playback	29~32
DC IN	14	PlayPak	32
DC Power Cable	14	Power Lamp	23, 29, 47
Digital E.I.S.	41	Power Supply	11~14
DIGITAL ZOOM Button	40	POWER Switch	8~10, 23, 29
DISPLAY Button	8, 17, 19~21, 25, 27, 30, 37~39, 42, 43, 45, 46	POWER ZOOM button	34, 35, 40
Display-off Mode	46	Programmed Recording	27
<b>E</b>			
EIS Button	41		
Electronic Viewfinder	49		

# Index

<b>R</b>		<b>V</b>	
RECORD/PAUSE Button	9, 23~27	VHF Connecting Cable	31, 33
Remote Control	28	Video Cassettes (tapes)	15
Remote Holder	16, 28	Video Head Cleaning	54
Replacing Battery	50	Viewfinder/LCD Monitor	
Request for Service Notice	53	Indications	46~48
REWIND/SEARCH Button	10, 29, 30	Viewing	31
RF Adaptor	31	VISION ADJUSTMENT	23
		VOLUME Control	29
<b>S</b>		<b>W</b>	
Safety Precautions	3	Warranty	55, 56
Security Mode	42		
Self Demo Mode	8	<b>Z</b>	
Shoulder Strap	16	Zoom	34, 40
Speaker	29		
Specifications	53		
STILL Button	30		
Still Picture	30		
STOP Button	10, 29		
<b>T</b>			
Tab	15		
Tally Lamp	23, 37		
TAPE EJECT Switch	9, 15		
TAPE SPEED Selector	15, 23		
TITLE Button	43~45		
Titler	43~45		
Tracking Control	30		
Tripod Mounting Hole	50		
<b>U</b>			
UP ▲/DOWN ▼ Button	8, 17, 19~21, 25, 27, 30, 37~39, 42, 43, 45, 46		

# Spanish Quick Use Guide/Guía Para Uso Rápido

## Antes de comenzar...

- Inserte un casete con lengüeta para prevención del grabado.

## Cargue la batería

Cargue completamente la batería antes de usarla.

**2**

Inserte la batería.  
La lámpara CHARGE se enciende y se apaga al terminar de cargar.  
Desmunte la batería.



**1**


Enchufe el adaptador de CA.



## Inserte el casete

**2**

Deslice TAPE EJECT para abrir la compuerta.

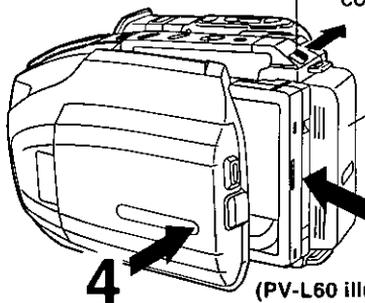

**1**

Coloque la batería cargada.

**3**

Inserte el casete.


**4**

(PV-L60 ilustré)

Presione aquí para cerrar la compuerta.

## Grabación con la videocámara

Cuando el monitor LCD está completamente abierto, el visor se desconecta automáticamente.

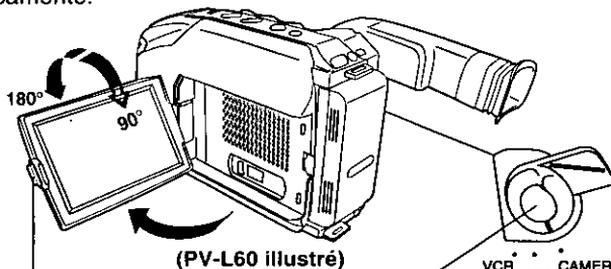

**1**

Presione LCD-OPEN para abrir el monitor LCD. Abralo completamente y ajuste el ángulo.

**2**

Ajuste POWER a CAMERA.

**3**

Presione RECORD/PAUSE para comenzar la grabación.  
Presione RECORD/PAUSE otra vez para hacer una pausa en la grabación.

For Your Information

# Spanish Quick Use Guide/Guía Para Uso Rápido


## Antes de comenzar...

- Conecte la fuente de alimentación de la videocámara (batería o adaptador de CA)
- Inserte un casete con lengüeta para prevención del grabado.

## Reproduzca usando el monitor LCD

Cuando el monitor LCD está completamente abierto, el visor se desconecta automáticamente.


- 1** Presione LCD-OPEN para abrir el monitor LCD. Abralo completamente y ajuste el ángulo.

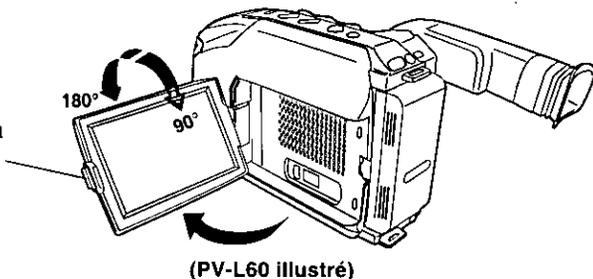


- 2** Ajuste POWER a VCR.



VCR OFF CAMERA

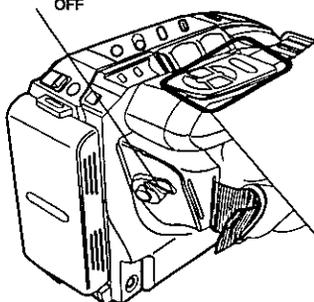

- 3** Presione REWIND/SEARCH para rebobinar la cinta.

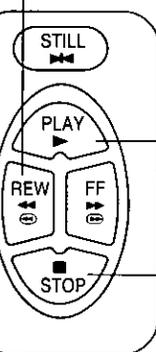

- 4** Presione PLAY para comenzar la reproducción.

- 5** Presione STOP para finalizar la reproducción.

## Reproducción con efectos especiales

Para localizar rápidamente una escena específica

- Oprimir el botón de localización (SEARCH).

Para congelar una imagen

- Oprimir el botón de pausa/imagen fija (PAUSE/STILL).

- Oprimir nuevamente el botón cuando se desea continuar reproduciendo.

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic Way Secaucus,  
New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of  
Puerto Rico, Inc. ("PSC")  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985



Printed in Japan  
LSQT0267A  
S0200-0