

**SONY**<sup>®</sup>

3-292-247-12(1)

Getting started

Importing and transferring  
audio data

Playing audio data

Editing tracks in the HDD  
Jukebox

Other settings

Troubleshooting

Precautions/Specifications

# GIGA JUKE

**HDD Audio System  
Operating Instructions**

**NAS-E35HD**

## WARNING

### To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

The unit is not disconnected from AC power source (mains) as long as it is connected to the wall socket, even if the unit itself has been turned off.


As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine fire or the like.

## CAUTION

The use of optical instruments with this product will increase eye hazard.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

### European model only

Excessive sound pressure from earphones and headphones can cause hearing loss.

### Notice for the customer in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan.


The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.



### Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessories: Remote control

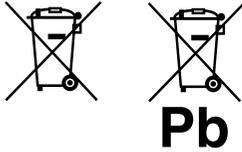

**Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)**

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Note on DualDiscs**

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

**Music discs encoded with copyright protection technologies**

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

# Before operating the unit

## About the hard disk drive

The hard disk drive is easily damaged by shock and vibration, so be sure to observe the following precautions. See page 66 for details.

- Do not subject the unit to strong shocks.
- Do not move the unit while the power cord is connected to the wall outlet.
- Do not use the unit in a location subject to vibrations or in an unstable location.
- Do not move the unit or disconnect the power cord while the unit is recording or playing.
- Do not attempt to replace or upgrade the hard disk drive by yourself, as this may result in a malfunction.

Any data that is lost due to a malfunction in the hard disk drive cannot be recovered.

Data recorded to the hard disk drive may be damaged during ordinary operations.  
Sony cannot provide compensation for any destruction of data caused by a damaged hard disk drive.

## On recording

- Make a trial recording before making the actual recording, especially when recording important material.
- Sony cannot provide compensation for any failure in recording caused by a malfunction in this unit.

Malfunctions that occur during the normal use of the unit will be repaired by Sony in accordance with the conditions defined in the limited warranty for this unit. However, Sony will not be liable for any consequences arising from a failure to record or play caused by a damaged or malfunctioning unit.

## How to use this manual

This manual explains how to operate the unit mainly using the remote control. Buttons and controls on the main unit with the same or similar name as that on the remote control can be used to perform the same operations.

Illustrations used in this manual are based on the model other than the UK model.



# Table of Contents


|                                       |   |    |
|---------------------------------------|---|----|
|                                       | Before operating the unit.....  | 4  |
|                                       | Features on this unit.....  | 8  |
| <hr/>                                 |   |    |
| Getting started                       | Checking the supplied accessories.....  | 10 |
|                                       | Guide to parts and controls.....  | 11 |
|                                       | Remote control.....   | 11 |
|                                       | Top of the main unit.....   | 14 |
|                                       | Front of the main unit.....   | 15 |
|                                       | Display.....  | 16 |
|                                       | Connecting the speakers and antennas.....   | 18 |
|                                       | Setting the clock.....  | 21 |
| <hr/>                                 |   |    |
| Importing and transferring audio data | About importing and transferring audio data.....                                    | 22 |
|                                       | Importing/Recording audio data to the HDD   |    |
|                                       | Jukebox.....  | 23 |
|                                       | Recording from an audio CD.....   | 23 |
|                                       | Importing audio data from an MP3 disc or a USB device.....                          | 24 |
|                                       | Recording from a radio broadcast, DAB service*, or externally connected device..... | 25 |
|                                       | Recording programmed tracks.....  | 25 |
|                                       | Transferring audio data from the HDD Jukebox.....                                   | 26 |
|                                       | Transferring audio data to a USB device.....  | 26 |
|                                       | Transferring programmed tracks.....   | 27 |
|                                       | Erasing tracks on the USB device.....   | 28 |
| <hr/>                                 |   |    |
| Playing audio data                    | Playing the HDD Jukebox.....  | 29 |
|                                       | Playing a CD.....   | 30 |
|                                       | Listening to the radio or DAB services.....   | 32 |
|                                       | Selecting a radio station or a DAB service*.....                                    | 32 |
|                                       | Presetting radio stations or DAB services*.....                                     | 33 |
|                                       | Listening to music of a USB device.....   | 34 |
|                                       | Connecting an external component (AUDIO IN).....                                    | 36 |
|                                       | Connecting a digital music player to the DMPORT....                                 | 37 |

|                                      |  |    |
|--------------------------------------|--|----|
|                                      | Repeat play · Shuffle play · Program play.....               | 38 |
|                                      | Setting the play mode .....                                  | 38 |
|                                      | Setting repeat play.....                                     | 39 |
|                                      | Creating your own program (Program play).....                | 39 |
|                                      | Searching for a track.....                                   | 40 |
|                                      | Searching for a track in the HDD Jukebox.....                | 40 |
|                                      | Searching for a track on a CD or a USB device .....          | 40 |
| <hr/>                                |  |    |
| Editing tracks in the<br>HDD Jukebox | Obtaining title information .....                            | 41 |
|                                      | Exporting album information to a USB storage<br>device ..... | 43 |
|                                      | Searching for album information on the computer.....         | 43 |
|                                      | Importing the latest album information to the unit.....      | 45 |
|                                      | Re-labeling titles .....                                     | 45 |
|                                      | Editing .....  | 47 |
|                                      | Changing titles .....  | 47 |
|                                      | Erasing recordings.....                                      | 47 |
|                                      | Entering text.....   | 49 |
|                                      | Entering text.....   | 49 |
| <hr/>                                |  |    |
| Other settings                       | Using the Sleep Timer.....                                   | 50 |
|                                      | Using the Play Timer.....                                    | 51 |
|                                      | Using the Recording Timer .....                              | 52 |
|                                      | Changing the unit's settings .....                           | 53 |
|                                      | Changing the display .....                                   | 53 |
|                                      | Selecting the text mode.....                                 | 53 |
|                                      | Formatting the system .....                                  | 54 |
| <hr/>                                |  |    |
| Troubleshooting                      | Troubleshooting .....  | 55 |
|                                      | Messages .....   | 63 |
| <hr/>                                |  |    |
| Precautions/<br>Specifications       | Precautions .....  | 66 |
|                                      | About CDs .....  | 68 |
|                                      | Specifications.....  | 69 |
|                                      | USB devices supported by this unit.....                      | 71 |
|                                      | Glossary .....   | 72 |
|                                      | Index .....  | 73 |

# Features on this unit


## Store

You can store audio data from audio CDs, radio broadcasts, USB devices, etc. to the HDD Jukebox.

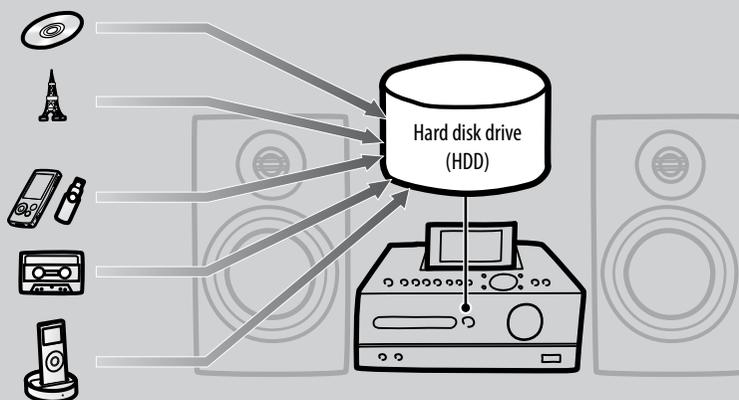


## Listen

You can listen to the audio data in various play mode, such as program play, shuffle play, etc.

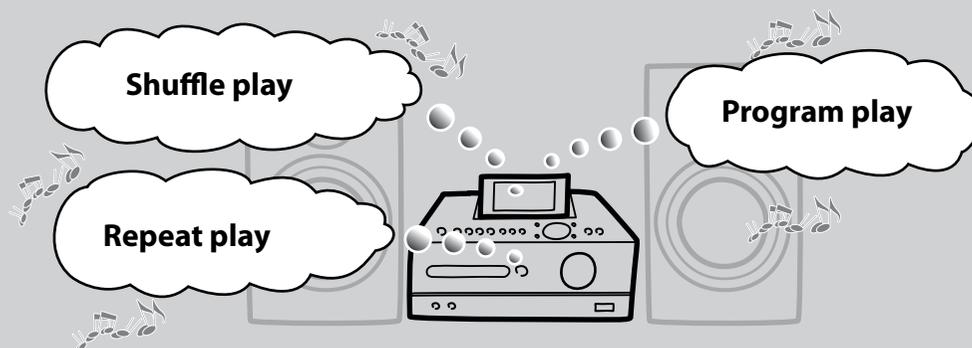

## Transfer

You can transfer the audio data on the HDD Jukebox to a USB device, such as a digital music player or a USB storage device.

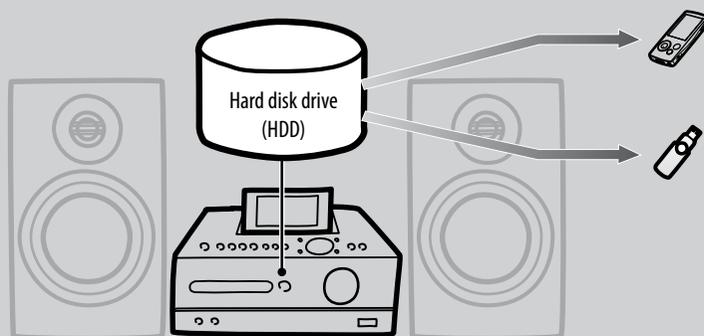

### More functions are available when you use the unit together with your computer

#### ■ Updating title information

You can add track and album titles and artist names from the Gracenote database via the Internet using the pre-installed software called “Title Updater” through a USB storage device.


#### ■ Copying audio data in your computer

You can import audio data in your computer to the HDD Jukebox through a USB device.

# Checking the supplied accessories


If you find any accessories missing or damaged, please contact your nearest Sony dealer.

**AM loop antenna (1)**

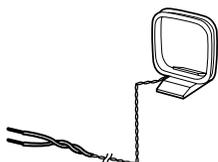


**FM lead antenna (1)**

One of the following two antennas is supplied.

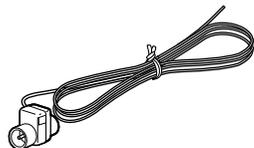


or

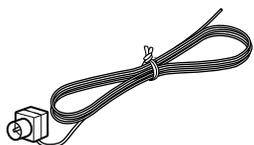


**DAB lead antenna (1) (for the UK model only)**

One of the following two antennas is supplied.

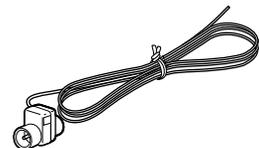

or

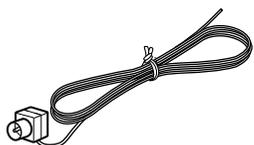

**Speaker cords (2)**



**Speaker pads (8) (for the Latin American model only)**




**Remote control (1)**



**R6 (size AA) batteries (2)**



**DIGITAL MEDIA PORT adapter (TDM-iP10 (M)) (1) (for the European model only)**

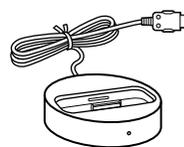


**iPod Dock Adapters (1 set) (for the European model only)**



**Operating Instructions (this manual; provided in each language)**

# Guide to parts and controls

## Remote control

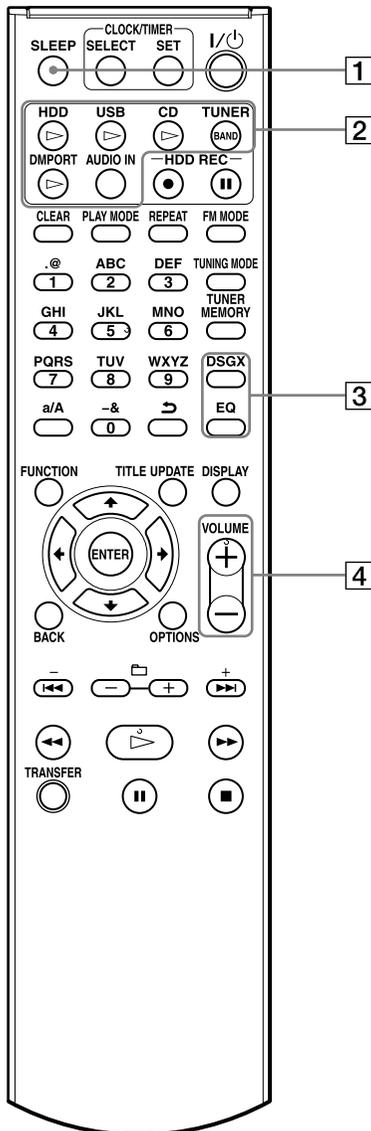

### 1 SLEEP button

Use to make or confirm the sleep timer setting (page 50).

### 2 Playback buttons

Use to select the function directly and start playback at the same time.

- HDD▷ button (page 29)
- USB▷ button (page 34)
- CD▷ button (page 30)
- TUNER/BAND button (page 32)
- DMPORT▷ button (page 37)
- AUDIO IN button (page 36)

### 3 DSGX and EQ buttons

- DSGX button

Use to generate a more dynamic sound (Dynamic Sound Generator X-tra). Each press of the button switches the DSGX function “ON” or “OFF”. This function is factory set to “ON”.


- EQ (equalizer) button

Use to adjust the bass and treble. Press this button to display “BASS”, and then press ◀◀ or ▶▶ to adjust the bass. After adjusting the bass sound, press this button again to display “TREBLE”, and then press ◀◀ or ▶▶ to adjust the treble.

### 4 VOLUME+\* and VOLUME- buttons

Use to adjust the volume.

An asterisk (\*) indicates buttons that have a tactile dot (the VOLUME + button).

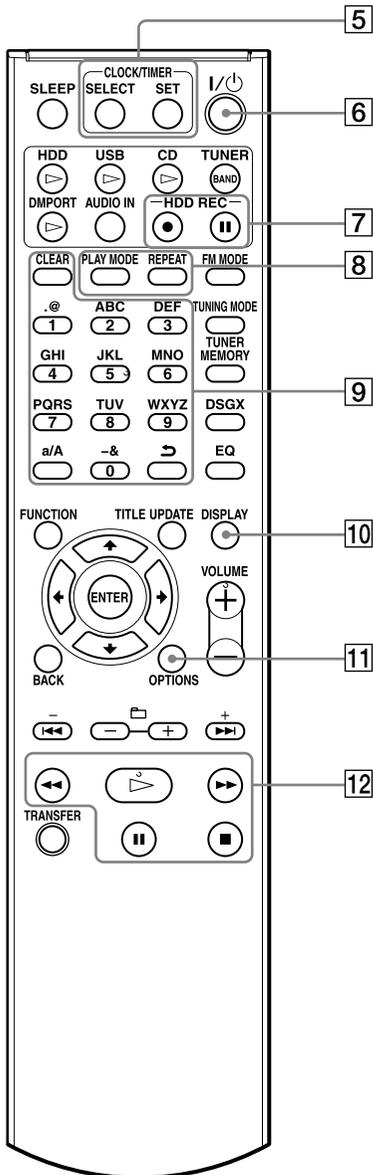

An asterisk (\*) indicates buttons that have a tactile dot (the number “5” button and ▷ (play) button of the operation buttons ).

### 5 CLOCK/TIMER buttons

Use to set the clock or timer.

- SELECT button  
Use to confirm or cancel the timer setting (page 51).
- SET button  
Use to display the clock or timer menu (pages 21, 51).

### 6 I/⏻ (power) button

Turns the power on or off.

### 7 HDD REC buttons

Use for recording to the HDD Jukebox.

- HDD REC ● (start recording) button (page 23)
- HDD REC ■ (pause recording) button (page 25)

### 8 PLAY MODE and REPEAT buttons

- PLAY MODE button  
Use to select a play mode (page 38).
- REPEAT button  
Use to select a repeat mode (page 39).

### 9 Numeric\*/text buttons

Use to select a track during play or to enter text (pages 29, 49).  
Use to select a preset FM or AM station or a DAB service (page 33).

### 10 DISPLAY button

Use to display information such as time information, clock, demonstration, etc. (page 53)


### 11 OPTIONS button

Displays the Option menu (page 17).  
Menu items will vary according to the selected function.

### 12 Operation buttons


Use in all functions to perform basic operations.

- ▷ (play) button\*
- ◀◀ (fast rewind) and ▶▶ (fast forward) buttons
- ■ (pause) button
- ■ (stop) button

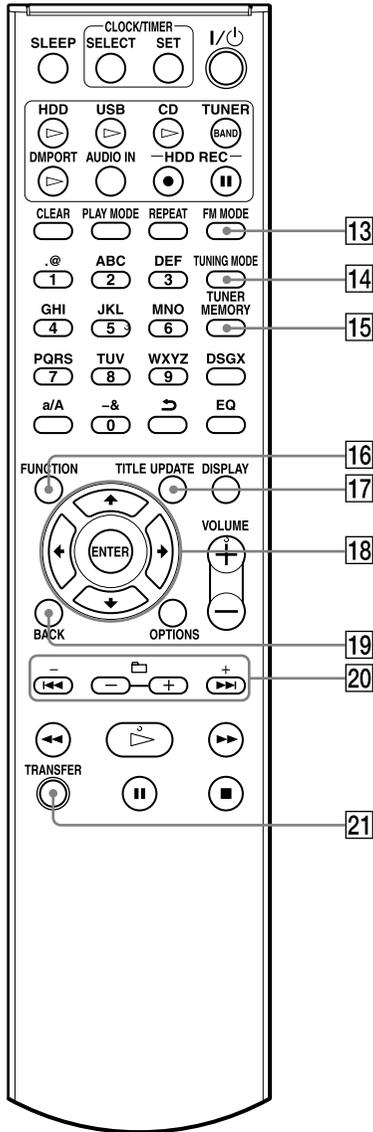

- 13 FM MODE button**  
Use to select stereo or monaural while listening to an FM broadcast (page 33).
- 14 TUNING MODE button**  
Use to select the tuning mode (page 32).
- 15 TUNER MEMORY button**  
Use to preset a radio station or DAB service (UK model only) (page 33).
- 16 FUNCTION button**  
Use to select a function (page 17).
- 17 TITLE UPDATE button**  
Use to display the Title Update menu (page 43).
- 18 Menu operation buttons**  
Use to select menu items and enter menu settings (page 17).
- **↑, ↓, ← and → buttons**  
Use to select a menu item or to change a setting.
  - **ENTER button**  
Use to enter a setting.
- 19 BACK button**  
Use to go back to the previous display (page 16).
- 20 + • -, ◀▶ and ◻ + • ◻ - buttons**
- **+ and - buttons**  
Use to adjust the tuning frequency (page 32).
  - **◀▶ buttons**  
Cues the beginning of a track (page 29).
  - **◻ + and ◻ - buttons**  
Use to select an album or a folder (page 29).
- 21 TRANSFER button**  
Use to transfer tracks to a USB device (page 26).

## Top of the main unit

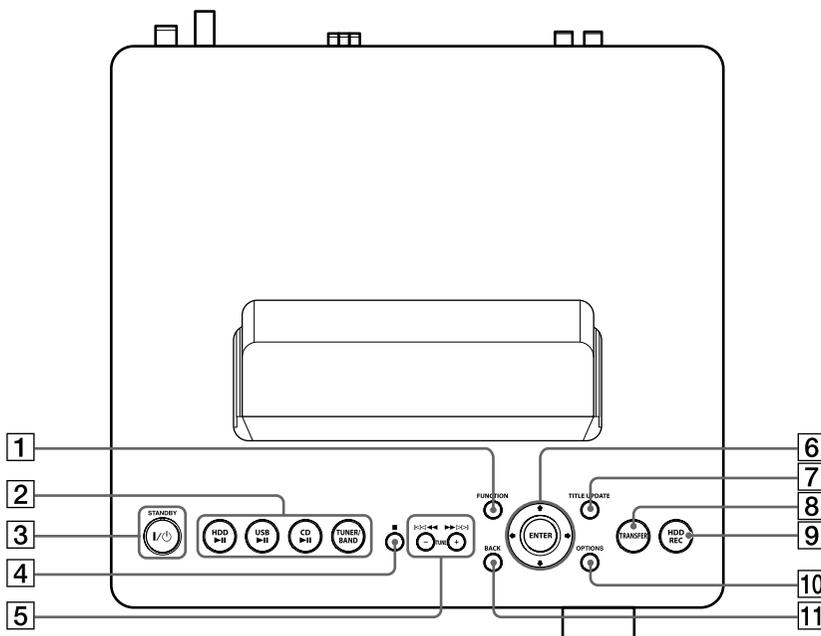

### 1 FUNCTION button

Use to select a function (page 17).

### 2 Playback buttons

Use to select the function directly and start playback at the same time.

- HDD▶▶ button (page 29)
- USB▶▶ button (page 34)
- CD▶▶ button (page 30)
- TUNER/BAND button (page 32)

### 3 I/O (power) button and STANDBY indicator

- I/O (power) button  
Turns the power on or off.
- STANDBY indicator  
Lights up when the unit is turned off.

### 4 ■ (stop) button

Use in each function to stop an operation.

### 5 ◀◀, ▶▶, ◀◀, ▶▶, and TUNE+ • TUNE- buttons

- ◀◀ and ▶▶ buttons  
Cues the beginning of a track.
- ◀◀ and ▶▶ buttons  
Fast rewind and fast forward the playback.
- TUNE + and TUNE - buttons  
Use to adjust the tuning frequency (page 32).

### 6 Menu operation buttons

Use to select menu items and enter menu settings (page 17).

- ↑, ↓, ← and → buttons  
Use to select a menu item or to change a setting.
- ENTER button  
Use to enter a setting.

### 7 TITLE UPDATE button

Use to display the Title Update menu (page 43).

#### For the UK model

### TITLE UPDATE/DAB AUTO SCAN button

- DAB AUTO SCAN button  
Use to scan DAB services automatically while the unit is in the DAB function (page 20).

### 8 TRANSFER button

Use to transfer tracks to a USB device (page 26).

**9 HDD REC button**

Use for recording to the HDD Jukebox (pages 23, 54).

**10 OPTIONS button**


Displays the Option menu (page 17).  
Menu items will vary according to the selected function.

**11 BACK button**

Use to go back to the previous display (pages 16, 54).

---

## Front of the main unit

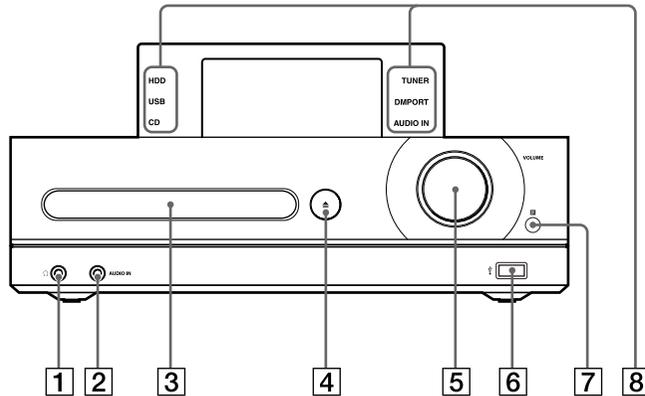

**1** 🎧 **(headphones) jack**

Use to connect headphones.

**2** **AUDIO IN jack**

Use to connect the audio output jack of an external component (page 36).

**3** **Disc tray**

Use to load a CD (page 30).

**4** **CD button**

Opens and closes the disc tray (page 30).

**5** **VOLUME dial**

Use to adjust the volume.

**6** **ψ (USB) port**


Use to connect a USB device (pages 24, 34).

**7** **Remote sensor**

**8** **Function indicators**

Lights up to indicate the selected function.

# Display

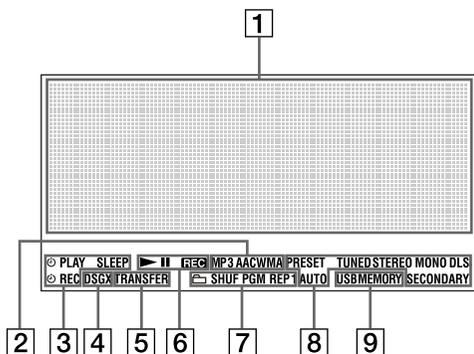

## 1 Text information

Displays text information, such as a track name, album name, etc.

## 2 Audio format indicators

Lights up to indicate the audio format.

## 3 Timer indicators

Lights up when the Play Timer, Recording Timer, or Sleep Timer is set (pages 50 to 52).

## 4 DSGX indicator

Lights up when the DSGX function is set to "ON" (page 11).

## 5 TRANSFER indicator

Lights up while audio data is being transferred (page 26).

## 6 Operation status indicators

Lights up to indicate the current operation status (playing, recording, or paused).

## 7 Play mode indicators

Lights up to indicate the current play mode (page 38).

## 8 Tuner reception indicators

Lights up when the respective radio function is active (page 32).

## 9 USB MEMORY indicator

Lights up when a USB device is connected (page 34).

## How data are shown in the display

Data in the HDD Jukebox, MP3 disc and USB device are displayed as follows.

### Data structure in the HDD Jukebox

#### 1st directory (Artist directory)



Press  $\uparrow/\downarrow$  to select the desired artist, and then press ENTER to go to the next directory.



#### 2nd directory (Album directory)



A list of albums for the selected artist appears. Press  $\uparrow/\downarrow$  to select the desired album, and then press ENTER to go to the next directory.



#### 3rd directory (Track directory)



The tracks in the selected album appear.

## Data structure on an MP3 disc or a USB device

### 1st directory (Folder directory)



Press **↑**/**↓** to select the desired folder, and then press ENTER to go to the next directory.



### 2nd directory (Track directory)



The tracks in the selected folder appear.

## To select the function

Press the FUNCTION button.

Each press of the button changes the function as follows.

TUNER → DMPOR → AUDIO IN → HDD  
→ USB → CD → TUNER → ...

## How to operate the Option menu

- 1 Press OPTIONS.  
The unit enters the Option menu.
- 2 Press **↑**/**↓** to select the desired item.
- 3 Press ENTER.

# Connecting the speakers and antennas

## AUDIO OUT jack (for the Asian and Oceanian models only)

Use to connect the optional audio component (such as a cassette deck) through an audio connecting cord (optional).

### Note

There is no audio output from these jacks while the AUDIO IN function is selected.

## Speaker cords


Press down on the tab below the terminal and insert the appropriate speaker cord.

Make sure the metal leads (not the part covered with vinyl insulation) are securely inserted into the speaker terminals. Insert the end of the cord marked with a red line into the + terminal and the cord with no marking into the – terminal.

Make sure to match the projections on the SPEAKER terminals and the speaker cords, and insert the cords firmly to the SPEAKER terminals.

### Note

Do not connect speakers other than those supplied with this unit.

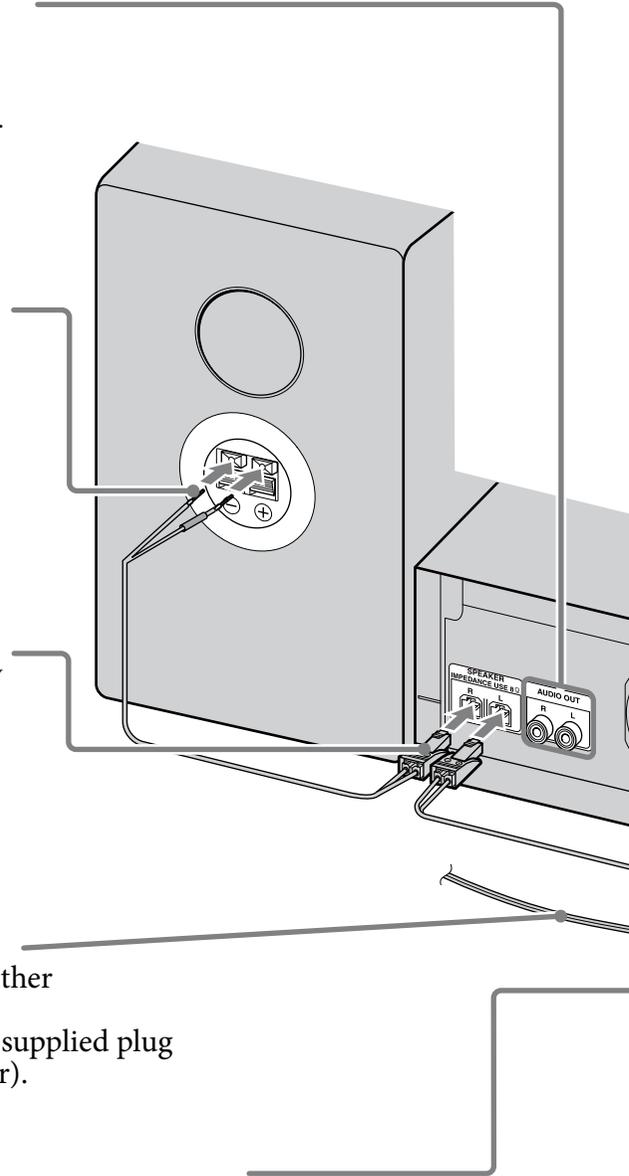


## Power cord

Connect the power cord to a wall outlet after all other connections have been made.


If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models supplied with an adaptor).

## DAB lead antenna (for the UK model only)

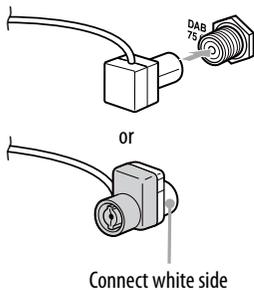

With a DAB external antenna (optional), you can obtain a higher DAB broadcast sound quality. We recommend that you use the supplied DAB lead antenna only temporarily until you install a DAB external antenna.

75  $\Omega$  coaxial cable with F male type connector will be needed to install the DAB external antenna (optional).

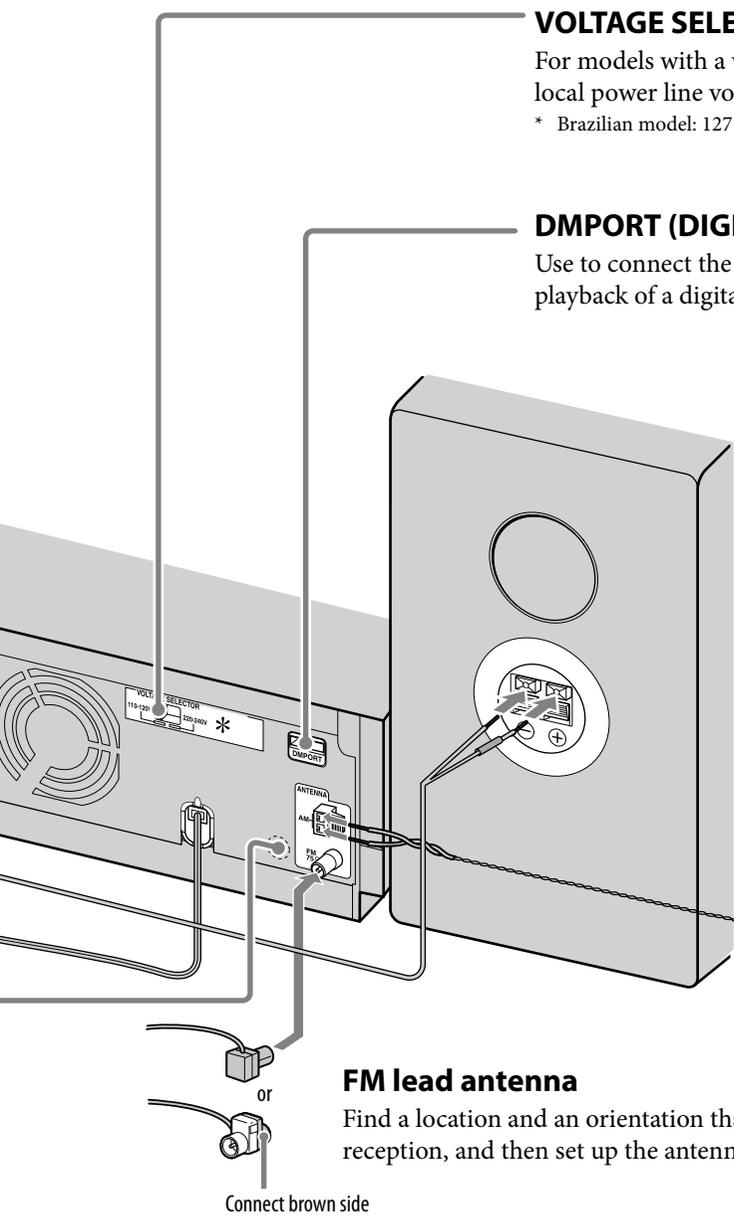

### VOLTAGE SELECTOR

For models with a voltage selector, set VOLTAGE SELECTOR to the local power line voltage.


\* Brazilian model: 127 V or 220 V

### DMPORT (DIGITAL MEDIA PORT)

Use to connect the DIGITAL MEDIA PORT adapter to listen to the playback of a digital audio player (optional) (page 37).

### AM loop antenna

Find a location and an orientation that provide good reception, and then set up the antenna.

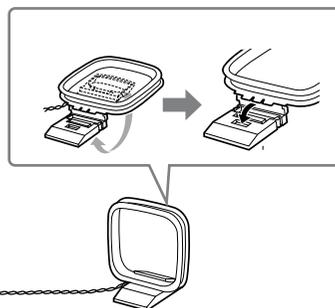

### FM lead antenna

Find a location and an orientation that provide good reception, and then set up the antenna.

Connect brown side

#### Note

Keep the FM and AM antennas away from the speaker cords, the power cord and a USB cable to avoid picking up noise.

The model shown in the illustration may differ from the model for your region.


## When carrying this unit

- 1 Remove a disc from the disc tray to protect the CD mechanism.
- 2 Press FUNCTION repeatedly to select "CD".
- 3 Press and hold OPTIONS on the main unit, and then press I/⏻ (power) on the main unit until "STANDBY" appears in the display.
- 4 After "LOCK" appears, disconnect the power cord.

## To insert the batteries into the remote control

Slide and remove the battery compartment lid, and then insert the two supplied R6 (size AA) batteries (⊖ end first) matching the polarities as shown below.

When the remote control is no longer able to operate the unit, replace both batteries with new ones.

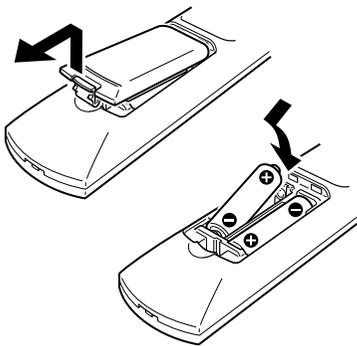

### Notes

- With normal use, the battery should last for six months.
- Do not mix an old battery with new one or mix different types of batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

## To run the DAB Automatic Scan

When you turn on the unit for the first time after you purchase the unit, DAB Automatic Scan starts automatically and creates a list of available services. If you want to run the DAB Automatic Scan again, perform the procedure below. This function is available on the UK model only.


- 1 Press DAB AUTO SCAN on the main unit. "Auto Scan?" and "Push ENTER" appear in the display.
- 2 Press ENTER. Scanning starts. "Auto Scan" appears. Depending on the DAB services available in your area, scanning may take a few minutes. When scanning is completed, a list of available services is created.

### Notes

- If your region does not support DAB broadcast, "No Service" appears.
- Do not press any button on the unit or the remote control during DAB Automatic Scan. Scanning is interrupted and service list may not be created properly. In this case, run the DAB Automatic Scan again.
- If you move to another area, repeat this procedure to store the stations for your new area.
- This procedure clears all previously stored presets.
- Before unplugging the DAB antenna, make sure the unit is turned off to preserve your own DAB settings.
- This tuner does not support data services.

## To attach the speaker pads (for the Latin American model only)

Attach the supplied speaker pads to the bottom corner of the speakers to stabilize the speakers and to prevent them from slipping.

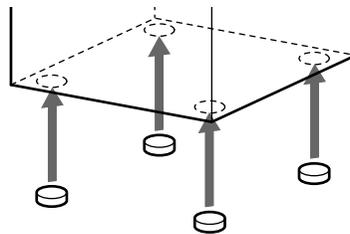

# Setting the clock

The time on the clock must be correctly set for the proper operation of functions. Do the procedure below to set the clock.

---

**1** Press I/⏻ (power) to turn on the unit.

---

**2** Press CLOCK/TIMER SET.  
If the current mode appears on the display, press ↑/↓ repeatedly to select “CLOCK SET?”, and then press ENTER.

---

**3** Press ↑/↓ repeatedly to set the hour, and then press ENTER.

---

**4** Do the same procedure to set the minutes.

The clock settings are lost when you disconnect the power cord or if a power failure occurs.

## **To display the clock when the unit is turned off**

Press DISPLAY. The clock is displayed for about 8 seconds.


# About importing and transferring audio data

This unit allows you to import audio data to the HDD Jukebox from various sources and to manage the data.

You can also transfer audio data to a USB device (digital music player or USB storage device).

Please note that you cannot transfer audio data directly from a CD or the radio to the USB device. To do this, you must first import or record the audio data to the HDD Jukebox, and then transfer the data from the HDD Jukebox to the USB device.


For details on which USB devices are compatible, see page 71.

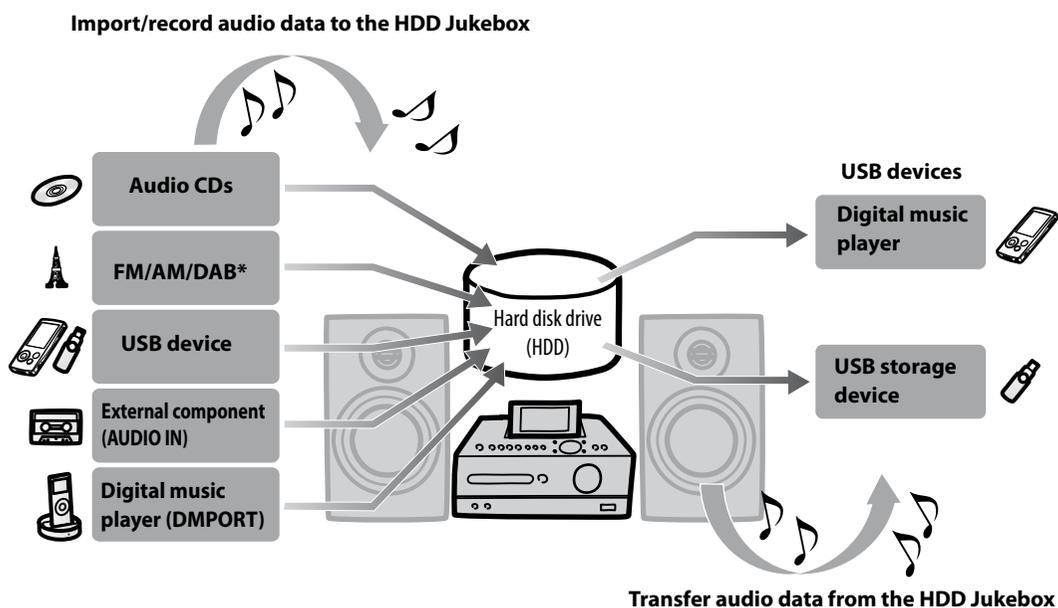

\* For the UK model only

# Importing/Recording audio data to the HDD Jukebox

You can record/import audio data from a CD, a radio broadcast, an externally connected component, or a USB device.

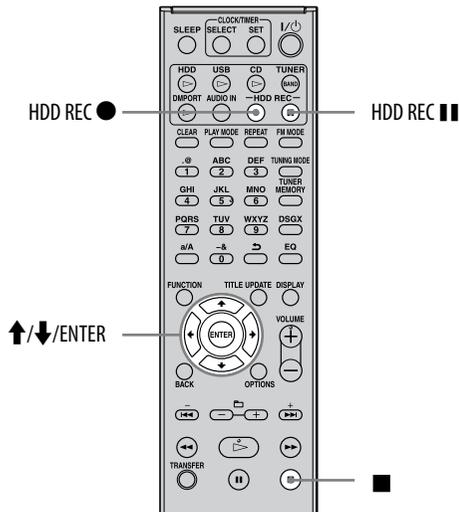

## Recording from an audio CD

Tracks are automatically converted to the MP3 audio format and a bit rate of 128 kbps.

- 1** Select the CD function and load a disc in the disc tray (page 30).  
Title information for the CD is automatically obtained from the unit's database. If there is no title information that matches for the CD, it will not be displayed.
- 2** Press **HDD REC ●**.  
The unit changes to the recording standby mode.
- 3** Press **↑/↓** to select "All Track", and then press **ENTER**.  
Recording starts.

## To cancel recording

Press **■**.

## To record individual tracks

Select the desired track in step 3.

## To change the recording speed

You can change the recording speed. Make sure to set the recording speed before performing the recording operation.

- 1** While the unit is in the CD function, enter the Option menu, and then select "REC Speed".
- 2** Select "Normal Speed" or "High Speed", and then press **ENTER**.

|              |  |
|--------------|--|
| Normal Speed | Recording is done at normal speed. Sound monitoring during recording is possible in this mode.   |
| ◆ High Speed | Recording is done approximately four times faster than normal recording. Sound monitoring during the recording is not possible in this mode. |

◆: Factory setting)

## Notes

- When recording a CD, the unit may produce more noise and vibration than during CD playback. This is because of the higher disc rotation speed used during recording and is not a malfunction. The amount of noise or vibration produced will vary depending on the CD type.
- If the title information contains characters that the unit cannot display, those characters are replaced by an underscore ("\_").

## Tips

- If title information cannot be obtained, use the Title Update function to add titles (page 41).
- If you record only one track, the track is stored to the following location in the HDD Jukebox.  
"Favorite" folder in the artist directory → "REC 1"  
folder in the album directory → "track name" in the track directory

---

## Importing audio data from an MP3 disc or a USB device

You can import audio data stored on an MP3 disc or a USB device to the HDD Jukebox. Sound monitoring during recording is not possible. When you import audio data to the HDD Jukebox, the audio format, bit rate and title information of the imported data remain unchanged from the source.

The following audio formats can be imported to this unit.

- MP3 (“.mp3”)
- Windows Media Audio file (“.wma”)
- AAC (“.m4a”)

---

### 1 Prepare the unit for recording.

Select the function according to the medium to be imported.

- To import tracks from an MP3 disc:  
Select the CD function and load a disc in the disc tray (page 30).
- To import tracks from a USB device:  
Select the USB function and connect a USB device to the  $\Psi$  (USB) port (page 34).

---

### 2 Select the folder or a track that you want to import.

If you want to import the entire contents of the selected medium, go to step 3.

---

### 3 Press HDD REC ●.

The unit changes to the importing standby mode.

---

### 4 Press $\uparrow/\downarrow$ to select the item.

- To import the entire contents of the selected medium:  
Select “All Folder”.
- To import one folder:  
Select “All Track”.
- To import one track only:  
Make sure that the desired track is selected.

---

### 5 Press ENTER.

Importing starts.

Title information is also imported from the source.

### To cancel importing

Press ■.

#### Tips

- If you want to import music data stored on your computer to the HDD Jukebox, copy the data from the computer to a USB device, and then import the data from the USB device to the HDD Jukebox.
- If you record only one track, the track is stored to the following location in the HDD Jukebox.  
“Favorite” folder in the artist directory  $\rightarrow$  “REC 1” folder in the album directory  $\rightarrow$  “track name” in the track directory

### To select the source memory on a USB device for importing

For some USB devices, you may have to select the memory (for example, the internal memory or a memory card) in which the desired folder or track is stored. In this case, select the memory as follows.

For details on which USB devices are compatible, see page 71.

1 Select the USB function and connect the USB device to the  $\Psi$  (USB) port.

2 Enter the Option menu, select “USB Select”, and then select the memory in which the desired folder or track is stored.

3 Do the procedure from step 2 of “Importing audio data from an MP3 disc or a USB device” (this page).

## Recording from a radio broadcast, DAB service\*, or externally connected device

You can record a radio broadcast, a DAB service\*, or from an external device. Tracks are automatically recorded and stored in the MP3 audio format and at a bit rate of 128 kbps.

\* For the UK model only

### 1 Prepare the unit for recording.

Select the function according to the item to be recorded.

- To record a radio broadcast or DAB service\*:  
Tune in the desired radio program or DAB service (page 32 or 33).

\* For the UK model only

- To record from an external device (AUDIO IN):  
Select the AUDIO IN function, and then connect an external device to the AUDIO IN jack (page 36).
- To record from an external device (DMPort):  
Select the DMPort function, and then connect an external device to the DMPort (page 37).

### 2 Press HDD REC ●.

Recording starts.  
The unit automatically adds a track mark at 60-minute intervals.

### To cancel recording

Press ■.

### To pause recording

Press HDD REC ■■.

### Tips

- A track mark is added whenever you press the HDD REC ● button. Track marks can only be added for tracks with a minimum length of 4 seconds.
- The recorded data are named as follows in the HDD Jukebox.

| Recording source | Artist directory | Album directory*1 | Track directory*1 |
|------------------|------------------|-------------------|-------------------|
| FM               | (TUNER FM)       | FM0001            | Track01           |
| AM               | (TUNER AM)       | AM0001            | Track01           |
| DAB*2            | (TUNER DAB)      | DAB0001           | Track01           |
| AUDIO IN         | (AUDIO)          | AUDIO 0001        | Track01           |
| DMPort           | (DMPort)         | DMPort 0001       | Track01           |

\*1 The number added to a title depends on how many times recordings have been made from the given recording source.

\*2 For the UK model only

## Recording programmed tracks

When the play mode is set to “PGM” (program) with the CD or USB function active, you can record a program to the HDD Jukebox (page 39).

- 1 With the unit stopped, program play set, and the respective function active, press HDD REC ●.

- 2 Press ↑/↓ to select “All Step”, and then press ENTER.


Recording starts.

# Transferring audio data from the HDD Jukebox

You can transfer audio data in the HDD Jukebox to a device connected to the  $\Psi$  (USB) port. For details on which USB devices are compatible, see page 71.

## Notes

- If the AC power adaptor is supplied with the connected device, it is recommended that you operate the device on house current. When operating the device on batteries, make sure the remaining battery power is sufficient. We do not guarantee against malfunctions, transfer failures, or destruction of audio data caused by shortages in battery power.
- Make sure that you do not disconnect the USB cable during transfer. If you do, the unit or the connected device may malfunction.

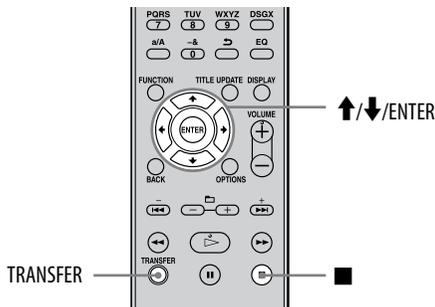

## Transferring audio data to a USB device

- 1** Connect a USB device to the  $\Psi$  (USB) port on the unit.  
Refer also to the operating manual of the USB device.
- 2** Select the HDD function.
- 3** Select an item (album or track) that you want to transfer.  
If you want to transfer the entire contents of the HDD Jukebox, go to step 4.
- 4** Press TRANSFER.  
The unit enters standby mode.
- 5** Press  $\uparrow/\downarrow$  to select the item you want to transfer.
  - To transfer all tracks for the selected album:  
Select "All Track".
  - To transfer the selected track only:  
Make sure the desired track is selected.
- 6** Press ENTER.  
Transfer starts.

## To cancel a transfer

Press ■.

When you cancel a transfer, it may take a while for the transfer to stop.

If you cancel a transfer after it has started, the track will not be transferred.

## To select the destination memory on a USB device for transferring

For some USB devices, you may have to select the destination memory (for example, the internal memory or a memory card) to which the audio data is to be transferred. In this case, select the memory as follows.

For details on which USB devices are compatible, see page 71.

- 1 Select the USB function and connect the USB device to the  $\Psi$  (USB) port.
- 2 Enter the Option menu, select "USB Select", and then select the destination memory.
- 3 Do the procedure from step 2 of "Transferring audio data to a USB device" (page 26).

---

## Transferring programmed tracks

When the play mode is set to "PGM" (program) with the HDD function active, you can transfer a program to a USB device connected to the  $\Psi$  (USB) port (page 39).

- 1 With the unit stopped, program play set, and the HDD function active, press TRANSFER.
- 2 Press  $\uparrow/\downarrow$  to select "All Step", and then press ENTER.  
Transfer starts.

### Tip

The transfer time depends on the item being transferred.

Example:

A 60-minute track (MP3/128 kbps) recorded from a radio broadcast or through the AUDIO IN jack takes about 6 minutes to transfer.

# Erasing tracks on the USB device

You can erase tracks on a connected USB device from this unit.

## Note

Make sure not to disconnect the USB device or turn the power off until the erasing has completed.

- 1 Select the USB function and connect the USB device with the tracks you want to erase.
- 2 Enter the Option menu, and then select "Erase".
- 3 Press **↑/↓** to select the item to be erased, and then press ENTER.
  - To erase the entire contents of the USB device:  
Select "All Erase".
  - To erase a folder:  
Select the folder, and then select "All Track".
  - To erase one track only:  
Select the folder that contains the track you want to erase, and then select the track.
- 4 Press **↑/↓** to select "OK?", and then press ENTER.

## To cancel erasing


Press **■**.

It may take a while for the cancellation to take effect.

# Playing the HDD Jukebox


The audio formats that can be played back by this unit are MP3\*, WMA\* and AAC\*.

\* Tracks with copyright protection (Digital Rights Management) cannot be played by this unit. Tracks downloaded from Internet websites (including online music stores) may not be played by this unit.

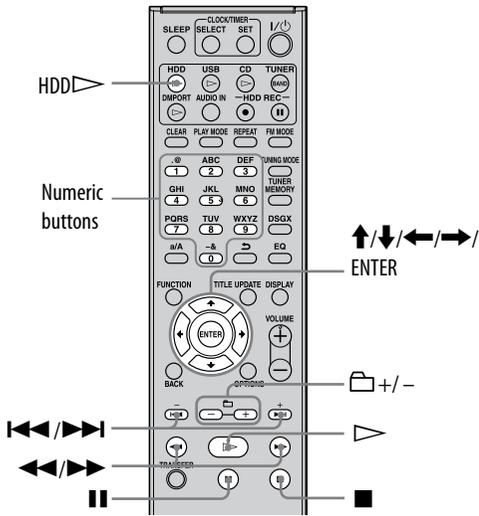

Press **HDD** .

Playback starts.  
Playback starts from the track you last played or recorded.

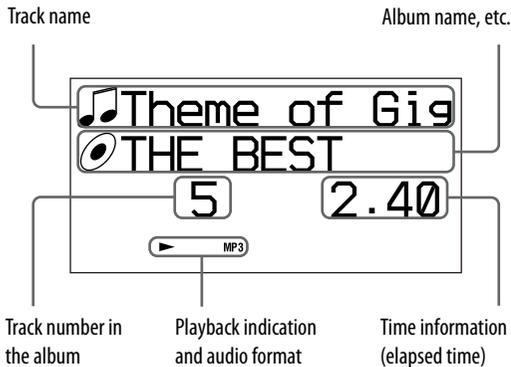

## Other operations

| To                           | Do the following   |
|------------------------------|--|
| Stop playback                | Press  .   |
| Pause playback               | Press  . Press  again or  to resume playback.   |
| Find a point in a track      | Press and hold down  /  during playback, and release it at the desired point.   |
| Select a previous/next track | Press  /  during playback.  |
| Select a track               | Press  /  /  /  to select a track. Or press the corresponding numeric button*, and then press ENTER. |
| Select an album              | Press  +/-.   |
| Check the track information  | During playback, press DISPLAY.  |

\* For numbers from 10 onward, press a numeric button for each digit (e.g., for 15: press [1] and [5]).

### Tip


If title information cannot be obtained, use the Title Update function to add titles (page 41).

### Notes

- The following audio formats can be played back by this unit (tracks with copyright protection (Digital Rights Management) cannot be played by this unit).
  - MP3 (“mp3”)
  - Windows Media Audio file (“.wma”)
  - AAC (“.m4a”)
- Title information (track title, artist name, or album title) that appears when you press the DISPLAY button during playback cannot be edited.


# Playing a CD

This unit can play audio CDs and CD-R/RW discs recorded with MP3 audio tracks. See page 68 for details on playable discs.

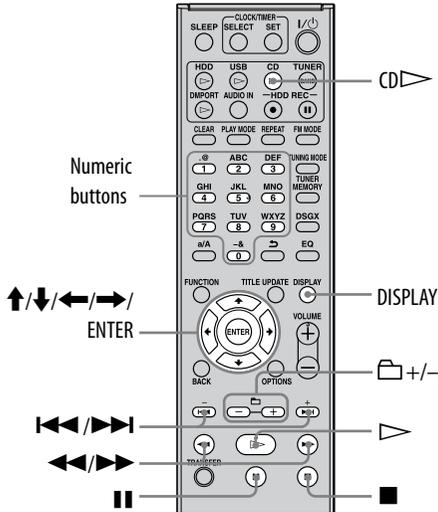

## 1 Press CD and place a disc into the disc tray.

The disc tray slides out.

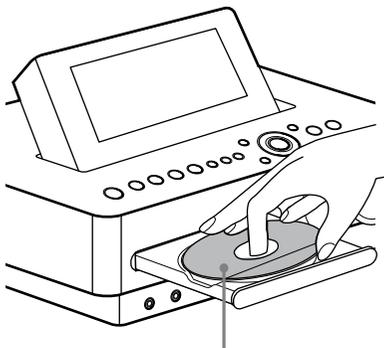


Load a disc with the label side up.

The disc tray closes when you press CD  again.

The unit automatically starts searching for title information for the disc from the unit's database (Gracenote). If title information cannot be found, it will not be displayed. If multiple matches are found for a disc, press  to select the desired title, and then press ENTER.

## 2 Press CD .

Playback starts.

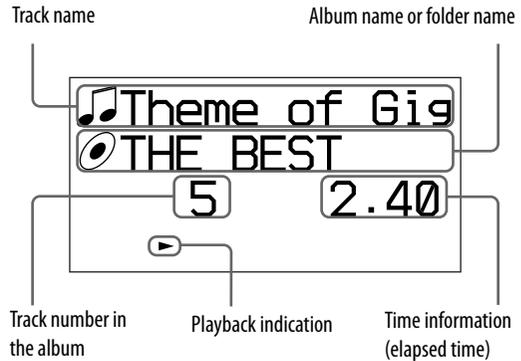

## About the directory structure and playback order of MP3 files

MP3 files are accessed at two directory levels: folder and file. A folder may contain sub-folders (sub-directories). After the unit has played all files in a folder (or sub-folder), it goes to the first file in the next folder (or sub-folder).

On this unit, MP3 files on data CDs can be displayed down to the 8th sub-folder (sub-directory 8).

## Other operations

| To  | Do the following  |
|---|---|
| Stop playback                                       | Press ■.  |
| Pause playback                                      | Press ■. Press ■ again or ▷ to resume playback.   |
| Find a point in a track                             | Press and hold down ◀▶/▶▶ during playback, and release it at the desired point.   |
| Select the previous/next track                      | Press ◀▶/▶▶ during playback.  |
| Select a track                                      | Press ↑/↓/◀/▶ to select a track. Or press the corresponding numeric button*1, and then press ENTER.   |
| Select a folder (MP3 disc only)                     | Press ☐ +/- to select a folder.   |
| Switch the time information display (audio CD only) | During playback, press DISPLAY repeatedly. Each press changes the time information as follows.<br>Elapsed time → remaining time of a track → remaining time on a disc*2 |
| Check the track information                         | During playback, press DISPLAY.   |
| Remove the disc                                     | Press CD▲ on the main unit.   |

\*1 For numbers from 10 onward, press a numeric button for each digit (e.g., for 124: press [1], [2] and [4]).

\*2 The remaining time on a disc cannot be displayed during shuffle play or program play.

### Tips

- If title information cannot be obtained, use the Title Update function to add titles (page 41).
- To select another title for a disc for which multiple matches were found in the unit's database (step 1 on page 30), press OPTIONS, press ↑/↓ to select "CD Info", and then select the title.

## Notes on playing MP3 disc

- Do not save other types of files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in alphabetical order.
- The unit can only play MP3 files that have a file extension of ".mp3".
- If there are files on the disc that have the ".MP3" file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of :
  - MP3 folders is 255 (including the root folder).
  - MP3 files is 511.
  - MP3 files and folders that can be contained on a single disc is 512.
  - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.


## Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and other sessions are not played back.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

# Listening to the radio or DAB services

You can tune in radio stations or DAB services either manually or automatically. Pre-setting stations or services in advance allows you to recall them up by number.

DAB services can be received with the UK model only.

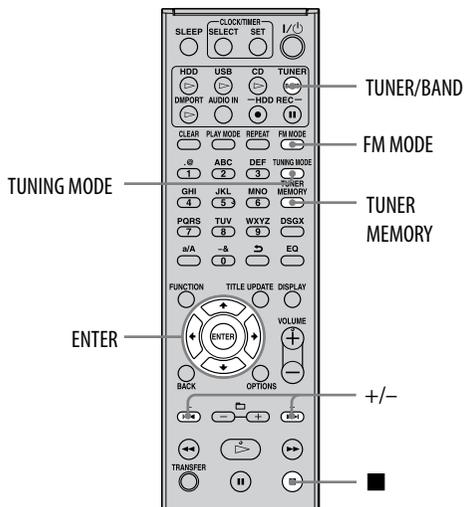

## Selecting a radio station or a DAB service\*

Before you can receive DAB services, the broadcast components (service components) must first be registered by conducting a DAB Automatic Scan (see “To run the DAB Automatic Scan” on page 20).\*


\* For the UK model only

- 1 Press **TUNER/BAND** repeatedly to select “DAB”, “FM”, or “AM”.

- 2 Press **TUNING MODE** repeatedly until “AUTO” appears in the display.

- 3 Tune in the desired station or service.

Press +/- (TUNE +/- on the main unit). Scanning stops automatically when a station is turned in, and then “TUNED” and “STEREO” (for stereo program only) appear in the display. To cancel scanning, press ■.

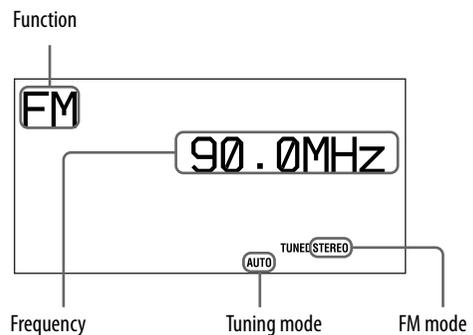

When you tune in an FM station or a DAB service that provides RDS (Radio Data System) services, the station name or service name appears in the display (on European models only).

## To tune in a station with a weak signal (FM or AM reception only)

If “TUNED” does not appear and scanning does not stop, press **TUNING MODE** repeatedly until “AUTO” or “PRESET” disappears, and then press +/- (TUNE +/- on the main unit) repeatedly to tune in the desired station.

## To reduce static noise during reception of a weak FM stereo station

Press FM MODE repeatedly until "MONO" appears in the display to switch the stereo reception to monaural.

## To change the AM tuning interval

The AM tuning interval is factory set to 9 kHz (or 10 kHz for some areas; this function is not available on the European model).

- 1 Tune in any AM station, and then press I/⏻ to turn off the unit.
- 2 Press DISPLAY to display the clock.
- 3 While pressing and holding TUNE + on the main unit, press I/⏻ on the main unit. All the preset AM stations are erased. To reset the interval to the factory setting, do the same procedure.

### Notes on listening to the DAB service

- When tuning in a DAB service, it may take a few seconds before you hear any sound.
- Primary service is automatically received when secondary service ends.

---

## Presetting radio stations or DAB services\*

By presetting FM stations, AM stations or DAB services\*, you can easily tune them in later merely by selecting the corresponding preset number. You can preset up to 20 FM stations or DAB services and up to 10 AM stations.

\* For the UK model only

- 
- 1 Turn in the desired radio station or DAB service ("Selecting a radio station or a DAB service" on page 32).

- 
- 2 Press TUNER MEMORY.

- 
- 3 Press +/- to select a preset number, and then press ENTER.

- 
- 4 Repeat steps 1 to 3 to store other stations or services.

The preset stations or services are retained for about half a day even if you disconnect the power cord or if a power failure occurs.

## To listen to the preset station or service

- 1 Press TUNER/BAND repeatedly to select "DAB", "FM", or "AM".
- 2 Press TUNING MODE repeatedly until "PRESET" appears in the display.
- 3 Press +/- to select the preset station.

### Tip


You can select the preset station using the numeric buttons on the remote control.

For example, when you select the station which preset number is 15, press 1 and 5, and then press ENTER. If you enter unavailable preset number, "--" appears in the display and you cannot select the station.

# Listening to music of a USB device

You can connect an optional USB device to the  $\Psi$  (USB) port on the unit and listen to music stored in the USB device. For details on the USB device that can be connected to this unit, see “USB devices supported by this unit” (page 71). The audio formats that can be played back by this unit are MP3\*, WMA\* and AAC\*.

\* Tracks with copyright protection (Digital Rights Management) cannot be played by this unit. Tracks downloaded from Internet websites (including online music stores) may not be played by this unit.

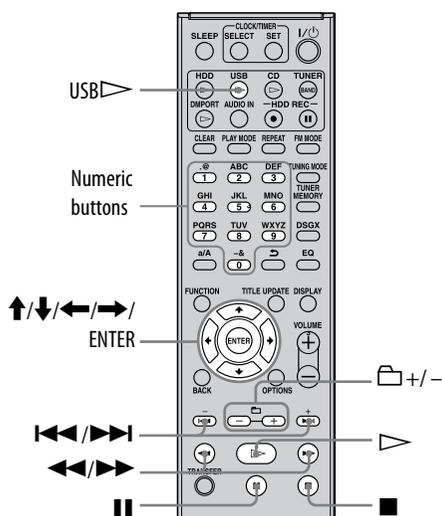

## 1 Connect an optional USB device to the $\Psi$ (USB) port on the unit.

When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected. Refer to the operation manual of the USB device for details on the operation. When the USB device is connected, “Reading” appears, followed by the volume label.

### Note

It may take about 10 seconds before “Reading” appears depending on the type of USB device connected.

## 2 Press USB $\blacktriangleright$ to start playback.



## Other operation

| To                             | Do the following  |
|--------------------------------|---|
| Stop playback                  | Press $\blacksquare$ .  |
| Pause playback                 | Press $\ \ $ . Press $\ \ $ again or $\blacktriangleright$ to resume playback.  |
| Find a point in a track        | Press and hold down $\blacktriangleleft/\blacktriangleright$ during playback, and release it at the desired point.                      |
| Select the previous/next track | Press $\blacktriangleleft/\blacktriangleright$ during playback.   |
| Select a track                 | Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select a track. Or press the corresponding numeric button*, and then press ENTER. |

| To                          | Do the following   |
|-----------------------------|--|
| Select a folder             | Press  +/- to select an folder.   |
| Check the track information | During playback, press DISPLAY.  |
| Remove the USB device       | While the unit is stopped, press and hold  until “Device Stop” appears, and then remove the USB device. |

\* For numbers from 10 onward, press a numeric button for each digit (e.g., for 124: press [1], [2] and [4]).


### Notes on the USB device

- With some connected USB devices, after an operation is performed, there may be a delay before it is performed by the unit.
- This unit does not necessarily support all the functions provided in a connected USB device.
- Music files are played back in alphabetical order.
- Always press  and make sure that “Device Stop” appears before removing the USB device. Removing the USB device while “Device Stop” is not displayed may corrupt the data on it or damage the USB device itself.
- Do not save other types of files or unnecessary folders on an USB device that has audio files.
- Folders that have no audio files are skipped.
- The maximum numbers of folders and files that can be contained on a single USB device are as follows:
  - 999 folders (including the root folder)
  - 999 files
 The maximum number of files and folders may vary depending on the file and folder structure.
- The following audio formats can be played back by this unit (files with copyright protection (Digital Rights Management) cannot be played by this unit).
  - MP3 (“.mp3”)
  - Windows Media Audio file (“.wma”)
  - AAC (“.m4a”)
 Note that even when file names have the above file extensions, if the actual file differs, the unit may produce noise or may malfunction.
- Compatibility with all encoding/writing software, recording devices, and recording media may produce noise, interrupted audio, or may not play at all.

# Connecting an external component (AUDIO IN)

You can listen to or record playback sound from an external component (such as a cassette deck) connected to the AUDIO IN jack on the front of the unit.

Use an audio connecting cable (optional) to connect the AUDIO IN jack on the unit to the audio out jack on the external component. Make sure the audio connecting cord is firmly inserted into both jacks. If not, noise may be generated in the sound output.

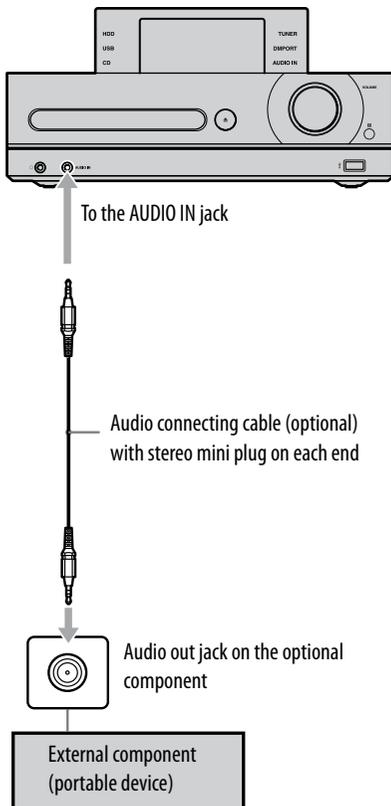

---

**1** Connect an external component to the AUDIO IN jack on the unit.

---

**2** Press AUDIO IN.

---


**3** Play the connected component.

The playback is output from the speakers of the unit.

Refer to the operating manual of the connected component.

# Connecting a digital music player to the DMPORT

You can listen to or record playback sound from an optional digital music player (such as a portable audio player, etc.) that is compatible to DMPORT connection.  
Connect the DIGITAL MEDIA PORT adapter to the unit and the digital music player.

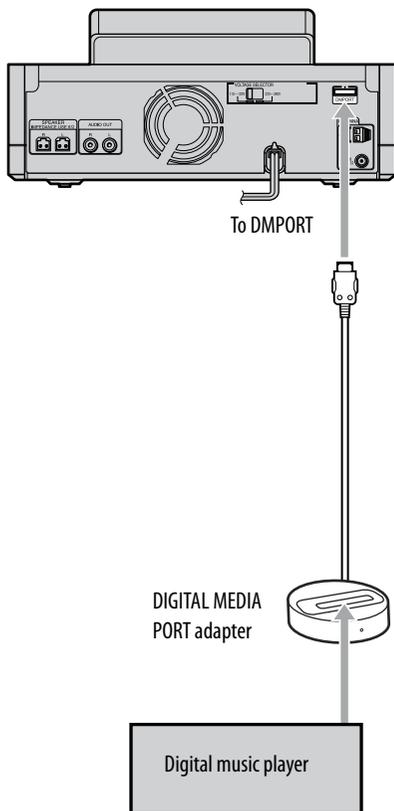

**1** Connect the DIGITAL MEDIA PORT adapter to the DMPORT on the unit and to the external digital music player (optional).

**2** Press DMPORT .

The playback is output from the speakers of the unit.

Refer to the operating manual of the connected digital music player (optional).

## Notes

- Depending on the type of DIGITAL MEDIA PORT adapter, you may be able to operate the connected digital music player using either the buttons on the remote or the unit.
- Available DIGITAL MEDIA PORT adapters vary in each area.
- Do not connect an adapter other than the DIGITAL MEDIA PORT adapter.
- Do not connect or disconnect the DIGITAL MEDIA PORT adapter to/from the DMPORT while the unit is on.
- When using a DIGITAL MEDIA PORT adapter that has video output function, connect the adapter directly to the TV.

# Repeat play · Shuffle play · Program play

Tracks in the HDD Jukebox, on an audio CD, on an MP3 disc, or in a USB device can be played back on this unit in various play modes.

## Setting the play mode

While the unit is stopped and the respective function is selected, press PLAY MODE repeatedly.

Each time you press the button, the play mode changes and the respective indicator lights up.



### When the HDD function is selected

| Play mode/<br>indicator | Description   |
|-------------------------|---|
| ◆ Continue / (none)     | The unit plays all of the tracks in the HDD Jukebox in sequential order.    |
| Album Continue /        | The unit plays all of the tracks in the selected album in sequential order. |
| Shuffle / SHUF          | The unit plays all of the tracks in the HDD Jukebox in random order.        |
| Album Shuffle /  SHUF   | The unit plays all of the tracks in the selected album in random order.     |

| Play mode/<br>indicator | Description  |
|-------------------------|--|
| Program / PGM           | The unit plays the programmed tracks in the specified order (page 39). |

(◆: Factory setting)

### When the CD function is selected

| Play mode/<br>indicator | Description  |
|-------------------------|--|
| ◆ Continue / (none)     | The unit plays all of the tracks in the disc in sequential order.            |
| Folder Continue / *     | The unit plays all of the tracks in the selected folder in sequential order. |
| Shuffle / SHUF          | The unit plays all of the tracks in the disc in random order.                |
| Folder Shuffle /  SHUF* | The unit plays all of the tracks in the selected folder in random order.     |
| Program / PGM           | The unit plays the programmed tracks in the specified order (page 39).       |

(◆: Factory setting)

\* When playing a CD-DA disc, “Folder Continue” operates in the same way as normal “Continue” play, and “Folder Shuffle” operates in the same way as normal “Shuffle” play.

### When the USB function is selected

| Play mode/<br>indicator | Description  |
|-------------------------|--|
| ◆ Continue / (none)     | The unit plays all of the tracks in the USB device in sequential order.      |
| Folder Continue /       | The unit plays all of the tracks in the selected folder in sequential order. |

| Play mode/<br>indicator    | Description  |
|----------------------------|--|
| Shuffle / SHUF             | The unit plays all of the tracks in the USB device in random order.      |
| Folder Shuffle /<br>📁 SHUF | The unit plays all of the tracks in the selected folder in random order. |
| Program / PGM              | The unit plays the programmed tracks in the specified order (this page). |

◆: Factory setting)

### Tip

You can set the play mode from the Option menu as well. To set the play mode, enter the Option menu, select “Play Mode”, and then select the item.

## Setting repeat play

Repeated playback can be specified for the selected play mode

Press REPEAT repeatedly to select “REP” or “REP1”.

Each press of the button changes the repeat mode and the respective indicator lights up.

| Repeat mode/<br>indicator | Description  |
|---------------------------|--|
| ◆ Repeat Off /<br>(none)  | Repeat play is off.  |
| Repeat All / REP          | The unit plays all of the tracks repeatedly in the selected play mode. |
| Repeat 1 / REP1           | The unit plays the selected track repeatedly.                          |

◆: Factory setting)

### Note

When “Repeat All” has been set for CD playback, all tracks on a disc are played back repeatedly up to five times.

### Tip

You can set the repeat mode from the Option menu as well. To set the repeat mode, enter the Option menu, select “Repeat”, and then select the item.

## Creating your own program (Program play)

You can create a program of selected tracks while the HDD, CD, or USB function is selected on the unit.

Up to 25 tracks can be placed in a program.

**1** While the unit is stopped and the respective function is selected, press PLAY MODE repeatedly until “PGM” lights up in the display.

**2** Press ◀◀/▶▶ to select the desired track.

Press 📁 +/- to select the desired album or folder, and then select the desired track.

**3** Press ENTER to add the track to the program.



**4** Repeat steps 2 and 3 to program other tracks.

**5** Press ▷ to play your program.

The program remains available until you open the disc tray or remove the USB device.

### To cancel program play

While the unit is stopped, press PLAY MODE repeatedly until the “PGM” indicator disappears.

### To delete the last track of the program

While the unit is stopped, press CLEAR.

# Searching for a track

You can search for a track in the HDD Jukebox, CD, or USB device.

---

## Searching for a track in the HDD Jukebox

- 1** While the unit is stopped and no track or album is selected, press **↑/↓/←/→**.  
The unit enters search mode and the artist directory appears.
- 2** Press **↑/↓** to select the desired artist, and then press ENTER.  
The album directory appears.
- 3** Press **↑/↓** to select the desired album, and then press ENTER.  
The track directory appears.
- 4** Press **↑/↓** to select the desired track, and then press ENTER.  
Playback starts.

---

## Searching for a track on a CD or a USB device

- 1** Press **↑/↓** to select the desired folder, and then press ENTER.  
The track directory appears.
- 2** Press **↑/↓** to select the desired track, and then press ENTER.  
Playback starts.

### To cancel searching

Press **■**.

### To switch back to the previous directory

Press BACK.

#### Tip

With the unit in search mode, press **→** to cause the cursor to jump to the first artist name or album/folder name for the next letter of the alphabet.

# Obtaining title information

The database in this unit contains a certain amount of CD information provided by the Gracenote® Music Recognition Service. This allows you to search for titles and add them to albums or tracks whenever a CD is loaded.

If a particular title cannot be found, you can try to obtain it by updating the database with the Title Update function.

## Notes


- When using Title Updater, use the USB storage device (page 71).
- Be sure to close Virtual Expander (MICROVAULT software) before using Title Updater with MICROVAULT (page 71).

## About “Title Updater”

Title Updater is a pre-installed application that allows you to search the Web for title information not contained in the unit’s database. Information such as album names, artist names, and track titles is provided by the Gracenote® Music Recognition Service.

## To obtain the latest title information

- 1 Export the untitled data to an optional USB storage device.  
➔ See “Exporting album information to a USB storage device” (page 43).
- 2 Obtain the latest information from the Web for the untitled data in the USB storage device.  
➔ See “Searching for album information on the computer” (page 43).
- 3 Import the album information to the unit.  
➔ See “Importing the latest album information to the unit” (page 45).

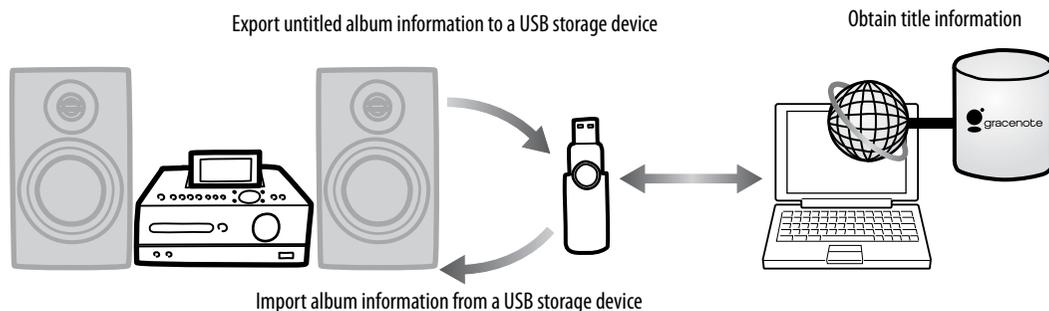

## System requirements

Use of Title Updater requires the following system resources.

|                     |   |
|---------------------|---|
| Computer            | IBM PC/AT or compatible <ul style="list-style-type: none"><li>• CPU: Intel MMX Pentium Processor 166 MHz or higher (Pentium II 266 MHz or higher is recommended).</li><li>• RAM: 64 MB or more (128 MB or more is recommended)</li><li>• USB port</li></ul> |
| Operating System*   | Windows XP Home Edition (Service Pack 2 or later)<br>Windows XP Professional (Service Pack 2 or later)<br>Windows XP Media Center 2004/2005<br>Windows Vista Home Basic/Home Premium/Business/Ultimate  |
| Display/Video board | 800 × 600 pixel screen resolution and 16-bit color or higher  |
| Others              | <ul style="list-style-type: none"><li>• Internet access: 64 kbps or faster is recommended.</li><li>• USB storage device: USB 1.1 or later, 10 MB or more of free space</li></ul>  |

\* This software is incompatible with 64-bit version Operating Systems.

\* This software is incompatible with any Operating System other than those listed here.

### Tip

Windows XP displays are used in the explanations in this section.

### Notes on connecting to the Internet

- Your computer must be connected to the Internet before you can search for title information.
- Normal online searches may not be possible within certain Internet environments.
- You can use Microsoft Internet Explorer connection settings to connect to the Internet. If you do this, make the Internet Explorer settings before using Title Updater.

## Exporting album information to a USB storage device

This section explains how to export album information for which you have no title information to a USB storage device. When you perform this function for the first time, the application (Title Updater) will be automatically exported to the USB storage device as well.

**1** Connect the USB storage device to the  $\Psi$  (USB) port on the unit.

**2** Select the HDD function and press TITLE UPDATE.

The title update menu appears.

**3** Press  $\uparrow/\downarrow$  to select "Export" and press ENTER.

The export menu appears.



**4** Press  $\uparrow/\downarrow$  to select "AllNonTitled" and press ENTER.

All album information that has no title information ("export.dat") is exported to the USB storage device. Title Updater ("TitleUpdater.exe") is automatically exported at this time as well.



### Note

To disconnect the USB storage device from the unit, select the USB function and press and hold  $\blacksquare$  while the unit is stopped, making sure "Device Stop" appears in the display before disconnecting the USB storage device.

## Searching for album information on the computer


**1** Connect the USB storage device (that was disconnected from the unit) to the USB port on your computer.

**2** Double-click [TitleUpdater.exe] in the root directory of the USB storage device.

The computer starts up Title Updater.

If the album information file "export.dat" is stored in the root directory of the USB storage device, a search window appears. If it does, go to step 7.


If the album information file "export.dat" is not stored in the root directory of the USB storage device, an album information selection window appears.

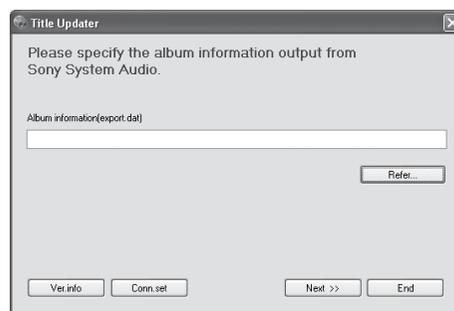


**3** Click [Refer...].

A file selection window appears.


- 4 Open the root folder of the connected USB storage device and select [export.dat] file.

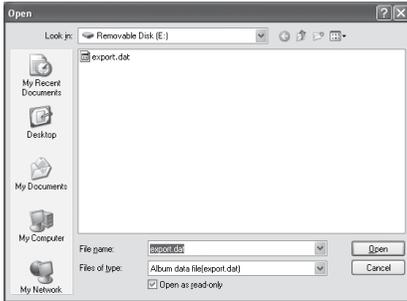


- 5 Click [Open].  
The selected file appears in the album information selection window.

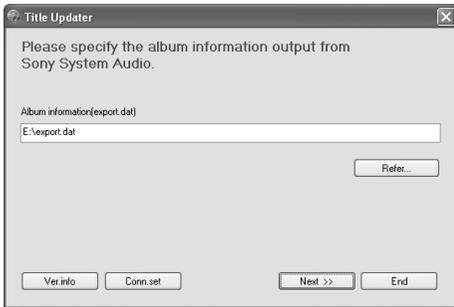

- 6 Click [Next >>].  
A search window appears.

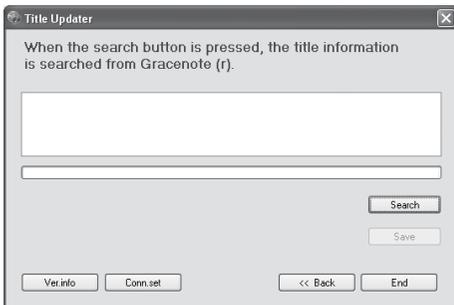

- 7 Click [Search].  
The computer automatically starts searching for title information.

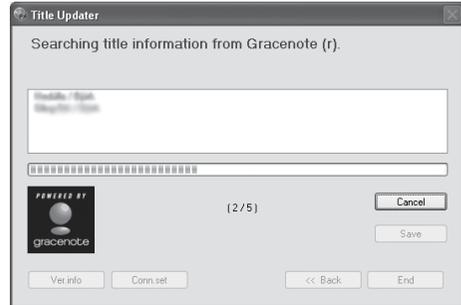


The search results for albums and artists appear in the order in which the match is made.


To cancel the search, click [Cancel].

**When album selection window appears**

If multiple matches are found for an album, an album selection window appears. Select one of the items from the search results.

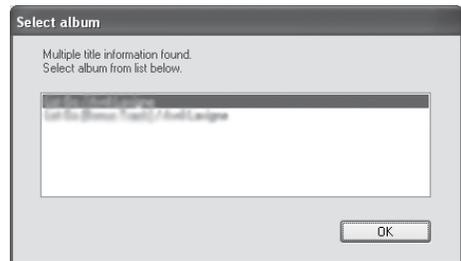

When the search completes, a list of albums for which matches were made appears and the information is automatically stored to the USB storage device.

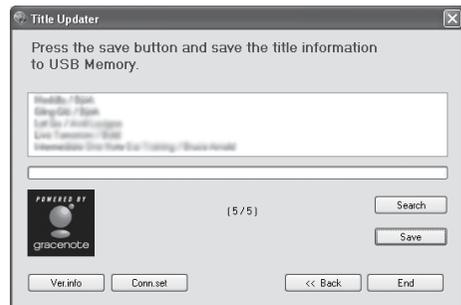

## Notes

- If you cannot access the Gracenote® database, see “To set up a network connection on your computer” (page 46) to make the proper network settings.
- The title information that is obtained is stored as “import.dat” on the USB storage device. Make sure not to disconnect the USB storage device from the computer until saving of the file has completed.
- If you click [Search] again after saving information to the USB storage device, another search is initiated and the saved file (“import.dat”) is deleted from the USB storage device. The file will be saved again after the new search has completed.
- If “import.dat” file is not saved automatically, click [Save].

---

## Importing the latest album information to the unit

**1** Connect the USB storage device (that was disconnected from the computer) to the  $\Psi$  (USB) port of the unit.

**2** Select the HDD function and press TITLE UPDATE.

The title update menu appears.

**3** Press  $\uparrow/\downarrow$  to select “Import”, and then press ENTER.



The unit starts importing the album information from the USB storage device. The latest title information is saved to the database on the unit.

---

## Re-labeling titles

If an album or track title obtained from the unit's database is not correct, you can search for correct information from the Web database. To do this, do the procedure below. For details on the related operations, see the indicated pages.

**1** Export the desired album or track information to the USB storage device.

Connect the USB storage device to the  $\Psi$  (USB) port on the unit.

Select the HDD function, press TITLE UPDATE, select “Export” – “Select”, and then select the album or track you want to relabel (for details on these operations, see page 43).

The selected album or track information is exported to the USB storage device.

### Tip

All untitled album information is also exported to the USB storage device.

**2** Search for title information on your computer.

Do steps 1 to 7 of “Searching for album information on the computer” (page 43).

**3** Import the latest title information to the unit.

Do steps 1 to 3 of “Importing the latest album information to the unit” (this page).

The latest title information is obtained and added to the selected album or track.

## To delete Title Updater


When album information is exported from the unit, the files “TitleUpdater.exe” and “export.dat” are created in the root directory of the USB storage device. When “TitleUpdater.exe” is run on your computer, the files “import.dat”, “ecddb.reg” and “Cupd.ini” are created in the root directory of the USB storage device. To completely delete Title Updater from the USB storage device, you should delete these 5 files from the USB storage device.

## Note on Gracenote® Music Recognition Service


The accuracy of the data provided by the Gracenote® Music Recognition Service are not fully guaranteed.

## To set up a network connection on your computer

- 1 Double-click [TitleUpdater.exe] in the root directory of the USB storage device. Title Updater starts.

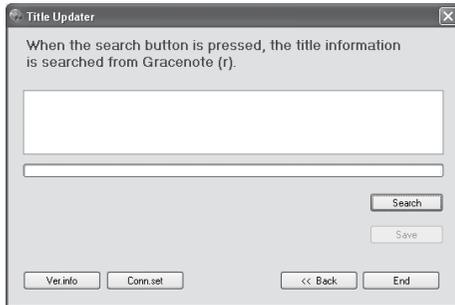

- 2 Click [Conn.set]. The network connection setup display appears.

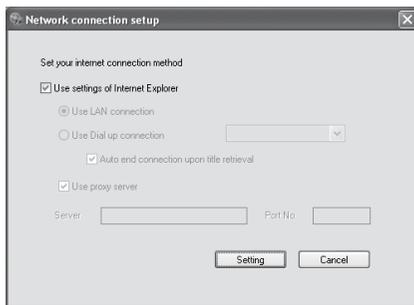

### When using Internet Explorer

Check [Use settings of Internet Explorer] and click [Setting]. Title Updater connects to the Internet using the Internet Explorer settings. (There is no need to make any further settings.)

### When using another browser

Uncheck [Use settings of Internet Explorer] and do the following.

#### • To select the connection method

You can select either a LAN ([Use LAN connection]) or dial-up ([Use Dial up connection]) connection to search online for title information.

For a dial-up connection, select the access point (Internet service provider node) in the combo box.

If you check [Auto end connection upon title retrieval], the connection is automatically ended after title information is obtained from the Web.

#### • When using a proxy server

Check [Use proxy server] and make the settings below.

- [Server]  
Enter the proxy server address.  
(e.g., 190.225.254.22)
- [Port No.]  
Enter the port number of the proxy server.  
(e.g., 8080)

#### Note

If you make any changes to the proxy server settings, restart Title Updater.

### When using a dial-up connection

When you select [Use Dial up connection] and start the online search, a dial up connection setting window appears. Make the following settings.



- [Con.dest.]  
Select the destination remote host (Internet service provider node) from the combo box.
- [User name]  
Enter the user name for connecting to the remote host.
- [Password]  
Enter the password for connecting to the remote host.

Click [Connect] to make the dial-up connection.

# Editing

---

## Changing titles

You can change names of artists, albums and tracks.

This unit can display languages other than English; however, only English text can be entered.

Because items are listed in alphabetical order, whenever you change the name of an artist, album, or track, the order of the item is automatically changed.

---

**1** While the unit is in the HDD function, enter the Option menu, and then select “Name Edit”.

---

**2** Press **↑/↓** to select the item whose title you want to change, and then press **ENTER**.

Do one of the following.

- To change an artist name:  
Select the artist whose name you want to change, and then select “Artist?”.
- To change an album name:  
Select the artist whose album name you want to change, select the album, and then select “Album?”.
- To change a track name:  
Select the artist whose track name you want to change, select the album that contains the track, and then select the track.

---

**3** Enter the title.

For details on entering text, see “Entering text” (page 49).

---

**4** Press **ENTER**.

### To cancel changing a title

Press **■**.

---


## Erasing recordings

You can erase albums or tracks in the HDD Jukebox.

Note that once a recorded item has been erased, it cannot be recovered.

When you erase a track, all tracks following the erased one are renumbered. For example, if you erase track 2, the following track 3 will be renumbered as track 2.

### Example: When erasing track B

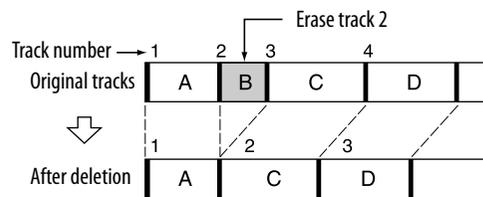

---

### To erase tracks on a USB device

For details, see “Erasing tracks on the USB device” (page 28).

---

**1** While the unit is in the HDD function, enter the Option menu, and then select “Erase”.

---

**2** Press **↑/↓** to select the item, and then press ENTER.

Do one of the following.

- To erase the entire contents of the HDD Jukebox:  
Select "All Erase".
- To erase an album:  
Select the artist whose album you want to erase, select the album, and then select "All Track".
- To erase a track:  
Select the artist whose track you want to erase, select the album that contains the track, and then select the track.




---

**3** Press **↑/↓** to select "OK?", and then press ENTER.

# Entering text

You can enter text using the supplied remote control, as you would with your mobile phone.

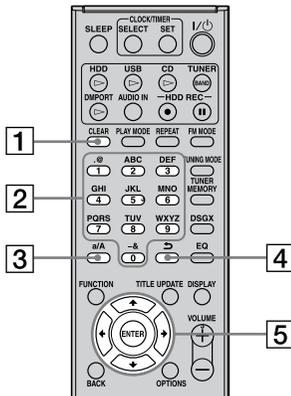

## 1 CLEAR button

Press this button to erase a letter that was just entered.

## 2 Numeric/text buttons

Press the button with the desired letter (ABC, DEF, etc.). Press repeatedly until the desired letter appears.

## 3 a/A button

Press this button to switch between lowercase and uppercase letters.

## 4 ↶ button

Press this button to go to the previous character.

## 5 ↑/↓/←/→ buttons

### • ↑/↓ buttons

Press the ↑ button to move the cursor to the beginning of the text string and then the ↓ button to move the cursor to the end of the text string.

### • ←/→ buttons

Use these buttons to move the cursor.

## Entering text

1 Press the corresponding numeric/text buttons to enter the desired characters.

2 Press → to move the cursor to the next letter.

3 Repeat steps 1 and 2 to input the text string.

## Other operations

| To  | Do the following  |
|---|---|
| Move the cursor   | Press ←/→.  |
| Enter uppercase/lowercase letters ("A" or "a")                  | Press a/A, or press the corresponding numeric/text button repeatedly. |
| Switch the characters (uppercase letters and lowercase letters) | Press a/A.  |

### Note

On the unit, an underscore ("\_") will replace a space or a period (".") at the beginning of a track title, artist name, or album title, and a space or a period (".") at the end of an artist name or album title.

# Using the Sleep Timer

You can set the Sleep Timer to turn off the unit after a certain period on time in 10-minute units. This function is convenient when you want to fall asleep to music or when going out.

---

## Press SLEEP.

Each time you press the button, the duration display changes cyclically in 10-minute unit. If you select "AUTO", the unit automatically turns off in 100 minutes. If during the next 100 minutes the playback of the disc, HDD Jukebox, or USB device ends, then the unit will automatically turn off at the same time.

The pop-up menu for the Sleep Timer appears.

AUTO → 90min → 80min → 70min → ... → 10min → OFF → AUTO...

The Sleep Timer setting is completed simply by displaying the desired duration.

The "SLEEP" indicator flashes when the Sleep Timer is active.

# Using the Play Timer

You can set the timer to automatically turn the unit on and off at a specified time. The unit starts playing the HDD Jukebox, CD, tuner, DAB\*, or USB device automatically when it turns on. Make sure the clock is correctly set beforehand (page 21).

\* For the UK model only

---

## 1 Prepare the sound source.

Prepare the sound source and press VOLUME +/- to adjust the volume. To start from a specific track, create your own program (page 39).

---

## 2 Press CLOCK/TIMER SET repeatedly until "PLAY SET?" appears, and then press ENTER.

"ON" appears and the hour indication flashes.

---

## 3 Set the time to start playing.



Press **↑/↓** to select the hour, and then press **→** so that the minute indication flashes. Do the same to set the minute. To go back to the hour indication, press **←**. When you press ENTER after setting the minute, "OFF" appears and the hour indication flashes.

---

## 4 Set the time to stop playing.

Repeat step 3.

---

## 5 Press **↑/↓** to select the desired sound source, and then press ENTER.

---

## 6 Press **I/⏻** to turn off the unit.

### When the HDD Jukebox, CD, or USB device is set as the sound source

About 60 seconds before the preset time, the unit will automatically turn on, and about 10 seconds before, the Play Timer will activate. If the unit is already on at about 60 seconds before, the Play Timer will not activate.

### When a radio broadcast or DAB service is set as the sound source

About 15 seconds before the preset time the unit will automatically turn on and the Play Timer will activate. If the unit is already on at this time, the Play Timer will not activate.

## To continue playback after the Play Timer's stop time

You can cancel the Play Timer setting while the timer is operating. When you do this, the stop time is cancelled and playback continues. To cancel the setting, press CLOCK/TIMER SELECT repeatedly to select "TIMER OFF" while the Play Timer operation is in progress.

## To activate or check the timer again

Press CLOCK/TIMER SELECT repeatedly to select "PLAY SELECT?", and then press ENTER.

## To cancel the timer

Press CLOCK/TIMER SELECT repeatedly to select "TIMER OFF", and then press ENTER.

## To change the setting

Start over from step 1.

### Tip

The Play Timer setting remains as long as the setting is not cancelled manually.

# Using the Recording Timer

You can set the timer to automatically turn the unit on and off at a specified time. The unit starts recording a radio program or a DAB service\* automatically when it turns on. Make sure the clock (page 21), the radio station (page 32), or the DAB service\* (page 32) must be set beforehand.

\* For the UK model only

## 1 Prepare the sound source.

Tune in the desired radio station or DAB service.

## 2 Press CLOCK/TIMER SET repeatedly until "REC SET?" appears, and then press ENTER.

"ON" appears and the hour indication flashes.

## 3 Set the time to start recording.



Press **↑/↓** to select the hour, and then press **→** so that the minute indication flashes. Do the same procedure to set the minute. To go back to the hour indication, press **←**. When you press ENTER after setting the minute, "OFF" appears and the hour indication flashes.

## 4 Set the time to stop recording.

Do the same procedure as step 3.

## 5 Press I/⏻ to turn off the unit.

About 60 seconds before the preset time, the unit will automatically turn on, and about 10 seconds before, the Recording Timer will activate. If the unit is already on at about 60 seconds before, the Recording Timer will not be activated.

### To stop a timer recording

Press **■**.

### To continue playback after the Recording Timer's stop time

You can cancel the Recording Timer setting while the timer is operating. When you do this, the stop time is cancelled and playback continues.

To cancel the setting, press CLOCK/TIMER SELECT repeatedly to select "TIMER OFF" while the Recording Timer operation is in progress.

### To activate or check the timer again

Press CLOCK/TIMER SELECT repeatedly to select "REC SELECT?", and then press ENTER.

### To cancel the timer

Press CLOCK/TIMER SELECT repeatedly to select "TIMER OFF", and then press ENTER.

### To change the setting


Start over from step 1.

#### Notes

- You cannot set a stop time for the Recording Timer that is the same time as a start time. If you do, "OFF TIME NG!" appears.
- To listen to the sound while recording, press the VOLUME + button so that the sound is not muted.
- If you want to record a DAB service using Recording Timer, you should preset the service you want to record in advance. If not, you will not be able to make the setting.

# Changing the unit's settings

## Changing the display

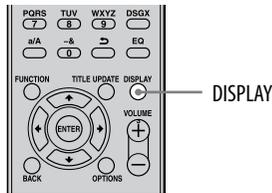

| To  | Do this  |
|---|--|
| Change information on the display when the unit is turned on.*1 | Press DISPLAY repeatedly.                              |
| Check the clock when the unit is turned off.                    | Press DISPLAY. The clock is displayed for 8 seconds.*2 |
| Display demonstration when the unit is turned off.              | Press DISPLAY repeatedly.                              |

\*1 For example, you can view CD or MP3 disc information or the USB device information, such as the track number or folder name during normal play, or the total playing time while the unit is stopped. You can also view DAB station information such as the service name, channel label, preset number, frequency, DLS (Dynamic Label Segment), or ensemble label.

\*2 The STANDBY indicator lights up when the unit is turned off.

## Selecting the text mode

You can select from a variety of languages for displaying the text information on a disc or an USB device. Use buttons on the main unit for the operation.

- 1 Press I/⏻ to turn off the unit.
- 2 Press DISPLAY to display the clock.
- 3 Press OPTIONS.  
The language list appears. The languages you can select vary depending on the country or the region specification.
- 4 Press ↑/↓ to select the language, and then press ENTER.

### Notes on the display information


- Characters that cannot be displayed appear as “\_”.
- The information on the HDD Jukebox, CD or USB device may not be displayed correctly in the selected text mode.
- The following are not displayed:
  - total playing time for a CD-DA disc depending on the play mode.
  - total playing time for an MP3 disc.
- The following are not displayed correctly:
  - elapsed playing time of an MP3 track encoded using a VBR (Variable Bit Rate).
  - folder and track names that do not follow either the ISO9660 Level 1, Level 2, or Joliet in the expansion format.
- The following are displayed:
  - ID3 tag information for MP3 track when ID3 version 1 and version 2 tags are used.
  - up to 62 characters of ID3 tag information.

# Formatting the system

This function formats the unit and restores it to the condition it was in at the time of purchase. Note that this process deletes all settings and information (e.g., audio data recorded or imported in the HDD Jukebox, clock setting, etc.). Factory-installed sample data (Demo Tracks) in the HDD Jukebox will be deleted as well. You cannot format the unit to factory setting while the unit is turned off to conserve power. This function can be performed only with the buttons on the main unit.

## Note

You should never turn off the unit or disconnect the power cord during the formatting of the system.

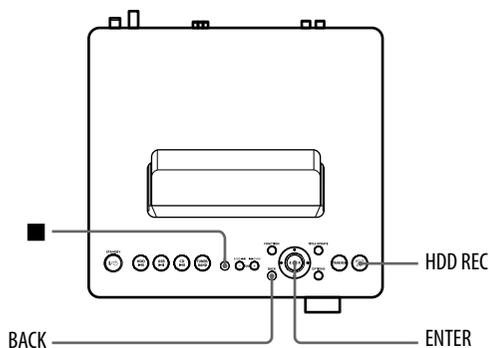

- 1 Disconnect and reconnect the power cord, and then turn on the unit.
- 2 Select the HDD function.
- 3 Press ■ and BACK together with HDD REC.  
“HDD Format” appears in the display.
- 4 Press ↑/↓ to select “OK?”, and then press ENTER.  
Formatting starts.  
When formatting completes, the unit turns itself off.  
All user-configured settings, such as preset radio stations, timer settings, and the clock settings are initialized.

# Troubleshooting

If a problem occurs while operating the unit, follow the steps described below before consulting the nearest Sony dealer.

- 1** Check to see if the problem is listed in this "Troubleshooting" section.
- 2** Check the customer support site.  
 For customers in Europe:  
 <<http://support.sony-europe.com/>>  
 For customers in Latin America:  
 <<http://www.sony-latin.com/index.crp>>  
 For customers in Asia and Oceania:  
 <<http://www.sony-asia.com/support>>  
 You will find the latest support information and a FAQ at the web site.
- 3** If after steps 1 and 2 you still cannot solve the problem, consult your nearest Sony dealer.  
 If the problem persists after doing all of the above, consult your nearest Sony dealer.

## How to reset the unit

It is usually unnecessary to reset this unit. However, on rare occasions, the unit enters an abnormal state and stops responding to button or on-screen operations. In this case, reset the unit by pressing the buttons on the main unit. To reset the unit, press the **■** button and the ENTER button together with the I/⏻ (power) button on the main unit. All user-configured settings, such as preset radio stations, timer settings, and the clock settings are initialized.

### If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following items.

- If your unit has a voltage selector, is the voltage selector set to the correct voltage?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the back of the unit?
- Is there a problem with the device connected to DMPORT or the connecting cable?

After the STANDBY indicator stops flashing, reconnect the power cord, and turn on the unit. If the issue persists, contact your nearest Sony dealer.

## Power

---

The unit does not turn on.

---

- ➔ Connect the power cord to the wall outlet firmly.
- ➔ Disconnect the power cord from the wall outlet. After about a minute, reconnect the power cord and press the I/⏻ (power) button to turn on the unit.

---

It takes a while for the unit to turn off while "STANDBY" is displayed.

---

- ➔ If the unit's HDD has a large amount of recorded data, it will take a while before the unit turns off.

---

The unit does not turn off.

---

- ➔ The I/⏻ (power) button may not respond while the unit is starting up.
- ➔ If you disconnect the power cord from a wall outlet while the STANDBY indicator is lit up, the indicator may remain lit for a little while longer.

## Display

The display starts flashing as soon as you plug in the power cord even though you have not turned on the unit.

- ➔ Press DISPLAY while the unit is off. The demonstration disappears.

## Sound output

There is no sound.

- ➔ Press the VOLUME +/- buttons to cancel muting. Sound is muted while Recording Timer is in progress.
- ➔ Cancel pause.
- ➔ Confirm that nothing is connected to the  (headphones) jack.
- ➔ Check the connections of the external component.
- ➔ Connect the speaker cords firmly.

The right-left sound balance is bad or reversed.

- ➔ Connect the speakers and other devices correctly.
- ➔ Place the speakers as symmetrically as possible.
- ➔ Connect only the supplied speakers.

The sound has no depth and seems to be monaural.

- ➔ Connect the speakers and other devices correctly.

There is severe humming or noise in the sound.

- ➔ Connect the speakers and other devices correctly.
- ➔ Move the audio connecting cord away from any display, fluorescent light, or other electrical devices.
- ➔ Move the unit away from any display or TV.
- ➔ If plugs or jacks are dirty, wipe them with a cloth slightly moistened with alcohol.
- ➔ The inserted disc is scratched or dirty.
- ➔ Connect the unit to a different wall socket.
- ➔ Install a noise filter (available separately) to the power cord.

## HDD Jukebox

The unit cannot record a CD.

- ➔ The disc is not compatible with any of the supported audio CD standards.
- ➔ The disc may be scratched or dirty.

The unit cannot import tracks.

- ➔ The following audio formats can be imported to this unit.
  - MP3 (“.mp3”)
  - Windows Media Audio file (“.wma”)
  - AAC (“.m4a”)

The unit cannot start importing/recording audio data to the HDD Jukebox.

- ➔ The following problems may have occurred.
  - The HDD Jukebox is full.
  - The number of tracks and albums on the HDD Jukebox has reached the upper limit.

---

The unit cannot connect to the externally connected portable device.

---

- ➔ Reconnect the USB cable.

---

While transferring audio data to the USB device, the entire name of a folder cannot be transferred.

---

- ➔ For a USB device, the maximum size for a folder name is 128 bytes.

---

The unit cannot play MP3 tracks.

---

- ➔ The MP3 tracks are recorded in a format that is not supported.

---

The title information cannot be edited.

---

- ➔ Title information (track title, artist name, or album title) that appears when you press the DISPLAY button during playback cannot be edited.

---

An editing operation takes a long time.

---

- ➔ The time it takes for an editing operation depends on the number of albums or tracks that are stored in the HDD Jukebox.

---

Title information cannot be obtained.

---

- ➔ The unit's database does not contain any information that corresponds with the disc. Try the Title Update function (page 41).
- ➔ It may not be possible to obtain title information for tracks that have been poorly recorded; for example, tracks that are not recorded from their beginning.
- ➔ Information cannot be obtained for tracks with a length of 15 seconds or less.

## CD

---

Playback does not start.

---

- ➔ Confirm that a disc is inserted.
- ➔ Insert the disc with the label side up (page 30).
- ➔ If the disc does not lay flat in the tray, reset it so that it is correctly inserted.
- ➔ The inserted disc is of a kind not supported by the unit (page 68).
- ➔ There is condensation in the disc tray. Remove the disc, turn off the unit for about 30 minutes, and then insert the disc again (page 66).

---

The sound skips, or the disc will not play.

---

- ➔ Wipe the disc clean, and replace it.
- ➔ Move the unit to a location away from vibration (for example, on top of a stable stand).
- ➔ Move the speakers away from the unit, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

---

Play does not start from the first track.

---

- ➔ Press PLAY MODE repeatedly until both "PGM" and "SHUF" disappear to return to normal play (page 38).

---

Starting playback takes more time than usual.

---

- ➔ The following discs take a longer time to start playback.
  - a disc recorded with a complicated tree structure.
  - a disc recorded in multisession mode.
  - a disc that has not been finalized (a disc to which data can be added).
  - a disc that has many folders.

---

Playback cannot be performed. The sound skips.

---

- ➔ The disc does not conform to the audio CD standard.
  - ➔ The inserted disc is scratched or dirty.
- 

Some tracks cannot be played.

---

- ➔ If you are using a multisession disc with an audio CD format, only tracks recorded in the first session can be played.
- 

MP3 tracks cannot be played.

---

- ➔ MP3 files that do not conform with the ISO 9660 Level 1, 2, or Joliet standard are recorded on the disc.
  - ➔ Files without the MP3 extension cannot be played. If a file on a disc is not an MP3 file but has an .MP3 extension, the unit tries to play that file and it may cause noise in the sound or the unit to malfunction.
  - ➔ The files have the MP3 extension, but they are in a format other than MPEG-1 Audio Layer 3.
- 

Title information cannot be obtained.

---

- ➔ A disc is not inserted.
  - ➔ The unit's database does not contain any information that corresponds with the disc. Try the Title Update function (page 41).
- 

## FM/AM and DAB\*1

---

Radio broadcasts cannot be received or there is severe hum or noise.

---

- ➔ Connect the antennas correctly (pages 18 and 19).
  - ➔ Adjust the antenna position.
  - ➔ Use an external antenna.
  - ➔ Keep the antennas away from the speaker cords, the power cord and the USB cable to avoid picking up noise.
  - ➔ Connect a commercially available external antenna.
  - ➔ Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
  - ➔ Turn off nearby electrical equipment.
- 

RDS is not working.\*2

---

- ➔ Make sure that you tune in an FM station.
- 

DAB broadcast cannot be received.\*1

---

- ➔ Check all aerial connections, then perform the DAB Automatic Scan procedure (page 20).
  - ➔ The current DAB service is not available. Press +/- (TUNE +/- on the main unit) to select a different service.
  - ➔ If you have moved to another area, some services/frequencies may have changed and you may not be able to tune into your usual broadcast. Perform the DAB Automatic Scan procedure to re-register the contents of broadcast (page 20). (Performing this procedure clears all previously stored presets.)
- 

\*1 For the UK model only

\*2 For the European model only

## USB device

---

The unit cannot start transferring audio data to a USB device.

---

- ➔ The following problems may have occurred.
    - The USB device is full.
    - The number of tracks and folders on the USB device has reached the upper limit.
    - The USB device is write-protected.
- 

The unit stops the transfer before it is finished.

---

- ➔ You are using an unsupported USB device. See “USB devices supported by this unit” (page 71) for the supported USB devices.
  - ➔ The USB device is not formatted correctly. Refer to the operating manual of the USB device for the formatting operation.
  - ➔ Turn off the unit and disconnect the USB device. If the USB device has a power switch, turn off the USB device, and turn it on again after you disconnected it from the unit. Then perform the transfer operation again.
  - ➔ If the transfer and erase operations are done repeatedly, the file structure within the USB device becomes complex. Refer to the operating manual of the USB device for how to deal with this problem. If the problem persists, contact your nearest Sony dealer.
- 

Transferring to a USB device results in an error.

---

- ➔ You are using an unsupported USB device. See “USB devices supported by this unit” (page 71) for the supported USB devices.
  - ➔ Turn off the unit and disconnect the USB device. If the USB device has a power switch, turn off the USB device, and turn it on again after you disconnected it from the unit. Then perform the transfer operation again.
- 

- ➔ The USB device was disconnected or the power was turned off during transfer. Delete the partially-transferred track and transfer it again. If this does not solve the problem, the USB device may be damaged. Refer to the operating manual of the USB device for how to deal with this problem. If the problem persists, contact your nearest Sony dealer.
- 

Tracks or folder on the USB device cannot be erased.

---

- ➔ Check if the USB device is write-protected.
  - ➔ The USB device was disconnected or the power was turned off during erase operation. Delete the partially-erased track. If this does not solve the problem, the USB device may be damaged. Refer to the operating manual of the USB device for how to deal with this problem. If the problem persists, contact your nearest Sony dealer.
- 

USB function does not work correctly.

---

- ➔ You are using an unsupported USB device. If you connect an unsupported USB device, the following problems may occur. See “USB devices supported by this unit” (page 71) for the supported USB device types.
    - The USB device is not recognized.
    - Track or folder names are not displayed on this unit.
    - Playback is not possible.
    - The sound skips.
    - There is noise.
    - A distorted sound is output.
    - Importing or transferring stops before it is finished.
-

---

### “Over Current” appears.

---

- ➔ A problem has been detected with the level of electrical current from the  $\Psi$  (USB) port. Turn off the unit and remove the USB device from the  $\Psi$  (USB) port. Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.

---

### There is no sound.

---

- ➔ The USB device is not connected correctly. Turn off the unit, turn on the unit again, and then reconnect the USB device. Make sure that “USB MEMORY” lights up in the display.

---

### There is noise, sound skipping, or distorted sound.

---

- ➔ Turn off the unit, then reconnect the USB device.
- ➔ The music data itself contains noise. Noise may have been introduced when creating music data due to the conditions of the computer. Create the music data again.

---

### The USB device cannot be connected into the $\Psi$ (USB) port.

---

- ➔ The USB device is being connected backwards. Connect the USB device in the correct orientation.

---

### “Reading” is displayed for an extended time, or it takes a long time before playback starts.

---

- ➔ The reading process can take a long time in the following cases.
  - There are many folders or files on the USB device.
  - The file structure is extremely complex.
  - The memory capacity is excessive.
  - The internal memory is fragmented.

Thus, we recommend following these guidelines.

- Total folders on USB device: 100 or less
- Total files per folder: 100 or less

---

### Erroneous display

---

- ➔ Transfer the track to the USB device again, as the data stored in the USB device may have been corrupted.
- ➔ The character codes that can be displayed by this unit are numbers and alphabet only. Other characters are not displayed correctly.

---

### The USB device is not recognized.

---

- ➔ Turn off the unit and reconnect the USB device, and then turn on the unit.
- ➔ Connect the supported USB device (page 71).
- ➔ The USB device does not work properly. Refer to the operating manual of the USB device for how to deal with this problem. If the problem persists, contact your nearest Sony dealer.

---

### Playback does not start.

---

- ➔ Turn off the unit, then reconnect the USB device, and then turn on the unit.
- ➔ Connect the supported USB device (page 71).
- ➔ Press **USB▷** to start playback.

---

### Play does not start from the first track.

---

- ➔ Set the play mode to Normal Play mode.

---

## Tracks cannot be played back.

---

- ➔ Only tracks in the MP3 (“mp3”), WMA (“.wma”) and AAC (“.m4a”) format can be played on this unit. Tracks in other formats cannot be played (page 35).
- ➔ USB device formatted with file systems other than FAT16 or FAT32 are unsupported.\*1
- ➔ If you use partitioned USB device, only MP3, WMA and AAC tracks on the first partition can be played.
- ➔ Playback is possible up to 8 levels.
- ➔ The number of folders has exceeded 999.
- ➔ The number of tracks has exceeded 999.
- ➔ Files that are encrypted or protected by passwords, etc. cannot be played back.

\*1 This unit supports FAT16 and FAT32, but some USB device may not support all of these FAT. For details, see the operation manual of each USB device or contact the manufacturer.

## Timer

---

### The Play Timer or Recording Timer does not work.

---

- ➔ Set the clock correctly (page 21).
- ➔ A power failure occurred while the timer setting was in standby mode or the power cord was disconnected.
- ➔ The unit is being subjected to shocks or vibrations. Place the unit at a stable location.

---

### The contents recorded by the Recording Timer is not complete. Some of the material at the beginning or in the middle are missing.

---

- ➔ Set the clock correctly (page 21).
- ➔ A power failure occurred while the timer setting was in standby mode or the power cord was disconnected.
- ➔ The unit was subjected to shocks or vibrations. Place the unit at a stable location.

## Title Update

---

### Title Updater cannot be used on the computer.

---

- ➔ Use a USB storage device supported by the unit (page 71).

---

### An error occurs when you run Title Updater on the computer.

---

- ➔ Close Virtual Expander (MICROVAULT software) first, and then run “TitleUpdater.exe” again.

---

### “export.dat” file cannot be exported.

---

- ➔ Only album information (audio data) recorded from audio CDs can be exported.
- ➔ Album information that has been imported using the Title Updater cannot be exported.
- ➔ Make sure that the USB storage device is connected firmly to the unit.
- ➔ You have disconnected the USB storage device before “Device Stop” appears on the unit’s display.

---

### The USB storage device or Title Updater is not recognized by the computer.

---

- ➔ Disconnect the USB storage device, and then reconnect it correctly.

---

### The “import.dat” file cannot be saved.

---

- ➔ The USB storage device is full. Delete unnecessary data from the USB storage device.
- ➔ The USB storage device is write-protected. Undo the write-protection.

## Others

---

### The unit works poorly.

---

- ➔ The unit may be under the influence of static electricity or other factors. In this case, restart the unit. If the unit still works poorly, reset the unit (page 55).
- ➔ If any warning message appears, do as the message says.

---

### The remote control does not work.

---

- ➔ The batteries are weak.
- ➔ There are no batteries inside.
- ➔ Point the remote control at the remote sensor of the unit (page 15).
- ➔ An inverter circuit for a fluorescent light is near the unit. Move the unit away from the circuit.
- ➔ Remove any obstacles between the remote and the remote sensor on the unit, and position the unit away from fluorescent lights.
- ➔ Move the remote closer to the unit.

---

### The unit vibrates or noise is heard from the ventilation hole.

---

- ➔ The vibration is caused by the fast rotation of the hard disk and the noise by the cooling fan. These are normal and not malfunctions.

---

### Vibration or noise in the unit increases during recording of a CD.

---

- ➔ The hard disk rotates faster during CD recording than during CD playback, so the increase in vibration or noise is not a malfunction. The amount of vibration or noise produced depends on the CD type.

## To improve tuner reception

Turn off CD player power by using the CD power management function. CD power is factory set to on.

- 1** Select the CD function, and then turn off the unit.
- 2** After “STANDBY” stops flashing, press DISPLAY to display the clock.
- 3** Press **■** together with I/⏻ on the main unit.  
“CD POWER OFF” appears. With CD player power turned off, disc access time is increased. To turn on CD player power, repeat the procedure until “CD POWER ON” appears.

## About repairing the hard disk drive

- The contents of the hard disk drive may be checked in case of repair or inspection during a malfunction or modification. However, the contents will not be backed up or saved by Sony.
- If the hard disk needs to be formatted or replaced, it will be done at the discretion of Sony. All contents of the hard disk drive will be erased, including contents that violate copyright laws.

---

## Messages

### HDD Jukebox

#### Album Full!

The number of albums that can be recorded has reached the limit.

#### Complete!

The operation has been successfully completed.

#### Data Error!

You tried to play a track that is not playable.

#### Export Error!

There is no album information that can be exported, the selected album information (audio data) cannot be exported, or the export of album information has failed.

#### HDD Error!

A malfunction has occurred and the unit cannot recognize the HDD Jukebox.

#### HDD Full!

There is no remaining space on the HDD Jukebox.

#### Import Error!

There is no album information that can be imported or the import of album information has failed.

#### Name NG!

The album title, artist name, or track title cannot be registered as the same title or name already exists. You have erased the registered title information and no title is registered.

#### No Step

All programmed tracks have been erased.

#### Not in Use

The operation that you performed is invalid or currently prohibited.

#### No Track

There is no track that the unit can play.

#### Over Current!

A surge current has been detected in the unit.

#### Push STOP!

You tried to perform an operation that can be performed only when the unit is stopped (e.g., you pressed PLAY MODE during playback).

#### Reading

The unit is reading information from the HDD Jukebox. Some buttons are inoperative during this time.

#### REC Error!

Importing/recording did not start, stopped partway, or otherwise could not be performed.

#### Step Full!

You tried to program more than 26 tracks (steps).

#### Track Full!

The number of tracks that can be stored in the HDD Jukebox has reached the limit.

## CD/Tuner/DAB

### Accessing Gracenote Database

The unit is accessing the unit's database to obtain title information.

### Complete!

The presetting of an FM/AM station or DAB service has been successfully completed.

### LOCKED

The unit cannot eject the disc. Contact your nearest Sony dealer.

### No Disc

There is no disc in the unit, or you have loaded a disc that cannot be played.

### No Match

The unit's database does not contain title information for the album or track.

### No Preset

You have not preset any DAB services.

### No Service

There is no DAB service available.

### No Step

All programmed tracks have been erased.

### No Text

The currently tuned-in DAB service does not provide text information.

### Not in Use

The operation that you performed is invalid or currently prohibited.

### Push STOP!

You tried to perform an operation that can be performed only when the unit is stopped (e.g., you pressed PLAY MODE during playback).

### Reading

The unit is reading information from a disc. Some buttons are inoperative during this time.

### Step Full!

You tried to program more than 26 tracks (steps).

## USB device

### Complete!

The operation has been successfully completed.

### Data Error!

You tried to play a file that is not playable.

### Device Error

The USB device could not be recognized or a USB device that is not supported by this unit is connected.

### Device Full!

There is no remaining space on the USB device.

### Device Stop

The USB device has been stopped.

### Fatal Error!

The USB device has been disconnected while transferring to or erasing audio files or folders on the USB device.

### Folder Full!

The number of folders that can be stored on the USB device has reached the limit.

### No Device

No USB device is connected.

### No Step

All programmed tracks have been erased.

### Not in Use

The operation that you performed is invalid or currently prohibited.

### No Track

There is no track that the unit can play.

### Not Supported

An unsupported USB device is connected.

### Over Current!

A surge current has been detected in the unit.

**Protected**

The USB device is write-protected.

**Push POWER!**

Some abnormalities were detected in the unit. Press I/⏻ (power) immediately to turn off the unit.

**Push STOP!**

You tried to perform an operation that can be performed only when the unit is stopped (e.g., you pressed PLAY MODE during playback).

**Reading**

The unit is reading information from a USB device. Some buttons are inoperative during this time.

**Removed**

A USB device has been removed.

**Step Full!**

You tried to program more than 26 tracks (steps).

**Track Full!**

The number of tracks that can be stored on the USB device has reached the limit

**Transfer Error!**

Transferring audio data to a USB device did not start, stopped partway, or otherwise could not be performed (page 59).

**Clock/Timer****OFF TIME NG!**

The ending time that you tried to set for the Play Timer or Recording Timer is the same time as the starting time.

**Push SELECT!**

You pressed CLOCK/TIMER SET while the timer is operating.

**SET CLOCK!**

You tried to select the timer without first setting the clock.

**SET TIMER!**

You tried to select the timer without first setting the timer.

# Precautions

## On safety

- Completely disconnect the power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the unit, unplug the unit, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

## On placement

- Do not place the unit in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- If the unit is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the CD player, and cause the unit to malfunction. In this situation, remove the disc, and leave the unit turned on for about an hour until the moisture evaporates.

## On heat buildup

- Heat buildup on the unit during operation is normal and is not cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not block the ventilation holes on the bottom of this unit. Doing so will prevent the heat produced by the unit's amplifier to build up, which may cause the unit to malfunction. Make sure these holes are free from any obstruction.

## When moving the unit

Do not move the unit while a CD is inserted. Doing so may damage the CD.

## On the speaker system

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV.

## On volume adjustment

CDs reproduce sound with considerably less noise than vinyl records. For this reason, if you raise the volume while listening to a segment containing only noise (as you might do in the case of a vinyl record), a sudden output of high-volume sound may cause damage to the speakers.

Make sure to lower the volume before the start of playback.

## Consideration for others

Keep the volume at a moderate level out of consideration of your neighbors, especially at night.

## About the Hard Disk Drive

Because of its high storage density, the hard disk can read and write data at very high speeds. It is, however, easily damaged by mechanical vibration, shock, or dust. Although the hard disk is equipped with safety mechanisms to prevent the loss of data due to these factors, the following precautions should be taken during the handling of the unit.

- Do not subject the unit to strong shocks or vibrations.
- Do not place the unit in a location subject to mechanical vibration or at an unstable location.
- Do not move the unit while the power cord is connected to a wall outlet.
- Do not disconnect the power cord while the unit is recording or playing a track.
- Do not use the unit in a place subject to extreme changes in temperature (a temperature gradient greater than 18°F (10°C)/hour).
- Do not attempt to replace or upgrade the hard disk drive by yourself, as this may cause the unit to malfunction.

Sony cannot provide compensation for any loss of data caused by a damaged hard disk drive.

## Cleaning the cabinet

Clean this unit with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzine, or alcohol.

## Note on the power cord

Before you unplug the power cord from the wall outlet, make sure that the unit is turned off. If you unplug the power cord while the unit is operating, data that was recorded may be lost or the unit may malfunction.

## Notes on CDs

- Do not scratch or attach stickers to the surface of the disc.
- CDs with non-standard shapes (e.g., a star, heart, or square) cannot be played on this unit. Attempting to do so may damage the unit.
- When cleaning the disc, use a cleaning cloth and wipe the disc from the center out to the edge. If the disc is extremely dirty, wipe the disc with a slightly moistened cloth, followed by a dry cloth. Do not clean a disc with a benzine thinner, commercial cleaners or anti-static sprays intended for vinyl LPs.
- Do not place discs in hot places, including places exposed to direct sunlight, near heat sources such as hot air ducts, or inside parked cars.
- Do not use a rental or second-hand disc on which glue that spread from under the label attached to it. If you do, there is a chance that the disc may become stuck to parts within the unit, causing it to malfunction.
- Do not use a commercial cleaning disc as it may cause the unit to malfunction.

## Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

## Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

## Note on MP3/WMA/AAC files

Compatibility with all MP3/WMA/AAC encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3/WMA/AAC files may produce noise or interrupted audio or may not play at all.

---

## About CDs

### The unit **CAN** play the following discs

- CDs:  
Music CDs, CD-Rs and CD-RWs
- MP3 files:  
CD-Rs and CD-RWs (recorded in a format conforming to the ISO 9660 Level 1 or 2, or Joliet standards). Multisession CDs are supported.

#### Notes

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and other sessions are not played back.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.
- Some CD-Rs or CD-RWs may not be played on this unit, depending on its characteristics and the recording conditions.
- CD-RWs may require some time before they begin to play. This is because they have a lower reflection index than other kinds of discs.
- In the case of discs containing more than 511 tracks of audio data, the unit will not recognize track 512 or above.
- Discs with many directories or a complicated structure may require some time before they start playing. When recording albums to a disc, it is recommended that recording will be done no deeper than the sub-directory 2 level.

#### Tip

For details on writing data to a disc, refer to the operating manual supplied with the CD-R/RW drive or software for burning data.

# Specifications

---

## Amplifier section

European model:

**DIN power output (rated):**

24 + 24 W (8  $\Omega$  at 1 kHz, DIN)

**Continuous RMS power output (reference):**

30 + 30 W (8  $\Omega$  at 1 kHz, 10 % THD)

**Music Power output (reference):**

30 + 30 W (8  $\Omega$  at 1 kHz, 10 % THD)

Other models:

**DIN power output (rated):**

24 + 24 W (8  $\Omega$  at 1 kHz, DIN)

**Continuous RMS power output (reference):**

30 + 30 W (8  $\Omega$  at 1 kHz, 10 % THD)

---

## HDD Jukebox section

**Capacity:**

80 GB\*

\* A portion of the memory is used for system management functions. Actual available memory is approx. 72 GB.

**Recording system:**

MP3

**Maximum recording time (measured with MP3 128 kbps):**

About 1,300 h

**Maximum number of tracks:**

20,000

**Maximum number of albums:**

2,000

---

## CD player section

**System:**

Compact disc and digital audio system

**Laser Diode Properties:**

Emission duration: continuous  
Laser Output\*: Less than 44.6  $\mu$ W

\* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.

**Frequency response:**

20 Hz - 20 kHz

---

## USB section

**Supported bit rate**

MP3 (MPEG-1 Audio Layer3):  
32 - 320 kbps, VBR

WMA:  
48 - 192 kbps, VBR

AAC:  
48 - 320 kbps

**Sampling frequencies**

MP3 (MPEG-1 Audio Layer3):  
32/44.1/48 kHz

WMA:  
44.1 kHz

AAC:  
44.1 kHz

---

## FM tuner section

**Tuner:**

FM stereo, FM superheterodyne tuner

**Circuit system:**

PLL digital frequency synthesizer  
quartz lock system

**Frequency range:**

Brazilian model: 87.5 - 108.0 MHz  
(100 kHz step)  
Other models: 87.5 - 108.0 MHz  
(50 kHz step)

**Antenna:**

FM lead antenna

**Antenna terminals:**

75  $\Omega$  unbalanced

**Intermediate frequency:**

10.7 MHz

---

## AM tuner section

**Tuner:**

AM superheterodyne tuner

**Circuit system:**

PLL digital frequency synthesizer  
quartz lock system

**Frequency range:**

European model:  
531 - 1,602 kHz (with the  
interval set at 9 kHz)

Latin American model:  
530 - 1,710 kHz (with the  
interval set at 10 kHz)  
531 - 1,710 kHz (with the  
interval set at 9 kHz)

Oceanian model  
531 - 1,710 kHz (with the  
interval set at 9 kHz)  
530 - 1,710 kHz (with the  
interval set at 10 kHz)

Other models:  
531 - 1,602 kHz (with the  
interval set at 9 kHz)  
530 - 1,610 kHz (with the  
interval set at 10 kHz)

**Antenna:**

AM loop antenna

**Antenna terminals:**

External antenna terminal

**Intermediate frequency:**

450 kHz

## DAB tuner section (UK model only)

### Tuner:

DAB stereo tuner

### Antenna:

DAB lead antenna

### Frequency range:

Band-III: 174.928 (5A) – 239.200 (13F) MHz

### DAB frequency table (Band-III):

| Frequency   | Label |
|-------------|-------|
| 174.928 MHz | 5A    |
| 176.640 MHz | 5B    |
| 178.352 MHz | 5C    |
| 180.064 MHz | 5D    |
| 181.936 MHz | 6A    |
| 183.648 MHz | 6B    |
| 185.360 MHz | 6C    |
| 187.072 MHz | 6D    |
| 188.928 MHz | 7A    |
| 190.640 MHz | 7B    |
| 192.352 MHz | 7C    |
| 194.064 MHz | 7D    |
| 195.936 MHz | 8A    |
| 197.648 MHz | 8B    |
| 199.360 MHz | 8C    |
| 201.072 MHz | 8D    |
| 202.928 MHz | 9A    |
| 204.640 MHz | 9B    |
| 206.352 MHz | 9C    |
| 208.064 MHz | 9D    |
| 209.936 MHz | 10A   |
| 211.648 MHz | 10B   |
| 213.360 MHz | 10C   |
| 215.072 MHz | 10D   |
| 216.928 MHz | 11A   |
| 218.640 MHz | 11B   |
| 220.352 MHz | 11C   |
| 222.064 MHz | 11D   |
| 223.936 MHz | 12A   |
| 225.648 MHz | 12B   |
| 227.360 MHz | 12C   |
| 229.072 MHz | 12D   |
| 230.784 MHz | 13A   |
| 232.496 MHz | 13B   |
| 234.208 MHz | 13C   |
| 235.776 MHz | 13D   |
| 237.488 MHz | 13E   |
| 239.200 MHz | 13F   |

## Inputs/Outputs

### AUDIO IN (stereo mini jack):

Voltage 0.8 V, impedance 22 k $\Omega$

### ψ (USB) port:

USB type A, Full speed USB

### DMPORT:

For connecting a DIGITAL MEDIA PORT adapter

### 🎧 (headphones) jack (stereo mini jack):

Accepts headphones of 8  $\Omega$  or more

Asian and Oceanian models:

### AUDIO OUT (phono jacks):

Voltage 0.5 V, impedance 1 k $\Omega$

## Speaker

Latin American model:

### Speaker system:

2-way, bass-reflex type

### Speaker units:

Woofer: 120 mm, cone type

Tweeter: 25 mm, soft dome type

### Nominal impedance:

8  $\Omega$

### Dimensions (w/h/d)

Approx. 140 × 284 × 240 mm

### Mass

Approx. 2.7 kg net per speaker

Other models:

### Speaker system:

2-way, bass-reflex type

### Speaker units:

Woofer: 120 mm, cone type

Tweeter: 40 mm, cone type

### Nominal impedance:

8  $\Omega$

### Dimensions (w/h/d)

Approx. 140 × 250 × 210 mm

### Mass

Approx. 2.0 kg net per speaker

## General

### Power requirements:

Mexican model:

120 V AC, 60 Hz

Taiwan model:

120 V AC, 50/60 Hz

Brazilian model:

127 or 220 V AC, 50/60 Hz

(adjustable with voltage selector)

Latin American model (except for the Mexican, Argentine and Brazilian models):

110 - 120 or 220 - 240 V AC, 50/60 Hz (adjustable with voltage selector)

Other models:

220 - 240 V AC, 50/60 Hz

### Power consumption:

45 W

### Dimensions (w/h/d):

UK model:

Approx. 285 × 130 × 319 mm incl. projecting parts and controls

Other models:

Approx. 285 × 130 × 312 mm incl. projecting parts and controls

### Mass:

Approx. 4.0 kg

### Operating temperature:

+5 °C (+41 °F) to +35 °C (+95 °F)

### Operating humidity:

25 % to 80 %

### Supplied accessories:

See page 10.

Design and specifications are subject to change without notice.



- Standby power consumption : 0.5 W
- Halogenated flame retardants are not used in the certain printed wiring boards.
- Halogenated flame retardants are not used in cabinets.

# USB devices supported by this unit

This unit supports the following Sony USB devices for import, transfer and playback operations. Other USB devices are not supported.

## Verified Sony digital music player (as of March 2008)

| Product name | Model name                              |
|--------------|---|
| WALKMAN®     | NWD-B103 / B103F / B105 / B105F         |
|              | NWZ-B103F / B105F                       |
|              | NWZ-A815 / A816 / A818                  |
|              | NWZ-S515 / S516 / S615F / S616F / S618F |

## Verified Sony USB storage device (as of March 2008)

| Product name | Model name                             |
|--------------|--|
| MICROVAULT   | USM512EX / USM1GEX / USM2GEX           |
|              | USM512JX / USM1GJX / USM2GJX / USM4GJX |

Check the websites below for the latest information about compatible devices.

For customers in Europe:

<<http://support.sony-europe.com/>>

For customers in Latin America:

<<http://www.sony-latin.com/index.crp>>

For customers in Asia and Oceania:

<<http://www.sony-asia.com/support>>

### Notes

- When formatting the USB devices, be sure to format using the model itself or the dedicated formatting software for that model. Otherwise, you may be unable to import tracks from the USB device properly to this unit.
- Do not connect the unit and the USB device through an USB hub.
- Do not use USB devices other than these USB devices. Operation of models not listed here is not guaranteed.
- Operation may not always be ensured even when using these USB devices.
- Some of these USB devices may not be available for purchase in certain areas.

### Notes on WALKMAN®

- When transferring audio data from your computer to a WALKMAN® using “Media Manager for WALKMAN”, you should transfer audio data in MP3 format. MP4-format files (AAC or VIDEO) cannot be displayed on this unit.
- Before connecting a WALKMAN® to this unit, make sure that “Creating Library” or “Creating Database” no longer appears on the WALKMAN® display.

# Glossary

## Bit rate

The bit rate is a measure of data volume expressed in bits per second (bps).

## Byte

One of the fundamental units used to express digitized data in computers. Digitized data is commonly expressed in binary digits (zeros and ones). A single unit of data is one bit. One byte consists of eight bits.

## Condensation

Condensation occurs inside the unit during where there is a quick rise in temperature, as when a heater is turned on. If condensation occurs, keep the unit turned off until the moisture evaporates.

## Hard Disk

A high-volume, digitally encoded storage device used in computers and other digital devices. By combining a magnetic disk and drive mechanism into an integrated unit, hard disks are capable of very fast data writing and reading and boast superb data search capabilities.

## ID3

ID3 is information (such as the track name or artist name) that is recorded in an MP3 file. The ID3 tag is used by this unit to display track information for MP3 files.

## ISO9660

A standard of the International Organization for Standardization (ISO) that defines the file system of CD-ROM media.

## MP3

Abbreviation of MPEG-1 Audio Layer3. It is a standard for audio file compression determined by the MPEG (Motion Picture Experts Group), an ISO (International Organization for Standardization) working group. It enables compression of audio files to about 1/10 of the data size of a standard compact disc. Since the MP3 encoding algorithm is disclosed, there are various encoders/decoders that are compliant with this standard. The MP3 standard is therefore widely used in the computer field.

## Sampling frequency

When audio sources are converted from analog to digital data, they must be changed into numbers (digitized). This process is called sampling, and the sampling frequency refers to the number of times per second that the signals are measured for the recording. Music CDs are sampled at 44,100 times per second, so the sampling frequency is expressed as 44.1 kHz. Generally, the higher the sampling frequency, the higher the fidelity of the recording.

## DAB (Digital Audio Broadcasting)-related terms (UK model only)

### Dynamic label segment

The text data transmitted for each channel or service.

### Ensemble label

In DAB, multiple digital radio channels are transmitted using a single radio transmission or frequency. A group of channels sent this way is called an “ensemble” and “ensemble label” is the name of such a group.

### Service label

The name of an individual digital radio channel or service.

## List of input characters

A B C D E F G H I J K L M N O  
P Q R S T U V W X Y Z a b c d  
e f g h i j k l m n o p q r s t u v w  
x y z 0 1 2 3 4 5 6 7 8 9 . , ! @ ' ` ;  
( ) [ ] { } - ~ = \_ + # \$ % & ^  
\_ (space)

# Index

## A

- Accessories 10
- Album 16
  - Information 43
- AM loop antenna 19
- AM tuning interval 33
- Artist 16
- Audio CD 30, 68
- Audio format 23, 24, 25, 34
- AUDIO IN 15
  - Playback 36
- AUDIO OUT 18
- Auto tuning 32

## B

- Battery 20
- Bit rate 23, 25

## C

- Cassette deck 36
- CD 68
  - Import 23, 24
  - Playback 30
- CD-R/CD-RW 68
- Clock 21
- Computer 24, 43
- Condensation 72
- Connections 18
  - AUDIO IN 36
  - DMPORT 37

## D

- DAB 72
  - Antenna 18
  - Listening 32
  - Preset 33
  - Record 25
  - Scan 20
- DAB Automatic Scan 20
- Demonstration 53
- Directory 16
- Display 16, 53
- DMPORT 19
  - Playback 37
- DSGX 11

## E

- Edit 47
- EQ 11
- Erase
  - HDD Jukebox 47
  - Track on the USB device 28
- External component 36

## F

- FM/AM
  - Listening 32
  - Preset 33
  - Record 25
- FM lead antenna 19
- FM mode 33
- Format
  - System 54
- Function 17

## G

- Gracenote® Music Recognition Service 41

## H

- Hard disk drive 4, 62
- HDD Jukebox
  - Playback 29

## I

- Import
  - Audio data 24
  - Title information 45

## L

- Listening
  - AUDIO IN 36
  - CD 30
  - DMPORT 37
  - HDD Jukebox 29
  - Radio 32
  - USB device 34

## M

- Main unit 14
- Menu 17
- Moisture condensation 66
- MP3 23, 24, 29, 31, 34, 72
  - Directory structure 30

## N

- Network 46

## P

- Playback
  - CD 30
  - HDD Jukebox 29
- Play mode 38
- Play Timer 51
- Program
  - Record 25
  - Setting 39
  - Transfer 27

## R

- Radio
  - Listening 32
  - Recording 25
- RDS 32
- Recording
  - CD 23
  - External device 25
  - Programmed tracks 25
  - Radio 25
  - USB device 24
- Recording speed 23
- Recording Timer 52
- Registration
  - Radio station/DAB service 33
- Remote control 11, 20
- Repeat play 39
- Reset 55

## **S**

- Search 40, 41
- Shuffle play 38
- Sleep Timer 50
- Sound effect 11
- Speakers 18
- STANDBY indicator 55
- System requirements 42

## **T**

- Text editing 47
- Title Update
  - Export 43
  - Import 45
- Title Updater 41
- Track
  - Adding title 41
  - Audio format 23, 24, 25, 29, 34
  - Erase 28
- Track mark 25
- Track number 29
- Transfer 26
  - Program 27
  - USB device 26
- Tuner (Radio) 32

## **U**

- USB device
  - Import 24
  - Transfer 26
- USB port 15

## **V**

- Voltage Selector 19

## **W**

- Windows Media Audio 24

## Trademarks, etc.

- “GIGA JUKE” and its logo are trademarks of Sony Corporation.
- Title Updater is a trademark of Sony Corporation.
- “WALKMAN”,  and  are registered trademarks of Sony Corporation.
- MICROVAULT is a trademark of Sony Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.
- Built with Linter Database.  
Copyright © 2006-2007, Brycen Corp., Ltd.  
Copyright © 1990-2003, Relex, Inc., All rights reserved.
- Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit [www.gracenote.com](http://www.gracenote.com).  
CD and music-related data from Gracenote, Inc., copyright © 2000-2008 Gracenote. Gracenote Software, copyright © 2000-2008 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent: #6,304,523.  
Gracenote and CDDB are registered trademarks of Gracenote. The Gracenote logo and logotype, and the “Powered by Gracenote” logo are trademarks of Gracenote.



## Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California (“Gracenote”). The software from Gracenote (the “Gracenote Software”) enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information (“Gracenote Data”) from online servers or embedded databases (collectively, “Gracenote Servers”) and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you “AS IS.” Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

The system names and product names indicated in this manual are generally the trademarks or registered trademarks of the manufacturer.

™ and ® marks are omitted in this manual.



<http://www.sony.net/>

Printed in China