




Model: DTE205 / DTE207

Stereo Cassette Player




LOCATION OF CONTROLS

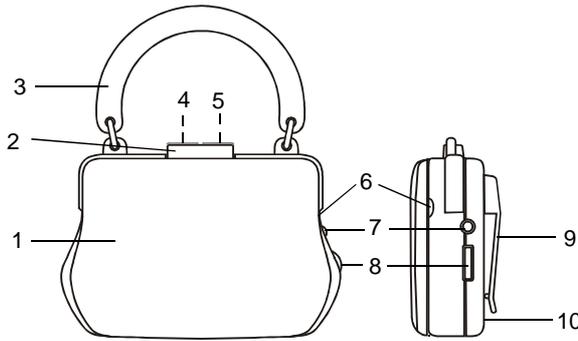


- | | |
|-----------------------------|-----------------------------|
| 1.) Cassette Door. | 6.) Cassette Door Open Tab. |
| 2.) Play ◀ Button. | 7.) PHONES Jack. |
| 3.) Carrying Handle. | 8.) VOLUME Control. |
| 4.) Stop ■ Button. | 9.) Belt Clip. |
| 5.) Fast Forward ◀◀ Button. | 10.) Battery Compartment. |

BATTERY INSTALLATION

- 1.) Remove the belt clip by pressing on the ▼ mark and slide it in the direction of the arrow.
- 2.) Open the battery compartment by pressing on the ▼ mark and sliding it down, then lift it up.
(Note: the battery cover can not be removed)

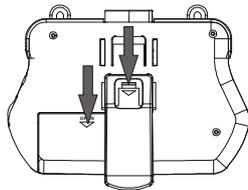


- 3.) Insert two (2) "AA" size batteries (not included), following the polarity diagram into the battery compartment.

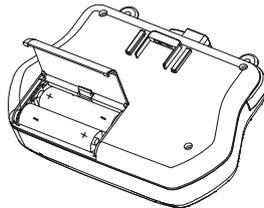

- 4.) Slide the battery compartment cover and belt clip back into place.

TO PLAY A PRERECORDED CASSETTE

- 1.) Insert a prerecorded tape with the open end facing up as shown.
- 2.) Close the cassette door and insert the stereo headphones (not included) into the **PHONES** jack.
- 3.) Set the **VOLUME** control to minimum and press the Play ◀ button. Then adjust the volume level as desired.
- 4.) To stop the tape before it reaches the end, press the Stop ■ button.

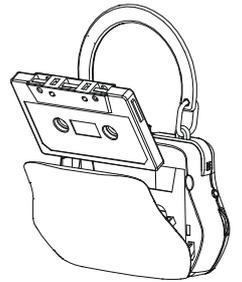

TO FAST FORWARD A TAPE

To rapidly advance the tape, press the Fast Forward ◀◀ button. To rapidly advance the tape while in the Play mode, press the Stop ■ button before pressing the Fast Forward ◀◀ button.

TO REWIND A TAPE

To rewind an already played cassette tape, remove the tape from the compartment, flip it over to the other side, reinsert it in the compartment and press the Fast Forward ◀◀ button.

When you have forwarded it enough, press Stop ■ button, remove the cassette again and flip it over to the original side to repeat the played portion.

AUTOMATIC STOP

This cassette player has a built-in Automatic Stop System that stops the tape when it reaches the end in the Play ◀ mode.

- Replacement of batteries must be done by Adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose of batteries in fire; batteries may explode.

Copyright 2004 Viacom International Inc. All Rights Reserved. Nickelodeon, Nick Jr., Nicktronic, Dora the Explorer and all related titles, characters and logos are trademarks of Viacom International Inc.





WARNING:


Choking Hazard – Small Parts and Packing Materials
Not for children under 3 years.



- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.


CASSETTE TAPE USAGE

Longer length tapes of 60 (C-120) minutes of recording time on each side are not recommended. These tapes used thinner material and have a greater chance of malfunction, such as tape spillage from the cassette, internal binding and tape tearing. Use only high quality tapes. If there is any slack in the tape in the cassette, it should be removed before inserting the cassette. Place a pencil in one of the hubs and rotate toward the outside of the cassette until all slack is taken up.

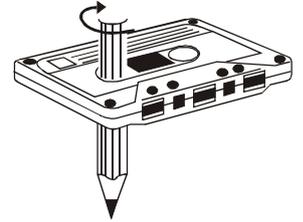

CARE AND MAINTENANCE

Clean the tape head, capstan and pinch roller using a cotton swab slightly moistened with alcohol. Avoid scratching the head surface. To clean the unit housing, use a soft cloth slightly dampened with water and wipe dry.

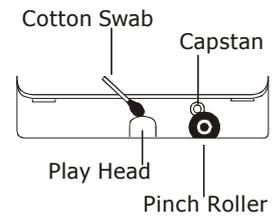

CAUTION: Never use chemicals such as benzene or paint thinner for cleaning, otherwise the cabinets may be deformed or discolored.

TRAFFIC AND HEADSET SAFETY

- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- Even if your headset is an open air type designed to let you hear outside sounds, do not turn the volume up so high that you cannot hear what is around you.
- Use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ear, reduce volume or discontinue use.

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

**Emerson Radio Corp.
1901 Diplomat Drive,
Farmers Branch, TX 75234.**

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU98H

Part No.: 21-2061
503-02

Printed in China

