

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).



Parts



CAUTION

This product contains small parts for assembly by an adult.
Take extra care during unpacking and assembly.



Base



Microphone



Microphone Holder



2 Front Legs




2 Rear Legs




#6 x 1" Screw – 6
Shown Actual Size

Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.


Assembly

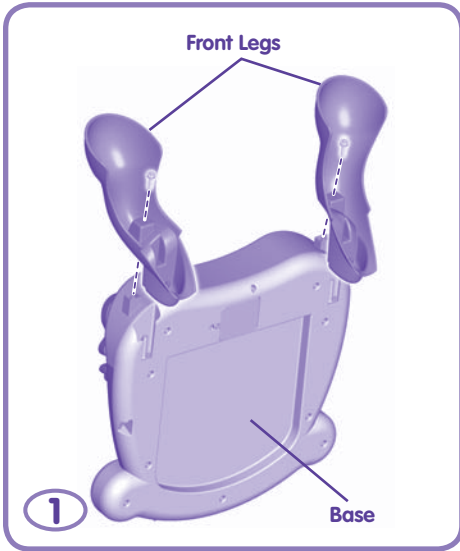


- Position the base so that the bottom is upright.
- Fit both front legs to the bottom of the base, as shown.
- Insert two screws into the front legs and tighten.

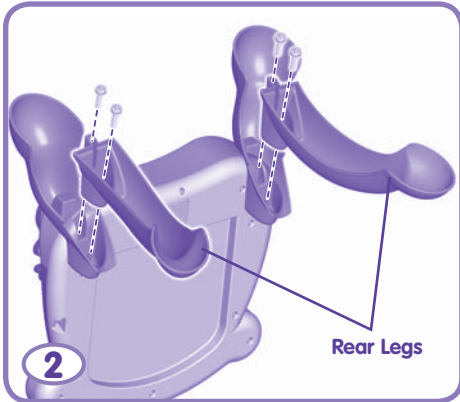

- Fit both rear legs to the front legs, as shown.
- Insert four screws into the rear legs and tighten.
- Set the assembly upright.

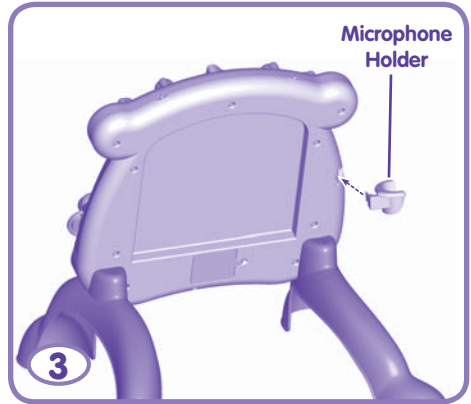


- **"Snap"** the microphone holder to the side of the assembly.

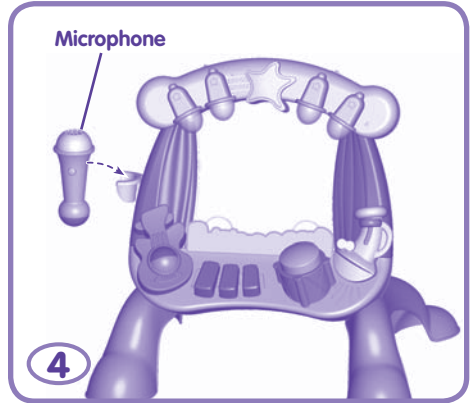

- Set the microphone into the microphone holder.

Battery Replacement

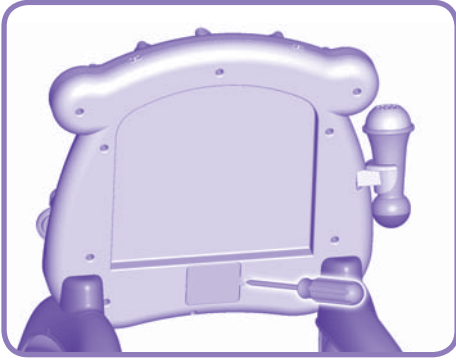

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment on the back of the toy.
- Loosen the screw in the battery compartment door and lift to remove it.
- Insert three, new "AA" (LR6) **alkaline** batteries.


Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw.
- When lights or sounds become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Sing Along Fun!

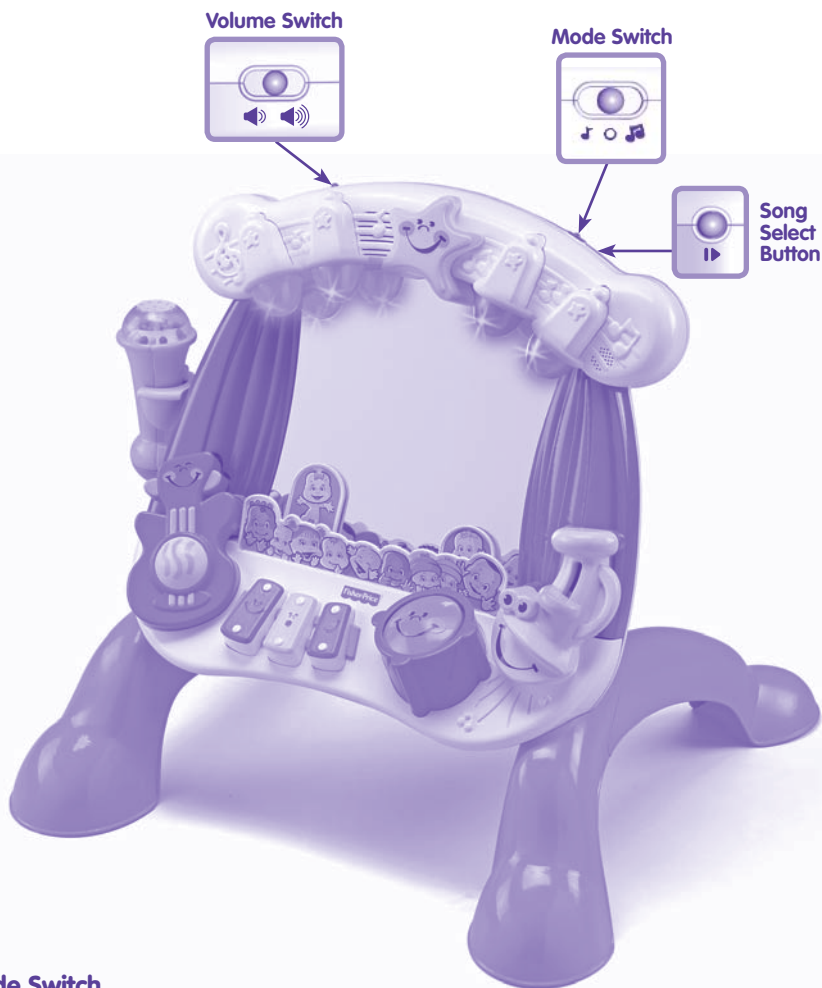

Mode Switch

🎵 **Sing Along Fun** – Press any button or shake the microphone to start the music. Press the guitar, keyboard, drum or horn to hear a solo by that instrument.

🎵 **Build an Instrumental Song**

1. Shake the microphone for fun phrases or "scatting."
2. Press any button to start the music.
3. Press the guitar, keyboard, drum or horn to add that instrument to the song. Press again to take that instrument out of the "mix."

Hint: The microphone only activates sounds when the music stops.

○ **Off** – Slide the switch when you are finished playing with this toy.

Volume Switch

Slide the switch to low volume 🗣️ or high volume 🔊.

Song Select Button


▶ Press to change to another song.

Hint: Rattle sounds from other objects or toys may activate music and lights.

Care

Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse. This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.