

# OPERATOR'S MANUAL

# 650636-X-C

SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING

INCLUDE MANUALS: 6696X-X LOWER PUMP END (PN 97999-051) &  
S-632 GENERAL INFORMATION MANUAL (PN 97999-624)

RELEASED: 11-15-96

REVISED: 6-4-10  
(REV. 02)

**6" AIR MOTOR**  
**3:1 RATIO**  
**6" STROKE**

## 650636-X43-C FOUR BALL PUMP SERIES 400 SERIES STAINLESS STEEL



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,  
OPERATING OR SERVICING THIS EQUIPMENT.**

### SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- **61355 for repair of Air Motor section.**  
Service Note: The Air Motor Service/Parts Manual is not shipped with the pump but it is included with each Service Kit. If this Service/Parts Information is needed, request the Air Motor Operator's Manual from ARO. (Manual 6564X-X, PN 97999-174).
- **637240-X43 for repair of Lower Pump section.**  
Refer to the chart on page 2 for description of -X43 options.

### SPECIFICATIONS


|   |                          |
|---|--------------------------|
| <b>Model Series</b> (Refer to option chart) | 650636-X43-C             |
| <b>Type</b>                                 | Air Operated, Four Ball  |
| <b>Ratio</b>                                | 3:1                      |
| <b>Air Motor</b>                            | 65665-B                  |
| <b>Motor Repair Kit</b>                     | 61355                    |
| <b>Motor Diameter</b>                       | 6" (15.2 cm)             |
| <b>Stroke</b>                               | 6"                       |
| <b>Air Inlet</b>                            | 1/2" - 14 NPTF-1(f)      |
| <b>Air Exhaust</b>                          | 1-1/4", 11-1/2 NPTF-1(f) |
| <b>Lower Pump End Series</b>                | 66961-X43                |
| <b>Lower Pump Repair Kit</b>                | 637240-X43               |
| <b>Material Outlet</b>                      | 3/4" NPTF-1(f)           |

### PERFORMANCE

|  |                               |
|--|-------------------------------|
| <b>Air Inlet Pressure Range</b>              | 30 - 150 PSI (2 - 10.3 bar)   |
| <b>Fluid Pressure Range</b>                  | 90 - 450 PSI (6.2 - 31.0 bar) |
| <b>Max. Rec'd Cycles / Minute</b>            | 78                            |
| <b>Displacement In<sup>3</sup> Per Cycle</b> | 113                           |
| <b>Volume/Cycle</b>                          | 62.6 oz. (1851 ml)            |
| <b>Cycles Per Gallon</b>                     | 2.0                           |
| <b>Flow @ 60 Cycles / Minute</b>             | 29.35 GPM (111.1 lpm)         |
| <b>Noise Level @ 60 Psi - 40 Cpm</b>         | 84.8 db(A) *                  |

\* The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L<sub>Aeq</sub>) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

### PUMP DATA

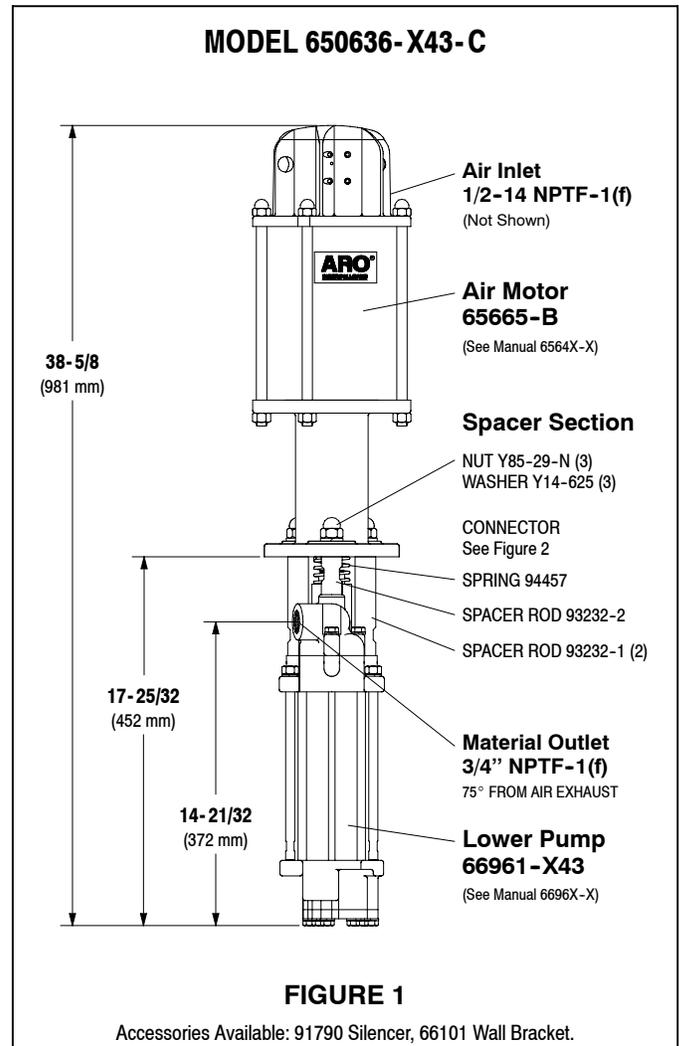

### IMPORTANT

**This is one of the four documents which support the pump.  
Replacement copies of these forms are available upon request.**

- 650636-X-C MODEL OPERATOR'S MANUAL
- GENERAL INFORMATION - INDUSTRIAL PISTON PUMPS
- 6696X-X LOWER PUMP END OPERATOR'S MANUAL
- 6564X-X AIR MOTOR OPERATOR'S MANUAL

**INGERSOLL RAND COMPANY LTD**

209 NORTH MAIN STREET - BRYAN, OHIO 43506

☎ (800) 495-0276 • FAX(800) 892-6276


www.ingersollrandproducts.com

© 2010 CCN 99711749

# ARO

**IR** Ingersoll Rand  
Industrial Technologies

# PUMP OPTION DESCRIPTION CHART

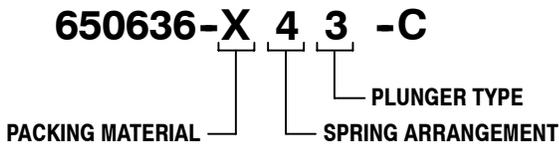

**PACKING MATERIAL** (PACKINGS ARE UPPER AND LOWER UNLESS NOTED)

|                                  |                               |
|----------------------------------|-------------------------------|
| 7 GLASS FILLED PTFE (UPPER)      | P UHMW-PE/PTFE STAG'D (UPPER) |
| VIRGIN PTFE (LOWER)              | UHMW-PE (LOWER)               |
| C UHMW-PE                        | R PTFE/UHMW-PE STAG'D (UPPER) |
| F UHMW-PE/LEATHER STAG'D (UPPER) | PTFE (LOWER)                  |
| UHMW-PE (LOWER)                  |                               |

**SPRING ARRANGEMENT**

|                        |
|------------------------|
| 4 MULTIPLE WAVE SPRING |
|------------------------|

**PLUNGER TYPE**

|                             |
|-----------------------------|
| 3 HD SS W/HD CHROME PLATING |
|-----------------------------|

## GENERAL DESCRIPTION

**⚠ WARNING HAZARDOUS PRESSURE.** Do not exceed maximum operating pressure of 450 psi (31.0 bar) at 150 psi (10.3 bar) inlet air pressure.

**PUMP RATIO X INLET PRESSURE TO PUMP MOTOR = MAXIMUM PUMP FLUID PRESSURE**

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 150 p.s.i. (10.3 bar) inlet pressure is supplied to the motor of a 3:1 ratio pump it will develop a maximum of 450 p.s.i. (31.0 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

**⚠ WARNING Refer to general information sheet for additional safety precautions and important information.**

- The Four-Ball pumps are primarily designed for the high volume transfer of light and medium viscosity fluids compatible with 400 series stainless steel. The lower pump is designed for easy priming and the double acting feature is standard on all ARO industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

## TROUBLE SHOOTING

Pump problems can occur in either the Air Motor Section or the Lower Pump End Section. Use these basic guidelines to help determine which section is affected.

**If the pump will not cycle.**

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet/outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet/outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and/or air leaks from the air motor.


**If the pump cycles but does not deliver material.**

- Refer to the lower pump end manual for further trouble shooting.

## PUMP CONNECTION - UPPER / LOWER

**NOTE: All threads are right hand.**

1. Lay the pump assembly on a workbench.
2. Remove the three nuts and washers from the three spacer rods (see figure 1).
3. Pull the air motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
4. Using e-ring pliers, slide the retaining ring up far enough to allow the sleeve to move upward and release the two connectors (see figure 2).

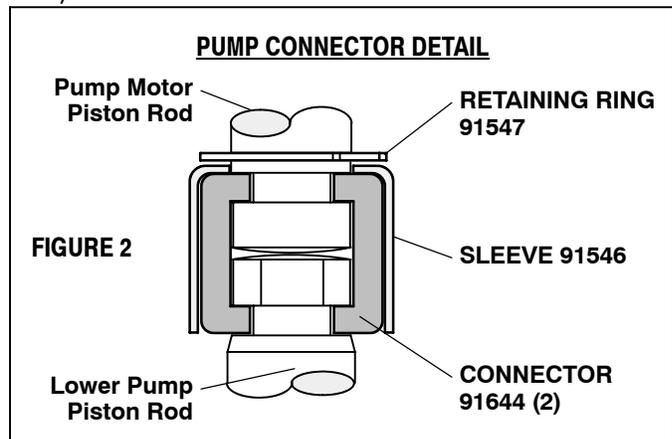

**REASSEMBLY**

1. Align the pump motor with the lower pump end. Position the air inlet of the motor 200° from the material outlet.
2. Install the two connectors and retain with the sleeve, slide the retaining ring back into position.
3. Reinstall the spacer rods to the pump motor.
4. Bring the motor and lower pump together and retain with the three nuts and washers.