



ParcelCube 900 R2

User manual v1.0

INDEX

Assembly	2
Installation and initial start-up	3-4
Main screen	5
Configuration screen	6
Measure oversized objects	7
Item stacking	7
Item counting	7
Measuring oversized objects	7
F9 configuration	7
Auto calibration dimension and weight	7
Manual calibration without calibration object and weight	8
CSV	9
Web service	10
Remote Webservice URI	11

Assembly

Requires Philips screwdriver.

Assemble the back piece (Aluminum part with Parcelcube logo) with the main piece as shown in picture. Be sure to mount the back piece at a right angle.

1

Loosen the screws from the main section according to picture



2

Hang the back piece on the 2 screws and tighten in order 1, 2, 3



Installation and initial start-up

Make sure to carefully follow the installation instructions below.

- ✓ Connect the AC/DC adapter to the AC power outlet.
- ✓ Do **NOT** connect the USB cable.
- ✓ Download the following file and unzip to c:\ (root directory of the C drive)
<https://dl.dropboxusercontent.com/u/3950023/parcelcube/Parcelcube%20R2%20installation%20files.zip>
- ✓ Run serial_installer.exe located under c:\Parcelcube R2\publish (as administrator)
- ✓ Insert the USB cable from the Parcelcube into your computer. The found new hardware wizard should appear and install the USB serial port driver.
- ✓ Run setup.exe (located under c:\Parcelcube R2\publish)

Once the Parcelcube installation is finished you will be presented with the below window.

Parcelcube R2

File Edit Run

Length TARE Register (Enter)

Width

Height

Volume m3

Weight = Vol. Weight

User defined values

Barcode

Customer

user_value3

user_value4

user_value5

user_value6

user_value7

Item stacking

Length 1 pcs

Size per item

Width 1 pcs

Size per item

Height 1 pcs

Size per item

Weight per item

Item Counting

Set weight of 10pcs

of pcs

PARCELCUE

IP Address Port Com Port: TARE 9000 000

The Parcelcube 900 software is preconfigured, although there are some minor settings that need to be adjusted.

Chose Edit → Admin login to enable configuration (password is dimwei)
Chose Edit → Configuration to open the configuration window.

Installation and initial start-up

Step one is to determine which serial port Parcelcube was assigned:

Device manager: Ports (COM and LPT)
Look for Teensy USB Serial (COMx)

Configuration

Table dimensions in cm

Length

Width

Height

High res Smoothing

Imperial

NTEP/OIML

User defined values

user_value1 Clear

user_value2 Clear

user_value3 Clear

user_value4 Clear

user_value5 Clear

user_value6 Clear

user_value7 Clear

Scale calibration

Tare

Multiple

Volume Weight

Dim kg/m3

COM Port

COM7

PARCELCUBE

CSV directory

c:\parcelcube R2

WebServer API

Bind to IP address

Bind to Port

Remote Webservice uri. Clear this to disabled

F9 configuration

Length = lower case 'l'
Width = lower case 'w'
Height = lower case 'h'
Weight = capital 'W'
TAB = lower case 't'
Carriage return = lower case 'cr'
Line feed = lower case 'lf'

t,W,t,l,t,w,t,h,l,f

Display port

Enable

Save

Close

Copyright Gripner Production AB

Chose the COM port in the drop down box named COM Port that corresponds with the Parcelcube serial port.


Set the Bind to IP address to the computer's IP address.

Using your calibration protocol delivered with the Parcelcube, populate the Table dimensions and Scale Calibration fields.

Press Save and OK in the popup window and close the configuration windows.

Press Run in the main window. The system is now up and running.

Main screen

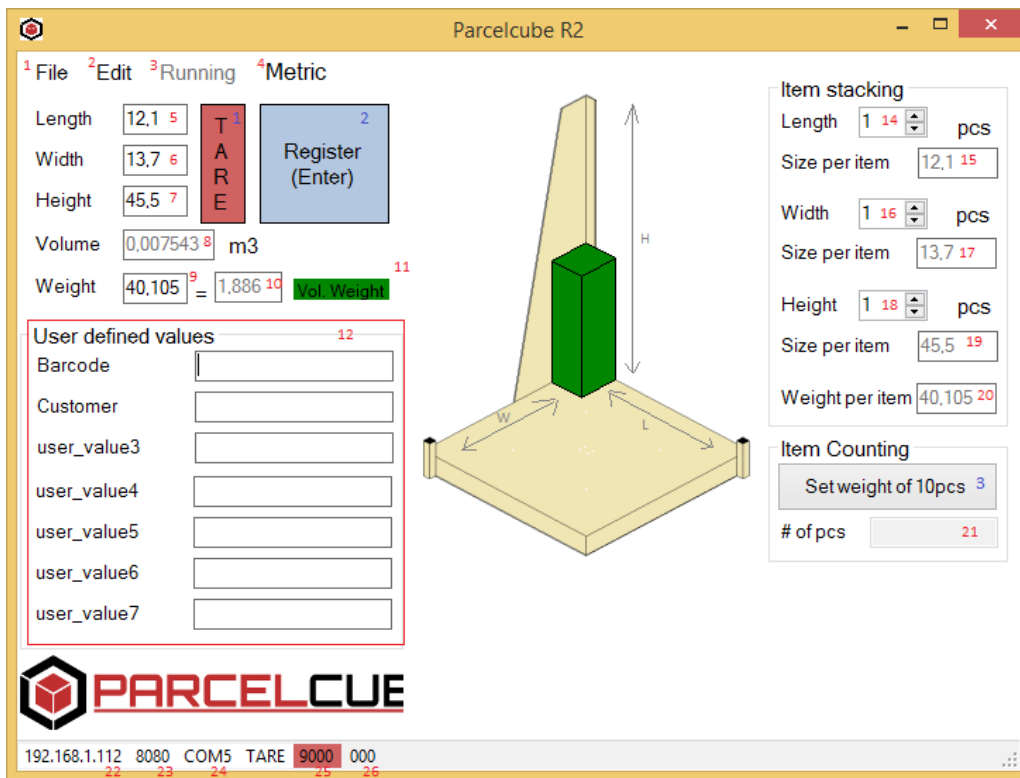

- 1 File menu
- 2 Edit menu
- 3 Start the Parcelcube software communication with the hardware and webservice
- 4 Toggle Metric or Imperial units, Units used and shown are in Metric.
- 5 Measured objects Length (L)
- 6 Measured objects Width (W)
- 7 Measured objects Height (H)
- 8 Volume in m3 or ft3 (LxWxH)
- 9 Weight
- 10 Volume weight (calculated from dimensions and dim weight)
- 11 Green if Weight > Volume weight. Red if Volume weight > Weight
- 12 7 User definable fields, First field will always have focus at program startup and after Registering data.
- 14 Number of items stacked along the length
- 15 Length per item
- 16 Number of items stacked along the width
- 17 Width per item
- 18 Number of items stacked along the height
- 19 Height per item
- 20 Weight per item
- 21 Number of pcs

- 1 Fast TARE, not saved just used until restart or next time TARE is pressed.
- 2 Save all measurement data and additional information as User defined fields
If you have configured Remote webservice URI a call will also be made with all the data. *1
- 3 Set the weight for 10pcs see Item counting on page 8

Configuration screen

Configuration

Table dimensions in cm
Length: 64
Width: 64
Height: 96.2
 High res Smoothing
 Imperial
 NTEP/OIML

User defined values
user_value1: Barcode Clear
user_value2: Customer Clear
user_value3: user_value3 Clear
user_value4: user_value4 Clear
user_value5: user_value5 Clear
user_value6: user_value6 Clear
user_value7: user_value7 Clear

Scale calibration
Tare: 9000
Multiple: 75

Volume Weight
Dim kg/m3: 250

COM Port: COM5

PARCELCUBE

CSV directory: c:\parcelcube R2

WebServer API
Bind to IP address: 192.168.1.112
Bind to Port: 8080

Remote Webservice uri. Clear this to disabled

F9 configuration
Length = lower case 'l'
Width = lower case 'w'
Height = lower case 'h'
Weight = capital 'W'
TAB = lower case 't'
Carriage return = lower case 'cr'
Line feed = lower case 'lf'
t,W,t,t,t,w,t,h,h,f

Display port: COM3 Enable

Save
Close

Copyright Gripper Production AB

Table dimension in cm, calibration values for dimensioning.

High res Dimensions measured with 1 decimal. Weight with 3 decimal

Smoothing Stabilize the measurements

Imperial Use imperial units instead of metric

NTEP/OIML Used if you have a Parcelcube NTEP/OIML approved indicator

User defined values: Nicknames for the 7 fields of additional data you can save, can be configured to clear or not clear after each Registering of data.

Scale calibration, calibration values for scale, not used if you have NTEP/OIML

Dim kg/m3: Dim weight

COM Port: Comport the Parcelcube is connected to

CSV directory: Location where the CSV file will be saved

Webserver API: IP address and port Parcelcube software will bind to

Remote webservice url: See Remote Webservice uri (page 12)

F9 configuration: See F9 configuration (page 8)

Display port: Only used with special Parcelcube Display, must NOT enable if you do not have the extra display

You have to click Save to apply any changes you do in the configuration.

All settings uses comma not period!

Item stacking.

If you wish to measure many small objects (smaller than minimum allowed size) you can use item stacking. Say for example you have 200 business card. Stack them along the height, put in 200 in the Height pcs field. The field Height will show total height and the field Height under item stacking will show the size of each business card.

Measuring oversized objects.

If you have an object too big to fit on the Parcelcube you can still use the Parcelcube to register the data. Under File menu chose Pause Serial, now you can manually enter the dimensions and weight. Register the data and again under File menu chose Start Serial.

F9 configuration.

This option allows you to configure the Parcelcube software to emulate a keyboard typing in the volume and weight data to any application.

Say you want to save the measurements to an Excel file with the column layed out as:

Length	Width	Height	Weight
--------	-------	--------	--------

You configure the F9 as l,t,w,t,h,t,W,lf

The excel file will be filled in when you press the F9 key: (fictional volume and weight data)

Length	Width	Height	Weight
23	41	12	0,77
43	23	12	1,33

Auto calibrating dimension.

To do an auto calibration you need to be logged in as admin in the software. Edit --> Admin login (password dimwei). Once logged in you have access to Edit --> Auto calibrate dimensions. You need to follow the on screen instruction and have the calibration object (L20, W20, H30cm)

Auto calibrating weight.

To do an auto calibration you need to be logged in as admin in the software. Edit --> Admin login (password dimwei). Once logged in you have access to Edit --> Auto calibrate weight. You need to follow the on screen instruction and have the calibration weight (20kilos).

Make sure you followed the steps outlined on pages 3-4.

Chose Edit → Admin login to enable configuration (password is dimwei)

Chose Edit → Configuration to open up the configuration window.

Select High res, ensuring that Smoothing Imperial and NTEP/OIML are NOT selected.

Click Save and OK

Position the main window and configuration windows so that you can see both.

Calibrate dimensions

Place an object of known size, for example 20 x 20 x 20 cm and preferably made of wood or metal on the Parcelcube. Observe the dimensions in the main window.

If a dimension, such as width, is listed as too small, such as 19,5, in the configuration window, manually change the width under Table Dimensions in cm to current value + (20 – 19,5) So if the current value was 63,5 you would change it to 64.


If, for example, the length shows as 20,5 you would then decrease the current length value according to current value - (20,5 – 20)) Thus, if the current value was 64,5 you would then change it to 64.

Calibrate weight

To set the TARE (zero weight of the Parcelcube):

Make sure the Parcelcube is totally empty.

In the Parcelcube main window, locate the status bar at the bottom and find the value to the RIGHT of the value with a red background. In this example the value is 8905.



192.168.1.237 8080 COM7 TARE 9000 8905

Enter this value (8905) under Scale Calibration TARE in the configuration. Click Save and OK. Now the weight in the main window should be hovering around 0.

To calibrate the weight:

Place a known weight on the Parcelcube, around 20 kilos. Observe the weight in the main window. If it displays as less than 20 kilos, increase the multiple under Scale Calibration in the configuration window. Make sure to click Save and OK to see changes.

Once you are satisfied with the result, you can use Imperial and/or smoothing as you see fit. You should also remove high res if using non-Imperial measurements.

For a full explanation of all fields in the main window and configuration, please see our online video.

File → View CSV

Date time	Length	Width	Height	Volume	Weight	Vol. Weight	User Value1	User Value2	User Value3
2013-08-05 23:43:42	22.2	22.5	55.3		29.96	5.524			
2013-08-05 23:43:44	22.2	22.5	55.3		29.96	5.524			
2013-08-05 23:43:45	22.2	22.5	55.3		29.96	5.524			
2013-08-05 23:55:40	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:40	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:40	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:41	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:42	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:43	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:44	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:45	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:55:46	22.2	22.5	55.3	0.028	29.96	5.524			
2013-08-05 23:56:30	22.2	22.5	55.3	0.028	29.96	5.524	283547	EAN-13-283547	Bobby
2013-08-05 23:56:31	22.2	22.5	55.3	0.028	29.96	5.524	283547	EAN-13-283547	Bobby
2013-08-05 23:56:32	22.2	22.5	55.3	0.028	29.96	5.524	283547	EAN-13-283547	Bobby
2013-08-05 23:56:33	22.2	22.5	55.3	0.028	29.96	5.524	283547	EAN-13-283547	Bobby

This option will bring up a view of the current CSV data.

The CSV file is located in the path defined in the configuration form.

The Parcelcube CSV file format is as follows:

- Field 1: Date and time in computer's current format, variable size
- Field 2: Length, variable size
- Field 3: Width, variable size
- Field 4: Height, variable size
- Field 5: Volume, variable size
- Field 6: Weight, variable size
- Field 7: Volume Weight, variable size
- Field 8: User Value 1, variable size
- Field 9: User Value 2, variable size
- Field 10: User Value 3, variable size
- Field 11: User Value 4, variable size
- Field 12: User Value 5, variable size
- Field 13: User Value 6, variable size
- Field 14: User Value 7, variable size
- Field 15: Item stacking length, variable size
- Field 16: Item stacking width, variable size
- Field 17: Item stacking height, variable size
- Field 18: Item stacking weight, variable size
- Field 19: Item counting # of pcs

Each field ends with a semicolon except the last field, which ends with CRLF.

The Parcelcube software has a built-in webserver offering a simple web service.

The webserver is based around a client issuing a http GET and the Parcelcube webservice replying with a standard HTTP 200 and text/plain header followed by a single line of ascii encoded data. For example:

Format is same as in CSV file
Field 1;Field 2;.....Field 19<CRLF>

Each field is terminated with a semicolon except the last field, which is terminated with CRLF.

```
-----  
Dim request As HttpWebRequest = CType(WebRequest.Create("http://192.168.43.37:8080/"),  
HttpWebRequest)  
// IP and port should be the one in the parcelcube config  
Dim response As HttpWebResponse = CType(request.GetResponse(), HttpWebResponse)  
  
' Get the stream associated with the response.  
Dim receiveStream As Stream = response.GetResponseStream()  
  
' Pipes the stream to a higher level stream reader with the required encoding format.  
Dim readStream As New StreamReader(receiveStream, Encoding.UTF8)  
  
'MsgBox(readStream.ReadToEnd())  
Dim parcelcube_string() As String  
Try  
    parcelcube_string = readStream.ReadToEnd().Split(";")  
Catch  
End Try  
  
item_lenght_txtbox.Text = parcelcube_string(0)  
item_width_txtbox.Text = parcelcube_string(1)  
item_height_txtbox.Text = parcelcube_string(2)  
item_weight_txtbox.Text = parcelcube_string(4)  
  
response.Close()  
readStream.Close()  
-----
```

parcelcube_string() has all the data, even though this example only uses 4 values. If you want the calculated volume parcelcube_string(3) will hold it.CRLF.

Remote webservice URI

This is used to send data to other systems via an http get.
Configure the Webservice uri with the correct uri. Parcelcube software will add an equal character and an uri encoded data string to the uri.

For example if your webserver running the webservice have ip address 192.168.20.1 and use port 8900. Your webservice is called pcddata and expect an http get variable named 'data' the uri would look like this:
`http://192.168.20.1:8900/pcdata?data`

The Parcelcube software will add an equal character and the same string as in CSV.
`http://192.168.20.1:8900/pcdata?data= Field 1;Field 2;.....Field 19<CRLF>`

Call us:

International 24/7: +44 2088 175 264

USA & America: +1 240 624 0001

Scandinavia: +358 10 421 4141

E-mail:

contact@parcelcube.com

Skype:

parcelcube

Technical support 24/7:

support@parcelcube.com

www.parcelcube.com

www.parcelcube.de