

Digital Temperature Controller


DTB Series User Manual

Thank you for purchasing our products, please read this manual before using and keep this manual for future reference

⚠ In normal operation, the operator must not remove the controller from its housing or have unrestricted access to the rear terminals, as this would provide potential contact with hazardous live parts.

⚠ Installation and configuration must be undertaken only by technically-competent servicing personnel.

1 Panel description

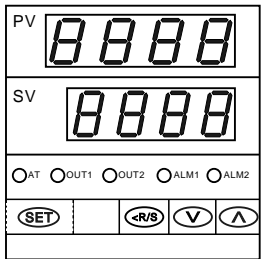

PV: Process value/Parameters display

SV: Setting value/Value for various parameters

SET: Function key, to goes to parameters list, to shift between parameters to save and exit from parameters list

<R/S>: Shift to target digits/run or stop the program

V: Down key, decrease numerals

^: Up key, increase numerals

OUT1: Main output LED indicator

OUT2: Output 2 LED indicator

AT: Auto-tuning process LED indicator

ALM1: Alarm 1 indicator

ALM2: Alarm 2 indicator

2 Base display mode and basic configuration

2.1 Power up self-check

This device will perform self-checking after power up, below is the display sequence for this process

INP Upper display shows a symbol for input
°C Lower display shows the temperature unit and input sensor type

400 Upper display shows the default high limit for setting value
0 Lower display shows the default low limit for setting value

25 Upper display shows the current process value
40 Lower display shows the current setting value

2.2 Error Display

UUUU Upper display show "UUUU" and flashes, indicates overscale, check the sensor wiring and input code

0000 Upper display show "0000" and flashes, indicates underscale, check the sensor wiring and input code


89 Upper display shows the PV value but flashes means all wiring are correct but the PV has exceed the range of setting value high or low limit, adjust the setting value range.

2.3 Run and stop the program

25 / **40** **<R/S>** **500P** / **40**
 Press shift key and hold still for more than three seconds can run/stop the program

2.4 Setting value(SV) configuration

Setting value can only be configured when controller shows PV in the upper display and SV at the lower display

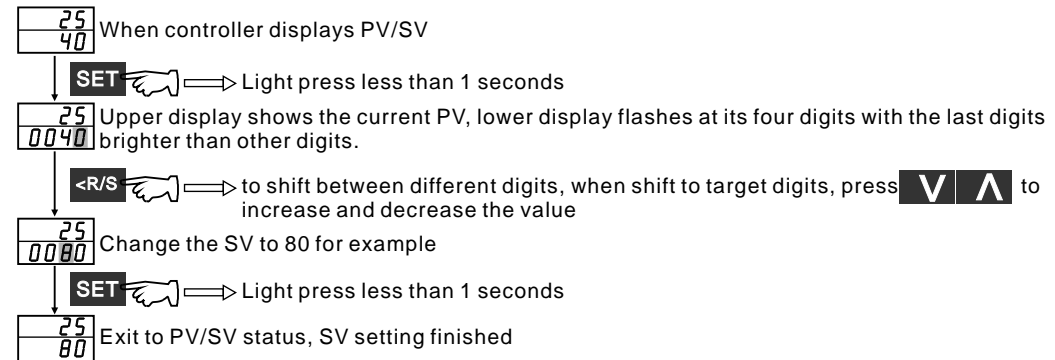



3 Field parameters and setting

Some crucial parameters can be configured within field parameters level listed as below:

- Alarm value
- Auto-tuning switch on and off
- Proportional band value setting (referred as P in PID control)
- Integral time value setting (referred as I in PID control)
- Derivative time value setting (referred as D in PID control)
- Anti-reset windup value setting
- Control cycle time setting
- Protection Lock setting
- PV Bias value

Below sequence for configuring the parameters within field parameters level, press **V** / **^** can change the value of parameters.

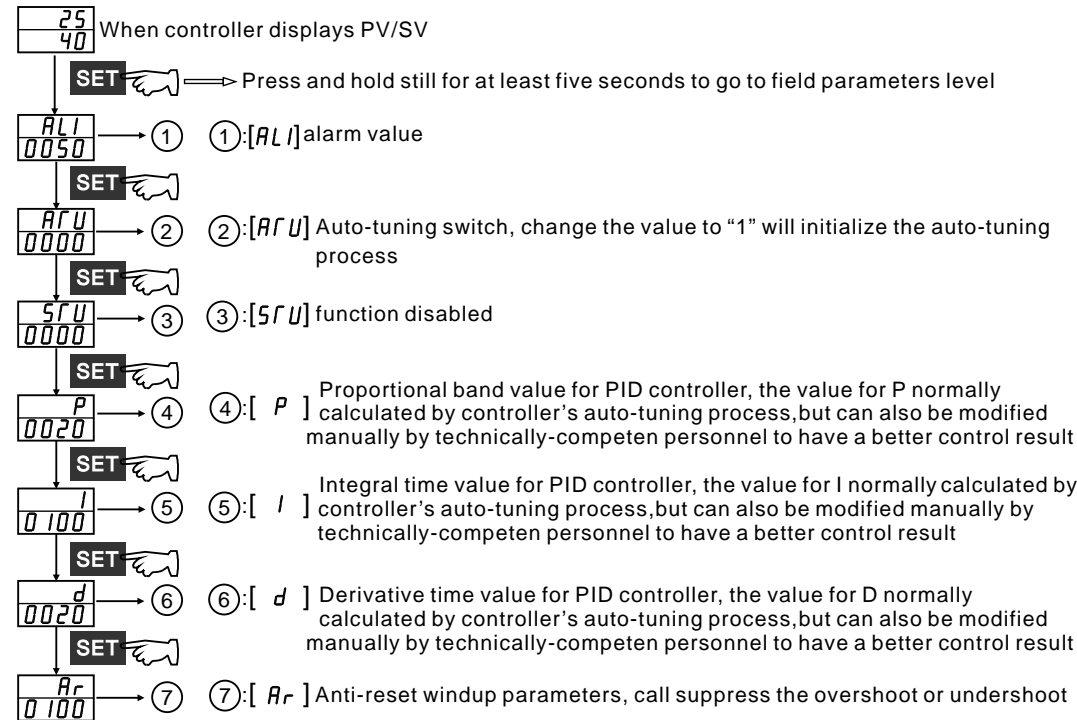

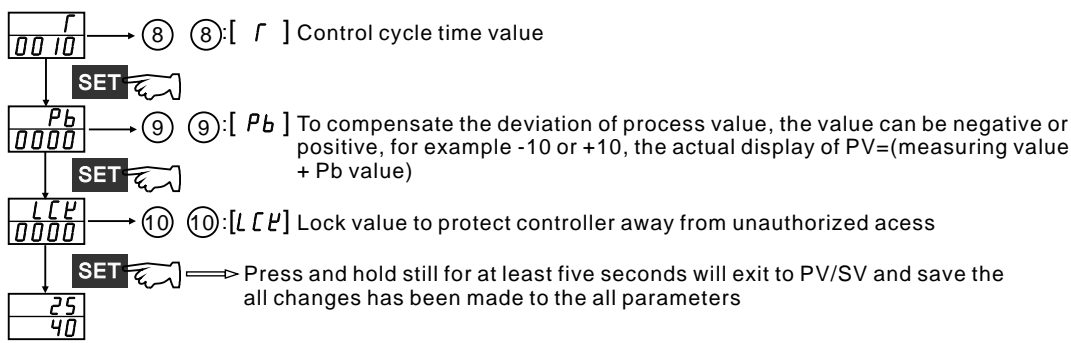

● Table 1--- Field parameter details

Legend	Meaning	Range	Factory default	Sequence
ALI	Alarm value	-1999 to 9999	50/50.0	①
AFU	auto-tuning switch	0 or 1	0	②
SFU	not applicable	not applicable	not applicable	③
P	Proportional band	0-9999 or 0.1~999.9	15/15.0	④
I	Integral time	1-3600 S	40	⑤
d	derivative time	1-3600 S	20	⑥
Ar	anti-reset windup	0~100%	25	⑦
r	cycle time	1-100S	20/2	⑧
Pb	PV Bias	-1999 to 1999/-199.9 to 999.9	0	⑨
LCK	Data Lock	See table 2	0000	⑩

● Table 2— Protection lock details



Lock value	Protection	Lock value	Protection
0000	SV and all parameters can be modified	0011	Only SV can be modified
0001	Only SV and alarm value can be modified	0101	Only alarm value can be modified
0010	All parameters except alarm can be modified	0110	All parameters can be modified except SV and alarm
0100	All parameters except SV can be modified	0111	All parameters are locked

4 System parameters setting(LEVEL 1)

Parameters can be configured within system parameter level 1 listed as below

- Input sensor selection
- Alarm mode selection
- Output type code,output was fixed when products ready to ship, should not be modified.
- Run/Stop function configuration

Follow below sequence to go to system parameters level 1

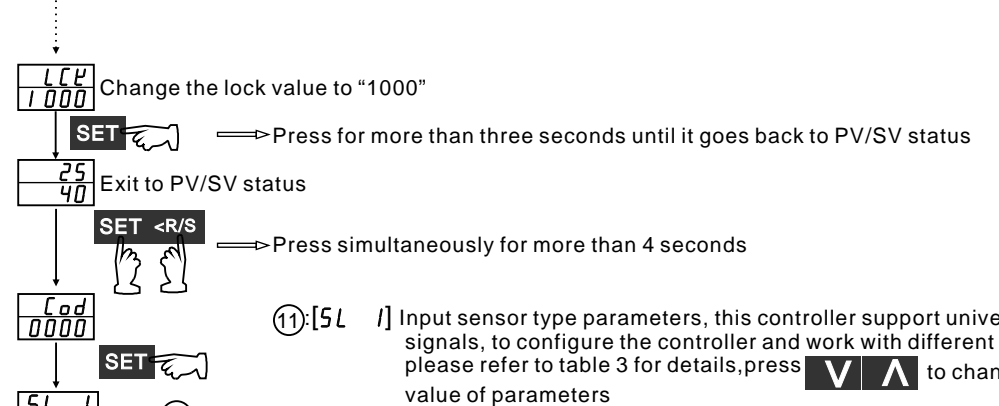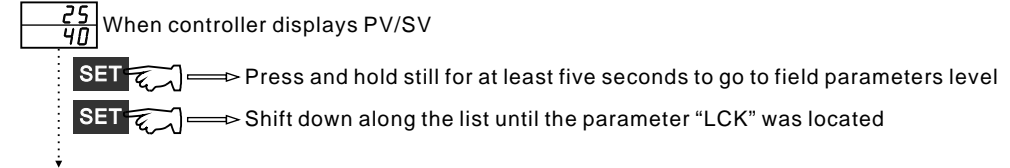

⑪:[5L 1] Input sensor type parameters, this controller support universal input signals, to configure the controller and work with different signals, please refer to table 3 for details,press **V** **^** to change the value of parameters

● Table 3— Input sensor description

Value				Input Type	Range
0	0	0	0	K	(0 to 1372 °C)
0	0	0	1	J	(0 to 1200 °C)
0	0	1	0	L	(0 to 900 °C)
0	0	1	1	E	(0 to 1000 °C)
0	1	0	0	N	(0 to 1300 °C)
0	1	1	1	R	(0 to 1769 °C)
1	0	0	0	S	(0 to 1769 °C)
1	0	0	1	B	(0 to 1820 °C)
1	0	1	0	W5Re/W26Re	(0 to 2320 °C)
1	0	1	1	PL II	(0 to 1390 °C)
0	1	0	1	T	(-199.9 to 400 °C)
0	1	1	0	U	(-199.9 to 600 °C)
1	1	0	0	Pt100(JIS/IEC)	(-199.9 to 649 °C)
1	1	0	1	JPt100(JIS)	(-199.9 to 649 °C)
1	1	1	0	0 to 5V DC	-1999 to 9999 (configurable)
1	1	1	1	1 to 5V DC	-1999 to 9999 (configurable)
1	1	1	0	0 to 20mA DC	-1999 to 9999 (configurable)
1	1	1	1	4-20mA DC	-1999 to 9999 (configurable)

⑭:[5L 4] Alarm mode for #1 alarm Refer to table 4 for details

● Table 4— Alarm mode description

Value				Alarm Type
0	0	0	0	Alarm disabled
0	0	0	1	Deviation high-limit alarm
0	0	1	0	Deviation high/low-limit alarm
0	0	1	1	Absolute value high-limit alarm
0	1	0	1	Deviation low-limit alarm
0	1	1	0	Deviation high-low limit reverse alarm
0	1	1	1	Absolute value low-limit alarm

- ⑮: [SL 6] Control mode selection. Code "0000" for direct/cooling control. Code "0001" for reverse/heating control.
- ⑯: [SL 10] Run/Stop function configuration, set value as "1001" will activate the Run/Stop function via panel by press **<R/S>**, set value as "1000" to disable the Run/Stop function












▲ Parameters "SL2" "SL3" "SL5" "SL7" "SL8" "SL9" are not available for configuration

5 System parameters setting (LEVEL 2)

Some crucial parameters can be configured within in system parameters level 2 listed as below:

- Setting range high/low limit when input is TC/RTD
- Display range when input signal is analog signal(4-20ma/0-10ma/0-5V/1-5V)
- Decimal point setting when input signal is analog signal
- Action dead bank for on/off control mode
- Hysteresis value for alarm


Follow below sequence to go to system parameters level 1

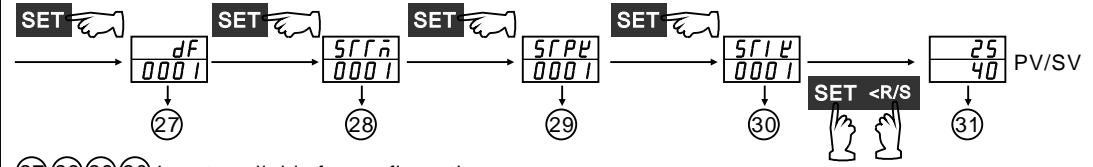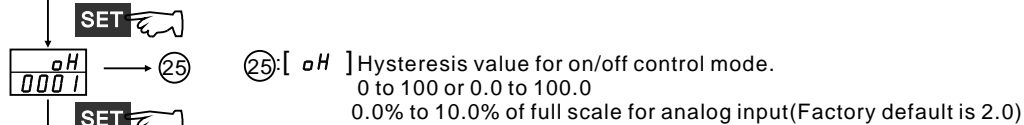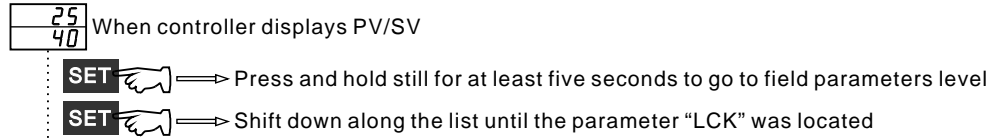

6 Auto-tuning

Auto-tuning is a basic function of this controller, to have a better control result, the auto-tuning shall be initialized from ambient temperature and shall only be initialized after the wiring was done properly on the entire system.

The Setting value for auto-tuning process should be larger than the initial temperature where the auto-tuning was triggered, and the minimum temperature difference should be 50C



The auto-tune will stop automatically after three cycles of heating and natural cooling process. No action should be made to the controller during the auto-tuning process. otherwise the auto-tuning will abort.

⚠ The controller will at on-off control mode during the auto-tuning process, grave overshoot is expected. be sure to pay strict attention if the system is vulnerable to the overshoot. be sure to set proper SV during auto-tuning in such a vulnerable system to avoid damage

7 Terminal Arrangement

