



# **How to Use 2.5G/3G Mobile Phone To Access 7000 series Network Camera**

---

Version 1.0

**2006/7/19**

---

Vivotek may make changes to specifications and product descriptions at any time, without notice.

The following is a trademark of Vivotek Inc., and may be used to identify Vivotek products only: Vivotek. Other product and company names contained herein may be trademarks of their respective owners.

No part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from Vivotek Inc.

#### ***Revision History***

| <b>Version</b> | <b>Issue date</b> | <b>Author</b> | <b>Comment</b> |
|----------------|-------------------|---------------|----------------|
| 1.0            | 2006/07/19        | Peggy Li      |                |
|                |                   |               |                |
|                |                   |               |                |
|                |                   |               |                |
|                |                   |               |                |
|                |                   |               |                |

---


# TABLE of CONTENTS

|  |    |
|--|----|
| INTRODUCTION .....   | 5  |
| NETWORK CAMERA INSTALLATION .....                                  | 5  |
| To install the Network Camera in PPPoE.....                        | 5  |
| To install the Network Camera with a Fixed IP .....                | 14 |
| To install the Network Camera behind NAT .....                     | 17 |
| USING A 2.5/3G MOBILE PHONE TO CONNECT TO THE NETWORK CAMERA ..... | 21 |
| RealPlayer.....  | 21 |
| PvPlayer.....  | 26 |
| APPENDIX .....   | 28 |
| Introduction to RTSP .....   | 28 |
| Players you can use on a mobile phone.....                         | 28 |
| Players in Mobile Phones .....                                     | 30 |


Vivotek  
confidential







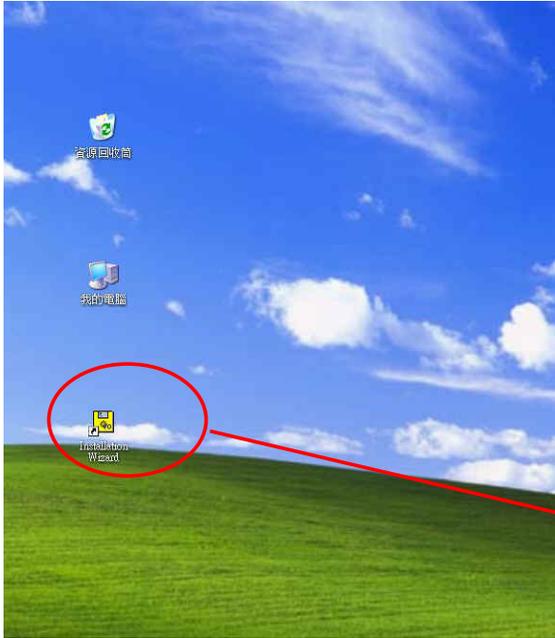


**Double click this icon**

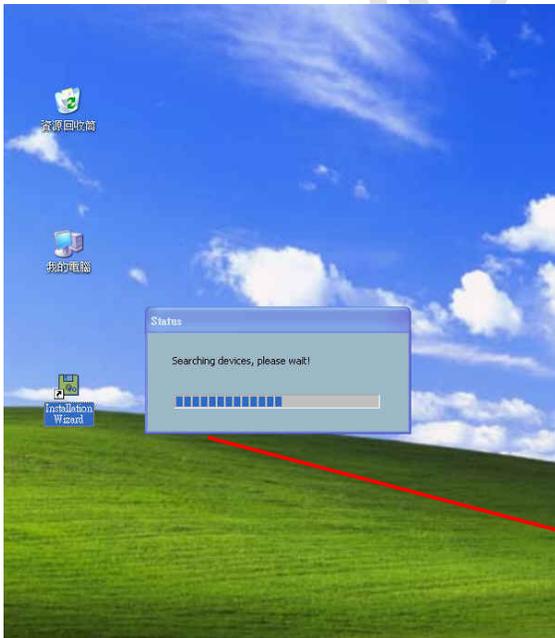

**Running the Installation  
Wizard**

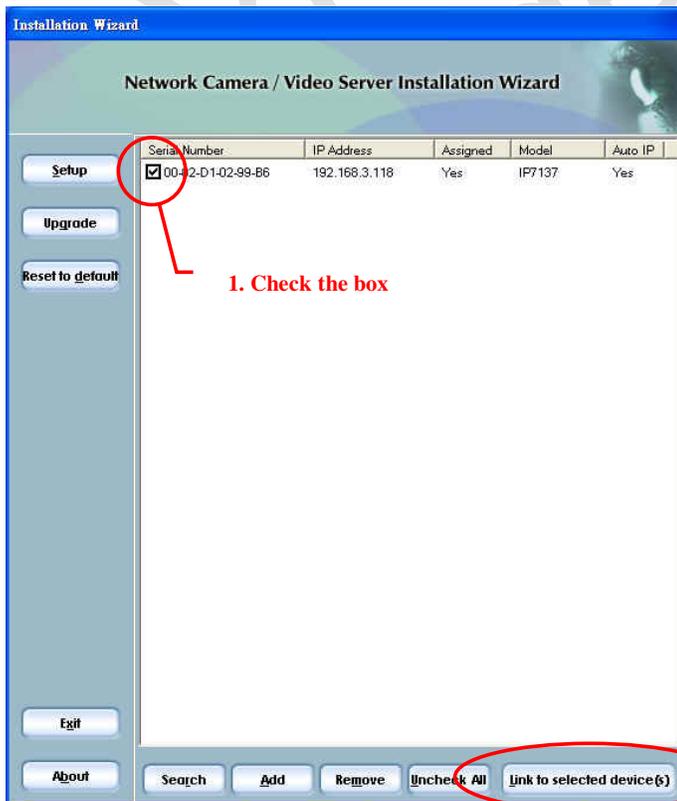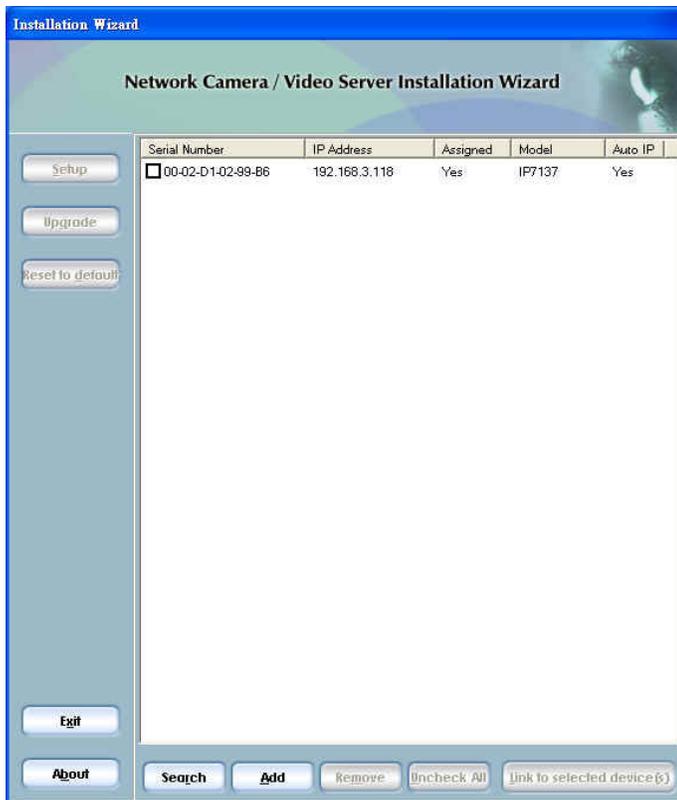

3. Link to the network camera and go to configuration page → Email and FTP page.

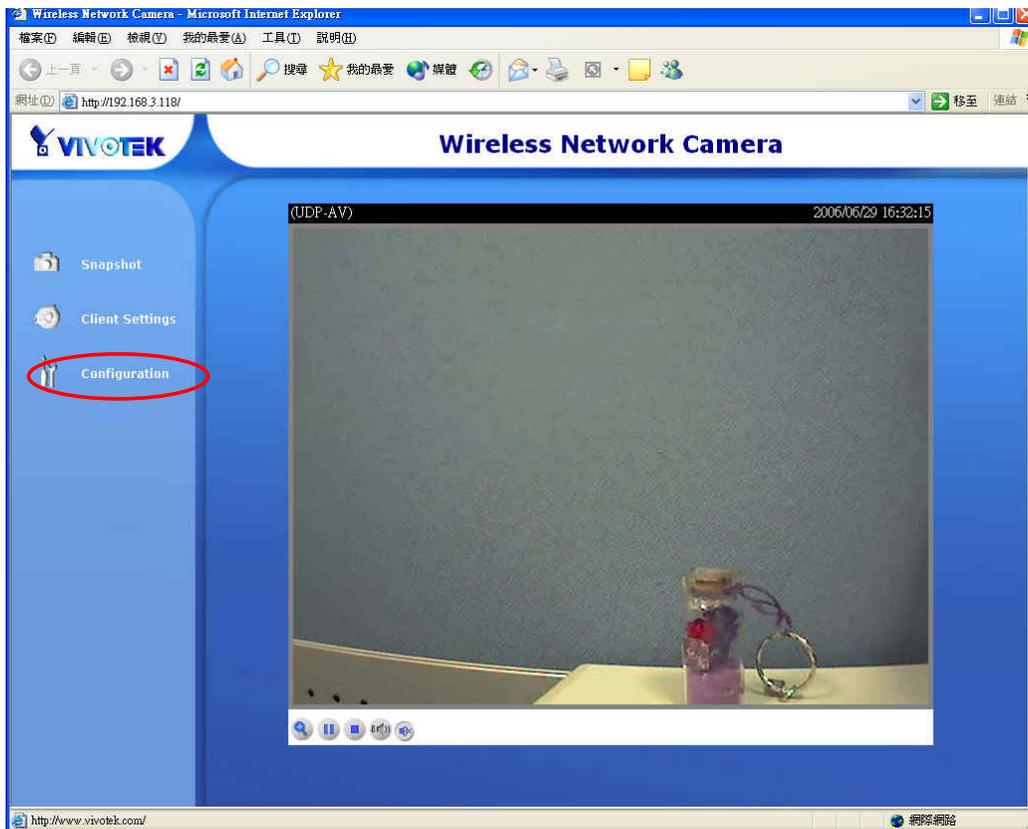

Configurations - Microsoft Internet Explorer

檔案(F) 編輯(E) 檢視(V) 我的最愛(A) 工具(T) 說明(H)

上一頁 搜尋 我的最愛 媒體

網址(D) http://192.168.3.118/setup/config.html 移至 連結 >>

**VIVOTEK** Configuration

HOME

- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Email and FTP**
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Version: 0201b

> System

Host name :

Turn off the LED indicator

**Keep current date and time**

**Sync with computer time**

PC date:  [yyyy/mm/dd]

PC time:  [hh:mm:ss]

**Manual**

Date:  [yyyy/mm/dd]

Time:  [hh:mm:ss]

**Automatic**

NTP server:

Time zone:

Update interval:

網際網路

Configurations - Microsoft Internet Explorer

檔案(F) 編輯(E) 檢視(V) 我的最愛(A) 工具(T) 說明(H)

上一頁 搜尋 我的最愛 媒體

網址(D) http://192.168.3.118/setup/config.html 移至 連結 >>

VIVOTEK Configuration

HOME

- System
- Security
- Network
- Wireless LAN
- DDNS
- Access list
- Audio and video
- Email and FTP
- Motion detection
- Application
- System log
- View parameters
- Maintenance

Version: 0201b

> Email and FTP

**Email**

Sender email address IP7137@vivotek.com

**Primary email server**

Server address 192.168.0.7

User name ipcamera

Password .....

Recipient email address provider@vivotek.com

**Secondary email server**

Server address

User name

Password

Recipient email address

**FTP**

Built-in FTP server port number 21 **Input mail account or FTP account**

**Primary FTP server**

Server address 192.168.3.54

FTP server port 21

User name user1

Password .....

Remote folder name TC

**Secondary FTP server**

Server address

FTP server port 21

User name


Password

Remote folder name


Save

完成 網際網路

4. Input correct Email or FTP data and save. (A start up system log will be sent to the Email or FTP account you set after the network camera reset, and you can know the IP address of the network camera from the log.)
5. Go to the Network page.

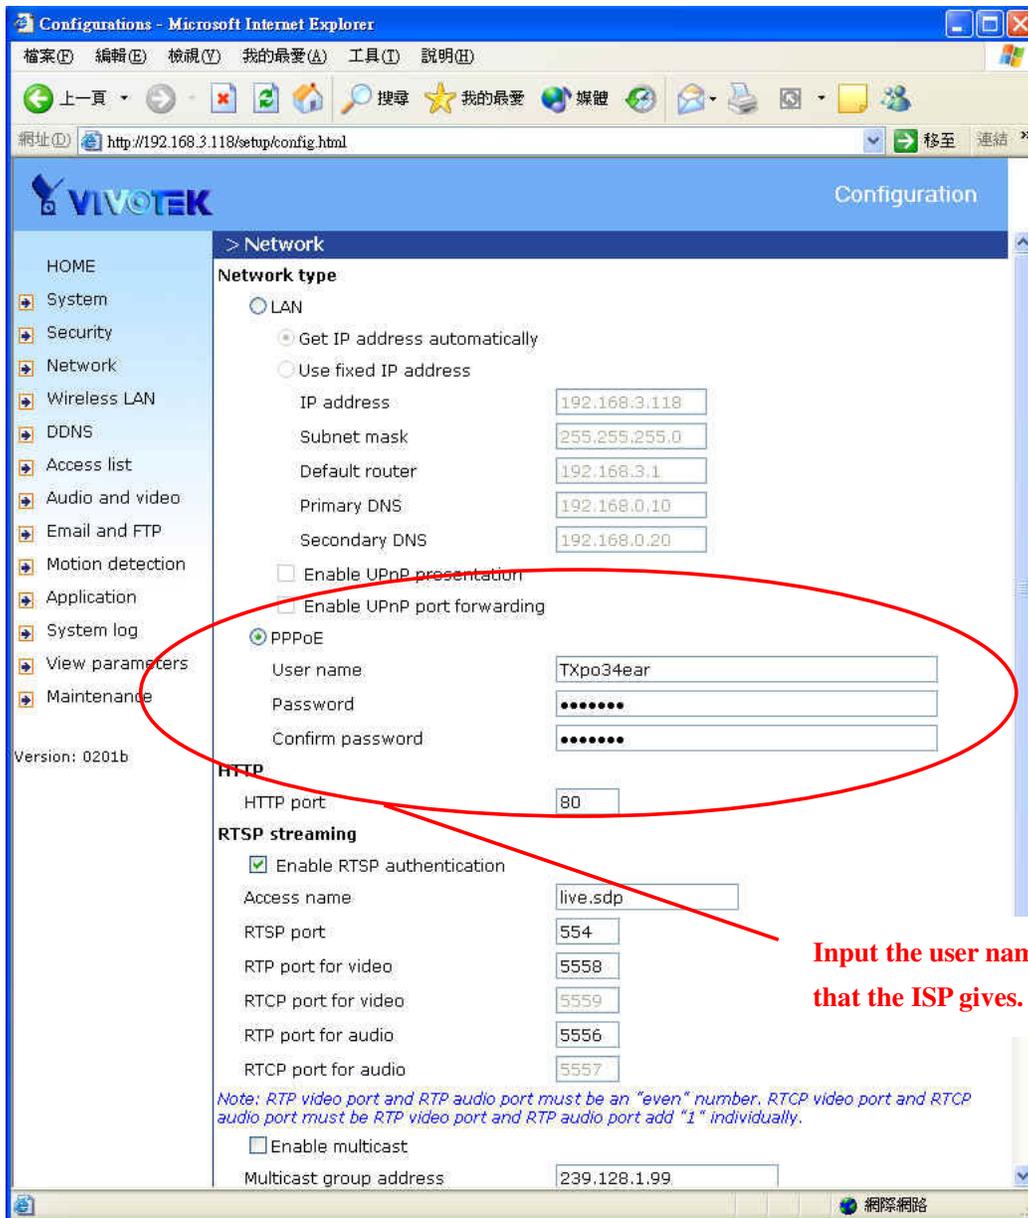


6. Check the “PPPoE” selection and input the user name and password that the ISP gives.
7. Save the settings and unplug the power adapter of network camera.
8. Take the network camera to connect to the ADSL modem and plug in the power adapter of the network camera.

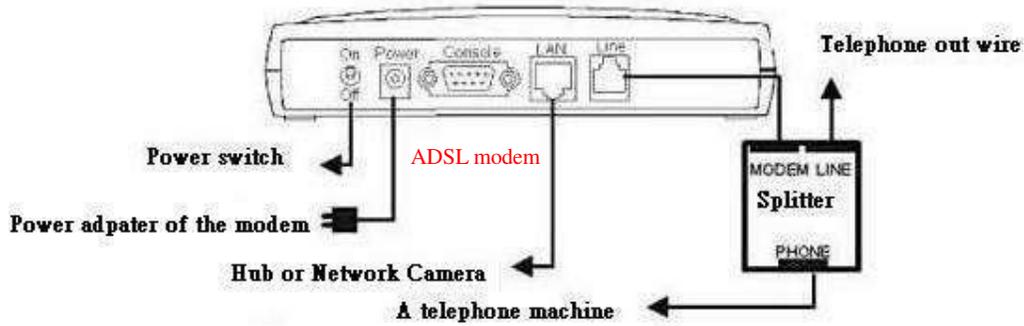


9. When the LED starts flashing blue after the self-test, users can get the network camera IP address information from the system log that has been sent to Email or FTP.

#### E-mail

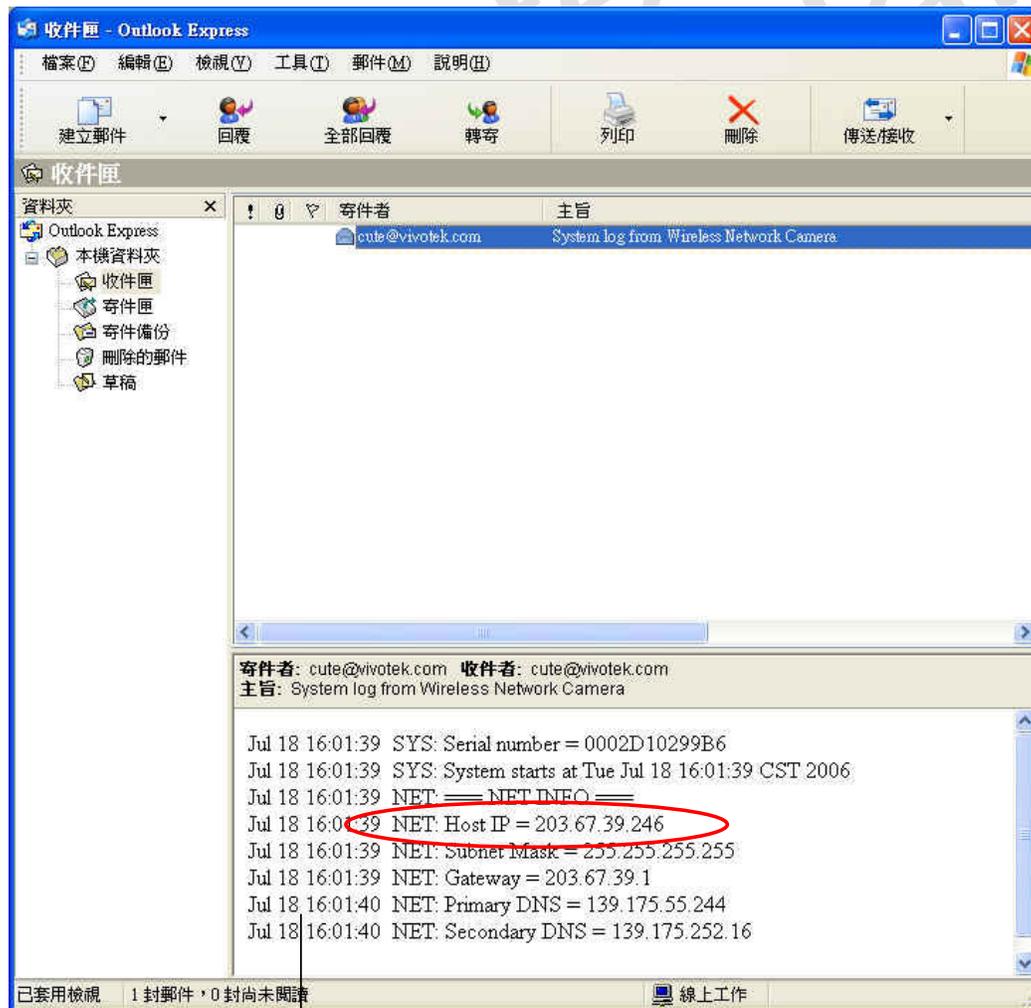


## Or system log in FTP

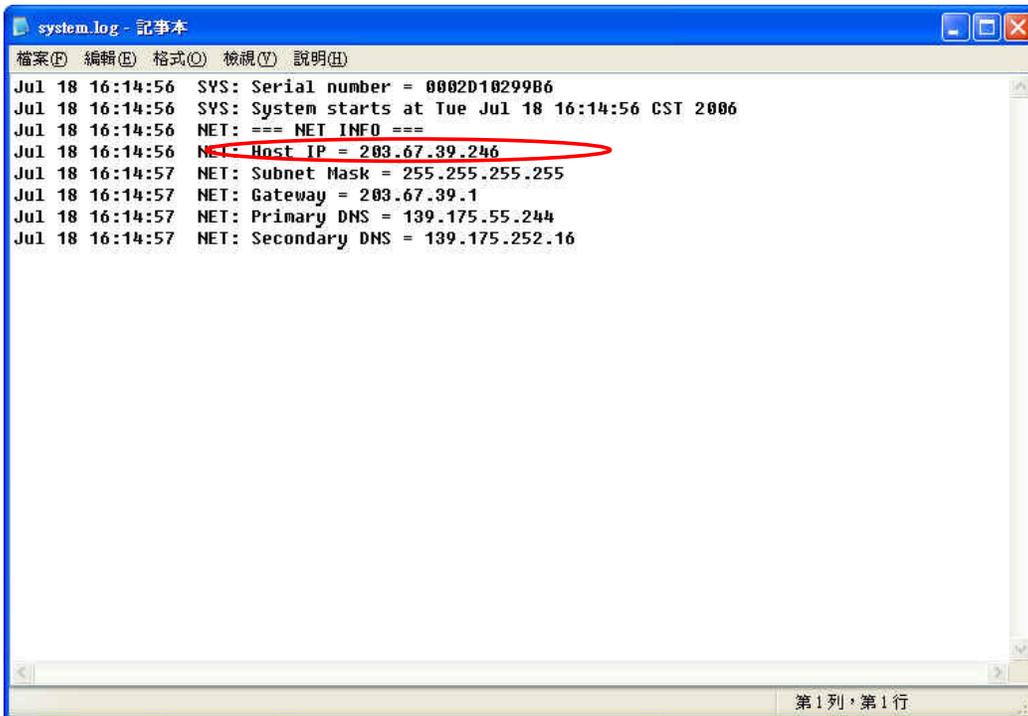


```
system_log - 記事本
檔案(F) 編輯(E) 格式(O) 檢視(V) 說明(H)
Jul 18 16:14:56 SYS: Serial number = 0002D10299B6
Jul 18 16:14:56 SYS: System starts at Tue Jul 18 16:14:56 CST 2006
Jul 18 16:14:56 NET: === NET INFO ===
Jul 18 16:14:56 NET: Host IP = 203.67.39.246
Jul 18 16:14:57 NET: Subnet Mask = 255.255.255.255
Jul 18 16:14:57 NET: Gateway = 203.67.39.1
Jul 18 16:14:57 NET: Primary DNS = 139.175.55.244
Jul 18 16:14:57 NET: Secondary DNS = 139.175.252.16
第1列, 第1行
```

10. Input the URL “rtsp://<network camera IP address>/live.sdp” (for example: rtsp://203.67.39.246/live.sdp) in RealPlayer or pvPlayer on the mobile phone. Now users can view the live video.

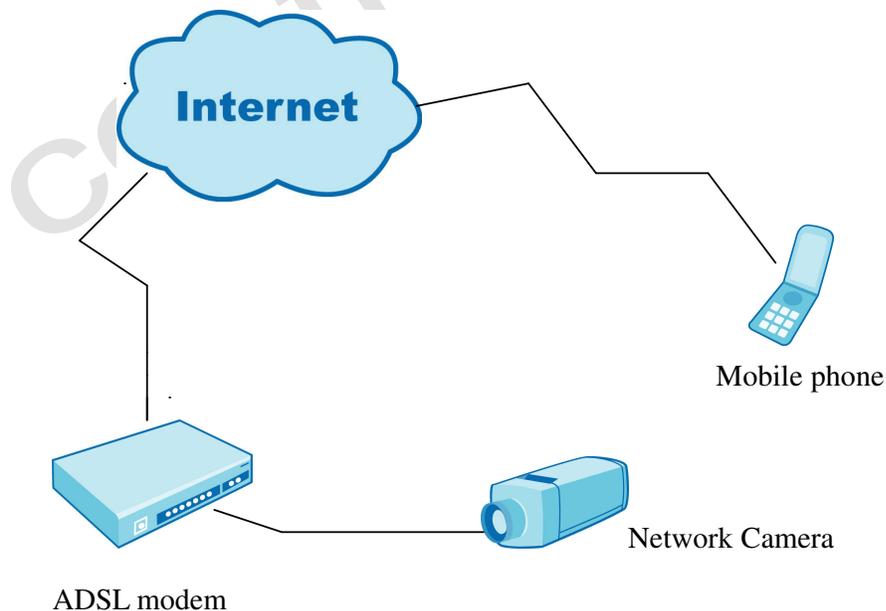

If the Ethernet is not available

1. Change the IP of PC to 192.168.0.100.
2. Use a crossover line to connect the network camera with PC only.

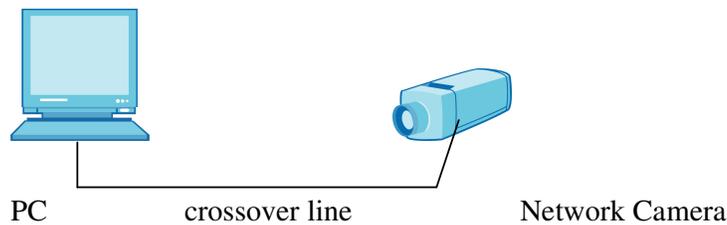


3. Plug in the power adapter of the network camera.
4. When the LED starts flashing blue after the self-test, use the Installation Wizard program to find the location of the network camera. (The network camera default IP is 192.168.0.99)
5. Link to the network camera and go to configuration page → Email and FTP page.
6. Input correct Email or FTP data and save.
7. Go to the Network page.
8. Check “PPPoE” selection and fill out the user name and password that the ISP gives.
9. Save the settings and unplug the power adapter of the network camera.
10. Take the network camera to connect to ADSL modem and plug in the power adapter of the network camera.
11. When the LED starts flashing blue after the self-test, users can get the Network Camera IP address information from the system log that has been sent to Email or FTP.
12. Input the URL “rtsp://<network camera IP address>/live.sdp” in RealPlayer or pvPlayer on the mobile phone. Now users can view the live video.


### **To install the Network Camera with a Fixed IP**

If the Ethernet is available


1. Set up the network camera in the LAN.

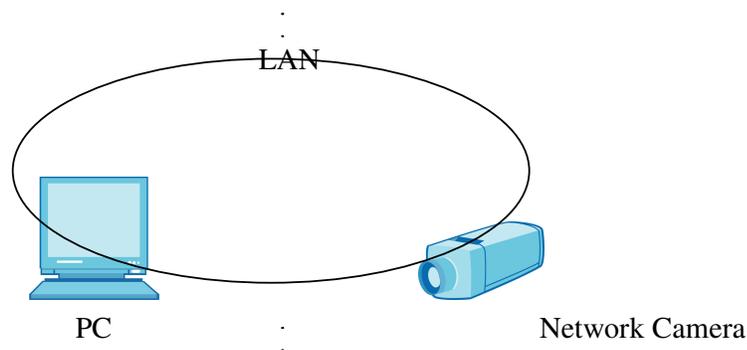

2. Use Installation Wizard program to find the location of the Network.
3. Link to the network camera and go to configuration page -> Network page.
4. Check "LAN" \ "Use fixed IP address" and then fill up the IP address, subnet mask, Default router, and DNS that the ISP gives.

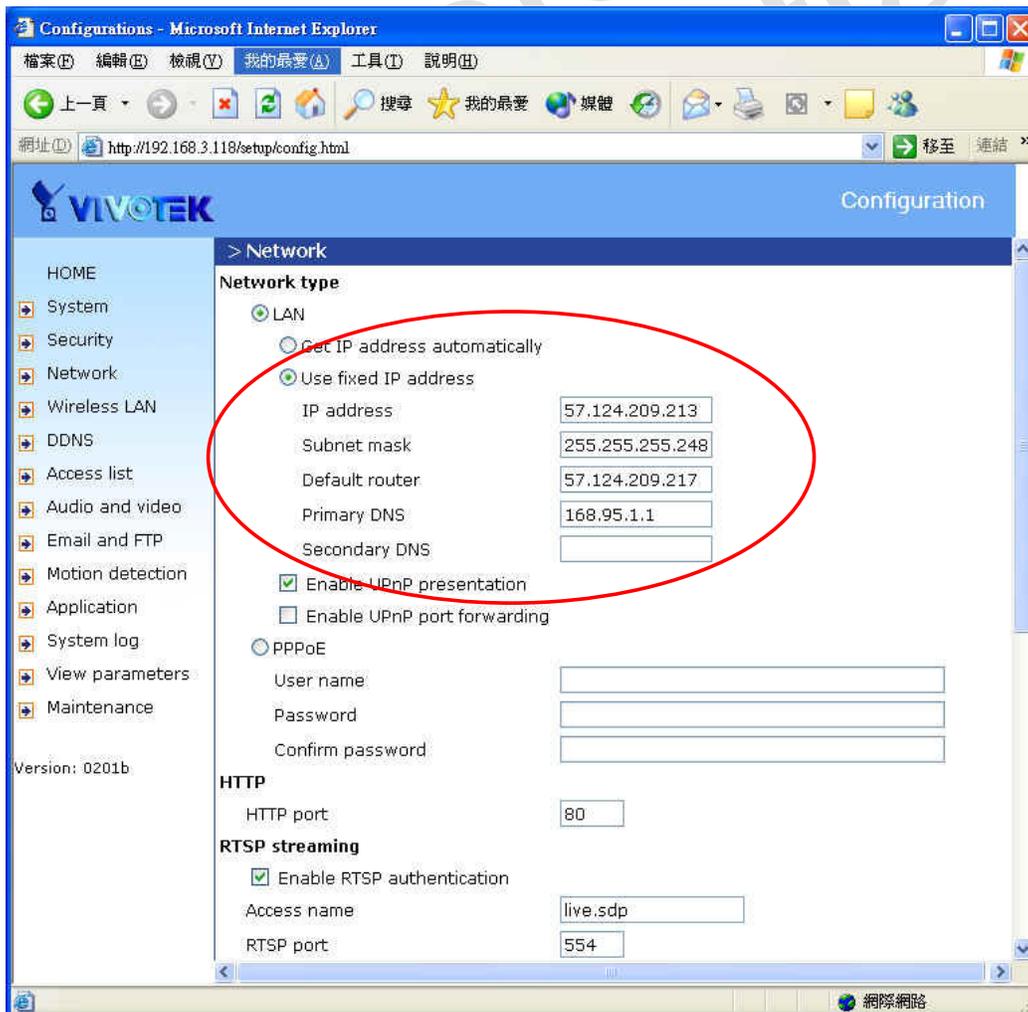

5. Save the settings, then plug out the power adapter of the network camera.
6. Take the network camera to connect to ADSL modem and plug in the power adapter of the network camera.
7. When the LED starts flashing blue after the self-test, input the URL “rtsp://<network camera IP address>/live.sdp” in RealPlayer or pvPlayer on the mobile phone. Now users can view the live video.

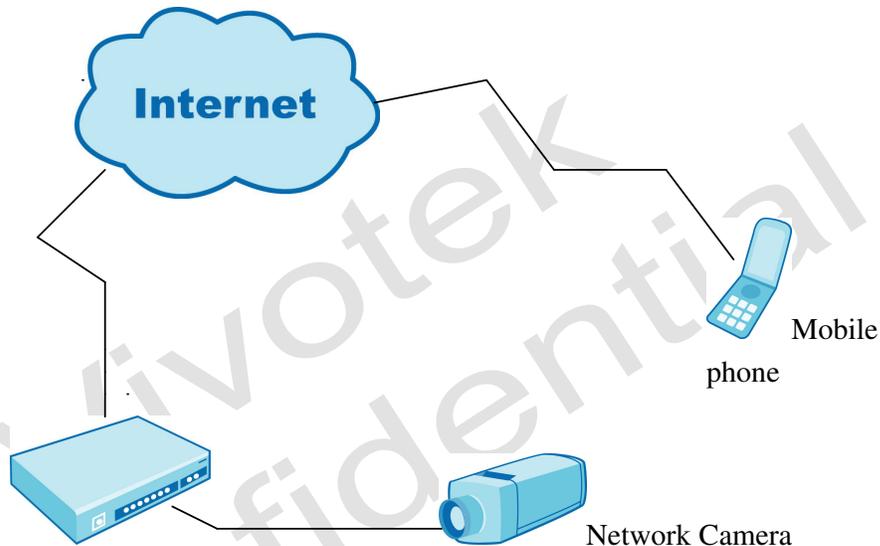

If the Ethernet is not available


1. Change the IP of the PC to 192.168.0.100.
2. Use a crossover line to connect the network camera with the PC only.
3. Plug in the power adapter of the network camera.
4. When the LED starts flashing blue after the self-test, use the Installation Wizard program to find the location of the network camera.
5. Link to the network camera and go to configuration page -> Network page.
6. Check “LAN” \ “Use fixed IP address” and then fill in the IP address, subnet mask, Default router, and DNS that the ISP gives.
7. Save the settings and unplug the power adapter of the network camera.
8. Take the network camera to connect to the ADSL modem and plug in the power adapter of the network camera.
9. When the LED starts flashing blue after the self-test, input the URL “rtsp://<network camera IP address>/live.sdp” in RealPlayer or pvPlayer on the mobile phone. Now users can view the live video.

---

---

### To install the Network Camera behind NAT

1. Connect the camera to a SOHO router and plug in the power adapter of the network camera.
2. On the router side, access Internet by PPPoE.

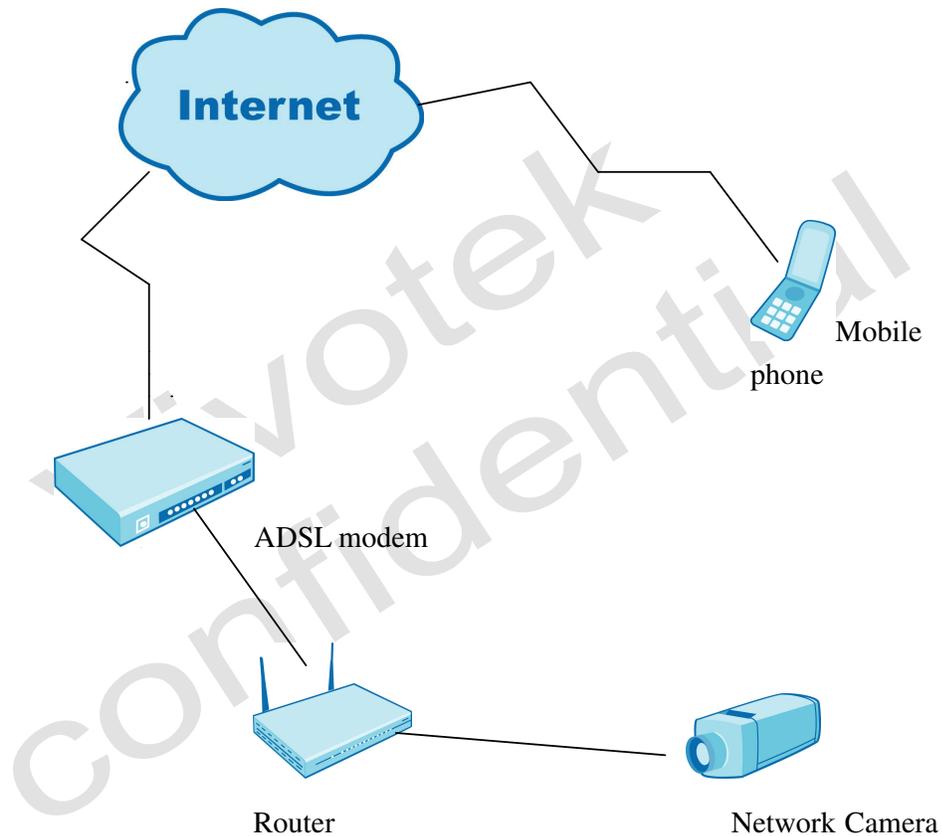

3. Open the Installation Wizard to get the camera's IP.
4. Set the fixed IP as one with ports opened by the router for the network camera (include the HTTP port, RTSP port, RTP port for video, RTCP port for video, RTP port for audio, and RTCP port for audio).

Configurations - Microsoft Internet Explorer

檔案(F) 編輯(E) 檢視(V) 我的最愛(A) 工具(T) 說明(H)

← 上一頁 → 搜索 我的最愛 媒體

網址(D) http://192.168.0.186/setup/config.html 移至 連結 >>

**VIVOTEK** Configuration

> Network

**Network type**

LAN

Get IP address automatically

Use fixed IP address

IP address

Subnet mask

Default router

Primary DNS

Secondary DNS

Enable UPnP presentation

Enable UPnP port forwarding

PPPoE

User name

Password

Confirm password

**HTTP**

HTTP port

**RTSP streaming**

Enable RTSP authentication


Access name

RTSP port

Version: 0201b

完成 國際網路

On the router side, open the 6 ports for the network camera.

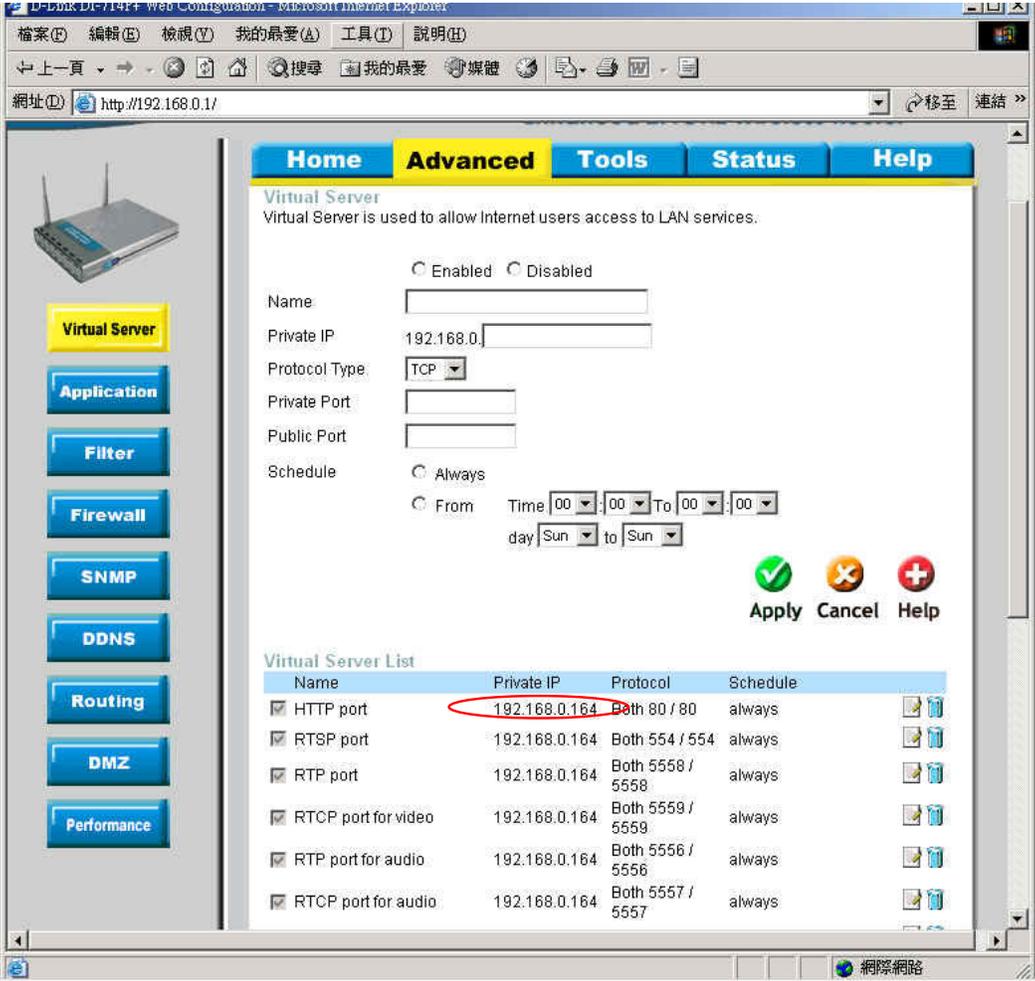

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

Enabled  Disabled

Name:

Private IP: 192.168.0.

Protocol Type:

Private Port:

Public Port:


Schedule:  Always

From Time:  :  To:  :   
day:  to

Apply Cancel Help

Virtual Server List

| Name  | Private IP    | Protocol         | Schedule |
|---|---------------|------------------|----------|
| <input checked="" type="checkbox"/> HTTP port           | 192.168.0.164 | Both 80 / 80     | always   |
| <input checked="" type="checkbox"/> RTSP port           | 192.168.0.164 | Both 554 / 554   | always   |
| <input checked="" type="checkbox"/> RTP port            | 192.168.0.164 | Both 5558 / 5558 | always   |
| <input checked="" type="checkbox"/> RTCP port for video | 192.168.0.164 | Both 5559 / 5559 | always   |
| <input checked="" type="checkbox"/> RTP port for audio  | 192.168.0.164 | Both 5556 / 5556 | always   |
| <input checked="" type="checkbox"/> RTCP port for audio | 192.168.0.164 | Both 5557 / 5557 | always   |

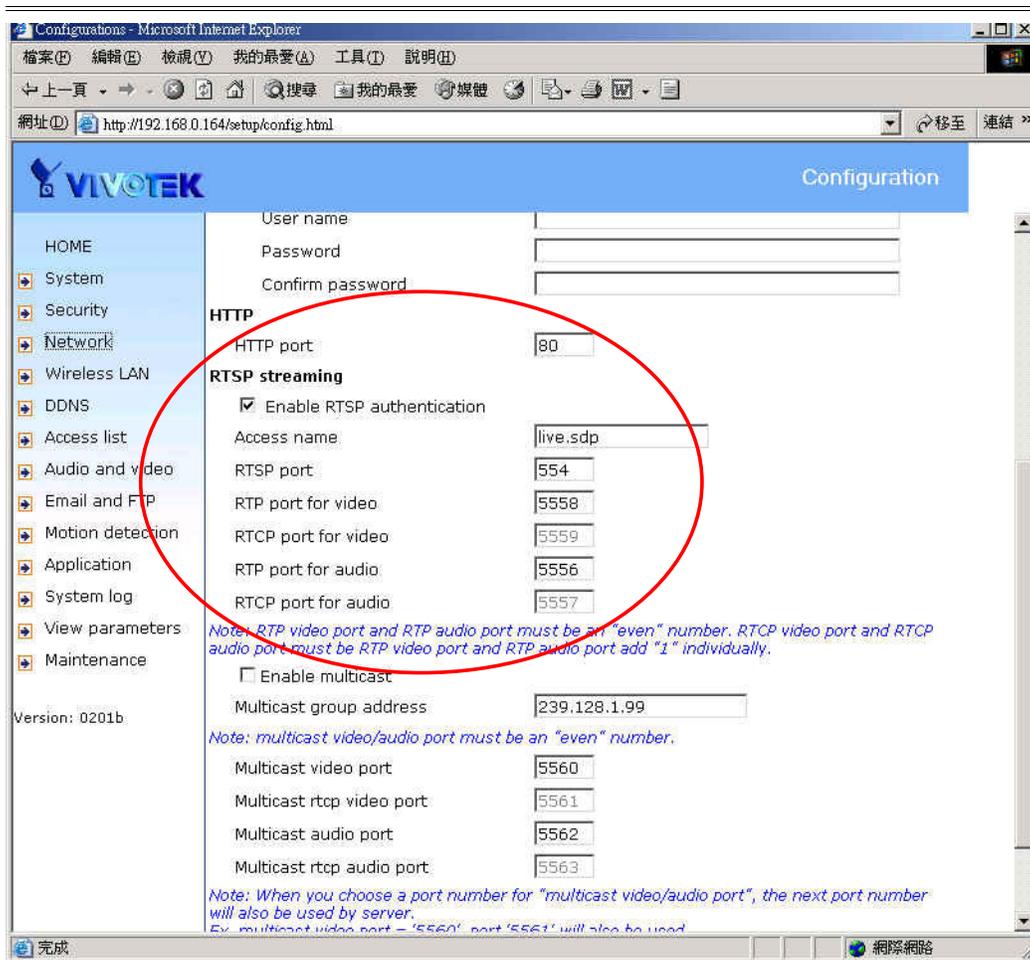

5. Input the URL “rtsp://<network camera IP address>/live.sdp” in RealPlayer or pvPlayer on the mobile phone. Now users can view the live video.

---

## Using a 2.5/3G mobile phone to connect to the Network Camera

Users need to ask the operator to enable the GPRS function and set up the Internet connections on the mobile phone before the mobile phone can access the Internet. This document takes Nokia 6630 for example to describe how to use the mobile phone to access the network camera.

### RealPlayer

1. Go to Menu\Media\RealPlayer.







Press "Options" button





2. Press Options\ Download\ Video clips\ Navigation options\ Go to web address.

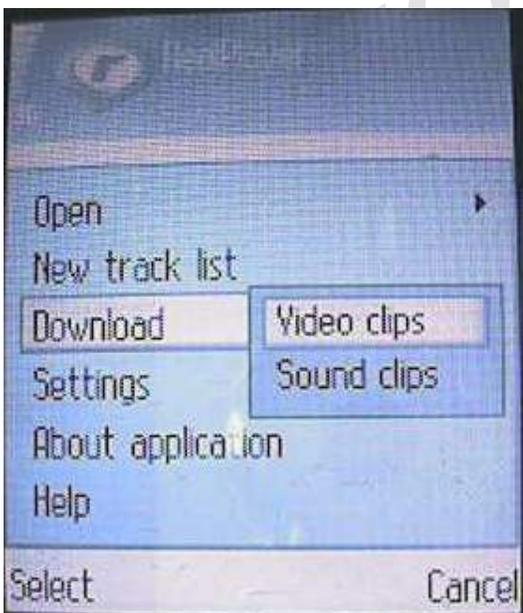


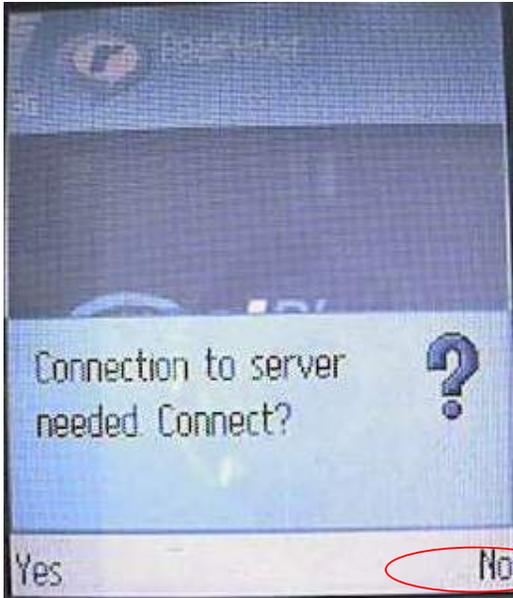


**It may link to another media server connected before, so suggest press "No"**




**Press "Options" button**

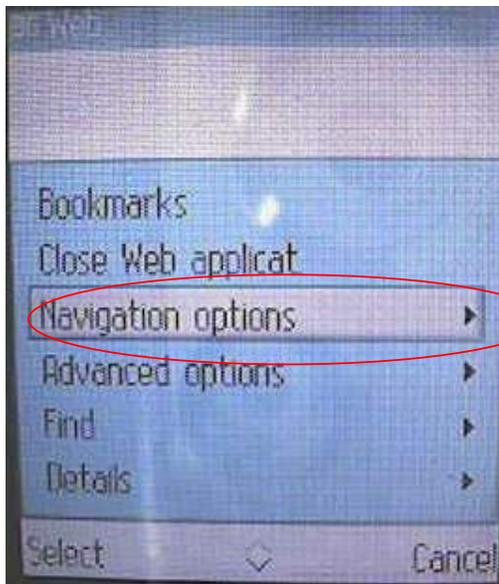

Press “Right” direction button of the keyboard on the mobile phone.

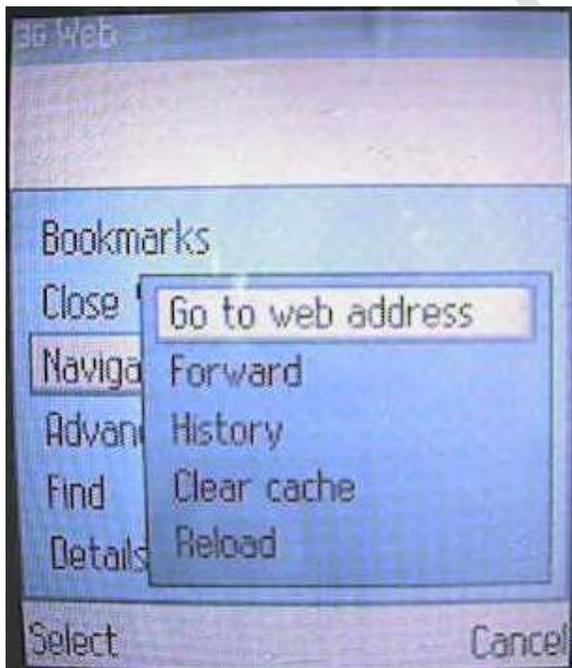

3. Input the URL (rtsp://<IP address>/ live.sdp).
4. Press “Go to”.

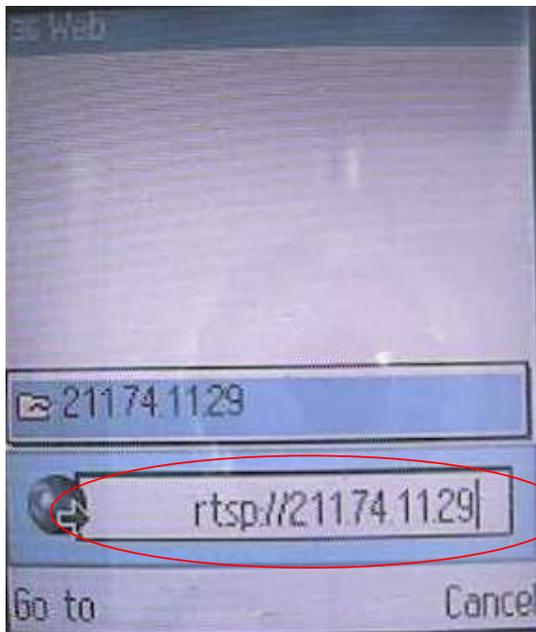

Input "rtsp://<IP address>/live.sdp"

### PvPlayer


1. pvPlayer only can be used when the network camera is installed with a public IP (Fixed IP or PPPoE)
2. Go to Menu\ pvPlayer.



3. Press Options\ Open location.



4. Input the URL (rtsp://<IP address>/live.sdp).

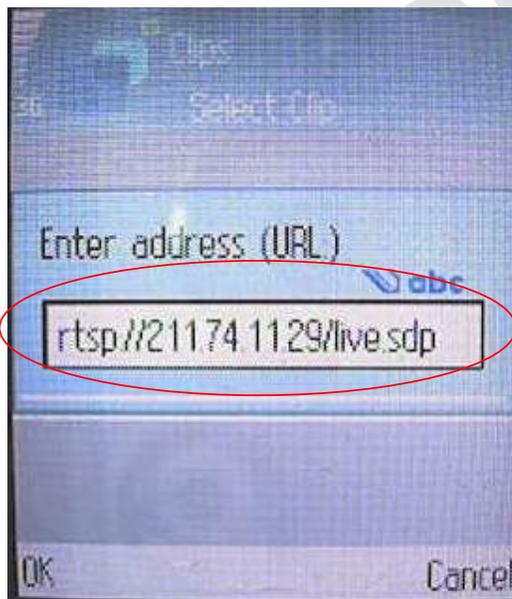

**Input "rtsp://<IPaddress>/live.sdp"**

5. Press "OK".

## Appendix


### Introduction to RTSP

The Real Time Streaming Protocol (RTSP) is a protocol for use in streaming media systems. It allows a client to access the server and remotely control the server to PLAY, PAUSE, and STOP. The RTSP is based on the TCP connection and uses RTP as the transport protocol for the actual audio/video data. In the 7000 series server, RTP will detect transmission protocols in the order of UDP → TCP → HTTP. For more information about RTSP, please refer to [www.rtsp.org](http://www.rtsp.org) or other related websites.


### Players you can use on a mobile phone

There are 5 ports for RTSP use: RTSP port (for control), RTP port for video, RTP port for audio, RTCP port for video, and RTCP port for audio.

Realplayer/pvplayer will send packets to open the 5 ports through the NAT to the server first, and then the server can send video/audio packets back along the same ports to Realplayer/pvplayer, so that users can view the live video directly.

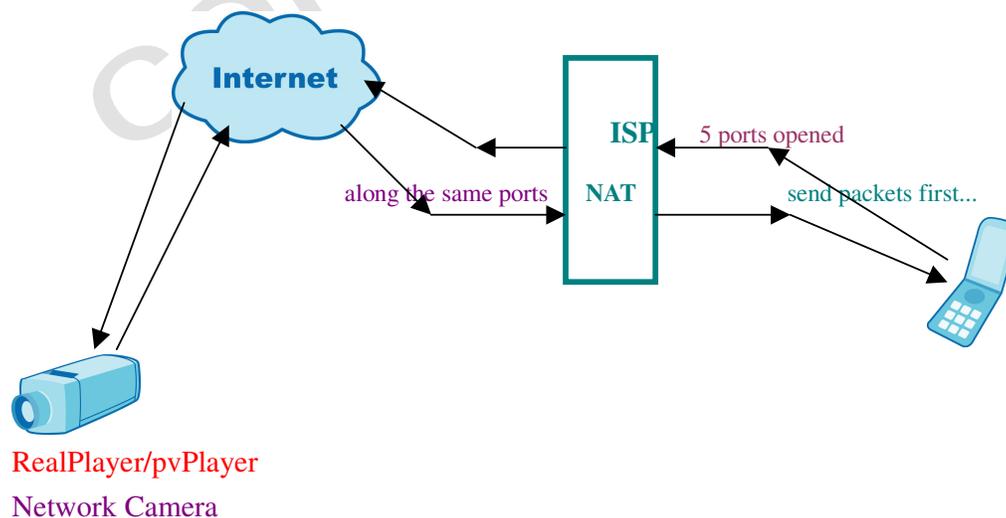

Other players created by cell phone manufacturers will only send the command through the RTSP port to the server and tell it what ports to send the audio/video packets through, but the operator cannot recognize the command to open the ports first and will not permit the packets from the server to open ports themselves to the players. Such players will need its manufacturer to contact the operator to set up a proxy for the RTSP use, so that the proxy can recognize the command and open the ports first to let the packets go through. Currently, Sony Ericsson players in Z520i, K700i, K750i, W800i, W900i are connectable in such method.

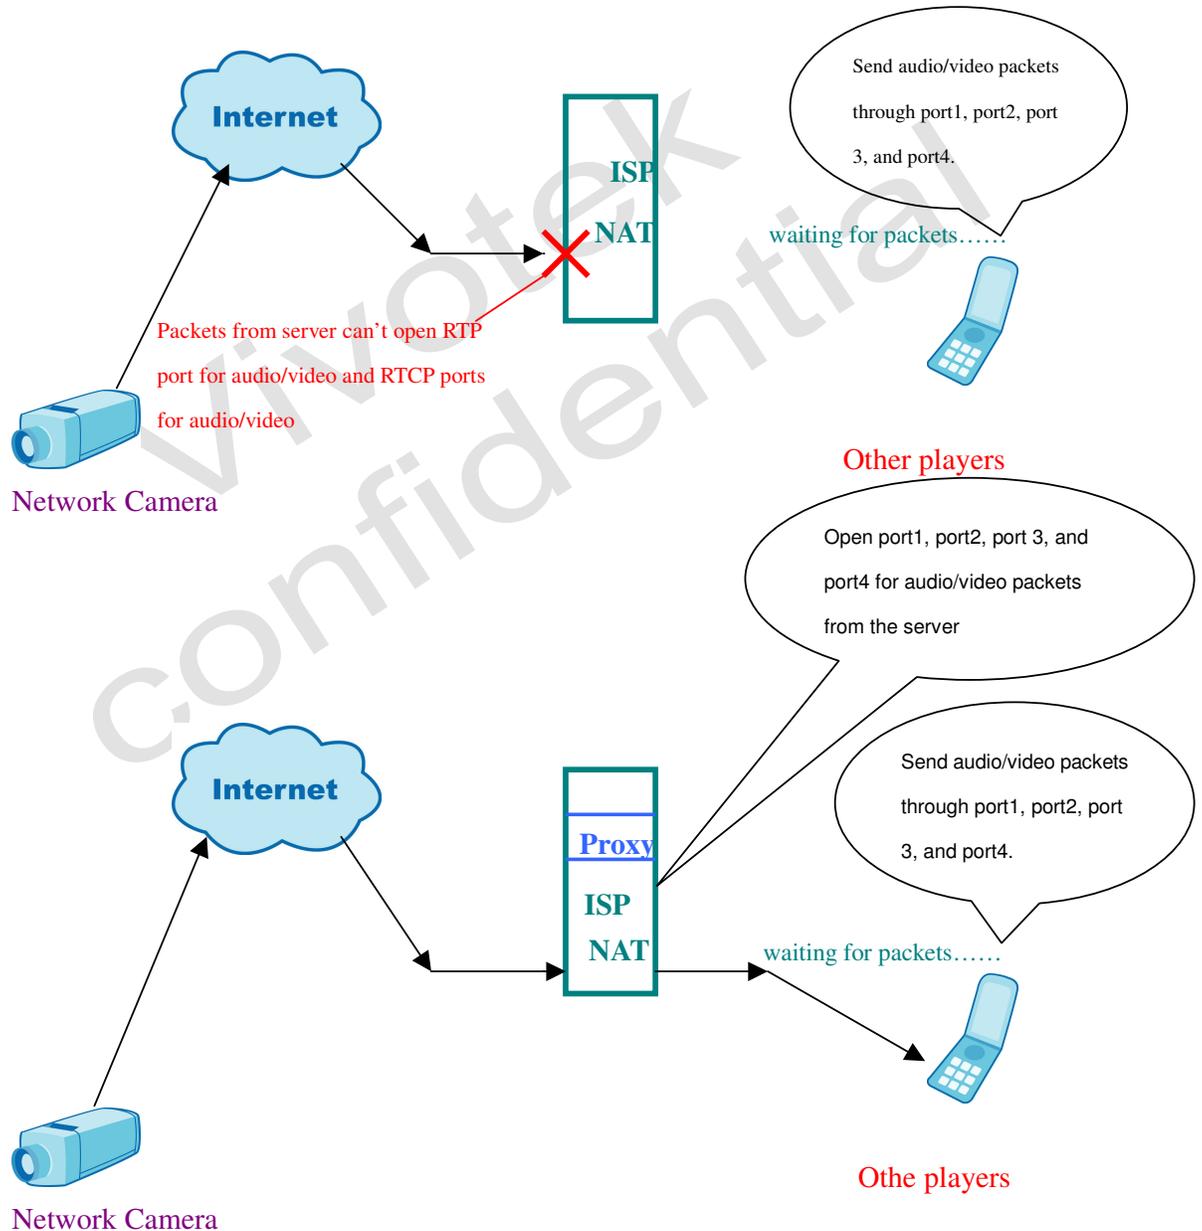

---

**Players in Mobile Phones**

Mobile phones with RealPlayer:

|       |  |
|-------|--|
| Moto  | A1200, E680, E1000, A780,              |
| Nokia | 6630, 760, 7710, 6670, N90, 3650, 7650 |

For more information about RealPlayer, please refer to  
<http://www.realnworks.com>.

Mobile phones that support 3gpp and mpeg-4 can use pvPlayer:

|               |  |
|---------------|--|
| Moto          | A835, A920, A1000,   |
| Nokia         | N80, N92, N71, 3250, E50, E60, N70,<br>6630,6125,7650,7610,7710,6670, 6600, 6230, 7600, 3230 |
| Sony Ericsson | P800, P900, Z1010, P910  |

For more information about pvPlayer, please refer to <http://www.packetvideo.com>.