

Installation & Operation

LG Programmable Thermostat

- Please read this Installation & Operation manual completely before installing the product.
- Installation work must be performed in accordance with the national wiring standards and local code by authorized personnel only.
- Please retain this manual for future reference after reading it thoroughly.

Type : LG Programmable Thermostat

Models : PREMTB10U



P/NO : MFL62129209

www.lg.com

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number : _____

Serial number : _____

You can find them on a label on the side of each unit.

Dealer's name : _____

Date of purchase : _____

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product.

WARNING

It can result in serious injury or death when the directions are ignored.

CAUTION

It can result in minor injury or product damage when the directions are ignored.

WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

Installation

- For electrical work, contact the dealer, seller, a qualified electrician, or an authorized service Center. Do not disassemble or repair the product. There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- Request to the service center or installation specialty store when reinstalling the installed product. There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- Do not disassemble, fix, and modify products randomly. There is risk of fire, electric shock, explosion, equipment malfunction, or injury.
- The product shall be installed according to the national standards and local code.
- Apply totally enclosed noncombustible conduit in case of local building code requiring plenum.

In-use

- Do not place flammable stuffs close to the product. There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Do not allow water to run into the product. There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Do not give shock to the product. There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Request to the dealer, seller, a qualified electrician, or an authorized Service Center when the product becomes wet. There is risk of fire, electric shock, explosion, equipment malfunction, or injury.

4 IMPORTANT SAFETY INSTRUCTIONS

- Do not give shock using sharp and pointed objects. There is risk of fire, electric shock, explosion, equipment malfunction or injury.
- Do not touch or pull the lead wire with wet hands. There is risk of product breakdown or electric shock.



CAUTION

In-use

- Do not clean using powerful detergents like solvent but use soft cloths. There is risk of fire, electric shock, explosion, equipment malfunction or deformation.
- Do not press the screen using powerful pressure. There is risk of product break-down or malfunction.

TABLE OF CONTENTS

2 TIPS FOR SAVING ENERGY

3 IMPORTANT SAFETY INSTRUCTIONS

6 PART DESCRIPTION

11 OPERATION INSTRUCTION

11	Standard Operation - Cooling Mode
12	Standard Operation - Power Cooling
13	Standard Operation - Heating Mode
14	Standard Operation - Dehumidification Mode
15	Standard Operation - Fan Mode
16	Standard Operation - Auto Operation Mode
17	Standard Operation - Timed Override
18	Standard Operation - Set back
19	Standard Operation - Temperature Setting
20	Standard Operation - Airflow Setting
21	Sub Function - Plasma Purification
22	Sub Function - Energy-Saving Cooling Operation
23	Sub Function - Automatic Drying
24	Sub Function - Electric Heater
25	Sub Function - Humidifier
26	Sub Function - Fan Auto
27	Function Setting - Vane Angle Control
28	Function Setting - Elevation Grill
29	Function Setting - Child Lock
30	Function Setting - Minimum Difference between heating and cooling Set points
31	Function setting - Changing Current Time
33	Function Setting - Override set time
34	Function Setting - Set back temperature
35	Function Setting - Filter Sign Clear
36	Programming - Simple Reservation
37	Programming - Sleep Reservation
38	Programming - Weekly Reservation
45	Programming - Weekly Reservation Schedule Copy/Paste
46	Programming - Holiday Reservation
47	Programming - Delete All Reservation
48	Different mode drive
48	Different mode drive

49	Ventilation Product - Interlocked Air conditioner and Ventilator
50	Ventilation Product - Interlocked operation with general Ventilator
51	Ventilation Product Function Settings
51	Ventilation Product - Ventilator single operation
52	Ventilation Product Reservations Settings
53	Troubleshooting Mode Self Diagnosis
54	Checkups before reporting breakdown

55 INSTALLATION METHOD

58	Thermostat installation
----	-------------------------


59 GROUP CONTROL

60 INSTALLATION INSTRUCTION

60	Installer Setting - How to enter installer setting mode
63	Installer Setting - Test Run Mode
64	Installer Setting - Setting Address of Central Control
65	Installer Setting - E.S.P. Function
67	Installer Setting - Thermistor
68	Installer Setting - Ceiling Height Selection
69	Installer Setting - Static Pressure Setting
70	Installer Setting - Override Master/Slave Setting
71	Installer Setting - Dry Contact Mode Setting
72	Installer Setting - Fahrenheit / Celsius Switching
73	Installer Setting - Emergency Heater Setting
75	Installer Setting - Option Function Setting
76	Installer Setting - Setting temperature range

PART DESCRIPTION

Name and Function of Thermostat

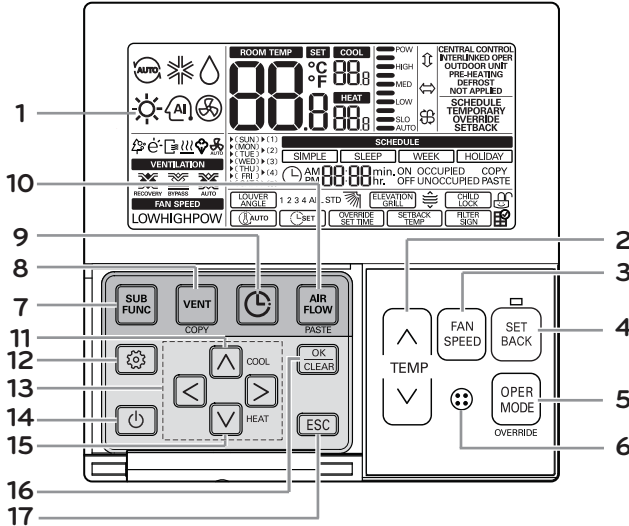

- | | | | |
|---|--|----|------------------------------|
| 1 | Operation indication screen | 10 | Air flow button |
| 2 | Set temperature button | 11 | Cooling desired temperature |
| 3 | Fan Speed button | 12 | Function setting button |
| 4 | Set back button | 13 | Up, Down, Left, Right button |
| 5 | Operation mode selection button | 14 | On/Off button |
| 6 | Wireless Thermostat receiver
- Some product don't receive the wireless signals. | 15 | Heating desired temperature |
| 7 | Sub function button | 16 | Setting/Cancel button |
| 8 | Ventilation button | 17 | Exit button |
| 9 | Reservation button | | |

* Some functions may not be operated and displayed depending on the product type.


Accessory



Connection Cable
(1EA, 32ft (10m))




Screw
(4 EA)







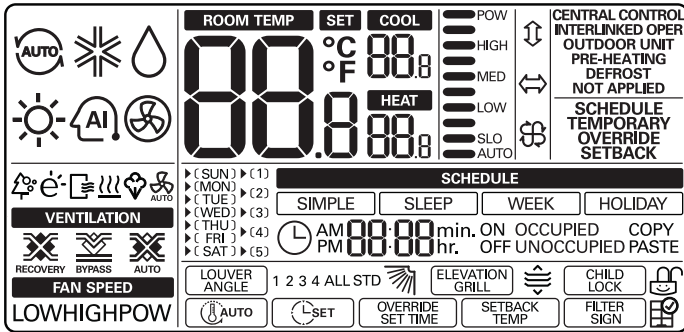


















Installation & Operation
Manual

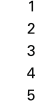













Icon description



Function	Icon	Description
Operation mode		Auto mode - Product is change operating mode cooling or heating automatically.
		Cooling mode - Product is running cooling mode.
		Dehumidification Mode - Product is running dehumidifying mode.
		Heating mode - Product is running heating mode.
		Fan only operating mode - Product is running just fan operating.
Sub function		Plasma Purification - Product is operating Plasma Purification filter.
		Energy-Saving Cooling Operation - Product is running cooling mode in limited set temperature for energy saving.
		Automatic Drying - Indoor unit is operating automatic drying.
		Electric Heater - Product is operating electric heater in heating mode.
		Humidifier - Product is operating Humidifier.
		Fan Auto function - Indoor unit enable fan auto function. - Indoor unit doesn't operate fan when compressor off


Function	Icon	Description
Temperature		Current temperature - Display current room temperature.
		Cooling set point temperature - temperature set point for cooling operation.
		Heating set point temperature - temperature set point for heating operation.
Fan Speed		Display current wind strength. POW : wind strength - power HIGH : wind strength - high MED : wind strength - medium LOW : wind strength - low SLO : wind strength - weak AUTO : wind strength - automatic
Air Flow		Louver up-down swing - Indoor unit louver operate up-down swing.
		Louver left-right swing - Indoor unit louver operate left-right swing.
		Louver Swirl swing - Indoor unit louver operate paired opened cross swing.
Controller mode	SCHEDULE	Schedule operation mode(Simple / sleep/ week / holiday) - Controller operate in accordance with schedule reservation
	TEMPORARY	Temporary mode - Setting mode change temporarily
	OVERRIDE	Schedule override mode - Occupied/unoccupied state change
	SETBACK	Set back operation mode - Controller operate set back operation.
Product state monitoring	CENTRAL CONTROL	Command received from central controller or outdoor unit
	INTERLINKED OPER	Slave indoor unit on a heat pump system. Prevents mode change not compatible with current outdoor unit mode.
	OUTDOOR UNIT	Outdoor unit running
	PRE-HEATING	Indoor unit pre-heating operation running
	DEFROST	Defrost operation running
	NOT APPLIED	Function not applied






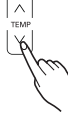
Function	Icon	Description
Schedule Reservation		Simple reservation in operation
		Sleep reservation in operation
		weekly reservation in operation
		Holiday reservation in operation
Schedule Reservation & Time		Day of week SUN: Sunday / MON: Monday / TUE: Tuesday WED: Wednesday / THU: Thursday / FRI: Friday SAT: Saturday
		The number of weekly reservation event
		Time - AM/PM
		Time – value of hour / minute
		min.: minute / hr. : hour
		Turn on/off by schedule reservation
		Display weekly reservation occupied / unoccupied state
		Weekly reservation schedule data copy / paste
Function setting		Louver angle setting step
		1,2,3,4,ALL : Louver number / STD: Standard angle set
		Louver angle state
		Elevation grill setting step

Function	Icon	Description
Function setting		Grill state  : up /  : stop /  : down
		Child lock setting step
		 : Child lock set /  : Child lock cancel
		Minimum difference value setting step between cooling / heating set points
		Current time setting step
		Schedule override timer setting step
		Default Set back cooling / heating temperature set points setting step
		Filter sign clear setting step
		Indoor unit air filter cleaning Alarm

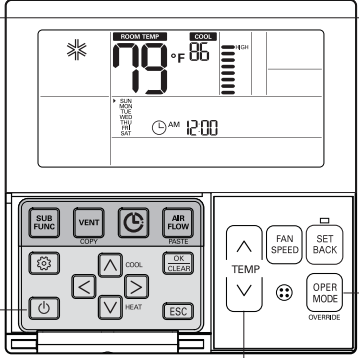OPERATION INSTRUCTION

Standard Operation - Cooling Mode



- 1 Press  button to turn on the indoor. 
- 2 Press  button to select Cooling operation mode. 
- 3 Adjust the desired temperature by pressing  buttons. 

When setting the desired temperature higher than room temperature, only ventilation wind is blow out instead of cooling wind.

- * Setting temperature range :
- Option 1. 64~86 °F (18~30 °C) (default setting)
 - Option 2. 64~99 °F (18~37.5 °C)


What is the three-minute delay function?

The function to protect the compressor delays the output of cool air when operating instantly after interrupting the cooling mode .

Cooling mode restarts after 3 minutes when the compressor starts to operate.

- 87~99 °F (30.5~37.5 °C) When setting the desired temperature, the indoor unit shuts off on condition that the indoor temperature is lower than the desired temperature.
- When Using a central controller, a displayed value of the desired temperature may differ depending on a function of the product.


Standard Operation - Power Cooling

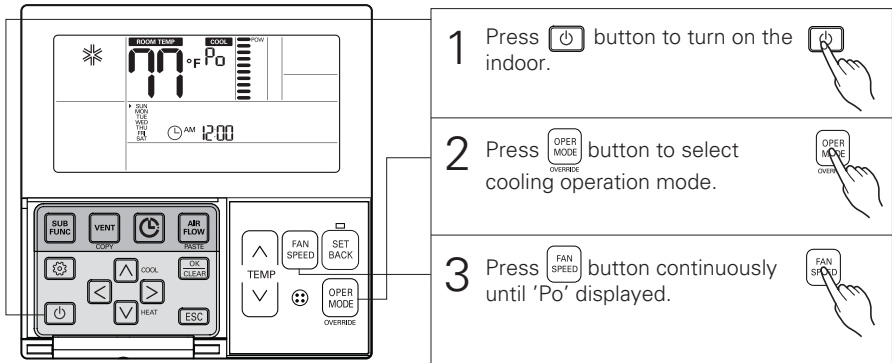




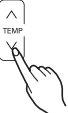


What is Power Cooling?

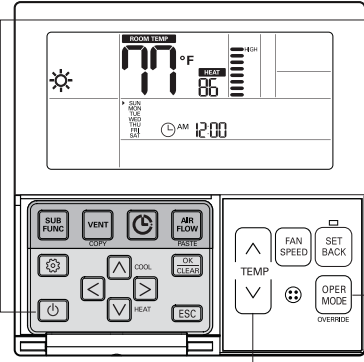- Desired temperature: Po (actually 64 °F (18 °C))
 - Wind flow: power wind
 - Wind direction: fix to air-cooling position
- It makes room temperature drop fast by running
- * Some products do not have power air-cooling function.

Standard Operation - Heating Mode




- 1 Press  button to turn on the indoor. 
- 2 Press  button to select Heating mode. 
- 3 Adjust the desired temperature by pressing  buttons. 
When setting the desired temperature lower than room temperature, there is only ventilation wind.

- * Setting temperature range :
- Option 1. 60~86 °F (16~30 °C) (default setting)
 - Option 2. 40~86 °F (4~30 °C)


- Heating drive only operates on cooling and heating models.
- Heating doesn't operate on cooling only models.
- 40~59 °F (4~15.5 °C) When setting the desired temperature, the indoor unit shuts off on condition that the indoor temperature is higher than the desired temperature.
- When using a central controller, a displayed value of the desired temperature may differ depending on a function of the product.

Standard Operation - Dehumidification Mode

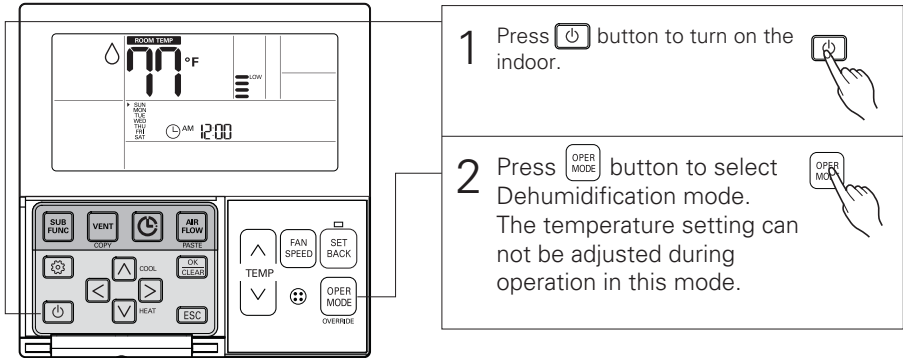


- In rainy season or high humidity climate, it is possible to operate simultaneously dehumidifier and cooling mode to remove humidity effectively.
- The menu item of fan speed may be unavailable depending on the product.

Standard Operation - Fan Mode

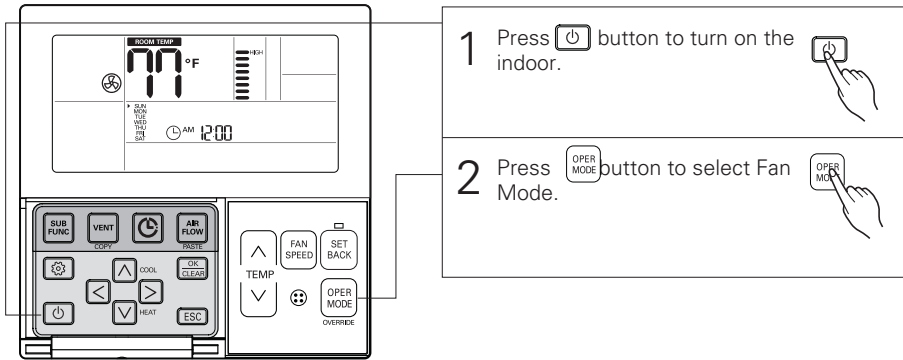





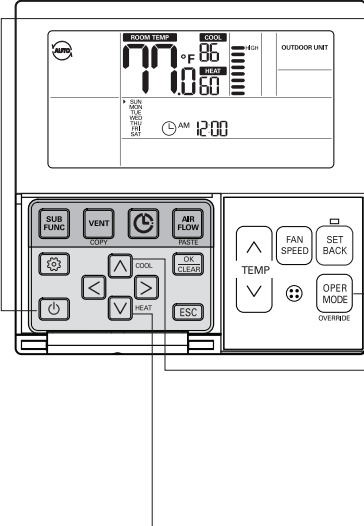

- Ventilation drive does not release cool wind but general fan
- Because it releases the wind that has no temperature difference from the room, it functions to circulate the inside air.
- The menu item of fan speed may be unavailable depending on the product.


Standard Operation - Auto Operation Mode




The diagram shows the control panel with buttons for SUB FUNG, VENT, AIR FLOW, COOL, HEAT, FAN SPEED, SET BACK, TEMP, OPER MODE, and ESC. The display screen shows ROOM TEMP, COOL/HEAT set points, and a timer.

- 1 Press  button to turn on the indoor.
- 2 Press  button to select Auto operation mode.
- 3 Press the button  to select Cooling set point, and Cooling set point can be controlled by pressing the button .
- 4 Press the button  to select Heating set point, and Heating set point can be controlled by pressing the button .

Cooling operation state

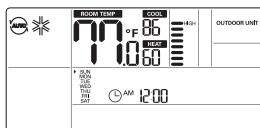

Heating operation state

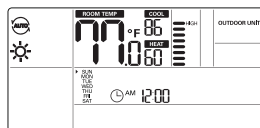


- Auto heating drive only operates on cooling and heating models.
- Auto heating doesn't operate on cooling only models.
- 87~99 °F (30.5~37.5 °C) When setting the desired cooling temperature, the indoor unit shuts off on condition that the indoor temperature is lower than the desired temperature.
- 40~59 °F (4~15.5 °C) When setting the desired heating temperature, the indoor unit shuts off on condition that the indoor temperature is higher than the desired temperature.
- When using a central controller, a displayed value of the desired temperature may differ depending on a function of the product.

Standard Operation - Timed Override


Timed override operation changes occupied / unoccupied schedule for override time temporarily.

- It revert to last occupied schedule in unoccupied override.
- It revert to last unoccupied schedule in occupied override.
- You can set 'Override time' by 'Function setting – Override set time'

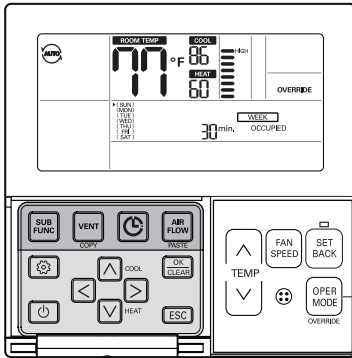

Operate Timed override

- 1 Press **OPER MODE** button for 3 seconds, you can operate timed override.

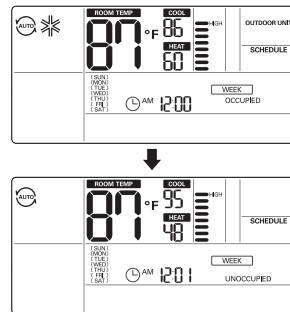

Cancel Timed override

- Press **OPER MODE** button for 3 seconds in Timed override mode, you can cancel Timed override.
- it revert to last weekly reservation schedule.

- It revert to default operation setting if Thermostat doesn't have last occupied schedule in unoccupied override.
 - default operation setting: Auto operation mode / set temperature : 86 °F(30 °C)(cool) , 60 °F(16 °C)(heat)
- It revert to set back operation setting if Thermostat doesn't have last unoccupied schedule in occupied override.
 - set back operation setting : Auto operation mode / set back setting temperature: function setting – set back temperature.
- It can be canceled ,if Thermostat receive command from other controller.
- When changes occur in the setting by a daytime reservation operation, the schedule override mode gets deactivated.


Standard Operation - Set back

Set back operation revert to last unoccupied schedule until Set back operation is canceled.


- It change to 'function setting - set back setting' if Thermostat doesn't have last unoccupied schedule .

- Set back operation setting :


Auto operation mode / Set back setting temperature: Function setting – Set back temperature

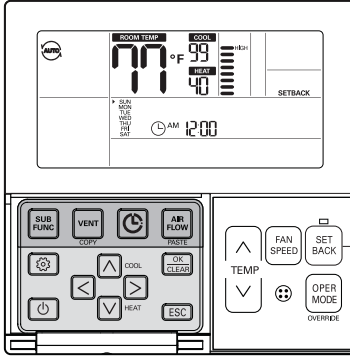

Operate set back mode

Press  button, you can operate set back mode.

Cancel set back mode


Press  button in set back mode, you will cancel set back operation.
- it revert to last weekly reservation schedule.





- You can't change setting in set back mode except cancel the set back mode.
- 'HL' lock is displayed on the window.

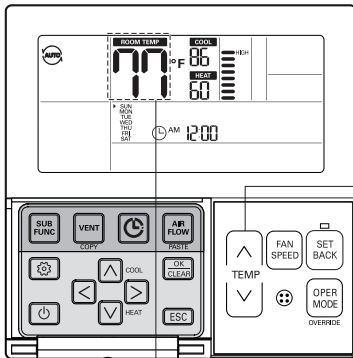

- It can be canceled ,if Thermostat receive command from other controller.
- When commands are received by other controllers, the set back mode gets deactivated.
- When the set back mode is deactivated, the following takes place.
 - The set points shall go to the current occupied set points.
 - If there are no current occupied set points, the set point shall go to the last occupied set points in the weekly schedule.
 - If there are no occupied set points in the schedule, the set points will go to the default if the values have not been adjusted.
 - Default Occupied setting will be auto. (heat 60 °F(16 °C), cool 86 °F(30 °C))

Standard Operation – Temperature Setting



- 1 You can simply adjust the desired temperature.
- Press the   buttons to adjust the desired temperature. In Auto mode, both setpoints will adjust simultaneously. To adjust cooling and heating setpoints individually when in Auto mode, first press the cool or heat setpoint selection button.
-  : Increase Temp. per one time pressing
-  : Decrease Temp. per one time pressing

- Set temp: Indicate the temperature that user want to set.

Cooling operation:

- The cooling mode doesn't work if desired temperature is higher than room temperature. Please lower the desired temperature.

Heating operation:

- The heating mode doesn't work if desired temperature is lower than room temperature. Please increase the desired temperature.

Room Temperature Check the room

When Thermostat is running room temperature will be displayed on window.

Room temperature display range


Fahrenheit: 33~99°F
 - below 32°F: display 'LO'
 - over 100°F: display 'HI'

Celsius: 1~39°C
 - below 0°C: display 'LO'
 - over 40°C: display 'HI'

- Because of location of Temperature sensing, the real room temperature and the this displayed value can be different.

- For air-cooling set point, from 64~86 °F (16~30 °C), and for heating set point, from 60~86 °F (16~30 °C), you can select desired temperature.
 - * A temperature area of extended range can be selected through desired temperature range setting option.
 - Cooling : 64~99 °F (16~37.5 °C) / Heating : 40~86 °F (4~30 °C)
- 10°F is proper for the difference between room and outside temperature.
 - When combine with other controllers, temperature gap expressed by criterion of each controllers can be generated.
- For indoor temperature below 50 °F (10 °C), the value perceived by the Thermostat(with cable) is displayed.

Standard Operation - Airflow Setting

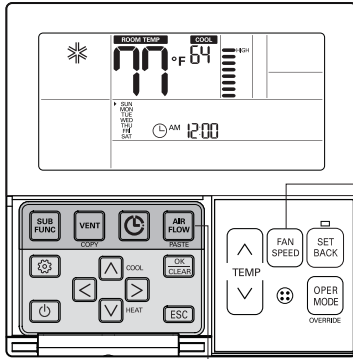



Fan speed : You can simply adjust desired fan speed.

- 1 Please setup desired fan speed by fan speed button.
 - Every time you press fan speed, you can select the fan speed in order of 'SLO → LOW → MED → HIGH → POW → AUTO'.
 - The menu item may be unavailable according to product function.
 - Please refer to product manual for product's detailed function.






Wind direction : You can simply adjust desired wind direction.

- 2 Please set desired wind direction by pressing  button. You can select wind direction of (Up/Down and Left/Right → Left/Right → Up/Down → Clear → Swirl → Clear) by pressing  button. The menu item may be unavailable according to product function. Please refer to product manual for product's detailed function.




<Airflow Setting Table>

Symbol	Description
	Left-Right : Vanes move from left to right automatically and continuously
	Up-Down : Vanes move from up to down automatically and continuously
	Swirl : Paired Vanes oscillate in 1 minute interval



* Some functions may not be operated and displayed depending on the product type.

Sub Function - Plasma Purification

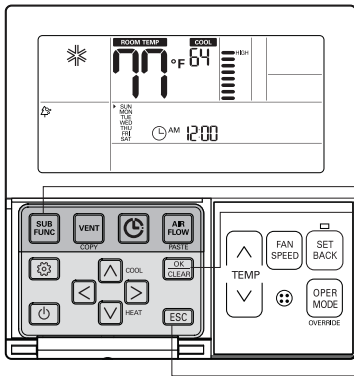
Only products with Plasma Purification function can use this.




The method to setup cleaning air

1 Repeat pressing  button until  icon flash.



2 Operate or cancel Plasma Purification function by pressing  button.



3 After setting, press  button to exit.



* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.


- Cleaning air function is additional function and it might not be available on all products.
- Cleaning air function is possible only when product is running.
- If air cleaning is needed to run independently, please use fan mode and enable air cleaning.




Sub Function - Energy-Saving Cooling Operation

Energy-Saving Cooling Operation function is the function to improve user's comfortableness and power saving capacity by adjusting desired temperature while running air-cooling.


When operating cooling, setting the power saving function is available.

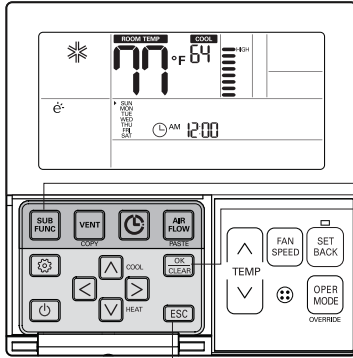※ Except for cooling operated by the auto mode.






1 Repeatedly pressing  button  until  icon flash.



2 Operate or cancel Energy-Saving function by pressing  button.



(To cancel power saving function, you move to power saving menu by pressing  button, and then if pressing  button, power saving icon disappears and the function is cancelled.)

3 Press  button to exit.



※ After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.


※ When exiting without pressing set button, the manipulated value is not reflected.

- Power saving function is possible to setup only when in cooling mode.
- Power saving function might not be available on all products.

Sub Function - Automatic Drying

It is the function that dries the inside of an indoor unit when the product is OFF, and allows for the Fan to operate for certain time in order to remove mold and moisture.

This function is only available on some products.

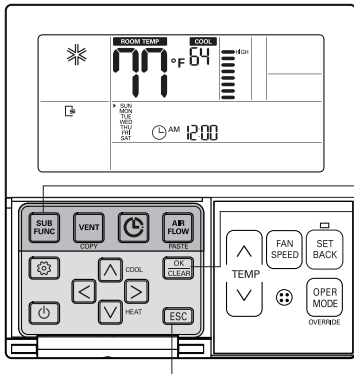

The method to setup Automatic Drying

- 1 Repeat pressing **SUB FUNC** button until icon flash.



- 2 Operate or cancel Automatic Drying function by pressing **OK/ENTER** button.



- 3 After setting, press **ESC** button to exit.




- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.


- Automatic dry function might not be available on all products.
- The Automatic drying setting can only be checked when enabled by field setting.

Sub Function - Electric Heater


It is a function to strengthen the heating ability by turning on the electric heater during the heating operation.

It can only be set during heating operation.

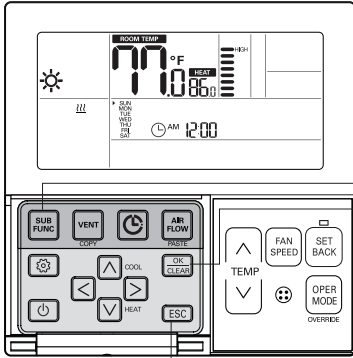

1 Repeatedly pressing **SUB FUNC** button until  icon flash.



2 Turn on/off electric heater by pressing **OK/CLEAR** button (the  icon will be displayed in case of setting option and disappear in reverse case .)




3 Press **ESC** button to exit.

* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.



- Heater function is additional function and it might not be available on all products.
- The indoor unit product with Auxiliary Heater function set automatically displays  during the heating operation.


• When using non-heat recovery outdoor unit, emergency heater can be turned on for simultaneous heating and cooling. Indoor unit with the emergency heater must be turned OFF for simultaneous cooling and heating.

* Heater function is additional function and it only operates in selected models.

• Emergency heater can be turned on while in error in case of emergency. Electric heater icon is displayed on LCD display window with error code when emergency heater is on while in error.


* Exception case : Error code 1,3,9,10


* If the previous mode of the Indoor unit is COOL, DRY or FAN ONLY mode, heater must be turned on manually.




Sub Function - Humidifier

Only products with humidifying function can use this.

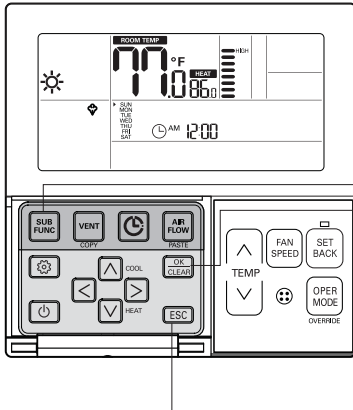

1 Repeatedly pressing **SUB FUNK** button until  icon flash.



2 Turn on/off humidifier by pressing **OK/ENTER** button (The  icon will be displayed in case of setting option and disappear in reverse case.)



3 Press **ESC** button to exit.

* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.

* When exiting without pressing set button, the manipulated value is not reflected.




- Humidifier function is additional function and it might not be available on all products.





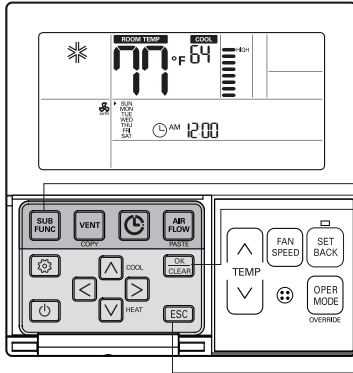


Sub Function - Fan Auto

It is the function that operate fan when outdoor unit is running.

Only products with fan auto function can use this.




The method to setup Fan auto function











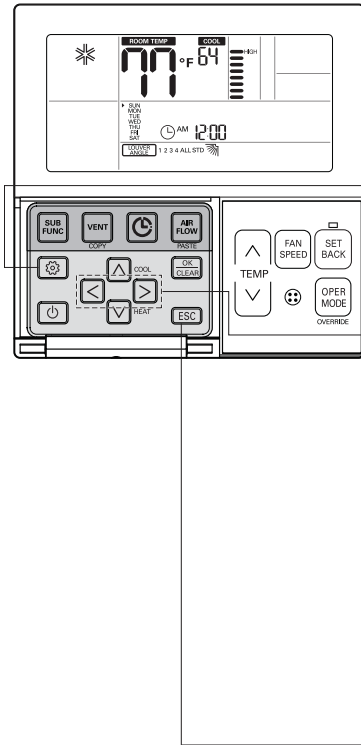



- 1 Repeat pressing  button until  icon flash. 
- 2 Operate or cancel Fan Auto function by pressing  button. 
- 3 After setting, press  button to exit. 

- * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
- * When exiting without pressing set button, the manipulated value is not reflected.

Function Setting - Vane Angle Control

This function is to adjust airflow angle.




- 1 Repeat pressing  button until  icon flash. 
- 2 Press   button to select active vane : 1 / 2 / 3 / 4 / All / Standard
Select Vane number using   buttons.
* Vane number : No. 1, 2, 3, 4, all, or standard
- Selected vane is in operation.
- Please verify the operating vane.
- To set the angle of all the vanes, select 'all'.
- To set as the factory default settings, select 'standard'.
- 3 Select wind angle using   button, and press  button.
- The boundary of wind angle settings can be changed to 5 levels or 6 levels according to the product.
- When selecting 'standard' for Vane number, the wind angle does not move.
- 4 Set the wind angles for the remaining vanes as the same as above.
* There are products with vanes with no. 1 and no. 2 only according to the product types.
- 5 Press  button to complete and active the setting process. (Airflow direction function will be released whenever setting vane angle) 
- 6 Press  button to exit. 
* After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.

- While adjusting the vane angle, a command from central controller, wireless remote controller or dry contact, etc shall not be reflected in the system for 1 minute.

Function Setting - Elevation Grill

This function is to move the indoor filter up/down for cleaning filter.

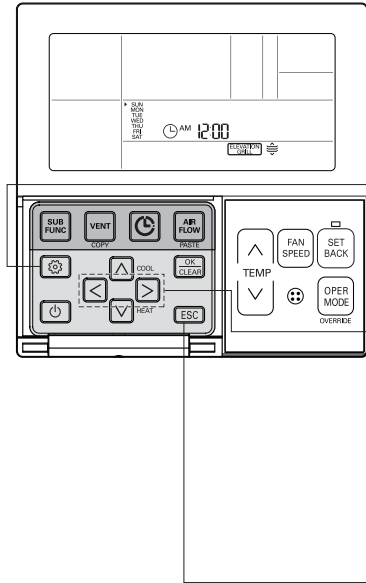









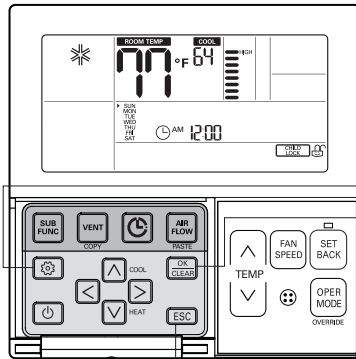



- 1 Press button
Repeat pressing button until icon flash.
- 2 Move to descent using button and press button will display descent icon and the up/down grill will descend.
- 3 When up/down grill descends to the desired position, move to stop icon using button and press button to stop up/down grill.
- 4 When filter cleaning is finished, fix the filter to the up/down grill, move to ascent icon using button, and press button to ascend up/down grill.
- 5 Press button to exit.
* After setup, it automatically gets out of setup mode if there is no button input for 80 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.

- Elevation grill function only operates in the indoor unit with the elevation grill.
- Elevation grill function only operates at drive off.

Function Setting - Child Lock


It is the function to use preventing children or others from careless using.










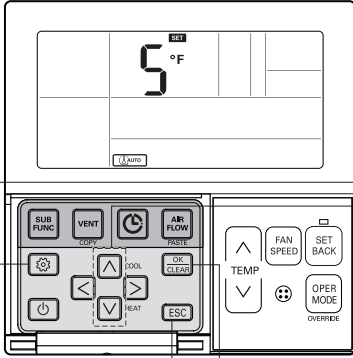




- 1 Press  button repeatedly until the  is flashing. 
- 2 If moving to 'setup' icon area by using   button, 'setup' icon blinks, and child lock function is setup if pressing  button at that time. 
- 3 When cancelling lock function, if moving to 'cancel' icon by pressing   button and then, pressing  button, child lock function is cancelled.
- 4 Press  button to exit.
 - * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.

Function Setting - Minimum Difference between heating and cooling Set points

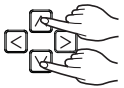It is function to setup minimum difference between heating and cooling set points.




- 1 Repeat pressing  button until  icon flash. 
- 2 Press   button to change.
* minimum difference value : 0~10°F(0~5°C)
 
- 3 Press  button to complete and active the setting process.
 
- 4 Press  button to exit or system will automatically release without any input after 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected. 

- When changing the desired cooling temperature, in case of that the difference with the heating temperature becomes lesser than its minimal value of difference, it lowers the desired heating temperature automatically.
- When changing the desired heating temperature, in case of that the difference with the heating temperature becomes lesser than its minimal value of difference, it raises the desired cooling temperature automatically.

* If power supplying is stopped for more than 50 hours, please check the current time and correct it.

Function setting - Changing Current Time

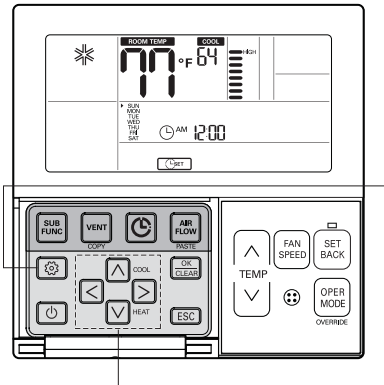


- 1 Please press function setup button. If pressing function setup button repeatedly, it moves to time setup menu. 'Time setup' icon is indicated at that time and date blinks at current time indication area.



Ex) Changing Current Time as 'Monday / AM 10:20'.


- 2 Press key to adjust the current day.

SUN
MON
TUE
WED
THU
FRI
SAT




- 3 Press key to move to AM/ PM setting mode (the 'AM/ PM segment will flash).

AM 12:00




- 4 Setting AM/ PM value by pressing button.



- 5 Press button to move to 'Hour' setting mode. (the 'Hour' segment will flash)


AM 12:00



- 6 Setting Hour value by pressing button.


AM 10:00



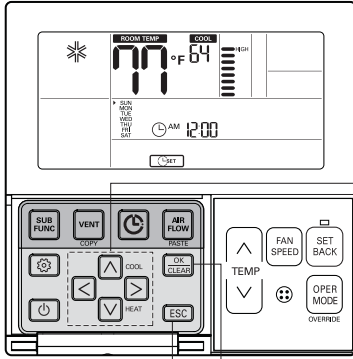


7 Press button to move to 'Minute' setting mode. (the 'Minute' segment will flash)

AM 10:00



8 Setting Minute value by pressing button.

AM 10:20



9 Press button to finish.

AM 10:20




10 In the process, press button to release and exit from setting mode.
(In case of exit with incomplete information, it will return to the previous setting)




* When exiting without pressing set button, the manipulated value is not reflected.




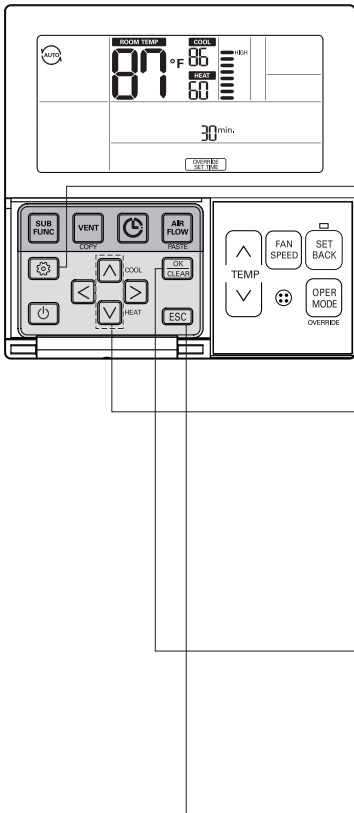

Function Setting - Override set time

It is the function to set schedule override operation time.



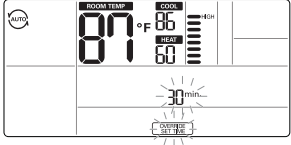

- 1 Use  button to select Override time setting. If you press  button repeatedly, you will be able to select Override time setting with  icon, and 30 min. icon will be blinking.




- 2 Using   button, you can set Override time from 30 to 240 minutes with interval of 30 minutes.


 - Default setting value: 60 min

30 min. → 240 min.


- 3 Press  button to complete and active the setting process.


240 min.


- 4 Press  button to exit.


 - * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.

Function Setting - Set back temperature



It is the function to set default temperature setting points for set back operation. It is used when controller doesn't have last unoccupied schedule.

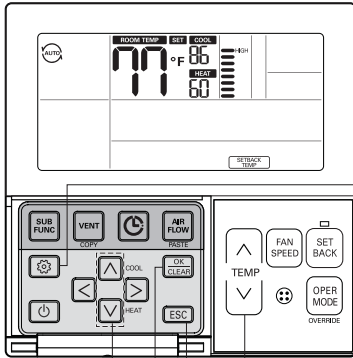

- 1 Use button to select Set back temperature setting. Press button repeatedly to select Set back temperature (). You can find blinking cooling set point icon in LCD.

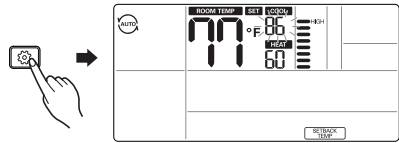

- 2 Use button to set cooling set point. After that, press button to move to set heating set point. Using button, you can also set heating set point.

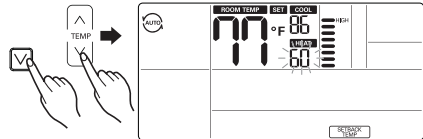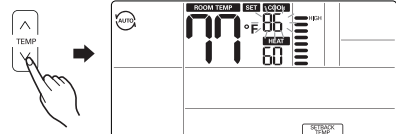

- 3 Press button to complete and active the setting process.




- 4 Press button to exit.
 - * After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.



Function Setting - Filter Sign Clear


This function is to clear the indicator of indoor filter cleaning.

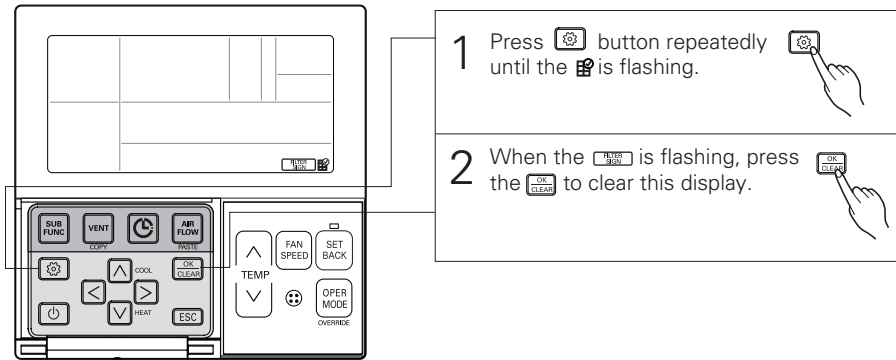

- When filter is covered by dust, it will reduce cooling/heating efficiency and consume more electric power. Therefore, do clean the filter whenever cleaning time is expired.
- * Filter cleaning indication is automatically cancelled without manual cancellation after certain period of time.

Programming - Simple Reservation

You can set the reservation conveniently in the units of 1 hour from 1 hour to 7 hours.

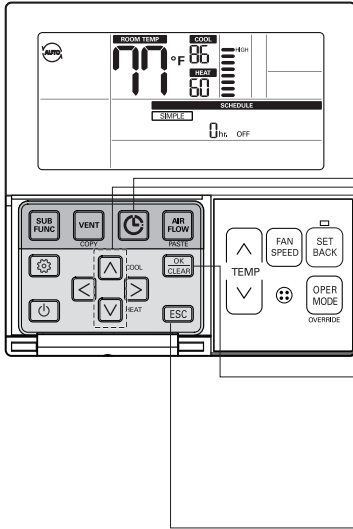


- 1 Press button on the Thermostat.
(the 'SIMPLE' segment will blink)
- 2 Press button to adjust reservation time.
 →
- 3 Press button to finish setting.
- 4 Press button to exit.
* After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.
- If reservation is setup, 'sleep' indication shows up at the lower part of LCD screen.

* When simple timer setup, product automatically runs or stops after the time that is set.

Programming - Sleep Reservation

Sleep reservation is the function of air-conditioner to run and stop after certain period of time at sleep mode before sleep. When connected to a ventilation product and set the sleep reservation, when it goes to the sleep mode, after the set time has elapsed.

- When operating under the Auto operation mode, the Sleep reservation cannot be made.
- When setting the Auto operation mode, the Sleep reservation gets deactivated.

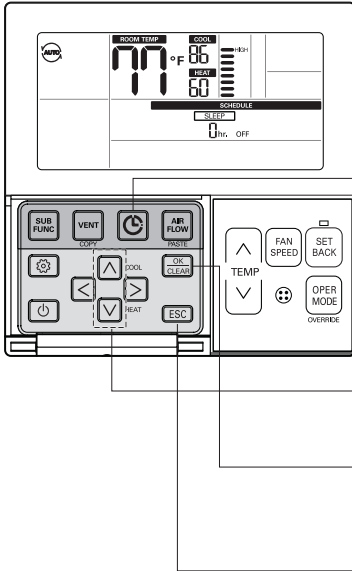

- 1 Press button to enter the Programming mode.
Ex) Setting Sleep Reservation time as '3'.
- 2 Repeat pressing button to enter the SLEEP reservation setting mode.
(segment flashing)
- 3 Press button to adjust reservation time.
The SLEEP reservation time is from 1 to 7 hours.
- 4 Press button to finish setting.
Whenever reservation is done.
- 5 Press button to exit.
* After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.
- If reservation is setup, 'sleep' indication shows up at the lower part of LCD screen.
- 6 If finishing sleep reservation setup, air-conditioner product operates sleep drive and stops after the time that is set.

! CAUTION


Please reserve proper time at sleeping.

- Because it automatically adjusts desired temperature for comfortable air-cooling at sleep drive, there could be difference between Thermostat's desired temperature and air-conditioner body's desired temperature.


Programming - Weekly Reservation

You can set individual daily schedules for the week.


- For correct operation of Weekly Reservation, please set current time correctly.

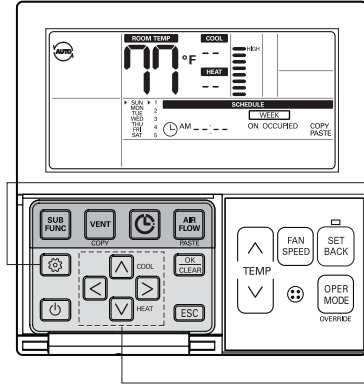


- 1 Press button repeatedly to enter 'WEEK' setting mode. 'WEEK' will blink.

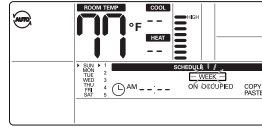


- 2 Select desired day by pressing the button. The day icon in window will blink.

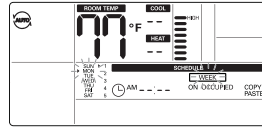



- 3 Enter timer number setting mode by pressing the button. Number icon in window will blink.

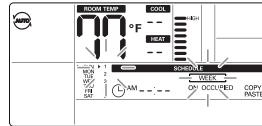


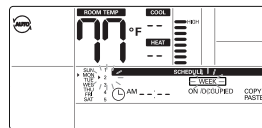

- 4 Select desired timer number to set by pressing the button.

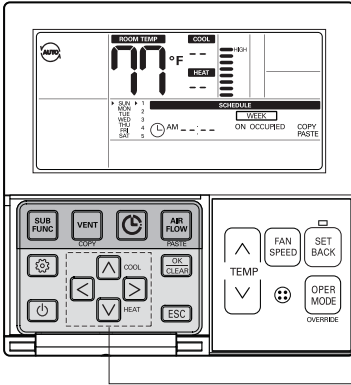


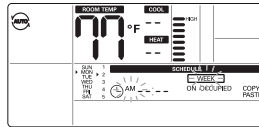



- 5 Enter AM/PM setting mode by pressing the  button. AM or PM icon in window will blink.



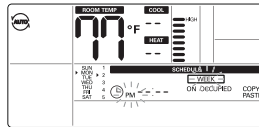


- 6 Select the AM/PM by pressing the   button.




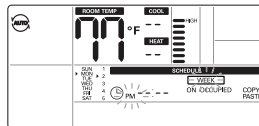- 7 Enter 'hour' setting mode by pressing the  button. The hour icon in window will blink.




- 8 Select desired hour by pressing the   button.

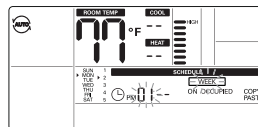


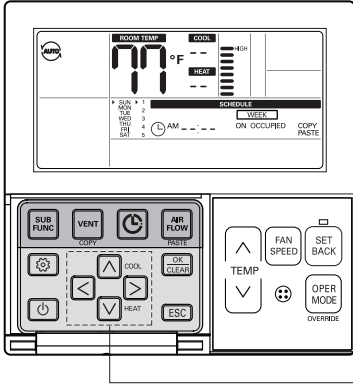


9 Enter 'minute' setting mode by pressing the button. The minute icon in window will blink.

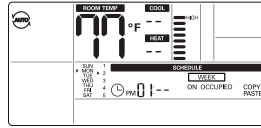


10 Select desired minute by pressing the button.

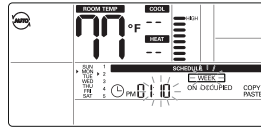



11 Enter ON/OFF setting mode by pressing the button. ON or OFF icon in window will blink.

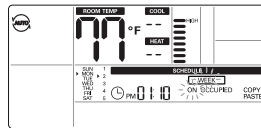


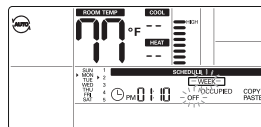

12 Select ON/OFF condition of timer by pressing the button.

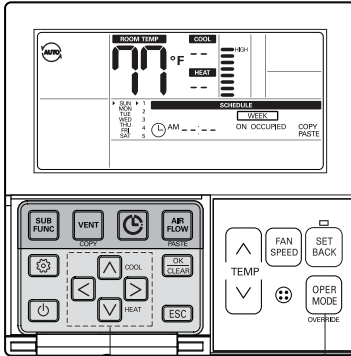


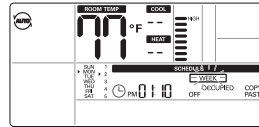



- 13 Enter OCCUPIED/UNOCCUPIED setting mode by pressing the  button. OCCUPIED or UNOCCUPIED icon in window will blink.




- 14 Select OCCUPIED/UNOCCUPIED condition of timer by pressing the   button.

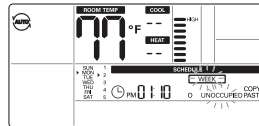



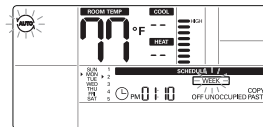
- 15 Enter operation mode setting mode by pressing the  button. Operation mode icon in window will blink.

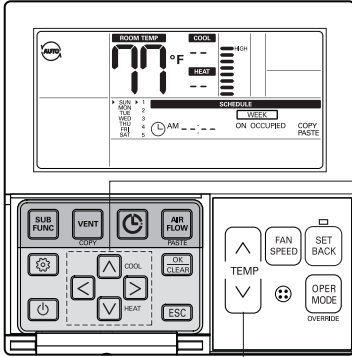


- 16 Select desired operation mode by pressing the  button.





- 17 Enter Cooling set point setting mode by pressing the  button and the  button. Cooling set point icon in window will blink.

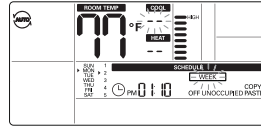


- 18 Select desired cooling set point by pressing the  button.

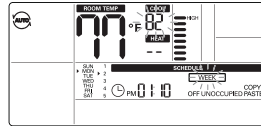


- 19 Enter Heating set point setting mode by pressing the  button. Heating set point icon in window will blink.

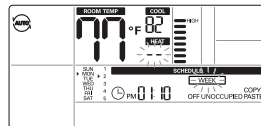


- 20 Select desired heating set point by pressing the  button.

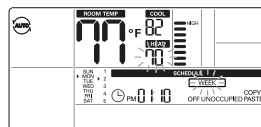


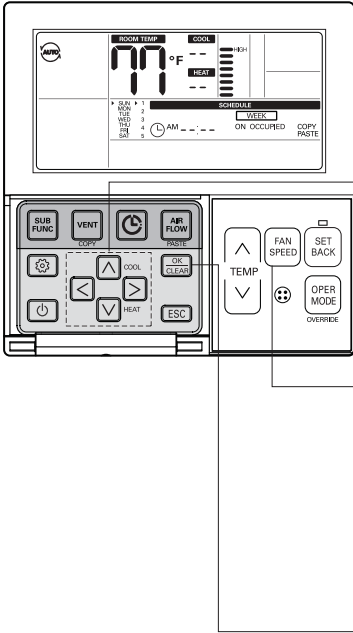

- 21 Enter fan speed setting mode by pressing the button. Fan speed icon in window will blink.

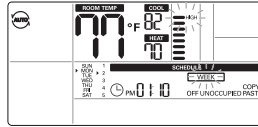


- 22 Select desired fan speed by pressing the button.

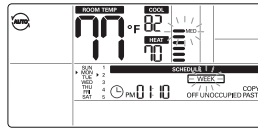


- 23 If finishing weekly reservation setup, please press the button. Weekly reservation setup for the day that you set is finished.

- 24 If you setup with the method identical with above by selecting the day that you'd like to setup, it operates weekly reservation.

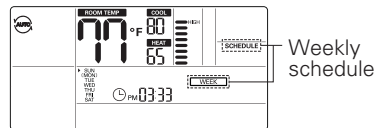


Side bar : the indication that there is weekly reservation for corresponding day

- You can't change operate mode, fan speed, setting temperature in unoccupied.
- Display 'Unoccupied Lock' on the window.

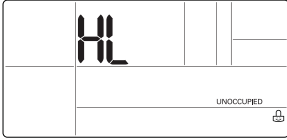

Programming - Weekly Reservation Schedule Copy/Paste

You can copy weekly timer schedule data to another day.

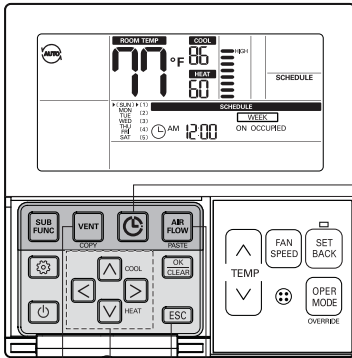

- 1 Press button repeatedly to enter 'WEEK' setting mode. 'WEEK' will blink.



- 2 Select desired day by pressing the button. The day icon in window will blink.



- 3 Press button for 3 seconds to copy schedule of selected day. The 'COPY' icon will flash.



- 4 Select desired day by pressing the button. The day icon in window will blink.



- 5 Press button for 3 seconds to copy schedule of selected day. The 'PASTE' icon will blink.




- 6 Press button to exit or system will automatically exit after 25 seconds without any input.




Programming - Holiday Reservation



It automatically stops at reserved day that you set.

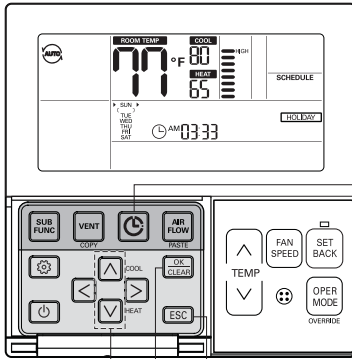

- 1 Please move to 'holiday' by repeatedly pressing button.



- 2 Please move to 'date' that you want to setup holiday by using button.



- 3 Please appoint holiday by using button.
For example, when you setup Monday holiday
- 'Monday' letter disappears.






- 4 Please press button if finishing holiday setup.
* If it comes to appointed holiday, air-conditioner automatically stops.
If the air conditioner is turned on during holiday schedule, it will run for one hour and then automatically shut off.


Programming - Delete All Reservation

You can delete all reservation schedules.

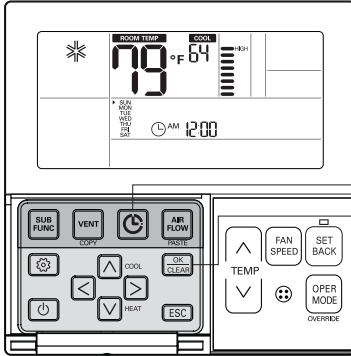- Simple, sleep, weekly, holiday reservation




- 1 Press  button and  button simultaneously and hold for 3seconds to delete all reservation schedules.

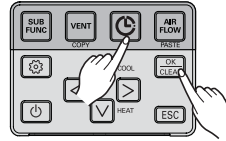


Different mode drive

Different mode drive is a phenomenon taking place when indoor units' drive mode is different in the case that a few indoor units are set up on a heat pump system.


(Different mode drive doesn't show up at cooling exclusive model.)

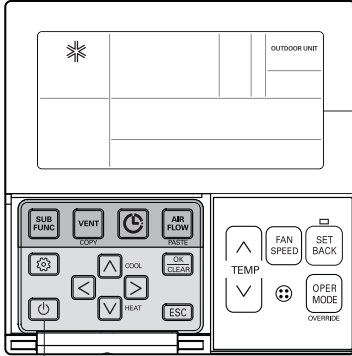


- 1 While a few indoor units are running cooling on a heat pump system, it doesn't operate heating drive if any indoor unit operates heating drive.

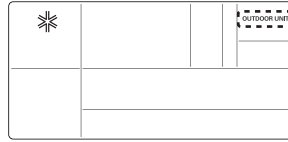

- 2 While a few indoor units are running heating on a heat pump system, it doesn't run if any indoor unit runs cooling or dehumidification. It is the indication that it is operating heating drive on a heat pump system.


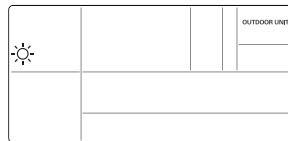


- 3 By pressing  button, indoor unit automatically runs at the mode that different indoor units are running after about 5 seconds and operates.




Ventilation Product - Interlocked Air conditioner and Ventilator

- Control using Thermostat where air conditioner indoor unit and the ventilation product is installed at the same time.
 - When the power is turned on, your Thermostat recognizes the product (takes about 30 seconds) and then works normally.

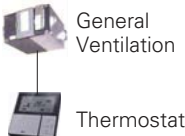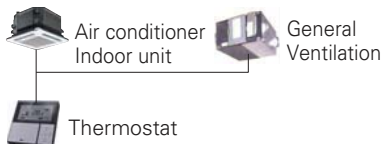
	Single Operation	Interlocked Operation
General Ventilation	(General Ventilation Single Operation) 	(General Ventilation Interlocked Operation) 

* Connecting wires is the same as air conditioner user manual.
(Refer to page about Group control)

- Press 'Ventilation' button on the Thermostat and enter Ventilation control mode to check the operation of ventilation product.

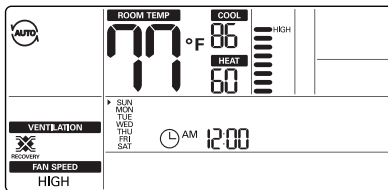

[Air conditioner control mode]

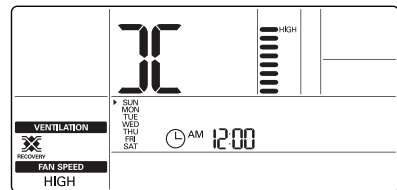


[Ventilation control mode]

- To convert back to air conditioner mode, press 'Ventilation' button when in ventilation mode.
 - If no button pressed for 15 seconds or more in ventilation mode, it automatically converts back to air conditioner mode.
 - Ventilation product represent general ventilation product and direct expansion ventilation product.

Ventilation Product - Interlocked operation with general Ventilator

It is used when air conditioner is interlocked with ventilation product.


It is a function that cools and refreshes indoor air using the ventilation product at the same time operating the air conditioning function.

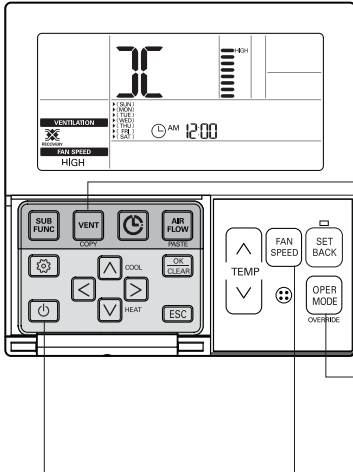




Ventilation interlinked operation


- 1 Press button on the Thermostat control panel.
- It is only used when air conditioner and general ventilation is Interlocked.
- 2 Pressing button at ventilation mode will start ventilation.
- 3 Pressing button will change the ventilation operation mode. Pressing operation selection button will change the mode in the order of 'Recovery → Bypass → Auto'
* It only displays on the Thermostat display when it is in ventilation mode, and it displays the desired temperature when it returns to air condition mode.
- 4 Pressing button in general ventilation mode will change airflow speed. Pressing fan speed speed button will change the mode in the order of 'Low → High → Power'. If CO₂ sensor is installed, it can select from 'Low → High → Power → Automatic'.
- 5 Changing back to air conditioner mode
 - 1) Automatic Conversion : when no button is pressed for 15 seconds or longer, it automatically converts back to air conditioner mode.
 - 2) Manual Conversion : Pressing button in ventilation mode will manually convert.

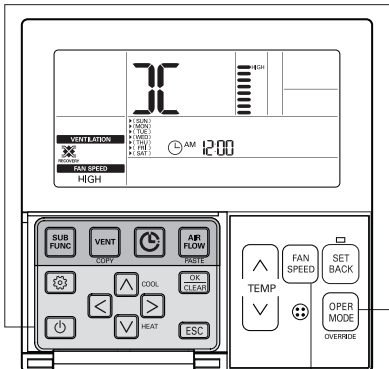



Ventilation Product - Ventilator single operation




- 1 Press  button on the Thermostat.


- 2 Pressing  button will change the ventilation mode.



Ventilation mode	Thermostat Display	Contents
Heat exchange		Circulate indoor air without loss of heat
Normal		Directly circulate indoor air without going through heat exchanger
Automatic		Circulate indoor air with automatically comparing indoor and outdoor air
- 3 Pressing  button will change the strength of the wind


 - Pressing the button can select from 'Low → High → Power'.
 - If CO₂ sensor is installed, it can select from 'Low → High → Power → Automatic'.

Ventilation Product Function Settings

- * Refer to ' Function Setting - Child Lock ' part for lock function.
- * Refer to ' Function Setting - Filter Sign Clear ' part for Filter Cleaning function.
- * Refer to ' Function Setting - Changing Current Time ' part for Time Setting function.

Ventilation Product Reservations Settings

Sleep Reservations : Sets to operate ventilation lightly during the sleep.

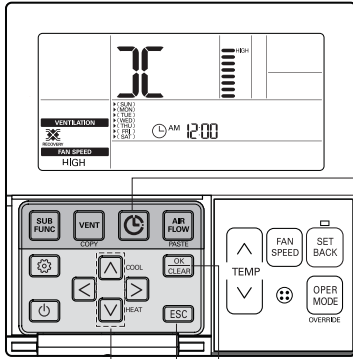

1 Press button to enter the Programming mode.
Ex) Setting Sleep Reservation time as '3'.

2 Repeat pressing button to enter the SLEEP reservation setting mode.
(segment flashing)

3 Press button to adjust reservation time.
The SLEEP reservation time is from 1 to 12 hours.

1hr. → 3hr.



4 Press button to finish setting.
Whenever reservation is done.

5 Press button to exit.
* After setup, it automatically gets out of setup mode if there is no button input for 60 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.
- If reservation is setup, 'sleep' indication shows up at the lower part of LCD screen.


6 When the sleep reservation is set, the unit operates lightly.

Simple, Weekdays, Holidays Reservations

* Please refer to the Reservation Settings part of the air conditioner for Simple, Weekdays, Holidays Reservations



Troubleshooting Mode Self Diagnosis

If there are problems with the product, it self-diagnoses with Troubleshooting mode. It displays a number for the Troubleshooting mode with its inspection code phrase.

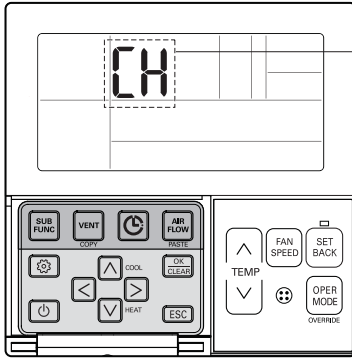

When an error occurs while operating, the 'CH' phrase and Error code number are displayed on the screen alternately as below.

Example) When Error code 03 occurs.

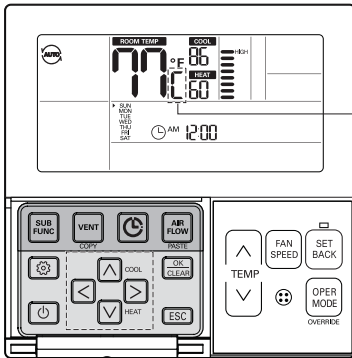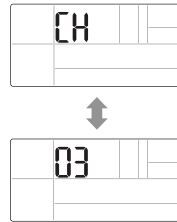

When an error occurs while operating under the group control mode, the 'CH' phrase and Error code number are displayed on the screen to the right of indoor temperature value alternately as below.

Example) When Error code 03 occurs,
C → H → 0 → 3



- When recovery takes place after occurrence of an error, controller operation mode may change because of communication with indoor unit. Make sure you set the correct operation mode after adjusting vane angle settings.
- Since the setting of the Thermostat (with cable) can be altered after its recovery from occurrence of a group control error, reset is recommended.


Checkups before reporting breakdown

Please first check the items below for troubleshooting before consulting a service center.

Symptoms	Check-up	Management
Abnormal operating conditions.	<ul style="list-style-type: none"> • Is air-conditioner's power on? 	<ul style="list-style-type: none"> • Please check up circuit breaker. • Please check up Thermostat wire setup condition.
	<ul style="list-style-type: none"> • Are air-conditioner and Thermostat properly connected with cable? 	<ul style="list-style-type: none"> • Please connect air-conditioner and Thermostat cable.
	<ul style="list-style-type: none"> • Is cable connection correct? 	<ul style="list-style-type: none"> • Please check again referring to setup method at the manual.
It doesn't operate reservation.	<ul style="list-style-type: none"> • Did you correctly setup time? 	<ul style="list-style-type: none"> • Please set up current time correctly.
	<ul style="list-style-type: none"> • Did you correctly make a reservation? 	<ul style="list-style-type: none"> • Please set up again referring to the manual.
It doesn't release cool wind.	<ul style="list-style-type: none"> • Is desired temperature setup lower than current temperature? 	<ul style="list-style-type: none"> • Please set up desired temperature lower than current temperature.
Air-conditioner automatically runs or stops.	<ul style="list-style-type: none"> • Isn't reservation drive setup? 	<ul style="list-style-type: none"> • Please set up 'Weekly timer' again referring to the manual.
Error is indicated on Thermostat indication window.	<ul style="list-style-type: none"> • Does Thermostat indication window indicate 'CH03'? 	<ul style="list-style-type: none"> • Please check again remote controller wire setup condition. • Please check again connection condition of air-conditioner and Thermostat cable.

INSTALLATION METHOD


- 1 Please fix tightly using provided screws after placing Thermostat backplate on the place where you like to setup.
 - Please set it up not to bend because poor setup could take place if backplate bends. Please set up Thermostat board fit to the electrical box if there is a electrical box.
 - Install the product so as not to make a gap with the wall side and to prevent shaking after the installation.

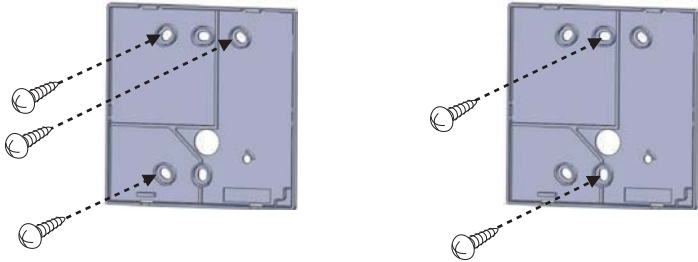

- 2 Can set up Thermostat cable in one of three possible directions.
 - Setup direction: back, top, or right
 - If setting up Thermostat cable into top or right side, please set up after removing Thermostat cable guide groove.

* Remove guide groove with long nose pliers.

- ① Back through the wall
- ② Top guide groove
- ③ Right side guide groove

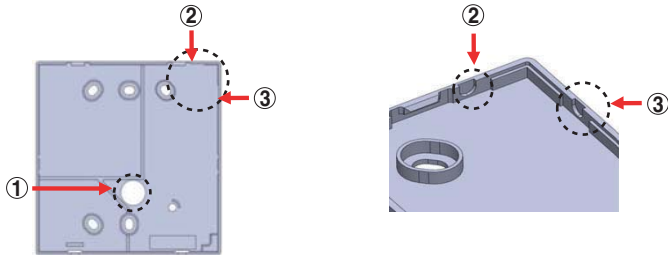

<Wire guide grooves>

3 Please fix Thermostat upper part into the backplate attached to the surface of the wall, as the picture below, and then, connect with backplate by pressing lower part.


- Please make sure to leave no gaps on the top, bottom, left or right sides between the Thermostat and backplate.

- Before assembly with the backplate, arrange the Cable not to interfere with circuit parts.

Remove Thermostat by inserting a screwdriver into the lower separating holes and twisting to release the controller from backplate.

- There are two separating holes. Please individually separate one at a time.



- Please be careful not to damage the inside components when separating.

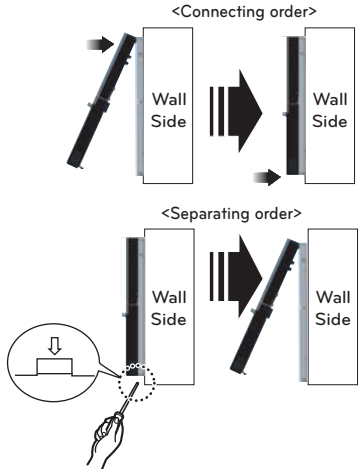

4 Please refer to the following directions when connecting the indoor unit and the Thermostat together.

1) Please connect the cables as shown in the figure below when connecting the plug type cable from the indoor unit's C/BOX and the housing type of the extension cable.

Signal	Yellow
12V	Red
GND	Black

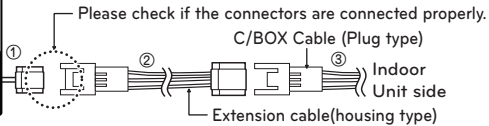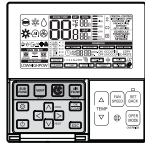


※①:AWG#24 / ②,③ : AWG#22

CAUTION


- Specification of LG supplied extension cable : AWG#22, 3 core shielded. (Model : PZCWRC1)
- Apply enclosed noncombustible conduit(metal raceway) totally or use FT-6 rated cable or above level in case of local electric & building code that requires plenum(CMP) cable usage.

2) When connecting Terminal Blocks of the indoor C/BOX and the Thermostat with the extension cable, refer to the steps below.


- ① Remove the screw on the cable which is fastened to the Thermostat's Terminal Block by loosening with a screw driver.
- ② Remove the housing of the provided 32ft extension cable with a cutting nipper and peel it as shown in the figure below. (when purchasing the extension cable at the site directly, please peel it as shown in the figure below.)

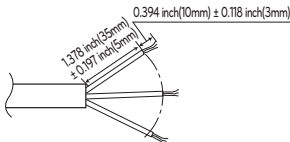

- ③ Make sure each wire is securely fastened under each screw terminal and the wires are not in contact with each other.
- ④ Please connect the Terminal blocks of indoor unit's C/BOX and wired remote controller by referring to the images and contents shown below.
 Connect the yellow(signal) part of the Thermostat's terminal block and the 'YL' part of the indoor unit's terminal block.
 Connect the red(12V) part of the Thermostat's terminal block and the 'RD' part of the indoor unit's terminal block.
 Connect the black(GND) part of the Thermostat's terminal block and the 'BK' part of the indoor unit's terminal block.

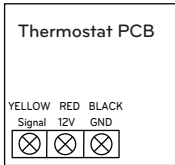

<Thermostat>

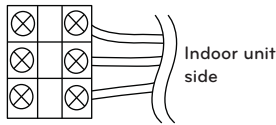

<Indoor Terminal Block>

Thermostat PCB Terminal block Remark	Indoor Terminal block	Function
YELLOW	YL	Signal
RED	RD	12V
BLACK	BK	GND

- * In case of loosened screws or insufficient contact between the terminal and the wire, thermostat may not function properly.
- * When the power is off on the Thermostat, check the connection between the Thermostat and Terminal Block .
- * Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will strip the head and make proper tightening impossible.
- * Over-tightening the terminal screws may break wires and terminal block structure.

CAUTION

- Installation work must be performed in accordance with the national wiring standards and local code by authorized personnel only.
- Apply enclosed noncombustible conduit(metal raceway) totally or use cable above FT-6 level in case of local electric & building code that requires plenum plenum(CMP)cable usage.
- AWG#22, 3 core shielded is recommended when using the large hole in the center of the backplate.
- AWG#24, 3 core shielded is recommended when using the side or top knock-out of the backplate.

- 5 Please use an extension cable if the distance between the Thermostat and the indoor unit is longer than 32ft (10m).

CAUTION


When installing the Thermostat, do not bury it in the wall.
 (It can cause damage in the temperature sensor.)
 Do not install the cable to be 164ft (50m) or longer. (It can cause communication error.)

Thermostat installation

Since the room temperature sensor is in the Thermostat, the Thermostat box should be installed in a place away from direct sunlight, high humidity and direct supply of cold air to maintain proper space temperature. Install the Thermostat about 5ft(1.5m) above the floor in an area with good air circulation at an average temperature.

Do not install the Thermostat where it can be affected by:


- Drafts, or dead spots behind doors and in corners.
- Hot or cold air from ducts.
- Radiant heat from sun or appliances.
- Concealed pipes and chimneys.
- Uncontrolled areas such as an outside wall behind the Thermostat.
- This Thermostat is equipped with LCD display. For proper display of the Thermostat LCD's, the Thermostat should be installed properly as shown in Fig.1.
(The standard height is 4~5 ft (1.2~1.5 m) from floor level.)

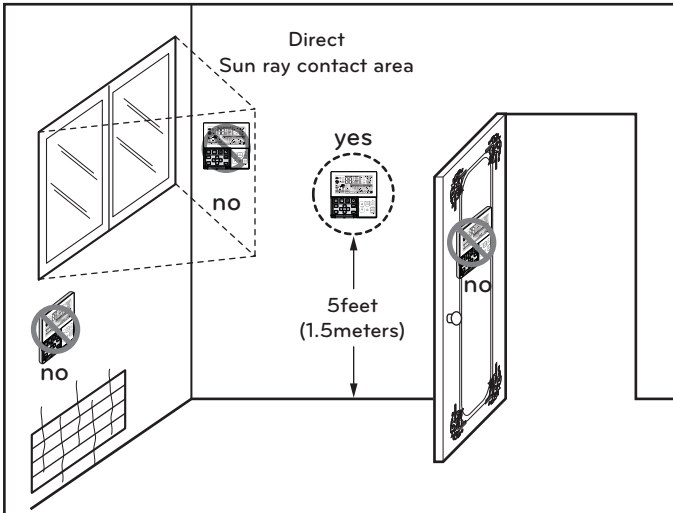

[Fig.1]

GROUP CONTROL

- When installing more than 2 units of air conditioner to one Thermostat, please connect as the right figure.
 - Set one indoor unit to master and the remaining to slave.

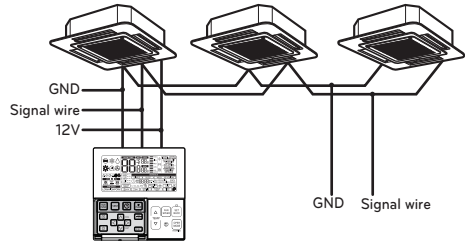

When controlling multiple indoor units with one Thermostat, you must change the master/slave setting from the indoor unit.

- Once DIP S/W is set, recycle power. When recycling power, please remain in OFF position for at least 1 minute for new settings to take effect.
- For ceiling type cassette and duct product group, change the switch setting of the indoor PCB.



#3 switch OFF: Master
(Factory default setting)




#3 switch ON: Slave


- For wall-mount type and stand type product, change the master/slave setting with the wireless Thermostat. (Refer to wireless Thermostat manual for detail)

When controlling the group, some functions excluding basic operation setting, fan level Low, med, high, Thermostat lock setting and time setting may be limited.


INSTALLATION INSTRUCTION

Installer Setting - How to enter installer setting mode

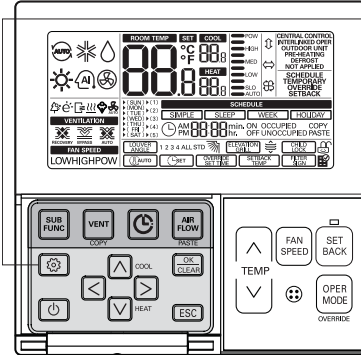

- 1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.

- 2 When you enter the setting mode initially, Function code is displayed on the bottom of the LCD screen.


 Function Code Value

- Some categories of the menu may not be displayed according to the function of the product, or the menu name may be different.

CAUTION

Installer setting mode is to set the detail function of the Thermostat. If the installer setting mode is not set correctly, it can cause problems to the product, user injury or property damage. This must be set by an certified installer, Any non-certified personnel attempting to install or make changes shall be responsible for any adverse effects or operation.

<Installer Setting Code Table>

1) General air-conditioner product

Code	Function	Value		
01	Test Run	01:Set		
02	Address Setting	00~FF : Address		
03	E.S.P. Value	<ESP Step> 01:VeryLow 02:Low 03:Med 04:High 05:Very High	<ESP Value> 0 ~ 255	<Example>
04	Thermistor	01:Remo 02:Indoor 03:2TH		
05	Ceiling Height	01:Low 02:Med 03:High 04:Very High		
06	Static Pressure	01:V-H 02:F-H 03:V-L 04:F-L		
07	Master Setting	00:Slave * If only "Plus1" series models 00 : Group setting 01:Master 01 : Single setting		
08	Override Setting	00:Slave 01:Master		
09	Dry Contact	00:Auto-Off 01:Auto-On		
12	Celsius Fahrenheit Switching	00:Celsius 01:Fahrenheit		
18	Emergency Heater Setting	Select mode 00 : not use 01 : use	Setup Low Ambient Heating Operation 0 : not use 1 : use – compressor off (0 °F/-18 °C)/on(5 °F/-15 °C) 2 : use – compressor off (5 °F/-15 °C)/on(10 °F/-12 °C) 3 : use – compressor off (10 °F/-12 °C)/on(15 °F/-9 °C)	Setup FAN Speed 0 : fan off 1 : fan on
20	Plasma	00: Not Installed 01: Installed		
21	Electric heater			
22	Humidifier			
23	Elevation Grill			
24	Ventilation Kit			
25	Auxiliary Heater			
31	Setting temperature range	00: 60~86 °F / 16~30 °C 01: 40~99 °F / 4~37.5 °C		

* Some contents may not be displayed depending on the product function.


2) General Ventilation product


Code	Function	Value
01	Test Run	01 : Test Run Setup
02	Address Setting	00~FF : Address of Central Control
03	SA(Supply Air) ESP	
04	EA(Exhaust Air) ESP	<p><ESP Step> <ESP Value> <Example></p> <p>01:Low 0 ~ 255 0301 15₅</p> <p>02:High</p> <p>03:Very High</p> <p style="text-align: center;"> ↓Function Code ↓ESP step ↓ESP value </p>
05	Product Direction	01 : Normal 02 : Opposite
09	Dry Contact	00 : Auto-Off 01 : Auto-On
11	Zone State	01:Variable 02:Fixed
13	Humidification for Singular Ventilation	00 : Not in Use 01 : Use
14	Humidification for Heat Mode Ventilation	00 : Automatic 01 : Manual


* Some contents may not be displayed depending on the product function.

Installer Setting - Test Run Mode


After installing the product, you must run a Test Run mode.
For details related to this operation, refer to the product manual.

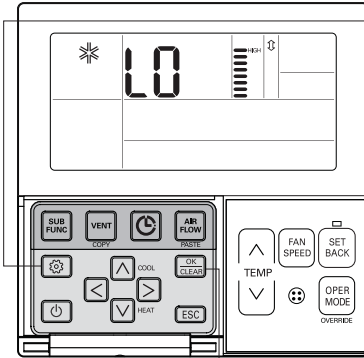


- 1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
 - If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.
 - Please cancel the right and left of wind direction for RAC product.



- 2 Setup figure '01' blinks at the lower part of indication window.

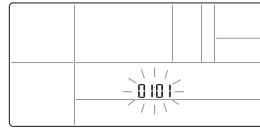


- 3 Press  button to start.

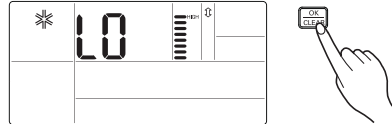

- 4 During the test run, pressing the below button will exit the test run.
 - Select operation mode, temperature up/down, fan speed, wind direction, start/stop button.

Installer Setting - Setting Address of Central Control


It's the function to use for connecting central control.
Please refer to central controller manual for the details

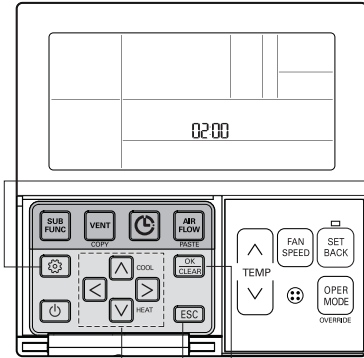

- 1 If pressing button long for 3 seconds, it enters into Thermostat installer setter setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.



- 2 If entering into address setup mode by using button, it indicates as picture below.

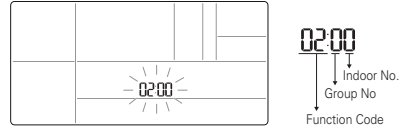


- 3 Set Group No. by pressing button.(0~F)

02:F0



- 4 Move to Indoor No. setting option by pressing button.

02:F0



- 5 Set Indoor No. by pressing button.

02:F5



- 6 Press button to save.

02:F5




- 7 Pressing button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.

Installer Setting - E.S.P. Function

This is the function that decides the strength of the wind for each wind level and because this function is to make the installation easier.

- If you set ESP incorrectly, the air conditioner may malfunction.
- This setting must be carried out by a certificated-technician.

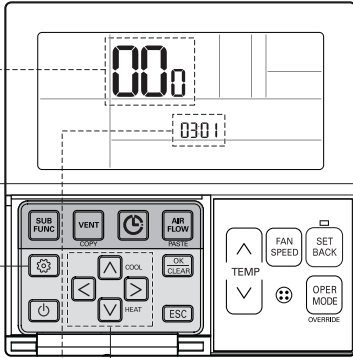


Function code,
ESP code

ESP value

1 If pressing button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.




2 If entering into ESP setup mode by using button, it indicates as the picture below.




3 Select ESP fan step by pressing button. (01: very low, 02: low, 03: medium, 04: high, 05: very high)

030.1




4 Move to ESP value setting by pressing button.
(It is 000 when delivering from the warehouse.)


030.1 00.0



5 Press button to setup ESP value.
(It is possible to setup ESP value from 1 to 255, and 1 is the smallest and 255 is the biggest.)



- ESP setting may not work on products without weak or power fan speed settings.

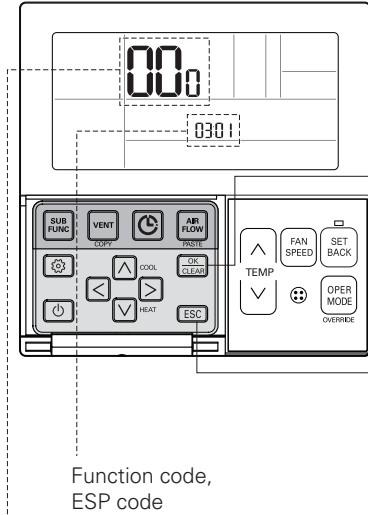

ESP value

6 Select ESP fan step again by using button and setup ESP value, as No. 4 and 5, that corresponds each fan speed.

7 Press button to save.




8 Press button to exit.
 * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 * When exiting without pressing set button, the manipulated value is not reflected.

- Please be careful when adjusting ESP values.
- It does not work to setup ESP value for weak/power step for some products.
- ESP value range is dependent on product.

Installer Setting - Thermistor

This is the function to select the temperature sensor to judge the room temperature.

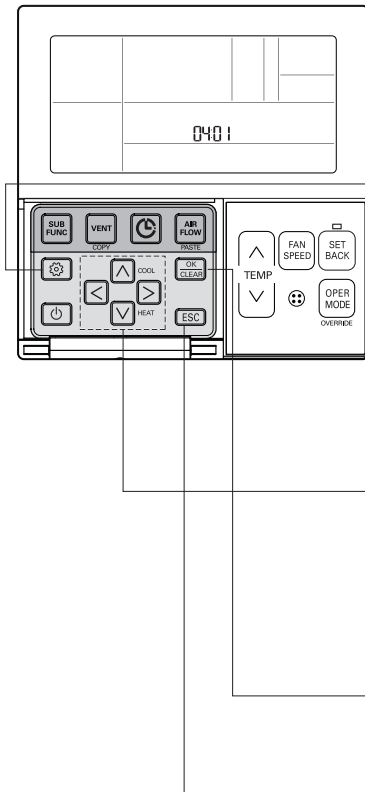

- 1 If pressing button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.
- 2 If moving to room temperature perception sensor selection menu by pressing button, it indicates as picture below.
- 3 Set Thermistor value by pressing button. (01: Thermostat, 02: Indoor, 03: 2TH)
- 4 Press button to save.
- 5 Pressing button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.

<Thermistor Table>


Temperature sensor selection		Function
01	Thermostat	Operate according to Thermostat temperature sensor
02	Indoor unit	Operate according to indoor unit temperature sensor
03	2TH	Operate according to higher temperature by comparing indoor unit's and Thermostat's temperature. (There are products that operate at a lower temperature.)
		Operate according to lower temperature by comparing indoor unit's and Thermostat's temperature.

* The function of 2TH has different operation characteristics according to the product.

* For the indoor temperature below 10 °F, it displays the value perceived by the sensor of the Thermostat regardless of the temperature sensor setting.

Installer Setting - Ceiling Height Selection


This function is to adjust FAN Airflow rate according to ceiling height (For ceiling type product)

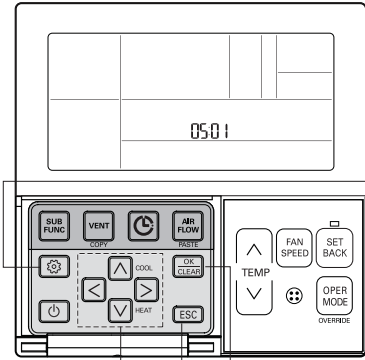

1 If pressing button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.




2 If moving to ceiling height selection menu by pressing button, it indicates as picture below.

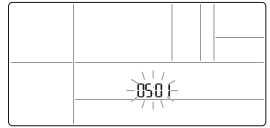

3 Select ceiling height value by pressing button. (01:Low, 02:Medium, 03:High, 04:Very high)



Function Code ceiling height setting



4 Press button to save.



5 Pressing button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.

<Ceiling Height Selection Table>

Ceiling Height Level	Description
01 Low	Decrease the indoor airflow rate 1 step from standard level
02 Medium	Set the indoor airflow rate as standard level
03 High	Increase indoor airflow rate 1 step from standard level
04 Very high	Increase indoor airflow rate 2 steps from standard level

- Ceiling height setting is available only for some products.
- Ceiling height of 'Very high' function may not exist depending on the indoor unit.
- Refer to the product manual for more details.

Installer Setting - Static Pressure Setting

This function is applied to only duct type. Setting this in other cases will cause malfunction.


- 1 Press button for 4 seconds to enter the installer setting mode until timer segment displays "01:01".
- 2 If pressing button repeatedly, it moves to static pressure selection menu as picture below.
- 3 Select static pressure by pressing button.
(01:V-H, 02:F-H, 03:V-L, 04:F-L)
- 4 Press button to save.
- 5 Pressing button will exit settings mode.
 - * After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
 - * When exiting without pressing set button, the manipulated value is not reflected.

<Static Pressure Setting Table>

Pressure selection		Function	
		Zone state	ESP standard value
01	V-H	Variable	High
02	F-H	Fixed	High
03	V-L	Variable	Low
04	F-L	Fixed	Low

Installer Setting - Override Master/Slave Setting


Since Multi V II, override master/slave function is to prevent product's different mode operation. If it setup as the slave, It blocks to change opposite run mode to outdoor unit cycle (cooling/heating)

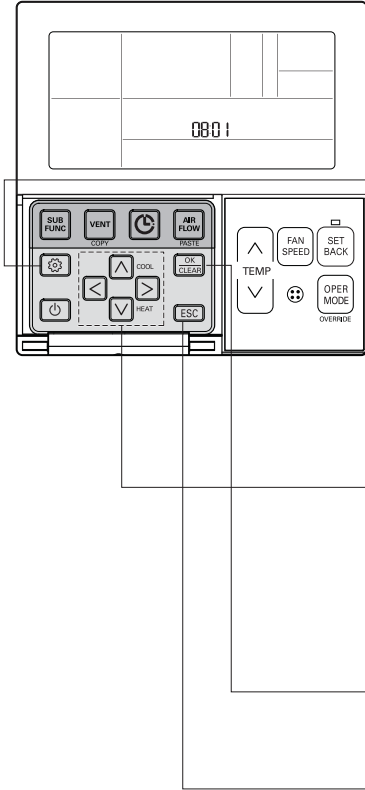

1 If pressing button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.




2 If pressing button repeatedly, it moves to override master/slave selection menu as picture below.

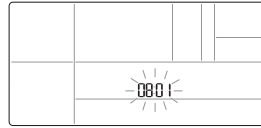

3 Select Master/ Slave by pressing button.
(00: Slave, 01 : Master)

08:00
Function Code Master/Slave



4 Press button to save.


08:00



5 Pressing button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.


* Override master/slave selection function is possible to use only when it is connected to the succeeding models of Multi V II series.




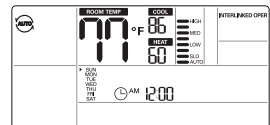






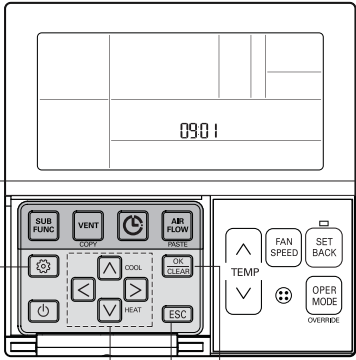

- If it is set as Override Slave, **INTERLINKED OPER** icon is displayed on LCD Display Window.

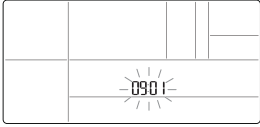

Installer Setting - Dry Contact Mode Setting

Dry contact function is the function that is possible to use only when dry contact equipment is separately purchased/setup.



- 1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure. 
- 2 If pressing  button repeatedly, it moves to Thermostat dry contact mode setup menu as picture below.

- 3 Select Dry contact setting by   pressing button.
(00 : Manual, 01 : Automatic)

Function Code Dry Contact setting value

- 4 Press  button to save. 

- 5 Pressing  button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.


► What is Dry Contact?



Like hotel card key or occupancy sensor, it is the signal of the point of contact when using air-conditioner by interlocking.

- Please refer to dry contact manual for more details.


Installer Setting - Fahrenheit / Celsius Switching

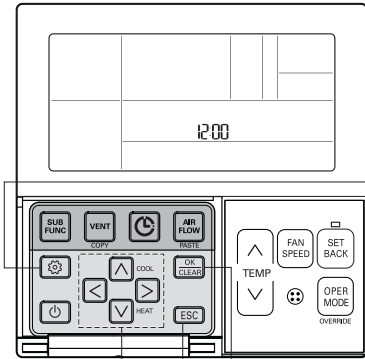


This function is used for switching the display between Celsius and Fahrenheit.



- 1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode.
Please press more than 3 seconds for sure. 

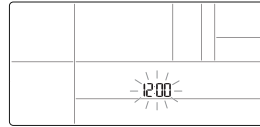
- 2 Repeat pressing  button to select Function code 12. 



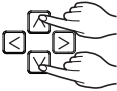

- 3 Select Temperature unit mode by pressing   button.
(00: Celsius, 01: Fahrenheit) 

1201

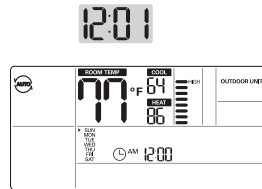- 4 Press  button to save or release. 



- 5 Press  button to exit or system will automatically exit after 25 seconds without any input. 

* Whenever press   button in Fahrenheit mode, the temperature will increase/drop degrees.

Installer Setting - Emergency Heater Setting

This function is only available on some products.


This function will set the Emergency Heater Setting.

Emergency Heater is used to heat the space in emergency case such as heat pump error.

Emergency heat is in place of and does not supplement heat pump.

* Emergency Heater setting Function sets following conditions:


- 1) Emergency Heater operation while in error or outdoor unit operating in the cooling cycle.
- 2) Emergency Heater operation in Low Outdoor Ambient temperature
- 3) Fan speed setting during Emergency Heater operation

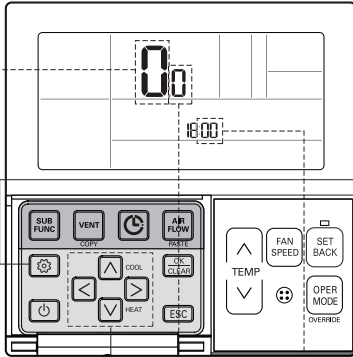

Setting2 : Low Outdoor Ambient Heating Operation

Setting1 : Heater Operation while in error or outdoor unit operating in the cooling cycle.

Setting3 : FAN Speed Setting during Emergency Heater Operation

1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.



2 Repeat pressing  button to select Function code 18.


18.00

Function Code Setting1: Heater Operation while in error or outdoor unit operating in the cooling cycle.

3 Select mode of Heater Operation while in error by pressing   button

00: not use
01: use


18.00



* If 00 is set at this stage, setting 2 & setting 3 will not be available


CAUTION

This function setting must be carried out by a certified-technician. Incorrect function setting can cause fire.

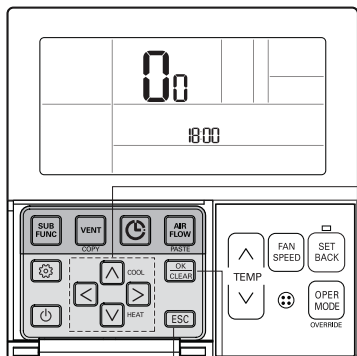

- 4 Move to Low Outdoor Ambient Heating Operation setting by pressing button.

00



- 5 Press button to setup Low Outdoor Ambient Heating Operation.

00



0 : not use

1 : use - compressor off(0°F / -18°C) / compressor on(5°F / -15°C)


2 : use - compressor off(5°F / -15°C) / compressor on(10°F / -12°C)

3 : use - compressor off(10°F / -12°C) / compressor on(15°F / -9°C)

※ Emergency heater operation in Low Ambient temperature
- compressor off : Emergency heater enabled
- compressor on : Emergency heater disabled

- 6 Move FAN Speed Setting during Emergency Heater Operation by pressing button.

00



- 7 Press button to setup FAN Speed during Emergency Heater Operation.

0 : fan off
1 : fan on

00



- 8 Press button to save.




- 9 Press button to exit or system will automatically exit after 25 seconds without any input.



Installer Setting - Option Function Setting


Setting feature for indoor unit when plasma purification / electric heater / humidifier / elevation grill / ventilation kit / auxiliary heater is newly installed, or installed unit is removed.

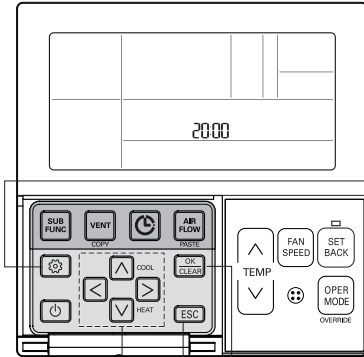

1 If pressing button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.



2 If pressing button repeatedly, it moves to the selected option function code as picture below.




Function	Code
Plasma purification	20
Electric heater	21
Humidifier	22
Elevation grill	23
Ventilation kit	24
Auxiliary heater	25

3 Select existing condition of each code by pressing button.

(00: not installed,
01 : installed)

2001

Function Code Existing condition




4 Press button to save.




5 Pressing button will exit settings mode.
* After setup, it automatically gets out of setup mode if there is no button input for 25 seconds.
* When exiting without pressing set button, the manipulated value is not reflected.


Installer Setting - Setting temperature range


This function is used for select setting temperature range option.

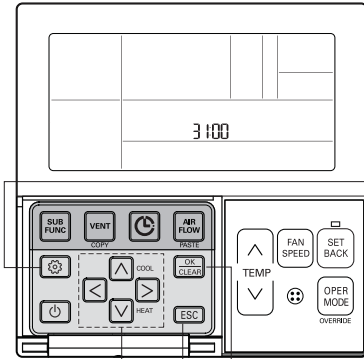

1 If pressing  button long for 3 seconds, it enters into Thermostat installer setup mode.
- If pressing once shortly, it enters into user setup mode. Please press more than 3 seconds for sure.



2 Repeat pressing  button to select Function code 31.



3 Select Temperature range by pressing   button.

00(option1):
60~86 °F / 16~30 °C (default)
01(option2):
40~99 °F / 4~37.5 °C




4 Press  button to save or release.

When the set values are changed, the items below will be initialized.

- Setting temperature (default: Cooling: 86 °F(30 °C)/ Heating: 60 °F(16 °C))
- Set back temperature (default: Cooling: 86 °F(30 °C)/ Heating: 60 °F(16 °C))
- Weekly Reservation



5 Press  button to exit or system will automatically exit after 25 seconds without any input.



In case of the setting temperature range option2(31:01), please note that the setting of the remote controller (with cable) can be altered under below circumstances. (Changes in setting example)

- In case of cooling at 30~37.5 °C(64~99 °F), it is changed to cooling at 86 °F(30 °C).
- In case of heating at 4~15.5 °C(40~86 °F), it is changed to heating at 60 °F(16 °C).
- If it is on the 2Set Mode, it is changed to the current operation mode(cooling or heating) of the indoor unit.

Situation where changes in the setting occur

- a. Operates the Auto address work and pipe search in situations such as product installment and service.
- b. Occurrence of errors and deactivation.
- c. Command generated by the central control, outdoor unit, Dry contact, Remote controller, indoor unit switch.