

TDA525X - UWLink[®] Evaluation Kit

Universal Wireless Link

TDA525X

ASK/FSK Transceiver for the ISM frequency bands of
315 MHz, 434MHz, 868 MHz and 915 MHz

User Manual

Revision 1.0, 2012-01-25

Edition 2012-01-25

**Published by
Infineon Technologies AG
81726 Munich, Germany**

**© 2012 Infineon Technologies AG
All Rights Reserved.**

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation, warranties of non-infringement of intellectual property rights of any third party.

Information

For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).

Warnings

Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office.

Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.



TDA525X UWLink Evaluation-Kit
Revision History: 2012-01-25, 1.0

Previous Revision: none

Page	Subjects (major changes since last revision)
	initial version

Trademarks of Infineon Technologies AG

AURIX, C166, CanPAK, CIPOS, CIPURSE, EconoPACK, CoolMOS, CoolSET, CORECONTROL, CROSSAVE, DAVE, EasyPIM, EconoBRIDGE, EconoDUAL, EconoPIM, EiceDRIVER, eupec, FCOS, HITFET, HybridPACK, I²RF, ISOFACE, IsoPACK, MIPAQ, ModSTACK, my-d, NovalithIC, OptiMOS, ORIGA, PRIMARION, PrimePACK, PrimeSTACK, PRO-SIL, PROFET, RASIC, ReverSave, SatRIC, SIEGET, SINDRION, SIPMOS, SmartLEWIS, SOLID FLASH, TEMPFET, thinQ!, TRENCHSTOP, TriCore.

Other Trademarks

Advance Design System (ADS) of Agilent Technologies, AMBA, ARM, MULTI-ICE, KEIL, PRIMECELL, REALVIEW, THUMB, μ Vision of ARM Limited, UK. AUTOSAR is licensed by AUTOSAR development partnership. Bluetooth of Bluetooth SIG Inc. CAT-iq of DECT Forum. COLOSSUS, FirstGPS of Trimble Navigation Ltd. EMV of EMVCo, LLC (Visa Holdings Inc.). EPCOS of Epcos AG. FLEXGO of Microsoft Corporation. FlexRay is licensed by FlexRay Consortium. HYPERTERMINAL of Hilgraeve Incorporated. IEC of Commission Electrotechnique Internationale. IrDA of Infrared Data Association Corporation. ISO of INTERNATIONAL ORGANIZATION FOR STANDARDIZATION. MATLAB of MathWorks, Inc. MAXIM of Maxim Integrated Products, Inc. MICROTEC, NUCLEUS of Mentor Graphics Corporation. Mifare of NXP. MIPI of MIPI Alliance, Inc. MIPS of MIPS Technologies, Inc., USA. muRata of MURATA MANUFACTURING CO., MICROWAVE OFFICE (MWO) of Applied Wave Research Inc., OmniVision of OmniVision Technologies, Inc. Openwave Openwave Systems Inc. RED HAT Red Hat, Inc. RFMD RF Micro Devices, Inc. SIRIUS of Sirius Satellite Radio Inc. SOLARIS of Sun Microsystems, Inc. SPANSION of Spansion LLC Ltd. Symbian of Symbian Software Limited. TAIYO YUDEN of Taiyo Yuden Co. TEAKLITE of CEVA, Inc. TEKTRONIX of Tektronix Inc. TOKO of TOKO KABUSHIKI KAISHA TA. UNIX of X/Open Company Limited. VERILOG, PALLADIUM of Cadence Design Systems, Inc. VLYNQ of Texas Instruments Incorporated. VXWORKS, WIND RIVER of WIND RIVER SYSTEMS, INC. ZETEX of Diodes Zetex Limited.

Last Trademarks Update 2011-02-24

Table of Contents

1	Introduction	5
2	Using the TDA525X-Board as stand-alone module	6
3	Using the TDA525X UWLink Adapter-Board together with the UWLink Mainboard as interface between the TDA525X-Board and a Windows PC	7

List of Figures

Figure 1:	TDA525X-Board, -UWLink Adapter-Board, UWLink-Motherboard	5
Figure 2:	Jumpers.....	6
Figure 3:	Connectors	6
Figure 4:	SIB-Server button.....	7
Figure 5:	TDA525X Explorer button	8
Figure 6:	TDA525X Explorer, Open button.....	Error! Bookmark not defined.
Figure 7:	TDA525X Explorer, Wizard tab	9
Figure 8:	RX/TX and ASK/FSK external controlled or register controlled	9
Figure 9:	TDA525X Explorer, Register tab	10
Figure 10:	TDA525X Explorer, Explorer tab	10
Figure 11:	Save button	11
Figure 12:	File-Open button.....	11

1 Introduction

The **TDA525X Board** can either be used as stand-alone module (see respective data sheet) or together with the **UWLink-Adapter-Board** and the **UWLink Mainboard** as Interface to your Windows PC.

For that purpose the **TDA525X-Explorer** Windows Software may also be used to set the configuration registers and to read out the status registers of the **TDA525X** as well as of the **TDA525X**.

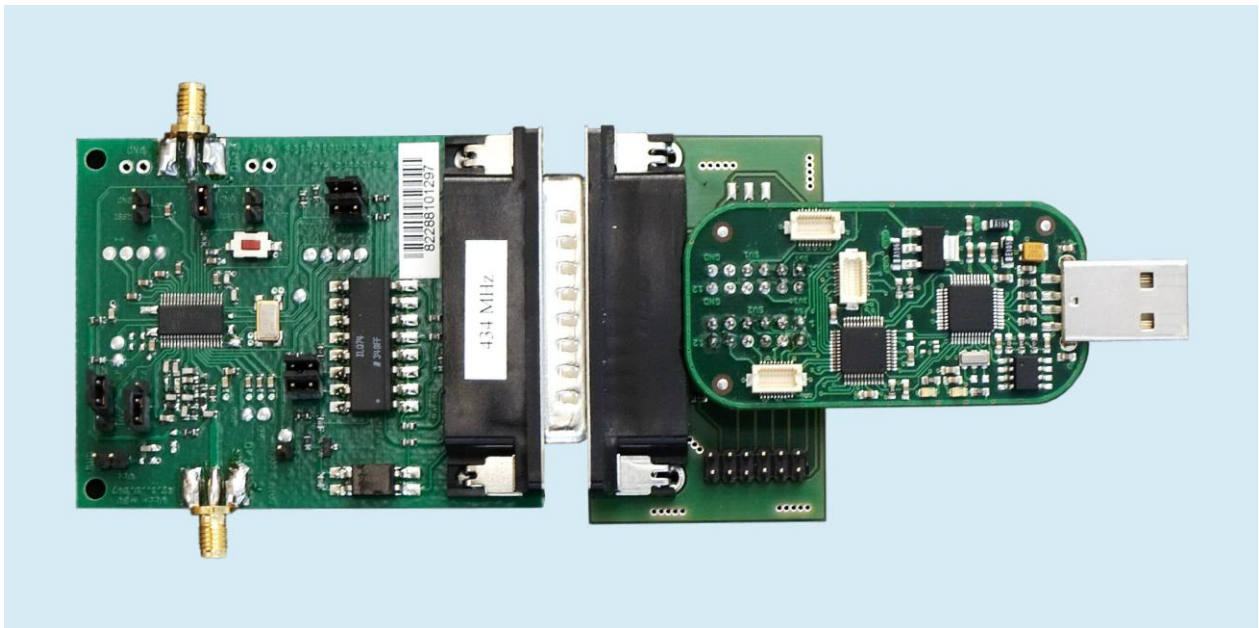


Figure 1: TDA525X-Board, -UWLink Adapter-Board, UWLink-Motherboard

TDA525X UWLink Adapter-Board with UWLink Mainboard as interface TDA525X-Board and Windows PC

2 Using the TDA525X-Board as stand-alone module

- Leave jumper X4, X11, X12, X19 and X20 open (see Figure 2)
- Select either RX-mode or TX-mode by setting the jumper of the RX/TX-multi-pin connector (X8) accordingly (see Figure 2 below or Figure 4-4 of the respective Data-Sheet).
- Select either ASK or FSK by setting the jumper of the ASK/FSK-multi-pin connector (X7) accordingly (see Figure 2 below or Figure 4-4 of the respective Data-Sheet).
- Apply a supply voltage of 3V (2.1V to 5V) to connector X3 (for polarity see Figure 3 below or Figure 4-4 of the Data-Sheet).
- Apply an antenna or RF-signal generator on the 50 Ω RF-connector (X1; see Figure 3 below or Figure 4-4 of the the Data-Sheet) if the RX-mode is selected (via RX/TX-Jumper). Use an ASK-modulated or FSK-modulated RF-signal according the mode selected by the jumper of the ASK/FSK-multi-pin connector.
- Apply an antenna or Spectrum-Analyzer to be able to measure the spectrum, for instance, on the 50 Ω RF-connector (X1; see Figure 3) if the TX-mode is selected (via RX/TX-Jumper).
CAUTION: Applying a signal, from a RF-signal generator for instance, in TX-mode could possibly damage the power amplifier output of the **TDA525X**!
- Connect the Data Input/Output (X2; see Figure 3) to an Oscilloscope, for instance, to be able to measure the data output signal, in case of RX-mode (via RX/TX-Jumper) is selected.
- Apply a data signal, a PRBS9-sequence or just a rectangular signal on the Data Input/Output (X2; see Figure 3) if TX-mode is selected. For data signal Low- and High-level see the Data Sheet.

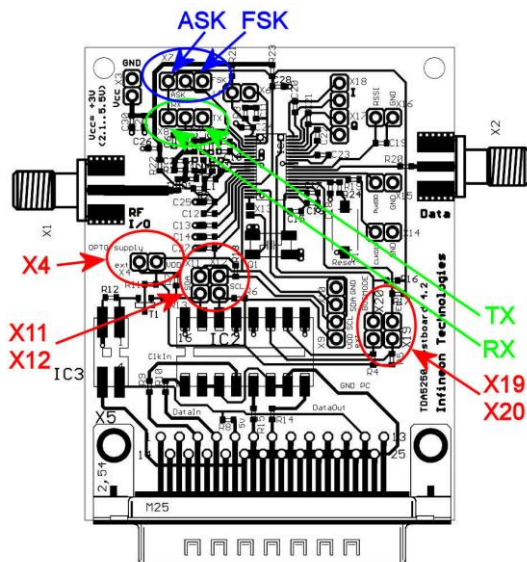


Figure 2: Jumpers

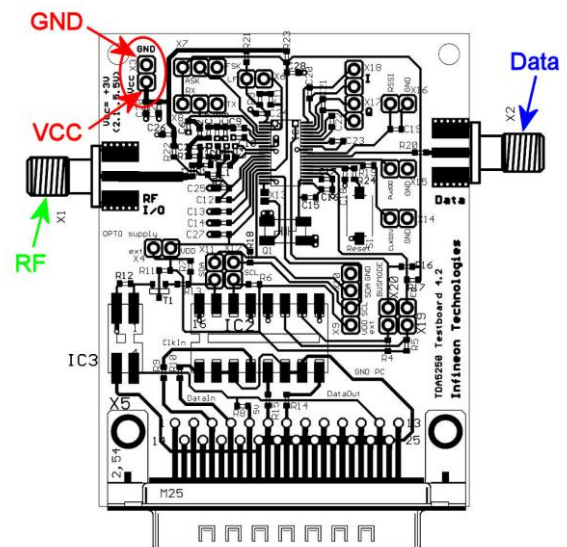


Figure 3: Connectors

3 Using the TDA525X UWLink Adapter-Board together with the UWLink Mainboard as interface between the TDA525X-Board and a Windows PC

Before using the UWLink Mainboard and TDA525X UWLink Adapter-Board as interface, the required software, which can be downloaded from the Infineon Web page (see link below), has to be installed.

Please follow this step-by-step approach when you start up your **TDA525X-UWLink-Set** for the first time:

Important Note: The **TDA525X Explorer** Windows Software requires the **DAS (Device Access Server)** and the **SIB-Server** services running in the background. Both are automatically installed while following the steps below.

Step 1 – Installation of the TDA525X-Explorer

- Go to www.infineon.com/TDA525X and download the latest **TDA525X-Explorer** Installation Package (e.g. **TDA525X_Explorer_E1.1.05.zip**)
- Extract the ZIP-archive to a temporary directory on your PC.
- Open the sub-directory **1_DAS** and execute **DAS_setup.exe** and follow the on-screen instructions.
- Execute **TDA525X_Explorer_E1.1.05.exe** and follow the on-screen instructions.
- Execute the **NextGenLoader** and start the installation of the **SIB-Server** by just double-clicking at the **SIB Server** button (see 0) and follow the on-screen instructions.



Figure 4: SIB-Server button

Step 2 – Usage of the TDA525X Explorer

- Start the **TDA525X Explorer** by double-clicking at the **TDA525X Explorer** button (see Figure 5).
- Click to **OPEN** in the **Wizard**-tab to start the communication (see Figure 6).
- Now you are ready to configure the **TDA525X**: Either by changing the settings in the **Wizard**-tab of the **TDA525X Explorer** (see Figure 7), or by changing the bit values of each register directly in the **Registers**-tab (see Figure 9). **CAUTION:** If you choose RX/TX and ASK/FSK “Register Controlled” (see Figure 8) it is strongly recommend to remove the jumper of the RX/TX-multi-pin connector and ASK/FSK-multi-pin connector to avoid conflicting hardware and software settings and harming of the **TDA525X!**

TDA525X UWLink Adapter-Board with UWLink Mainboard as interface TDA525X-Board and Windows PC

- Furthermore you can read the **SFR Status register** and **SFR ADC register** at the **Explore**-tab. See the **RSSI Voltage and Vcc Measurement**- and **Data valid decision**-fields in the **Explore**-tab (see Figure 10).
- The registers settings can be saved as config-file (*.spi.def) by clicking at the **“Save”**-button in the **Register**-tab on the one hand (see Figure 11). Already available config-files can be loaded by clicking at the **“File-Open”**-button on the other hand (see Figure 12)



Figure 5: TDA525X Explorer button

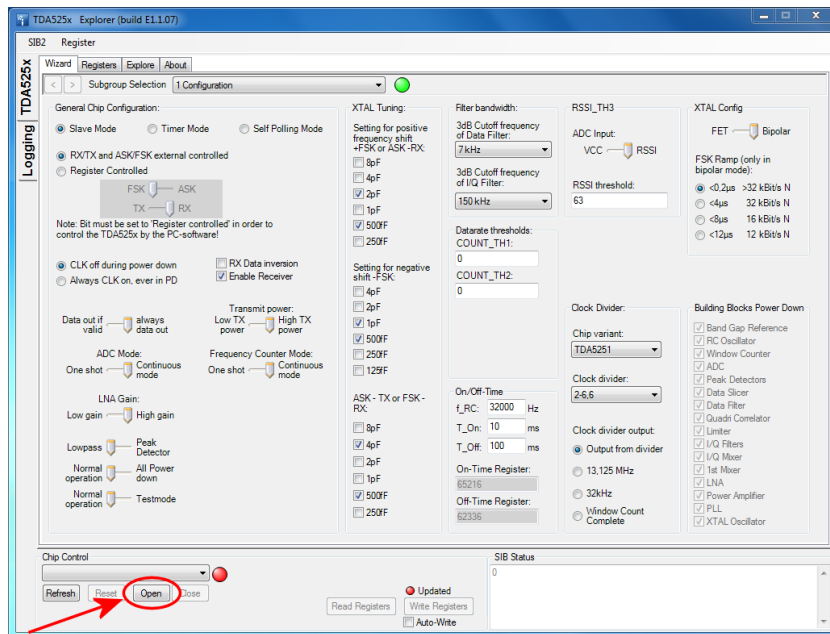


Figure 6: TDA525X Explorer, Open button

TDA525X UWLink Adapter-Board with UWLink Mainboard as interface TDA525X-Board and Windows PC

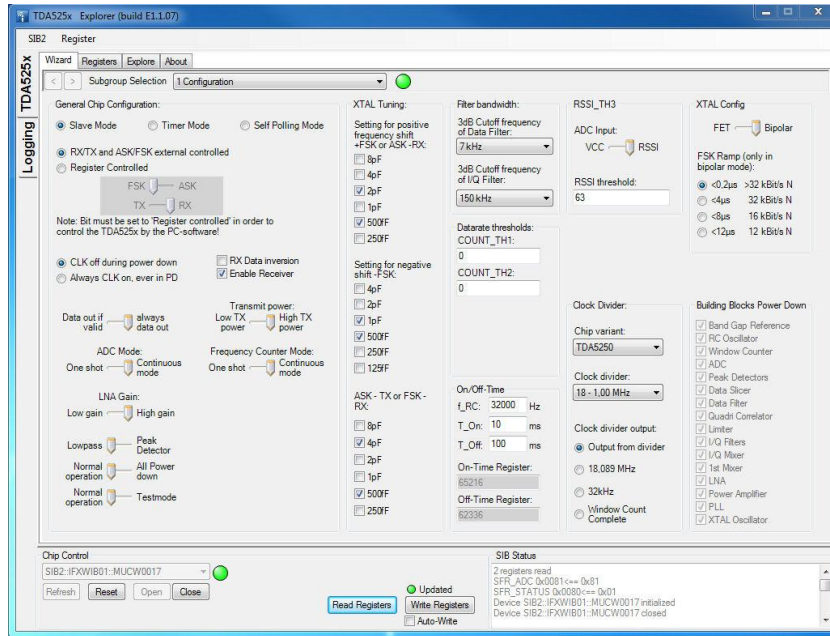


Figure 7: TDA525X Explorer, Wizard tab

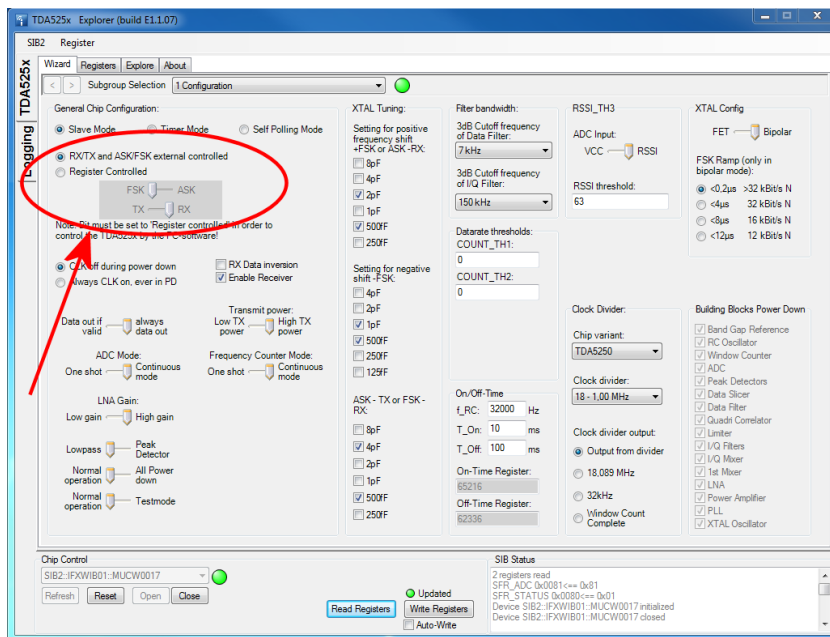


Figure 8: RX/TX and ASK/FSK external controlled or register controlled

TDA525X UWLink Adapter-Board with UWLink Mainboard as interface TDA525X-Board and Windows PC

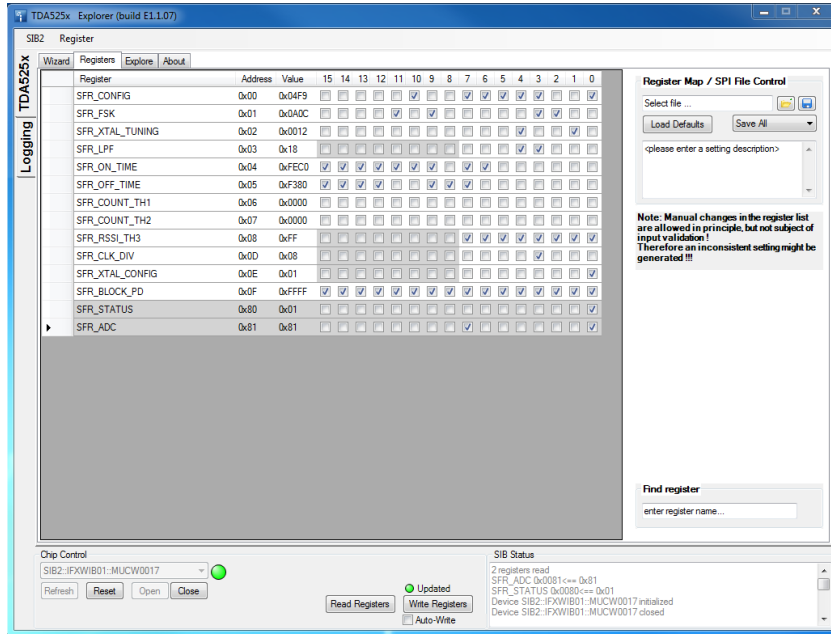


Figure 9: TDA525X Explorer, Register tab

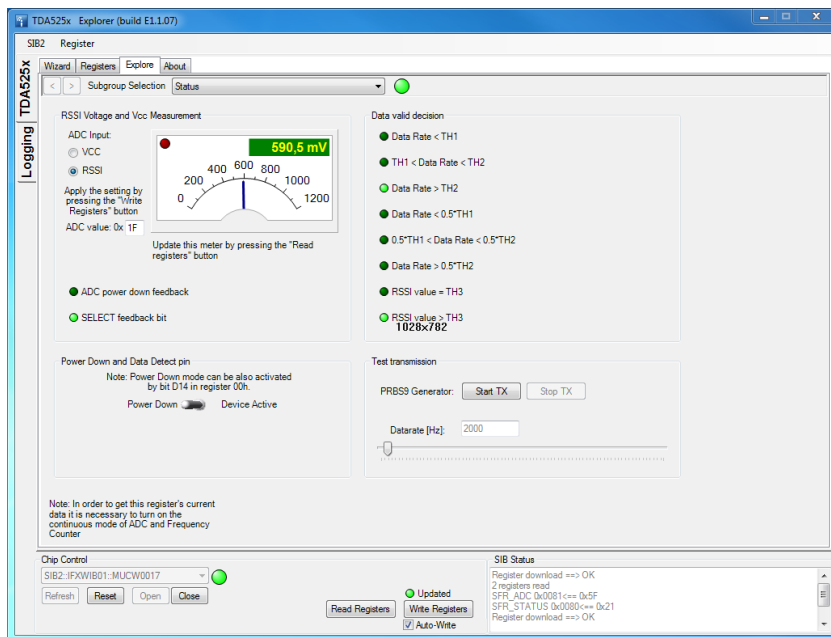


Figure 10: TDA525X Explorer, Explorer tab

TDA525X UWLink Adapter-Board with UWLink Mainboard as interface TDA525X-Board and Windows PC

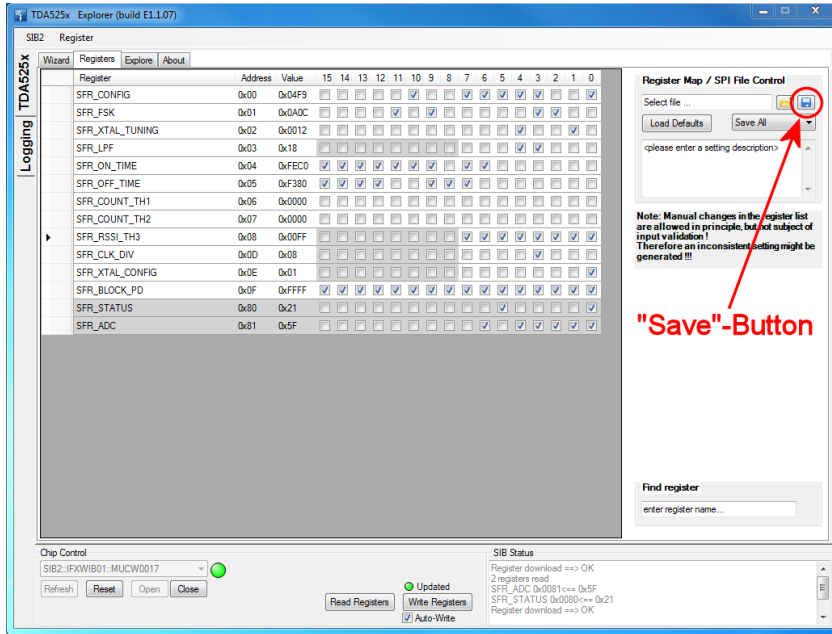


Figure 11: Save button

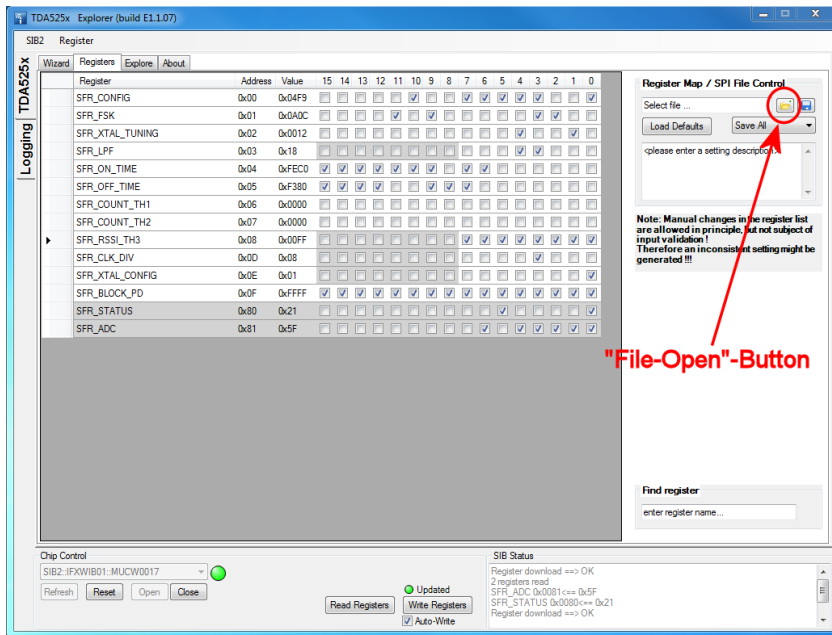


Figure 12: File-Open button

**TDA525X UWLink Adapter-Board with UWLink
Mainboard as interface TDA525X-Board and
Windows PC**

Step 3 – Configure the TDA525X Board by the TDA525X-Explorer via the USB connector of the PC

- Connect the **TDA525X Evaluation Board** to the **TDA525X UWLink Adapter-Board** and the **TDA525X UWLink Adapter-Board** to the **UWLink Mainboard**.
- Close jumper X4, X11, X12, X19 and X20 (see Figure 2).
CAUTION: If there is just a 1-pole pin connector instead of X4 the external power supply (typically 3V, see next instruction below) has also to be applied to this 1-pole pin connector.
- The **TDA525X Evaluation Board** has to be supplied by an external power supply of 3V (2.1V to 5V) via connector X3. For the polarity of X3 see also Figure 3.
- Connect the **UWLink Mainboard** to the USB-connector of your PC.
- Start the **TDA525X Explorer** by double-clicking at the **TDA525X Explorer** button (see Figure 5).
- Click to **OPEN** in the **Wizard**-tab to start the communication (see **Error! Reference source not found.**).
- It is strongly recommended to remove the jumper of the RX/TX-multi-pin connector and ASK/FSK-multi-pin connector before you select “RX/TX and ASK/FSK Register Controlled” (see 0) to avoid conflicting hardware and software settings and harming of the **TDA525X**! If you select “RX/TX and ASK/FSK external controlled” (see Figure 8) you have to set the jumper of the ASK/FSK- and RX/TX-multi-pin connector according the desired mode (see Figure 2).

- Apply an antenna or RF-signal generator on the 50 Ω RF-connector (X1; see Figure 3) if the RX-mode is selected. Use an ASK-modulated or FSK-modulated RF-signal according the selected mode.
- Apply an antenna or Spectrum-Analyzer to be able to measure the spectrum, for instance, on the 50 Ω RF-connector (X1; see Figure 3) if the TX-mode is selected (via RX/TX-Jumper).
CAUTION: Applying a signal, from a RF-signal generator for instance, in TX-mode could possibly damage the power amplifier output of the **TDA525X**!
- Connect the Data Input/Output (X2; see Figure 3) to an Oscilloscope, for instance, to be able to measure the data signal, in case of RX-mode (via RX/TX-Jumper) is selected.
- Apply a data signal or just a rectangular signal on the Data Input/Output (X2; see Figure 3) if TX-mode is selected. For data signal Low- and High-level see Data Sheet.

www.infineon.com

Published by Infineon Technologies AG