

ZX50 Series IP Phone System

For Small and Medium Business



Quick Installation Guide

ZX50 Series IP Phone System

Quick Installation Guide

Table of Contents

1	Package Contents.....	3
2	Hardware Installation.....	4
	2.1 LED Definitions.....	4
	2.2 Physical Connection.....	6
3	Basic System Configuration.....	7
	3.1 Web Login.....	7
	3.2 Configuration the WAN.....	8
	3.3 Remote Management.....	10
	3.4 While IP Address be changed or forgotten admin password.....	11
4	Further Configuration.....	12

1. Package Contents

Thank you for purchasing ZYCOO IP phone system. These are the items included with your IP PBX purchase:



IP PBX



Power Adaptor



QuickInstallation Guide



Antenna(Only for ZX50-AG42/G4)



Warranty Card

2. Hardware Installation


The followings are instructions for setting up ZYCOO ZX50. Refer to the illustration and follow the simple steps below to quickly install your IP phone system.

2.1 LED Definitions


Mark	Function	Status	Description
PWR	Power Status	On Off	Power On Power Off
SYS	System Status	On Off	System Working System Failed
WAN	WAN Interface Status	Wink Off	Data Exchanging No Data Exchanging
LAN	LAN Interface Status	Wink Off	Data Exchanging No Data Exchanging
1-4/8	Analog Modules Status	Green Red Off	FXS Channel FXO Channel Failed
G1-G4	GSM Modules Status	Green Off	GSM Channel Failed
TE1-TE4	BRI Status	Red Green	BRI Connected Calling
ALARM	E1 Status	On Off	E1 Not Connected E1 Connected
LINK	E1 Status	On Off	E1 Connected E1 Not Connected

1-4/8 are LED marks of ZX50-A4/A8
G1-G4 are LED marks of ZX50-AG42/G4
TE1-TE4 are LED marks of ZX50-B4
ALARM、LINK are LED marks of ZX50-AE41


2.2 Physical Connection

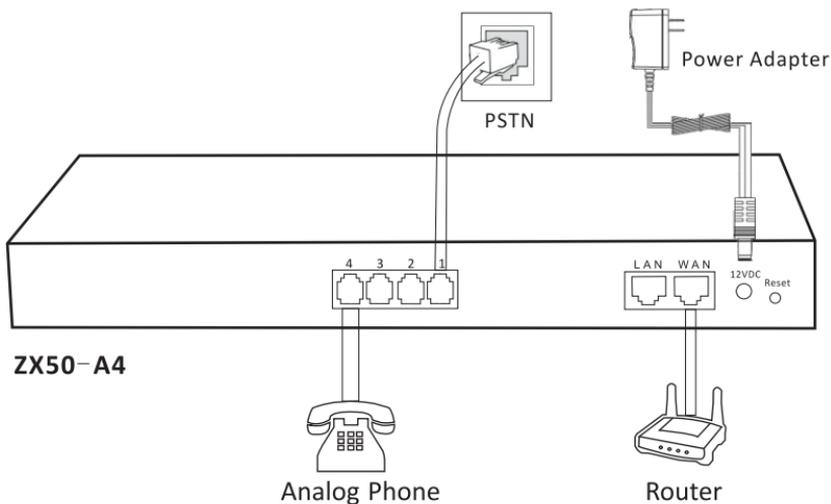


ZX50-A4




ZX50-A8



ZX50-AE41



ZX50-B4

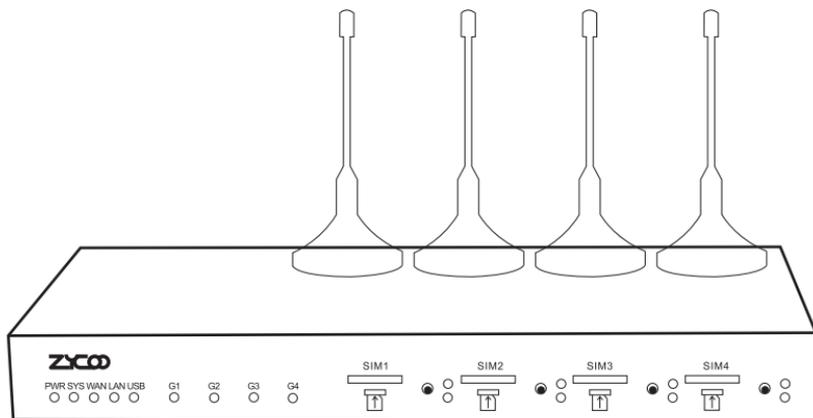

ZX50-G4

FXO port is connected to PSTN

FXS port is connected to analog phone

E1 Port Connected to PRI


TE4 - TE1 Port Connected to BRI

SIM1 - SIM4 for SIM Card

3. Basic System Configuration

3.1 Web Login

- Step1.** Connect a computer to a LAN port on the ZX50. IP address is usually in the 192.168.10.x range.
- Step2.** Start a web browser. To use the user interface, you need a PC with Internet Explorer(version 7.0 and higher),Firefox,Chrome.
- Step3.** Enter the default IP address of the ZX50:192.168.10.100:9999 into the URL address box.
- Step4.** Enter the default user name admin and the default password admin. Then click login to enter Web-based user interface.

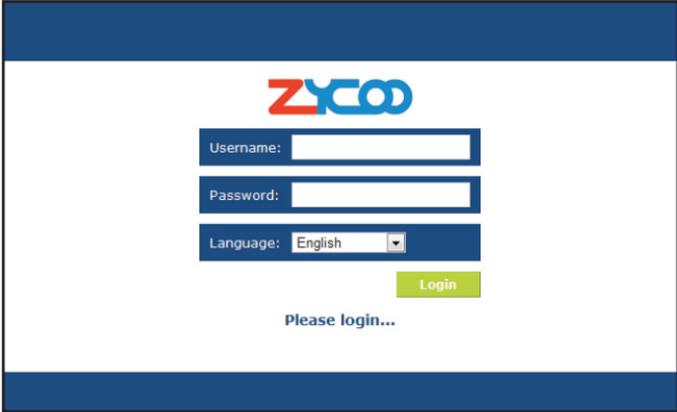

ZYCOO

Username:

Password:

Language: English

Please login...

Default WAN IP: 192.168.1.100:9999
Default LAN IP: 192.168.10.100:9999
LAN Supper IP: 169.254.1.254/255.255.0.0
Default Name: admin
Default Password: admin

3.2 Configuration the WAN

Step1. Go to System -> Network & Country



WAN Port Setup	
IP Assign:	Static ▾
Hostname:	IPPBX
IP Address:	192.168.1.100
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.1
Primary DNS:	
Alternate DNS:	
LAN Port Setup	
IP Address:	192.168.10.100
Subnet Mask:	255.255.255.0
Tone Zone Setting	
Country:	CN - China ▾

Step2. Configuring your WAN information

There are three types of WAN connection. They are **Static IP**, **DHCP**, **PPPoE** (Point-to-Point Protocol over Ethernet). You can find detail setting process in the user manual.

WAN Port Setup	
IP Assign:	Static
Hostname:	Static
IP Address:	.100
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.1
Primary DNS:	
Alternate DNS:	
HTTP Port:	9999
Remote Administration:	<input checked="" type="checkbox"/>

LAN Port Setup	
IP Address:	192.168.10.100
Subnet Mask:	255.255.255.0

3.3 Remote Management

The function can enable users to manage the IP Phone system at remote sites and to allow technical person to assist you in solving network problem.

Step1. Go to **Network & Country** -> **HTTP port and Remote Administration**.

WAN Port Setup	
IP Assign:	Static
Hostname:	IPPBX
IP Address:	192.168.1.100
Subnet Mask:	255.255.255.0
Gateway:	192.168.1.1
Primary DNS:	
Alternate DNS:	
HTTP Port:	9999
Remote Administration:	<input checked="" type="checkbox"/>

LAN Port Setup	
IP Address:	192.168.10.100
Subnet Mask:	255.255.255.0

Tone Zone Setting	
Country:	CN - China

Step2. Mark Remote Administration to active it. And then enter the control port you want to use. The default value is 9999.

Step3. Click Apply to save the configuration. And you can type the <http://WAN IP address>: to access the ZX50 from the remote side.

For security reason, please change and memorize the new password after this first setup.

3.4 While IP Address be changed or forgotten admin password

To reset the IP address to the default IP Address “192.168.10.100” (LAN) or reset the login password to default value. Press the hardware reset button at the front panel more then 5 seconds. After the device is rebooted, you can login the management WEB interface within the same subnet of 192.168.10.xx.

After press the “Reset” button, all the system data will reset to default, if possibility, back up the config file before reset.

4. Further configuration

Thank you for purchase ZYCOO products. The above steps introduce simple configuration for ZX50. For further configuration, please refer to the user manual. If you have other questions, please contact the local dealer or distributor where you purchased this product.

You can also browse our online FAQ resource at the ZYCOO website at first to check if it's helpful to solve your issue. If you need more support information, please contact ZYCOO support team.

ZYCOO online FAQ :
<http://www.zycoo.com/support>

Support team mail address :
support@zycoo.com

Copyright © ZYCOO Co., Ltd. 2012.

ZYCOO