

NSA12/15-TX01B
NSA12/15-TX01S
NSA12/15-TX01B-E
NSA12/15-TX01B-02E
NSA12/15-TX01S-E
NSA12/15-TX01S-02E
NSA15-TX01B-01E
NSA15-TX01S-01E

NSA-Series Industrial PC

USER'S MANUAL

OMRON

NSA-Series Industrial PC

NSA12/15-TX01B

NSA12/15-TX01S

NSA12/15-TX01B-E

NSA12/15-TX01B-02E

NSA12/15-TX01S-E

NSA12/15-TX01S-02E

NSA15-TX01B-01E

NSA15-TX01S-01E

User's Manual

Introduction

The NSA-series Industrial PC is an industrial, panel-mountable computer equipped with a Celeron® M Processor and featuring a touch panel and display.

Be sure to read and understand the functions and performance specifications in this manual prior to using it, and operate it as described herein.

Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing FA systems into production facilities
- Personnel in charge of designing FA systems
- Personnel in charge of managing FA systems and facilities

Notice

This manual provides information for connecting and setting up an NSA-series Industrial PC. Be sure to read this manual before attempting to use it, and keep the manual close at hand for reference during operation.

© OMRON, 2006

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Read and Understand this Manual

Please read and understand this manual before using the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this manual.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCTS ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

ERRORS AND OMISSIONS

The information in this manual has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

Safety Precautions

Safety-related Indications and Their Meanings

The following precautionary indications and symbols are used in this manual to aid in the safe usage of the NSA-series Industrial PC. These precautions contain important safety information. Be sure to observe them carefully.

The indications and symbols used herein, and their meanings, are as listed below.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. Additionally, there may be severe property damage.



Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.

Precautions for Safe Use

Indicates actions that should be done, or avoided, for the safe use of this product.

Precautions for Correct Use

Indicates actions that should be done, or avoided, to prevent operating failure or malfunction of this product, or to prevent adverse effects on the performance or functions of this product.

Note

Notes within the text of this manual indicate safety-related points and information that are equivalent in importance to those included in the *Precautions for Safe Use* sections.



WARNING Failure to read and understand the information provided in this manual may result in personal injury or death, damage to the product, or product failure. Please read each section in its entirety and be sure you understand the information provided in the section and related sections before attempting any of the procedures or operations given.

Symbols



Electrical Shock Caution

Indicates possibility of electric shock under specific conditions.



General Prohibition

Indicates non-specific general prohibitions.



Disassembly Prohibition

Indicates prohibitions when there is a possibility of injury, such as from electric shock, as the result of disassembly.



Mandatory Action

Indicates a mandatory action with the specific contents indicated in the circle and described in the text.



General Caution

Indicates non-specific general cautions, warnings, and dangers.

WARNING



While using the NSA-series Industrial PC observe all precautions given in this manual under *WARNING, Precautions for Safe Use, and Precautions for Correct Use*.



A responsible person must confirm that all installation, inspection, and maintenance work for the NSA-series Industrial PC is performed correctly. Here, “responsible person” is a person who has the qualifications, authority, and responsibility to ensure safety during system design, installation, operation, maintenance, and disposal.



A responsible person with sufficient understanding of the installed system must perform confirmations during and after installation of the NSA-series Industrial PC.



Do not attempt to take the NSA-series Industrial PC apart or touch the terminal blocks or the inside of the NSA-series Industrial PC while the power is being supplied. Doing so may result in electric shock.



Do not touch the power supply input terminals with wet hands. Doing so may result in electric shock or injury.



Do not disassemble, repair, or modify the NSA-series Industrial PC. Required safety functions may be lost.



Do not subject the NSA-series Industrial PC to water. Do not use the NSA-series Industrial PC where it may be subjected to water or near water. If electric components become wet, fire may occur due to electric shock, earth leakage, or short circuits.



If the NSA-series Industrial PC produces smoke, abnormal odors, or abnormal sounds, turn OFF the power supply immediately and disconnect the power supply input connector. If you continue to use the NSA-series Industrial PC, short-circuits may result in fire or electric shock.



Do not damage the power cable. Do not damage the cable or bend the cable past its natural bending radius. Damage to the cable may cause electric shock or fire.



Do not use the input functions of the NSA-series Industrial PC, such as the touch switches, for applications that involve human life or serious property damage, or for emergency stop switches.



Do not simultaneously press two or more points on the touch panel at the same time. If two or more points are touched at the same time, a switch located at the center point between the points may operate.

Caution



Do not place objects near the ventilation holes or block the ventilation holes. The NSA-series Industrial PC may malfunction.



Turn OFF the power supply before doing any work on the NSA-series Industrial PC. The case and the heat dissipation panel on the rear surface of the NSA-series Industrial PC become very hot during operation. Do not touch them while the power supply is turned ON. Also, turn OFF the power and wait for the NSA-series Industrial PC to cool down before doing any maintenance work on the NSA-series Industrial PC. When you turn OFF the power supply, either turn OFF the external input power source or disconnect the power supply input connector.



Observe the specified specifications and the environmental conditions. Observe all specified values, including those for the power supply voltage, frequency, and capacity. Using the NSA-series Industrial PC under any other conditions may cause electric shock, fire, or injury.

Precautions for Safe Use

Observe the following precautions when using the NSA-series Industrial PC.

1. When you unpack the NSA-series Industrial PC, check carefully for any external scratches or other damage. Also, shake the NSA-series Industrial PC gently and check for any abnormal sounds.
2. The NSA-series Industrial PC must be installed in a control panel.
3. The panel must be a type 1 enclosure.
4. The mounting panel must be between 1.6 and 4.0 mm thick. Tighten the Mounting Brackets evenly to a torque of between 0.5 and 0.6 N·m to maintain water and dust resistance. Make sure the panel is not dirty or warped, and that it is strong enough to hold the NSA-series Industrial PC.
5. Do not let metal particles enter the NSA-series Industrial PC when preparing the panel.
6. Use the NSA-series Industrial PC in an environment with a pollution degree of 2 or better.
7. Do not connect an AC power supply to the DC power supply terminals.
8. Use a DC power supply with reinforced or double insulation and minimal voltage fluctuation. The power supply must be capable of maintaining a stable output for momentary power interruptions in the input of up to 10 ms.
 - Rated power supply voltage: 24 VDC (Allowable range: 20.4 to 27.6 VDC)
 - Capacity: 80 W min. for NSA12 and 100 W min. for NSA15
9. Do not perform a dielectric voltage test.
10. Connect the power supply to the power supply terminal block using a twisted-pair cable with stranded copper wire between AWG16 and AWG12 with a rated temperature of 75°C. Tighten the terminal screws to a torque of 0.5 to 0.8 N·m (5 to 7 lb·in). Be sure the screws are properly tightened.
11. Ground the NSA-series Industrial PC properly to prevent malfunction due to noise.
12. Do not touch the components mounted on the boards with your bare hands. Discharge static electricity from your body in advance.
13. Make sure that the power supply is OFF before you connect or disconnect any cable.
14. Always hold the power supply connector by the housing when connecting or disconnecting it. If you pull on the cable when connecting or disconnecting the connector, heating, fire, or electric shock may occur.
15. Always tighten the screws on the connector after connecting the communications cable. Tighten the screws for COM port 1 and 2 to a torque of 0.23 N·m.
16. The maximum tensile load for cables is 30 N. Do not apply loads greater than this.
17. Confirm the safety of the system before turning ON or OFF the power supply.

18. The entire system may stop depending on how the power supply is turned ON or OFF. Turn ON and OFF the power supply according to the specified procedures.
19. Always reset the power supply after changing switch settings.
20. Do not perform any of the following operations while the Memory Card is being accessed.
 - Turning OFF the power supply to the NSA-series Industrial PC
 - Removing the Memory CardAlways follow the specified procedure when removing the Memory Card.
21. Do not press a touch switch with a force greater than 30 N.
22. Do not operate the touch switches with a screwdriver or any other tool.
23. Press touch switches only after confirming the safety of the system.
24. Do not quickly and consecutively press touch switches. The NSA-series Industrial PC may not be able to read the inputs. Confirm the results of one input before pressing a touch switch again.
25. Do not accidentally press touch switches when the backlight is not lit or when the display does not appear. Press touch switches only after confirming the safety of the system.
26. Do not connect a USB connector to any device that is not applicable.
27. Before connecting the USB connector to a device, check the exterior of the device and make sure that the device is free of damage.
28. Commercially available USB hubs do not necessarily have the same basic specifications as the NSA-series Industrial PC. The NSA-series Industrial PC may not operate properly in environments subject to noise or static electricity. If you use a USB hub, perform sufficient countermeasures for noise and static electricity and do not install the USB hub near sources of noise or static electricity.
29. When installing a Battery, make sure the Battery is the correct model and install it correctly.
30. Do not disassemble the Battery or short-circuit the terminals.
31. Dispose of any battery that has been dropped on the floor or otherwise subjected to excessive shock. Batteries that have been subjected to shock may leak if they are used.
32. Local ordinances sometimes apply to disposal of the NSA-series Industrial PC or Battery. Dispose of the NSA-series Industrial PC and Battery according to local ordinances as they apply.



廢電池請回收

33. Never use volatile solvents, such as paint thinner, benzene, or chemical wipes.
34. The backlight in the NSA-series Industrial PC contains mercury. Do not dispose of the NSA-series Industrial PC together with other waste to be sent to a disposal site. Dispose of the NSA-series Industrial PC according to local ordinances as they apply.

35. The backlight in the NSA-series Industrial PC cannot be replaced by the user. Contact your OMRON representative to replace the backlight.
36. If there is a chance that the NSA-series Industrial PC may come into contact with water, inspect the installation periodically.
37. The NSA-Series Industrial PC uses an analog touch panel. The positions of touch switches may change with time. If the touch switches are too far out of position, calibrate them.
38. Waterproof and oil-proof performance may be lost if the front sheet is peeling or cracked. Do not use the NSA-Series Industrial PC if the front sheet is peeling or cracked.
39. Depending on the application environment, the rubber packing may deteriorate, shrink, or harden. Inspect and replace it periodically.
40. Thoroughly test any application programs created by users or third-party vendors to confirm that they operate properly before actually using them on the NSA-Series Industrial PC. OMRON cannot assume any responsibility for programs created by any party other than OMRON, nor for the results of using such programs.
41. Windows XP Embedded is an OS designed for embedded use. Some application programs that operate on the Windows XP Professional OS may not operate on the Windows XP Embedded OS of an NSA-series Industrial PC.
42. Do not use the NSA-Series Industrial PC in locations that are subject to oil.
43. Do not place the Battery into a fire or heat the Battery.

Precautions for Correct Use

Install the NSA-series Industrial PC correctly, as described in this manual.

- Do not operate the NSA-Series Industrial PC in the following locations:
 - Locations subject to extreme changes in temperature
 - Locations that exceed the specified values for temperature and humidity
 - Locations subject to high humidity and condensation
 - Locations subject to splashing chemicals
 - Locations subject to splashing oil
 - Locations subject to corrosive or flammable gases
 - Locations subject to shock or vibration
 - Locations outdoors directly subject to wind and rain
 - Locations subject to strong ultraviolet light
 - Locations subject to excessive dust and dirt
 - Locations subject to direct sunlight
- Take appropriate and sufficient countermeasures when installing systems in the following locations:
 - Locations subject to static electricity or noise from other devices
 - Locations subject to strong electromagnetic fields
 - Locations that are near power supply lines
 - Locations subject to possible exposure to radioactivity

■ Precautions

- LCD Panel Precautions
 - There may be inconsistencies in the brightness of the LCD panel depending on what is displayed and the contrast setting. This is not a malfunction.
 - There may be small spots on the display. This is not a malfunction.
 - The display color may appear to change if the display is viewed outside the viewing angle. This is a basic characteristic of LCDs.
 - There may be an afterimage if the same image is displayed for an extended period of time.
- Windows XP Embedded
 - Windows components cannot be added and deleted by using the menu command under *Add or Remove Programs* from the *Control Panel*.
 - The Windows Updates for Windows XP Professional cannot be installed.
 - The service packs for Windows XP Professional cannot be installed.

Conformance to EC Directives

This product is EMC compliant.

● Concepts

OMRON products are electronic devices that are incorporated in machines and manufacturing installations. OMRON Industrial PCs conform to the related EMC Directives (see note) so that the devices and machines into which they are built can more easily conform to EMC directives. However, customers may use a wide variety of equipment and manufacturing installations. Therefore the customer must check whether the Directives are satisfied for the actual system. EMC-related performance will vary depending on the configuration, wiring, and other conditions of the equipment or control panel in which the Industrial PC is installed. The customer must, therefore, perform final checks to confirm that the overall machine or device conforms to EMC standards.

Note: Applicable EMC (Electromagnetic Compatibility) standards are as follows:

EMS (Electromagnetic Susceptibility): EN 61131-2

EMI (Electromagnetic Interference): EN 61131-2

(EN 61131-2 radiated emission: 10-m regulations)

● Conformance to EC Directives

NSA-series Industrial PCs conform to EC Directives. To ensure that the machine or device in which the NSA-series Industrial PC is used complies with EC Directives, the Industrial PC must be installed as follows:

- The NSA-series Industrial PC must be installed in a control panel.
- You must use reinforced insulation or double insulation for the DC power supply and the DC power supply must have minimal voltage fluctuations and provide a stable output even if the power supply input is interrupted for 10 ms.
- NSA-series Industrial PCs complying with EC Directives also conform to the Common Emission Standard (EN 61131-2). Radiated emission characteristics (10-m regulations) may vary depending on the configuration of the control panel used, other devices connected to the control panel, wiring, and other conditions. You must therefore confirm that the overall machine or equipment complies with EC Directives.
- This is a class A product. It may cause radio interference in residential areas, in which case the user may be required to take adequate measures to reduce interference.
- Use a PCI Board that complies with the EMC Directive. If a PCI Board that does not comply with the EMC Directive is used, there are certain measures that the user must take.
- For the Memory Card, use only a CF Card that has the CE Marking.

Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

Cat. No.	V233-E1-06
----------	------------

↑
Revision Code


Revision code	Date	Revision content
01	January 2006	Original production
02	September 2006	<ul style="list-style-type: none"> • Added information on the NSA12-TX01S(-E) Toolbar Model and 15-inch Models NSA15-TX01B(-E) and NSA15-TX01S(-E). • Added descriptions of the RAS Utility functions. • Added precautions.
03	January 2007	Page 1-3: Changed capacity and service life specifications. Page Appendix-23: Changed the writing lifetime from 300,000 cycles to 100,000 cycles.
04	February 2008	<ul style="list-style-type: none"> • Added NSA15-TX01B-01E and NSA15-TX01S-01E. • Added starting and exiting BIOS setup. • Added troubleshooting and accessory list. • Deleted the Timer Start function • Corrected errors and added information including <i>Appendix 6</i>.
05	May 2008	Page 4-12: Adding information on Shutdown OS and Reboot OS Buttons at bottom of page.
06	March 2011	<ul style="list-style-type: none"> • Added NSA12/15-TX01B-02E and NSA12/15-TX01S-02E. • Rewrote the PLP material at the front of the manual. • Added information on conformance to EC Directives. Page 2-3: Changed labels in top figure. Page 3-11: Added material to the bottom of the page.

Checking the Contents of the Package


The NSA-series Industrial PC is shipped together with a number of accessories. When opening the package, make sure that all of the parts shown below are included and in good condition.

In the event that any of these parts is missing or damaged, contact the sales representative from whom you purchased the product.

Main Body

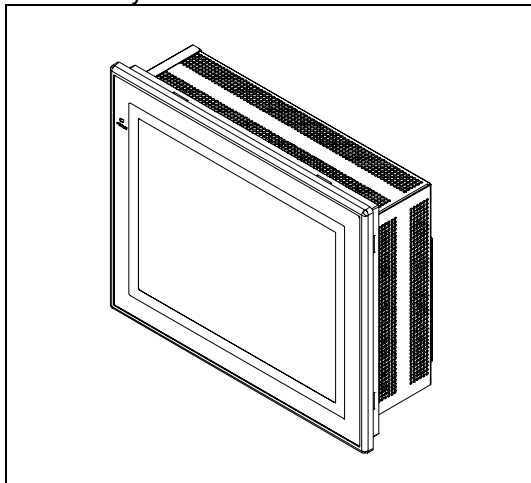

Mounting Brackets (8)

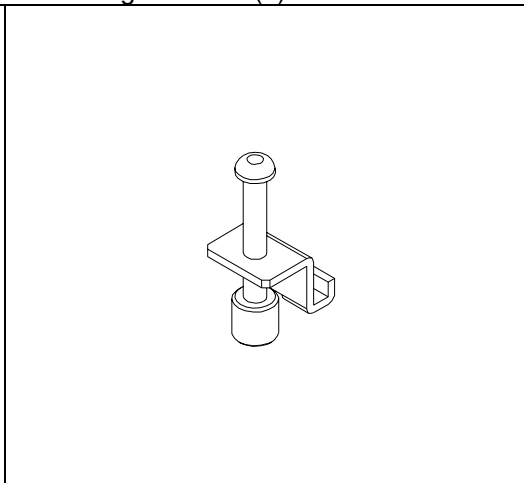

OS (Operating System) License

Instruction Sheet

DVD (for recovery)

Section 1	Overview and Specifications	1
Section 2	Nomenclature	2
Section 3	Installing the NSA-series Industrial PC and Connecting Peripheral Devices	3
Section 4	RAS Functions	4
Section 5	Maintenance	5
Appendix		Appendix

Table of Contents

Introduction	v
Intended Audience	v
Notice	v
Safety Precautions	x
Safety-related Indications and Their Meanings	x
Precautions for Safe Use	xiv
Precautions for Correct Use	xvii
Conformance to EC Directives	xviii
Revision History	xix
Checking the Contents of the Package	xx
Table of Contents	xxiii
 Section 1 Overview and Specifications	 1-1
1-1 Overview	1-2
1-1-1 Overview	1-2
1-1-2 Features	1-2
1-2 Specifications	1-4
1-2-1 Ratings and Specifications	1-4
1-2-2 General Specifications	1-5
1-2-3 Dimensions and External Appearance	1-8
 Section 2 Nomenclature	 2-1
2-1 Nomenclature	2-2
2-1-1 Front Panel	2-2
2-1-2 Rear Panel	2-2
2-1-3 Connectors and Interfaces	2-3
 Section 3 Installing the NSA-series Industrial PC and Connecting Peripheral Devices	 3-1
3-1 Basic Operating Procedures	3-2
3-2 Installing a PCI Board and Setting the DIP Switch	3-4
3-3 Installing the NSA-series Industrial PC	3-10
3-3-1 Environment	3-10
3-3-2 Installing the NSA-series Industrial PC in a Control Panel	3-11
3-3-3 Connecting the Power Supply	3-12
3-3-4 Connecting the Grounding Wire	3-13

3-4	Starting the Industrial PC and Procedure after Power Interruption	3-15
3-4-1	Operation	3-15
3-4-2	Operating Sequence for the External Power Supply	3-16
3-4-3	Installation Procedure	3-17
3-4-4	Removal Procedure	3-18
3-5	Adjusting the Touch Panel and Display	3-19
3-5-1	Calibrating the Touch Panel	3-19

Section 4 RAS Functions..... 4-1

4-1	RAS Function Details.....	4-2
4-1-1	What Is the RAS Solution for OMRON Industrial PCs?	4-2
4-1-2	Monitoring and Auto-recovery	4-2
4-1-3	Logging Function and Log Analysis Function.....	4-4
4-1-4	Architecture.....	4-4
4-2	Special RAS Board Functions	4-5
4-2-1	Special RAS Board Functions	4-5
4-2-2	Setting Procedure	4-5
4-3	Motherboard RAS Functions	4-7
4-3-1	Standard PC RAS Data	4-7
4-3-2	Unique RAS Functions	4-7
4-3-3	Setting Procedure	4-9
4-4	RAS Utility Functions.....	4-10
4-4-1	RAS Utility Functions	4-10
4-4-2	Setting the Failure Notification Function.....	4-10
4-4-3	Checking the PC's Operating Status using the Status Monitor	4-13
4-4-4	Log Viewer (Filter and Find)	4-14

Section 5 Maintenance 5-1

5-1	Maintenance	5-2
5-1-1	Data Backup	5-2
5-1-2	Spare Units	5-2
5-1-3	Backlights (LCD Module)	5-2
5-1-4	Batteries.....	5-3
5-2	Cleaning and Inspecting	5-5
5-2-1	Cleaning.....	5-5
5-2-2	Inspecting	5-5
5-3	Troubleshooting Guide	5-7
5-3-1	Remedies for Problems	5-7

Appendix

Appendix 1 BIOS Setup	Appendix-2
Appendix 1-1 Using the Setup Menu.....	Appendix-2
Appendix 1-2 Screen Configuration	Appendix-3
Appendix 1-3 BIOS Setup Menu Keys	Appendix-3
Appendix 1-4 Menu Configuration.....	Appendix-4
Appendix 1-5 Main Menu.....	Appendix-5
Appendix 1-6 Advanced Menu	Appendix-8
Appendix 1-7 Intel Menu.....	Appendix-15
Appendix 1-8 Security Menu	Appendix-17
Appendix 1-9 Power Menu	Appendix-18
Appendix 1-10 Boot Menu	Appendix-19
Appendix 1-11 Exit Menu	Appendix-20
Appendix 2 Using the Enhanced Write Filter	Appendix-21
Appendix 2-1 About the EWF Function	Appendix-21
Appendix 2-2 Confirming the Operating State of the EWF Function.....	Appendix-21
Appendix 2-3 Enabling the EWF Function.....	Appendix-22
Appendix 2-4 Updating Data on the DOM When the EWF Function Is Enabled	Appendix-22
Appendix 2-5 Disabling the EWF Function.....	Appendix-23
Appendix 2-6 Precautions.....	Appendix-23
Appendix 2-7 Reference	Appendix-24
Appendix 3 Precautions for Changing Factory Settings for Windows XP Embedded	Appendix-25
Appendix 4 Connecting an NE1S-Series CPU Unit.....	Appendix-26
Appendix 5 Accessories.....	Appendix-28
Appendix 6 Using Virtual Memory.....	Appendix-29
Appendix 6-1 Setting and Deleting the Paging File	Appendix-29

Section 1

Overview and Specifications

1-1 Overview

1-1-1 Overview

The NSA-series Industrial PC is a panel-mountable computer equipped with a Celeron® M Processor and featuring a touch panel (input), display (output), and RAS (reliability, availability, serviceability) functions.

1-1-2 Features

■ High-speed CPU and Chipset with Integrated Graphic Core

The NSA-series Industrial PC is equipped with a 1.3 GHz Celeron® M Processor that has a built-in 512-Kbyte L2 cache. It also features a chipset with an integrated graphic core that produces sharp images and vivid, realistic graphics. The NSA-series Industrial PC maintains optimal performance through distributed processing that makes efficient and balanced use of both the graphics and system memory.

■ High-performance Display

The XGA color LCD featured in the NSA-series Industrial PC is a high-contrast, high-resolution TFT display.

■ Thin Profile

Even when the display section is included, an NSA-series Industrial PC (NSA12 models) has a thin profile with a thickness of only 100 mm.

■ Waterproof Construction

The front panel is rated the equivalent of IP65 for waterproofing.

■ Network Functions

Network connection is quick and easy because each NSA-series Industrial PC comes with a 10 Base-T/100 Base-TX Ethernet Connector as standard equipment.

■ DiskOnModule (DOM) Storage Drive

The vibration and shock resistance of the NSA-series Industrial PC is greatly improved because it features a DOM storage drive that uses non-volatile flash memory in place of a conventional hard disk drive.

■ Built-in Expandability

Two PCI Board slots have been installed to facilitate system expansion. Two serial ports and two USB ports are also provided as standard equipment.

■ Touch Panel for Pointing Device Use

The NSA-series Industrial PC uses an analog touch panel to allow highly intricate operations.

■ RAS Functions

In addition to standard PC RAS functions, the NSA-series Industrial PC is provided with other unique RAS functions as standard equipment for even greater system reliability.

■ Fanless Design

A fanless air-cooled design was devised for the NSA-series Industrial PC to eliminate concerns about cooling fan failure.

■ High Reliability

The diskless, fanless design and unique RAS functions ensure high reliability for systems in which the NSA-series Industrial PC is used.

■ Windows XP Embedded

Windows XP Embedded is an OS for embedded use. This OS includes an Enhanced Write Filter for better reliability. Refer to *Appendix 2 Using the Enhanced Write Filter* for more information.

1-2 Specifications

1-2-1 Ratings and Specifications

Item		Specifications
OS		Preinstalled Windows XP Embedded
Processor		1.3 GHz Intel Celeron® M Processor
Storage device	Type	DiskOnModule (flash memory)
	Capacity	2 or 4 Gbytes (See notes 6 and 7.)
	Service life (write cycles)	100,000 cycles to the same sector
Memory	Main memory	512-Mbyte or 1-GB DDR-SDRAM (No-ECC) (See note 8.)
	Cache memory	512 Kbyte Level 2 cache memory (built into the CPU)
Display panel	Type	TFT color LCD
	Size	NSA12: 12.1 inches, NSA15: 15.0 inches
	Resolution	1024 x 768 dots
	Contrast	300 cd/m ² (typical) (See note 1.)
	Viewing angle	130° left to right, 90° up and down
	Colors displayed	262,144
Backlight	Type	Cold Cathode Fluorescent Lamps NSA12 models: 2 lamps, NSA15 models: 4 lamps
	Contrast adjustment	Three-level software adjustment. (See note 2.)
	Backlight not lit detection	The software reads the lamp burnout detection signal from the inverter. (See note 3.)
	Service life	50,000 hours min. (See note 4.)
Touch panel	Type	Analog resistive type
	Effective input area	NSA12: 247 mm x 185.5 mm, NSA15: 305 mm x 229 mm
	Operating service life	10,000,000 operations (with non-stop key stroking using fingers to input) 100,000 characters (with non-stop character entry using a stylus to input)
Interface	Keyboard	PS/2 keyboard with 6-pin Mini DIN connector
	Mouse	PS/2 mouse with 6-pin Mini DIN connector
	Serial ports	2 ports conforming to EIA RS-232C for 9-pin D-SUB female connectors Pin No. 6 output: +5 V (250 mA max.)
	Ethernet	One 10 BASE-T/100 BASE-TX port for an RJ45 connector
	USB ports	2 USB 2.0/1.1 ports for USB-type A connectors
	Memory Card	Type I CF Card, 1 slot
Expansion slots		PCI expansion bus, 2 slots
Special RAS board	External input port	3-pin connector port for the UPS power interruption signal
	Status LED indicators	4 (RUN/BATLOW/ERR/DIAG)
RAS functions	Special RAS board functions	Monitoring Function (alive, startup, and shutdown monitors), Action on Errors Function (forced shutdown and forced reboot), External Power Supply Monitor, Motherboard/LCD Operating Time Measurement, and Log Functions.
	Motherboard RAS functions	Standard PC RAS info, post error logging, post error retry, CMOS data recovery
POWER indicator		Yes (green)
Service life		50,000 hours at 40°C (See note 5.)
Battery life	Motherboard	5 years at 25°C (NSA-BAT01)
	RAS board	5 years at 25°C (NSA-BAT01)

Note 1: This contrast value is strictly a reference value at maximum contrast.

2: The contrast cannot be adjusted significantly.

3: It is not the service life, but rather lamp failure due to hardware problems such as a broken wire that is detected. Backlight not lit detection means both backlight lamps have burnt out.

4: The service life is a guideline for maximum contrast at room temperature with normal humidity and is provided strictly for reference. It varies significantly with the ambient temperature. The service life will be shorter under extreme (high or low) temperature conditions and falls off sharply particularly under low-temperature conditions.

- 5: The service life is a guideline that is provided strictly for reference. It varies with factors such as the installation location and operating conditions.
- 6: The file system is formatted in advance with NTFS. Both C and D drives have been created as partitions. The D drive is used by the OS and RAS Utility to store the event logs.
- 7: NSA15-TX01B/S-01E only: 4 GB
- 8: NSA15-TX01B/S-01E only: 1 GB

1-2-2 General Specifications

Item	Specifications
Rated supply voltage	24 V DC
Allowable supply voltage range	20.0 V DC to 27.6 V DC (24 V DC \pm 15%)
Power consumption	NSA12: 80 W max., NSA15: 100 W max.
Ambient operating temperature	0 to 50°C (See notes 1 and 2.)
Ambient storage temperature	-10 to 60°C (See note 2.)
Ambient operating humidity	10% to 80% with no condensation (See note 2.)
Ambient storage humidity	10% to 85% with no condensation (See note 2.)
Operating atmosphere	Must be free of corrosive gases. Must be fairly dust free.
Noise resistance	Conforms to IEC6100-4-4, power supply line: 2 kV
Vibration resistance (in operation)	Conforms to JIS C0041, 0.05-mm amplitude at 10 to 55 Hz for 50 min each in the X, Y, and Z directions
Shock resistance (in operation)	Conforms to JIS C0041, 196 m/s ² three times each in the X, Y, and Z directions
Dimensions (excluding protrusions)	NSA12: 322 mm x 264 mm x 100 mm (W x H x D) NSA15: 384 mm x 312 mm x 108 mm (W x H x D)
Weight	NSA12: 5 kg max., NSA15: 7 kg max.
Degree of protection	Front panel: IP65 or the equivalent (display side only) (See note 3.)

Note 1: The maximum surrounding air temperature rating is 50°C. The ambient operating temperature may be restricted as described below depending on whether a PCI Board is installed, the type of Board installed, and the mounting angle of the Unit.

■ Note 1-1: No PCI Board or One of Following Expansion Boards Installed


- 3G8F7-CLK21-V1 Controller Link Board (hereafter CLK Board)
- CS1PC-PCI01-DRM SYSMAC CS1 Board (hereafter CS1 Board)

- (1) The ambient operating temperature is 0 to 25°C when the installation angle is greater than 0° and less than 15° off horizontal (excluding the memory card).
- (2) The ambient operating temperature is 0 to 30°C when the installation angle is greater than 15° and less than 45° off horizontal (excluding the memory card).
- (3) The ambient operating temperature is 0 to 40°C when the installation angle is greater than 45° and less than 75° off horizontal (excluding the memory card).
- (4) The ambient operating temperature is 0 to 50°C when the installation angle is greater than 75° and less than 90° off horizontal (excluding the memory card).

■ Note 1-2: PCI Board Other Than a CLK Board or a CS1 Board Installed


The internal temperature of the PCI Board will rise 10°C at slot 1 and 15°C at slot 2. This may place the ambient operating temperature at the high end of the range given in *1-1 above. Therefore, set the ambient operating temperature according to the ambient operating temperature of the PCI Board that is installed. Check prior to actual use to make sure the PCI Board will operate properly at the selected ambient operating temperature.

Example: If a PCI Board with an ambient operating temperature of 0 to 45°C will be installed in slot 1 with the Unit installed at angle greater than 45° and less than 75° off horizontal, then the ambient operating temperature selected should be 0 to 35°C because of the 10°C rise in the internal temperature of the Board at slot 1.

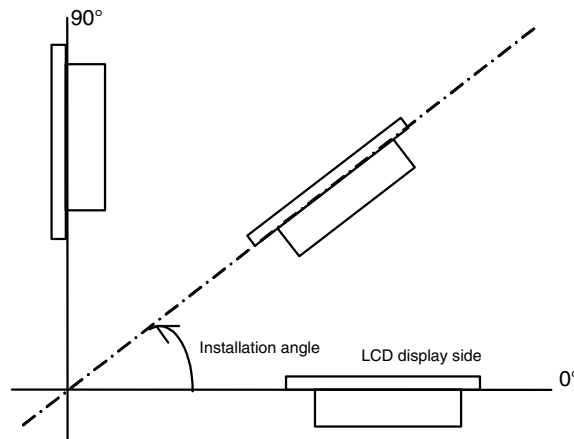


■ Note 1-3: Ambient Operating Temperature

The ambient operating temperature is the temperature at a point 50 mm from the center of the back of the Unit, and it includes the heat generated by the Unit itself.

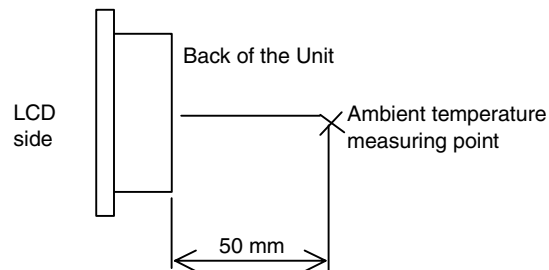

■ Note 2: Use the temperature and humidity ranges in the following diagram.

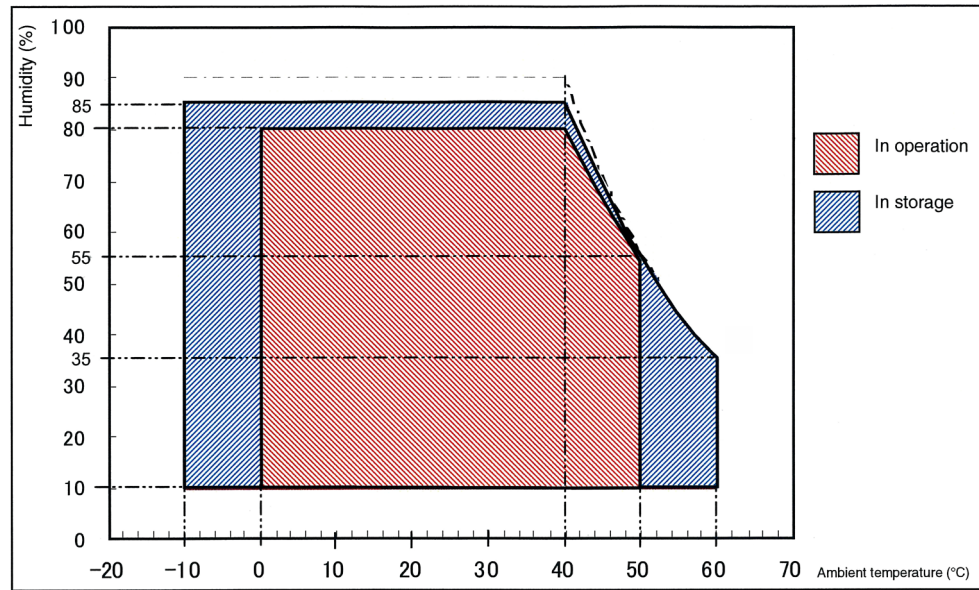


■ Note 3: The Unit may not operate properly in locations subjected to oil splashes for extended periods of time.


1-2 Specifications

1-2-3 Dimensions and External Appearance

NSA12-TX01B/S (-E)

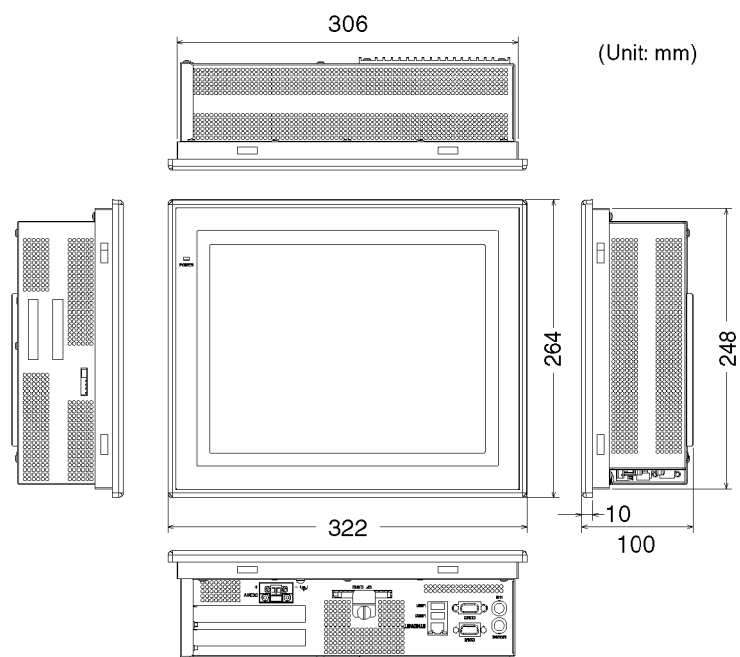

NSA15-TX01B/S (-E)

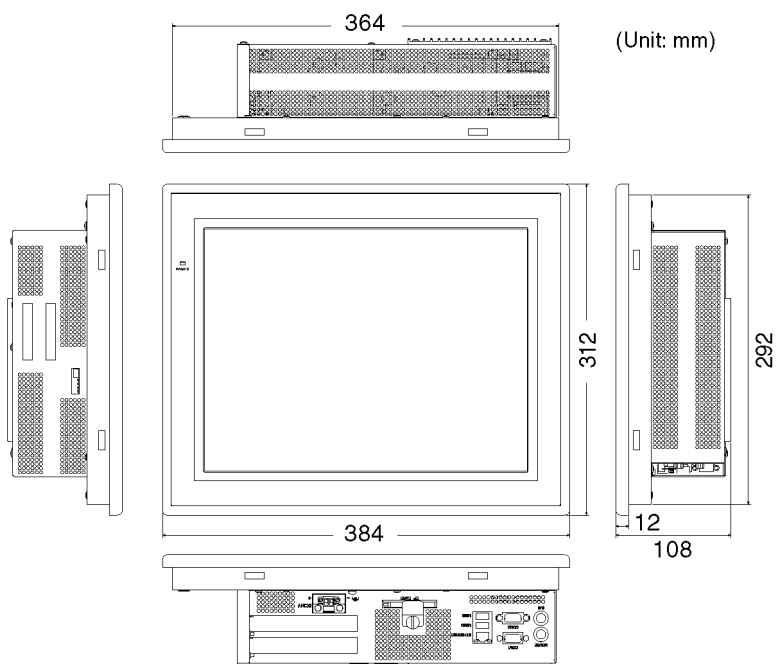


Section 2

Nomenclature

2-1 Nomenclature

2-1-1 Front Panel

POWER Indicator
Green lamp is lit when the power is ON.

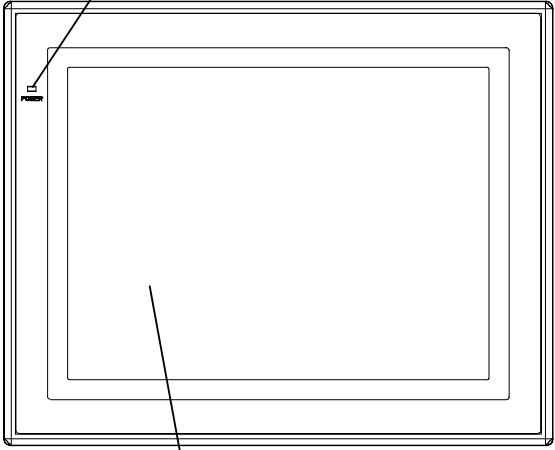

Display Area
The entire display area is a touch panel and input device.

2-1-2 Rear Panel


Side Cover Fastening Screws

Loosen these three screws to remove the Side Cover.

Side Cover

Remove the Cover to install a PCI Board or to set the DIP switch.

View with Side Cover removed

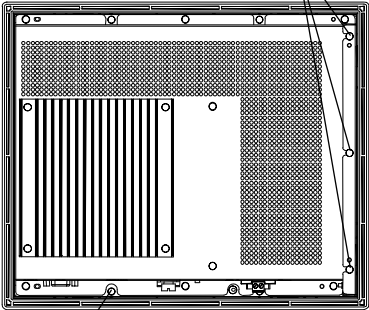


Functional Ground Terminal
This terminal prevents noise-induced malfunctions.

DIAG Indicator

This indicator is disabled during normal operation and enabled only during RAS Board self-diagnosis.

ERR Indicator


The red lamp is lit when a RAS failure occurs.

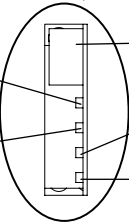

UPS Power Interrupt Signal Connector
This connector is used for the power interrupt signal from the UPS.

BATLOW Indicator
The red lamp is lit when the RAS Board backup battery is exhausted.

RUN Indicator
The red lamp is flashing while the RAS Board is operating.

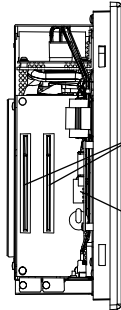

PCI Board Connector
Use this Connector to install a PCI Board.

RAS Board
Use this Board to monitor the status of the Unit.

COM Port 1 Connector: Manufactured in 2009 or earlier (serial number: 0949□□□□□□)
COM Port 2 Connector: Manufactured in 2010 or later (serial number: 0940□□□□□□)

A 9-pin RS-232C connector.

COM Port 2 Connector: Manufactured in 2009 or earlier (serial number: 0949□□□□□□)
COM Port 1 Connector: Manufactured in 2010 or later (serial number: 0940□□□□□□)

A 9-pin RS-232C connector.

Ethernet Connector

An Ethernet cable connector. It is an 8-pin 10 BASE-T/100 BASE-TX modular plug.

Mouse Connector
A PS/2 mouse connector.
Keyboard Connector
A PS/2 keyboard connector.


USB Port 0 Connector
A USB type A connector.
USB Port 1 Connector
A USB type A connector.

Memory Card Connector
A connector for using a CF Card.
Memory Card Cover
A cover to prevent the CF Card from falling out.

PCI Board Slot 1
PCI Board Slot 2
Power Supply Input
The power supply input terminal.

2-1-3 Connectors and Interfaces


■USB Connector (USB Ports 0 and 1)

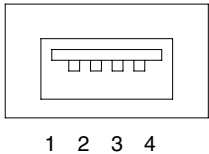

NSA-series Industrial PC connector: Standard USB type A Connector

Pin No.	Signal
1	V _{BUS}
2	D ⁻
3	D ⁺
4	GND

■RS-232C Connector (COM Ports 1 and 2)

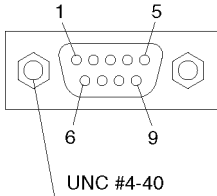


NSA-series Industrial PC connector: 9-pin male D-SUB Connector (See note.)

Pin No.	Signal	
1	CD	Carrier Detect
2	RD	Receive
3	TD	Send
4	DTR	Data Terminal Ready
5	GND	Signal ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI	Ring Indicator

Note: Use an SAE screw (4-40UNC) for the connector on the NSA-series Industrial PC.

■Ethernet Connector

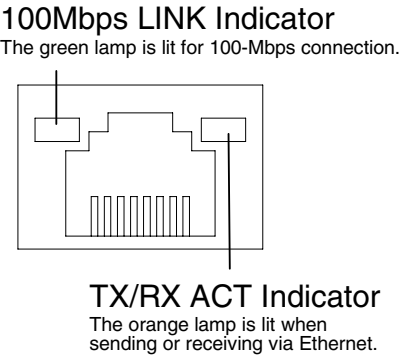


NSA-series Industrial PC connector: RJ45

Pin No.	Signal	
1	TD+	Twisted pair send +
2	TD-	Twisted pair send -
3	RD+	Twisted pair receive +
4	NC	Not used
5	NC	Not used
6	RD-	Twisted pair receive -
7	NC	Not used
8	NC	Not used

Note Confirm the safety of the system before turning the power ON or OFF.

■PS/2 Keyboard Connector

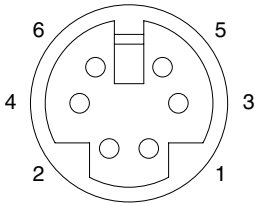


NSA-series Industrial PC connector: 6-pin female Mini-DIN Connector

Pin No.	Signal	
1	DATA	Keyboard data
2	NC	Not used
3	GND	Signal ground
4	+5V	+5 V output
5	CLK	Keyboard clock
6	NC	Not used

Note: Connect the keyboard directly to this connector.

■PS/2 Mouse Connector

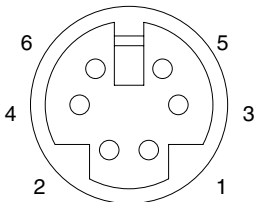


NSA-series Industrial PC connector: 6-pin female Mini-DIN Connector

Pin No.	Signal	
1	DATA	Mouse data
2	NC	Not used
3	GND	Signal ground
4	+5V	+5 V output
5	CLK	Mouse clock
6	NC	Not used

Note: Connect the mouse directly to this connector.

■UPS Power Interrupt Signal Connector




NSA-series Industrial PC connector: S3B-PH-K-S (J.S.T. Mfg. Co., Ltd.)

Pin No.	Signal
1	ACFAIL
2	NC
3	COM

Note: Set the ACFAIL input voltage to 24 V±10%.

● **Equivalent Input Circuit**

The NSA-series Industrial PC can read a power interrupt detection signal from the UPS by supplying power after an open condition occurs between the input connector terminals or by creating an open condition between the input connector terminals after power is supplied.

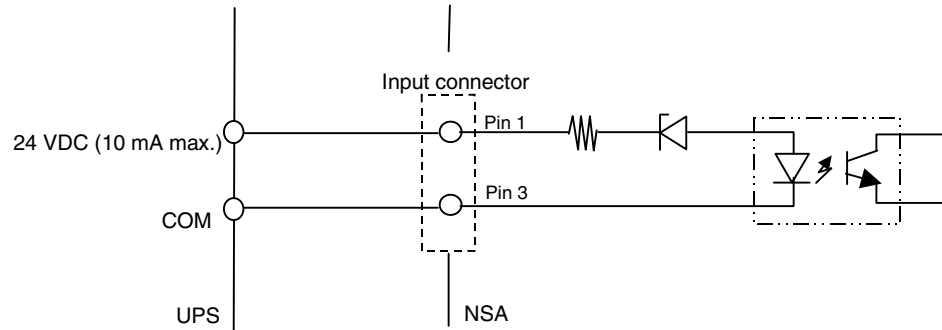

2

Nomenclature

Note

- Never use a chemically treated cloth or volatile solvents, such as benzene or thinner, to clean the NSA-series Industrial PC.
- Input may fail if the touch panel is pressed continually at high speed. Confirm each input before moving on to the next entry.
- If the same image is left on the screen for an extended period of time, that image will be burned into the screen permanently. Use the burn-in prevention function or periodically change the screen to prevent permanent damage to the screen.
- The entire system may shut down depending on how the power is turned ON or OFF. Follow the correct procedure for turning the power ON or OFF.

Section 3

Installing the NSA-series Industrial PC and Connecting Peripheral Devices

3-1 Basic Operating Procedures

This section describes the basic steps for operating the NSA-series Industrial PC.

■ **Step 1 Install a PCI Board and set the DIP switch (using a PCI Board and Special RAS Board monitoring functions).**

In the following situations, remove the side cover and install the PCI Board or set the DIP switch first before you install the NSA-series Industrial PC in an operating panel.

- To install and use a PCI Board.
- To enable the RAS Board's special Action on Error monitoring function (forced shutdown or forced reboot)
- To set the ACFAIL signal input method for the external input port (UPS power interrupt signal connector) to "Normally supplies 24 V; Open at PWR-FAIL."

Refer to 3-2 Installing a PCI Board and Setting the DIP Switch.

Step 1-1	Remove the side cover.
↓	
Step 1-2	Set the DIP Switch.
↓	
Step 1-3	Install the PCI Board.
↓	
Step 1-4	Reattach the side cover.
↓	

■ **Step 2 Install the NSA-series Industrial PC and wire it to the operating panel.**

Refer to 3-3-2 Installing the NSA-series Industrial PC in a Control Panel.

↓

■ **Step 3 Make PS/2 port connections.**

If a PS/2 keyboard or PS/2 mouse will be used, connect these devices before you turn ON the NSA-series Industrial PC.

Note: Connect the keyboard and mouse directly without inserting a signal selector or other device.

↓

■ **Step 4 Turn ON the 24-VDC external power supply.**

Connect a 24-VDC power supply.

Note: Never connect an AC power supply. Otherwise, the NSA-series Industrial PC will be damaged.

Refer to 3-3-3 Connecting the Power Supply.

Refer to 3-3-4 Connecting the Grounding Wire.

Note

- The startup and shutdown monitoring functions available from the special RAS Board enable operating system monitoring to determine whether or not the OS started up a specified amount of time after the power was turned ON or a specified amount of time after the system shutdown.
- The C: and D: drives are defined in the NSA-series Industrial PC. When a Memory Card is being used, use a drive letter other than C: or D:.



■ **Step 5 Make non-PS/2 port connections and insert card.**

A memory card (CF Card) can be inserted and USB, RS-232C, or Ethernet connections can be made after the power is turned ON.



■ **Step 6 Adjust the touch panel and display.**

Adjust (calibrate) the touch panel positioning as needed.

- Touch panel positioning adjustment (calibration): The pre-installed universal pointer device driver (UPDD) program is used to calibrate the touch panel.

Refer to *3-5-1 Calibrating the Touch Panel*.



■ **Step 7 Start up the application.**

3-2 Installing a PCI Board and Setting the DIP Switch


Follow the steps below to install a PCI Board or to change the default setting of the DIP switch.

■ Removing the Side Cover


Note

Be sure to turn OFF the NSA-series Industrial PC power supply (external input power supply) before you remove the side cover and set the DIP switch.

1. Turn OFF the NSA-series Industrial PC power supply (external input power supply) and loosen the three screws securing the side cover.

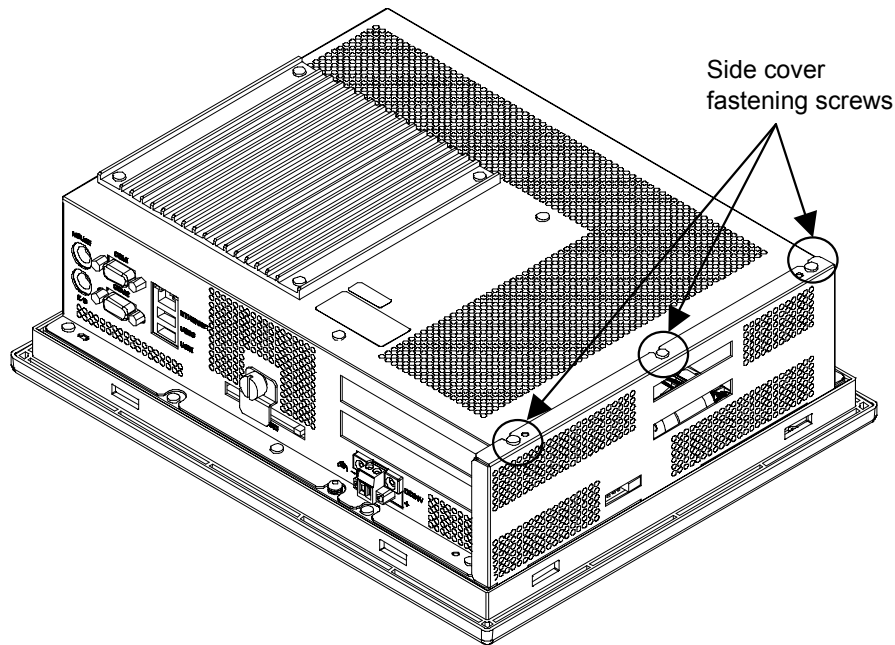

2. Remove the side cover.

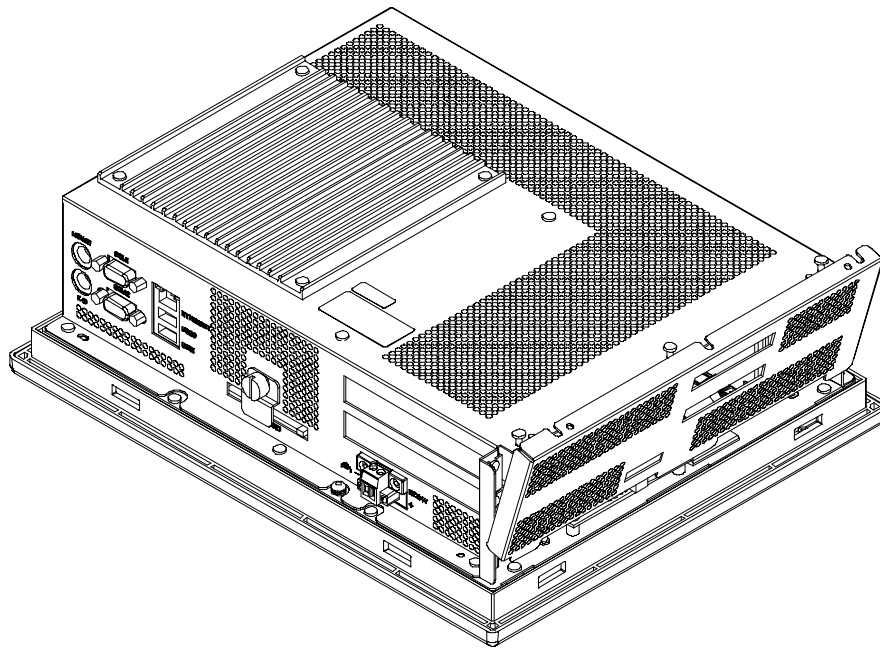

■ Setting the DIP Switch

Set the DIP switch only to enable the RAS Board's special Action on Error monitoring function or to set the ACFAIL signal input method for the external input port (UPS power interrupt signal connector) to "Normally supplies 24 V; Open at PWR-FAIL."

- **Setting the DIP Switch**


RAS Function Settings (Hardware Settings)

Pin No.	Function
1	Not used (Default setting: OFF)
2	Not used (Default setting: OFF)
3	Not used (Default setting: OFF)
4	Not used (Default setting: OFF)
5	Specifies the method for using the external input port (UPS power interrupt signal connector). ON: Used for UPS connection. OFF: Use as general input port (default setting).
6	Specifies the ACFAIL signal input method for the external input port (UPS power interrupt signal connector). (See note.) ON: Normally supplies 24 V; Open at PWR-FAIL. OFF: Normally open; supplies 24 V at PWR-FAIL. (Recommended/default setting.)
7	Always OFF
8	Enables and disables the Action on Error operation of the special RAS Board monitoring functions (alive, startup, and shutdown monitoring). ON: Disables operation when there is an error. OFF: Enables operation when there is an error (default setting).


Note: Select the appropriate input method for the system you are using.

■ Installing a PCI Board


1. Remove the single screw shown in the figure below to detach the metal plate cover for the PCI slot.

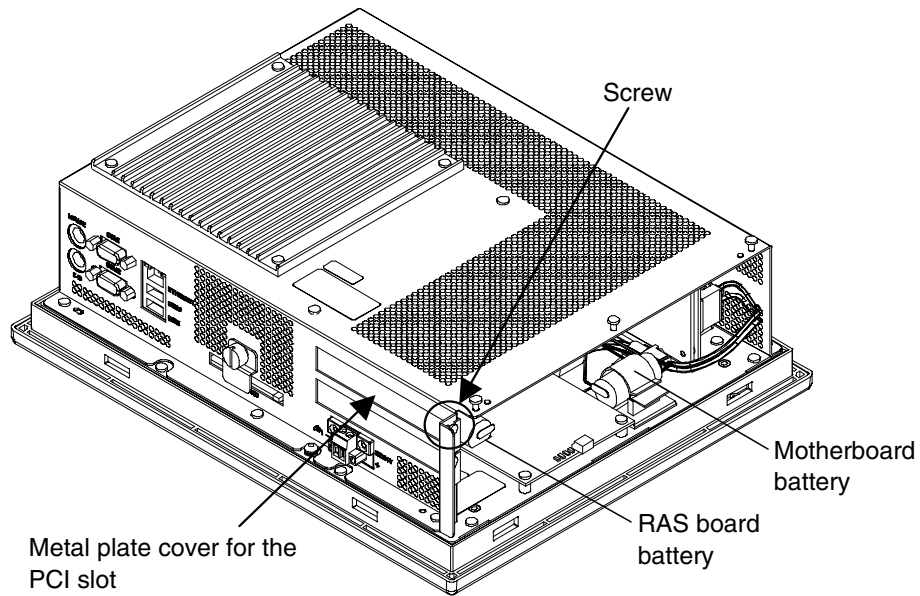

2. Insert the PCI Board into the PCI Board mounting connector.

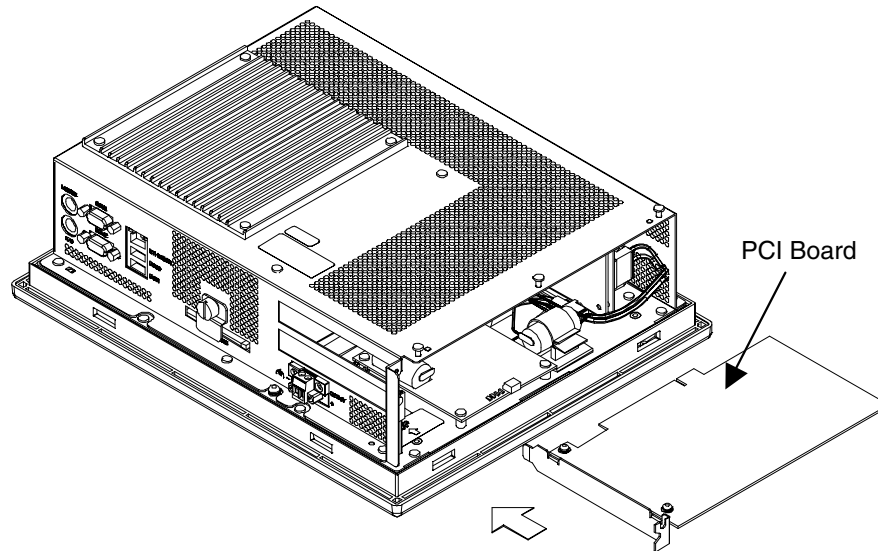

3. Secure the PCI Board with the screw that was removed from the metal plate cover in step 2.

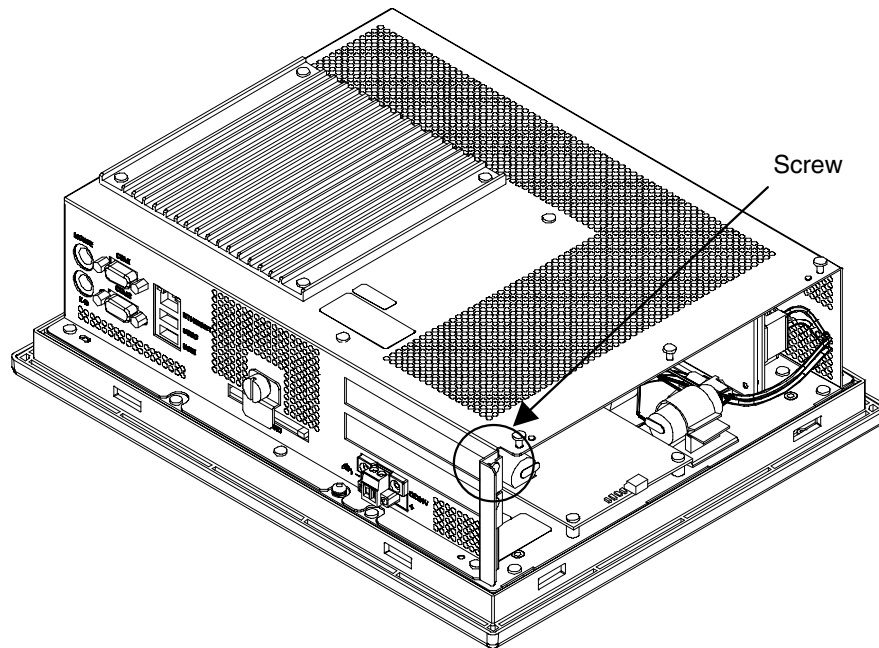


■ Reattaching the Side Cover

Reattach the side cover and tighten the three screws that were loosened in step 1 to remove the cover.


Note

- Use a PCI Board that complies with the EMC Directive. If a PCI Board that does not comply with the EMC Directive is used, there are certain measures that the user must take.
- Be sure to turn OFF the NSA-series Industrial PC power supply (external power supply) before you remove the side cover and install or remove a PCI Board.
- Refer to the following diagram for mountable board sizes.
- Check the PCI Board that will be used to make sure it operates properly prior to actual operation.
- The maximum power available at the two PCI Board slots is 5 VDC/2.1 A and 3.3 VDC/1.0 A, respectively.
- There may be ambient operating temperature restrictions depending on the PCI Board that is used. Make sure the Board is operating within the stipulated temperature range.

■ Reference Diagram for PCI Board Size

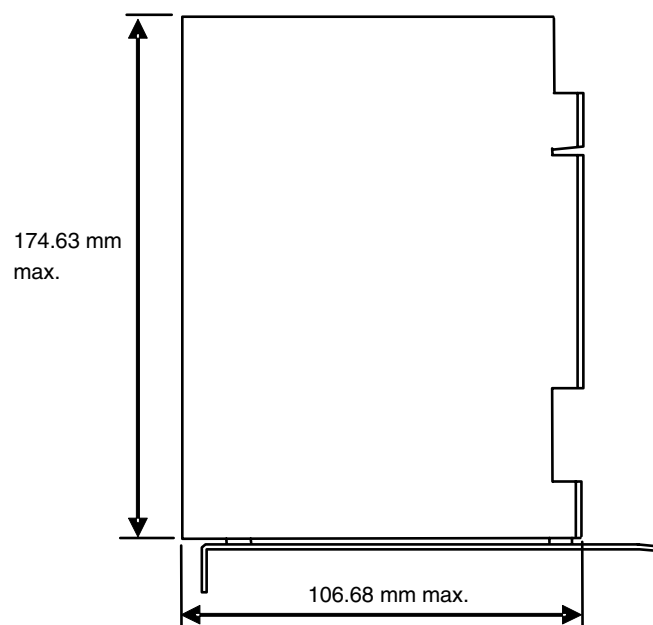

■ Dimensional Reference Diagram with PCI Board Mounted

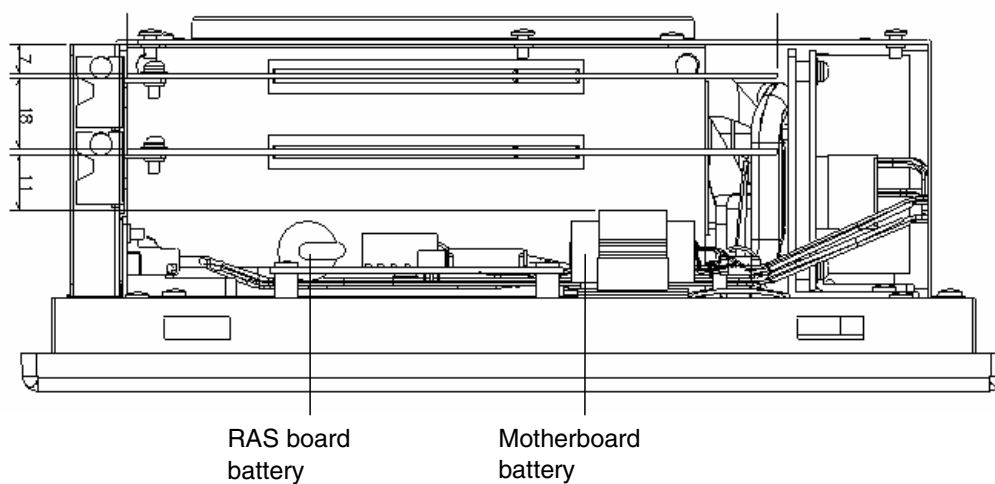

Note

Be sure to check the PCI Board in the actual equipment to make sure it will operate properly after it is installed.

3-3 Installing the NSA-series Industrial PC

3-3-1 Environment

Observe the following points for panel mounting and other NSA-series Industrial PC installations.

Note

Do not install the Unit in the following places:

- Locations subject to severe temperature changes
- Locations subject to temperatures or humidity outside the range specified in the specifications
- Locations subject to condensation as the result of severe changes in humidity
- Locations subject to exposure to chemicals and other harsh substances.
- Locations subject to intense exposure to oil
- Locations subject to corrosive or flammable gases
- Locations subject to shock or vibration
- Outdoor locations subject directly to wind and rain
- Locations subject to intense ultraviolet rays

Take appropriate and sufficient countermeasures when installing systems in the following locations:

- Locations subject to static electricity or other forms of noise
- Locations subject to strong electromagnetic fields
- Locations close to power supplies
- Locations subject to possible exposure to radioactivity

Note

When unpacking the product, check carefully for any external scratches or other damage. Also, shake the product gently and check for any abnormal sound.

3-3 Installing the NSA-series Industrial PC

3-3-2 Installing the NSA-series Industrial PC in a Control Panel


3-3-2 Installing the NSA-series Industrial PC in a Control Panel

The NSA-series Industrial PC is normally mounted in a panel. Follow the steps below to mount the Unit.


1. Cut the mounting hole out from the panel.

Panel thickness: 1.6 to 4.0 mm


NSA12

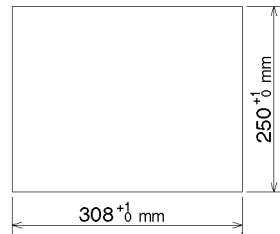

NSA15

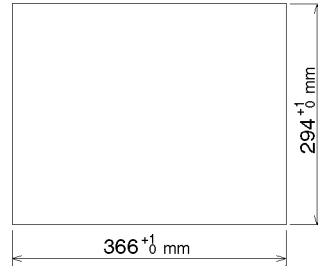

2. Insert the NSA-series Industrial PC into the hole from the front of the panel.

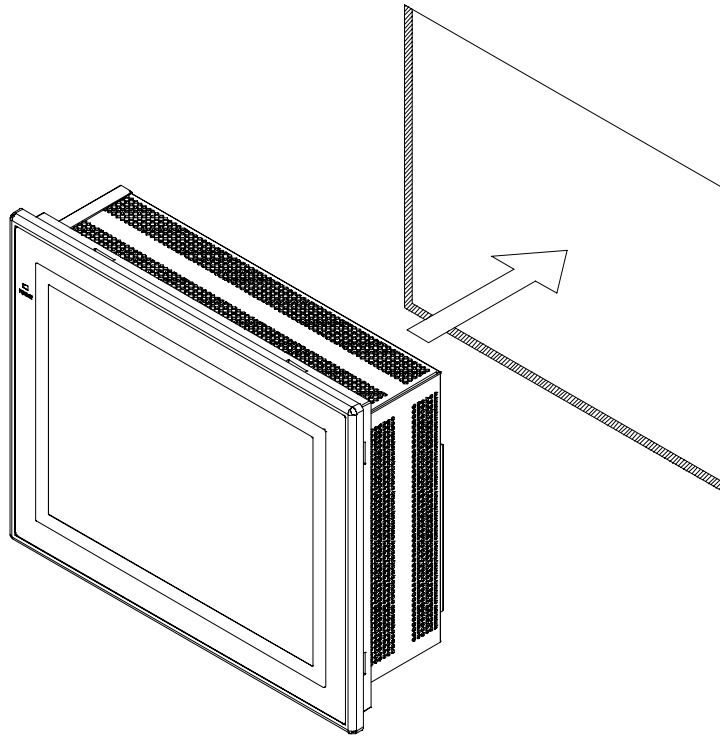


3. Use the Mounting Brackets provided to secure the NSA-series Industrial PC in the panel. Tighten the Mounting Brackets evenly to the specified torque.

Failure to do so may cause the front sheet to buckle.

Tightening torque: 0.5 to 0.6 N·m

3-3 Installing the NSA-series Industrial PC

3-3-3 Connecting the Power Supply

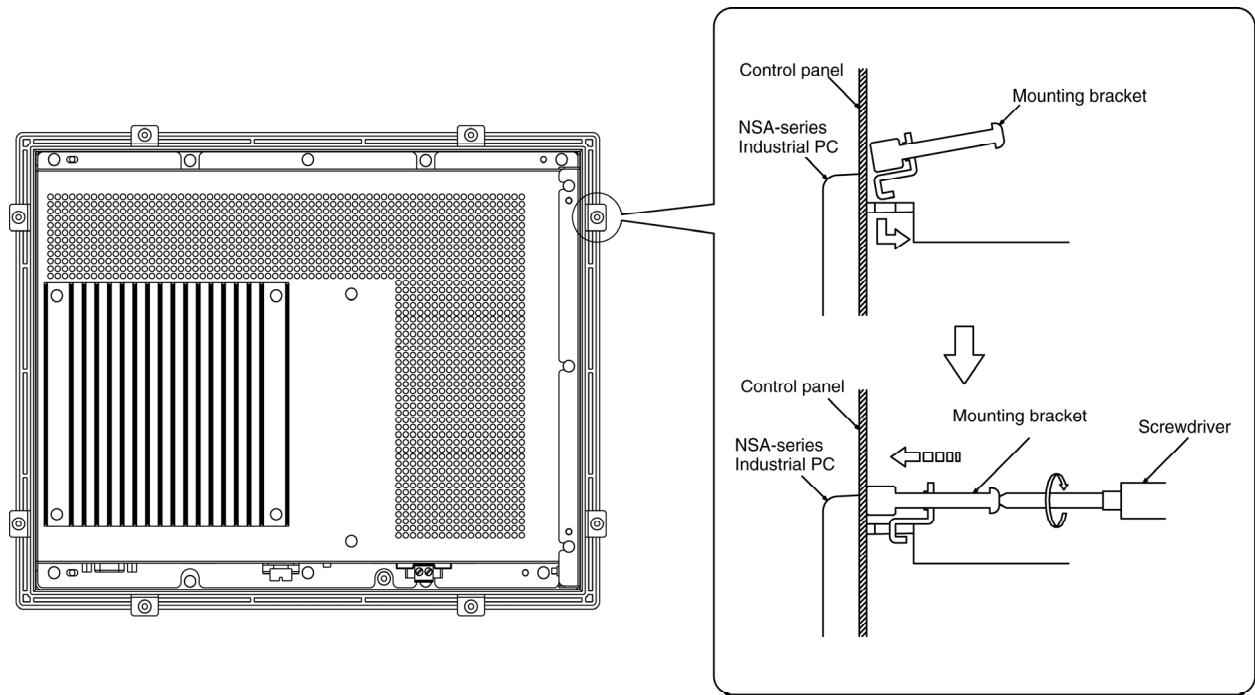

Note

- The mounting panel must be between 1.6 and 4.0 mm thick.
- Tighten the Mounting Brackets evenly to a torque of between 0.5 and 0.6 N·m to maintain water and dust resistance. Make sure the panel is not dirty or warped and that it is strong enough to hold the product.
- Do not let metal particles enter the product when preparing the panel.

3-3-3 Connecting the Power Supply

Connect a 24 V DC power supply to the power terminals on the NSA-series Industrial PC.

Note

- Do not connect an AC power supply to the power terminals.
- Do not perform a dielectric voltage test.
- Use a DC power supply with minimal fluctuation range
- Use an isolating source. Be sure to connect a DC power supply with reinforced insulation to the NSA-series Industrial PC. The DC output side power supply should not be grounded on one end.
- Connect the following Noise Filter to the power supply line in environments with strong noise.

Manufacturer: TDK-Lambda Corporation

Model: RSEL-2001W

3-3

Installing the NSA-series Industrial PC

3-3-4


Connecting the Grounding Wire

■

Power Supply

The following specifications are requirements for power supplies that can be connected to the NSA-series Industrial PC. Select a power supply that satisfies the capacity requirement.

Item	Value
Supply voltage	24 V DC
Allowable power supply voltage range	20.4 to 27.6 V DC (24 V DC±15%)
Power supply capacity	NSA12: 80 W min, NSA15: 100 W min.

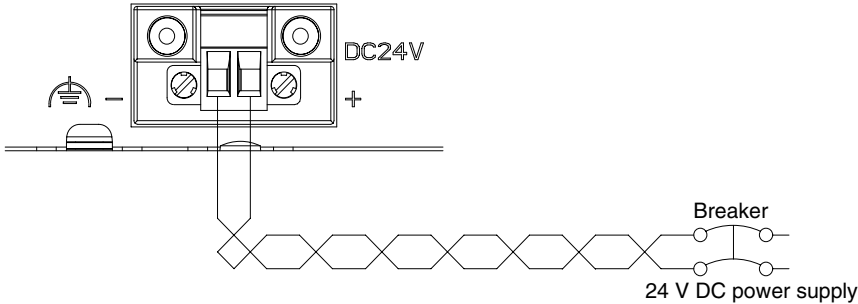


■

Connecting Parts

Note

Connect to the power supply terminal block using a twisted-pair cable with stranded copper wire between AWG16 and AWG12, with a rated temperature of 75°C. Tighten the terminal screws to a torque of 0.5 to 0.6 N·m (5 to 7 lb·in). Be sure the screws are properly tightened.


Prepare the connection wires as shown in the figure below. Make sure the bare wires are twisted tightly together.

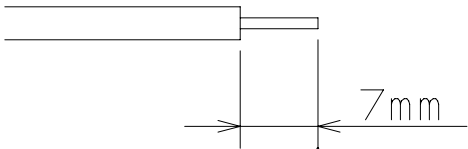

3-3-4

Connecting the Grounding Wire


The NSA-series Industrial PC has a functional grounding terminal (⏏). Make sure the terminal is properly grounded to prevent the Unit from malfunctioning due to electrical noise.

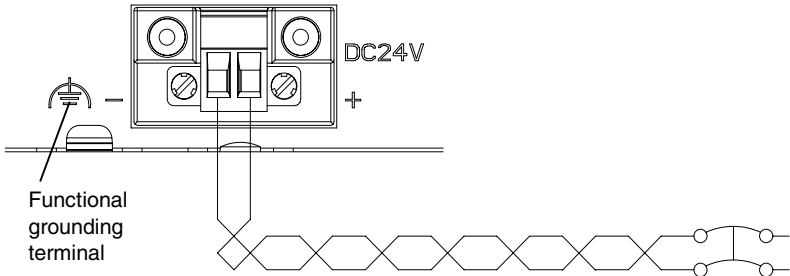

Attach a crimp terminal for an M4 screw to the grounding wire.

3-3 Installing the NSA-series Industrial PC

3-3-4 Connecting the Grounding Wire

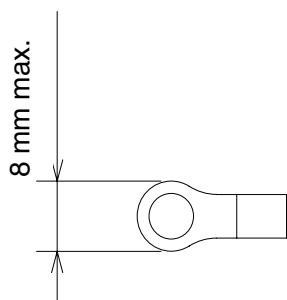

Note

- Do not install the NSA-series Industrial PC in the same panel as a noise-generating device like a motor or inverter.
- Make sure the NSA-series Industrial PC is properly grounded to prevent the Unit from malfunctioning due to electrical noise.

3

Installing the NSA-series Industrial PC and Connecting Peripheral Devices

3-4 Starting the Industrial PC and Procedure after Power Interruption

Make sure that the power supply connected to the NSA-series Industrial PC satisfies the following specifications for NSA-series Industrial PC startup and power interruption.

3-4-1 Operation

■ Starting the Operating System

If the external 24 V DC input voltage is turned OFF, the NSA-series Industrial PC operating system will start up when the rated input voltage is supplied to the NSA-series Industrial PC. The input voltage must remain OFF for at least 10 s before it is turned back ON. (OFF/ON interval: 10 s min.)

■ Shutting Down the Operating System


The NSA-series Industrial PC shuts down the operating system when it receives a shutdown request from a software application, or when the user executes a shutdown operation. When the shutdown is completed, the NSA-series Industrial PC will turn OFF all DC outputs except the 5-Vs auxiliary power supply.

■ Power Interruptions

If the 24 V DC input voltage from the external power supply is interrupted, all NSA-series Industrial PC power supplies, including the 5-Vs auxiliary power supply, will turn OFF. If this occurs during any operation, including shutdown, that operation may not be successfully completed. Be sure to turn OFF the external 24 V DC input voltage after the shut down is completed. The NSA-series Industrial PC does not have UPS or other recovery functions for power outages or power interruptions. These functions will have to be provided externally (on the system side).

3-4-2 Operating Sequence for the External Power Supply


The following diagram shows the power supply control sequence under normal operating conditions.

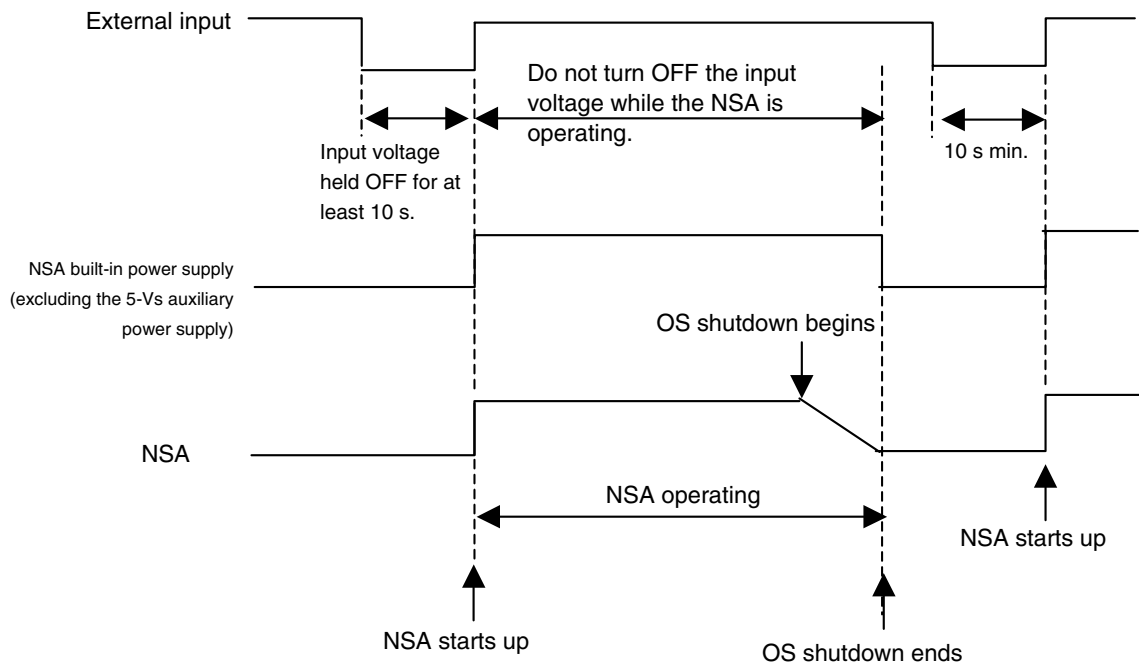

Note

- If the external input voltage is interrupted, it must remain OFF for at least 10 s before it is turned back ON. (OFF/ON interval: 10 s min.)
- If the external input voltage is interrupted during any operation, including shutdown, that operation may not be successfully completed. Shut down the NSA-series Industrial PC and turn OFF the external 24 V DC input voltage. The NSA-series Industrial PC does not have UPS or other recovery functions for power outages or power interruptions. These functions will have to be provided externally (on the system side).
- Make sure that the power supply connected to the NSA-series Industrial PC satisfies the following specifications for NSA-series Industrial PC startup and power outages.
- The entire system may shut down depending on how the power is turned ON or OFF. Follow the correct procedure for turning the power ON and OFF.

Follow the steps below to mount the memory card to the connector at the bottom of the NSA-series Industrial PC.

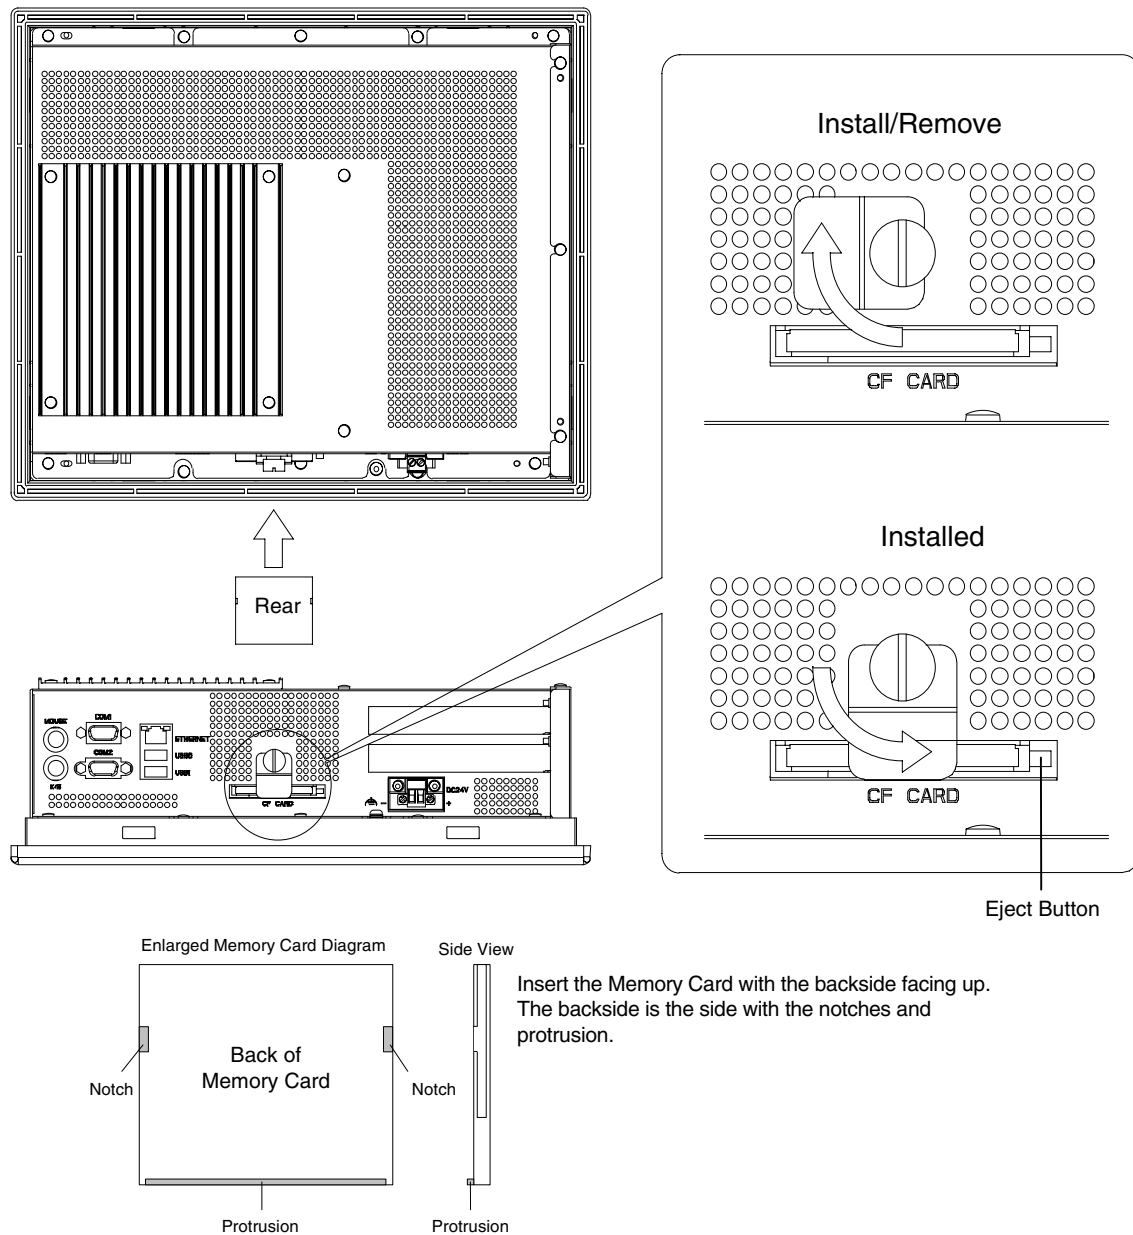

1. Loosen the thumbscrew on the memory card cover, rotate the cover up to the Install/Remove position, and secure the cover in place.
2. Push the memory card in firmly as far as it will go. The Eject Button will pop out when the memory card is secured in place.
3. Loosen the thumbscrew on the memory card cover, rotate the cover down to the Installed position, and secure the cover in place.

3-4-4 Removal Procedure

1. Loosen the thumbscrew on the memory card cover, rotate the cover up to the Install/Remove position, and secure the cover in place.
2. Press the Eject Button. Use your middle finger to press the Eject Button and place your index finger in front of the memory card to keep it from popping out and falling on the floor.

Note

- Use only a CF Card that has the CE Marking.
- Thoroughly test the memory card that will be used to confirm that it operates properly before actually using it with the product. Some memory cards may not be compatible. Also, use a memory card with an ambient operating temperature range between –5 and 85°C.

3-5 Adjusting the Touch Panel and Display

3-5-1 Calibrating the Touch Panel


This section describes the procedure for calibrating the touch panel.

1. Calibrate the touch panel whenever it deviates markedly from its coordinate. Connect a PS/2 keyboard and mouse or a USB keyboard and mouse to the NSA-series Industrial PC before calibrating the touch panel. Make sure the keyboard and mouse are properly connected.


Note

Shut down the NSA-series Industrial PC operating system and turn OFF the NSA-series Industrial PC before you connect the PS/2 keyboard and mouse.

2. Start up the NSA-series Industrial PC and select **Start – Programs – UPDD – Settings** from the bottom left corner of the screen to launch the settings program.

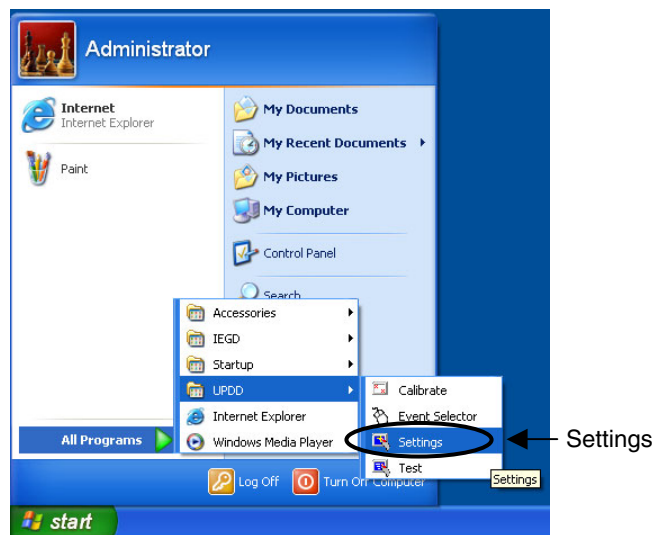


3. Click the **Calibration** Tab on the **Pointer Device Properties** Menu, then click the **Calibrate** Button.

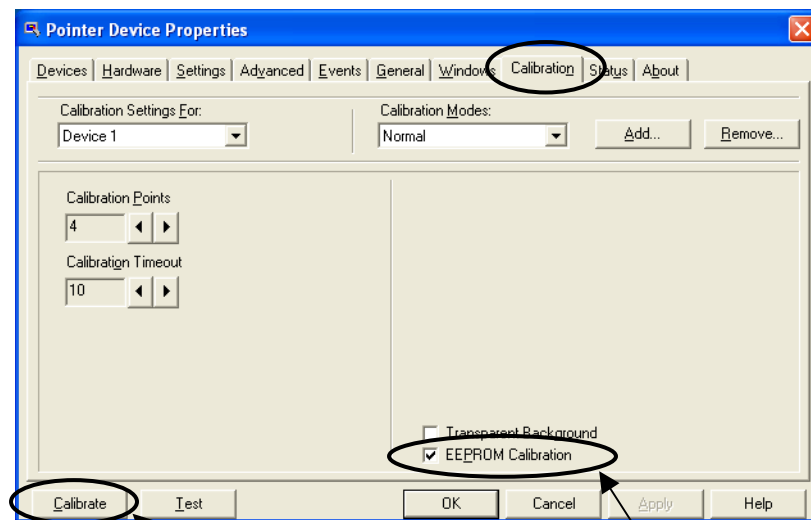


Calibrate Button

Make sure the EEPROM Calibration box is selected.

4. The calibration screen will appear. Touch the tip of the arrow on the touch panel screen. When that calibration point is entered, an arrow will appear in another location. Touch the tip of the each arrow that appears.

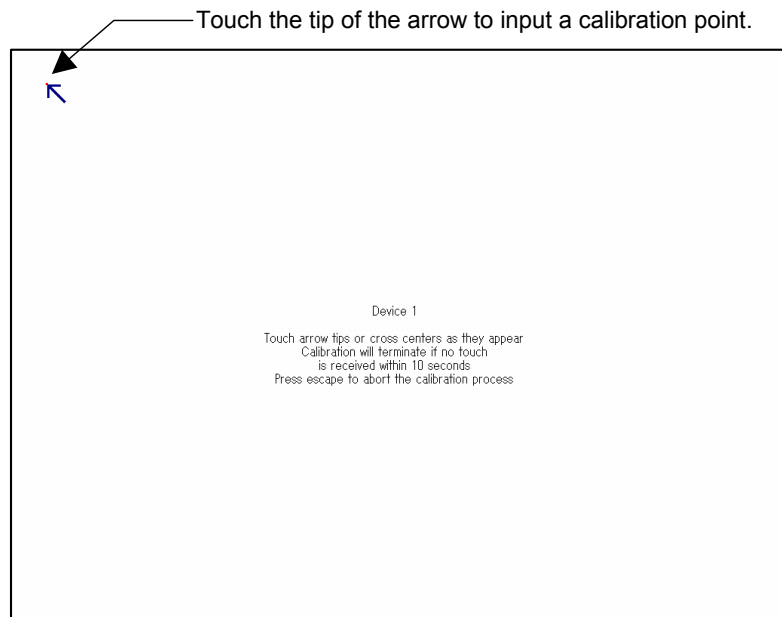

5. After all the calibration points have been entered, the **Check calibration** dialog box will appear. A message will be displayed prompting you to save the calibration data. If there were no problems with the calibration points, press the **OK** Button or the **Enter** Key on the keyboard. If there was a problem with a calibration point, do not touch anything for 10 seconds. The calibration data will be discarded and will not be saved.

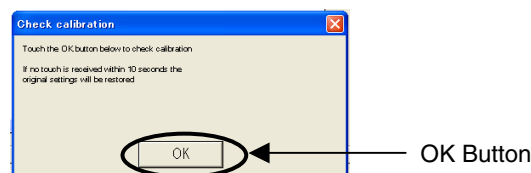**Note**

The touch panel may deviate from its coordinates over time. We recommend that you re-calibrate the touch panel whenever that occurs.

Note

The calibration data is stored on the EEPROM in the NSA-series Industrial PC. If the EEPROM calibration box is not checked, the calibration data will be stored in Windows.

Section 4

RAS Functions

4-1 RAS Function Details


NSA-series Industrial PCs are equipped with standard PC RAS functions and other unique RAS functions that can be used to construct highly reliable systems.

4-1-1 What Is the RAS Solution for OMRON Industrial PCs?

RAS functions have important roles in various business scenes using industrial PCs, where high reliability of a PC is required, as well as advanced features and high performance. The OMRON RAS Solution is a comprehensive capability to constantly monitor the system status and send information on any detected error to users and the system. RAS functions can shutdown and/or enable the system to recover safely.

An OMRON Industrial PC embedded with a specific RAS Board can greatly enhance reliability through a RAS system that combines RAS Middleware and a RAS Utility. The RAS system in an OMRON Industrial PC provides main the following functions:

- A Monitoring Function is provided to constantly monitor the hardware and software of the industrial PC and provide the user failure notification when an error is detected or a failure occurs.
- An Auto-recovery Function forcefully shuts down the system when a failure occurs to prevent further faults and reboot the system for recovery.
- A Logging Function saves events in operating the industrial PC (such as power supply ON/OFF events, OS startup/shutdown events, etc.), system status when a failure occurs, and conditions of the motherboard (i.e., the temperature and power supply) in RAS Board memory backed up by a battery.
- The Log Analysis Function analyzes the cause and/or tendency of failures using large amounts of log data saved in memory.

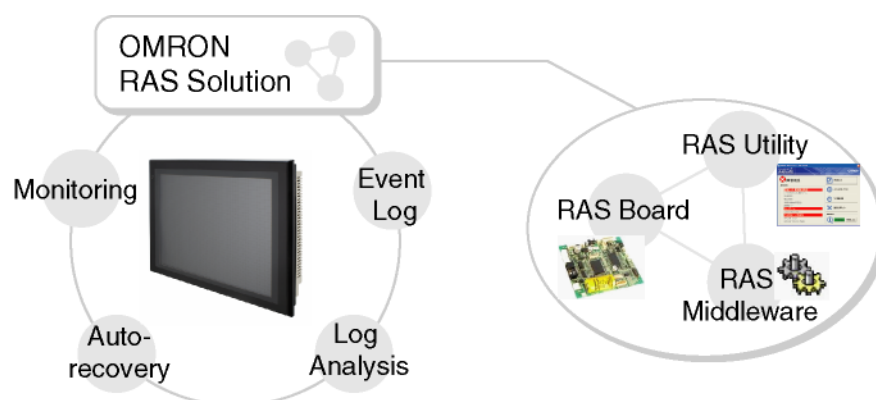

4-1-2 Monitoring and Auto-recovery

Monitoring Functions

The RAS functions enable users to monitor operation status and detect failures. The Industrial PC provides the following monitoring functions.

- **Startup Monitoring:** Provides notification of failures that occur while starting (i.e., from turning ON the power supply until startup has been completed).

- **Alive Monitoring:** Provides notification of failures that occur while the OS is running (i.e., from startup to shutdown).
- **Shutdown Monitoring:** Provides notification of failures that occur while shutting down or rebooting.
- **External Power Supply Undervoltage/Interruption Monitoring:** Detects abnormal power interruptions for the external power supply.
- **Temperature Monitoring:** Detects abnormal temperatures in the Motherboard.
- **Voltage Monitoring:** Detects abnormal power supply voltages in the Motherboard.
- **Cumulative Operating Time Monitoring:** Detects excessive cumulative operating time.
- **RAS Board Monitoring:** Detects errors in the RAS Board.
- **LCD Monitoring:** Detects errors in the LCD.

Action on Error (Forced Shutdown/Forced Reboot)

This function can enable systems to recover to improve the operation rate or terminate the system to prevent further faults after detecting a failure.

OMRON Industrial PCs with RAS functions have the following capabilities:

- Rebooting the system automatically when the operating system freezes,
- Starting the system and restoring operation automatically after the Motherboard stops because of a failure, such as overheating due to runaway operation,
- Repeating reboot attempts automatically until the system is successfully activated, if the system hangs up at startup, and
- Forcefully terminating the system automatically when the system takes too much time to shut down.

Failure Notification

The Failure Notification function reports a failure when the failure occurs or after the system recovers from the error. It notifies the user of a failure with a pop-up message that allows the user to immediately identify the situation without fail.

- The user is notified of power failure that causes shutdown of the system.
- When the system goes down due to some failure, this function notifies the user of the nature of the failure and the status of the Industrial PC after the system recovers from the error.
- The user is immediately notified of any abnormal temperature or voltage in the Motherboard.
- The user is notified that LCD Backlight lifetime is nearing its limit.

Status Monitor

The industrial PC's operating status can be monitored from the RAS Utility. The following RAS information can be monitored:

- Motherboard temperatures (CPU temperature and chipset temperature),
- Motherboard voltages (2.5 V, Vccp, VTR, 5 V, 12 V, HVCC, 1.5 V, and 1.8 V values),
- Cumulative operating times (motherboard/LCD and RAS Board),
- RAS system settings,
- LCD operating status,
- RAS Board operating status,
- Number of errors that have occurred, and
- Failure status.

4-1-3 Logging Function and Log Analysis Function

The system keeps a log of operational events as well as of the status of the Industrial PC (temperature, voltage, etc.) in memory. The logs are saved in the RAS Board memory even if the Industrial PC cannot start due to a failure, so the user can analyze the log based on the information stored in the RAS memory in order to identify the cause of the failure. The RAS Utility includes Filter and Find functions to analyze logs. These functions allow the user to analyze the logs more effectively by specifying events in a particular period or classifying events in categories.

The RAS Utility allows the user to import/export log files. The user may export log files to save logs to a file on a regular basis. The user may also import log files to compare and analyze past logs with logs currently in the memory or to conduct log analysis on another OMRON Industrial PC.


4-1-4 Architecture

An OMRON Industrial PC's RAS system functions are achieved with the RAS Board, RAS Middleware (RAS Service), and RAS Utility.

RAS Board: This is expansion hardware used to monitor failures that occur in the software/hardware of an OMRON Industrial PC. The RAS Board can restart the system to recover normal operation when it detects a failure. Additionally, it saves power supply ON/OFF status, OS startup/shutdown status, and logs of various failures in the memory backed-up by a battery. This enables the user to analyze the conditions when failures occur and identify trends.

RAS Middleware: This software operates as part of Windows services. It communicates with the RAS Board to allow the detection of failures in the operating system. It also serves as an interface between the RAS Utility and RAS Board.

RAS Utility: This is a resident application that is automatically activated when Windows starts. When the RAS Utility detects a failure in the RAS Board, it provides notification of the failure through a pop-up message that immediately identifies the failure situation. The RAS Utility also provides functions to analyze logs that are saved in the RAS Board memory, allowing efficient analysis of the conditions when failures occur and trends. Additionally, the RAS Utility allows the OMRON Industrial PC's RAS functions to be set flexibly, including the RAS Board settings.

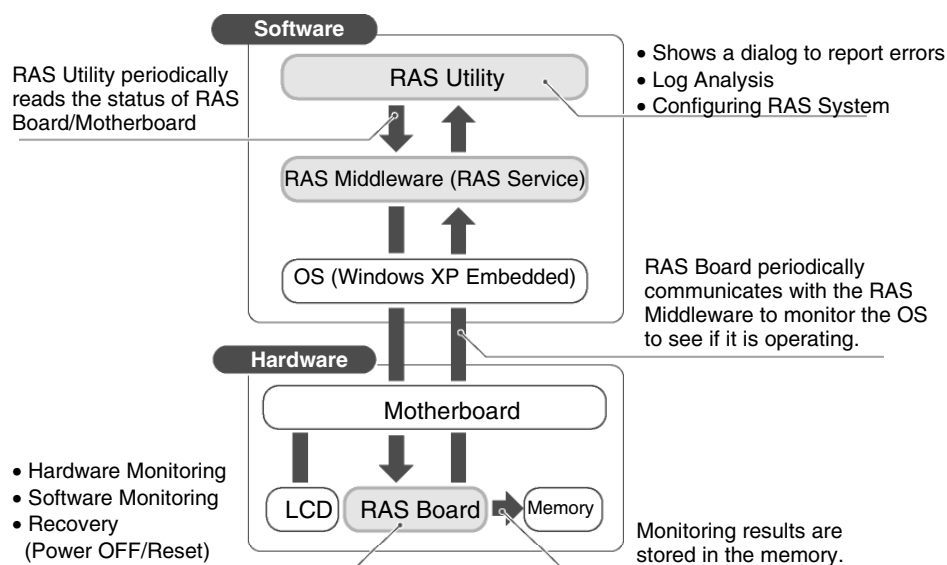

4-2 Special RAS Board Functions

The following RAS functions are available when an NSA-series Industrial PC RAS Board is installed.

4-2-1 Special RAS Board Functions


Function	Description
Alive monitoring	Provides notification of failures that occur while the OS is running (i.e., from startup to shutdown). The RAS Board periodically communicates with the RAS Middleware on the Motherboard to monitor the OS status.
Startup monitoring	Provides notification of failures that occur while starting (i.e., from turning ON the power supply until startup has been completed). Monitors startup after the power supply is turned ON to see if startup is completed within the set time.
Shutdown monitoring	Provides notification of failures that occur while shutting down or rebooting. Monitors shutdown after a command to shut down the OS has been given to see if shutdown is completed within the set time.
Action on error (forced shutdown or forced reboot)	Recover processing will be automatically performed when there is notification of a failure. If a forced shutdown is specified, the power supply to the Industrial PC will be turned OFF. If a forced reboot is specified, the power supply to the Industrial PC will be turned OFF and then back on to reboot.
External power supply monitor	Monitors the external power supply for abnormal power interruptions.
Motherboard/LCD operating time measurement	Measures the operating time of the Motherboard and LCD backlight.
Log function	Enables saving and reading log data.

4-2-2 Setting Procedure

The NSA-series Industrial PC DIP switch must be set to enable the special RAS Board functions.

■ Setting the DIP Switch

Set the correct DIP switch settings for the operating environment before you use the NSA-series Industrial PC for the first time. Remove the side cover to set the DIP switch. Refer to *3-2 Installing a PCI Board and Setting the DIP Switch* for details on removing the side cover.

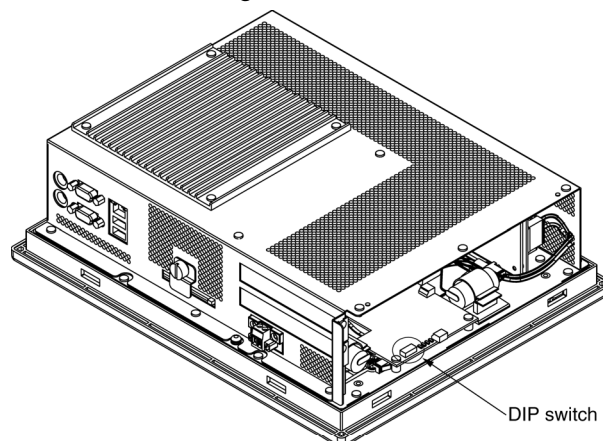

- **Setting the DIP Switch**

RAS Function Settings (Hardware Settings)

Pin No.	Function
1	Not used (Default setting: OFF)
2	Not used (Default setting: OFF)
3	Not used (Default setting: OFF)
4	Not used (Default setting: OFF)
5	Specifies the method for using the external input port (UPS power interrupt signal connector). ON: Use for UPS connection. OFF: Use as general input port (default setting).
6	Specifies the ACFAIL signal input method for the external input port (UPS power interrupt signal connector). (See note.) ON: Normally supplies 24 V; Open at PWR-FAIL. OFF: Normally open; supplies 24 V at PWR-FAIL. (Recommended/default setting.)
7	Always OFF
8	Enables and disables the Action on Error operation of the special RAS Board monitoring functions (alive, startup, and shutdown monitoring). ON: Disables operation when there is an error. OFF: Enables operation when there is an error (default setting).

Note: Select the appropriate input method for the system you are using.

Note

Be sure to turn OFF the NSA-series Industrial PC power supply (external input power supply) prior to removing the side cover and setting the DIP switch.

4-3 Motherboard RAS Functions

The NSA-series Industrial PC can read standard PC RAS data (voltage, temperature, fan rpm). It also has additional unique RAS functions, such as POST error logging, POST error retry, and CMOS data recovery.

4-3-1 Standard PC RAS Data

The NSA-series Industrial PC can read the following standard PC RAS data.

No.	Monitored hardware data	Description
1	CPU temperature sensor	Temperature data read via the SMBus interface (hardware monitor interface). (Not converted to degrees centigrade)
2	No. of fan rotations (See note.)	Fan rpm (2 fans) and the fan log (per fan) read via the SMBus interface (hardware monitor interface). (Not converted to rotations per minute)
3	Board voltage	Voltages read via the SMBus interface (hardware monitor interface). The following voltages can be read. HVCC (3.3 V) V12 (+12 V) V5 (+5 V) VTR (3.3 V) V25 (+2.5 V) Vccp V18 (+1.8 V) V15 (+1.5 V) (Not converted to voltage)
4	POST error logs	BIOS startup log data (approximately 40 bytes for the 10 most recent errors) read from specified CMOS addresses in the chipset.

Note: The NSA-series Industrial PC does not have a fan.

Note

Although the NSA-series Industrial PC will read RAS data from the super I/O chip (SMSC LPC47M192) and the chipset (Intel 855GME+Intel 6300ESB) on the motherboard, it does not do conversions, such as converting to degrees of temperature. Refer to respective datasheets for data processing (data conversion) details.

4-3-2 Unique RAS Functions

■ POST Error Log

When POST errors occur, the 4-byte POST error code, time, month, and date for up to 32 errors are logged as individual POST error records. These records can be read from the BIOS setup menu.

Error data can be retained indefinitely without relying on the internal battery for backup because POST error logs are saved in the motherboard EEPROM. This also means that error data can only be deleted from the BIOS setup menu.

Note: After 32 errors, the most recent error will overwrite the oldest error. Individual error records cannot be deleted. If you delete one error record, they will all be deleted.

■ POST Error Retry Function

● Normal Mode

The message *Press the F1 Key to Resume, Press the F2 Key to Setup* will be displayed on the screen to abort the startup.

● Retry Mode

The message *Press <F1> to Resume, <F2> to Setup* will be displayed on the screen for the amount of time specified at the timer setting. When that time has elapsed, the system will attempt to restart and the process will repeat up to the number of times specified in the retry counter setting. There are three options for the next operation after the specified number of retries is exceeded: startup, stop, or power OFF.

Function	Setting	Description
Retry Counter	1 to 15	Sets the number of retries.
Timer	1, 3, 5, 10, or 15	Sets the amount of time until the next retry.
Auto Resume	Enabled Disabled	Enables or disables whether to ignore the error when the number of retries is exceeded and resume startup.
Power Off	Enabled Disabled	Enables or disables power OFF when Auto Resume is disabled.

● Auto Mode

The message *Press <F1> to Resume, <F2> to Setup* will be displayed on the screen for the amount of time specified at the timer. Any errors will be ignored and startup will resume.

Function	Setting	Operation
Timer	1, 3, 5, 10, or 15	Sets the amount of time until the next retry when an error occurs.

■ NVRAM Function

The motherboard has a chipset with a 256-byte CMOS (banks 1 and 2) and a 512-byte EEPROM (bank 3) for CMOS expansion. Banks 1 and 2 must be backed up by the internal battery and are used to store BIOS settings. Bank 3 does not have to be backed up by the internal battery and is used to store backup BIOS settings and POST error logs.

Bank	Size	Placement	Occupied Size	Application
Bank-1	128 bytes	CMOS in Chipset	128 bytes	BIOS
Bank-2	128 bytes	CMOS in Chipset	88 bytes	BIOS
			40 bytes	Reserved
Bank-3	512 bytes	EEPROM	256 bytes	CMOS backup area
			128 bytes	POST error log storage area
			128 bytes	Reserved

The EEPROM can only be initialized from the BIOS setup menu.

Function	Setting	Description
Clear EEPROM	Press Enter	Press the Enter Key to delete all data from the EEPROM (0 clear).

Note: Use with caution because initializing will also clear POST error log data.

■ CMOS Data Recovery Function

BIOS can save BIOS settings to the CMOS and can restore those settings from the CMOS.

Function	Setting	Description
Backup CMOS	Press Enter	Press the Enter Key to save the current BIOS settings. The message <i>In progress, please wait</i> will be displayed while the settings are being saved.
Restore CMOS	Press Enter	Press the Enter Key to restore the last saved BIOS settings. The message <i>In progress, please wait</i> will be displayed while the settings are being restored.

Note: Clock data cannot be saved or restored.

4-3-3 Setting Procedure

■ BIOS Settings

The POST error retry, NVRAM, and CMOS data recovery functions can be set from the BIOS setting screen.

4-4 RAS Utility Functions

The RAS Utility software helps the user make the most of all of the RAS functions. The RAS Utility is a resident application that is started automatically, and has the following RAS functions.


4-4-1 RAS Utility Functions

Item	Function
Failure Notification	The Failure Notification function reports a failure when the failure occurs or after system recovery. It notifies the user of a failure with a pop-up message.
Status Monitor	This function lists the industrial PC's hardware and software status, which is read periodically.
Log Analysis	The causes of failures and failure trends can be analyzed efficiently based on the log data stored in the RAS Board.
RAS Settings	This function can be used to set the Industrial PC's RAS settings, including the RAS Board's settings.


4-4-2 Setting the Failure Notification Function

The following procedure enables the Failure Notification Function.

1. The following window will be displayed just after the RAS Utility starts.
Click the **RAS Utility** Icon in the taskbar to display the pop-up menu and select **Open** to open the window.

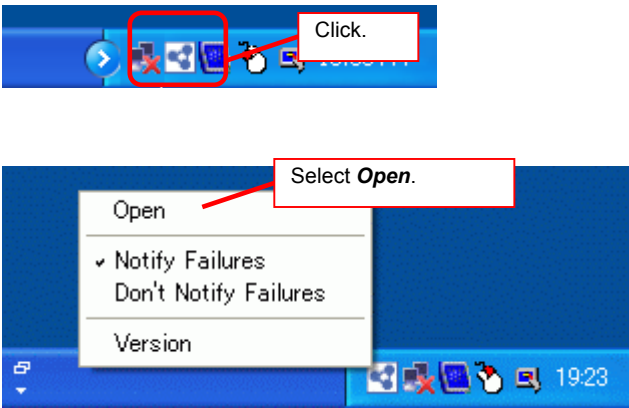


2. The following window will be displayed. Click the **ON** Button in the *Failure Notification* Area to enable the Failure Notification Function.

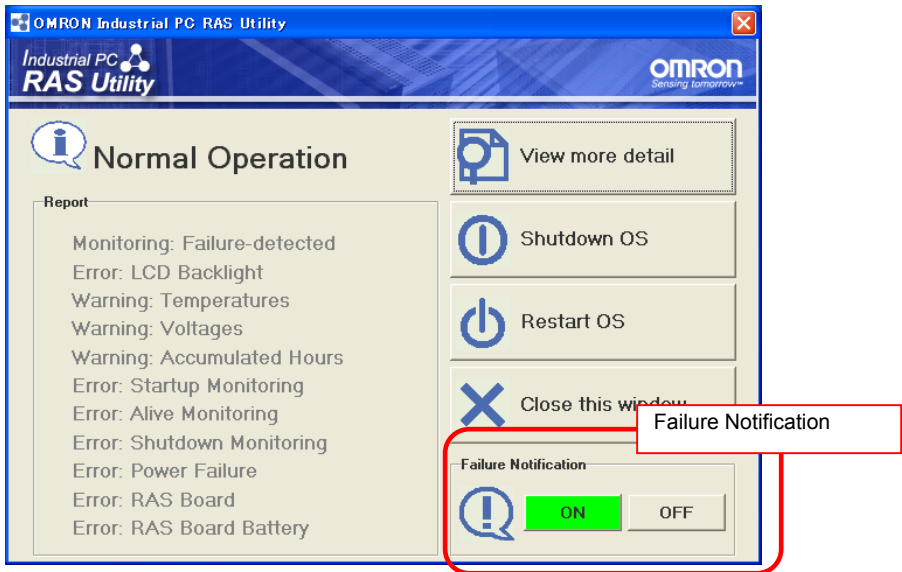

The icon shows the status of the Failure Notification Function.

	11:40	Failure Notification is enabled.
	11:41	Failure Notification is disabled.

3. When Failure Notification is enabled, the following pop-up window will be displayed if a failure occurs. The window will display details on the current failure.

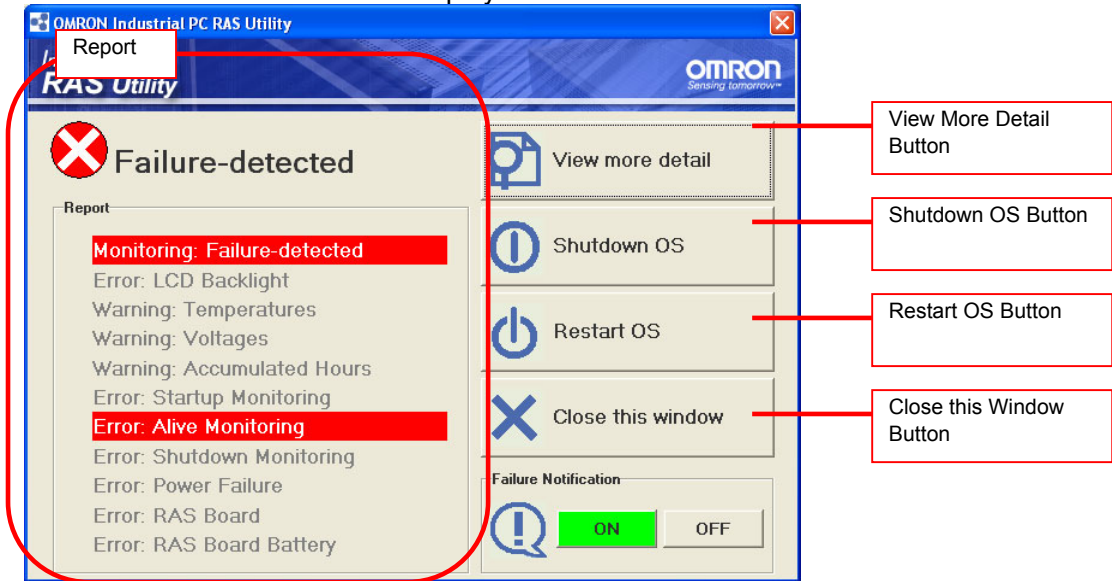


Note: For details on using this window, refer to the RAS Utility's Help function.

■ Clearing Failure detected Status


If the NSA is started when a failure is detected, the failure notification function will operate, and the Failure-detected Notification Dialog Box will be displayed. The failure-detected status must be cleared so that the Failure-detected Notification Window is not displayed at startup.

Click **View more detail**.

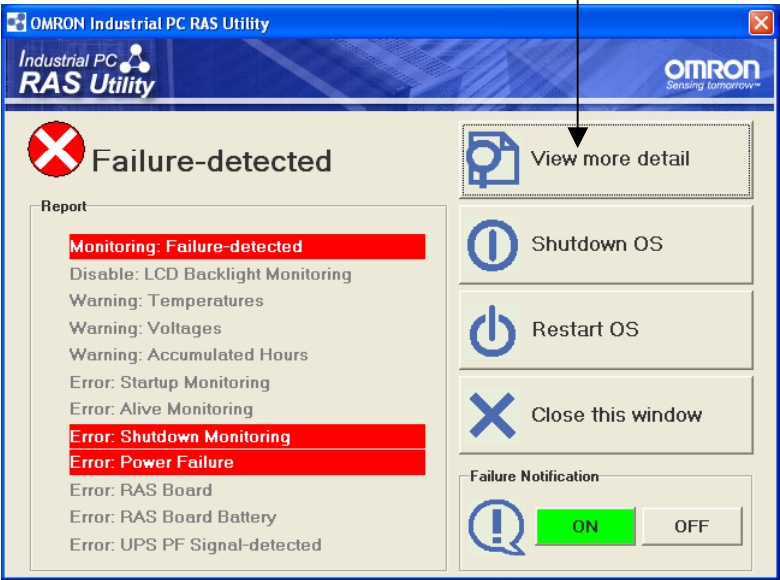

To clear the failure-detected status, select **Action – Clear Failure-detected Mode** from the *View more detail* Dialog Box.

Select **Clear Failure-detected Mode** from the Action Menu.

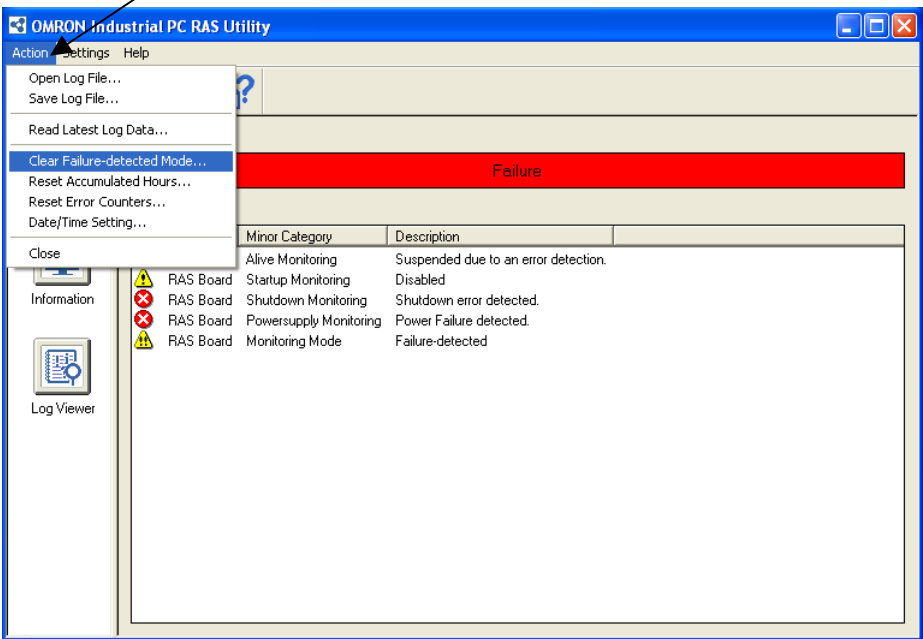


■ Changing the Settings of the Shutdown OS and Reboot OS Buttons in the RAS Utility

Refer to C:\Program Files\OMRON\tools\Button Setting\Readme.html to enable or disable these buttons.


4-4-3 Checking the PC's Operating Status using the Status Monitor

Detailed information can be displayed on the Industrial PC.

- **RAS Board:** This tab page shows information on the occurrence of failures and the RAS Board's operating status.

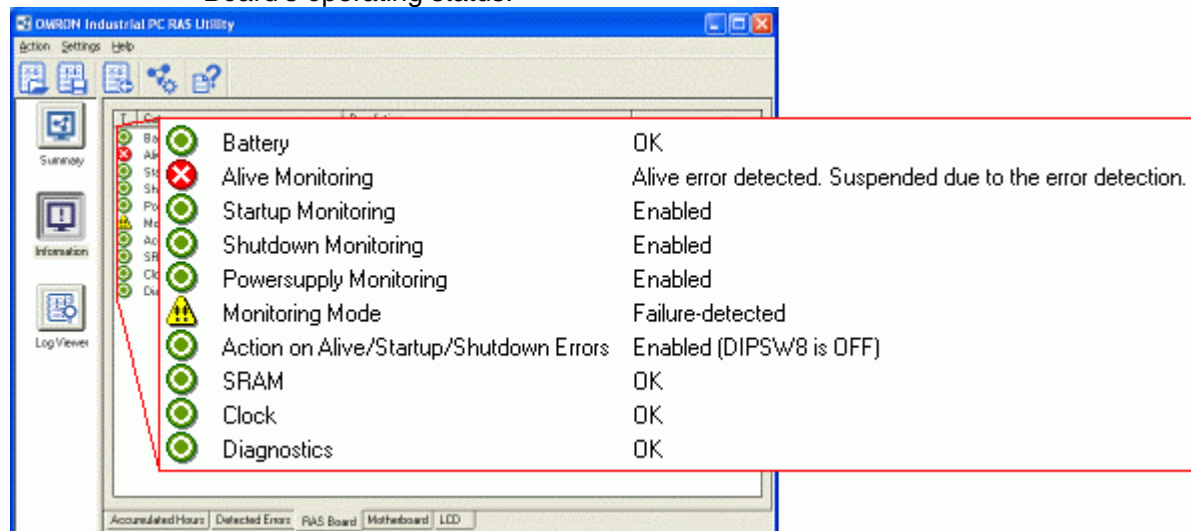


- **Motherboard:** This tab page shows the Motherboard's voltage and temperature information.

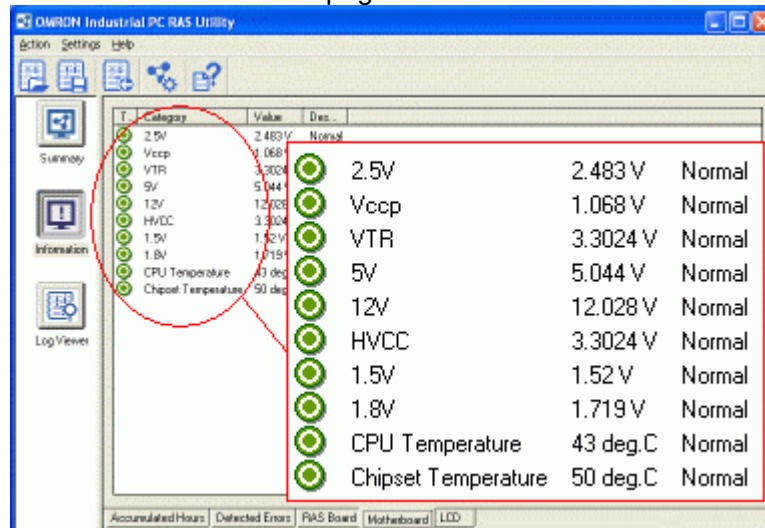

Note: For details on using this window, refer to the RAS Utility's Help function.


4-4-4 Log Viewer (Filter and Find)

The RAS Utility obtains the log from the RAS Board and Motherboard. The log data can be analyzed efficiently with the Filter and Find Functions.

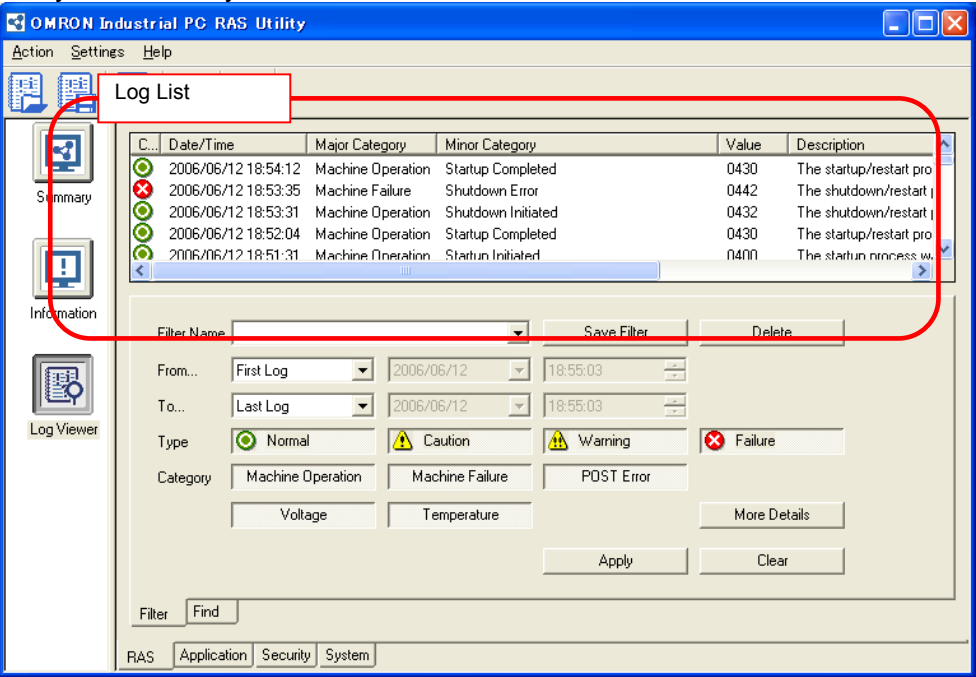


• Filter

Displays a list of the log data that meet the filter conditions.

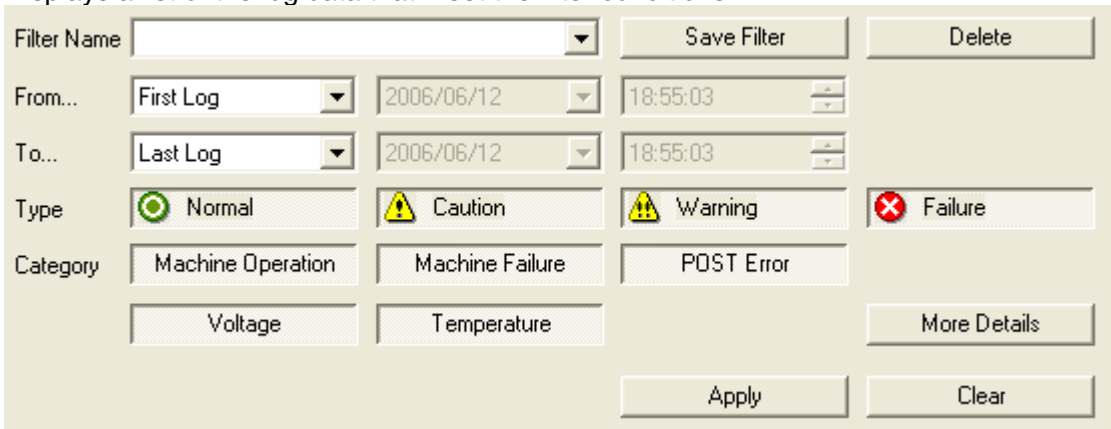

• Find

Focuses on the log data that meets the search conditions.

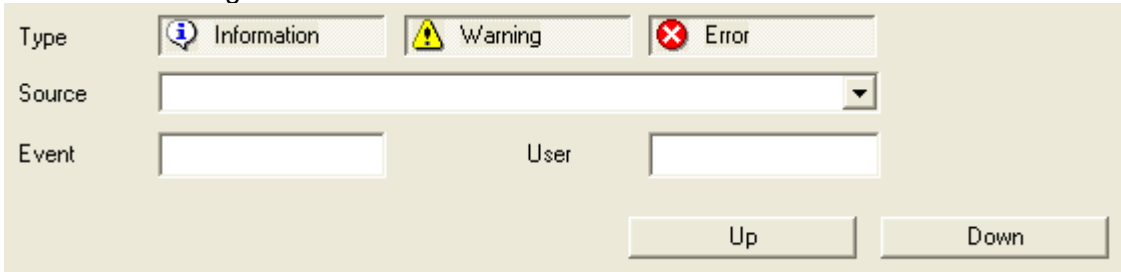

Note: For details on using this window, refer to the RAS Utility's Help function.

Note

To change the log date or time if incorrect, select **Action – Date/Time Setting** from the RAS Utility Menu to make the setting.

Section 5

Maintenance

5-1 Maintenance

Perform all maintenance work stipulated here to ensure optimum performance of the NSA-series Industrial PC.



WARNING

Do not disassemble, cut, modify, or burn the product, and do not touch internal parts while the power is ON. Doing so may cause electric shock or fire.



5-1-1 Data Backup

Always back up your data and keep the backup in a safe place because the NSA-series Industrial PC may have to be sent out for repairs or replaced if a malfunction should occur.

5-1-2 Spare Units

We recommend that you always keep spare Units on hand to get your system up and running again as quickly as possible in case a malfunction should occur or the screen becomes unreadable upon reaching the lifetime of the backlight.

5-1-3 Backlights (LCD Module)

The LCD module will have to be replaced if the contrast on the display declines and the screen becomes difficult to read.

■ Guidelines for Replacing the Backlight (LCD Module)

A period of 50,000 hours of operation at room temperature with normal humidity can be used as a guideline for replacing the backlight.

The service life of the backlight can vary significantly with the ambient temperature. It is shortened by extremely high or low temperatures, falling off sharply under low-temperature conditions. Request replacement of the backlight when the brightness has dropped to half of the brightness when it was new.

Do not attempt to replace the LCD module yourself. Contact your OMRON representative to replace the LCD module.

5-1-4 Batteries

One lithium battery on the motherboard and another on the RAS board are used to back up the calendar, clock, and log data. The service life of these batteries is approximately five years in an operating environment maintained at 25°C and is shorter in environments with a higher ambient temperature. Replace the batteries periodically depending on the operating environment.

Motherboard battery: NSA-BAT01

RAS board battery: NSA-BAT01

■ Guidelines for Replacing Batteries


The guidelines for replacing lithium batteries are as follows:

- Five years have elapsed since a new battery was installed.
- The BATLOW indicator on the RAS Board is lit (the RAS Board battery only).

Note

- Dispose of any battery that has been dropped on the floor or otherwise subjected to excessive shock, as this may cause the battery fluid to leak.
- Make sure you have the correct type of battery and that you install it properly.
- Replace the battery yourself.
- Operation may not be normal if a battery other than the specified battery is used.

■ Procedure for Replacing Batteries

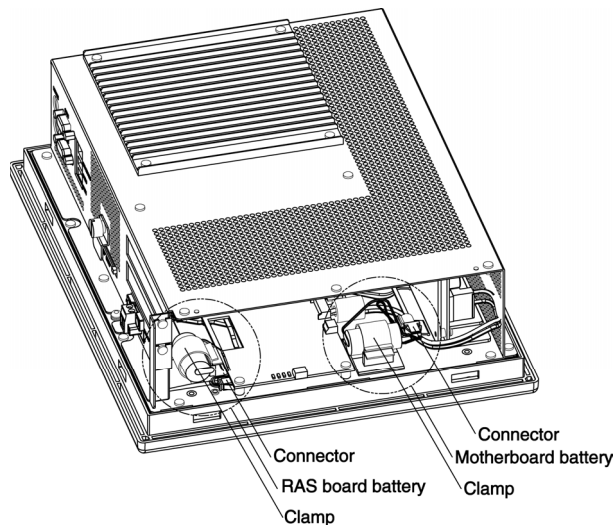

■ Changing the RAS Board Battery

1. Backup the maintenance status data held in the RAS board.
Refer to C:\Program Files\OMRON\tools\readme.html for the backup procedure for maintenance status data on the RAS board.
2. Remove the side cover. (Refer to 3-2 *Installing a PCI Board and Setting the DIP Switch.*)
3. Remove the RAS board battery from the clamps, and then unhook the connectors.
4. Replace the battery, and then assemble the unit in the reverse order.
5. Register the maintenance status data in the RAS board.
Refer to C:\Program Files\OMRON\tools\readme.html for the registration procedure for maintenance status data in the RAS board.

Note

Maintenance status data will become corrupted when the RAS board battery is replaced. The maintenance status data on the RAS board must be backed up and then registered.


■ Replacing the Motherboard Battery

1. Remove the side cover. (Refer to 3-2 *Installing a PCI Board and Setting the DIP Switch*.)
2. Remove the motherboard battery from the clamps, and then unhook the connectors.
3. Replace the battery, and then assemble the unit in the reverse order.
4. Initialize the BIOS settings, and then set the time and date.

(1) Setting up the BIOS and Starting and Exiting the BIOS Menu

The following message will be displayed at the bottom of the window when the system power supply is turned ON.

- Logo Displayed



Press F2 for System Utilities

- Logo Not Displayed

Press <F2> to enter SETUP

Press the F2 Key while the message is displayed. The Setup Menu will start, and the Main Setting Dialog Box will be displayed.

Note: The password must be entered if one has been set.

(2) Initializing BIOS Settings

Select *Exit – Load Setup Defaults* using the Arrow Key, and press the Enter Key. The BIOS settings will be initialized.

(3) Setting the Date and Time

Using the Arrow Key, select *Main – System Time* or *System Date* to set the time or date.

System Time	HH:MM:SS	Time setting
System Date	MM/DD/YYYY	Date setting

(4) Setting up BIOS and Exiting the BIOS Menu

Select *Exit – Exit Saving Changes* using the Arrow Key, and press the Enter Key. The BIOS settings will be saved, and the menu will close (restart).

Note

- The BIOS will be unstable after the motherboard battery has been replaced. Be sure to initialize BIOS and redo the settings.
- The system may not start (nothing will be displayed) after the motherboard battery has been replaced. If this occurs, unhook the motherboard battery connector with the device power supply OFF, and reconnect the battery after waiting 10 s.

5-2 Cleaning and Inspecting

Clean and inspect the NSA-series Industrial PC regularly to ensure optimal performance.

5-2-1 Cleaning

The display becomes difficult to read when it gets dirty. Be sure to clean it regularly as described below.

Use a soft, dry cloth to wipe off the display every day. Do not use excessive force to clean a display that is very dirty because you may damage the front panel. Instead, moisten the cloth first to remove the dirt.

- If wiping the display with a dry cloth fails to remove the dirt, moisten the cloth with a highly diluted solution of mild detergent (2%) and then wring the cloth well before using it to wipe off the display.
- Adhering rubber, vinyl, or tape to the Unit for extended periods of time will stain the NSA-series Industrial PC. Remove these items from the Unit each time you clean it.

Note

Never use chemically treated cloth or volatile solvents, such as benzene or thinner, to clean the product.

5-2-2 Inspecting

Inspect the NSA-series Industrial PC once or twice a year. Shorten the interval between inspections if the operating environment is extremely warm, moist, or dusty.

■ Inspection Items

Inspect the following items to make sure they are within acceptable levels according to the judgment criteria. If the inspection results fall outside these levels, improve the operating environment and re-tighten screws or take other measures to bring the results back within the acceptable range.

Inspection item	Inspection details	Judgement criteria	Inspection method
Supply voltage	Power terminal voltage fluctuation	Allowable voltage fluctuation range (24 VDC \pm 15%)	Circuit tester
Ambient operating conditions	Ambient temperature in the operating panel and near the LCD display	0 to 50°C (See 1-2-2.)	Thermometer
	Ambient humidity in the operating panel and near the LCD display	10% to 85% (See 1-2-2.)	Hygrometer
	Presence of dust	No dust built up.	Visual
	Presence of oil build up	No specks of oil between the front panel and the molded plastic.	Visual
Mounting conditions	Loose Mounting Brackets	Tightened to the specified torque	Torque screwdriver

5-2 Cleaning and Inspecting

5-2-2 Inspecting

Inspection item	Inspection details	Judgement criteria	Inspection method
	Cable connector status	Connectors are fully inserted, locked in place, and show no signs of looseness.	Phillips head screwdriver
	Loose screws on external wiring	No looseness.	Flat-blade screwdriver
	External connecting cable status	No problems such as cuts or cracks.	Visual, circuit tester
Consumables	Backlight contrast	Sufficient contrast Service life at room temperature (25°C): Use 50,000 hours as a guideline.	Visual
	Batteries	5 years at room temperature (25°C)	Replace every 5 years.

Note

- Do not attempt to disassemble, repair, or modify the product in any way.
- Dispose of the product and batteries according to local ordinances as they apply. Have qualified specialists properly dispose of used batteries as industrial waste.

5-3 Troubleshooting Guide

This section describes remedies for problems that may occur during operation of the product. Refer to the following table if a problem occurs.

5-3-1 Remedies for Problems

Problem	Possible cause	Remedy
The PS/2 keyboard or PS/2 mouse is not working.	The PS/2 keyboard or PS/2 mouse was connected while the OS was operating.	Always shut down the OS and turn OFF the power supply to the product before connecting the PS/2 keyboard or PS/2 mouse.
Entry on the touch panel is not working.	The touch panel was repeatedly pressed too quickly.	Confirm each entry before moving to the next entry.
The entry position on the touch panel is misaligned.	Deterioration over time caused misalignment.	Deterioration over time may cause misalignment in the coordinates compared to when the touch panel was new. If this occurs, recalibration is recommended. Refer to <i>3-5-1 Calibrating the Touch Panel</i> .
The PCI board does not fit.	The PCI board is larger than the specified size.	Refer to <i>3-2 Installing a PCI Board and Setting the DIP Switch</i> for information on the PCI boards that can be used.
The PCI board does not operate.	The power supplied to the PCI board is insufficient.	The power that can be supplied for PCI boards is 2.1 A max. at 5 VDC and 1.0 A max. at 3.3 VDC for the two slots combined. Check the PCI board specifications.
	The PCI board is not being used in the proper ambient operating temperature range.	There are restrictions on the ambient operating temperature depending on the PCI board used. Use the PCI board in the proper ambient operating temperature range.
The power supply is not input.	The 24-VDC power is not being supplied.	Check the power supply connection wiring. Refer to <i>3-3-3 Connecting the Power Supply</i> .
	The time between turning OFF the external input voltage and turning ON the power again is too short.	The external input voltage must be held OFF for 10 s min between the time the external input voltage is turned OFF and the time the power is turned ON again. (Wait at least 10 s before turning the power supply ON again.)
The OS does not operate.	The start monitor time for the RAS board is too short.	Disable the Startup Monitoring Function of the RAS board. If it cannot be disabled, turn ON DIP switch pin 8 to disable the Action on Errors Function. Refer to <i>3-2 Installing a PCI Board and Setting the DIP Switch</i> .

5-3 Troubleshooting Guide

5-3-1 Remedies for Problems

Problem	Possible cause	Remedy
	A signal selector or other device is being used with the PS/2 keyboard or PS/2 mouse.	Make the connections directly without using a signal selector.
	There is a Windows system error.	Contact an OMRON sales representative if the Windows XP Embedded OS does not operate properly.
Failure notification is not given.	Failure notification is disabled.	Enable failure notification. Refer to 4-4-2 <i>Setting the Failure Notification Function</i> .
	The DIP switch is set to disable the Action on Errors Function.	Set the DIP switch to disable the Action on Errors Function and restart the device. Refer to 3-2 <i>Installing a PCI Board and Setting the DIP Switch</i> .
The date or time of the RAS log does not match the date or time of the OS.	The date or time in the OS was changed.	Set the time for RAS before setting the time for the RAS Utility. Refer to 4-4-4 <i>Log Filter (Filter and Find)</i> .
Insufficient memory	The memory capacity is insufficient.	Close unnecessary applications. If memory is still insufficient even after unnecessary applications have been closed, setup virtual memory. Refer to <i>Appendix 6 Using Virtual Memory</i> .

Appendix

Appendix 1 BIOS Setup

This section describes the procedure for using the BIOS setup menu of the NSA-series Industrial PC. The screens shown in this document are only examples and may differ slightly from the actual screens depending on the product.

Appendix 1-1 Using the Setup Menu

■ Starting Up and Exiting the BIOS Setup Menu

A message box like the one shown below will be displayed at the bottom of the screen when the system power supply is turned ON.

Logo Displayed:



Logo Not Displayed:

Press <F2> to enter SETUP.

1. Press the F2 Key while the message box is displayed to launch the setup menu.

2. The Main Setting Screen will be displayed.

Note: You must enter a password if one has been set.

3. Use the Down, Left, or Right Arrow Key to go to the next item and use the Enter Key to select the item.

Note: Refer to *Appendix 1-5 Main Menu* for details on individual screens.

Select the Exit Screen to exit from the setup menu.

Note: Refer to *Appendix 1-11 Exit Menu* for details on exit options.

Note

The RAS Board's startup monitoring is performed even during BIOS setup. Disable the startup monitoring function when making the BIOS settings. If the startup monitoring function cannot be disabled, turn ON pin 8 of the DIP switch to disable the Action on Error function.

Appendix 1-2 Screen Configuration

Menu Bar
Displays menu items.

Help Field
Explains the item that is currently selected.

PhoenixBIOS Setup Utility

Main

System Time: [09:50:46]
System Date: [08/25/2005]

Item Specific Help

- ▶ IDE Channel 0 Master [80026MB]
- ▶ IDE Channel 0 Slave [None]
- ▶ IDE Channel 1 Master [None]
- ▶ IDE Channel 1 Slave [None]
- ▶ IDE Channel 2 Master None
- ▶ IDE Channel 3 Master None

System Memory: 640 KB
Extended Memory: 1038336 KB

F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ← → Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Setting Field
Displays the items and settings available from each menu. Use the Up, Down, Left, and Right Arrow Keys to select an item. The item that is currently selected will be highlighted in reverse.

Key List
Displays a brief description of available keys.

Appendix

Appendix

Appendix 1-3 BIOS Setup Menu Keys


BIOS setup items can only be set from a keyboard. The following table lists the keys that are available from the BIOS setup utility and what the keys mean.

Key	Meaning
← →	Switches menus.
↑ ↓	Selects the item that will be set.
/+	Increases or decreases a value.
Tab	Moves to the next field.
Shift+Tab	Moves to the previous field.
F1	Displays the General Help Window for BIOS setup.
F9	Loads the default configuration value.
F10	Saves the settings to CMOS and exits the BIOS setup utility.
ESC	Moves to the Exit Menu or moves to the Main Menu from a Submenu.
Enter	Sets a value and moves to a submenu if one is available.

Appendix 1-4 Menu Configuration

The BIOS Menu lists the following selections. Submenus may be provided for more specific settings.

Menu	Description	Reference
Main	Sets the basic system configuration options.	Appendix 1-5
Advanced	Sets the Advanced Features available on your system's chipset.	Appendix 1-6
Intel	Sets the ECC and video function options for the chipset.	Appendix 1-7
Security	Sets the user and supervisor passwords as well as the backup and virus check options.	Appendix 1-8
Power	Sets the operation that will be executed after a power failure.	Appendix 1-9
Boot	Sets the device startup order.	Appendix 1-10
Exit	Exits the setup menu and saves, restores, or deletes EEPROM settings.	Appendix 1-11

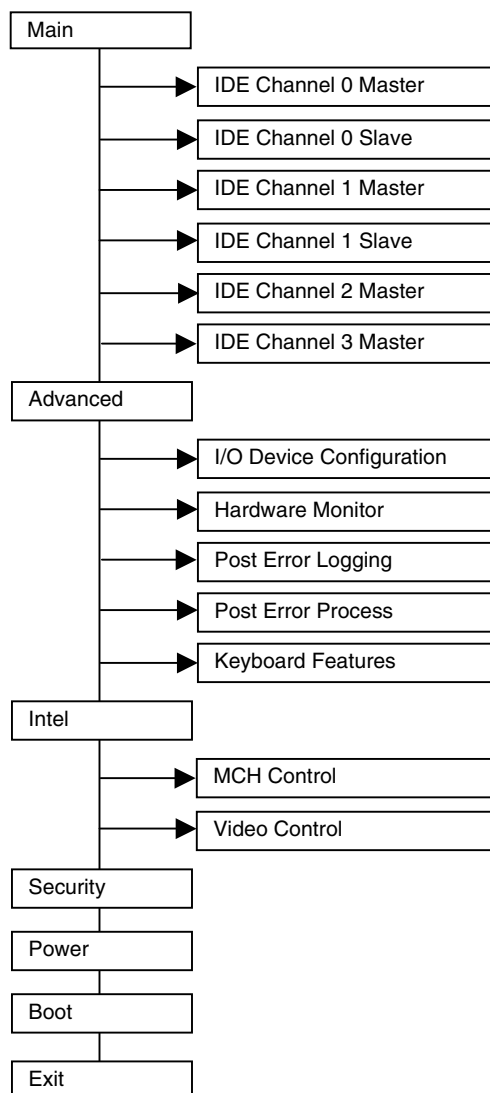

Appendix 1-5 Main Menu

Main Menu: Basic System Configuration Settings

PhoenixBIOS Setup Utility	
Main	
System Time: [09:50:46] System Date: [08/25/2005]	Item Specific Help
▶ IDE Channel 0 Master [80026MB] → 1 ▶ IDE Channel 0 Slave [None] ▶ IDE Channel 1 Master [None] ▶ IDE Channel 1 Slave [None] ▶ IDE Channel 2 Master None ▶ IDE Channel 3 Master None → 2	
System Memory: 640 KB Extended Memory: 1038336 KB	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit	

Function	Setting	Description
System Time	HH:MM:SS	Sets the system clock.
System Date	MM/DD/YYYY	Sets the system date.
IDE Channel 0 Master & Slave		Moves to submenu 1.
IDE Channel 1 Master & Slave	[None]	Secondary IDE is not available.
IDE Channel 2 & 3 Master		Moves to submenu 2.
System Memory	N/A	Displays the capacity of the conventional memory detected at startup.
Extended Memory	N/A	Displays the capacity of the extended memory detected at startup.

Note: The settings shown in the table are initial values.

(1) IDE Channel 0 Master Sub-Menu: IDE Settings

PhoenixBIOS Setup Utility		
Main		
IDE Channel 0 Master [80026MB]		Item Specific Help
Type: [Auto] LBA Format Total Sectors: 156301488 Maximum Capacity: 80026MB Multi-Sector Transfers: [16 Sectors] LBA Mode Control: [Enabled] 32 Bit I/O: [Disabled] Transfer Mode: [FPIO 4/ DMA 2] Ultra DMA Mode: [Disabled]		
F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit		

Function	Setting	Description
Type	[Auto] None ATAPI Removable CD-ROM IDE Removable Other ATAPI User	Sets the type of device that is connected to the system. Normally select the <i>Auto</i> option.
Total Sectors	N/A	Displays the total number of sectors.
Maximum Capacity	N/A	Displays the total capacity.
Multi-Sector Transfers (Not available if the Auto option is selected.)	[16 Sectors]	Sets the number of sectors sent per block.
LBA Mode Control (Not available if the Auto option is selected.)	[Enabled]	Enables the LBA mode.
32 Bit I/O	[Disabled] Enabled	Enables or disables 32-bit data transfers between the CPU and IDE.
Transfer Mode (Not available if the Auto option is selected.)	[FPIO 4/ DMA 2]	Selects the method used to transfer data between the hard disk and system memory.
Ultra DMA Mode (Not available if the Auto option is selected.)	[Disabled]	Sets the ultra DMA mode for transferring data.

Note: The settings shown in the table are initial values.

The settings shown in the table above are values with an 80-Gbyte hard disk connected.

(2) IDE Channel 2 & 3 Master Sub-Menu: IDE Settings

PhoenixBIOS Setup Utility	
Main	
IDE Channel 2 Slave [None]	Item Specific Help
<p>Type: [Auto]</p> <p>Multi-Sector Transfers: [Disabled]</p> <p>LBA Mode Control: [Disabled]</p> <p>32 Bit I/O: [Disabled]</p> <p>Transfer Mode: [Standard]</p> <p>Ultra DMA Mode: [Disabled]</p>	
<p>F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults</p> <p>Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit</p>	

Function	Setting	Description
Type	[Auto] None ATAPI Removable CD-ROM IDE Removable Other ATAPI User	Sets the type of device that is connected to the system.
Multi-Sector Transfers (Not available if the Auto option is selected)	[Disabled]	Sets the number of sectors sent per block.
LBA Mode Control (Not available if the Auto option is selected)	[Disabled]	Enables the LBA mode.
32 Bit I/O	[Disabled] Enabled	Enables or disables 32-bit data transfers between the CPU and IDE.
Transfer Mode (Not available if the Auto option is selected)	[Standard]	Selects the method used to transfer data between the hard disk and system memory.
Ultra DMA Mode (Not available if the Auto option is selected)	[Disabled]	Sets the ultra DMA mode for transferring data.

Note: The settings shown in the table are initial values.

The settings shown in the table above are values with a SATA hard disk connected.

Appendix 1-6 Advanced Menu

Advanced Menu: Chipset Expanded Function Settings

PhoenixBIOS Setup Utility	
Advanced	
<div style="display: flex; justify-content: space-between;"> <div> <p>Installed O/S: [WinXP]</p> <p>Reset Configuration Data: [No]</p> <p>Large Disk Access Mode: [DOS]</p> <p>Serial ATA: [Disabled]</p> <p>▶ I/O Device Configuration → 3</p> <p>▶ Hardware Monitor → 4</p> <p>▶ Post Error Logging → 5</p> <p>▶ Post Error Process → 6</p> <p>▶ Keyboard Features → 7</p> <p>Legacy USB Support: [Disabled]</p> <p>Summary screen: [Enabled]</p> <p>Boot-time Diagnostic Screen: [Enabled]</p> <p>QuickBoot Mode: [Disabled]</p> </div> <div style="border: 1px solid black; padding: 5px; width: 200px;"> <p style="text-align: center;">Item Specific Help</p> </div> </div>	
<div style="display: flex; justify-content: space-between;"> F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults </div> <div style="display: flex; justify-content: space-between;"> Esc Exit ← → Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit </div>	

Function	Setting	Description
Installed O/S	Other Win2000 [WinXP]	Selects the operating system that is installed on your system.
Reset Configuration Data	[No] Yes	Select Yes if you want to clear Extended System Configuration Data (ESCD) area.
Large Disk Access Mode	Other [DOS]	Sets the large disk access mode.
Serial ATA	[Disabled] Enabled	Enables or disables the serial ATA bus.
SATA RAID Enable (Serial ATA: Available only when enabled is selected)	[Disabled] Enabled	Enables or disables RAID functions via serial ATA.
I/O Device Configuration		Moves to submenu 3.
Hardware Monitor		Moves to submenu 4.
Post Error Logging		Moves to submenu 5.
Post Error Process		Moves to submenu 6.
Keyboard Features		Moves to submenu 7.
Legacy USB Support	[Disabled] Enabled	Enables or disables support for the Legacy Universal Serial Bus. Normally select the <i>Disabled</i> option.
Summary Screen	Disabled [Enabled]	Displays the System Summary Screen.

Function	Setting	Description
Boot-time Diagnostic Screen	Disabled [Enabled]	Displays the Self-diagnosis Screen. The OMRON Logo is not displayed when this function is enabled.
Quick Boot Mode	[Disabled] Enabled	Selects the Quickboot Mode for startup.

Note: The settings in the table are initial values.

(3) I/O Device Configuration Settings

PhoenixBIOS Setup Utility		
Advanced		
I/O Device Configuration		Item Specific Help
COM Port 1:	[Enabled]	
Base I/O address:	[3F8]	
Interrupt:	[IRQ 4]	
COM Port 2:	[Enabled]	
Base I/O address:	[2F8]	
Interrupt:	[IRQ 3]	
COM Port 3:	[Enabled]	
Base I/O address:	[3E8]	
Interrupt:	[IRQ 6]	
COM Port 4:	[Enabled]	
Base I/O address:	[2E8]	
Interrupt:	[IRQ 5]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ←→ Select Menu Enter Select ▲ Sub-Menu F10 Save and Exit		

Function	Setting	Description
COM Port 1	Disabled [Enabled]	Enables or disables COM port 1.
Base I/O address	[3F8] 2FB 3E8 2E8	Selects the I/O address allocated to the COM port.
Interrupt	[IRQ 4] IRQ 3	Selects the IRQ allocated to the COM port.
COM Port 2	Disabled [Enabled]	Enables or disables COM port 2.
Base I/O address	3F8 [2F8] 3E8 2E8	Selects the I/O address allocated to the COM port.
Interrupt	IRQ 4 [IRQ 3]	Selects the IRQ allocated to the COM port.
COM Port 3	Disabled [Enabled]	Enables or disables COM port 3.
Base I/O address	3F8 2FB [3E8] 2E8 220 228 238 338	Selects the I/O address allocated to the COM port.
Interrupt	IRQ 5 [IRQ 6]	Selects the IRQ allocated to the COM port.
COM Port 4	Disabled [Enabled]	Enables or disables COM port 4.
Base I/O address	3F8 2FB 3E8 [2E8] 220 228 238 338	Selects the I/O address allocated to the COM port.
Interrupt	[IRQ 5] IRQ 6	Selects the IRQ allocated to the COM port.

Note: The settings in the table are initial values.

(4) Hardware Monitor Settings

PhoenixBIOS Setup Utility		
Advanced		
Hardware Monitor		Item Specific Help
V+12 = 12.12 V V+1.5 = 1.49 V V+1.8 = 1.80 V V+2.5 = 2.48 V V+3.3 = 3.28 V V+5 = 5.18 V Vccp = 1.04 V VHVCC = 3.28 V CPU Temp = 27 °C/80 ° F Ambient Temp = 33 °C/91 ° F FAN 1 speed = 4671 RPM FAN 2 speed = 0 RPM		
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ←→ Select Menu Enter Select ► Sub-Menu F10 Save and Exit		

Function	Setting	Description
V+12	Display only	+12 V
V+1.5	Display only	+1.5 V
V+1.8	Display only	+1.8 V
V+2.5	Display only	+2.5 V
V+3.3	Display only	+3.3 V
V+5	Display only	+5 V
Vccp	Display only	+1.05 V
VHVCC	Display only	+3.3 V
CPU Temp	Display only	CPU temperature
Ambient Temp	Display only	System temperature
FAN 1 speed	Display only	CPU fan rpm
FAN 2 speed	Display only	System fan rpm

Note: The settings in the table are initial values.
The display will show 0 RPM if no fan is connected.

(5) POST Error Logging: POST Error Log Settings

PhoenixBIOS Setup Utility	
Advanced	
Post Error Logging	Item Specific Help
Post Error Logging [Enabled] Clear All Error View Post Error Log [View Log] 1. Post Error Code: 54h Time:14 M/D:08/23 2. Post Error Code: 51h Time:14 M/D:08/23 3. Post Error Code: 54h Time:16 M/D:08/24 4. Post Error Code: 51h Time:16 M/D:08/24	
F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit	

Function	Setting	Description
Post Error Logging	Disabled [Enabled]	Enables or disables POST error logging when an error occurs.
Clear All Error	N/A	Deletes all POST error logs.
View Post Error Log	[View Log] Hide Log	Displays the POST error logs. Up to 32 POST error log records can be saved in the EEPROM.

Note: The settings in the table are initial values.

(6) POST Error Process Settings

PhoenixBIOS Setup Utility	
Advanced	
Post Error Process	Item Specific Help
Mode: [Normal]	
F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ←→ Select Menu Enter Select ► Sub-Menu F10 Save and Exit	

Function	Setting	Description
Mode	[Normal] Retry Auto	Selects the operation that will be performed when a POST error occurs. Normal: Shuts down after an error occurs. Retry: Shuts down when the number of retries is exceeded or turns the power OFF. Auto: Ignores the error and resumes startup.
Retry Counter (Mode: Available only when Retry is selected.)	1 2 [3] 4 . . 14 15	Sets the number of retries from 1 to 15.
Timer (Mode: Available only when Retry or Auto is selected.)	1 [3] 5 10 15	Sets the amount of time before the next retry after a POST error occurs.
Auto Resume (Mode: Available only when Retry is selected.)	[Enabled] Disabled	Selects whether to ignore the error when the number retries for a POST error is exceeded and resumes startup.
Power Off (Mode: Available only when Retry is selected.)	Enabled [Disabled]	Selects whether to turn the power OFF when the number of retries is exceeded for a POST error.

Note: The settings in the table are initial values.

(7) Keyboard Features

PhoenixBIOS Setup Utility	
Advanced	
Keyboard Features	Item Specific Help
NumLock: [Auto] Key Click: [Disabled] Keyboard auto-repeat rate: [30/sec] Keyboard auto-repeat delay: [1/2 sec] KBC Error [Disabled]	
F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit	

Function	Setting	Description
NumLock	[Auto] On Off	Enables the NumLock Key on the keyboard.
Key Click	[Disabled] Enabled	Enables or disables the audible beep when a key is pressed on the keyboard.
Keyboard auto-repeat rate	[30/sec] 26.7/sec 21.8/sec 18.5/sec 13.3/sec 10/sec 6/sec 2/sec	Selects the number of times per second to repeat a keystroke when you hold a key down.
Keyboard auto-repeat delay	1/4 sec [1/2 sec] 3/4 sec 1 sec	Selects the delay time after a key is held down before it begins to repeat the keystroke.
KBC Error	[Disabled] Enabled	Enables or disables the keyboard connection check at startup. Normally select the <i>Disabled</i> option.

Note: The settings in the table are initial values.

Appendix 1-7 Intel Menu

PhoenixBIOS Setup Utility

Intel

▶ MCH Control → 8

▶ Video Control → 9

Item Specific Help

F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults

Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Function	Setting	Description
MCH Control		Moves to submenu 8.
Video Control		Moves to submenu 9.

(8) MCH Control

PhoenixBIOS Setup Utility

Intel

MCH Control

Item Specific Help

DDR ECC Operation: [Enabled]

F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults

Esc Exit ←→ Select Menu Enter Select ▶ Sub-Menu F10 Save and Exit

Appendix

Appendix

Function	Setting	Description
DDR ECC Operation (Available only when ECC memory is used)	Disabled [Enabled]	Enables or disables ECC functions. It is disabled automatically when non-ECC memory is used.

Note: The settings in the table are initial values.

(9) Video Control

PhoenixBIOS Setup Utility	
Intel	
Video Control	Item Specific Help
Default Primary Video Adapter: [PCI] IGD-Memory Size: [UMA = 8MB] IGD-Boot Type: [VBIOS Default] IGD-LCD Panel Type: [1024×768 LVDS]	
F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit	

Function	Setting	Description
Default Primary Video Adapter	[PCI] AGP	Selects the primary video adapter that will be used.
IGD - Memory Size	UMA = 1MB [UMA = 8MB] UMA = 16MB UMA = 32MB	Selects the size of memory that will be used for graphics.
IGD - Boot Type	[VBIOS Default] CRT LCD CRT + LCD EFP CRT + EFP	Selects the type of monitor output provided at startup. Selecting VBIOS default will provide either a CRT or a DVI (EFP) monitor output. Note that VBIOS cannot provide a VGA and DVI monitor output at the same time. If a VGA and a DVI monitor are connected at the same time, the DVI monitor will be used.
IGD – LCD Panel Type	640×480 LVDS 800×600 LVDS [1024×768 LVDS] 1280×1024 LVDS 1400×1050 LVDS1 1400×1050 LVDS2 1600×1200 LVDS 8: Reserved ... 16: Reserved	Selects the type of LCD monitor that will be used.

Note: The settings in the table are initial values.

The NSA-series Industrial PC does not have a connector for a CRT or DVI (EFP) monitor.

Appendix 1-8 Security Menu

Security Menu: Supervisor Password, Backup and Virus Check Settings

PhoenixBIOS Setup Utility		
Security		
FirstWare Authentication Level	[Hight]	Item Specific Help
Supervisor Password Is:	Clear	
User Password Is:	Clear	
Set Supervisor Password	[Enter]	
Set User Password	[Enter]	
Fixed disk boot sector	[Normal]	
Virus check reminder:	[Disabled]	
System backup reminder:	[Disabled]	
Password on boot:	[Disabled]	
F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit		

Function	Setting	Description
FirstWare Authentication Level	[High] Medium Low	Sets the FirstWare authentication level. This setting is not available if FirstWare is not used.
Supervisor Password	Display only (Clear/Set)	Displays the supervisor password status.
User Password	Display only (Clear/Set)	Displays the user password status.
Set Supervisor Password	Up to seven alphanumeric characters	Sets the supervisor password.
Set User Password	Up to seven alphanumeric characters	Sets the user password.
Fixed disk boot sector	[Normal] Write Protect	Sets the level of protection for the boot sector.
Virus check reminder System backup	[Disabled] Daily Weekly Monthly	Displays backup and virus check reminders at startup. Enabled when a password is set.
Password on boot	[Disabled]	Requires a password on startup if enabled.

Note: The settings in the table are initial values.

Appendix 1-9 Power Menu

Power Menu: Power Management Settings

PhoenixBIOS Setup Utility

Power

After Power Failure: [Power On]

Item Specific Help

F1 Help ↑ ↓ Select Item -/+ Change Values F9 Setup Defaults
Esc Exit ← → Select Menu Enter Select ► Sub-Menu F10 Save and Exit

Function	Setting	Description
After Power Failure	Stay OFF Last State [Power ON]	Selects the operation executed after a power failure. Stay OFF: Always stay OFF Last State: Return to the most recent state. Power ON: Always stay ON

Note: The settings in the table are initial values.

Note

Normally, select the Power ON setting because the NSA-series Industrial PC does not have a START switch.

Appendix 1-10 Boot Menu

Boot Menu: Startup Device Settings

PhoenixBIOS Setup Utility

Boot

Removable Devices

+Hard Drive

CD-ROM Drive

Network Boot

Item Specific Help

F1 Help ↑↓ Select Item -/+ Change Values F9 Setup Defaults

Esc Exit ←→ Select Menu Enter Select ► Sub-Menu F10 Save and Exit

Function	Setting	Description
Priority of the Boot Device	Removable Device Hard Drive CD-ROM Drive Network Boot	Specifies the priority in the search for a startup device.

Note: Press the Enter Key to show additional devices when a value has a plus (+) sign next to it.

Appendix 1-11 Exit Menu

Exit Menu: Exiting the Setup Menu

PhoenixBIOS Setup Utility

Exit

Exit Saving Changes

Exit Discarding Changes

Load Setup Defaults

Discard Changes

Save Changes

Backup CMOS [Press Enter]

Restore CMOS [Press Enter]

Clear EEP-ROM [Press Enter]

Item Specific Help

F1 Help

↑ ↓ Select Item

-/+ Change Values

F9 Setup Defaults

Esc Exit

← → Select Menu

Enter Select

► Sub-Menu

F10 Save and Exit

Function	Setting	Description
Exit Saving Changes	N/A	Saves changes and exits.
Exit Discarding Changes	N/A	Discards changes and exits.
Load Setup Defaults	N/A	Returns to default settings.
Discard Changes	N/A	Discards changes.
Save Changes	N/A	Saves changes.
Backup CMOS	[Press Enter]	Saves the current CMOS settings to EEPROM.
Restore CMOS	[Press Enter]	Restores the CMOS settings in EEPROM to the CMOS.
Clear EEP-ROM	[Press Enter]	Clears all CMOS settings and POST error log data in EEPROM.

Note: The settings in the table are initial values.

Appendix 2 Using the Enhanced Write Filter

This section describes the use of the Enhanced Write Filter (EWF) for increasing the reliability of the NSA-series Industrial PC.

Appendix 2-1 About the EWF Function

To protect the OS and application software stored in the DiskOnModule (DOM) storage drive of the NSA-series Industrial PC, it is possible to prohibit the writing of data to the DOM. This is done by using the Enhanced Write Filter of the Windows XP Embedded OS. By using this function, any data that is to be written from the OS or application software is emulated in the main memory, so it appears to the user that the data is written or settings are changed in the same manner as in ordinary Windows operation, but in reality all data and settings changes are deleted each time Windows is restarted or the power is turned OFF.


The EWF function is disabled when the NSA-series Industrial PC is shipped from the factory. To use the EWF function, you must enable it (see *Appendix 2-3*). When the EWF function is enabled and it is necessary to update data on the DOM due to settings changes or file updates, the updated content can be reflected as described in *Appendix 2-4*. Another way to do this is to disable the EWF function and update the data to the DOM directly, as described in *Appendix 2-5*. When any change is made to the EWF function, the Unit must be restarted for the change to take effect.

Appendix 2-2 Confirming the Operating State of the EWF Function

Display the command prompt screen, then input the following command to confirm the operating state of the EWF function.

Command: ewfmgr c:

Execution Example

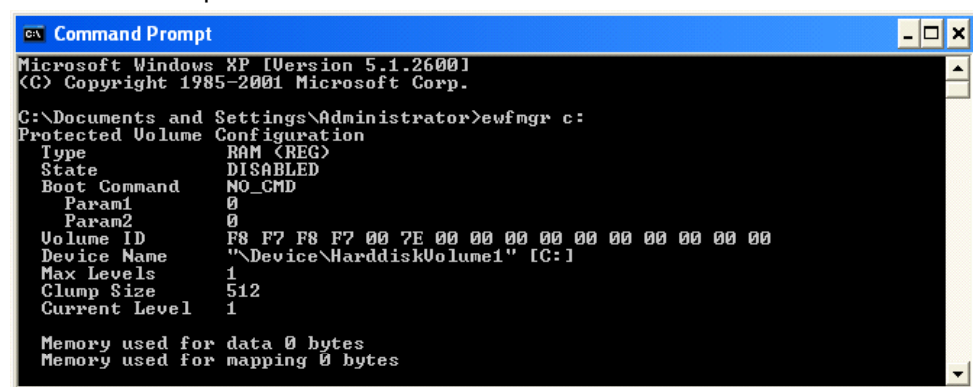

```
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ewfmgr c:
Protected Volume Configuration
Type                RAM <REG>
State               DISABLED
Boot Command        NO_CMD
Param1              0
Param2              0
Volume ID           F8 F7 F8 F7 00 7E 00 00 00 00 00 00 00 00 00 00
Device Name         "\Device\HarddiskVolume1" [C:]
Max Levels          1
Clump Size           512
Current Level        1

Memory used for data 0 bytes
Memory used for mapping 0 bytes
```

Definition: State

Displays the operating state of the EWF function.

ENABLED – Indicates that the EWF function is enabled. The function will emulate writing data to the DOM.


DISABLED – Indicates that the EWF function is disabled. Data will be directly written to the DOM.

Appendix 2-3 Enabling the EWF Function

Display the command prompt screen, then input the following command to enable the EWF function. After the Unit is normally restarted, the data on the DOM will not be directly written, but will be emulated on the main memory.

Command: ewfmgr c: -enable

Execution example

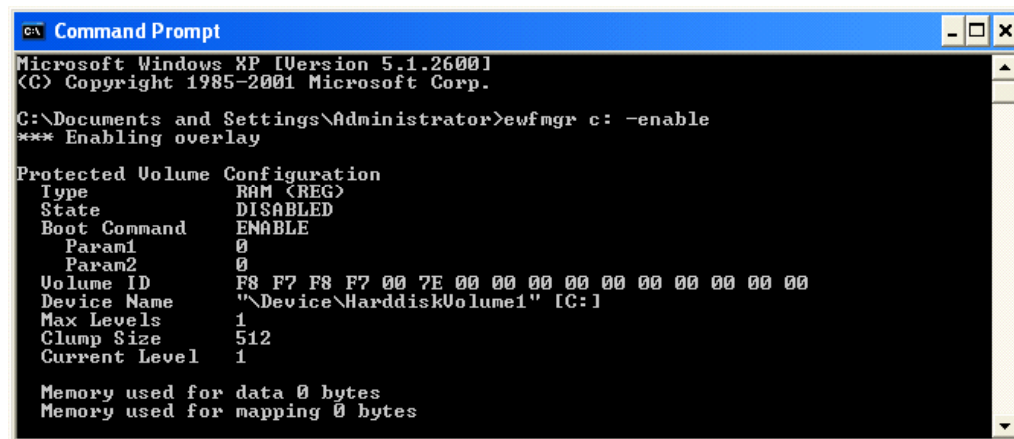

```

C:\> Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ewfmgr c: -enable
*** Enabling overlay

Protected Volume Configuration
Type          RAM <REG>
State         DISABLED
Boot Command  ENABLE
Param1        0
Param2        0
Volume ID     F8 F7 F8 F7 00 7E 00 00 00 00 00 00 00 00 00 00
Device Name   "\Device\HarddiskVolume1" [C:]
Max Levels    1
Clump Size    512
Current Level  1

Memory used for data 0 bytes
Memory used for mapping 0 bytes


```

Appendix 2-4 Updating Data on the DOM When the EWF Function Is Enabled

Display the command prompt screen, then input the following command to update the data on the DOM even when the EWF function is enabled. The next time that the Unit is normally restarted or shut down, the data that was emulated on the main memory will be reflected on the DOM.

Command: ewfmgr c: -commit

Execution example

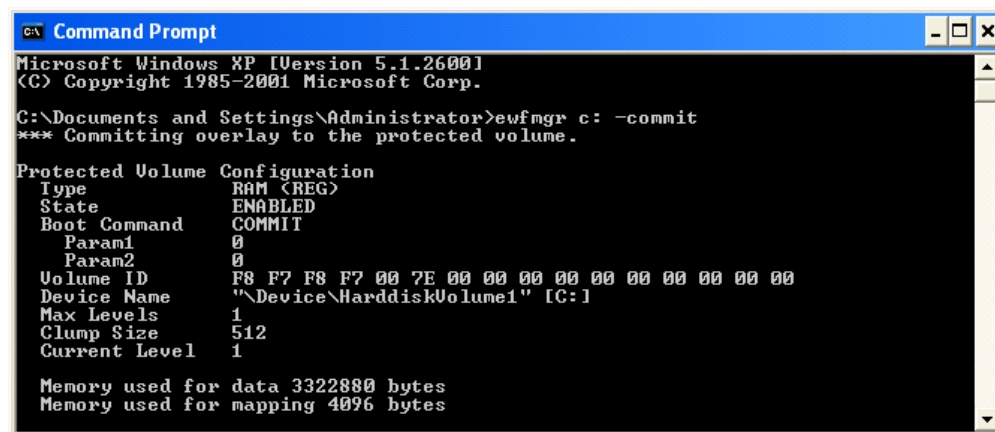

```

C:\> Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ewfmgr c: -commit
*** Committing overlay to the protected volume.

Protected Volume Configuration
Type          RAM <REG>
State         ENABLED
Boot Command  COMMIT
Param1        0
Param2        0
Volume ID     F8 F7 F8 F7 00 7E 00 00 00 00 00 00 00 00 00 00
Device Name   "\Device\HarddiskVolume1" [C:]
Max Levels    1
Clump Size    512
Current Level  1

Memory used for data 3322880 bytes
Memory used for mapping 4096 bytes

```



Appendix 2-5 Disabling the EWF Function

Display the command prompt screen, then input the following command to disable the EWF function. The next time that the Unit is normally restarted or shut down, the data that was emulated on the main memory will be reflected on the DOM.

After the Unit is normally restarted, the data on the DOM will be directly written.

Command: ewfmgr c: -commitanddisable

Execution example

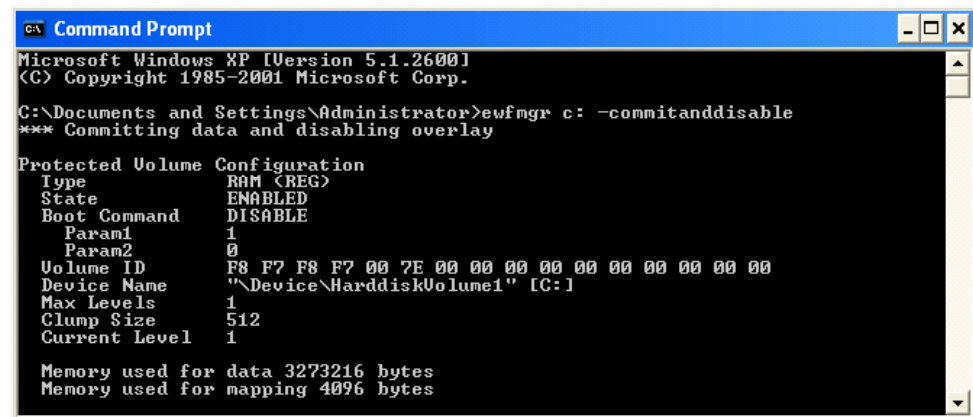

```
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ewfmgr c: -commitanddisable
*** Committing data and disabling overlay

Protected Volume Configuration
Type          RAM <REG>
State         ENABLED
Boot Command   DISABLE
Param1        1
Param2        0
Volume ID     F8 F7 F8 F7 00 7E 00 00 00 00 00 00 00 00 00 00
Device Name   "\Device\HarddiskVolume1" [C:]
Max Levels    1
Clump Size    512
Current Level 1

Memory used for data 3273216 bytes
Memory used for mapping 4096 bytes
```

Appendix 2-6 Precautions

- When the EWF function is enabled, since the data written to the DOM is emulated on the main memory, the system memory space will be reduced and operation may become unstable when a large amount of data is written. To prevent this problem, it is recommended that large amounts of data be written to a memory other than the DOM, such as a memory card.
- The writing lifetime per sector of the DOM on this Unit is 100,000 cycles. In order to increase the reliability of the DOM, it is recommended that the Unit be used with the EWF function enabled.
- In the Industrial PC, the OS and RAS Utility store the event logs in the D: drive. Consequently, the EWF function must be disabled with respect to the D: drive in order to save the event logs even after the Industrial PC is restarted.

Appendix 2-7 Reference

For detailed specifications of the EWF function, see the following URL addresses.

EWF Definitions:

<http://msdn.microsoft.com/library/default.asp?url=/library/en-us/xpehelp/html/xerefewdefinitions.asp>

EWF Overview:

<http://msdn.microsoft.com/library/default.asp?url=/library/en-us/xpehelp/html/xeconewfoverview.asp>


EWF Architecture:

<http://msdn.microsoft.com/library/default.asp?url=/library/en-us/xpehelp/html/xeconewfarchitecture.asp>

EWF Manager Commands:

<http://msdn.microsoft.com/library/default.asp?url=/library/en-us/xpehelp/html/xetskewfmanagerusage.asp>

For detailed information on the usage and options of the ewfmgr command, designate the /? option from the command prompt to display the help section.

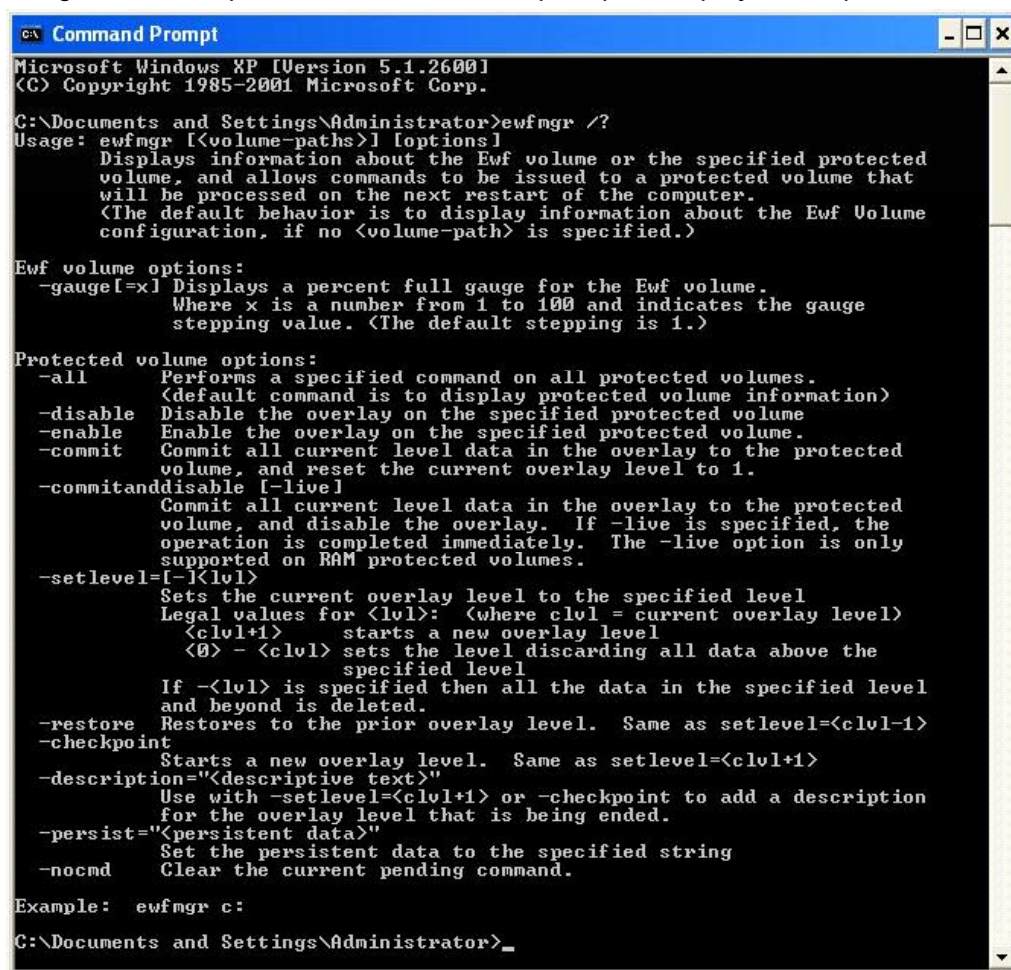

```
CA Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ewfmgr /?
Usage: ewfmgr [<volume-paths>] [options]
    Displays information about the Ewf volume or the specified protected
    volume, and allows commands to be issued to a protected volume that
    will be processed on the next restart of the computer.
    (The default behavior is to display information about the Ewf Volume
    configuration, if no <volume-path> is specified.)

Ewf volume options:
    -gauge[=x] Displays a percent full gauge for the Ewf volume.
                Where x is a number from 1 to 100 and indicates the gauge
                stepping value. (The default stepping is 1.)

Protected volume options:
    -all        Performs a specified command on all protected volumes.
                (default command is to display protected volume information)
    -disable    Disable the overlay on the specified protected volume
    -enable     Enable the overlay on the specified protected volume.
    -commit     Commit all current level data in the overlay to the protected
                volume, and reset the current overlay level to 1.
    -commitanddisable [-live]
                Commit all current level data in the overlay to the protected
                volume, and disable the overlay. If -live is specified, the
                operation is completed immediately. The -live option is only
                supported on RAM protected volumes.
    -setlevel=[-l<lvl>]
                Sets the current overlay level to the specified level
                Legal values for <lvl>: (where clvl = current overlay level)
                <clvl+1> starts a new overlay level
                <0> - <clvl> sets the level discarding all data above the
                specified level
                If <-lvl> is specified then all the data in the specified level
                and beyond is deleted.
    -restore    Restores to the prior overlay level. Same as setlevel=<clvl-1>
    -checkpoint
                Starts a new overlay level. Same as setlevel=<clvl+1>
    -description "<descriptive text>"
                Use with -setlevel=<clvl+1> or -checkpoint to add a description
                for the overlay level that is being ended.
    -persist="<persistent data>"
                Set the persistent data to the specified string
    -nocmd      Clear the current pending command.

Example: ewfmgr c:

C:\Documents and Settings\Administrator>_
```

Appendix

Appendix

Appendix 3 Precautions for Changing Factory Settings for Windows XP Embedded


When changing the factory settings for the Windows XP Embedded system that is preinstalled in NSA-series Industrial PCs, keep the following points in mind.

- The Windows firewall is enabled when the product is shipped from the factory. Make the appropriate settings as required.
- The administrator password is not set when the product is shipped from the factory. Set a password as required. If a password has been set, however, a keyboard will be required when logging on.
- To use a USB-connected floppy disk drive, keyboard, or mouse when starting Windows to update the BIOS or recover the Windows system, select *Advanced* from the BIOS set-up menu and set *Legacy USB Support* to *Enabled*.
- Windows XP Embedded is an OS designed for embedded use. Some application programs that operate on the Windows XP Professional OS may not operate on the Windows XP Embedded OS of an NSA-series Industrial PC. In addition, the Windows components cannot be added and deleted by selecting *Add or Remove Programs* from the *Control Panel*.


Appendix 4 Connecting an NE1S-Series CPU Unit

Two serial ports cannot be used at the same time if the NE Programmer is installed in the NSA-series Industrial PC and an NE1S-Series CPU Unit is connected using the USB port. The use of either COM1 or COM 2 must be prohibited.


1. Start the NSA-series Industrial PC and open the Control Panel from the **Start** Button at the bottom left of the screen. Select **System**.

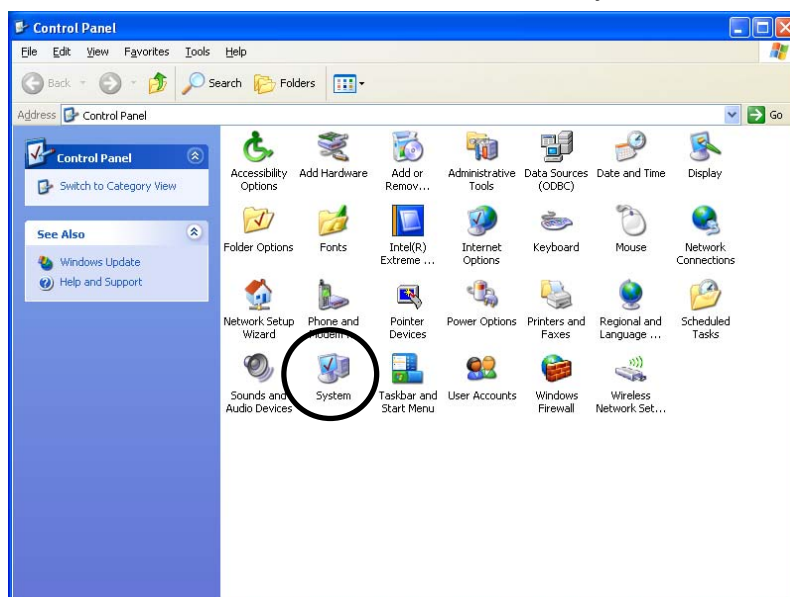

2. Click the **Hardware** Tab in the displayed System Properties Dialog Box, and click the **Device Manager** Button.

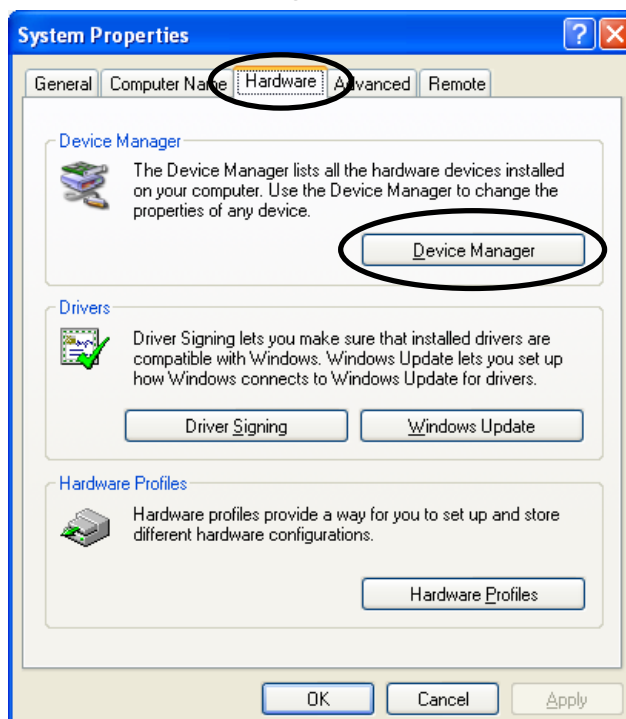


3. Select the communications port (either COM1 or COM2) from the Device manager.

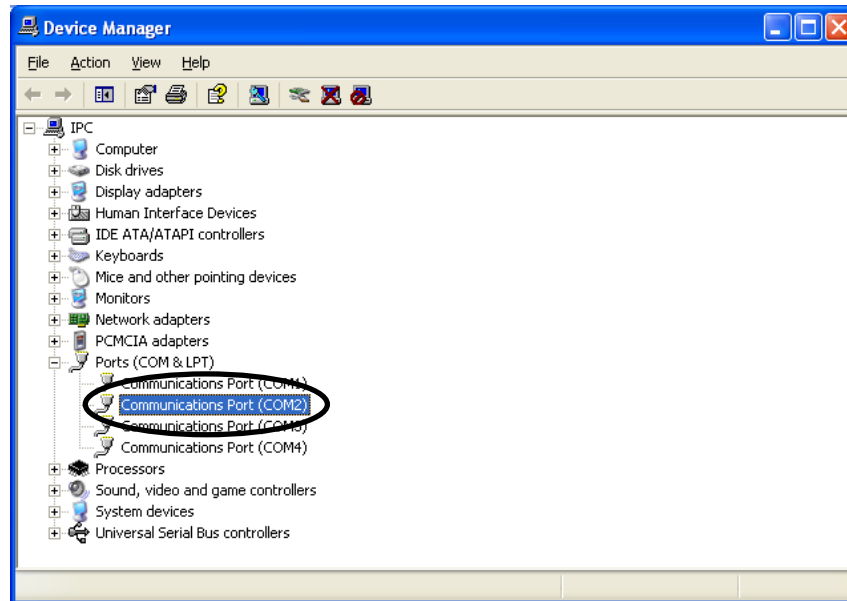

Note: COM3 and COM4 are used by the NSA-series Industrial PC system internally. Do not select these ports.

4. Click the **General** Tab in the displayed Communications Port Properties Dialog Box and change *Device usage* to *Do not use this device (disable)*, then click the **OK** Button.

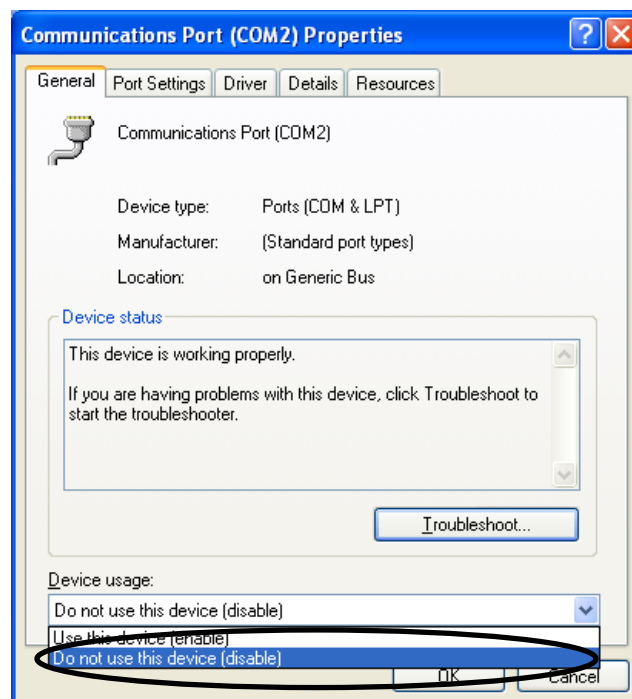

Appendix 5 Accessories

The following products are available as accessories for the NSA-series Industrial PC.

Product name	Model	Applicable Industrial PCs	Application
Replacement Battery	NSA-BAT01	NSA12/15-TX01 NSA-CPU□□	Replacement battery for motherboard and RAS board.
	NSA-BAT03	NSA12/15-TX11 NSA12/15-TX12	
Anti-reflection Sheet	NS12-KBA04	NSA12-TX01 NSA12-TX11 NSA12-TX12	Sheet to protect the display from reflection. Apply to the display.
	NS15-KBA04	NSA15-TX01 NSA-TX151□ NSA15-TX11 NSA15-TX12	
LCD Connection Cables	NSA-DU02 NSA-DU22 NSA-DU52	NSA-CPU□□ NSA-TX□□□/TY□□□	Cables for connecting the CPU Box and the Touch Panel. NSA-DU02 is for a stacked connection.
Memory Cards	NSA-CEX02-J NSA-CEX04-J NSA-CEX08-J	NSA12/15-TX11 NSA12/15-TX12	Memory Card with Japanese Windows XP Embedded Version installed in advance
	NSA-CEX02-E NSA-CEX04-E NSA-CEX08-E		Memory Card with English Windows XP Embedded Version installed in advance

Appendix 6 Using Virtual Memory


The NSA-series Industrial PC is set by default to not use virtual memory. When physical memory alone is not sufficient, it is necessary to set up a paging file and use virtual memory. This section will explain how to set up a paging file in the DOM (Disk on Module flash memory) so that virtual memory can be used.

Note

There is a limit to the number of times that the DOM can be written. Setting a paging file will shorten the life of the DOM. Create a paging file on the DOM only when the physical memory capacity is insufficient. Generally, when using the NSA-series Industrial PC, it is recommended to return the paging file setting to its default setting, so that the paging file is not used.

Appendix 6-1 Setting and Deleting the Paging File


1. Select **Start – Control Panel – Performance and Maintenance – System Properties**, and click on the **Advanced** Tab. Click the **Settings** Button in the Performance Area.

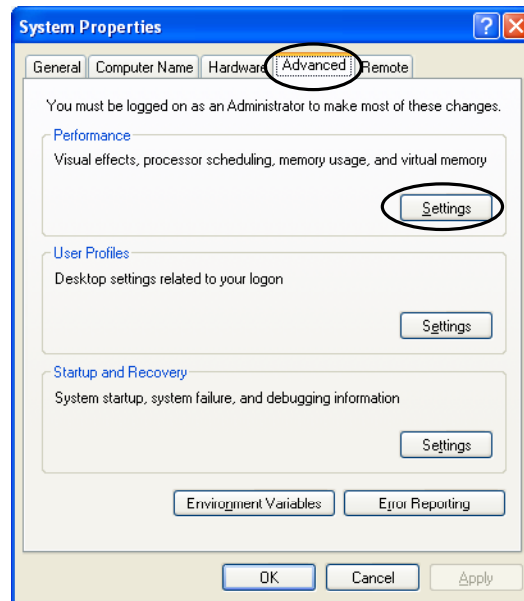

Note

If the Control Panel is set to classic mode, select **Start – Control Panel – System Properties**.


2. Click the **Advanced** Tab and then click the **Change** Button in the *Virtual Memory* Area.

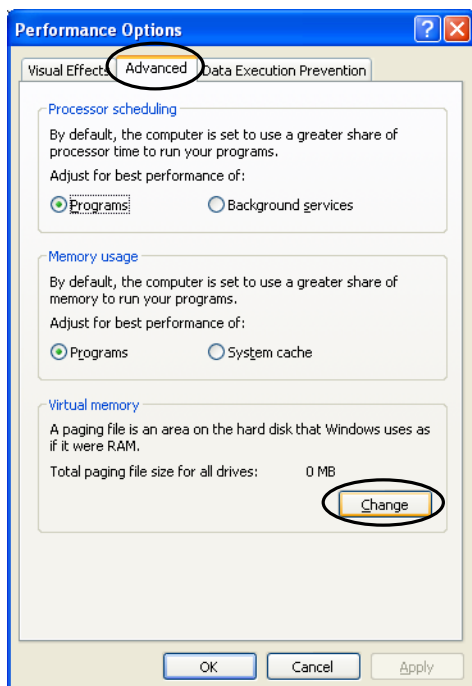

3. Next we will set up or delete the paging file.

1) The following steps are for setting up the paging file.

Make sure that the drive selected is C: (i.e., the DOM). Then select the *Custom size* Option, and input values to specify the *Initial size* and *Maximum size* Fields.

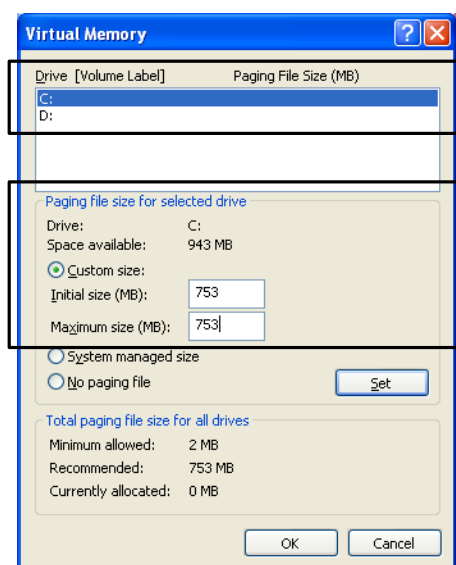


In the *Initial size* Field, input the amount of memory that you want to use for the paging file.

In the *Maximum size* Field, input the maximum amount of memory that you want to use for the paging file.


Note

A paging file of the size that you specified will be created in the drive that you specified. In the example shown above, a 753-MB file will be created in the C: drive (i.e., the DOM). Check the amount of free space on the DOM, and set the initial size and maximum size appropriately.

- 2) The following steps are for deleting a paging file that was previously set up. Make sure that the drive selected is C: (i.e., the DOM). Then select the *No paging file* Option.

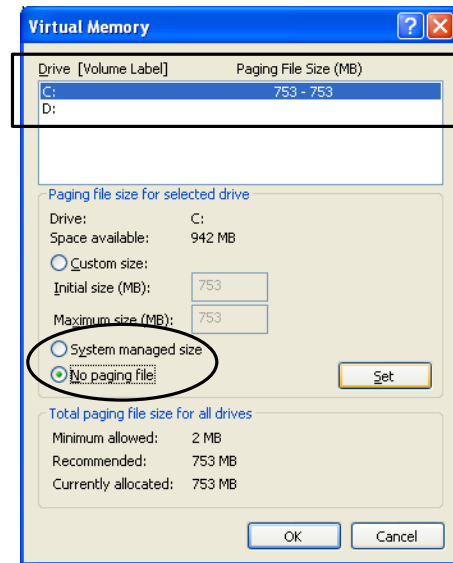

4. Click the **Set** Button, and then click the **OK** Button.

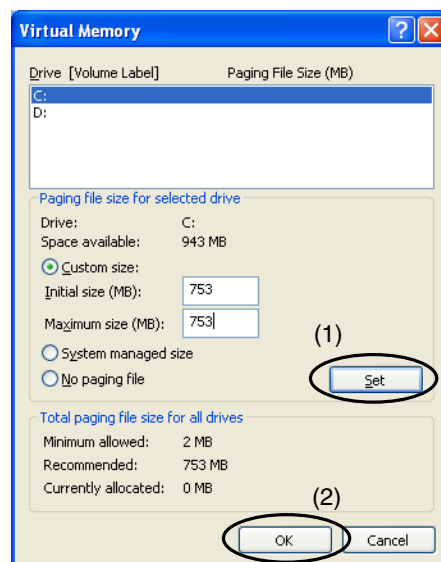


Note

The *No paging file* Option will not take effect if you click the **OK** Button without first clicking the **Set** Button.

Appendix 6 Using Virtual Memory

Appendix 6-1 Setting and Deleting the Paging File

5. Make sure the paging file size that you selected appears in the Virtual memory Area.

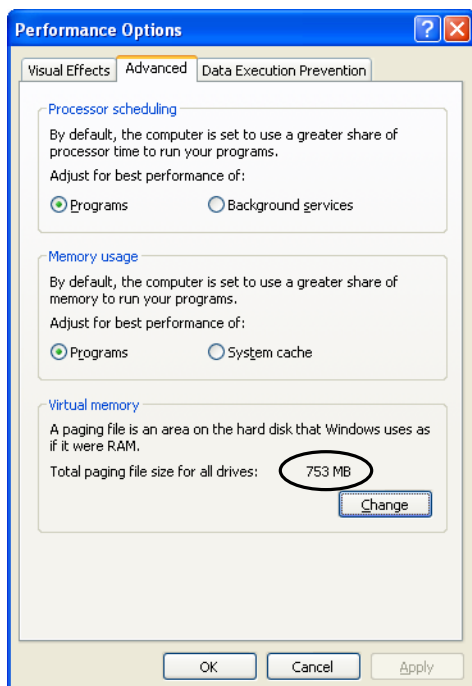

If the paging file size that you selected appears, the paging file setup has been done properly. If it does not appear, return to step 2, above, and make the settings again.

Appendix

Note

The operating system must be restarted for the settings to delete the paging file (selecting the *No paging file* Option in step 3, above) to take effect. After resetting the operating system, check the paging file size again and make sure that it is 0 MB.

Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billing.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
 - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
 - d. Delivery and shipping dates are estimates only; and
 - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://www.omron247.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:
 - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
 - (ii) Use in consumer products or any use in significant quantities.
 - (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
 - (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product.
 NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



OMRON INDUSTRIAL AUTOMATION • THE AMERICAS HEADQUARTERS

Schaumburg, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 001.800.556.6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 001.800.556.6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • Tel: +31 (0) 23 568 13 00

Fax: +31 (0) 23 568 13 88 • www.industrial.omron.eu