

ALCOM

Quality Lifestyle

USER GUIDE

Lifestyle 1900 system
Digital Cordless Telephone



THIS EQUIPMENT IS NOT DESIGNED FOR MAKING EMERGENCY TELEPHONE CALLS WHEN THE POWER FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.

Before operating this set, please read these instructions carefully.

TECHNICAL DETAILS

| | |
|-------------------|---|
| Standard | Digital Enhanced Cordless Telecommunication (DECT) |
| Frequency | 1.8 Ghz |
| Operating range | Up to 300m outdoors; up to 50m indoors |
| Operating time | Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours |
| Temperature range | Operating 0°C to 40°C, Storage -20°C to 60°C |
| Electrical power | Base unit: HONR – ADS-3V-06 06018 GPB / ADS-3V-06 06018 GPG input 100-240VAC 50/60Hz 100mA, output 6VDC 300mA TenPao – S002CV0600030 / S002CB0600030 input 100-240VAC 50/60Hz 100mA, output 6VDC 300mA Charger unit: HONR – ADS-3V-06 06018 GPB / ADS-3V-06 06018 GPG input 100-240VAC 50/60Hz 100mA, output 6VDC 300mA TenPao – S002CV0600030 / S002CB0600030 input 100-240VAC 50/60Hz 100mA, output 6VDC 300mA Battery Information GPI – VTHC043C02, Type NiMH (Rechargeable battery) Voltage Rating 400mAh 2.4V AAA Size Pack BYD – H-AA400BX2, Type NiMH (Rechargeable battery) Voltage Rating 400mAh 2.4V AAA Size Pack CORUN – Ni-MH-AA400*2, Type NiMH (Rechargeable battery) Voltage Rating 400mAh 2.4V AAA Size Pack |
| Cautions | Risk of explosion if battery is replaced by an incorrect type Dispose of used batteries according to the instructions. |

CLEANING AND CARE

Do not clean any part of your Lifestyle 1900 system with benzene, thinners or other solvent chemicals this may cause permanent damage which is not covered by the Guarantee.

When necessary, clean it with damp cloth.

Keep your Lifestyle 1900 system away from hot, humid conditions or strong sunlight, and don't let it get wet.

Every effort has been made to ensure high standards of reliability for your Lifestyle 1900 system. However, if something does go wrong, please do not try to repair it yourself consult your supplier or the HelpLine.

TABLE OF CONTENTS

| | | |
|--------|---|----|
| 1 | IMPORTANT SAFETY INSTRUCTIONS..... | 3 |
| 2 | INSTALLING YOUR PHONE..... | 5 |
| 2.1 | CONNECTING THE BASE STATION..... | 5 |
| 2.2 | INSTALLING AND CHARGING THE BATTERIES..... | 5 |
| 3 | GETTING TO KNOW YOUR PHONE..... | 6 |
| 3.1 | HANDSET OVERVIEW..... | 6 |
| 3.2 | BASE STATION OVERVIEW..... | 7 |
| 3.3 | DISPLAY ICONS AND SYMBOLS..... | 7 |
| 3.4 | MENU STRUCTURE..... | 8 |
| 3.5 | TEXT AND DIGIT ENTRY TABLE..... | 9 |
| 3.5.1 | LATIN CHARACTER SET..... | 9 |
| 3.5.2 | POLISH CHARACTER SET..... | 10 |
| 3.5.3 | NORWEGIAN CHARACTER SET..... | 10 |
| 3.5.4 | GREEK CHARACTER SET..... | 10 |
| 4 | USING YOUR PHONE..... | 11 |
| 4.1 | MAKE A CALL..... | 11 |
| 4.1.1 | PREPARATORY DIALING..... | 11 |
| 4.1.2 | DIRECT DIALING..... | 11 |
| 4.1.3 | CALL FROM THE PHONEBOOK..... | 11 |
| 4.1.4 | CALL FROM THE CALL LIST (ONLY AVAILABLE WITH CALLER DISPLAY)..... | 11 |
| 4.1.5 | CALL FROM THE REDIAL LIST..... | 11 |
| 4.1.6 | CALL TIMER..... | 11 |
| 4.2 | ANSWER A CALL..... | 12 |
| 4.3 | END A CALL..... | 12 |
| 4.4 | ADJUST EARPIECE VOLUME..... | 12 |
| 4.5 | MUTE A CALL..... | 12 |
| 4.6 | TURN OFF HANDSET RINGER..... | 12 |
| 4.7 | TURN ON THE KEYPAD LOCK..... | 12 |
| 4.8 | REDIAL THE LAST NUMBER..... | 12 |
| 4.8.1 | REDIAL A NUMBER FROM THE REDIAL LIST..... | 12 |
| 4.8.2 | STORE A REDIAL NUMBER INTO THE PHONEBOOK..... | 13 |
| 4.8.3 | DELETE A REDIAL NUMBER..... | 13 |
| 4.8.4 | DELETE ALL REDIAL LIST ENTRIES..... | 13 |
| 4.9 | FIND THE HANDSET..... | 13 |
| 4.10 | MAKE AN INTERNAL CALL (FOR MULTIHANDSET VERSIONS ONLY)..... | 14 |
| 4.10.1 | INTERCOM ANOTHER HANDSET..... | 14 |
| 4.10.2 | CALL ALL HANDSETS..... | 14 |
| 4.10.3 | TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET..... | 14 |
| 4.10.4 | MAKE A 3-WAY CONFERENCE CALL..... | 14 |
| 5 | PRIVATE PHONEBOOK..... | 15 |
| 5.1 | ADD A NEW PHONEBOOK ENTRY..... | 15 |
| 5.2 | SEARCH A PHONEBOOK ENTRY..... | 15 |
| 5.3 | VIEW A PHONEBOOK ENTRY..... | 16 |
| 5.4 | EDIT A PHONEBOOK ENTRY..... | 16 |
| 5.5 | DELETE A PHONEBOOK ENTRY..... | 16 |
| 5.6 | DELETE ALL PHONEBOOK ENTRIES..... | 16 |
| 5.7 | CHECK THE PHONEBOOK USAGE..... | 16 |
| 6 | CALLER DISPLAY (NETWORK DEPENDENT)..... | 17 |
| 6.1 | VIEW THE CALL LIST..... | 17 |
| 6.2 | BYORE A CALL LIST NUMBER INTO THE PHONEBOOK..... | 17 |
| 6.3 | DELETE AN ENTRY IN THE CALL LIST..... | 18 |
| 6.4 | DELETE ALL CALL LIST ENTRIES..... | 18 |
| 7 | PHONE SETTINGS..... | 19 |
| 7.1 | DATE AND TIME SETTINGS..... | 19 |
| 7.1.1 | CHANGE THE DATE FORMAT..... | 19 |
| 7.1.2 | CHANGE THE TIME FORMAT..... | 19 |
| 7.1.3 | SET THE TIME..... | 19 |
| 7.1.4 | SET THE DATE..... | 19 |
| 7.2 | ALARM SETTINGS..... | 20 |
| 7.2.1 | TURN ON/OFF THE ALARM..... | 20 |
| 7.2.2 | SET THE ALARM TIME..... | 20 |
| 7.3 | HANDSET SETTINGS..... | 20 |
| 7.3.1 | SET THE RINGER MELODY FOR INTERNAL CALLS..... | 20 |
| 7.3.2 | SET THE RINGER MELODY FOR EXTERNAL CALLS..... | 20 |
| 7.3.3 | SET THE RINGER VOLUME..... | 21 |
| 7.3.4 | SET ALERT TONES..... | 21 |
| 7.3.5 | SET THE HANDSET LANGUAGE..... | 21 |
| 7.3.6 | RENAME THE HANDSET..... | 22 |
| 7.3.7 | CHOOSE THE INFORMATION TO BE DISPLAYED IN IDLE..... | 22 |
| 7.3.8 | SET THE AUTO ANSWER..... | 22 |
| 7.4 | BASE SETTINGS..... | 22 |
| 7.4.1 | DE-REGISTER A HANDSET..... | 22 |
| 7.4.2 | CHANGE THE DIAL MODE..... | 23 |
| 7.4.3 | CHANGE THE FLASH (RECALL) TIME..... | 23 |
| 7.4.4 | CHANGE THE SYSTEM PIN CODE..... | 23 |
| 7.5 | REGISTRATION..... | 24 |
| 7.6 | RESET YOUR PHONE..... | 24 |
| 8 | TROUBLESHOOTING..... | 25 |
| 9 | DECLARATION OF CONFORMITY..... | 26 |
| 10 | GUARANTEE AND SERVICE..... | 27 |

1 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) Keep your Lifestyle 1900 away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- 5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 6) Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- 7) NEVER use your Lifestyle 1900 outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
- 8) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 9) Use only the supplied Battery pack. The operation periods for the handsets are only applicable with the default battery capacities
- 10) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
- 11) Do not use third party charging bays. Damage may be caused to the batteries.
- 12) Please ensure the batteries are inserted in the correct polarity.
- 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

Package contents

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 1 Battery Pack
- 1 User manual
- 1 Warranty card

Note: If you have a Twin, Triple or Quad system, you will also have the requisite extra handset(s) and batteries, and a charger pod for each extra handset.

To use your handset and base together, you must be able to establish a radio link between them. The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors.

The signal range may decrease if there is any large metal object between the handset and the base, such as a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete. The signal strength may also be reduced by other solid structures like walls, or by other radio or electrical interference.

2 INSTALLING YOUR PHONE

2.1 Connecting the base station

- 1) Plug the power supply and line cord into the base station.
- 2) Plug the power adapter into a 230Vac, 50Hz mains socket, and the line cord into your telephone line socket.
- 3) Always use the cables provided in the box

Warning: Use only the provided adaptor, using other power supplies may cause a hazard.
Warning: Install the base unit in a position where the mains adaptor plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable.
Note: The base unit needs mains power for normal operation, not just for charging the handset batteries.

2.2 Installing and charging the batteries

- 1) Place the supplied battery into the battery compartment and plug it in the socket. Use only the battery type provided.
- 2) Position the battery compartment cover over the batteries and slide up to click into place.
- 3) Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.


If you have a Broadband line
If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.
In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.

3 GETTING TO KNOW YOUR PHONE

3.1 Handset Overview




3.2 Base Station Overview

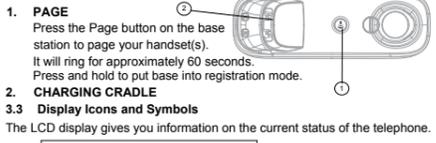

1. **PAGE**
Press the Page button on the base station to page your handset(s). It will ring for approximately 60 seconds. Press and hold to put base into registration mode.
2. **CHARGING CRADLE**
3. **Display Icons and Symbols**
The LCD display gives you information on the current status of the telephone.
 - ◀ Indicates when there are more characters or numbers in front of those being displayed.
 - ▶ Indicates when there are more characters or numbers after those being displayed.
 - OK Press the MENU/OK key to access the main menu.
 - OK Press the MENU/OK key to confirm the current selection.
 - ⇄ Press the C/MUTE key to start an intercom call.
 - ↶ Press the C/MUTE key to go back to the previous menu level or cancel the current action.
 - C Press the C/MUTE key to clear a character, stop the alarm, or mute/unmute the microphone during a call.

4. **Menu Structure**
In idle mode, press <MENU/OK> to go to CALL LIST, the first option in the menu list. Press <UP> or <DOWN> to go to other options in the menu list. Press <OK> to enter a sub-menu or function. Press <Back> to go back to the previous level. Refer to the following for the menu structure.

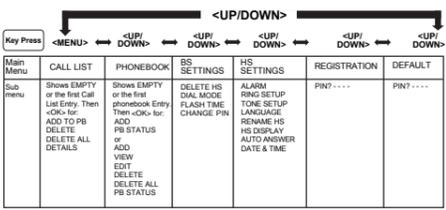

3.5 Text and Digit Entry Table

The following table shows you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset. In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

- 1) Once a character is selected, the cursor will move to the next position after a short pause.
- 2) You can move the cursor within the text with the <UP/DOWN> keys to amend the text entry.
- 3) Press <C> to delete the last character.
- 4) Press and hold <C> to delete the entire text string.

3.5.1 Latin Character Set

| Key Press | 1st | 2nd | 3rd | 4th | 5th | 6th | 7th | 8th | 9th | 10th |
|-----------|-------|-----|-----|-----|-----|-----|-----|-----|-----|------|
| 1 | space | - | 1 | | | | | | | 1 |
| 2 | A | B | C | 2 | | | | | | 2 |
| 3 | D | E | F | 3 | | | | | | 3 |
| 4 | G | H | I | 4 | | | | | | 4 |
| 5 | J | K | L | 5 | | | | | | 5 |
| 6 | M | N | O | 6 | | | | | | 6 |
| 7 | P | Q | R | S | 7 | | | | | 7 |
| 8 | T | U | V | 8 | | | | | | 8 |
| 9 | W | X | Y | Z | 9 | | | | | 9 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| * | * | * | * | * | * | * | * | * | * | * |
| # | # | # | # | # | # | # | # | # | # | # |

3.5.2 Polish Character Set

| Key Press | 1st | 2nd | 3rd | 4th | 5th | 6th | 7th | 8th | 9th | 10th |
|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| 1 | SP | - | 1 | | | | | | | 1 |
| 2 | A | B | C | 2 | | | | | | 2 |
| 3 | D | E | F | 3 | | | | | | 3 |
| 4 | G | H | I | 4 | | | | | | 4 |
| 5 | J | K | L | 5 | | | | | | 5 |
| 6 | M | N | O | 6 | | | | | | 6 |
| 7 | P | Q | R | S | 7 | | | | | 7 |
| 8 | T | U | V | 8 | | | | | | 8 |
| 9 | W | X | Y | Z | 9 | | | | | 9 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| * | * | * | * | * | * | * | * | * | * | * |
| # | # | # | # | # | # | # | # | # | # | # |

3.5.3 Norwegian Character Set

| Key Press | 1st | 2nd | 3rd | 4th | 5th | 6th | 7th | 8th | 9th | 10th |
|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| 1 | SP | - | 1 | | | | | | | 1 |
| 2 | A | B | C | 2 | | | | | | 2 |
| 3 | D | E | F | 3 | | | | | | 3 |
| 4 | G | H | I | 4 | | | | | | 4 |
| 5 | J | K | L | 5 | | | | | | 5 |
| 6 | M | N | O | 6 | | | | | | 6 |
| 7 | P | Q | R | S | 7 | | | | | 7 |
| 8 | T | U | V | 8 | | | | | | 8 |
| 9 | W | X | Y | Z | 9 | | | | | 9 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| * | * | * | * | * | * | * | * | * | * | * |
| # | # | # | # | # | # | # | # | # | # | # |

3.5.4 Greek Character Set

| Key Press | 1st | 2nd | 3rd | 4th | 5th | 6th | 7th | 8th | 9th | 10th |
|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| 1 | SP | - | 1 | | | | | | | 1 |
| 2 | A | B | Γ | 2 | | | | | | 2 |
| 3 | A | B | Γ | 2 | | | | | | 3 |
| 4 | H | I | 4 | | | | | | | 4 |
| 5 | K | Λ | M | 5 | | | | | | 5 |
| 6 | N | Ξ | O | 6 | | | | | | 6 |
| 7 | Π | Ρ | Ζ | 7 | | | | | | 7 |
| 8 | Θ | Υ | Φ | 8 | | | | | | 8 |
| 9 | X | Ψ | Ω | 9 | | | | | | 9 |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| * | * | * | * | * | * | * | * | * | * | * |
| # | # | # | # | # | # | # | # | # | # | # |

4 USING YOUR PHONE

- 4.1 **Make a Call**
 - 4.1.1 Preparatory Dialing
Enter the phone number and press <TALK ON> / to connect to the line and dial the number. When entering the number, if you make a mistake, press <C> to delete digits.
 - 4.1.2 Direct Dialing
Press <TALK ON> to connect to the line and then enter the phone number. (Note: if you enter a wrong digit you cannot correct it with the <C> key.)
 - 4.1.3 Call from the phonebook
Press <PHONEBOOK> to access the phonebook and press <UP/DOWN> to select the desired phonebook entry.
Press <TALK ON> to dial out the selected phonebook entry.
Note: You can also access the phonebook by pressing <MENU/OK>, <DOWN>, <MENU/OK>.
- 4.1.4 Call from the Call List (only available with Caller Display)
Press <UP> to access the Call List and press <UP/DOWN> to select the desired Call List entry.
Press <TALK ON> to dial out the selected Call List entry.
Note: You can also access the Call List by pressing <MENU/OK> twice.
- 4.1.5 Call from the redial list
Press <DOWN> to access the redial list and press <UP/DOWN> to select the desired redial number.
Press <TALK ON> to dial out the selected redial number.
- 4.1.6 Call timer
Your handset automatically times the duration of every call. The call timer is displayed as soon as you answer a call or 15 seconds after dialing and remains on

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number **"WITHHELD"** will display.

If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange. **"OUT OF AREA"** will display.

If you've got new Caller Display records, the handset will display "X NEW CALLS" in standby mode. The New Calls indication will remain until all the new call records have been viewed.

6.1 View the Call List

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a <> icon at the centre of the bottom line of the display.

- Press <UP> to access the call list.
- OR Press <MENU> and <UP/DOWN> to show CALL LIST, the press OK.
- Press <UP/DOWN> to select the desired entry.
- Press <=> to view the caller's number if applicable.
- Press <MENU>, <UP/DOWN> to show DETAILS, and then <OK> to display the date and time of the call. Press <OK> to go back to the previous screen.

6.2 Store a Call List Number into the Phonebook

- Follow Steps 1 and 2 in Section 6.1.
- Press <MENU> and <UP/DOWN> to show **ADD TO PB**.
- Press <OK> and then enter the name.
- Press <OK> and the selected call list number is displayed.
- Edit the number if necessary.
- Press <OK> and <UP/DOWN> to select the ringtone.
- Press <OK> to store the phonebook entry and return to the calls list.

17

7.4.2 Change the dial mode

You should normally leave the dialling mode at its default setting of TONE (also called DTMF) unless the phone is connected to an old exchange that only recognises **PULSE** dialling.

Note: If PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.

- Press <MENU> and <UP/DOWN> to select **BS SETTINGS**
- Press <OK> and <UP/DOWN> to select **DIAL MODE**.
- Press <OK> and <UP/DOWN> to select **TONE** or **PULSE** (The current setting is indicated by an asterisk to the right).
- Press <OK> to confirm.

7.4.3 Change the Flash (Recall) Time

You may need to change the recall (flash) time if your phone is connected to a PBX. The recall time options are SHORT (100ms), MEDIUM (300ms) or LONG (the default value of 600ms).

- Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **FLASH TIME**.
- Press <OK> and <UP/DOWN> to select your desired flash time (**SHORT**, **MEDIUM**, **LONG**, with the current setting indicated by an asterisk to the right).
- Press <OK> to confirm.

7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.

- Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
- Press <OK> and you are requested to enter the 4-digit system PIN.
- Enter the old system PIN.
- Press <OK> and enter the new system PIN.
- Press <OK> and enter the new system PIN again.

Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, you must enter the new system PIN at step 5 again.

- Press <OK> to confirm

23

6.3 Delete an entry in the Call List

- Follow Steps 1 and 2 in Section 6.1.
- Press <MENU> and <UP/DOWN> to select DELETE.
- Press <OK> to confirm.

6.4 Delete all Call list entries

- Follow Steps 1 and 2 in Section 6.1
- Press <MENU> and <UP/DOWN> to select DELETE ALL.
- Press <OK> to display <CONFIRM?>
- Press <OK> to confirm. All entries will be deleted and the display will show <EMPTY>.

7.5 Registration

IMPORTANT: When you purchase an Lifestyle 1900 system, all handsets are already registered to your base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

- Press and hold <PAGE> on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press <MENU> and <UP/DOWN> to select **REGISTRATION**.
- Press <OK> and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press <OK> to confirm, and the display will show SEARCHING.

If the handset registration is successful, you will hear a confirmation tone and the <antenna icon> will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash.

7.6 Reset Your Phone

You can reset your phone to the default settings. After a reset, all your personal settings, call list entries, redial list entries, and answering machine messages will be deleted but your phonebook remains unchanged.

- Press <MENU> and <UP/DOWN> to select **DEFAULT**.
- Press <OK> and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press <OK> to display CONFIRM?
- Press <OK> to confirm, and the phone will be reset to its default settings.

7 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

7.1 Date and Time Settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call. (For FSK Data only) The Caller Display service only sends the month and date, not the year, so you may need to set the year.

7.1.1 Change the Date Format

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <OK> and <UP/DOWN> to select **DATE FORMAT**.
- Press <OK> and <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
- Press <OK> to confirm.

7.1.2 Change the Time Format

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <OK> and <UP/DOWN> to select **TIME FORMAT**.
- Press <OK> and <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
- Press <OK> to confirm.

7.1.3 Set the Time

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <OK> and <UP/DOWN> to select **SET TIME**.
- Press <OK> and then enter the time information in 24 hour format.
- Press <OK> to confirm.

Note: If time has been set before, the current time will display, otherwise, **"HH:MM"** will display.

7.1.4 Set the Date

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **DATE & TIME**.
- Press <OK> and <UP/DOWN> to select **SET DATE**.
- Press <OK> and then enter the date information. The date entered will be in the date entered will be in the format you set in Section 7.1.1.
- Press <OK> to confirm.

Note: If date has been set before, the current date will display, otherwise, **"DD-MM-YY"** will display.

19

8 TROUBLESHOOTING

| Problem | Causes | Solutions |
|--|---|--|
| No dialing tone when pressing <TALK ON> key | a.The connection cord of the base station is not plugged in. b.The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord | a.Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket. b.Check the base station plug and the 230V plug (remove and plug-in). c.Wait until the line is unoccupied. d.Use the original telephone line cord supplied |
| When connect to a PBX, no and/or wrong connection after dialing. | Dialing prefix is needed. | Insert the dialing prefix. |
| "SEARCHING" is displayed | a. Base station out of range. b. Base station not connected to mains. | Reduce the range. Connect base station to mains. |
| The call does not work. | Service not activated or wrong operator or wrong setting | Check your Subscription with network or change the dial mode. |
| No display. | Empty battery | Recharge battery |

Please contact the technical support of the network provider for further information. This telephone is not equipped with a grounding function, and therefore some of the functions may be limited when used in PBX systems.

Technical Support

If the fault persists...

Disconnect all other instruments connected to the same line as the Lifestyle 1900 system and try to make a call.

Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket.

Try making a call. If this works, the line is OK.

If the call does not work, and you are using a **two-way socket adapter**, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

25

7.2 Alarm Settings

You can set an alarm time on this phone. When an alarm is set, the <ALARM Icon> is shown on the handset display. When the alarm time is reached, the <ALARM icon> and **"ALARM ON"** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **VOLUME OFF**, the alarm still sounds at **VOLUME 1** level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the <ALARM icon> and **"ALARM ON"** will still flash. An alarm tone will be emitted from the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses and holds **<TALK OFF>** to disable the alarm, the display will revert to the call duration.
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing, the alarm will sound again at the end of the snooze period.

7.2.1 Turn on/off the Alarm

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **ALARM**.
- Press <OK> and <UP/DOWN> to select **ON/OFF**.
- Press <OK> to confirm.

Note: If ON is selected, you will be asked to set the alarm time.

7.2.2 Set the Alarm Time (If Alarm time is set to be ON)

- Follow Steps 1 to 4 in Section 7.2.1.
- Enter the alarm time in 24 hour format.
- Press <OK> to display "SNOOZE".
- Press <OK> and <UP/DOWN> to select snooze **ON** or **OFF**.
- Press <OK> to confirm.

7.3 Handset Settings

7.3.1 Set the Ringer Melody for Internal Calls

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **RING SETUP**
- Press <OK> and <UP/DOWN> to select **INT RING**.
- Press <OK> and <UP/DOWN> to select the melody you want to hear for internal calls.

20

10 GUARANTEE AND SERVICE

Note: Due to continuous product development all features and specifications are subject to change without prior notice

Please register your warranty online at -

<http://www.alcomonline.com/warranty.html>

For more Information on Warranty and Product Support in Singapore please call (65) 68412668 or Fax to (65) 68412628.

Email: support@alcom.com.sg

Website: www.alcomonline.com

26

Note: The respective melody will be played while browsing the ringtone list.

- Press <OK> to confirm.

7.3.2 Set the Ringer Melody for External Calls

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **RING SETUP**.
- Press <OK> and <UP/DOWN> to select **EXT RING**.
- Press <OK> and <UP/DOWN> to select melody you want to hear for external calls.

Note: The respective melody will be played while browsing the ringtone list.

- Press <OK> to confirm.

7.3.3 Set the Ringer Volume

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **RING SETUP**.
- Press <OK> and <UP/DOWN> to select **RING VOLUME**.
- Press <OK> and <UP/DOWN> to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).

Note: The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected, the <Ringer Off> icon will be displayed.

- Press <OK> to confirm.

7.3.4 Set Alert Tones

Three different alert tones are set on by default, but can be turned off, if desired.

Key Tone - a single beep is emitted when you press a key.

Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.

Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **TONE SETUP**.
- Press <OK> and <UP/DOWN> to select **KEY TONE / BATTERY TONE / OUT OF RANGE**.
- Press <OK> and <UP/DOWN> to turn on or off these tones.
- Press <OK> to confirm.

7.3.5 Set the Handset Language

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **LANGUAGE**.
- Press <OK> and <UP/DOWN> to select the desired language.
- Press <OK> to confirm.

21

7.3.6 Rename the Handset

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**
- Press <OK> and <UP/DOWN> to select **RENAME HS**.
- Press <OK> and change the name of your handset, using <C/MUTE> to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
- Press <OK> to confirm.

7.3.7 Choose the Information to be Displayed in Idle

You can choose to display time or handset name in your idle screen.

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **HS DISPLAY**.
- Press <OK> and <UP/DOWN> to select **HANDSET NAME** or **TIME**.
- Press <OK> to confirm.

7.3.8 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
- Press <OK> and <UP/DOWN> to select **AUTO ANSWER**.
- Press <OK> and <UP/DOWN> to turn on or off the auto answer feature.
- Press <OK> to confirm.

7.4 Base Settings

7.4.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced.

You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and "REGISTER" on the display.

Note: You cannot de-register the handset that you are currently using.

- Press <MENU> and <UP/DOWN> to select **bs settings**.
- Press <OK> and <UP/DOWN> to select **DELETE HS**.
- Press <OK> and the display shows "PIN?".
- Enter the 4-digit system PIN.
- Press <OK> and the first handset number is displayed.
- Press <UP/DOWN> to scroll through the list of registered handsets and select the number of the handset you want to de-register.
- Press <OK> to confirm, and the chosen handset will be de-registered.

22

27