

Leica Lino L2, L2G, L2P5, P5, P3 User Manual



- when it has to be **right**

Leica
Geosystems

User Manual

Version 757665b

English

Congratulations on your purchase of the Leica Lino.



The safety instructions follow the section on how to operate the instrument. Before starting up the instrument for the first time, please read through the entire User Manual paying special attention to the section Safety Instructions .

Contents

Start up	1
Operation.....	2
Technical data	10
Safety instructions	11

Start up


Inserting / replacing batteries

Slide the locking button forwards to unlock the battery compartment. Open the battery compartment cover and insert the batteries, observing the correct polarity. Then press the battery compartment cover back down until it engages.

The battery symbol  lights up when the battery voltage is too low. Replace the batteries as soon as possible.

- Insert the batteries observing the correct polarity
- Use alkaline batteries or rechargeable batteries only
- Remove the batteries if the instrument is not to be used for a long period of time (to prevent corrosion)

en

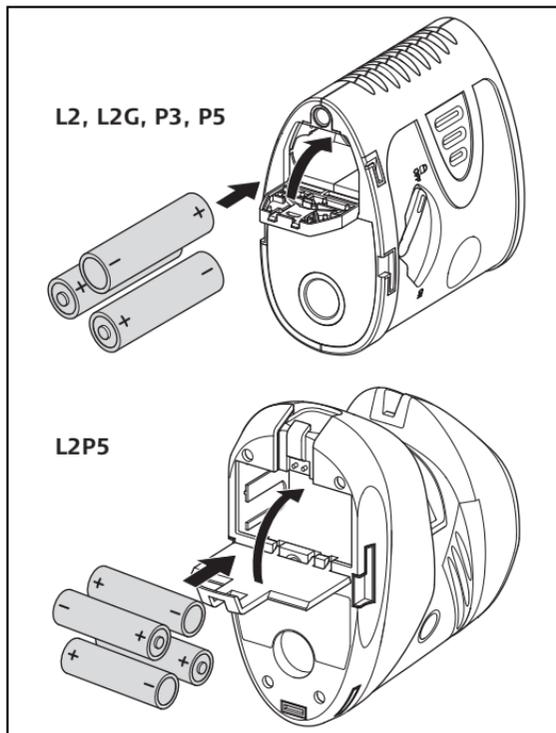



Operation

Keypad and control elements

- ① LASER key
- ② PULSE/POWERSAVE MODE key
- ③ Lock switch

Display

- ④ Laser crossline
- ⑤ Horizontal laser line
- ⑥ Vertical laser line
- ⑦ Lock ON
- ⑧ Pulse/Powersave mode ON
- ⑨ Battery voltage too low
- ⑩ Plumbing and crossline intersection point
- ⑪ Plumbing point
- ⑫ Laser switched on

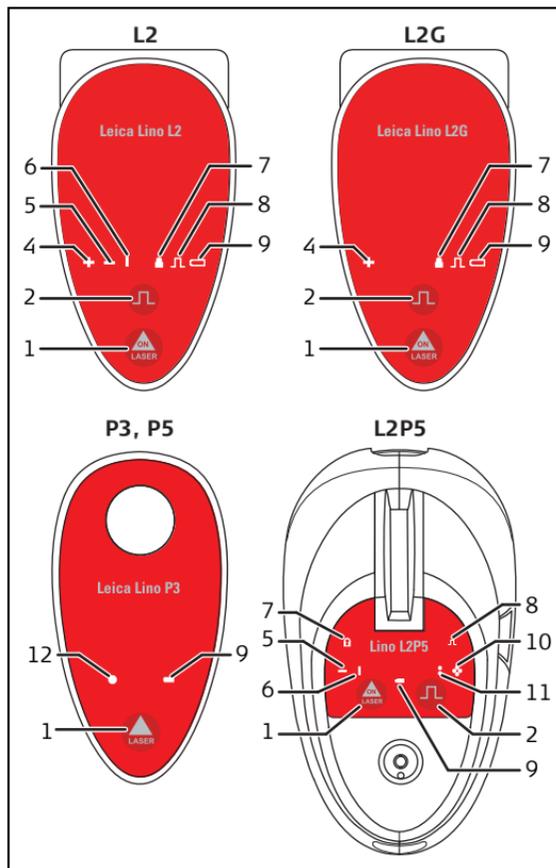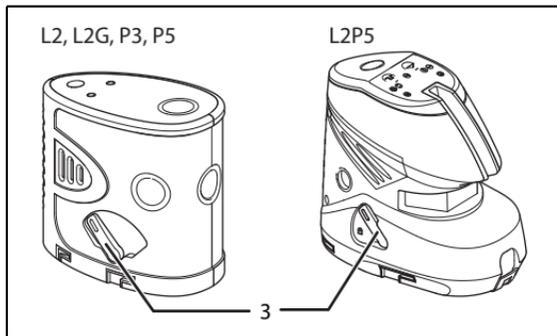

Switching on/off

Lino L2, L2G and Lino L2P5:

- **ON:** Briefly press the LASER key ①.
- **OFF:** Press and hold down the LASER key ①.

Lino P3 and Lino P5:

- **ON:** Move the Lock switch ③ to the left.
- **OFF:** Move the Lock switch ③ to the right.

Laser functions

Pressing the LASER key ① activates the following laser functions:

Action	P3	P5	L2	L2G	L2P5	L2P5
					not in Lock mode	in Lock mode
1x	all 3 points	all 5 points	horizontal and vertical	horizontal and vertical	horizontal and vertical	only horizontal
2x	only plumbing points	only plumbing points	only horizontal	-	all lines and points	only vertical
3x	again as 1x	plumbing point and right/left	only vertical	-	all points	again as 1x
4x	-	again as 1x	again as 1x	-	only plumbing point	-
5x	-	-	-	-	again as 1x	-

Self-levelling and Lock functions

The instrument automatically levels itself within the specified grade range (Refer to "Technical data") . Press the Lock switch ③ in order to transport or tilt the instrument beyond the self-levelling range. When locked, the pendulum is fixed and the self-levelling function is deactivated.

Pulse/Powersave mode

(only Lino L2, Lino L2G and Lino L2P5)








The instrument is fitted with a Powersave mode. If particularly good visibility of the laser line is not necessary and you wish to save energy, you can switch the Pulse mode on and off by pressing the PULSE/POWERSAVE MODE key ②.

After power-on, and in case the temperature exceeds 5°C, as per default, Lino L2G is in the PULSE/POWERSAVE mode. Pressing the PULSE/POWERSAVE MODE key ②, the brightness of the laser can be raised. After 60 seconds the laser automatically switches back to PULSE/POWERSAVE mode.


To be able to detect the laser lines over long distances (> 15 m) or in unfavourable lighting conditions, a laser detector can be used. The detector is able to locate the laser beam in Pulse mode, even over long distances.

(Laser detector refer to accessories)

Applications

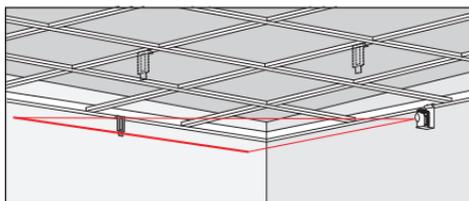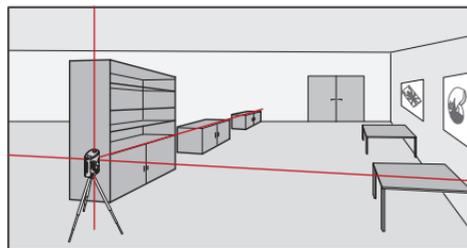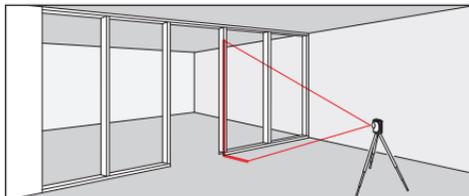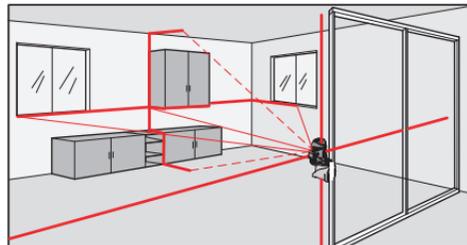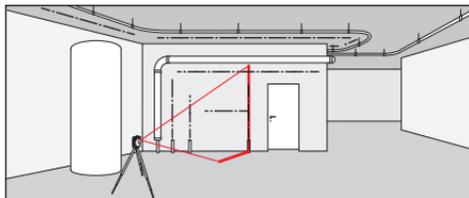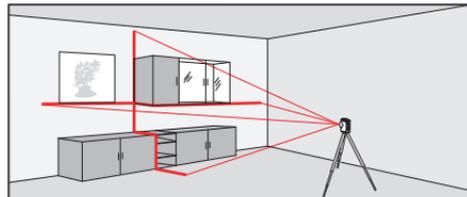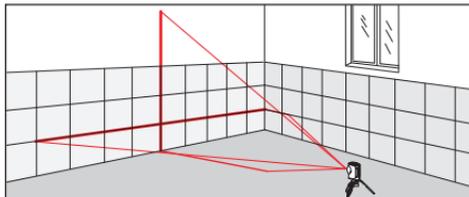

How to use the wall mount bracket:

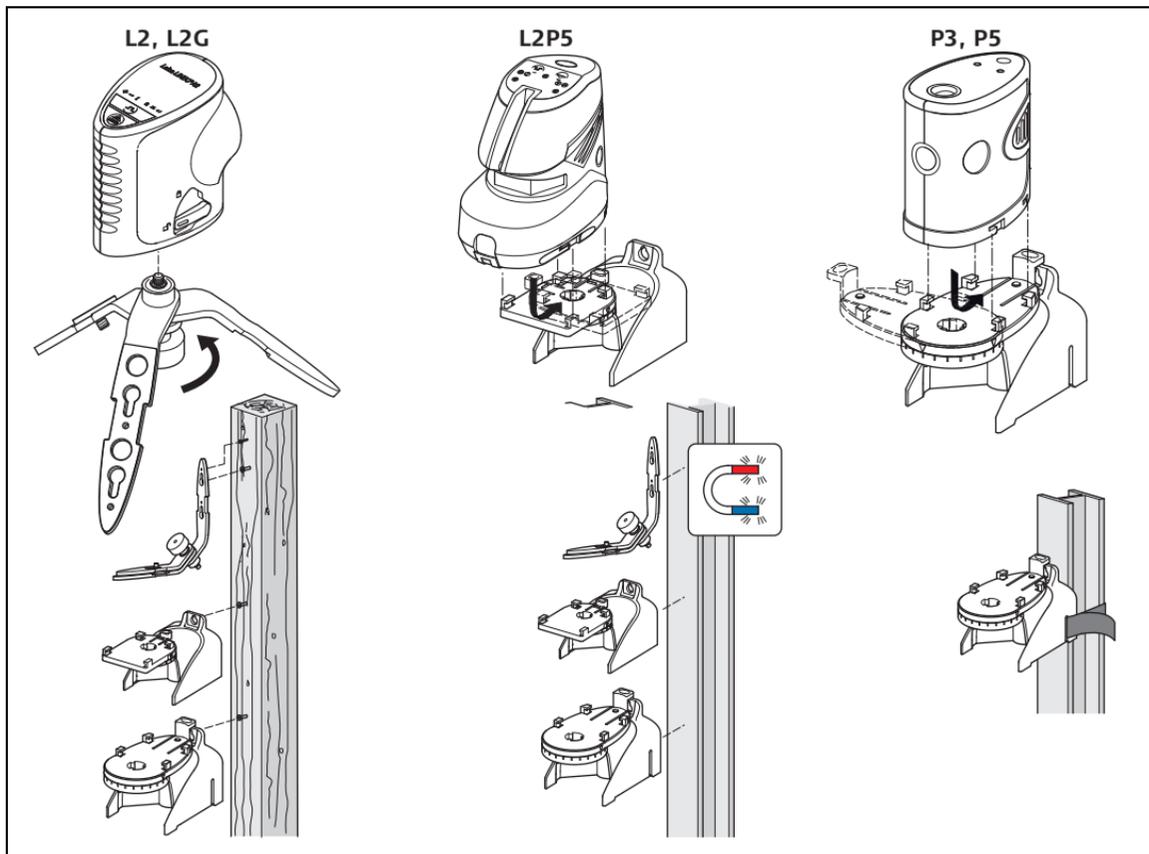


en

Checking the accuracy of the Leica Lino

☞ Check the accuracy of your Leica Lino regularly and particularly before important measuring tasks.

Checking the accuracy of the levelling

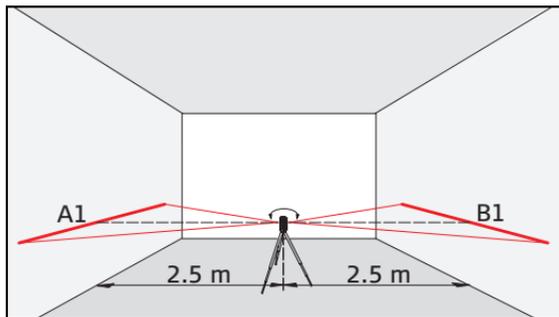


Set the instrument on a tripod half-way between two walls (A+B) that are approx. 5 m apart.

Place the Lock switch ③ in the "Unlocked" () position.

Direct the instrument at wall A and switch on the instrument. Activate the horizontal laser line or laser dot and mark the position of the line or the dot on wall A (-> A1).


Rotate the instrument by 180° and mark the horizontal laser line or the laser dot in exactly the same way on wall B (-> B1).

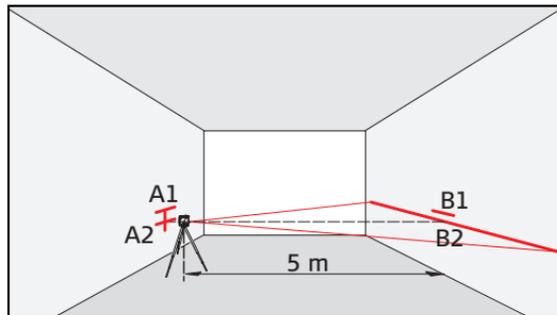

Then place the instrument at the same elevation as close as possible to wall A and again mark the horizontal laser line or the laser dot on wall A (-> A2) . Rotate the instrument by 180° again and mark the laser on wall B (-> B2). Measure the distances of the marked points A1-A2 and B1-B2. Calculate the difference of the two measurements. If the difference does not exceed 2 mm, then the Leica Lino is within tolerance.

$$|(A1 - A2) - (B1 - B2)| \leq 2 \text{ mm}$$

Checking the accuracy of the horizontal line (only Lino L2, Lino L2G and Lino L2P5)

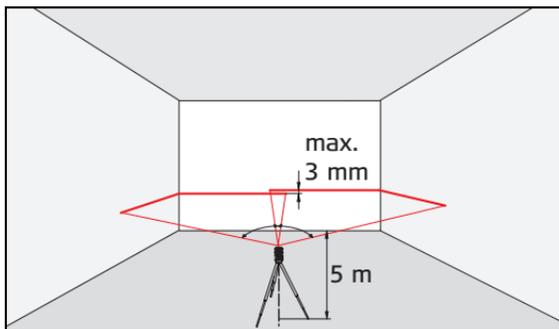


Place the Lock switch ③ in the "Unlocked" () position.

Position the instrument approx. 5 m away from the wall. Direct the instrument at the wall and switch on with the LASER key ①. Activate the laser line with the LASER key ① and mark the intersection point of laser crosshairs on the wall.

Swivel the instrument to the right and then to the left. Observe the vertical deviation of the horizontal line from the marking. If the difference does not exceed 3 mm, then the Leica Lino is within tolerance.

Checking the accuracy of the vertical line: (only Lino L2, Lino L2G and Lino L2P5)

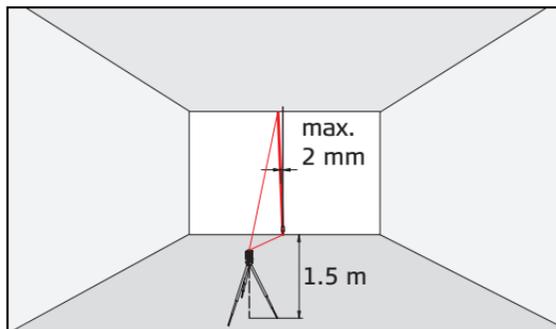

Place the Lock switch ③ in the "Unlocked" () position.

As reference, use a plumb-bob and attach it as close as possible to an approx. 3 m high wall.


Position the instrument at a distance of approx. 1.5 m from the wall at an elevation of approx. 1.5 m. Direct the instrument at the wall and switch on with the LASER key ①. Activate the laser line with the LASER key ①. Rotate the instrument and align it with the bottom of the plumb line. Now read off the maximum deviation of the laser line from the top of the plumb line. If the difference does not exceed 2 mm, then the Leica Lino is within tolerance.

Checking the accuracy of the vertical plumbing:


(only Lino P3, Lino P5 and Lino L2P5)

Place the Lock switch ③ in the "Unlocked" () position.

Checking the upper plumbing point:

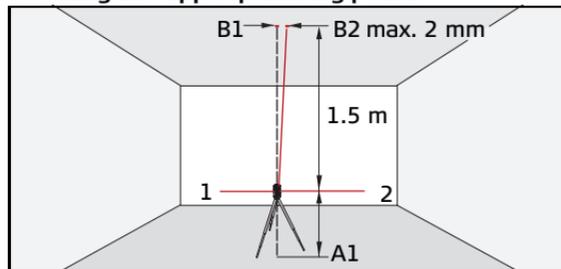

Checking the lower plumbing point:

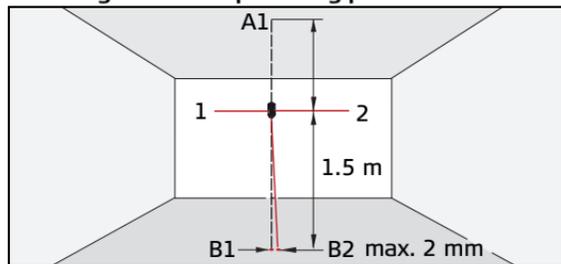

Set up the laser on its tripod or wall mount bracket near point A1 at a minimum distance of 1.5 m from point B1. The horizontal laser is aligned in direction 1. Mark the laser dots A1 and B1 with a pin.

Rotate the instrument by 180° so that it points in the opposite direction 2 to direction 1. Adjust the instrument so that the laser beam hits point A1 exactly. If point B2 is no further than 2 mm away from point B1, then the Leica Lino is within tolerance.



Should your Leica Lino be outside of the specified tolerance, please contact an authorised dealership or Leica Geosystems.

Display notices

Falling below or exceeding the permissible temperature range:

The laser switches off and all symbols flash.

Outside of the self-levelling range:

The laser switches off and the symbol of the function used starts to flash.

Pendulum locked:

(only Lino L2, Lino L2G and Lino L2P5)

The laser beam is not levelled and the Lock symbol ⑦ lights up.

Care and advice on operation

Do not immerse the instrument in water. Wipe off dirt with a damp soft cloth. Do not use aggressive cleaning agents or solvents. Treat the instrument with the same care that you would apply to binoculars or a camera.

Dropping or violent shaking of the instrument may damage it. Check the instrument for any damage before using it. Check the levelling accuracy of the instrument regularly.

Transport

To safely transport the instrument, set the Lock switch ③ to "Locked" ().

Warranty

The Leica Lino comes with a two-year warranty from Leica Geosystems AG.

More detailed information can be found at:

www.leica-geosystems.com

Technical data

	P3	P5	L2P5	L2	L2G
Range	up to 50 ft*				
Range with detector	-		> 100 ft		
Levelling accuracy @ 16 ft	± 1/16 "			± 0.04 in	± 1/16 "
Self-levelling range	4° ± 0.5°				
Accuracy of plumbing point @ 16 ft	± 1/16 "		± 1/16 "	-	
Accuracy of horizontal line @ 16 ft	-		± 1/16 "		
Vertical accuracy @ 10 ft line length	-		± 1/32 "		
Number of laser dots	3	5	4	-	
Number of laser lines	-		2		
Beam direction	up, down, forward	up, down, forward, right, left	vertical, horizontal, up, down, right, left	vertical, horizontal	
Laser type	635 nm, laser class II				532 nm, Laser cl. II
Batteries	Type AA, 3 x 1.5 V		Type AA 4 x 1.5 V	Type AA, 3 x 1.5 V	
Protection class spray water / dust	IP 54				
Operating temperature	14°F to +104°F				32°F to +104°F
Storage temperature	-13°F to +158°F				
Dimensions (H x D x W)	3.9 x 4.25 x 2.3 in		14.6 x 5.1 x 2.95 in	3.8 x 3.6 x 2.1 in	
Weight without batteries	10.9 oz	11.3 oz	13.1 oz	11.3 oz	12.3 oz
Tripod thread	1/4"				

* depending on lighting conditions

All rights reserved for changes (on drawings, descriptions and technical data).

Safety instructions

The person responsible for the instrument must ensure that all users understand these directions and adhere to them.

Symbols used

The symbols used have the following meanings



WARNING:

Indicates a potentially hazardous situation or an unintended use which, if not avoided, will result in death or serious injury.



CAUTION:

Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor injury and/or appreciable material, financial and environmental damage.



Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Permitted use

- Projection of horizontal and vertical laser lines and laser dots

Prohibited use

- Using the product without instruction
- Using outside the stated limits

- Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools (screwdrivers, etc.), as far as not specifically permitted for certain cases
- Carrying out modification or conversion of the product
- Deliberate dazzling of third parties; also in the dark
- Inadequate safeguards at the surveying site.

Limits of use



Refer to section "Technical data".

The Leica Lino is designed for use in areas permanently habitable by humans. Do not use the product in explosion hazardous areas or in aggressive environments..

Areas of responsibility

Responsibilities of the manufacturer of the original equipment Leica Geosystems AG, CH-9435 Heerbrugg (for short Leica Geosystems):

Leica Geosystems is responsible for supplying the product, including the User Manual in a completely safe condition.

Leica Geosystems is not responsible for third party accessories.

Responsibilities of the person in charge of the instrument:

The person in charge of the instrument has the following duties:

- To understand the safety instructions on the product and the instructions in the User Manual.
- To be familiar with local safety regulations relating to accident prevention.

Hazards in use



CAUTION:

Watch out for erroneous distance measurements if the instrument is defective or if it has been dropped or has been misused or modified.



Carry out periodic test measurements. Particularly after the instrument has been subject to abnormal use, and before, during and after important measurements.

Refer to section "Checking the accuracy of the Leica Lino".



WARNING:

Flat batteries must not be disposed of with household waste. Care for the environment and take them to the collection points provided in accordance with national or local regulations.



The product must not be disposed of with the household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product specific treatment and waste management information can be downloaded from the Leica Geosystems home page at <http://www.leica-geosystems.com/treatment> or received from the Leica Geosystems dealer.

Electromagnetic Compatibility (EMC)




WARNING:

The Leica Lino conforms to the most stringent requirements of the relevant standards and regulations. Yet, the possibility of it causing interference in other devices cannot be totally excluded.

Laser classification

The Leica Lino produces visible laser beams, which are

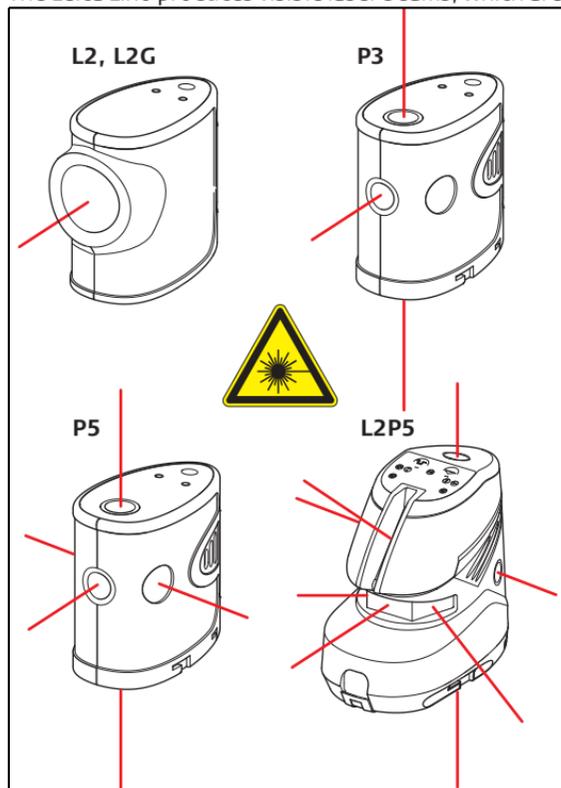

emitted from the instrument:

It is a Class 2 laser product in accordance with:

- IEC60825-1 : 2007 "Radiation safety of laser products"

Laser Class 2/ II products:

Do not stare into the laser beam or direct it towards other people unnecessarily. Eye protection is normally afforded by aversion responses including the blink reflex.

⚠ WARNING:
Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be hazardous.

⚠ CAUTION:
Looking into the laser beam may be hazardous to the eyes.

en

Labelling

L2P5



Laser Radiation
Do not stare into the beam
Laser class 2
in acc. with IEC 60825-1:2007
Maximum radiation power: < 1.0mW c.w.
Emitted wavelength: 620-690nm
Beam divergence < 180°

Laser Radiation
Do not stare into the beam
Laser class 2
in acc. with IEC 60825-1:2007
Maximum radiation power: < 1.0mW c.w.
Emitted wavelength: 620-690nm
Beam divergence < 1.5 mrad



L2



Laser Radiation
Do not stare into the beam
Laser class 2
in acc. with IEC 60825-1:2007
Maximum radiation power: < 1.0mW c.w.
Emitted wavelength: 620-690nm
Beam divergence < 120°



L2G



Laser Radiation
Do not stare into the beam
Laser class 2
in acc. with IEC 60825-1:2007
Maximum radiation power: < 1.0mW c.w.
Emitted wavelength: 532nm
Beam divergence < 120°



P3/P5




Laser Radiation
Do not stare into the beam
Laser class 2
in acc. with IEC 60825-1:2007
Maximum radiation power: < 1.0mW c.w.
Emitted wavelength: 620-690nm
Beam divergence < 1.5 mrad



Position of label:

en

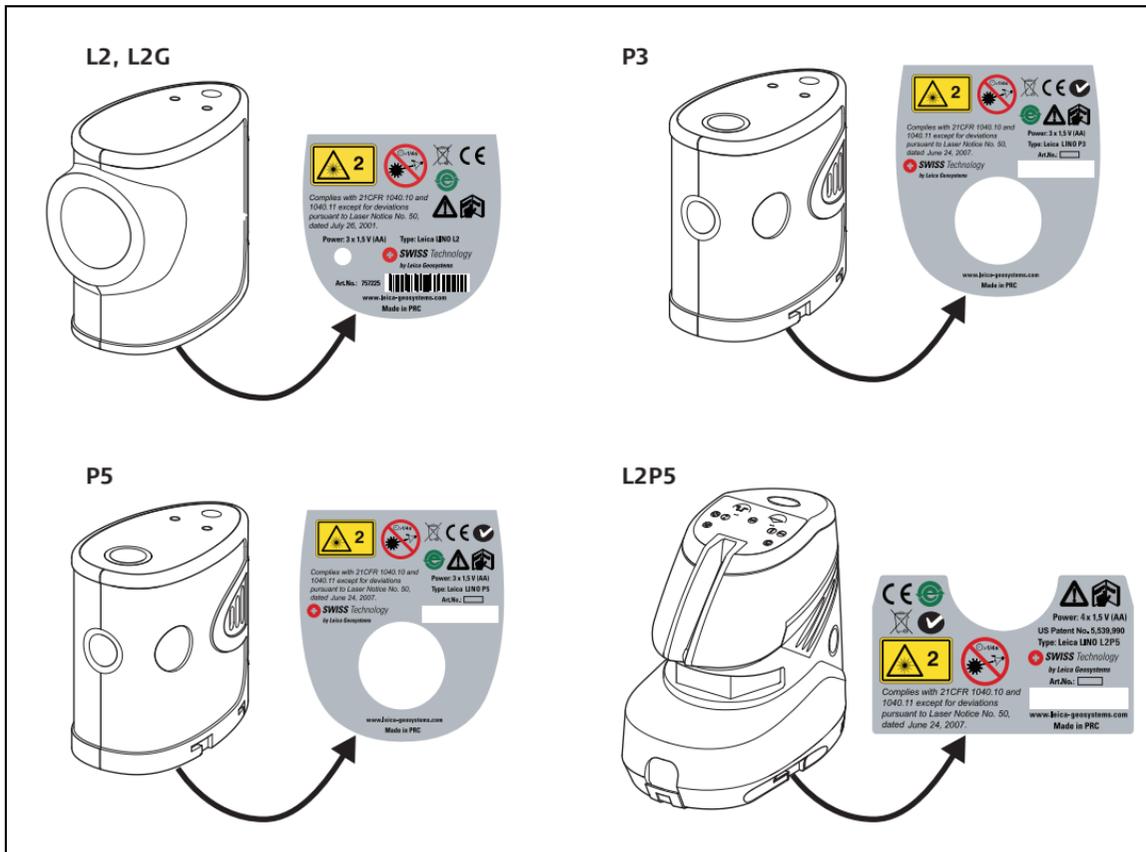



Leica Geosystems AG, Heerbrugg, Switzerland has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Total Quality Management - Our commitment to total customer satisfaction. Ask your local Leica Geosystems agent for more information about our TQM program.

Copyright Leica Geosystems AG, Heerbrugg,
Switzerland 2009
Translation of original text (757665b en)

Leica Geosystems AG
CH-9435 Heerbrugg
(Switzerland)
www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems