

Anal og control 0-10V  
DMX512 Control

# Sextans

color  
multicolor



Your distributor :

**USER  
manual**

Annotation:

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

### Technical specification

	ProLine Sextans 2PH250
Supply voltage	230V/50Hz
Power consumption	560W
Fuse	T4A
Light source	2x120V/250W ENH
Lamp life	175h
Socket cap	Gx5,3
Weight	10 kg
Dimensions	/mm/ 370x280x500

Colours: dichroic filters  
Motors: stepping motors  
Electronics: Functions of the device controlled by microprocesor, input controlling signal 0-10V, input and output signal DMX512. Built in internal microphone, DIP switch.

### Description of the device:

**Sextans** Dynamic gobo effect. In dependence of chosen controlling /0-10V/ and coming sound pulses 6x2 gobo pictures are mapping the area. Gobo pictures are chosen automatically without sound reaction.. Focusing /FOCUS/ and size adjusting /ZOOM/ you do by screws on a top of the device.

DMX controller you adjust speed and course of rotation, chose one of 12 programs

0-10V controller you have possibility of chosing one of 12 programs /speed and course adjusting, the way of reaction on sound, programs working with or without sound/

**Version:** colour Colours and pictures are changing together. In the area 12 gobos in two colours /of 7 colours/ displays

multicolour There are changing gobo pictures and displaying in 2x6 colours.

12-central stop without reaction

### Functions of the control DMX channels

Mode full control DMX512 by signal /8DIP in condition ON/

Channel no.1	0-54	motor no.1 stops
	55-155	motor no.1 is rotating to the right/ 55 min. speed, 155- max. speed/
	156-255	motor no.1 is rotating to the left / 156 min.speed, 255 max.speed/
Channel no.2	0	motors stop
	1-54	motor no.2 stops
	55-155	motor no.2 is rotating to the right /55 min.speed, 155 max.speed
	156-255	motor no.2 is rotating to the left /156 min.speed, 255 max.speed

Mode control adjusting 0-10V /8DIP in condition OFF/

Channel no.1	0-15	PRG1	16-39	PRG2	40-63	PRG3	64-79	PRG4		
	80-95	PRG5	96-119	PRG6	120-135	PRG7	136-159	PRG8	160-175	PRG9
	176-207	PRG10	208-223	PRG11	224-255	BlackOut, motors stop				
Channel no.2	0	motors stop								
	1-255	normal mode								

### Maintenance

Disconnect the device from the mains before any maintenance work!

To secure no failure operation and long lifetime it is essential to clean the device regularly. Dust with smoke from fog machines, air moisture and cigarette smoke is being built up on the body of the device, but mainly on optical system objective. Dust penetrates through the ventilator inside of the device and settles on internal optical system consequently the light output is reduced radically.

Because there is a bigger danger of failure it is necessary to maintain regularly. Follow these rules for cleaning:

Objective requires cleaning by soft-cloth moistened in weak soapy solution. Internal parts, like optical system, gobo, dichroic filters clean monthly the same way, with soft smooth cloth moistened in weak soapy solution. The gobos clean by soft brush. The interior of the projector should be cleaned monthly. Ventilator and cooling fans should be cleaned monthly by soft brush and vacuum cleaner. Adapt cleaning interval to density of operating time.

Never use for cleaning any solvents and similar chemicals, grinding sponge for dishwashing, washing powder or cleaning agents with grinding effect.

### USER MANUAL

Before you initial start up this lighting, please read the following instructions carefully!

**Important:** Damages caused by the disregard of this user manual are not subject to warranty. We will not accept liability for any resulting defects or problems. Therefore, it is absolutely necessary for you to follow the safety instructions and warning notes written in this manual.

This lighting is only for power supply 230V/50Hz.

For safety reasons, unauthorized modifications are forbidden! Not only damages to the lighting can be the result of unauthorized use but also you may endanger your own and the safety of others.

The electric connection must be carried out by qualified person.

This device is an effect lighting and was not designed for permanent use.

When you install the lighting, make sure that there is no highly flammable material in between a distance of 1m (such as decoration articles, curtains, wooden ceiling etc.

Please keep away from children- lamp generates high temperature.

Lamps are not subject to warranty.

### Ventilation

It is necessary to ensure cooling fans against their covering and secure the device to have admission of air. If temperature reach 77grd, thermal fuse placed in device will disconnect of the mains.

**Never use device without thermal fuse!!!**

### Location

Don't install the device at places with mechanical shakings and vibrations, high dustiness or high temperature. Not keeping these conditions can lead to shorter lifetime or its damage.

DON'T expose the device to influence of water, rain or moisture. It could lead to electric shock or fire.

### Supply voltage

Don't use any other supply voltage meant in technical specification and manufacture label. Not keeping proper supply voltage could lead to damaging the device, starting a fire or its wrong function.

### Power cord

Check if power cord is not mechanically damaged and if it is connected properly. Check also if the socket is designed sufficiently for needed loading. Otherwise there is a danger of electric shock or a fire. Power cord must not be bent excessively, led through sharp edges or given to mechanical stress. Don't pull the supply lead out by the flex but only by the plug. The device must always be connected behind the main switch. Do not touch the supply lead with wet hands, you are threatened by electric shock.

### Other important cautions

Don't poke any objects into cooling fans and ventilator, it could lead to serious electric shock or damaging the device. Be careful of no water or other liquid entering.

### Maintenance and cleaning

Don't use any solvent and similar chemicals which could damage surface finish or some parts of device. Use soft and smooth cloth for cleaning optical parts of device and its surface. Never use washing powders or other cleaning agents with grinding effect. Connect the device to power supply after complete drying.


## Service

Never try to repair, dismantle or do some construction changes in case of any failure. Always consult qualified employee or dealer. Not keeping this rule you can suffer dangerous electric shock. Disconnect the device from mains before replacing the lamp or dismantling the housing. Not keeping this procedure you can suffer dangerous electric shock.

Always replace the lamp by consistent with used type or its equivalent. Unplug mains lead before opening the housing and cleaning internal parts of device. /optical system, dichroic filters, etc./ You can suffer dangerous damage of sight by discharge light.

## Description of the device

- 1- external input 0-10V
- 2-microphone
- 3-XLR /DMX input/
- 4-XLR /DMX output/
- 5 -Power cord
- 6 -Fuse
- 7 -LED diode / indication of condition/
- 8 -DIP switch / function adjusting/

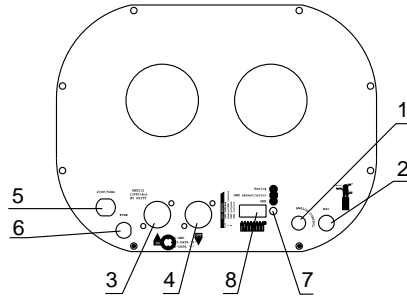

## Unpacking

Unpack the device and after acclimatisation take off the protective foil. Make sure that there are no damages caused by transportation.

## Installation

The device can be installed in any position without altering its operation. For mounting use bracket of device, which is a mounting hole in. First make sure that the structure you are going to attach the projector is secure.

When installing the projector over the ground use the safe chain and steel-wire rope as a double protection against falling down. Make sure the housing is closed firmly with the screw tightened up.

It is necessary to ensure cooling fans against their covering / curtains etc./ and secure ventilator and cooling fans to have admission of air.

Before opening the housing always disconnect the device from mains / power cord must be unplugged from the socket/. Otherwise you can be set to dangerous electric shock.

The device is supplied from manufacturer without light power. These are types of light power recommended by manufacturer.

version 2PH250- 2x lamp 120V/250W ENH Gx5,3

## Procedure

- 1-Loose fastening screw
- 2-Pull out the upper cover
- 3-If you replace the lamp, first take out original one you used before
- 4-Insert new lamp into the socket. Never touch the glass-bulb discharge lamp bare-handed, always use bulb cover or dry cotton cloth or gloves.
- 5-Make sure that the lamp is installed tightly.
- 6-Close the cover and tighten fastening screw.

## Connection to the mains


The device must always be connected behind the main switch .

## Connection to the control signal

Each function of device is addressed according to standard protocol DMX 512 /1990/4 us. It means, we can control this device by any other device, which provides signal included in protocol DMX 512 by serial line. Connection is secured provided by screened double-line ended by connector JACK 6,35 /1/4"/ or connector XLR with impedance 120ohm. If cable is not connected to external input 0-10V, the device works according to program 1 /if 7DIP switch is adjusted well OFF/ and works according coming sound pulses. If signal DMX 512 is connected to XLR input and if 7DIP is adjusted well-ON , functions controlled by 2 DMX consecutive channels.

## The device offers you several procedure

- ▶ without controller connection /0-10V, DMX512/ - motors are rotating to the left or right /PRG1/ according coming pulses
- ▶ with controller connection 0-10V- you have possibilities to adjust one of 12 built in programs , look at programs 0-10V
- ▶ with controller connection DMX512- you have possibility in dependence of 8DIP switch to stimulate controlling as a memory 0-10V / it is 12 programs/, or to adjust course, speed

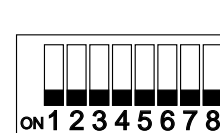

DIP switch no.

- 1-6 DMX address(/schedule)
- 7 Analog (OFF)/DMX512(ON) controlling
- 8 full DMX controlling(ON)12 programs (OFF)

Addressing of the device	DIP1	DIP2	DIP3	DIP4	DIP5	DIP6	DIP7	DIP8
Address 1	ON	ON	ON	ON	ON	ON	ON	ON
Address 2	OFF	ON	ON	ON	ON	ON	ON	ON
Address 3	ON	OFF	ON	ON	ON	ON	ON	ON
Address 4	OFF	OFF	ON	ON	ON	ON	ON	ON
Address 5	ON	ON	OFF	ON	ON	ON	ON	ON
Address 6	OFF	ON	OFF	ON	ON	ON	ON	ON

Addressing of the device you make by summary single DIP and by deduction 1. e.g.if you want to address the device no. 30, adjust by DIP 29.

example	DIP1	DIP2	DIP3	DIP4	DIP5	DIP6	switch value
device 30	OFF	ON	OFF	OFF	OFF	ON	=sum 29

## Programs 0-10V /M1-motor no.1, M2-motor no.2/

Program description

- 1-basic mode /work during sound and change course/
- 2-M1 only to the left, M2 as a prg.1
- 3-M1 only to the right, M2 as a prg.1
- 4-as a prg.1 + adjusting of speed
- 5-M1 stops, M2 as a prg. 1
- 6-M1, M2 altered with stop
- 7-M1 as a prg.1, M2 stops
- 8-M1 as a prg.1 M2 only to the right
- 9-M1 as a prg.1, M2 only to the left
- 10-rotation M1 to the left, M2 to the right + speed adjusting
- 11-break movement short fall time, function prg.1

