


VC-A20P HD Camera

Installation Guide - English

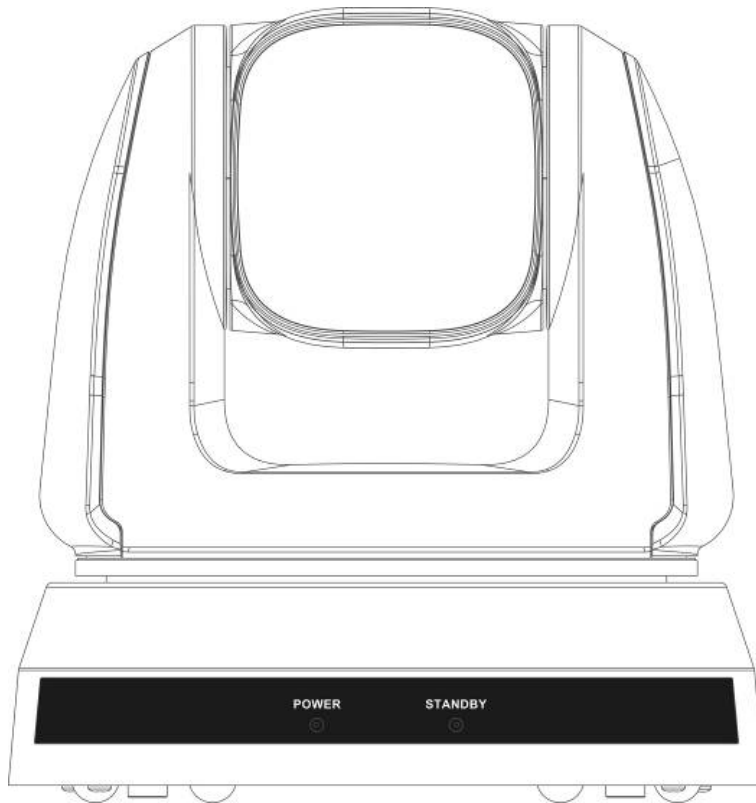

[Important]

To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit Lumens
<http://www.Mylumens.com/support.php>

Table of Contents

Copyright Information	2
Chapter 1 Safety Instructions	3
Precautions	3
Chapter 2 Package Contents	5
Chapter 3 Product Overview	6
3.1 Overview	6
3.2 Description of LED indicator	6
Chapter 4 Instruction for installation	7
4.1 Preparation before installation	7
4.2 Instruction for installation	7
4.3 Connecting devices	13
Chapter 5 Remote Control and Setting Menu.....	17
5.1 Functions of remote control	17
5.2 Setting menu	18
Chapter 6 Descriptions of Major Functions.....	23
6.1 I would like to switch to VC-A20P	23
6.2 I would like to save the current lens position data.....	23
6.3 I would like to clear the saved position data.....	23
6.4 I would like to turn on the back light compensation.....	23
6.5 I would like to adjust the shooting angle of the lens.....	23
6.6 I would like to zoom in/out images.....	23
6.7 I would like to adjust the focal length.....	23
6.8 I would like to adjust the AF speed.....	23
6.9 I would like to set the image mode	24
6.10 I would like to freeze images	24
6.11 I would like to rotate the image.....	24
6.12 I would like to change the camera direction	24
6.13 I would like to display the current status.....	24
6.14 I would like to reset to the default value	24
Chapter 7 Network Function Settings Description	25
7.1 Online IP Camera	25
7.2 Web Page Function Description	27
Chapter 8 DIP switch setting.....	32
8.1 DIP SWITCH.....	32
8.2 RS-422 Connection.....	33
Chapter 9 Troubleshooting	35

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, Lumens Digital Optics Inc. hereby reserves the right to make changes to product specifications without prior notice. The information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.

Chapter 1 Safety Instructions

Please use the product following the safety instructions below:

1 Operation

- 1.1 Please use the product in the recommended operating environment.
- 1.2 Do not place Light Engine in tilted position.
- 1.3 Do not place the product on an unstable trolley, stand or table.
- 1.4 Do not use this product near water or source of heat.
- 1.5 Use attachments only as recommended.
- 1.6 Use the type of power source indicated on the HD Camera. If you are not sure of the type of power available, consult your dealer or local electricity company for advice.
- 1.7 Always take the following precautions when handling the plug. Failure to do so may result in sparks or fire.
 - Ensure the plug is free of dust before inserting it into a socket.
 - Ensure that the plug is inserted into the socket securely.
- 1.8 Do not overload wall sockets, extension cords or multi-way plug boards to avoid potential risks.
- 1.9 Do not block slots and openings in the case of this product as poor ventilation may lead to overheating of this product.
- 1.10 Except as specifically instructed in this User Manual, do not attempt to open or remove covers by yourself. It may expose you to electric shock or other hazards. Refer all servicing to licensed service personnel.
- 1.11 Unplug this product from the wall outlet and refer servicing to licensed service personnel when the following situations happen:
 - If the power cords are damaged or frayed.
 - If liquid is spilled into the HD Camera or the HD Camera has been exposed to rain or water.

2 Installation

- 2.1 For security considerations, please make sure the standard hanging rack you bought is in line with UL or CE safety approbations and installed by technician personnel approved by agents.

3 Storage

- 3.1 Do not place the HD Camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- 3.2 Never push objects of any kind through cabinet slots. Never allow liquid of any kind to spill into the HD Camera.
- 3.3 Unplug this product during thunderstorms or if it is not going to be used for an extended period.
- 3.4 Do not place this product or accessories on top of vibrating equipment or heated objects.

4 Cleaning

- 4.1 Unplug all the cables before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.





5 Remote control (if the accessories are equipped with remote control)

- 5.1 Using an incorrect battery type in the remote control may result in breakdown. Follow local instructions on how to dispose of used batteries.

■ Precautions

Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

If HD Camera will not be used for an extended time, unplug it from the power socket.

	<table border="1"> <tr> <td style="text-align: center;">Note</td> </tr> <tr> <td style="text-align: center;">Risk of Electric Shock Please do not open it by yourself.</td> </tr> </table>	Note	Risk of Electric Shock Please do not open it by yourself.	
Note				
Risk of Electric Shock Please do not open it by yourself.				
<p>Caution: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to licensed service personnel.</p>				
	<p>This symbol indicates that this equipment may contain dangerous voltage which could cause electric shock.</p>			
		<p>This symbol indicates that there are important operating and maintenance instructions in this User Manual with this unit.</p>		

■ **FCC Warning**

This HD Camera has been tested and found to comply with the limits for a Class A digital device, pursuant to Article 15-J of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

■ **EN55022 (CE Radiation) Warning**

This product is intended for use in a commercial, industrial, or educational environment. It is not intended for residential use.

This is a Class A product. In a residential environment it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, reception room or hall.

Chapter 2 Package Contents

VC-A20P



Instruction for installation




Remote control




Power cord



Power Adapter




RS-422 Connector

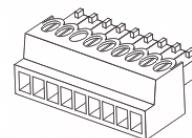


Appearance may vary depending on country/region

Metal Plate A

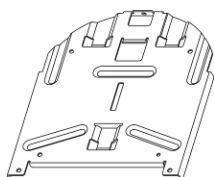

Metal Plate B



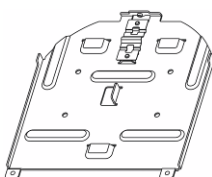


M3 Screws



Chapter 3 Product Overview

3.1 Overview
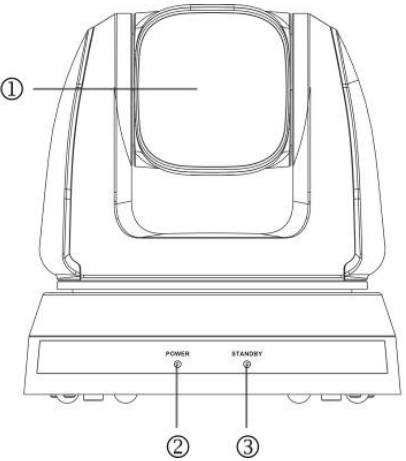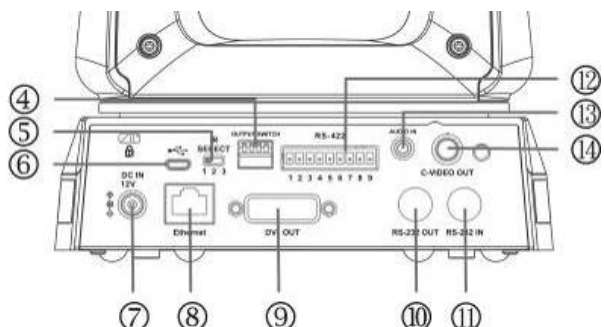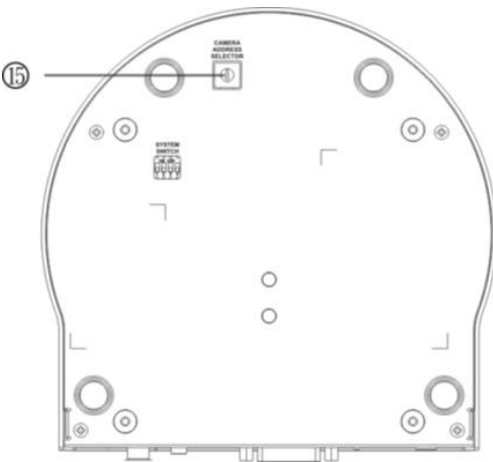
<p>Front View</p> 	<p>1. Camera lens</p> <p>2. Power LED indicator</p> <p>3. Standby LED indicator</p>
<p>Back View</p> 	<p>4. OUTPUT Switch</p> <p>5. IR SELECT</p> <p>6. USB port (for FW update)</p> <p>7. Power input</p> <p>8. Ethernet port</p> <p>9. DVI output</p> <p>10. RS-232 output</p>
<p>Bottom</p> 	<p>11. RS-232 input</p> <p>12. RS-422 Connection</p> <p>13. Audio In</p> <p>14. C-VIDEO output</p> <p>15. Camera Address Selectors</p>

3.2 Description of LED indicator

3.2.1 Power:

3.2.1.1 No light: Power off

3.2.1.2 Green light: In use

3.2.1.3 Flickering green: Signal from the remote control is received; the indicator flickers every 0.5 second

3.2.2 Standby:

3.2.2.1 Orange: In standby mode

3.2.2.2 No light: Power on

Chapter 4 Instruction for installation

4.1 Preparation before installation

Installation and connection of VC-A20P HD camera requires special skills. To install by yourself, please follow necessary steps, ensure steady and tight installation of the device, and pay attention to your safety to avoid any accident.


- 4.1.1 **Ensure the safety of the installation environment. Please do not install the device on unstable ceiling or in a place where the device is in danger of falling to avoid any accident.**
- 4.1.2 **Please check whether accessories in the box are complete or not. Please contact the supplier for any shortage, and make sure to keep the accessories in the box intact.**
- 4.1.3 **Please choose a proper place for installation of VC-A20P in advance. Please determine an installation place according to the following requirements.**
 - 4.1.1.1 Confirm the position for the object to be captured.
 - 4.1.1.2 Confirm whether the VC-A20P is set at a proper distance from other light sources.

4.2 Instruction for installation

4.2.1 I would like to install VC-A20P on the desk


4.2.1.1 Precautions for installation

- ◆ Please install the machine on a flat desk
- ◆ Do not grab the camera head by hand when handling the device
- ◆ Do not rotate the camera head by hand. Improper rotation may result in breakdown of the camera

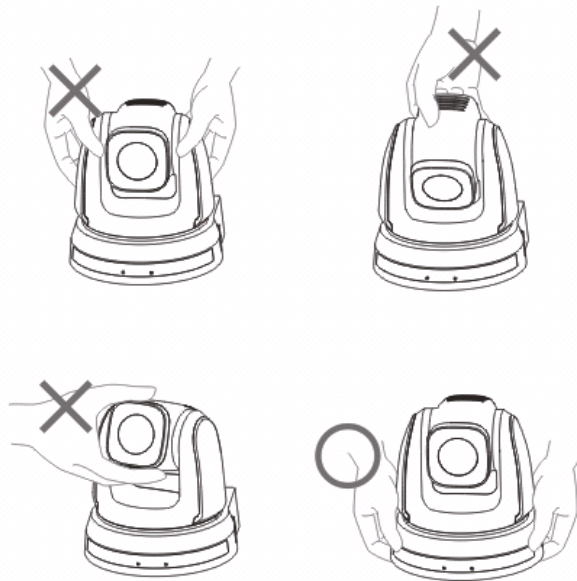

4.2.1.2 Installation steps

1. Please adjust DIP switch at first prior to installation
<Remark> Please refer to [Chapter 8 DIP Switch Setting](#) for the relevant descriptions on DIP switch.
2. Place the camera on a flat desk directly to ensure the normal vertical and horizontal operation of the machine

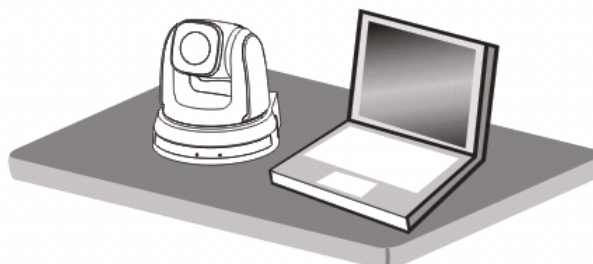

4.2.2 I would like to install VC-A20P on the ceiling


4.2.2.1 Prepare for the parts and equipment required during the installation

1. Accessories of VC-A20P in the box (metal plates A, B and M3 screw x 7)
2. Screw for locking on ceiling mounted hanger x 4
3. Drilling machine, screw driver, ladder


4.2.2.2 Camera Size

Length x Width x Height: 174 x 173.8 x 182.7 mm

Weight : 1.8 Kg

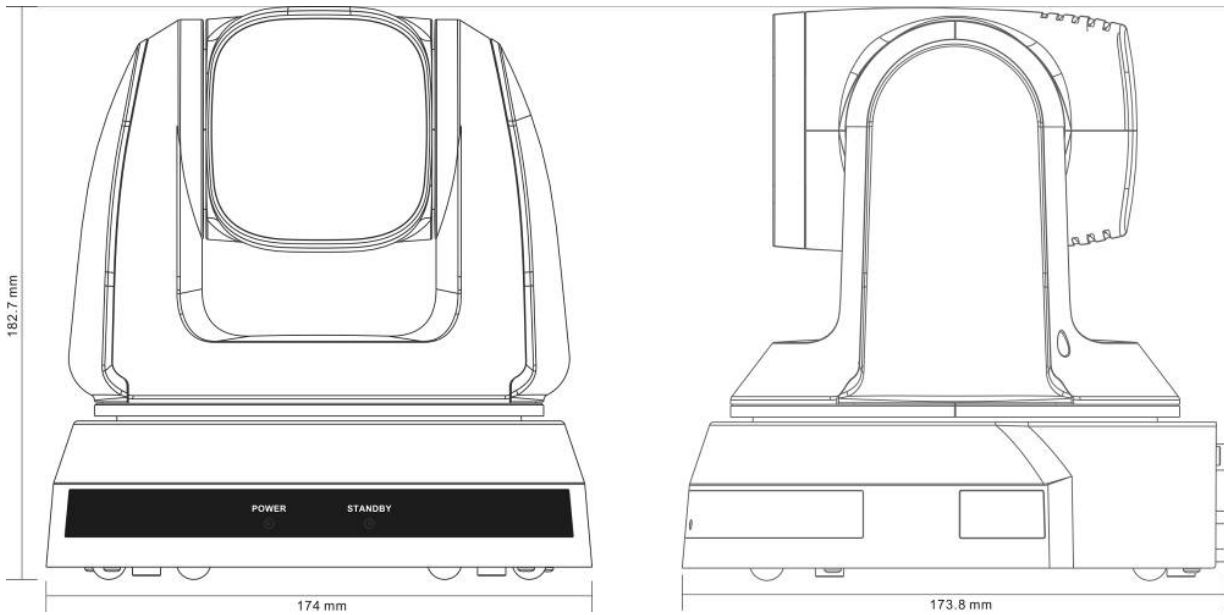


4.2.2.3 Max. rotation dimension of camera

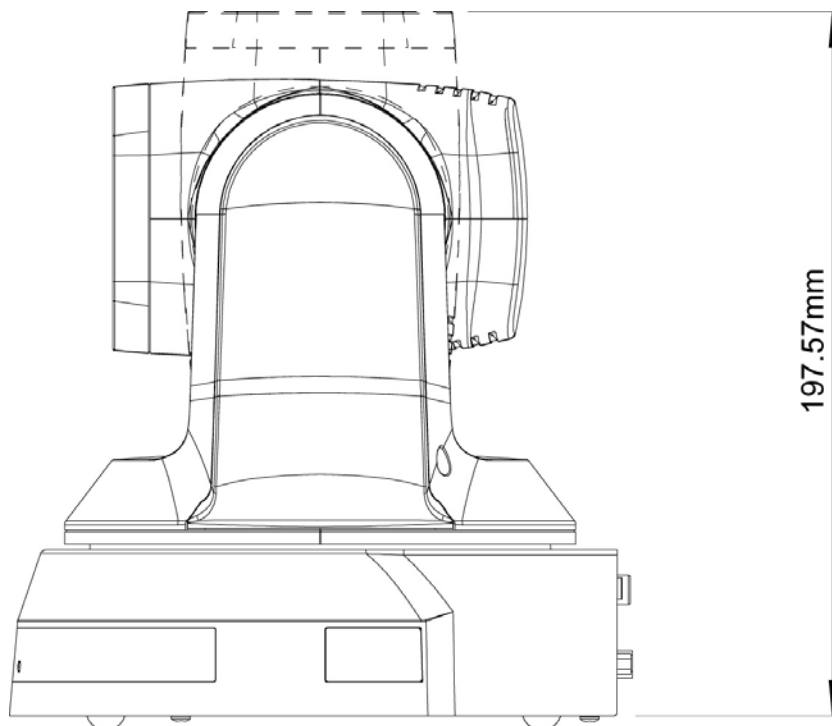


4.2.2.4 Size Diagram


1. Metal plate B - ceiling side

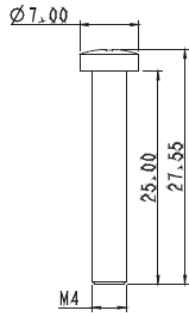


Metal plate B locking screw

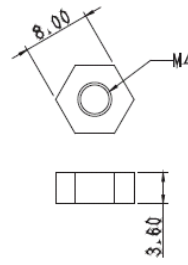

Metal plate B locking bolt




M3 threaded hole

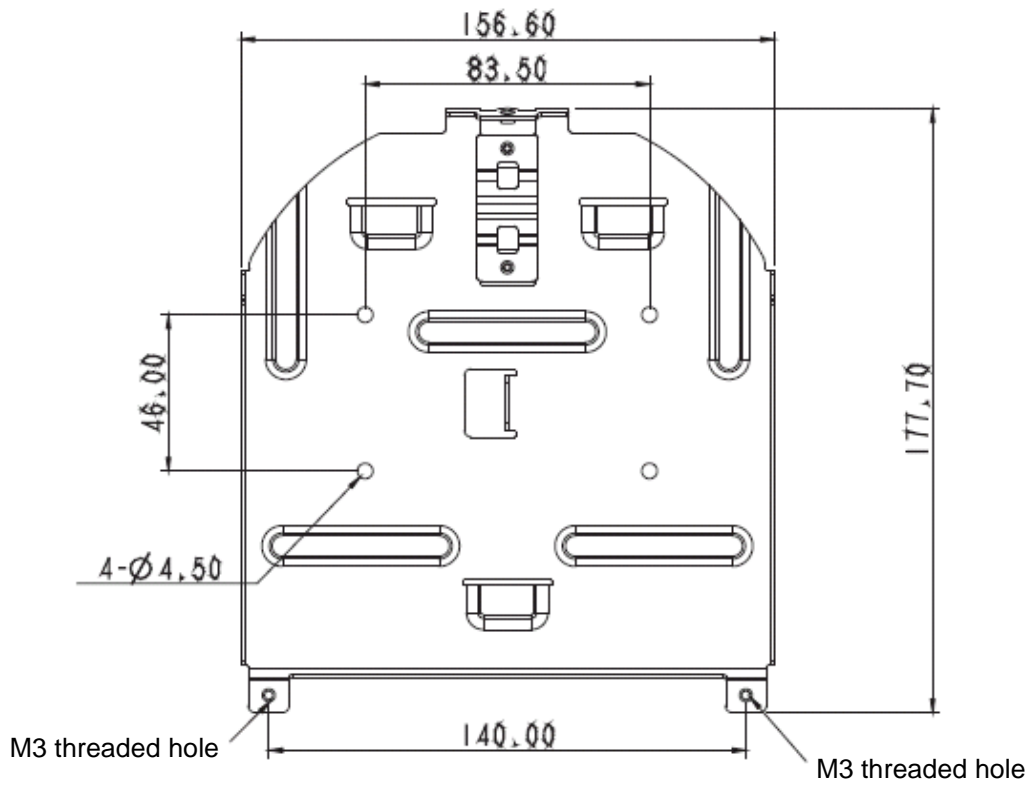


M3 threaded hole

M3 threaded hole

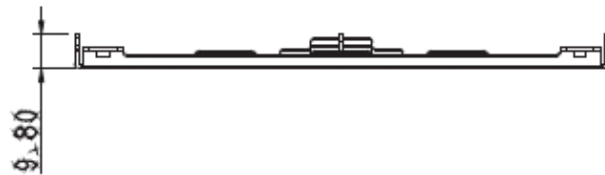


Metal plate B - ceiling

2. Metal plate A - machine side

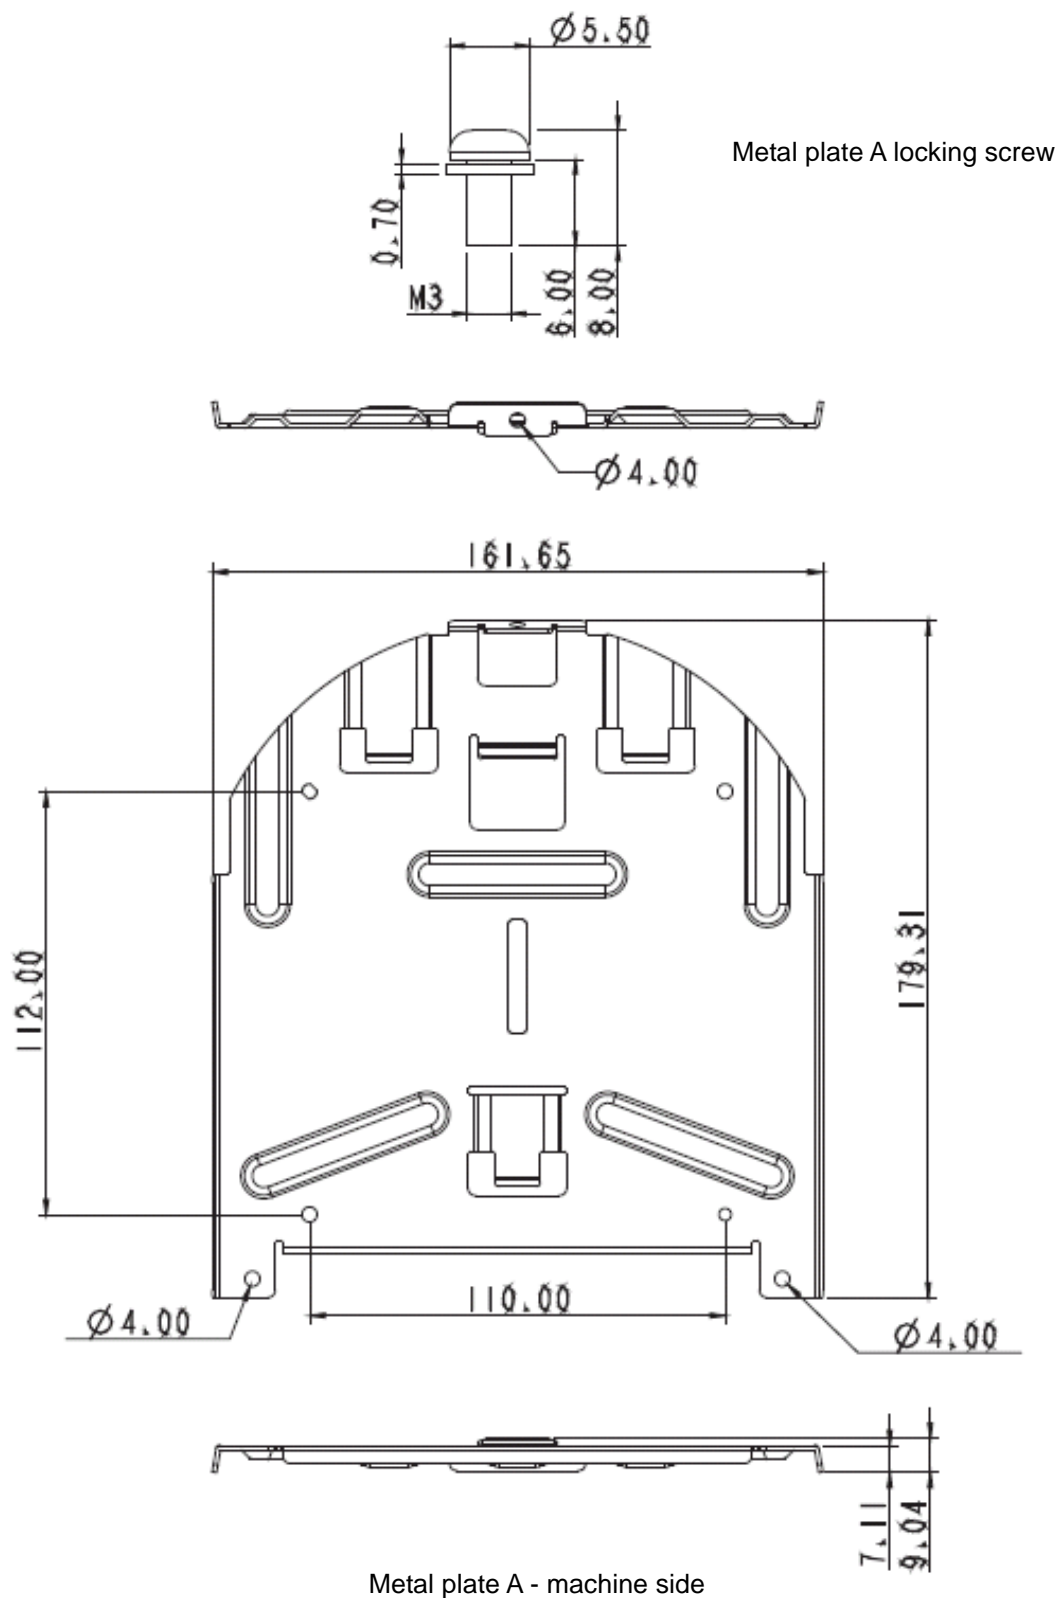


3. Bottom of machine

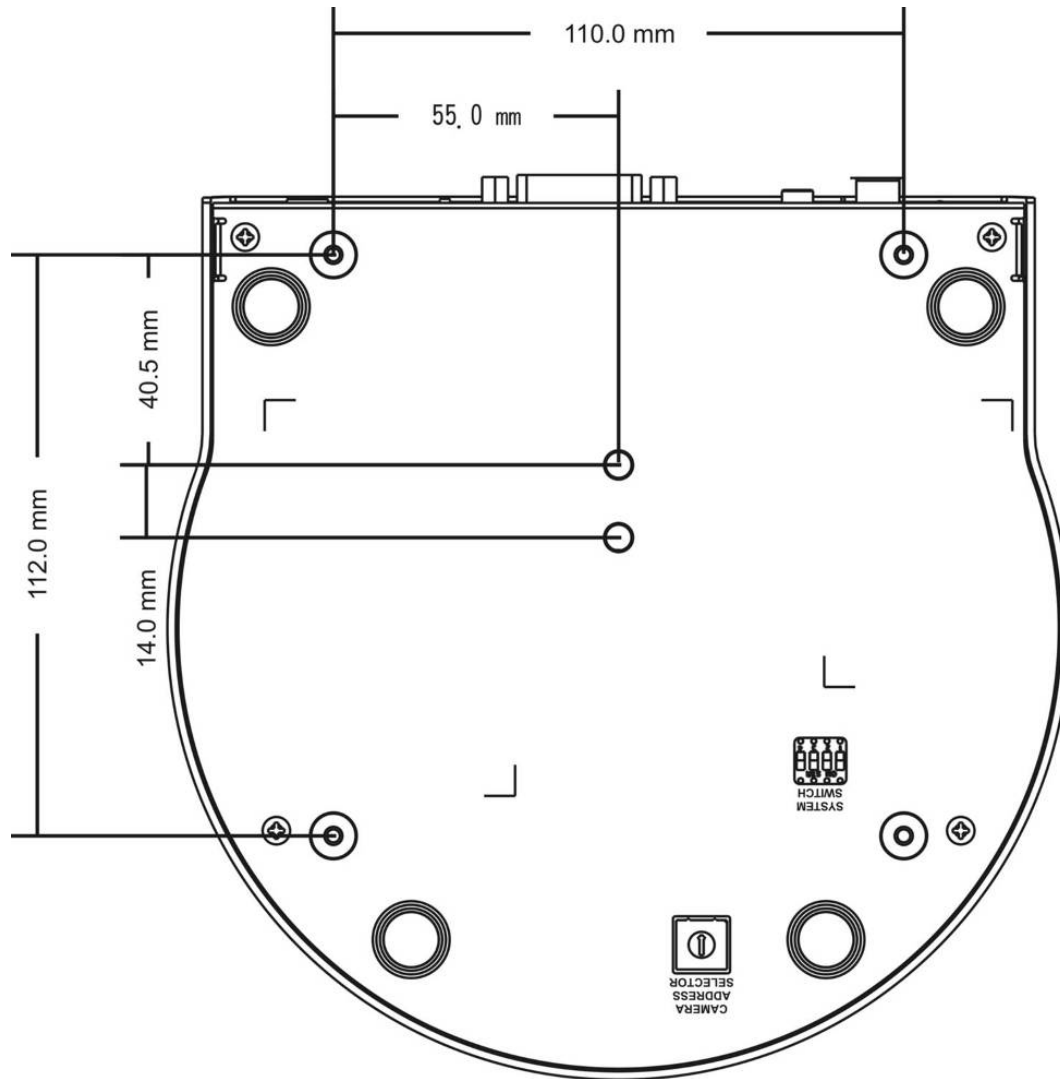

4.2.2.5 Precautions for installation

1. Before installation, please confirm the orientation of the machine relative to the object to be captured
2. It is recommended that the machine should be set at a distance of more than 1 meter away from the object to be captured. Please adjust for a best distance according to the magnification of the lens

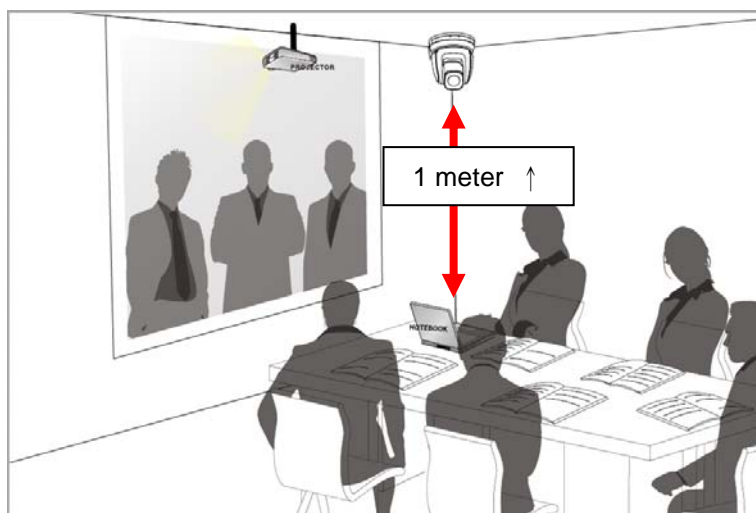


3. The machine (including metal plates) is weighed at about 2.5 kg. If it is to be installed on the ceiling, please use the hanger that has obtained UL security approval to prevent the machine from falling down
4. Please check whether the camera is installed securely on a regular basis

4.2.2.6 Installation steps

1. Please adjust resolution on DIP switch at first

<Remark> Please refer to [Chapter 8 DIP Switch Setting](#) for the relevant descriptions on DIP switch.

2. Fix the metal plate A on the machine base with 4 M3 screws

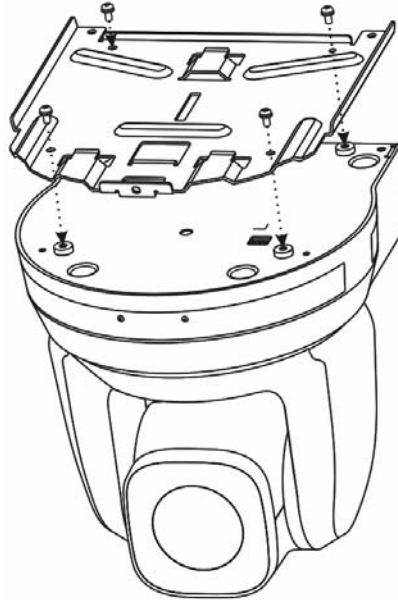

3. Lock the metal plate B on ceiling mounted hanger

※Caution:


(1) Please use the hanger that has obtained UL security approval

(2) Please reserve the hole for the connecting wires of the camera

4. Combine the metal plate A and the metal plate B


(1) Push the metal plate A up to the ceiling and then to the right to latch the metal plate B

(2) Fix with 3 M3 screws

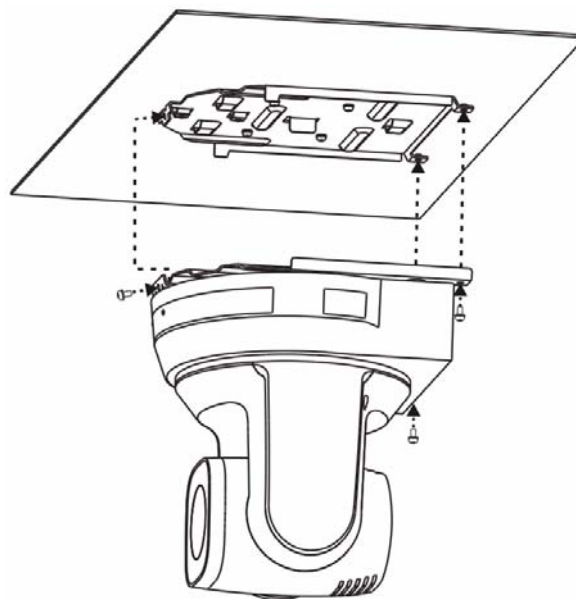

4.2.2.7 How to remove

1. Remove the connecting wires from the camera
2. Uninstall the camera together with the ceiling, loosen the three screws that fix the metal plates A and B and push to the left to remove the machine

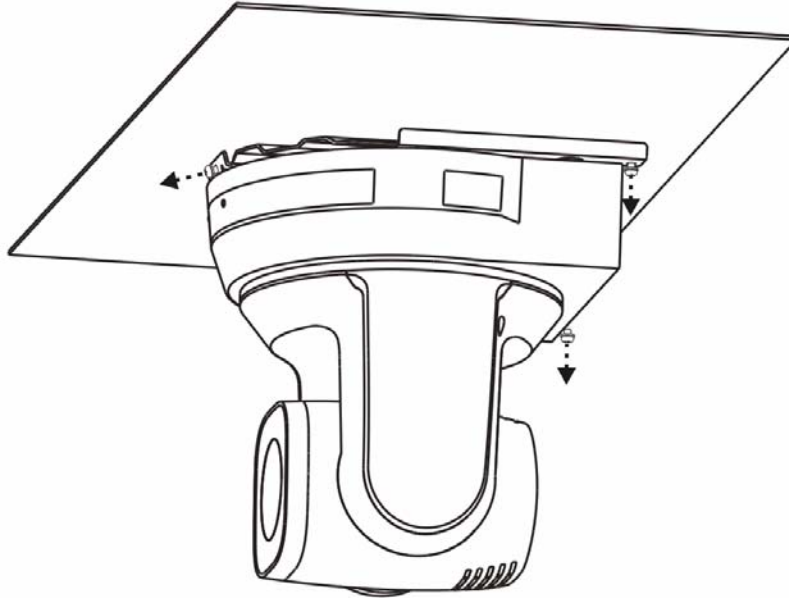


3. Then remove the screws on the hanger and the machine


4.3 Connecting devices

4.3.1 Image output


4.3.1.1 Connecting to a HDTV/computer monitor (DVI)

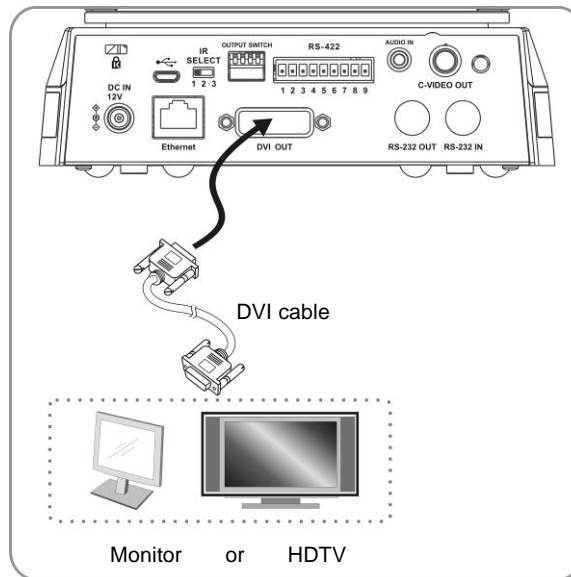

4.3.1.2 Connecting to a TV (C-Video)

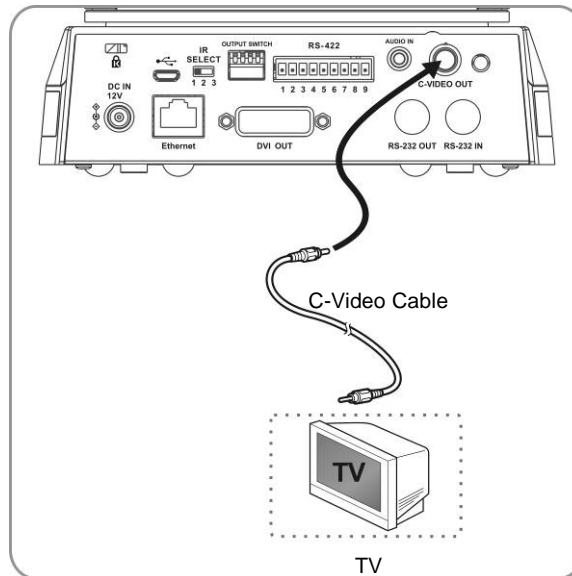


4.3.1.3 Connecting to Internet

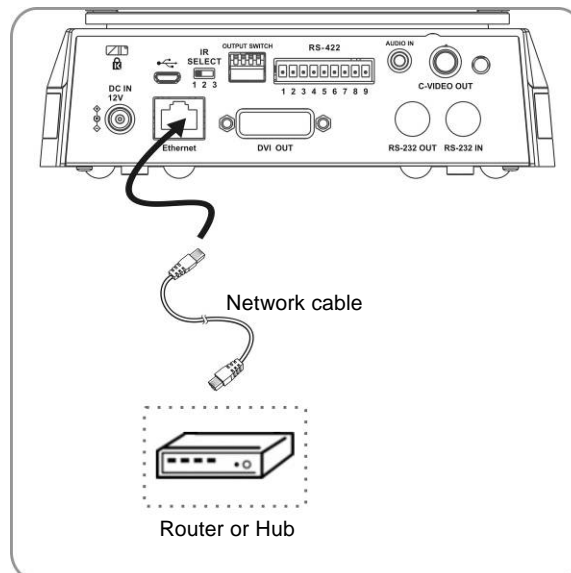

<Remark 1> VC-A20P can be used with browsers, Lumens VMS, VLC and QuickTime after it is connected to the Internet.


<Remark 2> For use of Lumens VMS, please refer to the [User Manual for VMS Software](#).

4.3.1.4 Connecting AUDIO IN

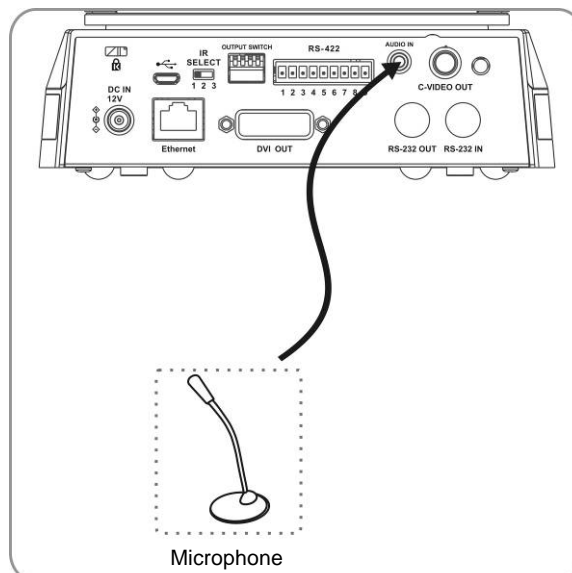


4.3.2 Controlling VCs with the computer

4.3.2.1 Connecting to one computer for connection between VCs (RS-232 in/out)

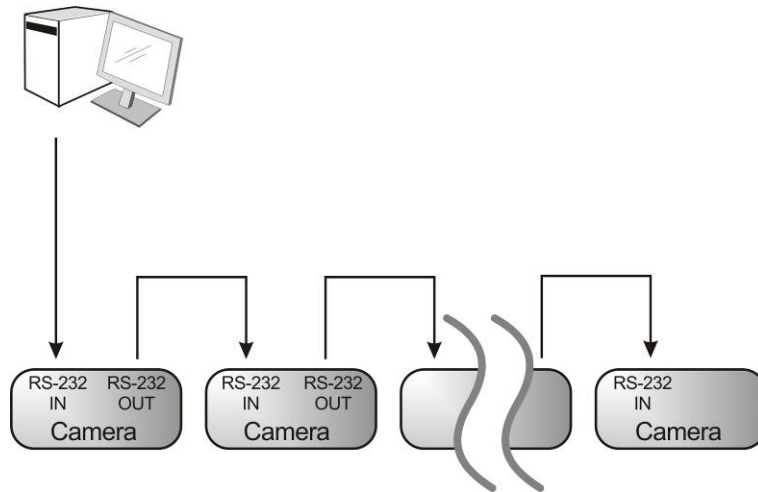

<Remark> With RS-232 in/out, at most 7 VCs can be connected.

4.3.2.2 Connecting to one computer for connection between VCs (RS-422)

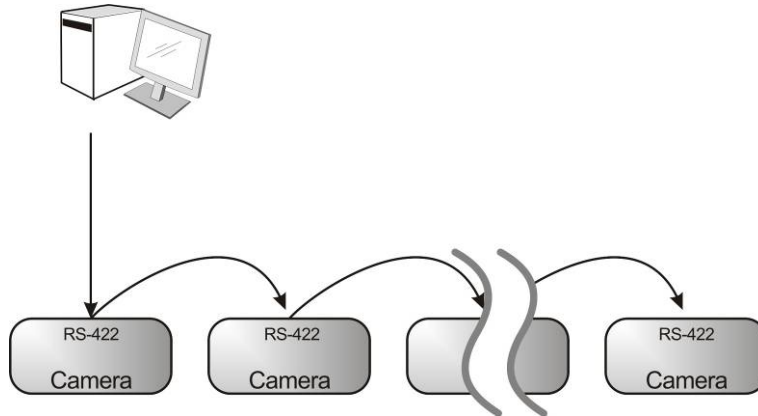

<Remark> Please refer to [8.2 RS-422 connection](#) for the RS-422 connection instructions.

<Remark> With RS-422, at most 7 VCs can be connected.

4.3.3 Use of VC-A20P with Internet Connection

4.3.3.1 Setup before use

- Connect DVI output to the screen.
- Press [MENU] on the Remote Control to display the OSD menu.
- Shift down to [Ethernet] to modify and confirm the IP address.

DHCP: Enable/disable the dynamic host configuration protocol

IP Address: Confirm or modify the IP address of VC-A20P

Subnet mask: 255.255.255.0

Gateway: Preset 192.168.100.1

[Remark] Please modify the above settings based on the LAN setting of the operating environment. To use

DHCP, please connect the VC-A20P to LAN and then confirm IP address.

- After completing settings, press [MENU] to exit the OSD menu.
- After completing setting and confirming IP address, DVI cable can be disconnected.

4.3.3.2 Start Using

- Connect network cable to VC-A20P network port to connect VC-A20P to LAN.
- Press [MENU] on the Remote Control to display the OSD menu.
- Open the browser, and enter the URL of VC-A20P in the address bar,
e.g.: <http://192.168.100.150> (default IP address)
- Enter administrator's account and password

Account: admin (Default)

Password: 9999 (Default)

Subnet mask: 255.255.255.0

Gateway: Preset 192.168.100.1

[Remark 1] For details, please refer to [Chapter 7 Network Function Settings Description](#).


[Remark 2] In addition to browsers, other software such as Lumens VMS, VLC and QuickTime can be used for operation.

[Remark 3] For operation of Lumens VMS, please download the software and its user manual from Lumens website.

Chapter 5 Remote Control and Setting Menu

5.1 Functions of remote control

<Remark> The below functions are listed alphabetically.

	Item	Description
	◀, ▶, ▲, ▼	Move the lens
	Back Light	Turn on/off back light compensation
	Camera select	Choose 1 ~ 3 of VC-A20P
	Focus-Manual / Far/Near	Turn on manual focus to adjust the focal length
	Focus-Auto	Auto focus
	Freeze	Freeze the screen
	Home-Enter	Go back to the main page / Execute
	Info	Status information
	L/R Direction Set	L/R Direction / Normal
	Menu	Display OSD menu
	Mirror	Rotate the image (OFF / Mirror / Flip / Mirror + Flip)
	Pan/Tilt Reset	Clear the Pan / Tilt setting
	Picture	Switch image effect (OFF / NEG / Black & White)
	Power	Power switch
	Preset	Appoint an ID (0 ~ 9) to save the current position data
	Reset	Appoint an ID (0 ~ 9) to delete the current position data
	Zoom-Fast	Adjust image size
	Zoom-Slow	Fine-tune image size

5.2 Setting menu

<Remark> Press [Menu] on the remote control to enter the setting menu; the **bold underlined** values in the following table are defaults.

1 st Level Major Items	2 nd Level Minor Items	3 rd Level Adjustment Values		Function Descriptions	
Exposure	Mode	1. Full Auto 2. Shutter Pri 3. Iris Pri 4. Manual 5. White Board		Exposure mode setting	
	Exposure_ Comp.	On / Off		AE Level	
	Exposure_ Comp. Level	-6- 0 -5		The value can be adjusted only after Exposure_ Comp. is activated	
	Shutter Pri		60/30 mode	50/25 mode	Shutter priority setting
			1/10000	1/10000	
			1/5000	1/5000	
			1/3000	1/3000	
			1/2500	1/2500	
			1/2000	1/1750	
			1/1500	1/1250	
			1/1000	1/1000	
			1/725	1/600	
			1/500	1/425	
1/350			1/300		
1/250			1/215		
1/180	1/150				
1/120	1/120				
1/100	1/100				
1/90	1/75				
1/60	1/50				
1/30	1/25				
1/15	1/12				
1/8	1/6				
1/4	1/3				
1/2	1/2				
1/1	1/1				
Iris Pri		1. F1.8 2. F2.5 3. F3.6 4. F5.1 5. F7.2 6. F10.2 7. F14.4 8. F20.4		Iris setting	

	Manual Gain	<ol style="list-style-type: none"> 1. 0dB 2. 2 dB 3. 4 dB 4. 6 dB 5. 8 dB 6. 10 dB 7. 12 dB 8. 14 dB 9. 16 dB 10. 18 dB 11. 20 dB 12. 22dB 13. 24dB 14. 26 dB 15. 28 dB 16. 30 dB 	Manually set the gain																																														
	Manual Speed	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">60/30 mode</td> <td style="width: 50%;">50/25 mode</td> </tr> <tr><td>1/10000</td><td>1/10000</td></tr> <tr><td>1/5000</td><td>1/5000</td></tr> <tr><td>1/3000</td><td>1/3000</td></tr> <tr><td>1/2500</td><td>1/2500</td></tr> <tr><td>1/2000</td><td>1/1750</td></tr> <tr><td>1/1500</td><td>1/1250</td></tr> <tr><td>1/1000</td><td>1/1000</td></tr> <tr><td>1/725</td><td>1/600</td></tr> <tr><td>1/500</td><td>1/425</td></tr> <tr><td>1/350</td><td>1/300</td></tr> <tr><td>1/250</td><td>1/215</td></tr> <tr><td>1/180</td><td>1/150</td></tr> <tr><td>1/120</td><td>1/120</td></tr> <tr><td>1/100</td><td>1/100</td></tr> <tr><td>1/90</td><td>1/75</td></tr> <tr><td>1/60</td><td>1/50</td></tr> <tr><td>1/30</td><td>1/25</td></tr> <tr><td>1/15</td><td>1/12</td></tr> <tr><td>1/8</td><td>1/6</td></tr> <tr><td>1/4</td><td>1/3</td></tr> <tr><td>1/2</td><td>1/2</td></tr> <tr><td>1/1</td><td>1/1</td></tr> </table>	60/30 mode	50/25 mode	1/10000	1/10000	1/5000	1/5000	1/3000	1/3000	1/2500	1/2500	1/2000	1/1750	1/1500	1/1250	1/1000	1/1000	1/725	1/600	1/500	1/425	1/350	1/300	1/250	1/215	1/180	1/150	1/120	1/120	1/100	1/100	1/90	1/75	1/60	1/50	1/30	1/25	1/15	1/12	1/8	1/6	1/4	1/3	1/2	1/2	1/1	1/1	Manually set the shutter
60/30 mode	50/25 mode																																																
1/10000	1/10000																																																
1/5000	1/5000																																																
1/3000	1/3000																																																
1/2500	1/2500																																																
1/2000	1/1750																																																
1/1500	1/1250																																																
1/1000	1/1000																																																
1/725	1/600																																																
1/500	1/425																																																
1/350	1/300																																																
1/250	1/215																																																
1/180	1/150																																																
1/120	1/120																																																
1/100	1/100																																																
1/90	1/75																																																
1/60	1/50																																																
1/30	1/25																																																
1/15	1/12																																																
1/8	1/6																																																
1/4	1/3																																																
1/2	1/2																																																
1/1	1/1																																																
	Manual Iris	<ol style="list-style-type: none"> 1. F1.8 2. F2.5 3. F3.6 4. F5.1 5. F7.2 6. F10.2 7. F14.4 8. F20.4 	Manually set the iris																																														

	Gain Limit	<ol style="list-style-type: none"> 1. 8 dB 2. 10 dB 3. 12 dB 4. 14 dB 5. 16 dB 6. 18 dB 7. 20 dB 8. 22dB 9. 24dB 10. 26 dB 11. 28 dB 12. 30dB 	Max. limit value of electron gain
	Iris Limit	<ol style="list-style-type: none"> 1. F1.8 2. F2.5 3. F3.6 4. F5.1 5. F7.2 6. F10.2 7. F14.4 8. F20.4 	Max. limit value of iris
	WDR	<ol style="list-style-type: none"> 1. Off 2. 1 3. 2 4. 3 5. 4 6. 5 	WDR settings
White Balance	Mode	<ol style="list-style-type: none"> 1. Auto 2. Indoor 3. Outdoor 4. One Push WB 5. ATW 6. Manual 7. Sodium lamp 8. 3000K 9. 4300K 10. 5000K 11. 6500K 12. 8000K 13. WidwAuto 	Select the color temperature mode <ol style="list-style-type: none"> 1. 4000k ~ 7000k 2. 3200k 3. 5800k 4. 1700k ~ 10000k 5. 1700k ~ 10000k 6. Custom 7. 2800k 8. 3000K 9. 4300K 10. 5000K 11. 6500K 12. 8000K 13. 3000k ~ 7000k
	One Push Trigger	ENTER	One push trigger
	Manual Blue	0~ C ~128	Adjustable when the white balance mode is set to Manual
	Manual Red	0~ C ~128	Adjustable when the white balance mode is set to Manual
Picture	Picture effect	<ol style="list-style-type: none"> 1. Off 2. Neg 3. B & W 	Set the picture effect
	Sharpness	0~ C ~15	Adjust the sharpness of the image

	2D NR	<ol style="list-style-type: none"> 1. Auto 2. Off 3. 1 4. 2 5. 3 6. 4 7. 5 	2D noise reduction settings
	3D NR	<ol style="list-style-type: none"> 1. Off 2. Low 3. Typ 4. Max 5. Auto 	3D dynamic noise reduction settings
	Image Mode	<ol style="list-style-type: none"> 1. Mode 1 2. Mode 2 3. Mode 3 4. Mode 4 5. Mode 5 6. Mode 6 7. Custom 	The user may customize his/her desired image mode
	Image Mode Load	<ol style="list-style-type: none"> 1. Mode 1 2. Mode 2 3. Mode 3 4. Mode 4 5. Mode 5 6. Mode 6 	Adjustable when the <i>image mode</i> is set to Mode 5 . After selected, the corresponding <i>image mode</i> parameters will be read and applied to Mode 5
	Brightness	0~ C ~25	Adjustable when the <i>image mode</i> is set to Custom
	Contrast	0~ C ~25	Contrast adjustment; Adjustable when the <i>image mode</i> is set to Custom
	Saturation	0~ C ~25	Adjustable when <i>Image Mode</i> is set to Mode 5 .
	Black Level	<ol style="list-style-type: none"> 1. Off 2. Type 1 3. Type 2 4. Type 3 5. Type 4 6. Type 5 	Adjustable in the Custom Mode
	Gamma	0~ C ~3	Adjustable when <i>Image Mode</i> is set to Mode 5 .
	Skin Tone	0~ C ~5	Set skin tone, Adjustable when <i>Image Mode</i> is set to Mode 5 .
Pan Tilt Zoom	Pan/Tilt Limit	ON/ Off	Turn on/off the angle limit setting
	Pan Right Limit	0~ 170	Limit the right angle
	Pan Left Limit	-170 ~0	Limit the left angle
	Tilt UP Limit	0~ 90	Limit the upward angle
	Tilt Down Limit	-30 ~0	Limit the downward angle
D-effect	Mirror	<ol style="list-style-type: none"> 1. Off 2. Mirror 3. Flip 4. Mirror + Flip 	Set the mode at which the image is turned
Auto Focus	AF Sensitivity	<ol style="list-style-type: none"> 1. Low 2. Middle 3. High 	Select the AF triggering speed. The higher the speed is, the faster AF is triggered

	AF speed	Fast / <u>Normal</u>	Focus speed after AF triggering
	AF Frame	<u>Full Frame</u> / Center	AF frame setting, when central area was set as AF frame, focusing will be on the center of the screen. When Full Frame was set as AF frame, focusing will be calculated based on the full screen
Ethernet	DHCP	<u>On</u> /Off	Enable/Disable DHCP setting using left and right arrow keys and press [ENTER] to apply setting.
	IP Address	<u>192.168.100.150</u>	Press [ENTER] to modify the items; select the item to be modified using left and right arrow keys, and modify the value using numeric keys.
	Subnet mask	<u>255.255.255.0</u>	Press [ENTER] to modify the items; select the item to be modified using left and right arrow keys, and modify the value using numeric keys.
	Geteway	<u>192.168.100.254</u>	Press [ENTER] to modify the items; select the item to be modified using left and right arrow keys, and modify the value using numeric keys.
System	C-Video	NTSC LB	Image mode
		NTSC CP	
		<u>NTSC SQ</u>	
		PAL LB	
		PAL CP	
		PAL SQ	
	Prompt	On / <u>Off</u>	Turn on/off the prompt information on the display
	IR Receive	<u>On</u> / Off	Turn on/off the infrared reception
	Language	<u>English</u> / Chinese	Language
	Output Mode	1. <u>1080p/60</u> 2. 1080p/59.94 3. 1080p/50 4. 1080p/30 5. 1080p/29.97 6. 1080p/25 7. 1080i/60 8. 1080i/59.94 9. 1080i/50 10. 720p/60 11. 720p/59.94 12. 720p/50	Set output resolution
Protocol	<u>Protocol V</u> / Protocol PD	Protocol V: VISCA Protocol PD: PELCO D	
Factory Reset	On / <u>Off</u>	Resume the factory default setting	
FW Upgrade	On / <u>Off</u>	Upgrade Firmware	
Status			Display the current setting status

Chapter 6 Descriptions of Major Functions

6.1 I would like to switch to VC-A20P

1. Press [Camera 1 ~ 3] on the **remote control** to select VC-A20P.
 - Camera 1 ~ 3 is selected with IR SELECT.

6.2 I would like to save the current lens position data

1. Hold [Preset + ID] on the **remote control** to save the current position data.
 - ID shall be a digit [0 ~ 9].
 - Use VISCA Command to store position data to [0 ~ 127].

6.3 I would like to clear the saved position data

1. Hold [Reset + ID] on the **remote control** to clear the given position data.
 - ID shall be a digit [0 ~ 9].
 - Use VISCA Command to clear position data stored in [0 ~ 127].

6.4 I would like to turn on the back light compensation function

1. Press [Back Light] on the **remote control** to turn on or turn off the back light compensation.

6.5 I would like to adjust the shooting angle of the lens

1. Press [Tilt ▲] or [Tilt ▼] on the **remote control** to adjust the angle upward or downward.
2. Press [Pan ►] or [Pan ◀] on the **remote control** to adjust the angle to right or left.
3. Press [Pan - Tilt Reset] on the **remote control** to reset the angle to the center point.

6.6 I would like to zoom in/out images

6.6.1 Adjust image size

1. Press [Fast +] on the **remote control** to zoom in images.
2. Press [Fast -] on the **remote control** to zoom out images.

6.6.2 Fine-tune image size

1. Press [Slow +] on the **remote control** to zoom in images.
2. Press [Slow -] on the **remote control** to zoom out images.

6.7 I would like to adjust the focal length

6.7.1 Auto tune

1. Press [AF] on the **remote control** to adjust automatically.

6.7.2 Manual focus

1. Press [MF] on the **remote control** to turn on the manual focus function.
2. Press **Focus - [+]** or **Focus - [-]** to adjust.

6.8 I would like to adjust the AF speed

6.8.1 Adjust the AF Sensitivity

Triggering speed of focus. The higher the speed is, the faster focus is triggered.

To shoot fast-moving objects, **AF Sensitivity** can be set to [High] or [Middle], which is applicable to quick focus.

When the environment is too dark to enable auto focus or fixed objects have to be shot in different brightness, **AF Sensitivity** can be set to **[Low]**.

1. Press [MENU] to activate the setting menu.
2. Press [▶] or [◀] to select [Auto Focus].
3. Press [ENTER] to activate.
4. Press [▲] or [▼] to select [AF Sensitivity].
5. Press [ENTER] to activate.
6. Press [▶] or [◀] to select [High / Middle / Low].
7. Press [MENU] to exit.

6.8.2 Adjust the AF speed

The focus speed upon triggering **AF Sensitivity**

- **[Normal]** (default): Image flickering may not occur
 - **[Fast]**: Fast focus speed
1. Press [MENU] to activate the setting menu.
 2. Press [▶] or [◀] to select [Auto Focus].
 3. Press [ENTER] to activate.
 4. Press [▲] or [▼] to select [AF speed].
 5. Press [ENTER] to activate.
 6. Press [▶] or [◀] to select [Fast / Normal].
 7. Press [MENU] to exit.

6.9 I would like to set the image mode

1. Press [Picture] on the **Remote Control** to switch [Off/Neg/B&W].

6.10 I would like to freeze images

1. Press [Freeze] on the **remote control** to freeze the current image on the display.

6.11 I would like to rotate the image

1. Press [Mirror] on the **Remote Control** to switch [Off / Mirror / Flip / Mirror + Flip].

6.12 I would like to change the camera direction

1. Press [L/R Direction Set] on the **remote control** to switch [L/R Direction / Normal].

6.13 I would like to display the current status

1. Press [Info] on the **remote control** to display the current status information.

6.14 I would like to reset to the default value

Reset to default value using OSD menu or Remote Control combination key

- **OSD menu:** Press [MENU] → [System] → [Factory Reset] → [On] → [Enter] on the Remote Control and reset to the default value
- **Remote Control combination key:** press [+]
[8] → [8] → [6] → [Enter] one by one on the Remote Control in order to reset to the default value


Chapter 7 Network Function Settings Description

7.1 Online IP Camera

7.1.1 Connecting to Internet


Two common connection methods are shown below

1. Connecting via switch or router

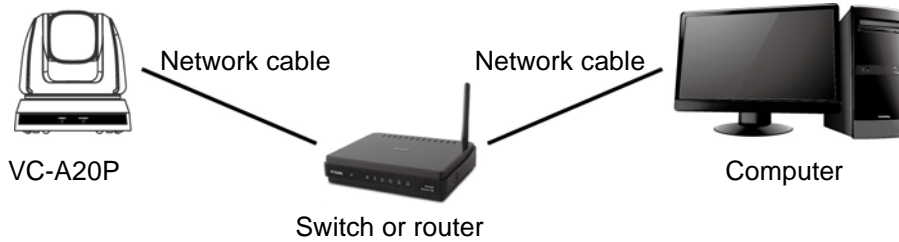


2. To connect directly through network cable, the IP address of the computer should be changed so that it is on the same network segment as the camera; for instance 192.168.100.x (preset for camera)

- Connection diagram

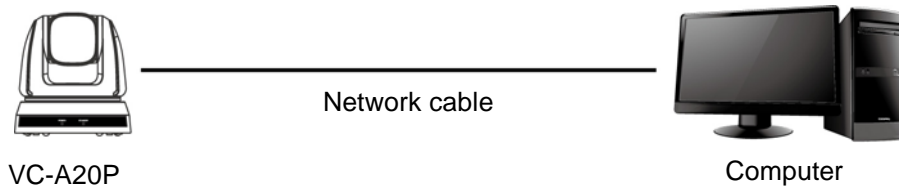

- Change network settings

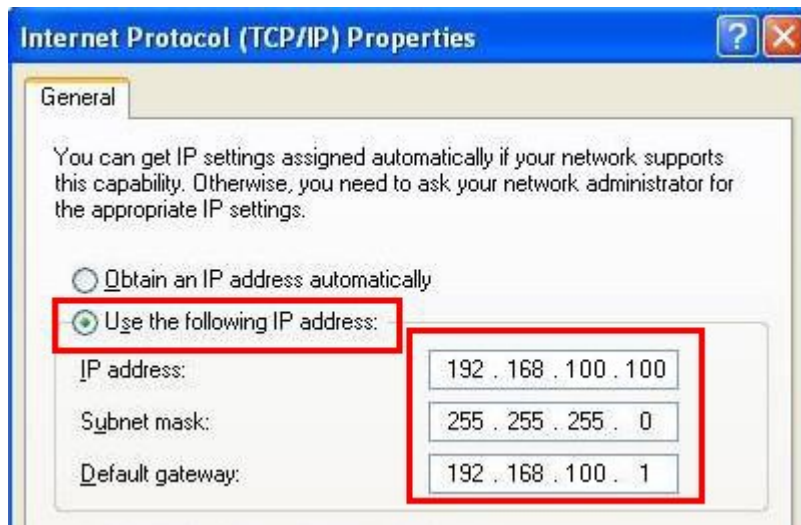

7.1.2 Use the web browser

1. Open the browser, and enter the URL of VC-A20P in the address bar, e.g.: <http://192.168.100.150> (default IP address)
2. Enter administrator's account and password to get started
Account: admin (Default)
Password: 9999 (Default)
3. <Remark> 1. "WebPlugin" must be installed before the first use. Please install the program after downloading according to instructions on the screen (as shown in the following figure).
2. Please login the computer as Administrator to install it.
3. After completing installation, please refresh the page.

Installation Guide


The "WebPlugin" file will be downloaded automatically in 7 seconds...

Step:

- 1. Before you begin, close your web browser (i.e. Internet Explorer, Firefox, Chrome, etc.) first.




- 2. Double-click "WebPlugin.exe" to start the actual installation process.

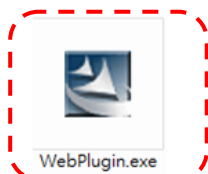


- 3. After installation is completed, open the web browser and type in the IP address of the IP Camera



7.1.3 Use VMS

1. Please download VMS software from Lumens website: <http://www.Mylumens.com/support.php>
2. After starting the software, use search function  to find out available VC-A20P, or add a known VC-A20P IP address
3. Click VC-A20P in the list and start operation after connecting to network

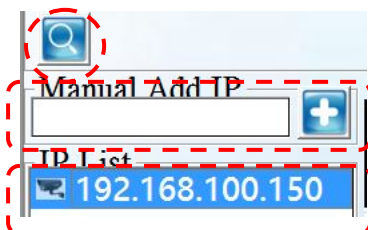


7.1.4 Use RTSP player

In addition to browser and VMS, other RTSP methods can be used for connection, such as VLC and Quick Time

RTSP connection address: `rtsp://VC IP Address:8557/h264`

1. Open the software to enter URL: <rtsp://192.168.100.150:8557/h264>

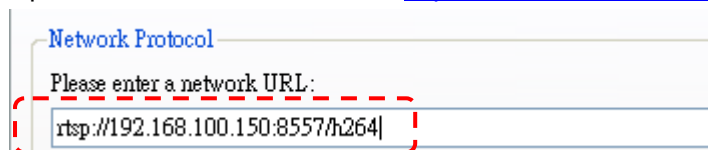

7.1.5 Use RTMP connection


Support RTMP connection. If RTMP server is set up, RTMP connection function can also be opened

Please log into VC-A20P webpage to change RTMP of network setting as described in [7.1.1 Use the Web Browser](#)




7.2 Web Page Function Description


7.2.1 Login Screen

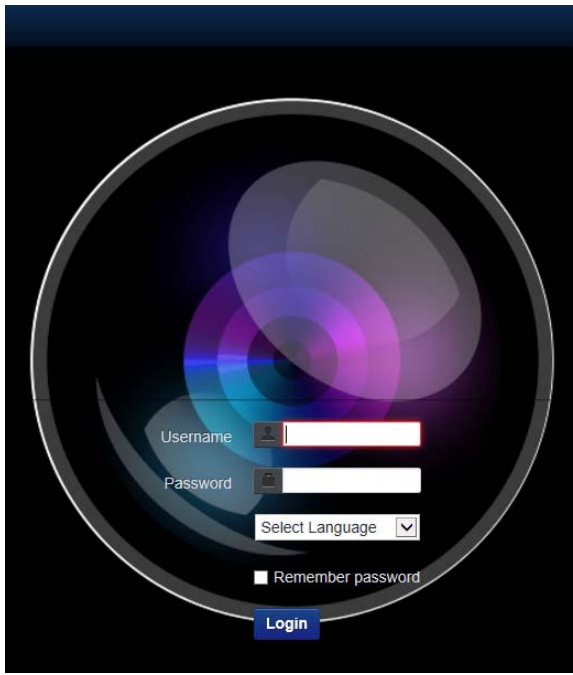	Username: Account
	Password: Password
	Select Language: Select language from English, Traditional Chinese and Simplified Chinese
	Remember password: Remember the password so that you do not need to type it next time
	Login: Login

7.2.2 Preview Screen

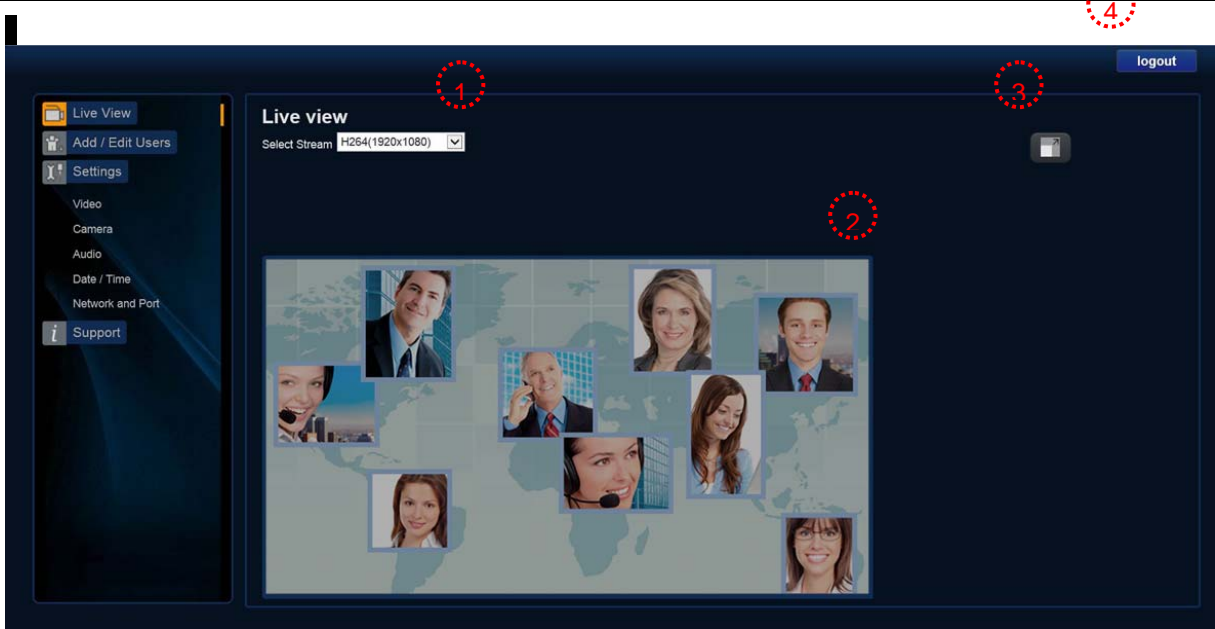
1. Information about image encoding form and resolution
2. Preview window
3. Switch to Full Screen
4. Logout

7.2.3 Account management screen

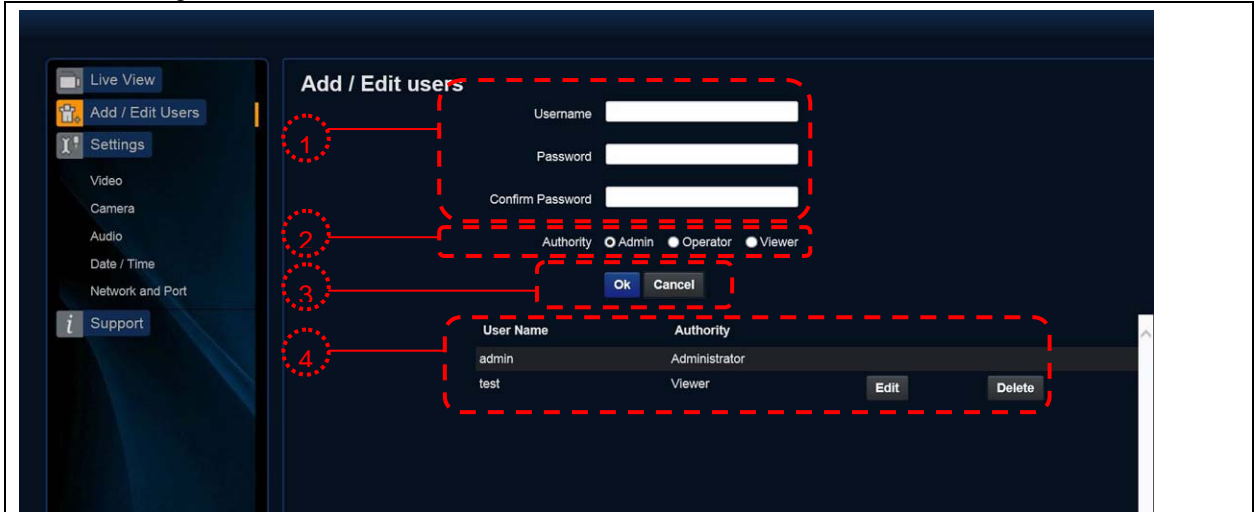

1. Enter new username and password

2. Set the permissions: Description for permissions is listed in the following table

3 Apply

4. List of accounts:


Edit: Change password and permission of new account

Delete: Delete new account

<Remark> Reference for User Permissions

User Type	Admin	Operator	Viewer
View images	Y	Y	Y
Settings	Y	Y	N
User accounts management	Y	N	N

7.2.4 Setting - image encoding setting

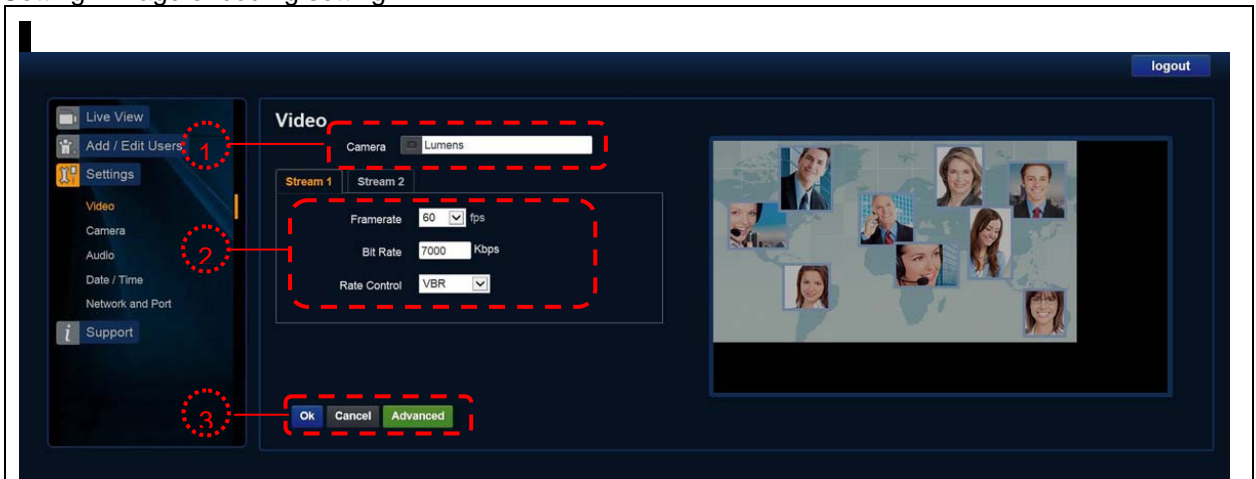


1. Camera name: Change camera name on this page

2. Select rate and encoding

3. Storage setting; for advanced settings, see [7.2.5 Setting---Advanced Settings for Image Encoding](#)

7.2.5 Setting - advanced image encoding setting

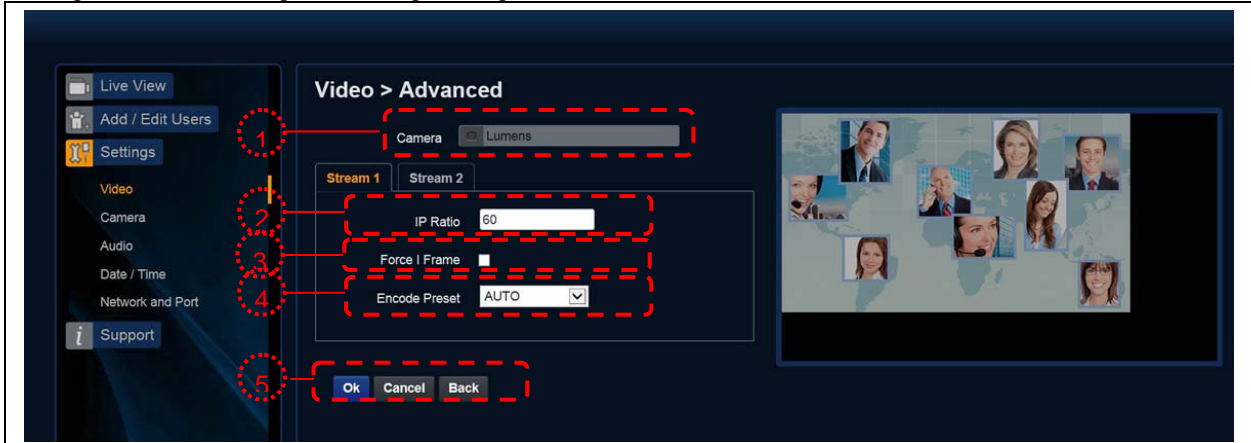

1. Name of current connected camera

2. IP Ratio: Set IP Ratio, from 1 to 60

3. Force I Frame:

Check this item to insert IDR frame into specified series flow and apply its setting. User's setting will be reserved and displayed in GUI interface

4. Encode Preset:

Auto: Select between speed and quality depending on the encoding method used (e.g. HIGH_SPEED mode for refresh rate of 60 frames per second and HIGH_QUALITY mode for high image quality)

HIGH_SPEED: Refresh rate of 60 frames per second is available

HIGH_QUALITY: Higher image quality can be obtained

SVC: SVC opened encoding mode is applicable to RTSP series flow of 8601, 8602, 8603 and 8604 ports, different refresh rate for different ports. See remark

5. Preset Save

<Remark> SVC connection address: rtsp://VC IP Address:Port/h264

1. **60Frame** : rtsp://VC IP Address:8557/h264, e.g.: <rtsp://192.168.100.150:8557/h264>

2. **30Frame** : rtsp://VC IP Address:8601/h264, e.g.: <rtsp://192.168.100.150:8601/h264>

3. **15Frame** : rtsp://VC IP Address:8602/h264, e.g.: <rtsp://192.168.100.150:8602/h264>

4. **7Frame** : rtsp://VC IP Address:8603/h264, e.g.: <rtsp://192.168.100.150:8603/h264>

5. **3Frame** : rtsp://VC IP Address:8604/h264, e.g.: <rtsp://192.168.100.150:8604/h264>

7.2.6 Setting - camera




1. Name of current connected camera

2. Adjust camera brightness / contrast / saturation / sharpness, etc.


3. Preset Save

7.2.7 Setting - Sound

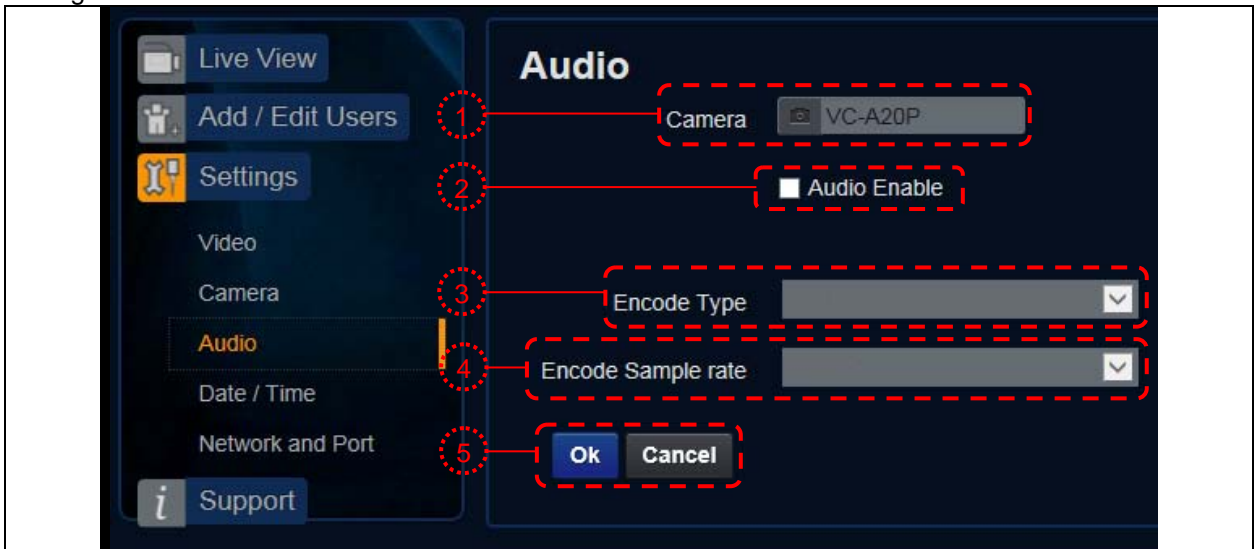

1. Name of current connected camera
2. Turn on/off sound
3. Set **Encode Type**(AAC / G.711)
4. Set **Encode Sample rate**
5. Preset Save


7.2.8 Setting - date and time

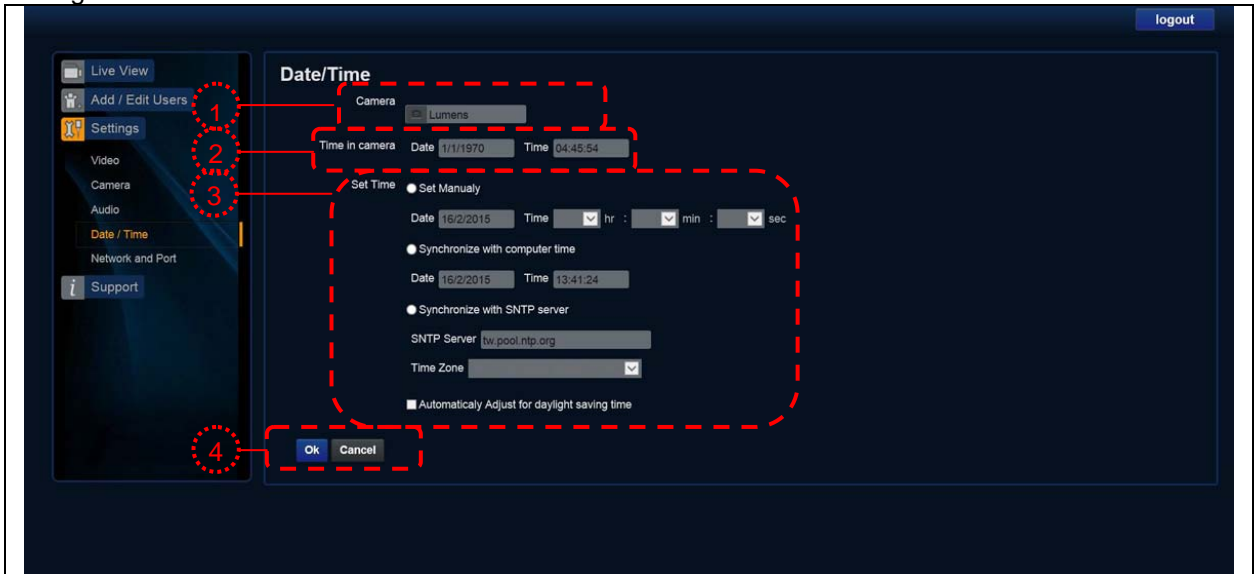

1. Name of current connected camera
2. Current camera date and time
3. Set the Time: Manual setting/synchronous computer time/synchronous SNTP server time/time of automatic adjustment of daylight saving
4. Preset Save

<Remark> SNTP server address: Please change in network setting

7.2.9 Setting - camera

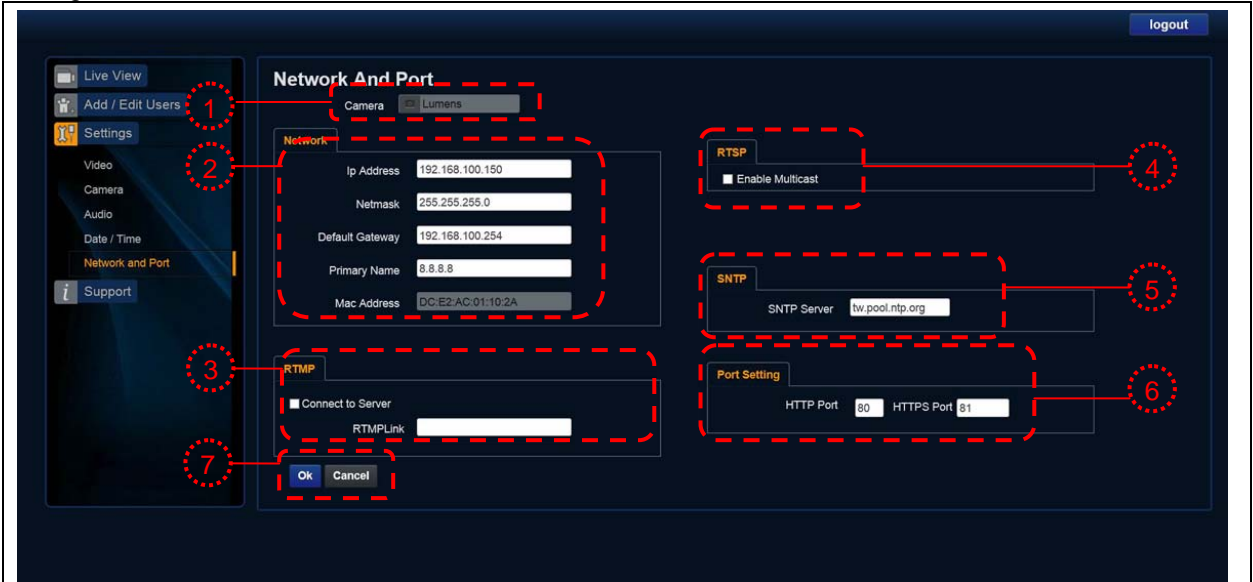

1. Name of current connected camera

2. Network address of camera: Change of setting is available only when DHCP function of camera is turned off; please turn off DHCP function using VC-A20P screen menu, and for setting of each item of screen menu, see [5.2 Setting Menu](#)

3. Set RTMP: Set connection address of RTMP depending on RTMP Server setting

4. Set RTSP: Enable/Disable Multicast

<Remark> It is suggested to enable Multicast when the number of users online watching the live image simultaneously is more than 4.

5. Set SNTP: Set SNTP Server IP

6. Set HTTP port. The default Port value is 80

<Remark> Change of setting is available only when DHCP function of camera is closed


7. Preset Save

Chapter 8 DIP switch setting

<Note> Please turn off the machine before changing DIP switch setting.

8.1 DIP SWITCH

8.1.1 OUTPUT Switch

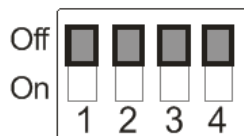

Output Mode	Setting	Output Mode	Setting
1920x1080/60p		1920x1080/50p	
1920x1080/30p		1920x1080/25p	
1920x1080/60i		1920x1080/50i	
1280x720/60p		1280x720/50p	
1080/59.94p		1080/59.94i	
1080/29.97p		720/59.94p	

8.1.2 IR SELECT



ID	Setting
1	
2	
3	

8.1.3 Camera Address Selector



Setting	Function Descriptions
0~7	ID 0~7
8~9	Reserved


8.1.4 System Switch



Setting	Function Descriptions
DIP 1	RS-232C/RS-422 selector OFF: RS-232C / ON: RS-422
DIP 2	Infrared signal output switch OFF: Off / ON: On
DIP 3	Communication baud rate selector OFF: 9600 / ON: 38400
DIP 4	Reserved

8.2 RS-422 Connection

8.2.1 RS-422 Pin Description

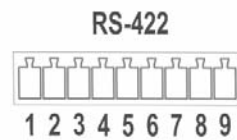


Pin NO.	Function
1	RXD OUT -
2	RXD OUT +
3	TXD OUT -
4	TXD OUT +
5	GND
6	RXD IN -
7	RXD IN +
8	TXD IN -
9	TXD IN +

<Note>


Please connect IN+ to OUT+ when connecting to SONY products
For non-SONY products, it may be necessary to connect IN+ to OUT-

8.2.2 Use RS-422 Connection


1. Hold the two sides of RS-422 connector and pull out in the direction shown by the arrow in the figure below

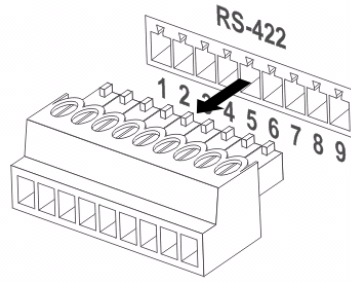

2. Peel off a section of copper wire (AWG Nos. 28 to 18) and insert it into the connector hole; then use flat screw driver to fix it

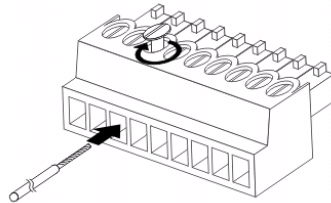

3. Insert the wired RS-422 connector back to the camera. Now the connection is completed

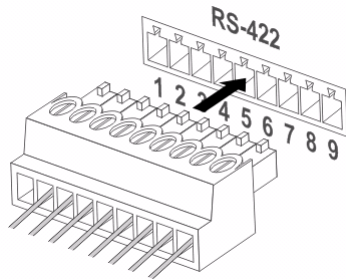

<Note> When RS-422 connection is being used, do not use RS-232C connection.

Chapter 9 Troubleshooting

This chapter describes problems you may encounter while using VC-A20P. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

No.	Problems	Solutions
1.	Boot without power signal	<ol style="list-style-type: none"> 1. Make sure you have plugged in the power cord. 2. Make sure the Service DIP switch is Off.
2.	There is no image output from VC-A20P	<ol style="list-style-type: none"> 1. Check the power. 2. Check if DIP switch is properly set. Please refer to Chapter 8 DIP Switch Setting for related settings. 3. Make sure the display supports the output resolution; in general, the resolution is 1080p60/1080i60/720p60. 4. Replace the cables and make sure they are not faulty.
3.	VC-A20P image is severely delayed	Please use 1080p or 720p 60/50 Hz signals rather than 25/30 Hz signals.
4.	Not working after changes to DIP Switch setting	After completing DIP Switch setting, unplug and reconnect the power cord and turn on the machine to change the setting.
5.	VC-A20P cannot be operated by remote control	<ol style="list-style-type: none"> 1. Please confirm if the Camera Select on the remote control can be used together with the IR Select on VC-A20P. 2. Please prevent VC-A20P from direct sunshine. 3. Make sure the energy-saving bulb and the IR touch screen are as far as possible in order to avoid interference. 4. When several VC-A20P are connected in the same area, the operation of two remote controls at the same time may result in signal interference. It is recommended to use one remote control only.
6.	The device cannot be controlled with Codec	<ol style="list-style-type: none"> 1. Please consult the distributor to make sure the firmware version is the latest one. The steps to check version is as follows: <ol style="list-style-type: none"> 1.1 Press [MENU] on the remote control 1.2 Choose [Status] 1.3 Go to Page 5 of [System] 1.4 Make sure the firmware version is correct 2. Make sure the connection is correct (RS-232/422 Input). 3. Make sure System Switch DIP1 and DIP3 are correct.
7.	The device cannot be controlled with RS-232/RS422	<ol style="list-style-type: none"> 1. Make sure the connection is correct (RS-232/422 Input). 2. Make sure System Switch DIP1 and DIP3 are correct.
8.	Whether the Internet can be used for operation	Please refer to Chapter 7 Network Function Description for the Internet usage