

SP8600 (SERIES)

User's Guide
Mode d'emploi
Benutzeranleitung
Manual de Uso
Guida all'uso
Guia do usuário
Руководство по пользователю
用户指南
入门指南
Panduan Pengguna

Regulatory model: H8650



3534149301



DISPERINDAG No. 0287/1.824.51/09.03

InFocus

Bright Ideas Made Brilliant

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

© Copyright 2010

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Kensington is a U.S. registered trademark of ACCO Brand Corporation with issued registrations and pending applications in other countries throughout the world.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

All other product names used in this manual are the properties of their respective owners and are acknowledged.

Important Safety Information

Important:

It is strongly recommended that you read this section carefully before using the projector. These safety and usage instructions will ensure that you enjoy many years of safe use of the projector. Keep this manual for future reference.

Symbols Used

Warning symbols are used on the projector and in this manual to alert you of hazardous situations.

The following styles are used in this manual to alert you to important information.

Note:

Provides additional information on the topic at hand.

Important:

Provides additional information that should not be overlooked.

Caution:

Alerts you to situations that may damage the projector.

Warning:

Alerts you to situations that may damage the projector, create a hazardous environment, or cause personal injury.

Throughout this manual, component parts and items in the OSD menus are denoted in bold font as in this example:


“Push the **MENU** button on the remote control to open the **DISPLAY** menu.”

General Safety Information


- Do not open the projector. Aside from the projection lamp, there are no user-serviceable parts in the projector. For servicing, contact qualified service personnel.
- Follow all warnings and cautions in this manual and on the projector.
- The projection lamp is extremely bright by design. To avoid damage to eyes, do not look into the lens when the lamp is on.
- Do not place the projector on an unstable surface, cart, or stand.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- Do not place heavy objects such as books or bags on the projector.

Projector Installation Notice

- Place the projector in a horizontal position
The tilt angle of the projector should not exceed 15 degrees, nor should the projector be installed in any way other than the desktop and ceiling mount, otherwise lamp life could decrease dramatically.

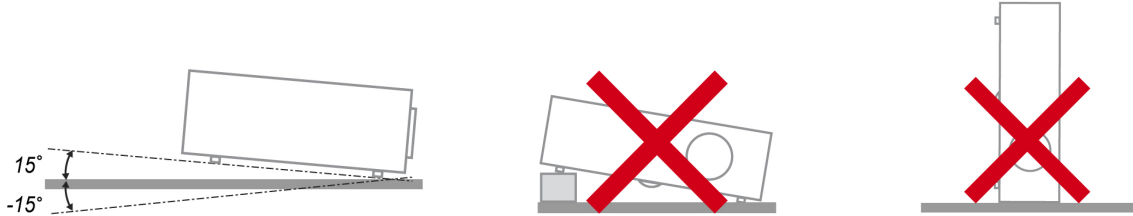

- Allow at least 50 cm clearance around the exhaust vent.

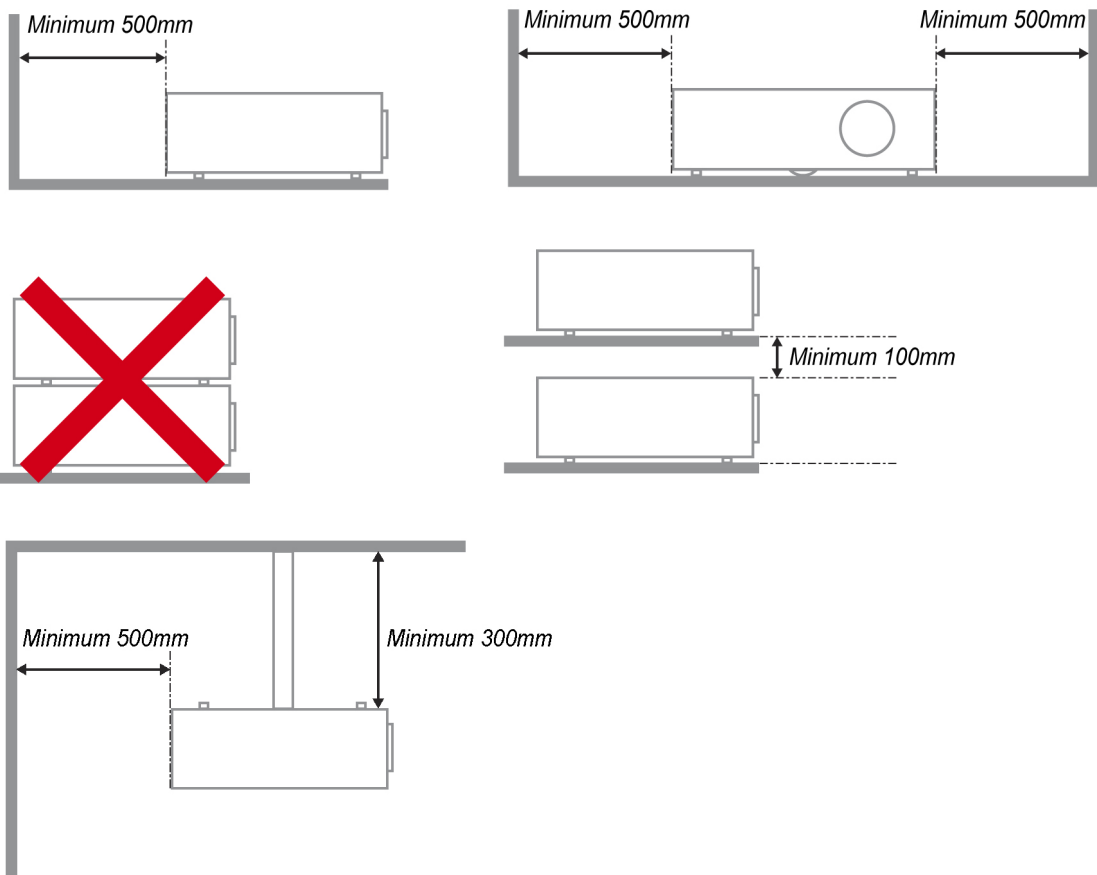

- Ensure that the intake vents do not recycle hot air from the exhaust vent.
- When operating the projector in an enclosed space, ensure that the surrounding air temperature within the enclosure does not exceed operating temperature while the projector is running, and the air intake and exhaust vents are unobstructed.
- All enclosures should pass a certified thermal evaluation to ensure that the projector does not recycle exhaust air, as this may cause the device to shut down even if the enclosure temperature is within the acceptable operating temperature range.

Power Safety

- Only use the supplied power cord.
- Do not place anything on the power cord. Place the power cord where it will not be in the way of foot traffic.
- Remove the batteries from the remote control when storing or not in use for a prolonged period.

Replacing the Lamp

Replacing the lamp can be hazardous if done incorrectly. See *Replacing the Projection Lamp* on page 35 for clear and safe instructions for this procedure. Before replacing the lamp:

- Unplug the power cord.
- Allow the lamp to cool for about one hour.

Cleaning the Projector

- Unplug the power cord before cleaning. See *Cleaning the Projector* on page 37.
- Allow the lamp to cool for about one hour.

Regulatory Warnings

Before installing and using the projector, read the regulatory notices in the *Regulatory Compliance* section on page 50.

Important Recycle Instructions:



Lamp(s) inside this product contain mercury. This product may contain other electronic waste that can be hazardous if not disposed of properly. Recycle or dispose in accordance with local, state, or federal Laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp specific disposal information check www.lamprecycle.org.

Symbol Explanations



DISPOSAL: Do not use household or municipal waste collection services for disposal of electrical and electronic equipment. EU countries require the use of separate recycling collection services.

About this manual

This manual is intended for end users and describes how to install and operate the DLP projector. Wherever possible, relevant information—such as an illustration and its description—has been kept on one page. This printer-friendly format is both for your convenience and to help save paper, thereby protecting the environment. It is suggested that you only print sections that are relevant to your needs.

Table of Contents

GETTING STARTED	1
PACKING CHECKLIST	1
VIEWS OF PROJECTOR PARTS	2
<i>Front-right View</i>	2
<i>Top view—On-screen Display (OSD) buttons and LEDs</i>	3
<i>Rear view</i>	4
<i>Bottom view</i>	6
REMOTE CONTROL PARTS	7
REMOTE CONTROL OPERATING RANGE	9
PROJECTOR AND REMOTE CONTROL BUTTONS	9
SETUP AND OPERATION	10
INSERTING THE REMOTE CONTROL BATTERIES	10
CONNECTING INPUT DEVICES	11
INSTALLING OR REMOVING THE OPTIONAL LENS	12
<i>Removing the Existing Lens From the Projector</i>	12
<i>Installing the New Lens</i>	13
STARTING AND SHUTTING DOWN THE PROJECTOR	14
<i>Starting the projector</i>	14
<i>Shutting down the Projector</i>	16
ADJUSTING THE PROJECTOR LEVEL	17
ADJUSTING PROJECTED IMAGE POSITION USING SHIFT	18
<i>Adjusting the vertical image position</i>	18
<i>Adjusting the horizontal image position</i>	19
<i>Shift Range Diagram</i>	19
ADJUSTING THE ZOOM RING, FOCUS AND KEYSTONE	20
ON-SCREEN DISPLAY (OSD) MENU SETTINGS.....	21
OSD MENU CONTROLS	21
<i>Navigating the OSD</i>	21
SETTING THE OSD LANGUAGE	22
OSD MENU OVERVIEW	23
PICTURE>>BASIC MENU	24
PICTURE>>ADVANCED MENU	25
<i>HSG Adjustment</i>	26
<i>Motion Smoothing</i>	26
DISPLAY MENU	27
<i>PC Detail Adjustment</i>	28
SETUP>>BASIC MENU	29
<i>Menu Settings</i>	30
<i>Source</i>	30
SETUP>>ADVANCED MENU	31
<i>Lamp</i>	32
<i>HDMI</i>	32
<i>Closed Caption</i>	33
<i>SCREEN TRIGGER</i>	33
STATUS MENU	34
MAINTENANCE AND SECURITY.....	35
REPLACING THE PROJECTION LAMP	35
CLEANING THE PROJECTOR	37
<i>Cleaning the Lens</i>	37
<i>Cleaning the Case</i>	37
USING THE PHYSICAL LOCK	38
<i>Using the Kensington® Lock</i>	38
<i>Using the Security Chain Lock</i>	38

TROUBLESHOOTING 39

COMMON PROBLEMS AND SOLUTIONS 39

TIPS FOR TROUBLESHOOTING 39

LED ERROR MESSAGES..... 40

IMAGE PROBLEMS..... 41

LAMP PROBLEMS 41

REMOTE CONTROL PROBLEMS 42

NEED ASSISTANCE?..... 42

HDMI Q & A 43

SPECIFICATIONS..... 44

SPECIFICATIONS..... 44

PROJECTION DISTANCE VS. PROJECTION SIZE..... 45

Projection Distance and Size Table 45

TIMING MODE TABLE 46

PROJECTOR DIMENSIONS 49

REGULATORY COMPLIANCE 50

FCC WARNING..... 50


CANADA 50

SAFETY CERTIFICATIONS..... 50

GETTING STARTED

Packing Checklist


Carefully unpack the projector and check that the following items are included:

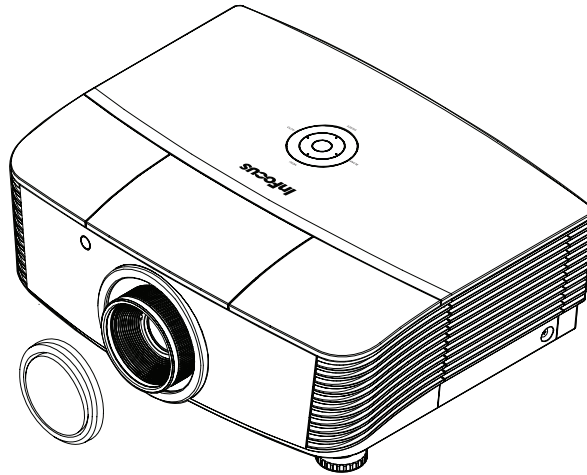


PROJECTOR WITH LENS CAP




*REMOTE CONTROL
(BATTERY NOT INCLUDED)*

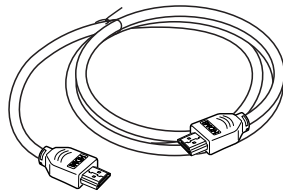


HDMI CABLE



POWER CORD (EU)



POWER CORD (UK)



POWER CORD (US)



*CD-ROM
(THIS USER'S MANUAL)*



QUICK START CARD



WARRANTY CARD



SAFETY BOOKLET




REGISTRATION CARD

Contact your dealer immediately if any items are missing, appear damaged, or if the projector does not work. It is recommended that you keep the original packing material should you ever need to return the equipment for warranty service.

Caution:
Avoid using the projector in dusty environments.

Views of Projector Parts


Front-right View

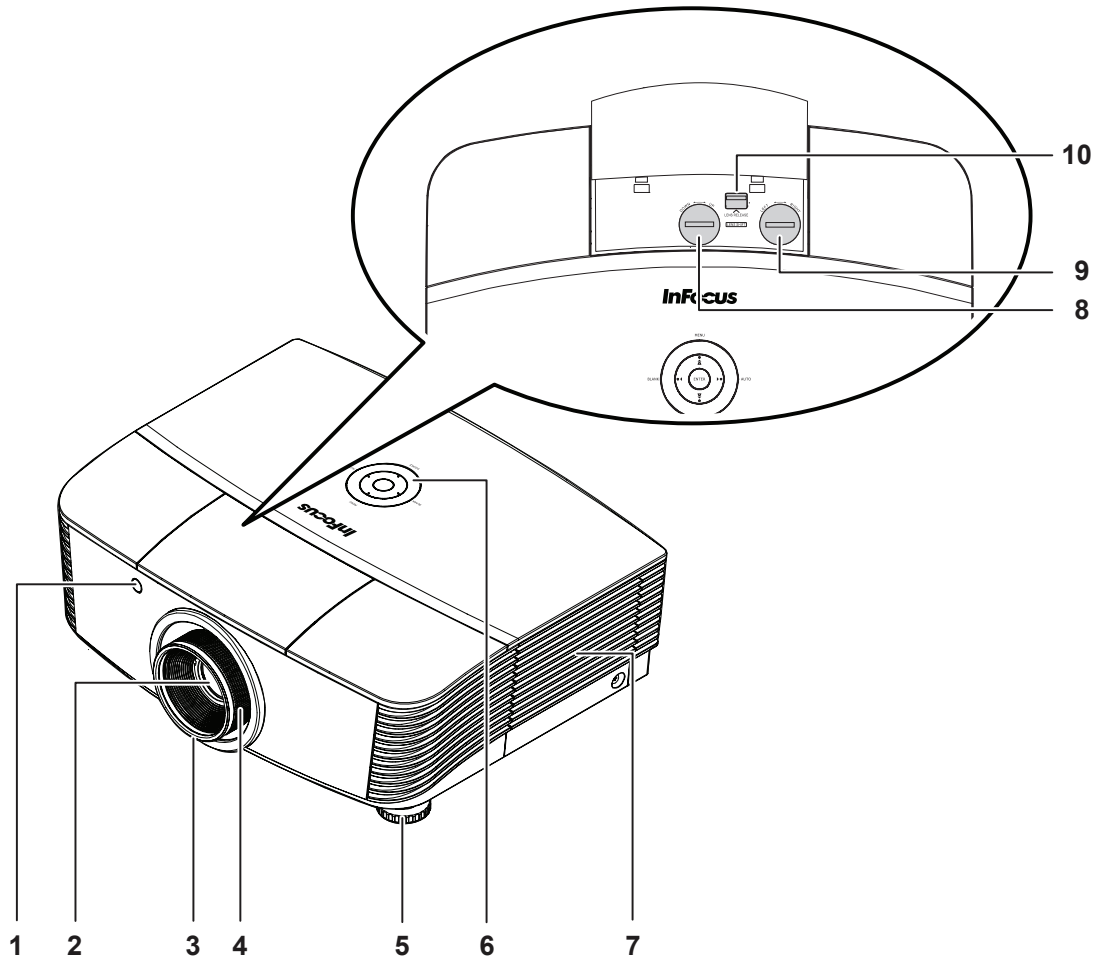

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	IR receiver	Receive an IR signal from remote control	7
2.	Lens	Projection Lens	
3.	Focus ring	Focus the projected image	20
4.	Zoom ring	Enlarge the projected image	
5.	Height adjuster	Adjust level of projector	17
6.	Function keys	See Top view—On-screen Display (OSD) buttons and LEDs.	3
7.	Lamp cover	Remove cover to replace lamp or color wheel	35
8.	Vertical lens shift	Adjust the image position vertically	18
9.	Horizontal lens shift	Adjust the image position horizontally	19
10.	Lens release button	Press the release button before removing the lens	12


Important:

Ventilation openings on the projector allow for good air circulation, which keeps the projector lamp cool. Do not obstruct any of the ventilation openings.

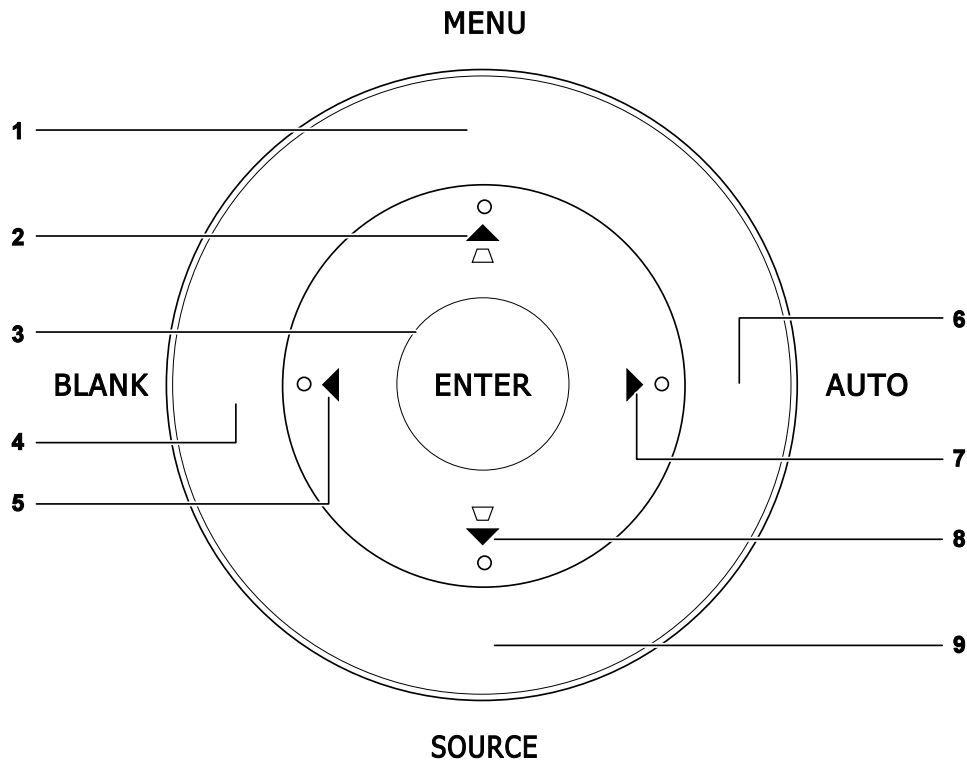Top view—On-screen Display (OSD) buttons and LEDs

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	MENU	Open and exit OSD menus	21
2.	▲ (Up cursor) / Keystone+	Navigate and change settings in the OSD Quick Menu – For Keystone	
3.	ENTER	Enter or confirm highlighted OSD menu item	
4.	BLANK	Display a blank screen and mutes audio	
5.	◀ (Left cursor)	Navigate and change settings in the OSD	21
6.	AUTO	Optimize image size, position, and resolution	
7.	▶ (Right cursor)	Navigate and change settings in the OSD	21
8.	▼ (Down cursor) / Keystone-	Navigate and change settings in the OSD Quick Menu – For Keystone	
9.	SOURCE	Enter the Source menu	11

Rear view

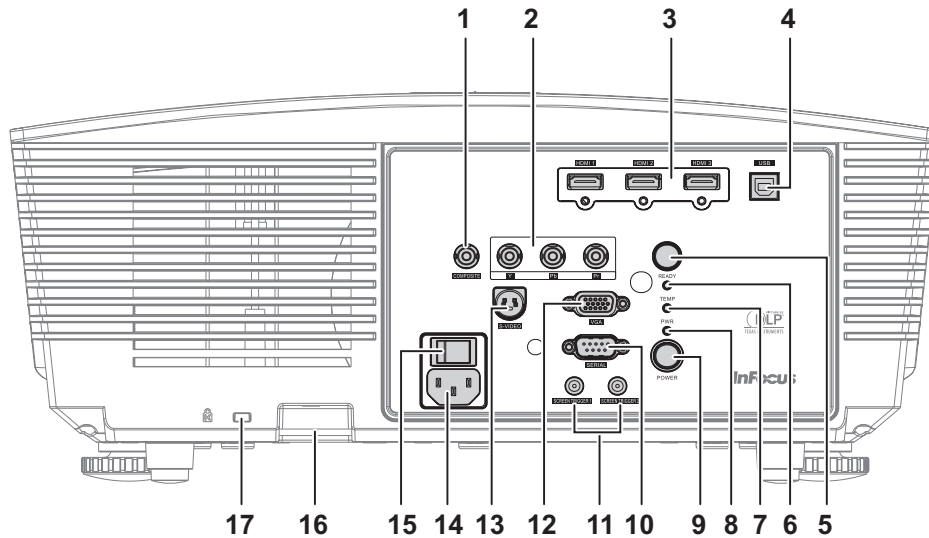


ITEM	LABEL	DESCRIPTION		SEE PAGE:
1.	COMPOSITE	Connect a composite cable from a video device		11
2.	YPbPr	Connect a component video enabled device		
3.	HDMI 1/ 2/ 3	Connect a HDMI cable from a HDMI device		
4.	USB	Connect a USB cable from a computer		
5.	IR receiver	Receive an IR signal from remote control		7
6.	READY LED	Red	In normal Operation	40
		Flashing	Lamp is not ready (warming up/shutting down/cooling) (see LED Error Messages on page 40)	
7.	TEMP LED	Red	Over temperature	
8.	PWR LED	Red	Standby	
		Green	In normal operation	
		Flashing	(See <i>LED Error Messages</i> on page 40)	
9.	POWER	Turns the projector on or off (main power switch must be turned on first). Press to place the projector in standby mode.		14
10.	SERIAL	Connect a serial port cable for remote control		11
11.	SCREEN TRIGGER 1/ 2	When connected to the screen through a commercially available cable, the screen deploys automatically on start up of the projector. The screen retracts when the projector is powered off (see notes below).		33

Note:

- To use this feature, you must turn on the Screen Trigger function on the OSD.
- Screen controllers are supplied and supported by screen manufacturers.
- Do not use this jack for anything other than intended use.

ITEM	LABEL	DESCRIPTION	SEE PAGE:
12.	VGA	Connect a RGB cable from a computer	<i>11</i>
13.	S-VIDEO	Connect a S-Video cable from a video device	
14.	AC IN	Connect the power cord	<i>14</i>
15.	Power switch	Turn on/off the projector	
16.	Security chain lock	Help protect the projector from unauthorized use	<i>38</i>
17.	Kensington Lock	Secure to permanent object with a Kensington® Lock system	


Bottom view

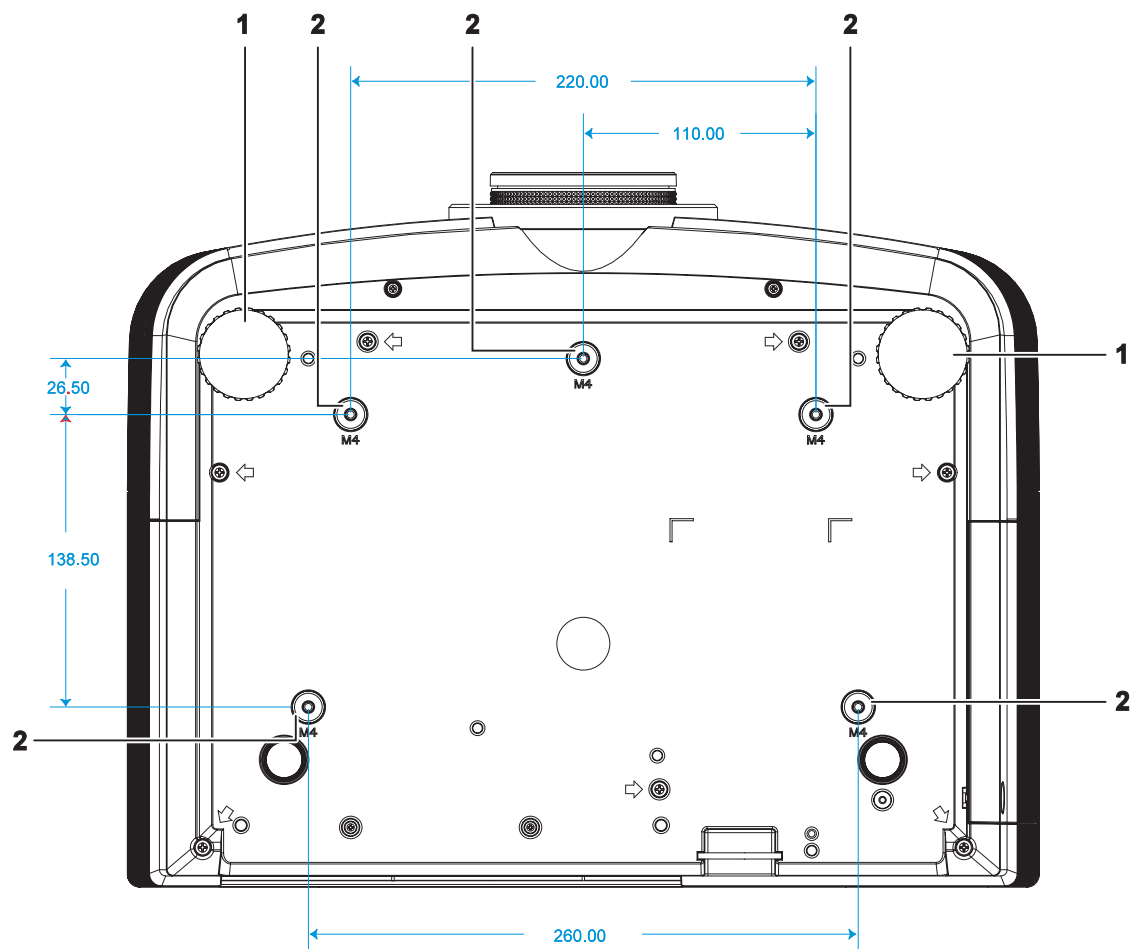

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	Tilt adjustor	Rotate adjuster lever to adjust angle position.	17
2.	Ceiling support holes	Contact your dealer for information on mounting the projector on a ceiling	

Note:
When installing, ensure that you use only UL Listed ceiling mounts.
For ceiling installations, use approved mounting hardware and M4 screws with a maximum screw depth of 9 mm (0.35 inch).
The construction of the ceiling mount must be of a suitable shape and strength. The ceiling mount load capacity must exceed the weight of the installed equipment, and as an additional precaution be capable of withstanding three times the weight of the equipment (not less than 5.15 kg) over a period of 60 seconds.

Remote Control Parts

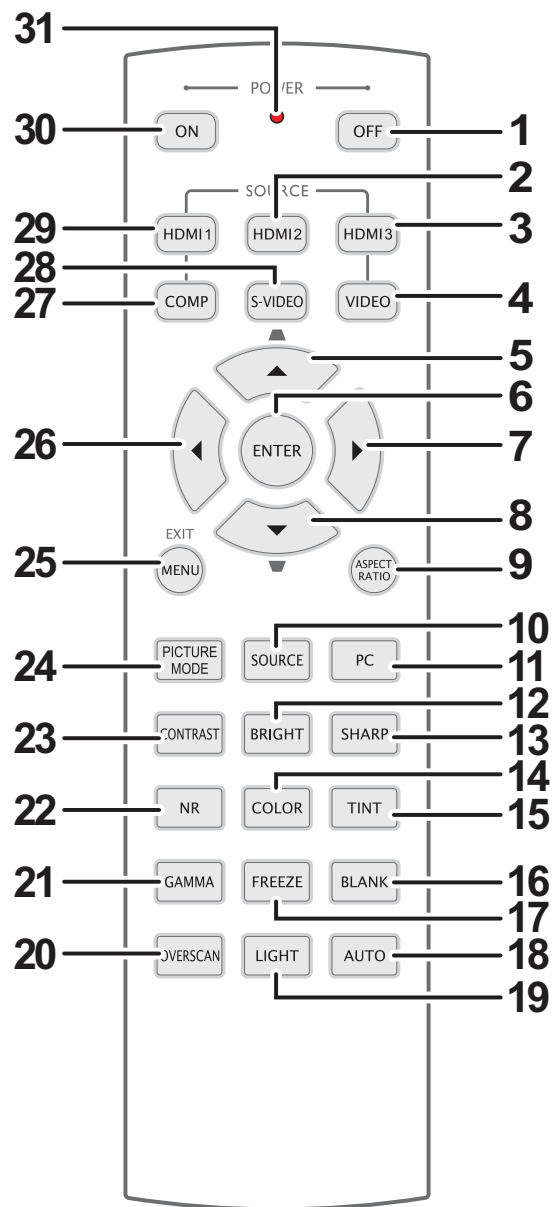

Important:

1. Avoid using the projector with bright fluorescent lighting turned on. Certain high-frequency fluorescent lights can disrupt remote control operation.

2. Be sure nothing obstructs the path between the remote control and the projector. If the path between the remote control and the projector is obstructed, you can bounce the signal off certain reflective surfaces such as projector screens.

3. The buttons and keys on the projector have the same functions as the corresponding buttons on the remote control. This user's manual describes the functions based on the remote control.

ITEM	LABEL	DESCRIPTION	SEE PAGE:
1.	Power OFF	Turn the projector off	14
2.	HDMI 2	Display the HDMI 2 source selection	
3.	HDMI 3	Display the HDMI 3 source selection	
4.	VIDEO	Display the VIDEO source selection	
5.	Up cursor / Keystone+	Navigate and change settings in the OSD Quick Menu – For Keystone	21
6.	ENTER	Enter and confirm settings in the OSD	
7.	Right cursor	Navigate and change settings in the OSD	
8.	Down cursor / Keystone -	Navigate and change settings in the OSD Quick Menu – For Keystone	
9.	ASPECT RATIO	Display the ASPECT RATIO selections	
10.	SOURCE	Select the desired video input	
11.	PC	Display the PC source selection	
12.	Bright	Display the brightness setting bar	
13.	Sharp	Display the sharpness setting bar	
14.	Color	Display the color setting bar	
15.	Tint	Display the tint setting bar	
16.	Blank	Make the screen blank	
17.	Freeze	Freeze/ unfreeze the on-screen picture	
18.	Auto	Auto adjustment for frequency, phase, and position	
19.	Light	Turn on or off the remote control backlight for about 10 seconds. Pressing any other key while the backlight is on keeps the backlight on for a further 10 seconds.	
20.	OVERSCAN	Display the Overscan selection	
21.	GAMMA	Display the Gamma selection	
22.	nr	Display the Noise Reduction selection	
23.	Contrast	Display the contrast settings bar	
24.	Picture Mode	Change the Display Mode setting	
25.	Menu/ EXIT	Open and exit the OSD	21
26.	Left cursor	Navigate and change settings in the OSD	
27.	Comp	Display the Component source selection	
28.	S-VIDEO	Display the S-VIDEO source selection	
29.	HDMI 1	Display the HDMI 1 source selection	
30.	Power ON	Turn the projector on	14
31.	IR transmitter	Transmit signals to projector	

Remote Control Operating Range

The projector receives infrared signals from the remote control. It is not necessary to point the remote directly at the projector. Provided you are not holding the remote perpendicular to the sides or the rear of the projector, the remote will function well within a radius of about 7 meters (23 feet) and 15 degrees above or below the projector level. If the projector does not respond to the remote control, move a little closer.


Projector and Remote Control Buttons

The projector can be operated using the remote control or the buttons on the top of the projector. All operations can be carried out with the remote control; however, the buttons on the projector are limited in use.


SETUP AND OPERATION

Inserting the Remote Control Batteries


1. Remove the battery compartment cover by sliding the cover in the direction of the arrow.

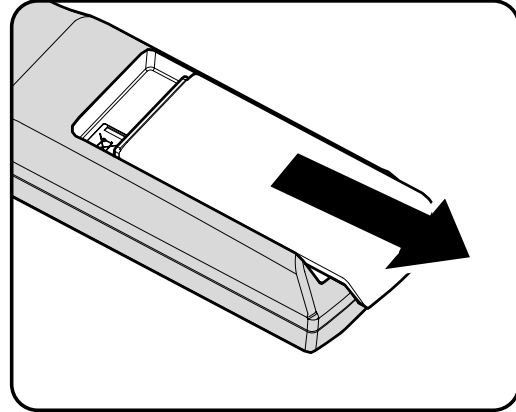

2. Insert the batteries (not included) as shown in the illustration.

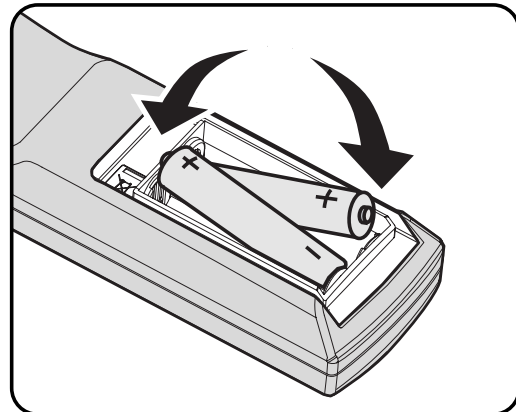

3. Replace the cover.

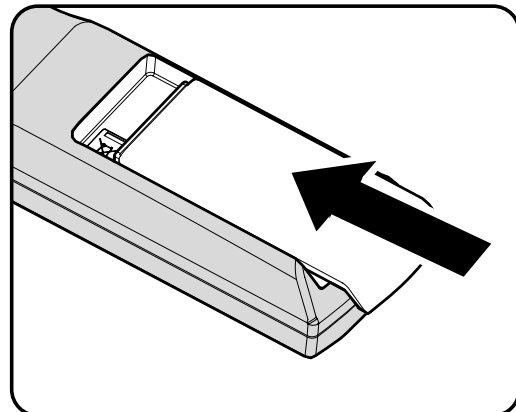


Caution:

1. Only use AA batteries (Alkaline batteries are recommended).
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the batteries when not using the projector for prolonged periods.

Connecting Input Devices

A PC or notebook computer and video devices can be connected to the projector at the same time. Video devices include DVD, VCD, and VHS players, as well as movie camcorders and digital still cameras. Check the user manual of the connecting device to confirm it has the appropriate output connector.

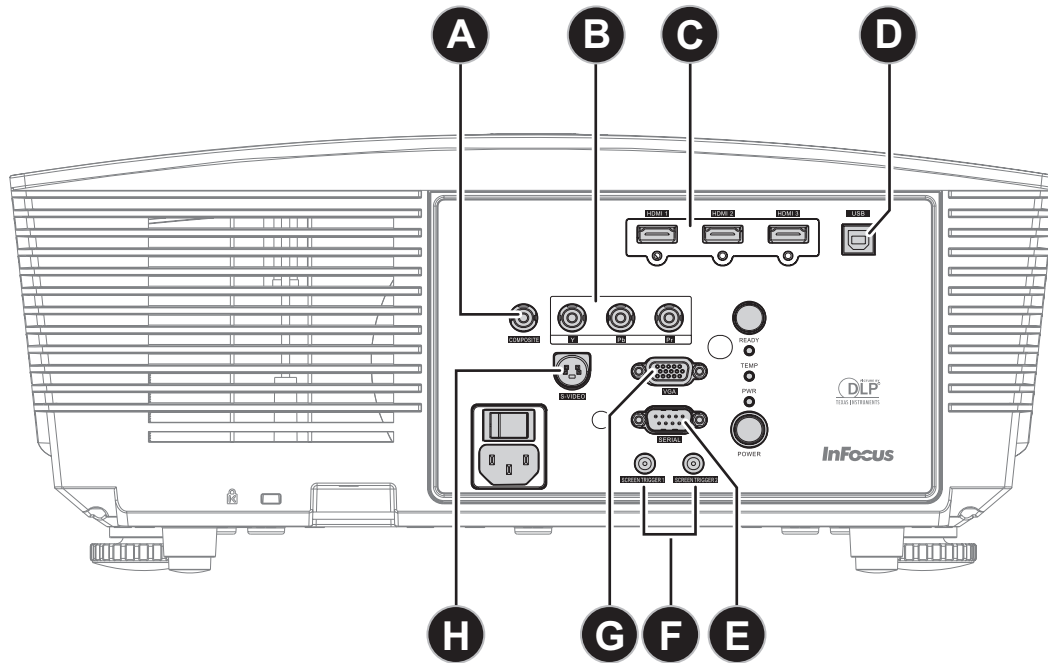

ITEM	LABEL	DESCRIPTION
A	COMPOSITE	Connect a composite cable from a video device
B	YPbPr	Connect a component video enabled device
C	HDMI 1/ 2/ 3	Connect a HDMI cable from a HDMI device
D	USB	Connect a USB cable from a computer
E	SERIAL	Connect a serial port cable for remote control
F	SCREEN TRIGGER 1/ 2	When connected to the screen through a commercially available cable, the screen deploys automatically on start up of the projector. The screen retracts when the projector is powered off.
G	VGA	Connect a RGB cable from a computer
H	S-VIDEO	Connect a S-Video cable from a video device

Warning:

As a safety precaution, disconnect all power to the projector and connecting devices before making connections.


Installing or Removing the Optional Lens

Caution:


- Do not shake or place excessive pressure on the projector or the lens components as the projector and lens components contain precision parts.
- Before removing or installing the lens, be sure to turn off the projector, wait until the cooling fans stop, and turn off the main power switch.
- Do not touch the lens surface when removing or installing the lens.
- Keep fingerprints, dust or oil off the lens surface.
- Do not scratch the lens surface.
- Work on a level surface with a soft cloth under it to avoid scratching.
- If you remove and store the lens, attach the lens cap to the projector to keep off dust and dirt.

Removing the Existing Lens From the Projector

1. Pull and release the top cover to open as shown.
2. Push the lens release button to the unlock position.

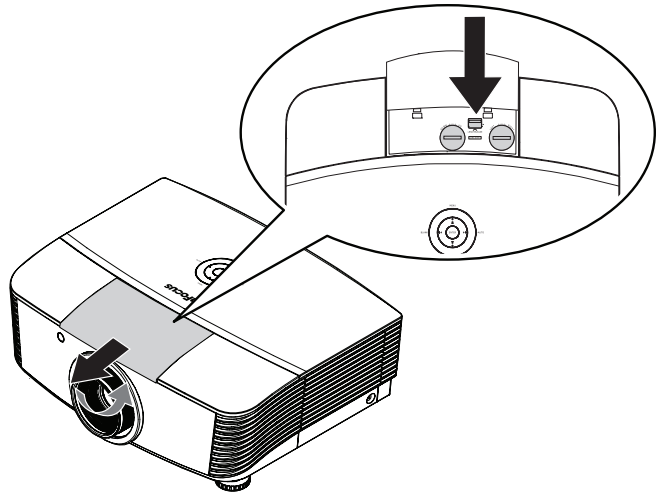

3. Grasp the lens.
4. Rotate the lens counterclockwise. The existing lens will be disengaged.
5. Pull out the existing lens slowly.

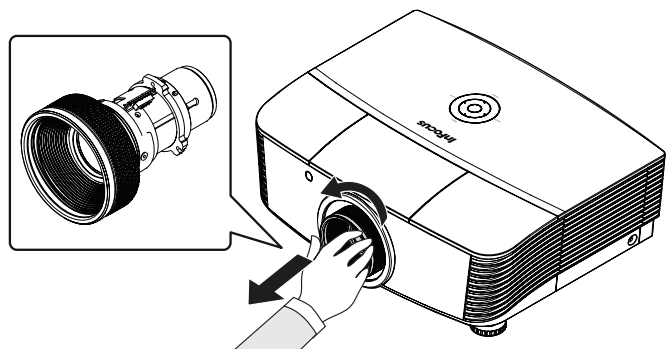


Installing the New Lens

1. Align the notches and correctly position the electrical contact pad as shown in the picture.

Note:

Pin of IRIS should be in the direction as shown in the picture.


2. Rotate the lens clockwise until you feel it click into place.

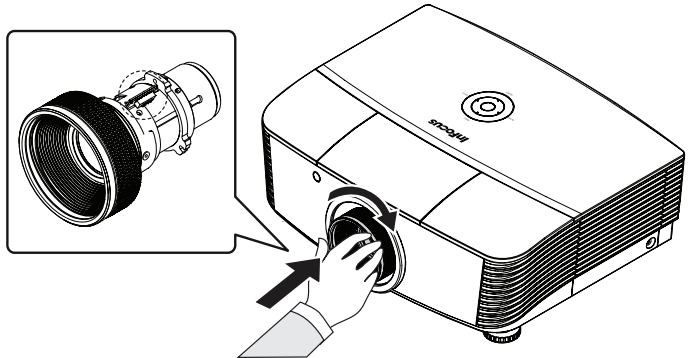


Starting and Shutting down the Projector

Starting the projector

1. Remove the lens cap.
2. Securely connect the power cord and signal cable. When connected, the power LED will turn red.

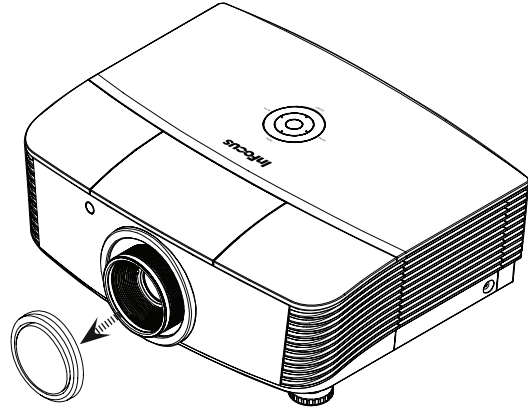

3. Turn on the lamp by pressing “” button on the rear of the projector or “” on the remote control.
The READY LED will now flash red.
The startup screen will display in approximately 30 seconds. The first time you use the projector, you can select your preferred language from quick menu after the startup screen display.

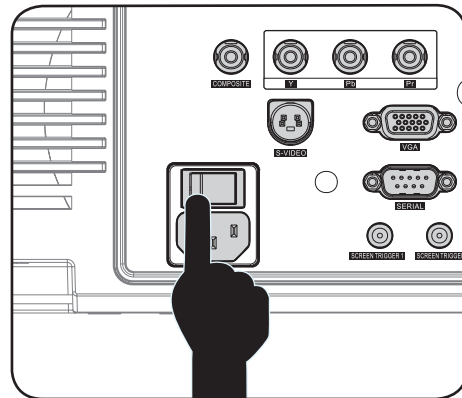

- 4.



5. Press source key to toggle the source that you want to display on the screen (computer, notebook, video player, etc). The projector will detect the source automatically and will display on the screen. If not, push menu button and go to "SETUP>>Basic".

Note:

If you connected multiple sources at the same time, press the "Source" key on the remote control to switch between inputs.


- PC: Analog RGB / SCART
- HDMI 1/2/3: High Definition Multimedia Interface
- COMPONENT: DVD input YCbCr / YPbPr, or HDTV input YPbPr
- COMPOSITE: Traditional composite video
- S-VIDEO: Super video (Y/C separated)

Note:

Turn on the projector first and then select the signal sources. First time to turn on the projector: Remember to select the type of lens you have installed.

Shutting down the Projector

1. Press the “” button on the remote control or “” button on the rear side of the projector two times with one second interval in between to turn off the projector. First push of button will display the following message on the screen. Press the button again to confirm the shut down. If the button is not pressed, the message will disappear in 5 seconds.

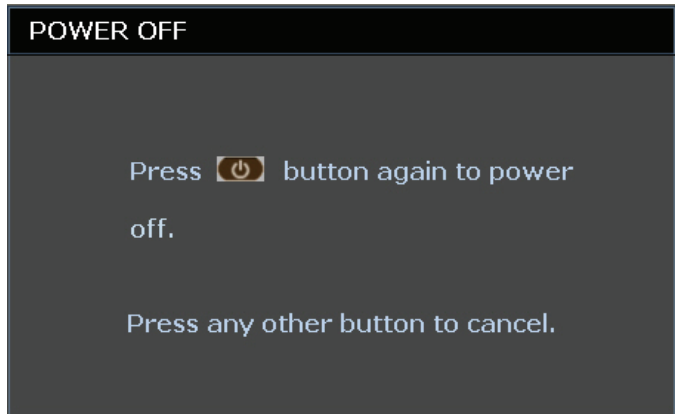


2. The cooling fans continue to operate for about 60 seconds for cooling cycle and the PWR LED will turn red. When the light is solid red, the projector has entered standby mode. If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press “” button on the rear of the projector or “” on the remote control to restart the projector.
3. Disconnect the power cord from the electrical outlet and the projector.
4. Do not turn on the projector immediately following a power off procedure.

Adjusting the Projector Level


Take note of the following when setting up the projector:

- *The projector table or stand should be level and sturdy.*
- *Position the projector so that it is perpendicular to the screen.*
- *Remove the Back Foot Holder on the rear adjuster foot before adjusting the projection angle.*
- *Ensure the cables are in a safe location. You could trip over them.*


1. To raise the level of the projector, twist the adjusters clockwise.

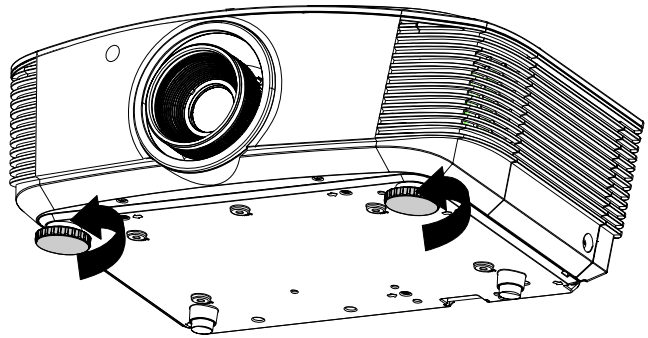

2. To lower the level of the projector, lift the projector and twist the adjusters counter clockwise.

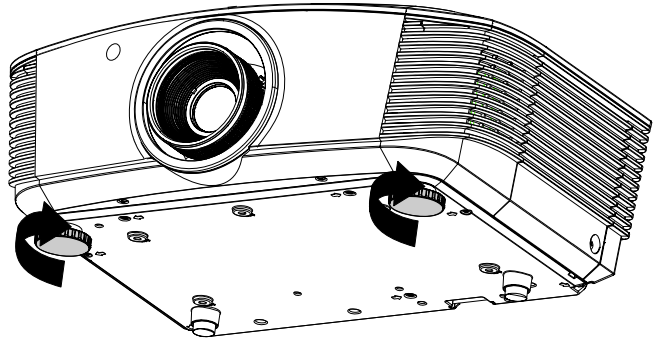

Adjusting Projected Image Position Using Shift

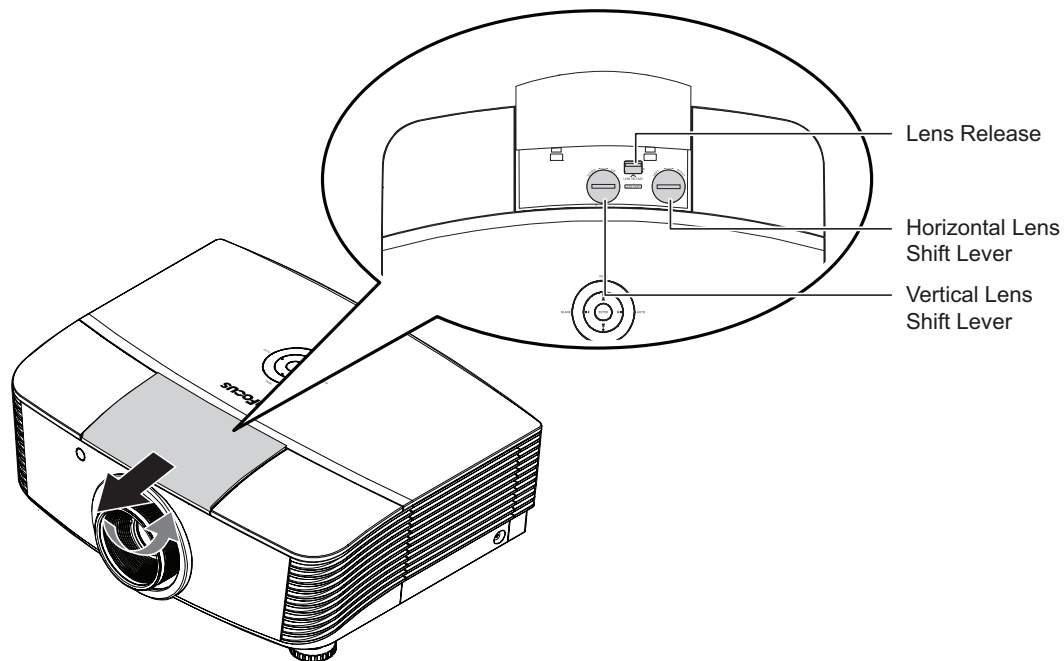


The Shift feature provides a lens shift function that can be used to adjust the position of the projected image either horizontally or vertically within the range detailed below.

Shift is a unique system that provides lens shift while maintaining a much higher ANSI contrast ratio than traditional lens shift systems.


Adjusting the vertical image position

The vertical image height can be adjusted between 120% and -40% of half image height. Note that the maximum vertical image height adjustment can be limited by the horizontal image position. For example it is not possible to achieve the maximum vertical image position height detailed above if the horizontal image position is at maximum. Please consult the Shift Range diagram below for further clarification.

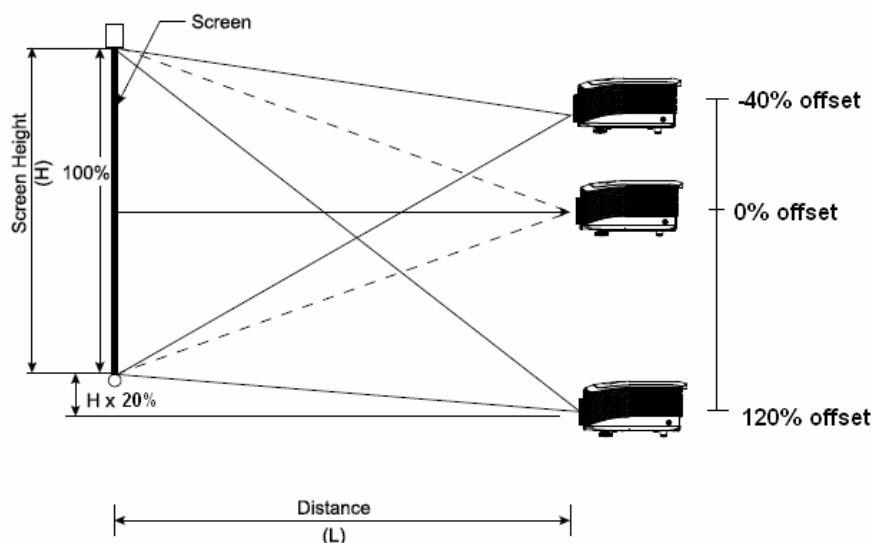


Adjusting the horizontal image position

With the lens in the center position the horizontal image position can be adjusted to the left or right by up to a maximum of 10% of the half image width. Note that the maximum horizontal image height adjustment can be limited by the vertical image position. For example it is not possible to achieve the maximum horizontal image position if the vertical image position is at maximum. Please consult the Shift Range diagram below for further clarification.

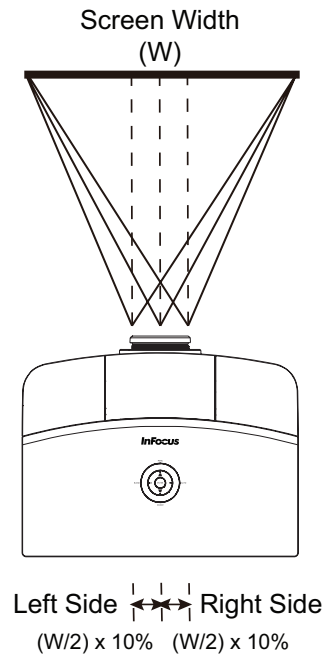


Shift Range Diagram

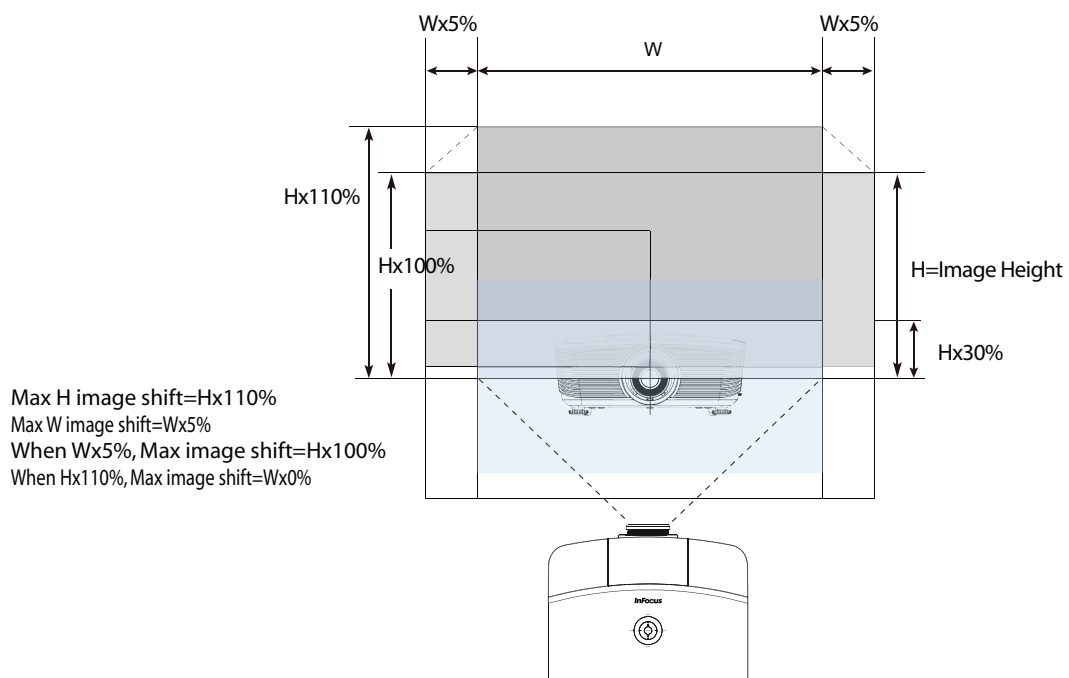


Adjusting the Zoom ring, Focus and Keystone


1. Use the **Image-zoom** control (on the projector only) to resize the projected image and screen size.

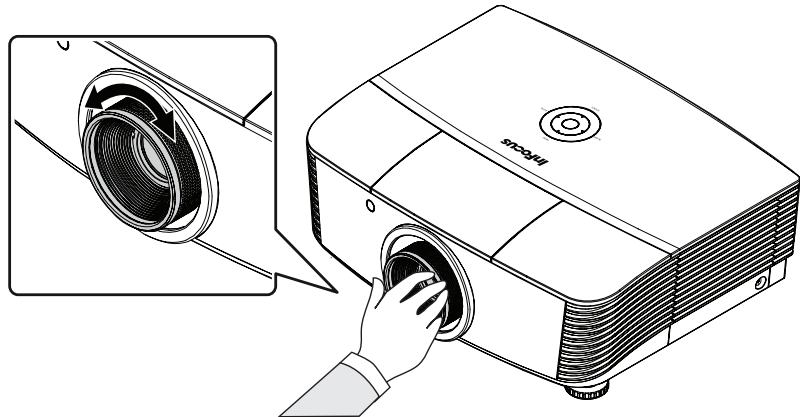

2. Use the **Image-focus** control (on the projector only) to sharpen the projected image.

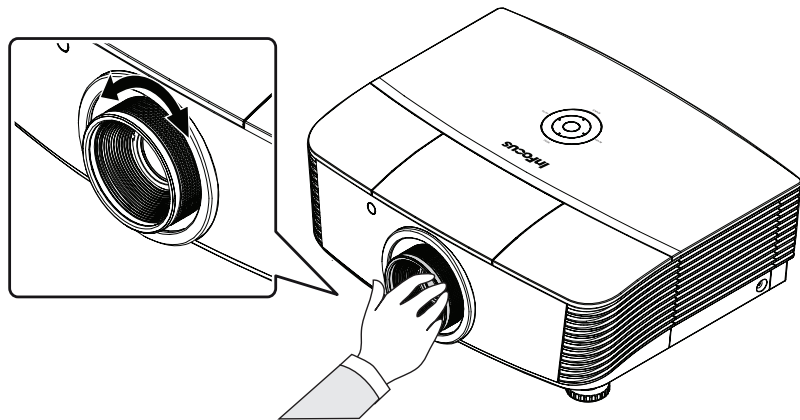

3. Use the **KEYSTONE** buttons (on the projector or the remote control) to correct image-trapezoid (wider top or bottom) effect.

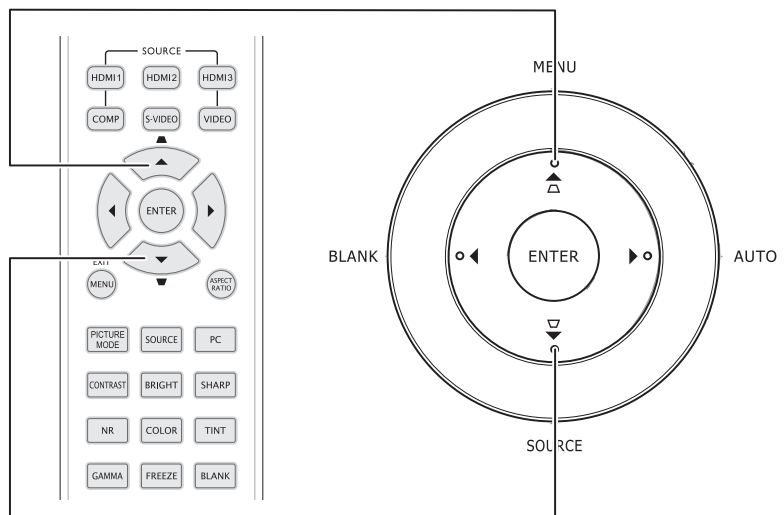

Remote control and OSD panel

4. The keystone control appears on the display.





ON-SCREEN DISPLAY (OSD) MENU SETTINGS

OSD Menu Controls


The projector has an OSD that lets you make image adjustments and change various settings.

Navigating the OSD

You can use the remote control cursor buttons or the buttons on the top of the projector to navigate and make changes to the OSD. The following illustration shows the corresponding buttons on the projector.

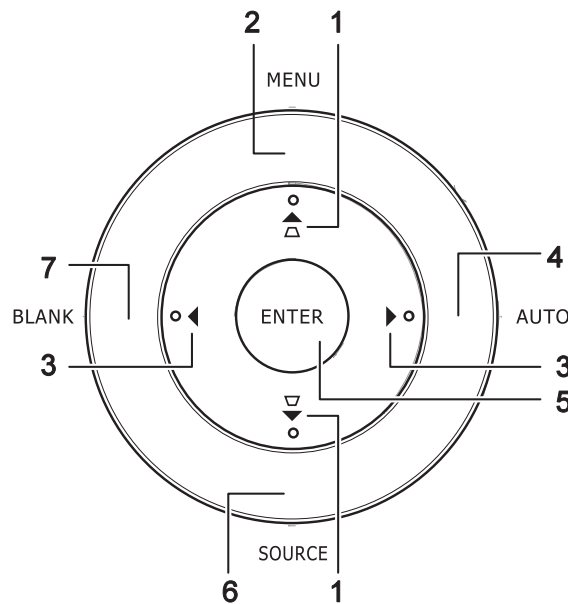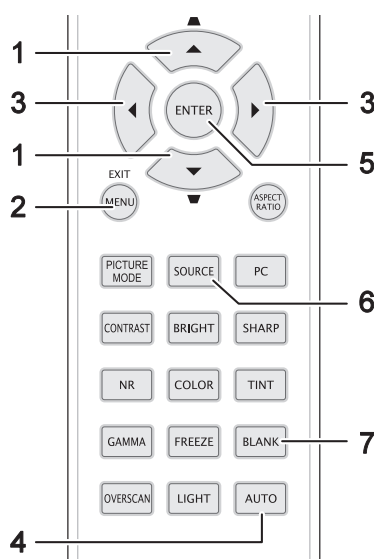

1. To enter the OSD, press the **MENU** button.
2. There are six menus. Press the cursor ◀▶ button to move through the menus.
3. Press the cursor ▲▼ button to move up and down in a menu.
4. Press ◀▶ to change values for settings.
5. Press **MENU** to close the OSD or leave a sub menu.

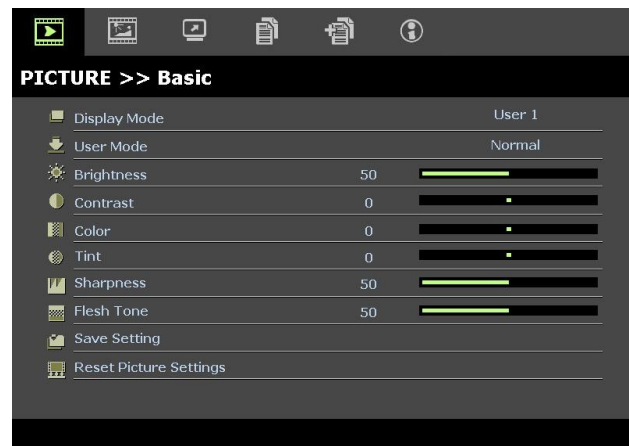


Note:

Depending on the video source, not all items in the OSD are available. For example, the **PC Detail Adjustment** item in the **DISPLAY** menu can only be modified when connected to a PC. Items that are not available cannot be accessed and are grayed out.

Setting the OSD Language

Set the OSD language to your preference before continuing.


1. Press the **MENU** button. Press the cursor ◀▶ button to navigate to **SETUP>>Basic**.

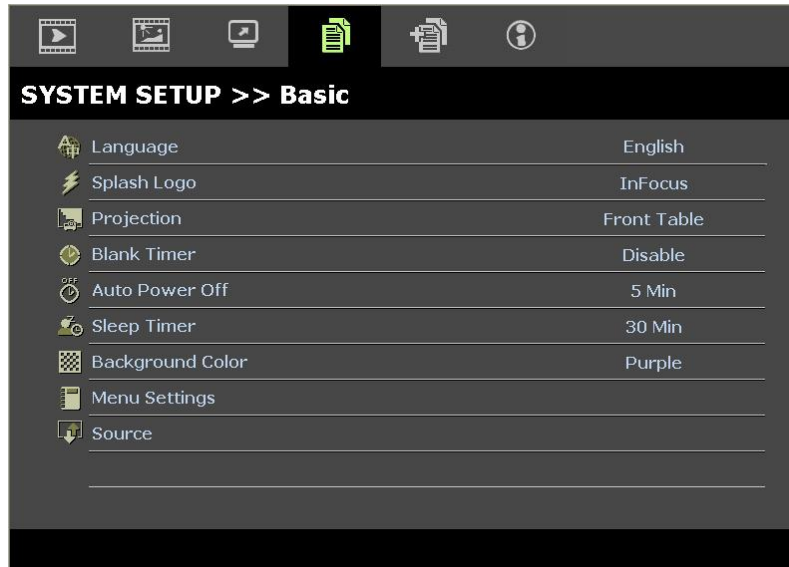

2. Press the cursor ▲▼ button until **Language** is highlighted.
3. Press the cursor ◀▶ button until the language you want is selected.
4. Press the **MENU** button to close the OSD.

OSD Menu Overview

Use the following illustration to quickly find a setting or determine the range for a setting.

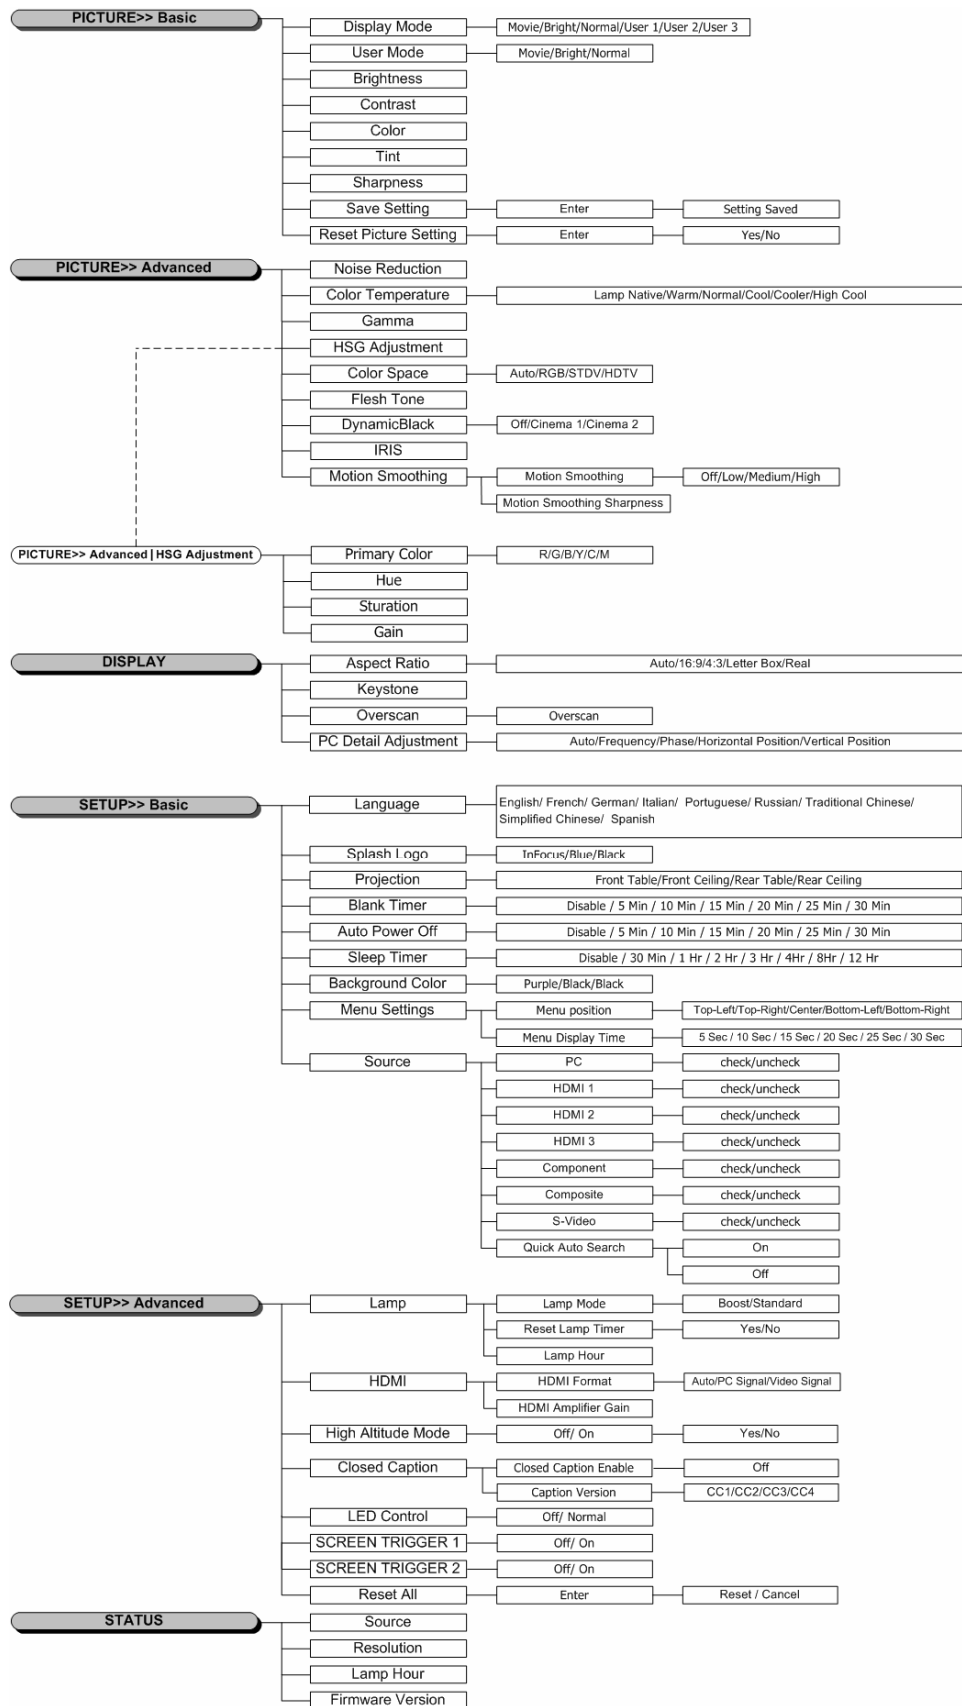


PICTURE>>Basic Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **PICTURE>>Basic** menu. Press the cursor ▲▼ button to move up and down in the **PICTURE>>Basic** menu. Press ◀▶ to change values for settings.

Note:


Customizing the settings in **PICTURE>>Basic** menu is only available in User 1/ 2/ 3 mode.

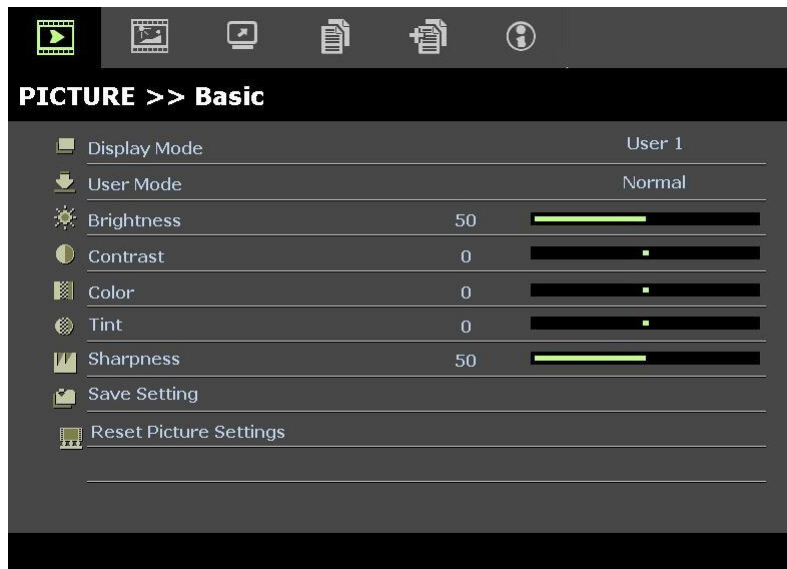

ITEM	DESCRIPTION
Display Mode	Press the cursor ◀▶ buttons to set the Display Mode. (Range: Movie/ Bright/ Normal/ User 1/ User 2/ User 3)
User Mode	Press the cursor ◀▶ buttons to set the User Mode. (Range: Movie/ Bright/ Normal)
Brightness	Press the cursor ◀▶ buttons to adjust the display brightness.
Contrast	Press the cursor ◀▶ buttons to adjust the display contrast.
Color	Press the cursor ◀▶ buttons to adjust the video saturation. Notes: This function is only available when Component, Composite or S-Video input source is selected.
Tint	Press the cursor ◀▶ buttons to adjust the video tint/hue. Notes: This function is only available when Component, Composite or S-Video with NTSC system input source is selected.
Sharpness	Press the cursor ◀▶ buttons to adjust the display sharpness. Notes: This function is only available when Component, Composite or S-Video input source is selected.
Save Setting	Press the ENTER button to save all settings.
Reset Picture Settings	Press the ENTER button to reset all settings to default values.

PICTURE>>Advanced Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **PICTURE>>Advanced** menu. Press the cursor ▲▼ button to move up and down in the **PICTURE>>Advanced** menu. Press ◀▶ to change values for settings.

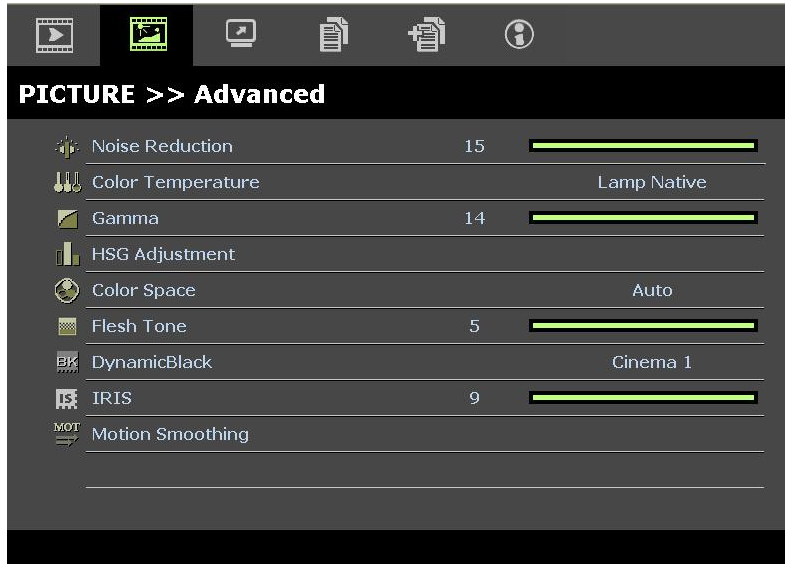

ITEM	DESCRIPTION
Noise Reduction	Press the cursor ◀▶ button to adjust the Noise Reduction.
Color Temperature	Press the cursor ◀▶ button to set the Color Temperature.
Gamma	Press the cursor ◀▶ button to adjust the gamma correction of the display. Notes: This function is only available in User 1/ 2/ 3 mode.
HSG Adjustment	Press the ENTER button to enter the HSG Adjustment sub menu. See <i>HSG Adjustment</i> on page 26.
Color Space	Press the cursor ◀▶ button to set the Color Space. (Range: Auto / RGB/ SDTV/ HDTV) Notes: This function is only available when HDMI input source is selected.
Flesh Tone	Press the ◀▶ buttons to select different Flesh Tone. (Range: 0 to 5) Notes: This function is only available when Component Video or S-Video input source is selected.
DynamicBlack	Press the cursor ◀▶ button to set the DynamicBlack. DynamicBlack enables the projector to automatically optimize the display of dark movie scenes enabling them to be shown in incredible detail" to "the overall brightness of darker scenes resulting in a better black level and incredible detail. (Range: Cinema 1 / Cinema 2/ Off).
IRIS	Press the cursor ◀▶ button to adjust the IRIS. (Range: 1 to 9).
Motion Smoothing	Press the ENTER button to enter the Motion Smoothing sub menu. See <i>Motion Smoothing</i> on page 26.

HSG Adjustment

Press the **ENTER** button to enter the **HSG Adjustment** sub menu.

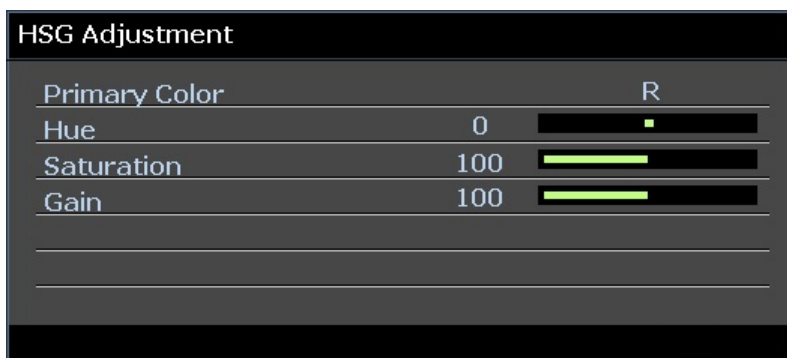

ITEM	DESCRIPTION
Primary Color	Press the ◀▶ buttons to set the Primary Color. Notes: There are six sets (R/ G/ B/ C/ M/ Y) of colors to be customized.
Hue	Press the ◀▶ buttons to adjust the Hue.
Saturation	Press the ◀▶ buttons to adjust the Saturation.
Gain	Press the ◀▶ buttons to adjust the Gain.

Motion Smoothing


Press the **ENTER** button to enter the **Motion Smoothing** sub menu.



ITEM	DESCRIPTION
Motion Smoothing	Press the ◀▶ buttons to select different MEMC level. (Range: Off / Low / Medium / High)
Motion Smoothing Sharpness	Press the ◀▶ buttons to adjust motion adaptive sharpness enhancement (2D Peaking) value. (Range: 0 to 3)

DISPLAY Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **DISPLAY** menu. Press the cursor ▲▼ button to move up and down in the **DISPLAY** menu. Press ◀▶ to change values for settings.

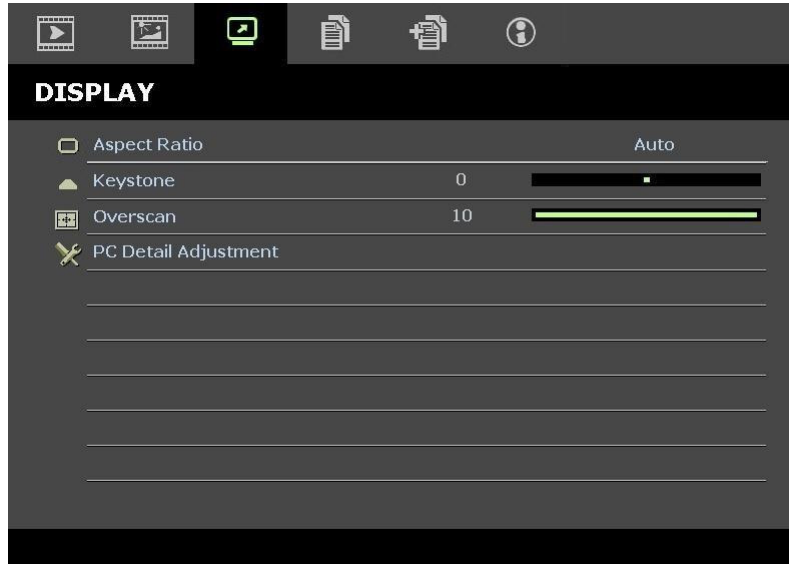


ITEM	DESCRIPTION
Aspect Ratio	Press the cursor ◀▶ button to set the Aspect Ratio. (Range: Auto / 16:9/ 4:3/ Letter Box/ Real)
Keystone	Press the cursor ◀▶ button to adjust the Keystone.
Overscan	Press the cursor ◀▶ button to adjust the Overscan.
PC Detail Adjustment	Press the ENTER button to enter the PC Detail Adjustment sub menu. See <i>PC Detail Adjustment</i> on page 28.

PC Detail Adjustment

Press the **ENTER** button to enter the **PC Detail Adjustment** sub menu.

Note:
*Customizing the settings in **PC Detail Adjustment** menu is only available when PC input source (analog RGB) is selected.*

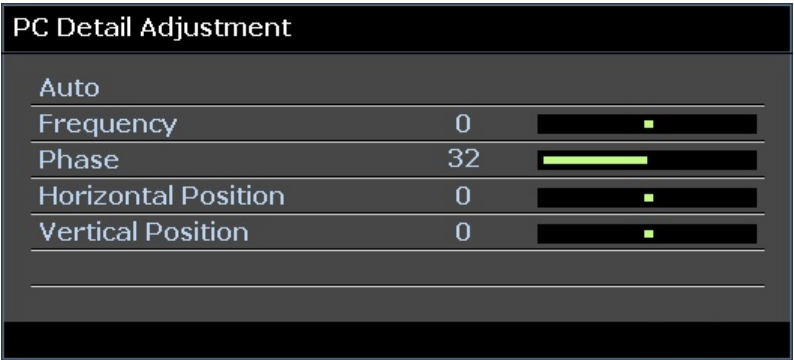

ITEM	DESCRIPTION
Auto	Press the ENTER/AUTO button on the control panel or the ENTER/AUTO button on the remote control to automatically adjust frequency, phase, and position.
Frequency	Press the ◀▶ buttons to adjust the A/D sampling number.
Phase	Press the ◀▶ buttons to adjust the A/D sampling clock.
Horizontal Position	Press the ◀▶ buttons to adjust the display position right or left.
Vertical Position	Press the ◀▶ buttons to adjust the display position up or down.

SETUP>>Basic Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **SETUP>>Basic** menu. Press the cursor ▲▼ button to move up and down in the **SETUP>>Basic** menu. Press ◀▶ to change values for settings.



ITEM	DESCRIPTION
Language	Press the cursor ◀▶ buttons to select a different localization menu.
Splash Logo	Press the cursor ◀▶ buttons to select a different startup screen. (Range: InFocus / Blue/ Black)
Projection	Press the cursor ◀▶ buttons to choose from four projection methods: Front Table / Front Ceiling/ Rear Table/ Rear Ceiling.
Blank Timer	Press the cursor ◀▶ buttons to set the Blank Screen timer. The projected image is automatically restored after the set time. (Range: Disable / 5 min/ 10 min/ 15 min/ 20 min/ 25 min/ 30 min)
Auto Power Off	Press the cursor ◀▶ buttons to set the Auto Power Off timer. The projector automatically turns off if no input source is detected after the preset period of time. (Range: Disable / 5 min/ 10 min/ 15 min/ 20 min/ 25 min/ 30 min)
Sleep Timer	Press the cursor ◀▶ buttons to set Sleep timer. The projector automatically turns off after the preset period of time. (Range: Disable / 30 min/ 1hr/ 2hr/ 3hr/ 4hr/ 8hr/ 12hr)
Background Color	Press the cursor ◀▶ buttons to select the background color when no input source is detected. (Range: Purple/ Black/ Blue)
Menu Settings	Press the ENTER button to enter the Menu Settings sub menu. See <i>Menu Settings</i> on page 30.
Source	Press the ENTER button to enter the Source sub menu. See <i>Source</i> on page 30.

Menu Settings

Press the **ENTER** button to enter the **Menu Settings** sub menu.

Menu Settings	
Menu Position	Center
Menu Display Time	5 Sec

ITEM	DESCRIPTION
Menu Position	Press the ◀▶ buttons to select from five OSD locations: Top-Left/ Top-Right/ Center / Bottom-Left/ Bottom-Right.
Menu Display Time	Press the ◀▶ buttons to set the Menu Display timer before the OSD times out. (Range: 5sec/ 10sec/ 15sec / 20sec/ 25sec/ 30sec)

Source


Press the **ENTER** button to enter the **Source** sub menu.

Source	
PC	✓
HDMI 1	✓
HDMI 2	✓
HDMI 3	✓
Component	✓
Composite	✓
S-Video	✓
Quick Auto Search	Off

ITEM	DESCRIPTION
PC	Press the ◀▶ buttons to enable or disable the PC source.
HDMI 1	Press the ◀▶ buttons to enable or disable the HDMI source.
HDMI 2	
HDMI 3	
Component	Press the ◀▶ buttons to enable or disable the Component source.
Composite	Press the ◀▶ buttons to enable or disable the Video source.
S-Video	Press the ◀▶ buttons to enable or disable the S-Video source.
Quick Auto Search	Press the ◀▶ buttons to enable or disable Quick Auto Search for available input source. Notes: When the desired source is selected, the Quick Auto Search function will be turn off.

SETUP>>Advanced Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **SETUP>>Advanced** menu. Press the cursor ▲▼ button to move up and down in the **SETUP>>Advanced** menu.

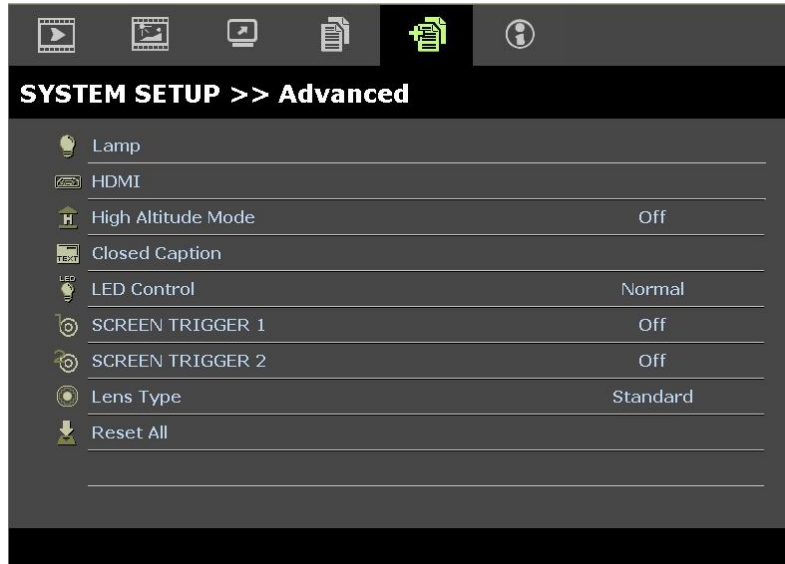

ITEM	DESCRIPTION
Lamp	Press the ENTER button to enter the Lamp sub menu. See <i>Lamp</i> on page 32.
HDMI	Press the ENTER button to enter the HDMI sub menu. See <i>HDMI</i> on page 32.
High Altitude Mode	Press the cursor ◀▶ buttons to turn on or off High Altitude Mode when the altitude of the environment is higher than 1500m, or the temperature is over 40°C.
Closed Caption	Press the ENTER button to enter the Closed Caption sub menu. See <i>Closed Caption</i> on page 33.
LED Control	Press the cursor ◀▶ buttons to select the LED control. Select Normal for normal LED display and Off to disable LED display.
SCREEN TRIGGER 1	Press the cursor ◀▶ buttons to turn on or off SCREEN TRIGGER 1. When connected to the screen through a commercially available cable, the screen deploys automatically on start up of the projector. The screen retracts when the projector is powered off.
SCREEN TRIGGER 2	Press the cursor ◀▶ buttons to turn on or off SCREEN TRIGGER 2.
Lens Type	Press the cursor ◀▶ buttons to select a lens type. (Range: Short / Standard / Long/)
Reset All	Press the ENTER button to enter reset all settings to default values.

Lamp


Press the **ENTER** button to enter the **Lamp** sub menu.



ITEM	DESCRIPTION
Lamp Mode	Press the ◀▶ buttons to adjust lamp brightness.
Reset Lamp Timer	Press the ENTER button to reset the Lamp Hour after the lamp is replaced.
Lamp Hour	Displays the number of hours the lamp has been in use.

HDMI


Press the **ENTER** button to enter the **HDMI** sub menu.

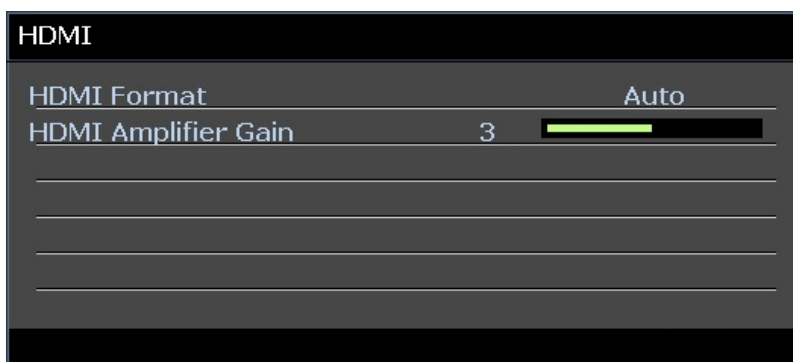

ITEM	DESCRIPTION
HDMI Format	Press the ◀▶ buttons to select from three HDMI display formats: Auto/ PC signal/ Video signal.
HDMI Amplifier Gain	Press the ◀▶ buttons to adjust HDMI Amplifier Gain.

Closed Caption


Press the **ENTER** button to enter the **Closed Caption** sub menu.

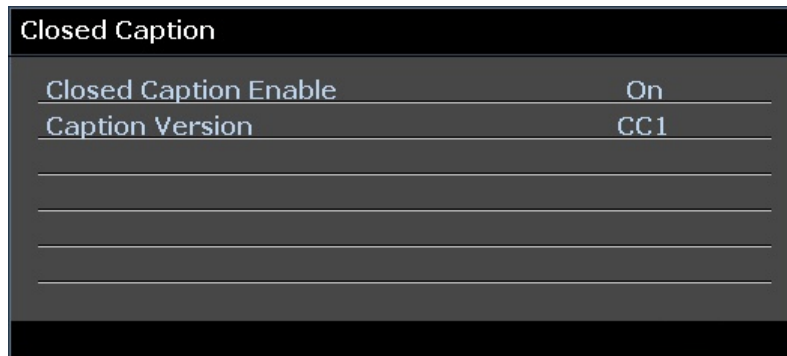

ITEM	DESCRIPTION
Closed Caption Enable	Press the ◀▶ buttons to turn on or off Closed Caption.
Caption Version	Press the ◀▶ buttons to select the Caption Version.


SCREEN TRIGGER

Set **SCREEN TRIGGER 1** to **On** to enable the projector to automatically lower the projection screen when powering on. When powering off, screen trigger stops sending a low voltage trigger to the screen controller and the screen goes up.

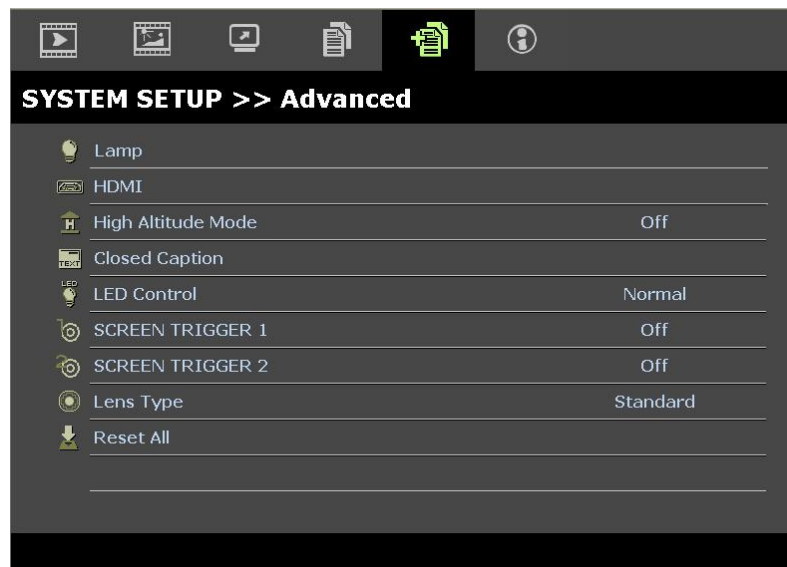

STATUS Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the **STATUS Menu**.

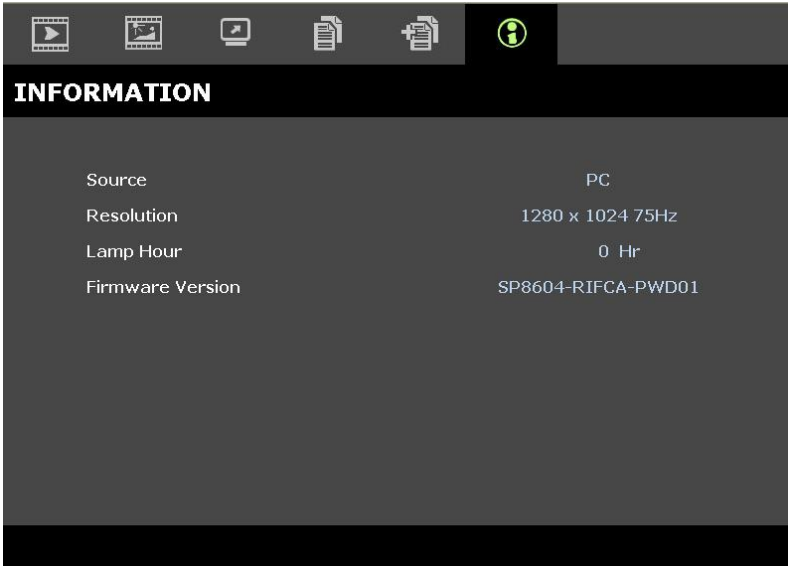

ITEM	DESCRIPTION
Source	Displays the activated input source.
Resolution	Displays the current resolution of input source.
Lamp Hour	Displays the number of hours the lamp has been in use.
Firmware Version	Displays the firmware version of the projector.

Note:
Status displayed in this menu is for viewing only and cannot be edited.

MAINTENANCE AND SECURITY

Replacing the Projection Lamp

The projection lamp should be replaced when it burns out. It should only be replaced with a certified replacement part, which you can order from your local dealer.



Important:

- a. The projection lamp used in this product contains a small amount of mercury.
- b. Do not dispose this product with general household waste.
- c. Disposal of this product must be carried out in accordance with the regulations of your local authority.


Warning:

Be sure to turn off and unplug the projector at least 30 minutes before replacing the lamp. Failure to do so could result in a severe burn.


1. Switch off the power to the projector by pressing the POWER button.
2. Allow the projector to cool down at least 30 minutes.
3. Disconnect the power cord.
4. Unlock the lamp cover.
5. Pull up and remove the cover.

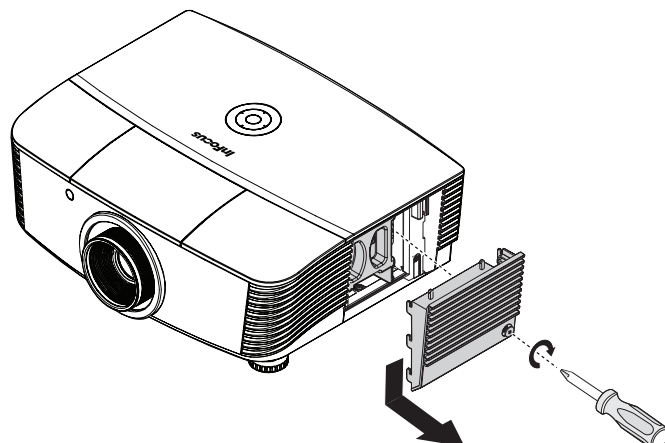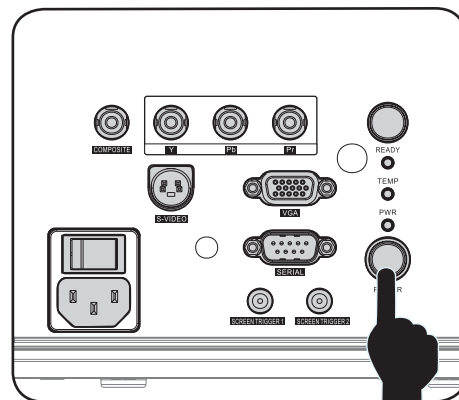

6. Use a screwdriver to remove the screws from the lamp module.

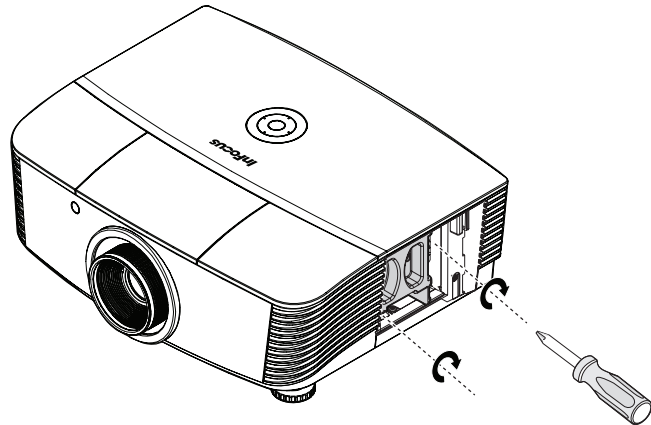


7. Pull out the lamp module.

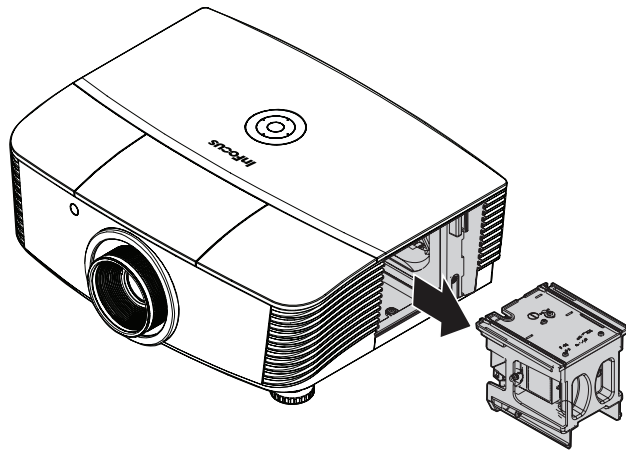

8. Reverse steps 1 to 7 to install the new lamp module. While installing, align the lamp module with the connector and ensure it is level to avoid damage.

Note:

The lamp module must sit securely in place and the lamp connector must be connected properly before tightening the screws.

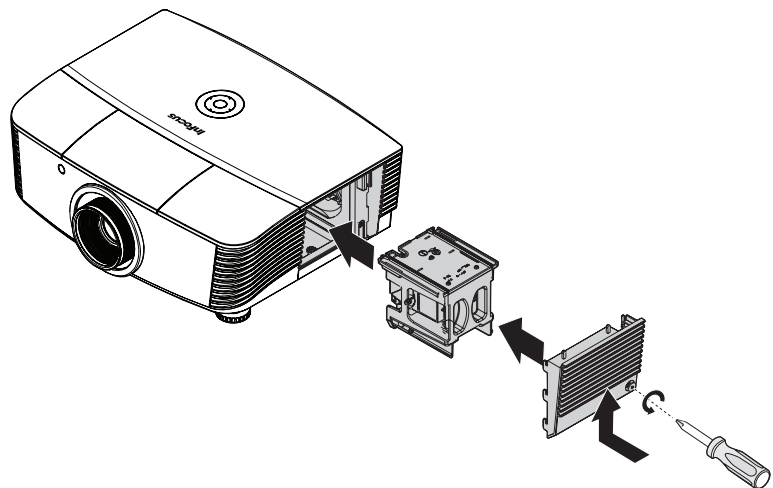

9. Turn on the projector and reset the lamp after the lamp module is replaced.

Lamp Reset:

Press **Menu** → Select **SYSTEM SETUP : Advanced** → Select **Lamp** → Select **Lamp Mode** or **Reset Lamp Timer** → Press the ◀▶ buttons to adjust the settings.

Cleaning the Projector

Cleaning the projector to remove dust and grime will help ensure trouble-free operation.

Warning:

1. Be sure to turn off and unplug the projector at least 30 minutes before cleaning. Failure to do so could result in a severe burn.
2. Use only a dampened cloth when cleaning. Do not allow water to enter the ventilation openings on the projector.
3. If a little water gets into the projector interior while cleaning, leave unplugged in a well-ventilated room for several hours before using.
4. If a lot of water gets into the projector interior when cleaning, have the projector serviced.

Cleaning the Lens

You can purchase optic lens cleaner from most camera stores. Refer to the following to clean the projector lens.

1. Apply a little optic lens cleaner to a clean soft cloth. (Do not apply the cleaner directly to the lens.)
2. Lightly wipe the lens in a circular motion.

Caution:

1. Do not use abrasive cleaners or solvents.
2. To prevent discoloration or fading, avoid getting cleaner on the projector case.

Cleaning the Case

Refer to the following to clean the projector case.

1. Wipe off dust with a clean dampened cloth.
2. Moisten the cloth with warm water and mild detergent (such as used to wash dishes), and then wipe the case.
3. Rinse all detergent from the cloth and wipe the projector again.


Caution:

To prevent discoloration or fading of the case, do not use abrasive alcohol-based cleaners.

Using the Physical Lock

Using the Kensington[®] Lock

If you are concerned about security, attach the projector to a permanent object with the Kensington slot and a security cable.

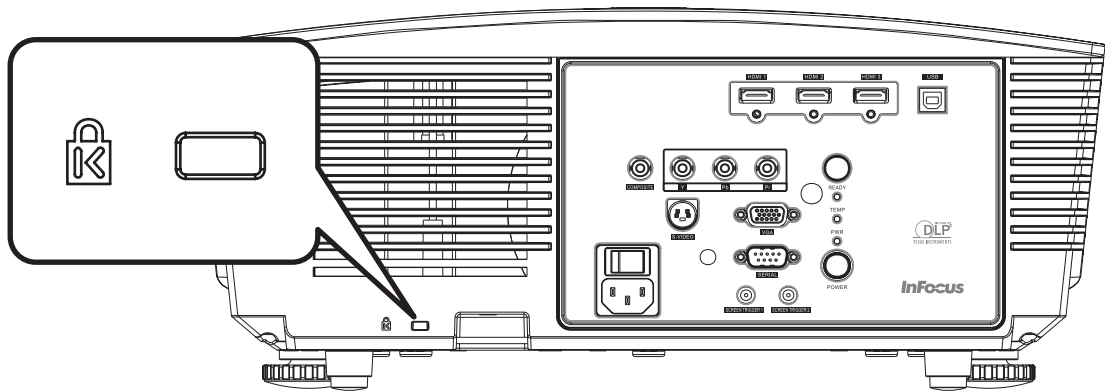

Note:


Contact your vendor for details on purchasing a suitable Kensington security cable.

The security lock corresponds to Kensington's MicroSaver Security System. If you have any comment, contact: Kensington, 2853 Campus Drive, San Mateo, CA 94403, U.S.A. Tel: 800-535-4242, <http://www.kensington.com>.

Using the Security Chain Lock

In addition to the password protection function and the Kensington lock, the Security Chain Opening helps protect the projector from unauthorized use.

See the following picture.

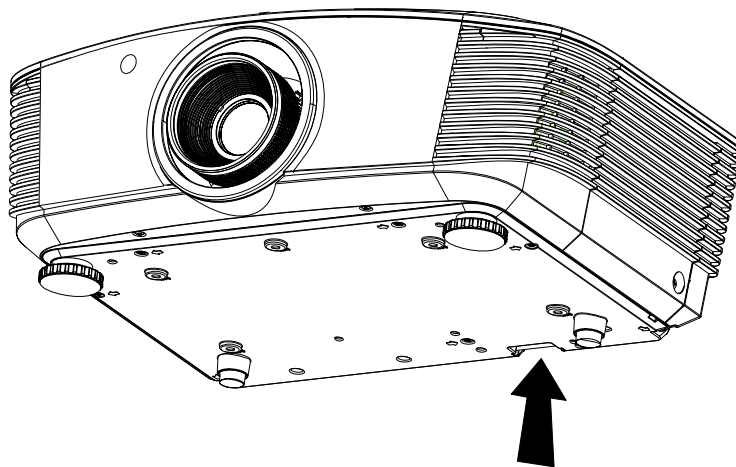

TROUBLESHOOTING

Common problems and solutions

These guidelines provide tips to deal with problems you may encounter while using the projector. If the problem remains unsolved, contact your dealer for assistance.

Often after time spent troubleshooting, the problem is traced to something as simple as a loose connection. Check the following before proceeding to the problem-specific solutions.

- *Use some other electrical device to confirm that the electrical outlet is working.*
- *Ensure the projector is turned on.*
- *Ensure all connections are securely attached.*
- *Ensure the attached device is turned on.*
- *Ensure a connected PC is not in suspended mode.*
- *Ensure a connected notebook computer is configured for an external display.
(This is usually done by pressing an Fn-key combination on the notebook).*

Tips for Troubleshooting

In each problem-specific section, try the steps in the order suggested. This may help you to solve the problem more quickly.

Try to pin point the problem and thus avoid replacing non-defective parts.
For example, if you replace batteries and the problem remains, put the original batteries back and go to the next step.

Keep a record of the steps you take when troubleshooting: The information may be useful when calling for technical support or for passing on to service personnel.

LED Error Messages

ERROR CODE MESSAGES	POWER LED BLINK		READY LED BLINK	TEMP LED BLINK
	GREEN	RED		
Lamp Ready	ON	X	ON	OFF
Start	X	ON	OFF	OFF
Cooling	ON	X	FLASHING	OFF
Over temperature	X	OFF	OFF	ON
Thermal Break Sensor error	X	7	OFF	OFF
Lamp Error	5	X	OFF	OFF
Lamp End of lamp life detected	5	X	3	OFF
Burner Fan error	6	X	1	OFF
Lamp Fan error	6	X	2	OFF
Power Fan error	6	X	3	OFF
DMD Fan error	6	X	4	OFF
Case Open	X	7	OFF	OFF
DMD error	8	X	OFF	OFF
Color wheel error	9	X	OFF	OFF

In the event of an error, please disconnect the AC power cord and wait for one (1) minute before re-starting the projector. If the POWER or READY LEDs are still blinking or the TEMP LED is lit, contact your service center.

Image Problems

Problem: No image appears on the screen

1. Verify the settings on your notebook or desktop PC.
2. Turn off all equipment and power up again in the correct order.

Problem: The image is blurred

1. Adjust the **Focus** on the projector.
2. Press the **Auto** button on the remote control or projector.
3. Ensure the projector-to-screen distance is within the 10-meter (33-feet) specified range.
4. Check that the projector lens is clean.

Problem: The image is wider at the top or bottom (trapezoid effect)

1. Position the projector so it is as perpendicular to the screen as possible.
2. Use the **Keystone** button on the remote control or projector to correct the problem.

Problem: The image is reversed

Check the **Projection** setting on the **Installation I** menu of the OSD.

Problem: The image is streaked

1. Set the **Frequency** and **Tracking** settings on the **Computer** menu of the OSD to the default settings.
2. To ensure the problem is not caused by a connected PC's video card, connect to another computer.

Problem: The image is flat with no contrast

Adjust the **Contrast** setting on the **Image** menu of the OSD.

Problem: The color of the projected image does not match the source image.

Adjust the **Color Temperature** and **Gamma** settings on the **Image** menu of the OSD.

Lamp Problems

Problem: There is no light from the projector

1. Check that the power cord is securely connected.
2. Ensure the power source is good by testing with another electrical device.
3. Restart the projector in the correct order and check that the Power LED is green.
4. If you have replaced the lamp recently, try resetting the lamp connections.
5. Replace the lamp module.
6. Put the old lamp back in the projector and have the projector serviced.

Problem: The lamp goes off

1. Power surges can cause the lamp to turn off. Re-plug power cord. When the Power LED is on, press the power button.
2. Replace the lamp module.
3. Put the old lamp back in the projector and have the projector serviced.

Remote Control Problems

Problem: The projector does not respond to the remote control

1. Direct the remote control towards remote sensor on the projector.
2. Ensure the path between remote and sensor is not obstructed.
3. Turn off any fluorescent lights in the room.
4. Check the battery polarity.
5. Replace the batteries.
6. Turn off other Infrared-enabled devices in the vicinity.
7. Have the remote control serviced.

Need Assistance?

If you need assistance, visit our website at www.infocus.com/service or call us. Check out our HOW TO section there for additional information on using this projector for home theater applications.

This product is backed by a limited warranty. An extended warranty plan may be purchased from your dealer. When sending the projector in for repair, we recommend shipping the projector in its original packing material, or having a professional packaging company pack the projector. Please insure your shipment for its full value.

HDMI Q & A

Q. What is the difference between a “Standard” HDMI cable and a “High-Speed” HDMI cable?

Recently, HDMI Licensing, LLC announced that cables would be tested as Standard or High-Speed cables.

- Standard (or “category 1”) HDMI cables have been tested to perform at speeds of 75Mhz or up to 2.25Gbps, which is the equivalent of a 720p/1080i signal.
- High Speed (or “category 2”) HDMI cables have been tested to perform at speeds of 340Mhz or up to 10.2Gbps, which is the highest bandwidth currently available over an HDMI cable and can successfully handle 1080p signals including those at increased color depths and/or increased refresh rates from the Source. High-Speed cables are also able to accommodate higher resolution displays, such as WQXGA cinema monitors (resolution of 2560 x 1600).

Q. How do I run HDMI cables longer than 10 meters?

There are many HDMI Adopters working on HDMI solutions that extend a cable’s effective distance from the typical 10 meter range to much longer lengths. These companies manufacture a variety of solutions that include active cables (active electronics built into cables that boost and extend the cable’s signal), repeaters, amplifiers as well as CAT5/6 and fiber solutions.

Q. How can I tell if a cable is an HDMI certified cable?

All HDMI products are required to be certified by the manufacturer as part of the HDMI Compliance Test Specification. However, there may be instances where cables bearing the HDMI logo are available but have not been properly tested. HDMI Licensing, LLC actively investigates these instances to ensure that the HDMI trademark is properly used in the market. We recommend that consumers buy their cables from a reputable source and a company that is trusted.


For more detail information check <http://www.hdmi.org/learningcenter/faq.aspx#49>

SPECIFICATIONS

Specifications

Model	SP8604		
Display type	TI DLP DMD 0.65"		
Native Resolution	1920 x 1080		
Weight	8.8 kg (19 lbs)		
Lens type	Standard	Long	Short
Projection distance	1.5 meters – 7 meters	2.meters – 20 meters	0.5 meters – 3 meters
Projection screen size	35.1" – 205"	31.2" – 468"	29.25" – 175.5"
Projection lens	Manual Focus/ Manual Zoom	Manual Focus/ Manual Zoom	Fix Zoom
Zoom ratio	1.25	1.5	Fix
Vertical keystone correction	+/- 15 degrees		
Projection methods	Front, Rear, Desktop/Ceiling (Rear, Front)		
Data compatibility	VGA, SVGA, XGA, SXGA, SXGA+, UXGA, Mac		
SDTV/ EDTV/ HDTV	480i, 576i, 576p, 480p, 720p, 1080i, 1080p		
Video compatibility	NTSC 4.43, PAL (M/N/60), SECAM		
H-Sync	15.31 – 90 kHz		
V-Sync	43 – 85 Hz		
Safety certification	FCC-B, UL, cUL, CB, CE, CCC, PCT, PSB, SAB, and C-tick		
Operation temperature	5° – 40°C		
Dimensions (W x H x D)	431 mm x 181 mm x 344 mm (16.97" x 7.13" x 13.54")		
AC Input	AC Universal 100 – 240, Typical @ 110VAC (100–240)/± 10%		
Power consumption	Standard mode: 310W/ Boost mode: 370W		
Stand By	<1 watt		
Lamp	280W		
Input Terminals	Digital: HDMI x 3		
	Analog: RGB HD-15 x 1		
	Composite: RCA x 1 (Yellow)		
	S-Video: mini dim x 1		
	Component: RCA x 3		
Output Terminals	SCREEN TRIGGER: DC Jack x 2 (DC12V 200mA output function)		
Control Terminals	SERIAL: D-Sub-9 x1 (male)		
	USB (Service only): USB connector type B		
Security	Kensington lock		

Projection Distance vs. Projection Size

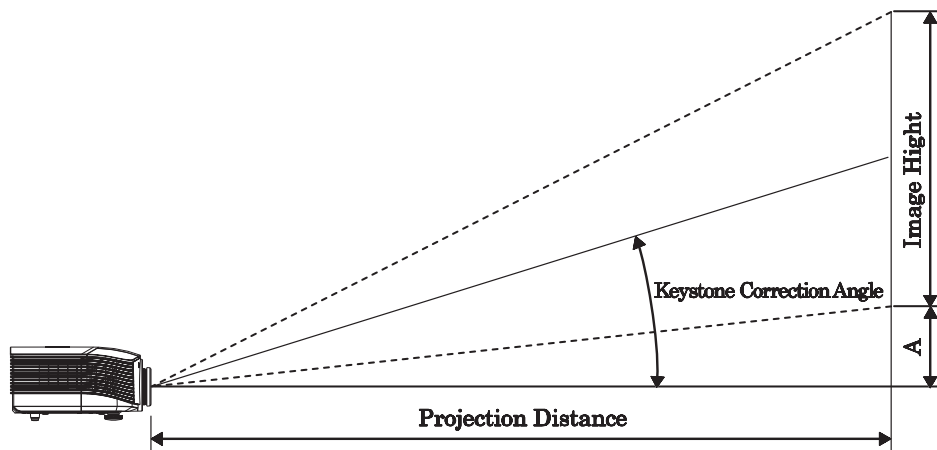

Projection Distance and Size Table

Standard projection lens: TR: 1.54 – 1.93

	TELE				WIDE			
Distance (m)	1.28	3.42	4.27	8.55	1.36	2.73	3.41	10.23
Diagonal (")	30	80	100	200	40	80	100	300
Keystone Correction Angle (degree)	9.93	9.93	9.93	9.93	12.39	12.39	12.39	12.39
Image Height (mm)	373.6	996.2	1245.3	2490.5	498.1	996.2	1245.3	3735.8
Image Width (mm)	664.1	1771.0	2213.8	4427.6	885.5	1771.0	2213.8	6641.4
A (mm)	37.4	99.6	124.5	249.1	49.8	99.6	124.5	373.6

Long throw projection lens: TR: 1.93 – 2.89

	TELE				WIDE			
Distance (m)	3.20	5.12	6.40	25.59	2.14	3.42	4.27	19.23
Diagonal (")	50	80	100	400	50	80	100	450
Keystone Correction Angle (degree)	6.66	6.66	6.66	6.66	9.9	9.9	9.9	9.9
Image Height (mm)	622.6	996.2	1245.3	4981.1	622.6	996.2	1245.3	5603.7
Image Width (mm)	1106.9	1771.0	2213.8	8855.2	1106.9	1771.0	2213.8	9962.1
A (mm)	62.3	99.6	124.5	498.1	62.3	99.6	124.5	560.4

Short throw projection lens: TR: 0.77

	FIX		
Distance (m)	0.5	1.4	3.0
Diagonal (")	30	80	175
Keystone Correction Angle (degree)	24.1	24.1	24.1
Image Height (mm)	373.6	996.2	2179.2
Image Width (mm)	664.1	1771.0	3874.2
A (mm)	37.4	99.6	217.9

Timing Mode Table

The projector can display several resolutions. The following table outlines the resolutions that can be displayed by the projector.

SIGNAL	RESOLUTION	H-SYNC (KHz)	V-SYNC (Hz)	COMPOSITE / S-VIDEO	COMPONENT	RGB (ANALOG)	HDMI (DIGITAL)
VGA	640 x 350	31.5	70.1	—	—	O	O
VESA (DMT)	640 x 350	37.9	85.1	—	—	O	O
	720 x 350	31.5	70.0	—	—	O	O
	640 x 400	37.9	85.1	—	—	O	O
	720 x 400	31.5	70.0	—	—	O	O
	720 x 400	37.9	85.0	—	—	O	O
	720 x 400	39.4	87.8	—	—	O	O
	640 x 480	37.5	75.0	—	—	O	O
	640 x 480	43.3	85.0	—	—	O	O
	800 x 600	48.1	72.2	—	—	O	O
	800 x 600	50.3	80	—	—	O	O
	800 x 600	53.7	85.1	—	—	O	O
	1024 x 576	29.6	50	—	—	O	O
	1024 x 576	35.8	60	—	—	O	O
	1024 x 768	60.0	75.0	—	—	O	O
	1024 x 768	68.7	85.0	—	—	O	O
	1152 x 864	54.3	60.0	—	—	O	O
	1152 x 864	63.9	70.0	—	—	O	O
	1152 x 864	67.5	75.0	—	—	O	O
	1152 x 864	77.5	85.0	—	—	O	O
	1280 x 720	37.5	50	—	—	O	O
	1280 x 720	45	60	—	—	O	O
	1280 x 1024	64.0	60.0	—	—	O	O
	1280 x 1024	80.0	75.0	—	—	O	O
	1280 x 1024	91.1	85.0	—	—	O	O
	1600 x 1200	75.0	60.0	—	—	O	O
	1920 x 1080i	33.8	60.0	—	—	O	O
	1920 x 1080i	28.1	50.0	—	—	O	O
	1920 x 1080p	27	24	—	—	O	O
	1920 x 1080p	56.25	50	—	—	O	O
	1920 x 1080p	67.5	60	—	—	O	O
CGA84	640 x 400	31.5	70.1	—	—	O	O
SMT	640 x 480	31.5	60.0	—	—	O	O
	640 x 480	34.9	66.6	—	—	O	O

SIGNAL	RESOLUTION	H-SYNC (KHz)	V-SYNC (Hz)	COMPOSITE / S-VIDEO	COMPONENT	RGB (ANALOG)	HDMI (DIGITAL)
VESA	640 x 480	37.9	72.8	—	—	O	O
	800 x 600	35.2	56.3	—	—	O	O
	800 x 600	37.9	60.3	—	—	O	O
	800 x 600	46.9	75.0	—	—	O	O
	1024 x 768	48.4	60.0	—	—	O	O
	1024 x 768	56.5	70.1	—	—	O	O
	1024 x 768	57.7	72	—	—	O	O
DMT	1280 x 720	56.4	75	—	—	O	O
	1280 x 720	64.4	85	—	—	O	O
	1280 x 768	47.4	60.0	—	—	O	O
	1280 x 768	56	70.0	—	—	O	O
	1280 x 768	60.3	75.0	—	—	O	O
	1280 x 768	68.8	85.0	—	—	O	O
	1280 x 800	49.7	60	—	—	O	O
	1400 x 1050	64.7	60.0	—	—	O	O
	720 x 480i	15.8	60.0	—	—	O	O
	720 x 480p	31.5	60.0	—	—	O	O
	720 x 576i	15.6	50.0	—	—	O	O
	720 x 576p	31.3	50.0	—	—	O	O
	1280 x 720p	45.0	60.0	—	—	O	O
	1280 x 720p	37.5	50.0	—	—	O	O
CVT	1920 x 1200	74.0	60.0	—	—	O	O
Apple Macintosh	640 x 480	35.0	66.7	—	—	O	O
	832 x 624	49.7	74.5	—	—	O	O
	1024 x 768	60.2	74.9	—	—	O	O
	1152 x 870	68.7	75.1	—	—	O	O
NTSC/NTSC4.43	Chroma Sub-carrier Frequency, 3.58 MHz & 4.43 MHz			O	—	—	—
PAL	CCIR, Chroma Sub-carrier Frequency, 4.43 MHz			O	—	—	—
SECAM	CCIR Sub-carrier frequency, 4.25/4.4 MHz			O	—	—	—
SDTV	480i	15.8	60.0	—	O	—	O
	576i	15.6	50.0	—	O	—	O
EDTV	480p	31.5	60.0	—	O	—	O
	576p	31.3	50.0	—	O	—	O

SIGNAL	RESOLUTION	H-SYNC (KHz)	V-SYNC (Hz)	COMPOSITE / S-VIDEO	COMPONENT	RGB (ANALOG)	HDMI (DIGITAL)
HDTV	720p	45.0	60.0	—	O	—	O
	720p	37.5	50.0	—	O	—	O
	1080i	33.8	60.0	—	O	—	O
	1080i	28.1	50.0	—	O	—	O
	1080p	27	24	—	O	—	O
	1080p	28.125	25	—	O	—	O
	1080p	33.75	30	—	O	—	O
	1080p	56.25	50	—	O	—	O
	1080p	67.5	60	—	O	—	O


O: Frequency supported

—: Frequency not supported

The native resolution of the panel is 1920 x 1080.

Resolution other than native resolution may display with uneven size of text or lines.

Projector Dimensions

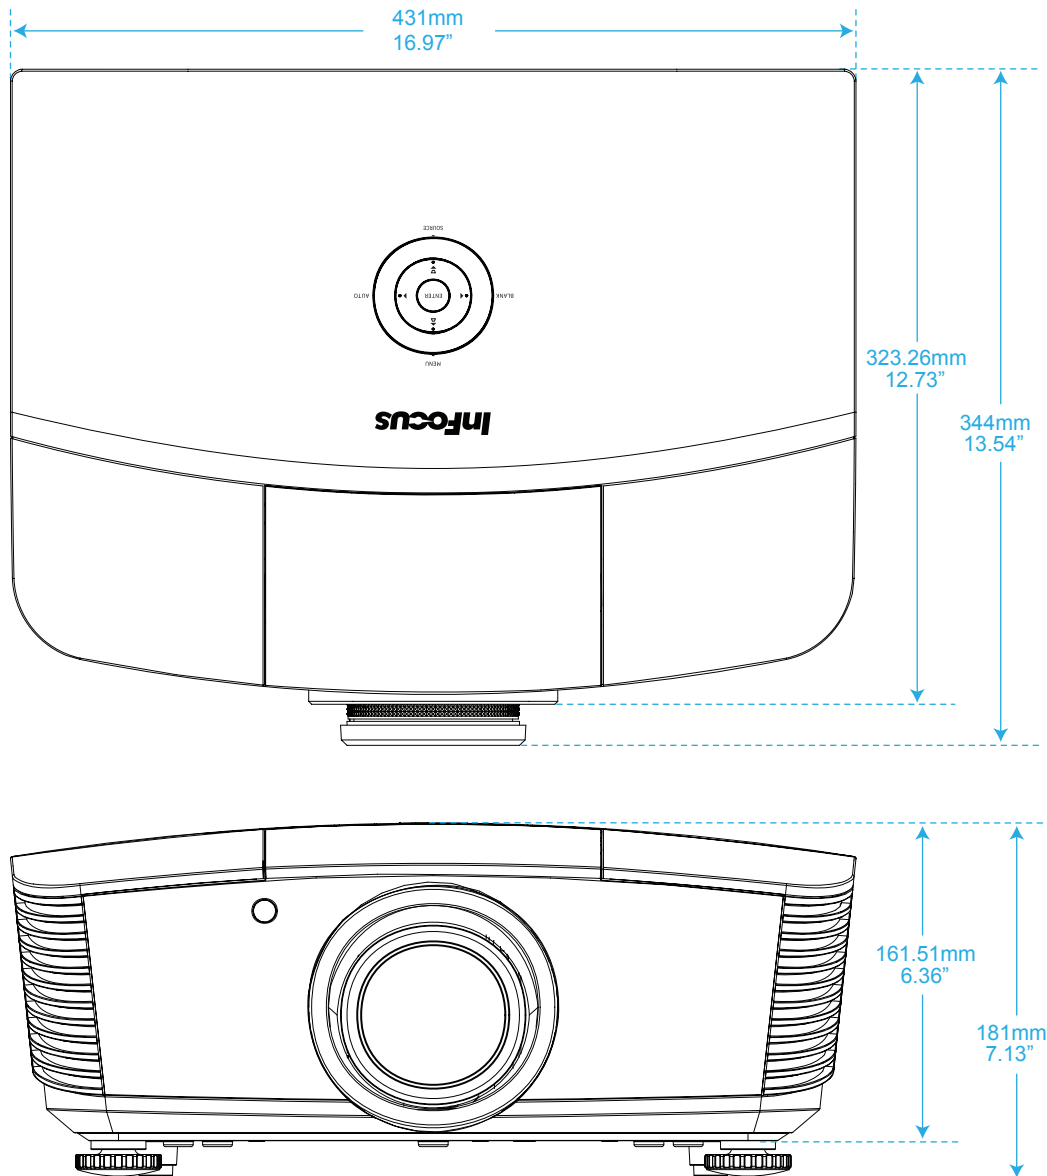

REGULATORY COMPLIANCE

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications not expressly approved by the parties responsible for compliance could void the user's authority to operate the equipment.

Canada

This class B digital apparatus complies with Canadian ICES-003.

Safety Certifications

FCC-B, UL, cUL, CB, CE, CCC, PCT, PSB, SAB, and C-tick