


PRO. SIS. TEL.

Produzione sistemi telecomunicazioni

Antenna Rotator

**User's manual
Rev.1.2**

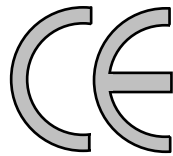

**C.da Conghia 298 - 70043 Monopoli BA Italy
Tel-Fax ++ 39 80 8876607
E-mail:prosistel@tiscali.it**

Copyright ® PRO.SIS.TEL. 2011

Warning

This manual must be read carefully before proceeding to assembly.

Warranty

1) The rotator with the control box, hereinafter called “product”, or “rotator”, is warranted for 2 years from date of purchase, provided that it is supported by the document of sale issued by the manufacturer or authorized distributor.

2) The warranty covers replacement or repair of any defective component.

3) This warranty does not apply to product which have been subjected to misuse, negligence, accident, incorrect wiring performed by the user, improper installation or non-compliance to instructions furnished by us, damage to product which has been repaired or altered without authorization or to injury or loss resulting from careless maintenance. The warranty does not cover damage due to transportation and all causes not arising from defects in workmanship.

4) The warranty does not cover costs of transport or insurance for material returned to our workshops.

5) The manufacturer is not responsible for personal injury or property damage resulting from improper or careless use of the product.

6) All product is tested after assembly and is supplied without defect. We exclude the substitution or the prolongation of warranty for a possible damage.

7) After the 2 years warranty period, maintenance or repair will be subject to parts and labor charges.

8) No person is authorized to assume for us any liability in connection with the sale of our products.

9) This warranty does not cover damage to people or things due to misuse, improper or careless installation, or misunderstanding of instructions furnished by us.

10) The right of recession must be exercised in according to the law.

11) Our products are subject to continuous improvement. We reserve the right to implement improvements and changes without prior notification.

12) The legal code applying in MONOPOLI, Italy, will apply, in cases of dispute.

13) Purchasers of product are deemed to accept paragraphs 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12 and 13 as above.

Model: PST

S/N:

Date of purchase:

Important

Read this instruction manual carefully before attempting to operate the antenna rotator.

Save this instruction manual.

This instruction manual contains important safety and operating instruction for antenna rotator.

Precautions

! WARNING, **never** connect or disconnect rotor cable or RS232 connectors while power is on. This may results in electrical shock or burn.

Table of contents

Section 1:	Description;
Section 2:	Installation and use;
Section 3:	Principle of operation ;
Section 4:	Technical specifications;
Section 5:	RS232 remote control philosophy;
Appendix 1:	Declaration of conformity
Table:	
Note:	

Last up-date 21 February 2011

Section 1

The controller

1-1 Front panel description.



1 - POWER SWITCH (POWER)

Turns power ON and OFF

2 – Right lever: CW momentary switch

Pushing and holding this switch will make the rotator turn clockwise

If you have used the preset, or computer control to start rotation, you can over-ride those commands by momentarily depressing the switch.

3 – Left Lever: CCW momentary switch

Pushing and holding this switch will make the rotator turn anti-clockwise

If you have used the preset, or computer control to start rotation, you can over-ride those commands by momentarily depressing the switch.

4 - Display

The display will show the current bearing in degrees.

When the preset knob is turned, the display will show the preset bearing.

The decimal points on the LED display blink

- * when you turn the target position knob on the front panel

- * rotation begins and is in progress

- * when rotation is complete. At that time the display will blink for the programmed delay time before further rotations are permitted. (Note - if the CW or CCW keys have been used, further rotations in the same direction are not subject to this delay time)

The central decimal point will be ON when operate in "absolute" mode.

The left decimal point will be ON when the rotator is operating in the CW extra range.

The right decimal point will be ON when the rotator is operating in the CCW extra range.

5 - Preset rotating encoder

To preset rotation, having 1 degree step, turn the knob to the desired bearing. 3 seconds later, rotation towards the preset position will start, with the display showing the bearing as it changes. "Err" is displayed if the preset knob is turned to a position outside the rotation limits.

1-2 Rear panels description.

1 - DB9, RS232 female connector

Enables connection to a PC RS-232 port for remote operation.

Pin 5 = computer ground

Pin 2 = serial data out (to computer data in)

Pin 3 = serial data in (from computer data out)

2 - Rotators control cable connector

Connects the rotator to the controller

3 – AC Power male socket (230Vac or 115 Vac)

Connects the rotator to the controller

4 – Fuse holder.

19x5mm, 0.5A fuse is required.

1-3 Controller features.

Warning:

this is a complex controller, make sure you understand before using it.

This controller has several features settable via RS232.

Controller parameters settable via RS232 only:

- Soft start – Soft stop
- South stop or North stop
- Rotation range 360 or 500
- Calibration
- Self-calibration
- Off-set
- Revers delay
- Preset delay
- PWM duty cycles
- Rotation range
- Optimizer
- Rotor chk

Controller display mode settable manually only:

- Absolute or relative display mode.

- **Entering in Absolute mode**

The **absolute** mode is usefull for controller calibration.

In the **absolute** mode the display shows directly the rotator position expressed in absolute degrees: you read values from 000 to 500, the central decimal point ON means only that the controller is operating in “absolute” mode. In the other operational modes (north/south-stop) the absolute readings are converted into different angular position numbers, but only for input/display purposes: internally the program works with absolute angles.

The **absolute** mode can be **only** entered turning-on the CBOX with the CW key pressed until the display shows a blinking “---“ (three minus): now you can release the key and the **absolute** mode is entered. You can move the motor using CW and CCW keys between the rotation limits.

To exit from such a mode you must recycle CBOX power (forcing another mode by RS232 command isn't effective).

In the **absolute** mode the rotor can be only operated by the CW/CCW

The bearing values in degree as shown by the display, are not absolute but relative, as show in the conversion tables:

		South stop		absolute values			
Vdc	000	070	160	250	340	430	500
Deg.	110	180	270	000	090	180	240
	east side	S	W	N	E	S	west side
	outrange						outrange
		South stop		relative values			
<hr/>							
		North stop		absolute values			
Vdc	000	070	160	250	340	430	500
Deg.	290	000	090	180	270	000	070
	west side	S	W	N	E	S	east side
	outrange						outrange
		North stop		relative values			

That mean when the pulses (Vdc=pulses) coming from the rotator encoder is 000, the display will show **110** deg. when in South stop (default) and will show **290** deg. when in North stop. With an applied pulses of 250 the display will show **000** deg when in South stop and and **180** deg when in North stop, while with an applied pulses of 500 the display will show **240** deg. when in South stop and **070** deg. when in North stop.

- **Soft start and soft stop:**

A PWM is included. When it is in active it permits soft-start and soft-stop for the rotator. It doesn't operate using CW or CCW paddle.
Default valoue: included.

- **South stop or North stop:**

Via RS232, it's possible to switch the display reading mode.
South stop means that rotation begin from south, pass trthought east, than north, then west and stop to south and viceversa.
Nort stop means that rotation begin from north, pass trthought east, than south, then west and stop to north and viceversa.
South stop is usual for HF antenna system.
If you decide to switch to North stop, after than antenna is installed already, you will have antenna 180 degree off set, than you have to release the antenna mast clamps and manually rotate antenna for 180 degree to get new allignement.
Default valoue: South stop.

- **Rotation range 360:**

Even if 500 degrees is the potential rotation range, the true rotation is limited to 360 degree by limit switches.

- Note - Absolute values must be entered in the input fields.
Default valoue: 070-430 Degrees (360 degree)

- **Calibration**

If necessary, you can recalibrate your controller via RS232. See calibration procedure.

- **Self-reallignement**

Each time rotator reach CCW end, if a misallignement being noticed, it will be automatically correct.
Default valoue: ON

- **Off-set**

If the initial antenna direction it's not coincident with the geografic direction, you can set it via RS232.
Default valoue: 0

- **Revers delay**

A reverse delay time is provided. This is to reduce stress on your rotator / tower and antenna systems caused by too-rapid reversal of direction. The default time is 3 seconds, but this may be altered in the software to suit your antenna system.

- **PWM duty cycles**

This feature controls the acceleration / deceleration of the rotator between rest and full rotation speed. This feature is kind to your antenna system as it gives smooth starting and stopping of your antenna.

- **Rotation range**


This controller allow you to have programmable rotation range within 0-360 degrees.

- **Rotor chk**

If implemented, if you select a target, the CPU will check the feedback signal from the rotator, and within 5 seconds will prevent the rotator from turning in the event of an abnormality.

Default: Off

- **Controller internal view**

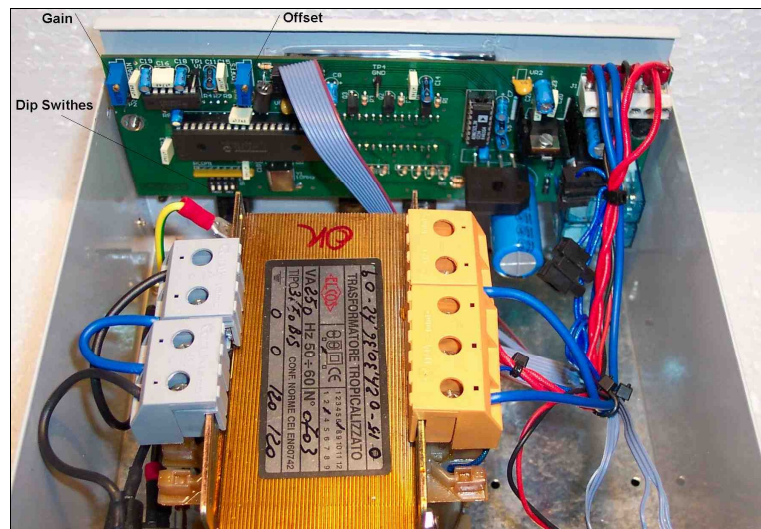

- **Calibration procedure.**

Initial calibration is carried out in the factory

Whenever if a recalibration is required (using the PC control program):

Connect controller and PC via RS232.

Power on the controller entering in Absolute mode.

Run the tool software, open the calibration form, write in the Calibration set (F) window the calibration factor number that you find on the controller back panel and push the Calibration set button.

Push CMD L button and check if the Calc Fact window show the same valoue.

Recalibration is done.

1.4 The rotator

The rotator has a unique design. The motor is located on the side of the machine.

The motor output shaft terminates on a flange, where different kinds of mast clamp, available from us, may be fixed with bolts. Users may also supply their own clamp.

On the motor side is located an IP67 seven-contact connector for motor power supply, encoder terminals, self-realignment reed sensor.

The encoder, used as the antenna position reader, is located on the DC motor driven by motor shaft.

Limit switches will stop the rotation if CW or CCW limits being over passed.

PST 110 - 71 - 61

PST2051 - 641



Rotator cable connector end



Section 2

Installation and connections

2.1 Unpacking

After unpacking, immediately report any damage to the delivering carrier or dealer.
Keep the shipping cartoon.

2.2 Power supply connection

Connect the power cable and switch power on, display will show PHH and soon after 110. Switch power OFF.

2.3 Rotator control cable preparation & connection

Before installing the rotator inside a tower, you need to prepare male connector for remote control cable, make all connections and test rotator operation throughly on the ground, as described below.

Connect the rotator and control box with a 7-core control cable.

Twisted and shielded cable is required.

Two cores are used for the motor DC power supply, and four for the position reading encoder, one for the self-alignment reed sensor. If the diameter of the control cable is too thin, it will limit the voltage and reduce the torque.

Do not use cable with less than 1 mm² of section area as DC motor power supply.

Before connecting rotator and controller, make sure that power switch is OFF.

Cable plug		Motor terminals plug
Wire no. 1	must be connected to	1 (VDC motor power) $\geq 1\text{mm}^2$
Wire no. 2	must be connected to	2 (VDC motor power) $\geq 1\text{mm}^2$
Wire no. 3	must be connected to	3 (+5VDC encoder input)
Wire no. 4	must be connected to	4 0 Vdc encoder lead/GROUND)
Wire no. 5	must be connected to	5 (encoder lead A)
Wire no. 6	must be connected to	6 (encoder lead B)
Wire no. 7	must be connected to	7 (self-alignment)

Warning: Improper wiring can result in damage to the rotator circuitry when the power is swiched on.
THIS IS NOT COVERED BY THE WARRANTY.

2.4 Rotator cable inspection

Ensure the cable is correctly wired before connecting it to the controller.

2.5 Preinstallation check

! Warning, use only CW and CCW switch while preinstallation check is in progress.

Switch power ON, display will show PHH and after than the rotator position.

Fully depress the CW lever switch for 1-2 seconds. the rotator should start to move in the CW direction. Release the switch and try the same test for CCW. The opposite rotation will be a little delayed by the preset delay time, which is normal. Note the controller display during this test. The readout should increase for CW and decrease for CCW. If these tests give incorrect results, refer to the troubleshooting section of this manual. If the results are correct, test full rotation to the electronic limits in both CW and CCW directions. When this test has been performed turn the rotator to 000 degrees with the leverl switches. Then test the preset feature by setting a new direction with the preset knob. Observe that the rotator will turn to that position and stop. The optimiser feature will ensure that travel to the preset position is always in the shortest manner.

2.6 Troubleshooting

- **Power**
 - Check the presence of the house power at power outlet;
 - Check that the power cable plugs is correctly connected.
 - Check the fuse. If it's blown, replace it with one of the correct value and switch power on. If it blows again, the user contacts the local service agent.
- **Motor turns in the wrong direction**
 - If while you were pushing CW switch the rotator started in counter clock wise sense, then the motor is getting reversed DC polarity. Change over the motor wires.
- **Rotator follow the right CW and CCW commands but display show the opposite.**
 - the controllerr is getting reversed encoder pulses. Change over the encoder wires.
- **Rotator follow the right CW and CCW commands but display don't change.**
 - With a digital voltmeter, check the presence of +5Vdc on the motor board, lead no. 4
If +5Vdc is not there, check the rotator cable connections/continuity.

2.7 Rotator installation

This rotator is designed to be installed inside a tower, make sure that your antenna mast charge antenna load and rotate trough a trust bearing. This will make you life easy in case of rotator failure.

Before drilling holes in the mounting plate, place the rotator inside the tower and adjust its position so that there will be no interference between rotator body and tower.

Put the antenna mast inside the mast clamp and lock centrally. The centre axis line must be within 0.5° of true.

By a pen, mark the position of the mounting holes on the mounting place, remove the rotator, and drill the holes .

Use the four bolts with washers and self-locking nuts to secure the rotator on the mounting plate.

Before tightening the bolts, insert the antenna mast in mast clamp, turn the rotator for 1 revolution and adjust its position until the central axis line is within 0.5° . Now tighten the bolts.

Note: Keep you rotator base dry, make sure that your tower rotator plate has enough drainage holes. Your rotator could get moisture in the base bell from the water standing on the plate. If your tower rotator plate doesn't have drainage holes and you can't drill some, than put some washers between the rotator base and the tower rotator plate.

2.8 Antenna direction ajustement

Antenna rotator alignment is mechanical. After the antenna is installed on the mast, turn rotator to the desired bearing. Unlock the bolts on mast clamp and with a magnetic compass turn the antenna mast until the antenna beam direction is like that shown on the rotator control box. Lock the antenna mast with the mast clamp bolts. The antenna beam direction now is fixed. If you want to change it, you must rotate the antenna clamp on antenna mast.

2.9 Rotator maintenance

The worm-gearred motors are lubricated for life and no maintenance is required. If you live in an industrial zone or sea area, after a time you may have some corrosion to the outer casing. Rotators are coated with anticorrosive paint at the factory and if repainting is necessary, use ordinary anticorrosive paint for ferrous metal.

An IP67 connector is provided for rotator connection.

Section 3

Principles of operation

3.1 Rotator

The rotator is manufactured with a worm-wheel geared motor driven by a high torque dc motor. This method, normally used in heavy duty industrial and professional machinery, permits a very high reduction ratio, with high power torque with both low power motor drive and high brake torque, due the self-braking property of the worm-wheel geared motor.


3.2 Electrical configuration

3.2.1 Indicator circuit

Three digit, 7 segments led display are used for the direction indicator and the antenna direction is displayed in degrees.

3.2.2 Motor power switch

The motor is powered through two 10 Amps long life relais. Limit switches are provided in the bottom basement.

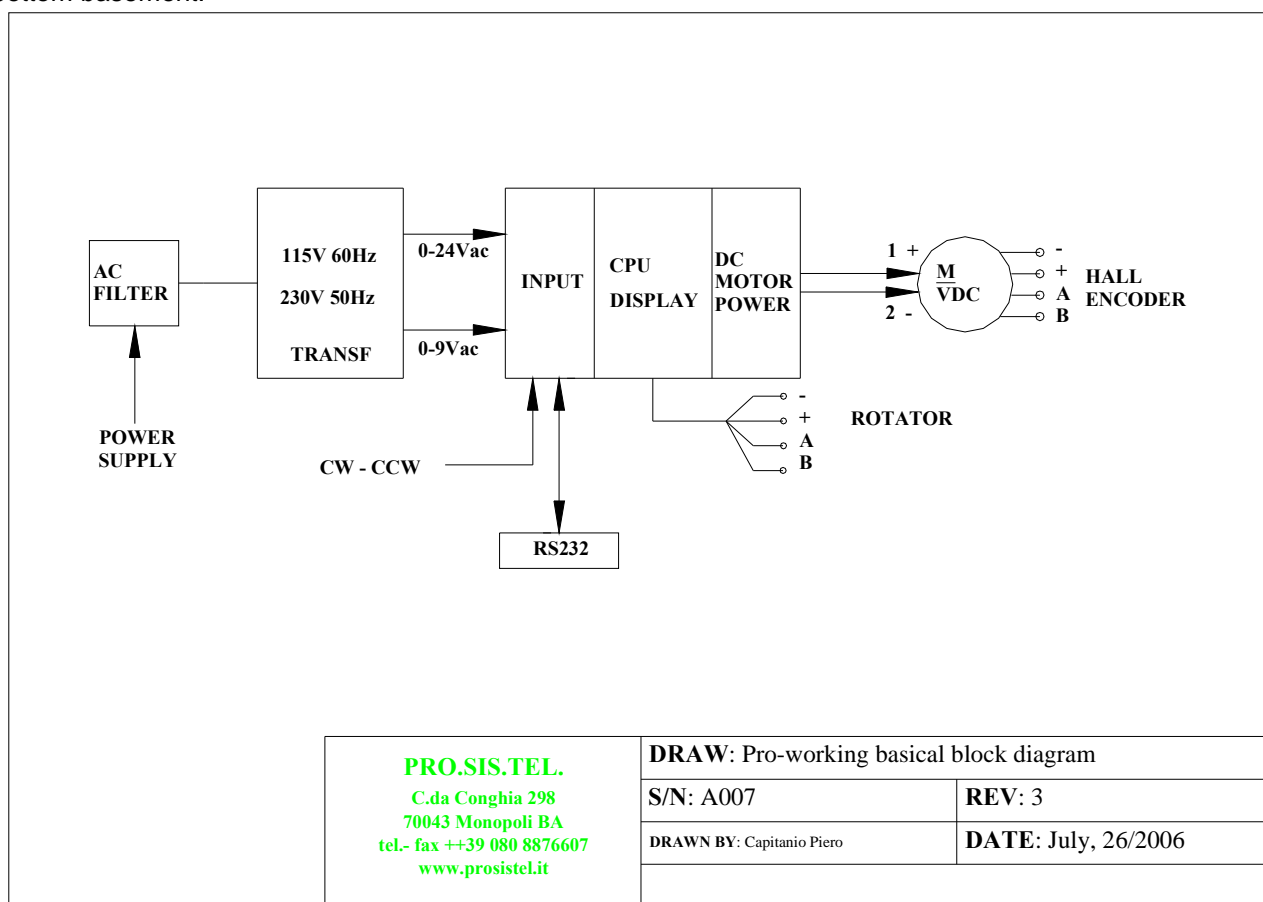

Section 4

Specifications

4.1 Worm gear box

The worm gear box has a waterproof aluminium case conforms to the CEE 89/392/CEE standard.

4.2 Motor

The motor, in a steel waterproof case conforms to CE rules.

4.3 Control unit

Microprocessor controlled digital readout display having RS232 built inside.
The controller has ferrous parts painted. Conform to CE and FCC rules.

Rotators Specifications

METRICS

Model	Wind area m ²	Motor torque Kg/cm	Brake torque Nm	Vert. load Kg	Rotor speed 360°	Variable speed	Rotation range	Motor Volts	Wires N.	Redout	RS232	Preset	Kg
PST 641D	1.2	1.000	400	450	± 60"	yes	360	12 Vdc	5	digital	yes	yes	10
PST 2051D	2.5	2.000	600	650	± 60"	yes	360	12 Vdc	5	digital	yes	yes	14
PST 61D	3.9	3.800	1.180	850	± 90"	yes	360	12 Vdc	5	digital	yes	yes	25
PST 71D	8.8	6.000	2.172	1.000	± 120"	yes	360	24 Vdc	5	digital	yes	yes	35
PST 110D	10	6.000	3.400	1.200	± 150"	yes	360	24 Vdc	5	digital	yes	yes	45

US/UK

Model	Wind area Sq.ft	Motor Torque Lbs ft	Brake torque Lbs ft	Vert. load Lbs	Rotor speed 360°	Variable speed	Rotation range	Motor Volts	Wires N.	Redout	RS232	Preset	Lbs
PST 641D	12	73	703	990	± 60"	yes	360	12 Vdc	5	digital	yes	yes	22
PST 2051D	25	147	1.000	1.430	± 60"	yes	360	12 Vdc	5	digital	yes	yes	31
PST 61D	39	280	2.100	1.870	± 90"	yes	360	12 Vdc	5	digital	yes	yes	55
PST 71D	88	1.032	4.032	2.200	± 120"	yes	360	24 Vdc	5	digital	yes	yes	77
PST110D	100	1.032	6.050	2.200	± 150"	yes	360	24 Vdc	5	digital	yes	yes	110

Note:

It is a good practice do not overpass the 50% of the maximum rotator wind load.

Section 5

With this user's manual a CD is provided.

CD contains several folders in which there are some files with some extra informations about your antenna rotator, as a copy of this manual as well.

We suggest you pay attention on such extra informations, from which you can learn more about this antenna rotator, but in mean time they are intended for expert technicians, so make sure to well understand what you are reading before to do anything.

- **RS232 philosophy.pdf**

This file contains extensive informations about the RS-232 door, as communication protocol/instructions, full calibration procedure and more, as well.

If you are software expert with such informations you can develop a rotator software drive by yourself.

If your favorite log software still doesn't have a drive for your new D controller, copy this file to your log software writer, asking him to write a D drive in his log software.

Please read it carefully.

- **RotorVxxx.exe** (tool software)

This executable software allows you to change your rotator parameters to suit your personal choice. It is intended as a tool rather than a program to control the rotator remotely. Be very careful using the program and ensure that you are competent to make changes before making them. If running it you get all windows filled with question marks, means that software missed the COM door, fix it before to continue. Insert the CD in your computer, open folder named "setup", run "set up" file and follow instructions step by step.

Service issues raised by incorrect use of the software are not covered by the warranty

- **RotorVxxxReadme.pdf**

This file contains extensive information and instruction about the use of the "RotorVxxx.exe" tool software.

Please read it carefully.

- **Rotor.ini**

This file contains the COM port number. If you need to use a COM port number that is not included in the software tool, open this file, overwrite in there the COM port number and save it.

Dear customer,


thank you for purchase a **Pro.Sis.Tel./BigBoyRotators**, if you are happy with it please talk to everybody, if you are unhappy with it please talk with us.

Your feed back and suggestions, will be very appreciated, to improve our products.

**Annamaria Fiume
IK7MWR**

MADE IN ITALY

Protect your environment, in case of discontinuing of this unit, consign it to specialized metal waste collector.

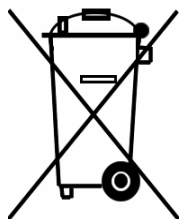

DICHIARAZIONE DI CONFORMITA'

DECLARATION OF CONFORMITY

according to EN45014: 1998

CE

Si dichiara che il prodotto: Rotore d'antenna mod. PST110D è conforme ai requisiti essenziali delle seguenti direttive comunitarie:

This product: Antenna rotator model PST110D is fully conforms to the council directives:

- 89/336/CEE
- 92/31/CEE
- 93/68/CEE marcatura CE per prodotti destinati ad essere utilizzati entro taluni limiti di tensione
- 93/97/CEE
- 73/23/CEE

recepiti dai seguenti decreti legislative as amended by italian law.

- Nr. 791 del 18/10/1977 attuazione 73/23
- Nr. 615 del 12/11/1996 recepimento direttive 92/31/CEE, 93/68/CEE, 93/97/CEE
- Nr. 626 del 25/11/1996 attuazione della direttiva 93/68/CEE
- Nr. 277 del 31/07/1997 modifiche alla Nr. 626 del 25/11/96

E' conforme ai requisiti di prodotto indicati dalle seguenti norme armonizzate:

It is conforms to product's requirements as indicate in the following armonized rules:

- CEI EN 50082-1 Compatibilità elettromagnetica, norma generica sull'immunità. Ambienti residenziali, commerciali ed industria leggera.
- CEI EN 50081-1 Compatibilità elettromagnetica, norma generica sull'emissione. Parte 1, ambienti residenziali, commerciali e dell'industria generica.
- CEI EN 60335-1 Sicurezza degli apparecchi elettrici d'uso domestico e similare. Parte 1, norme generali.


Esso è certificato FCC classe B.

It is class B FCC certified.

In fede

Annmaria Fiume

Monopoli li, 01/07/2010

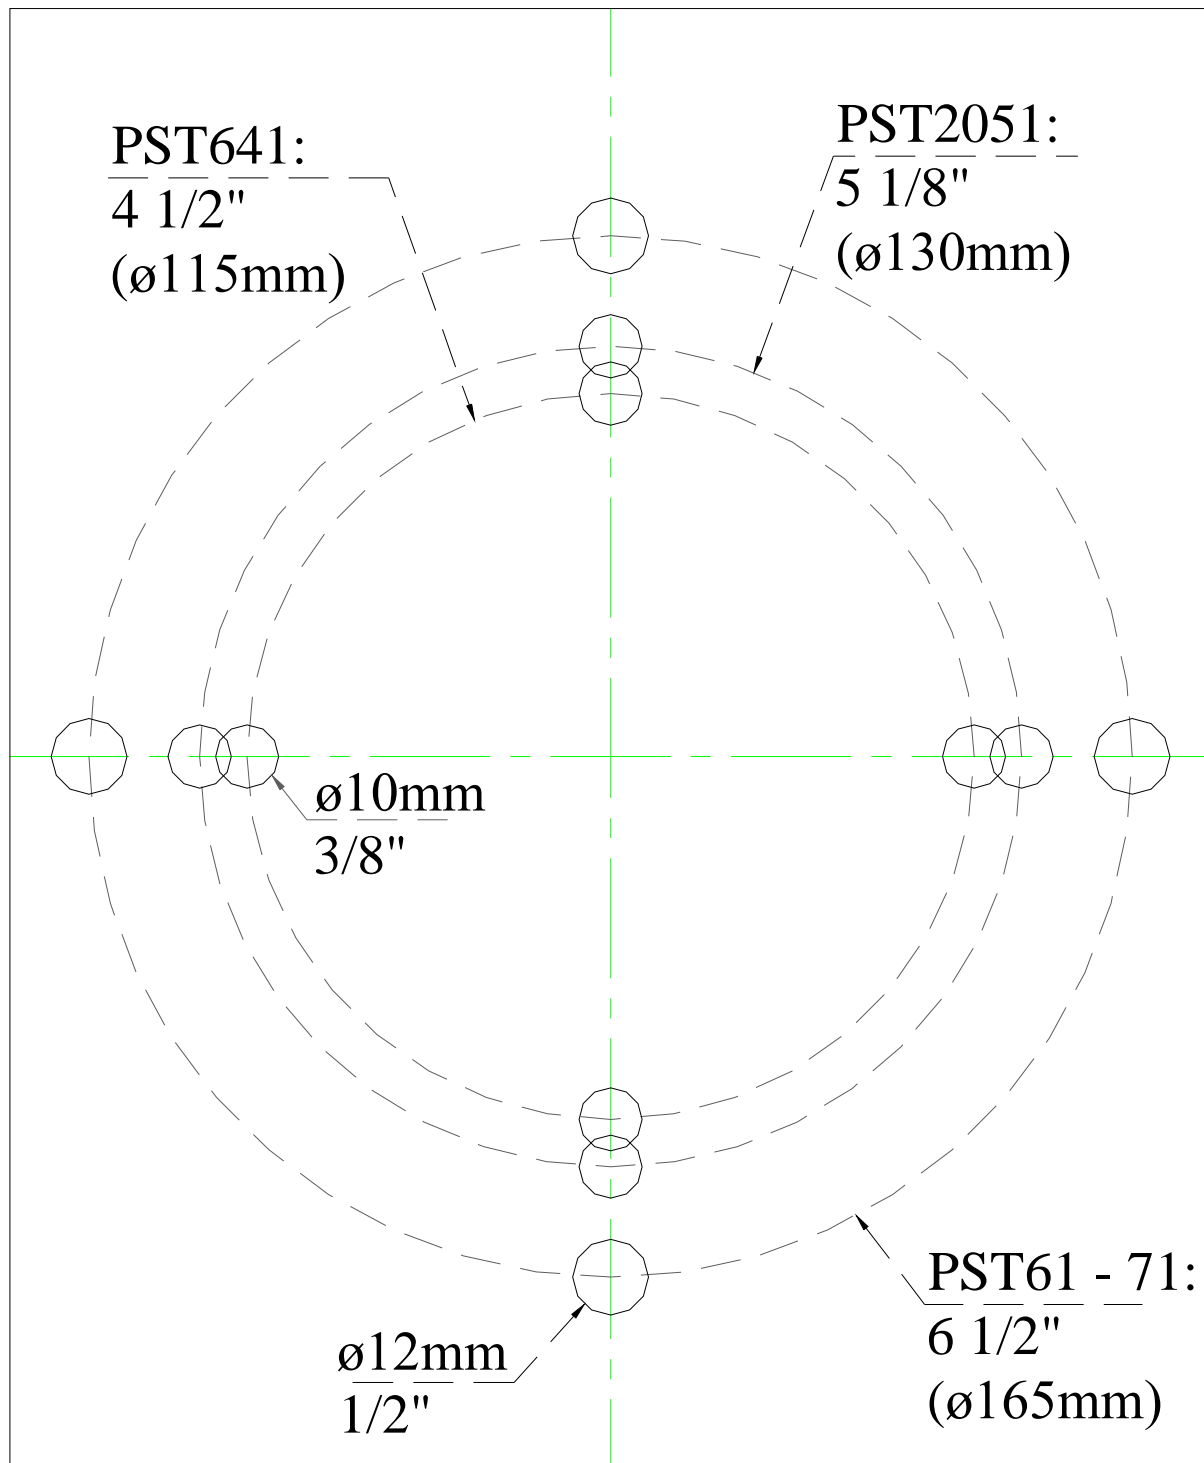





PRO.SIS.TEL.

C.da conghia 298
70043 Monopoli BA
ITALY

www.prosistel.it

DRAW: Rotor plates holes diagram

Note – this drawing is not to scale

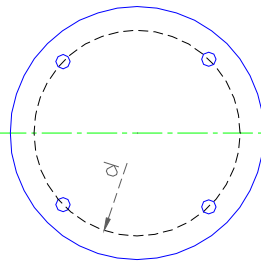
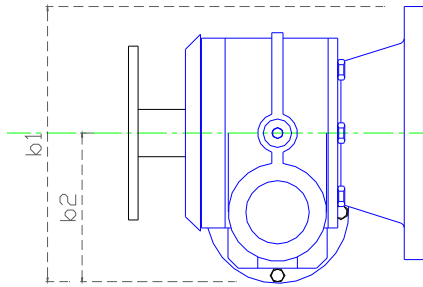
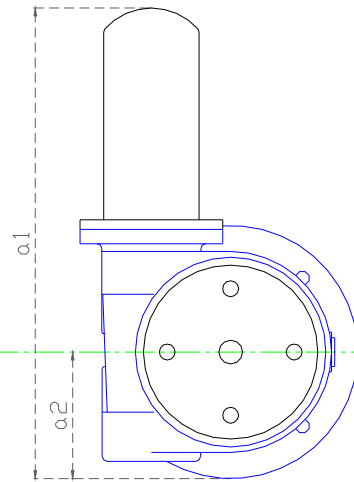
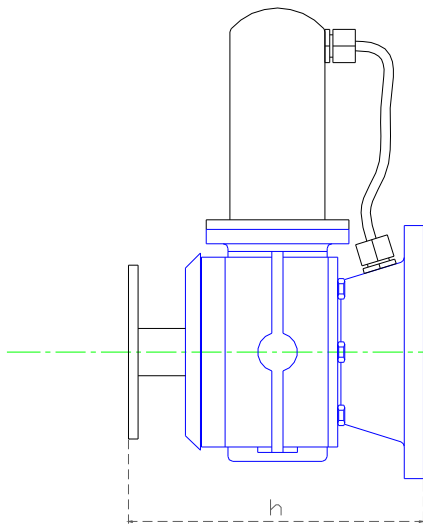


Fixing plate
down view


	a1	a2	b1	b2	d	h
PST641	280	70	150	90	115	170
PST2051	298	80	175	95	130	186



PRO.SIS.TEL.
C.da Conghia 298
70043 Monopoli BA ITALY
tel. ++39 080 8876607
www.prosistel.it

Scale: 1:1	Drawn by: Capitanio Piero	Draw: PST641-2051 general dimensions
Date: May 05/2004	Checked by:	
	Rev:	
	Note: measurements in mm	

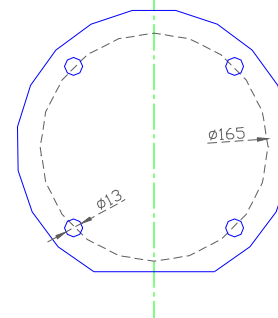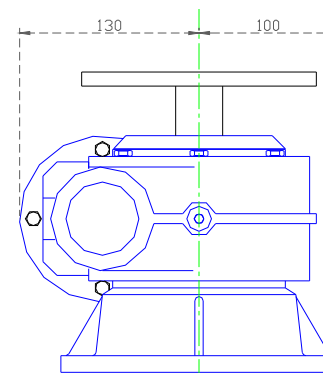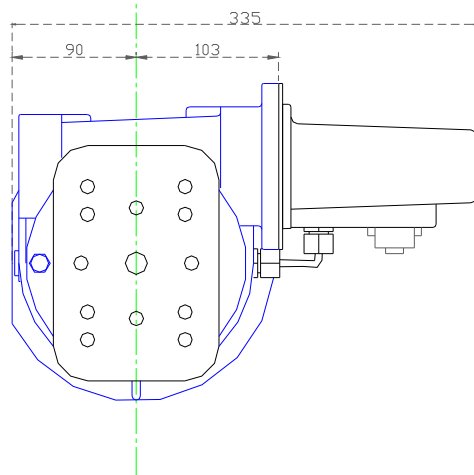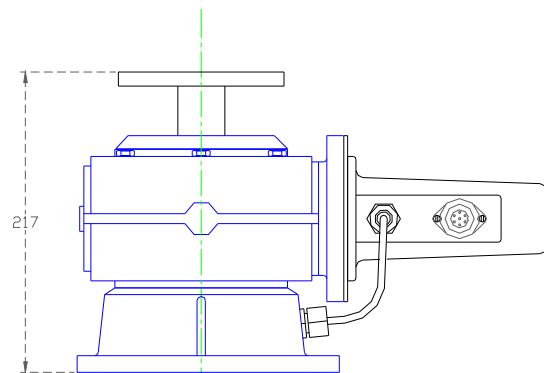


Fixing plate
down view

PRO.SIS.TEL. C.da Conghia 298 70043 Monopoli BA ITALY tel. ++39 80 8876607				Draw: PST61D, general dim.	
		Scale: 1:1		Drawn by: Capitano Piero	
		Date: Feb 02/2007		Checked by:	
				Rev:	
				Note: measurements in mm	

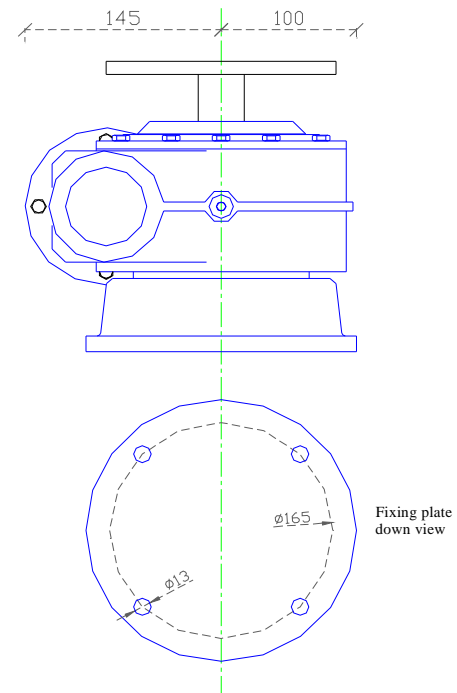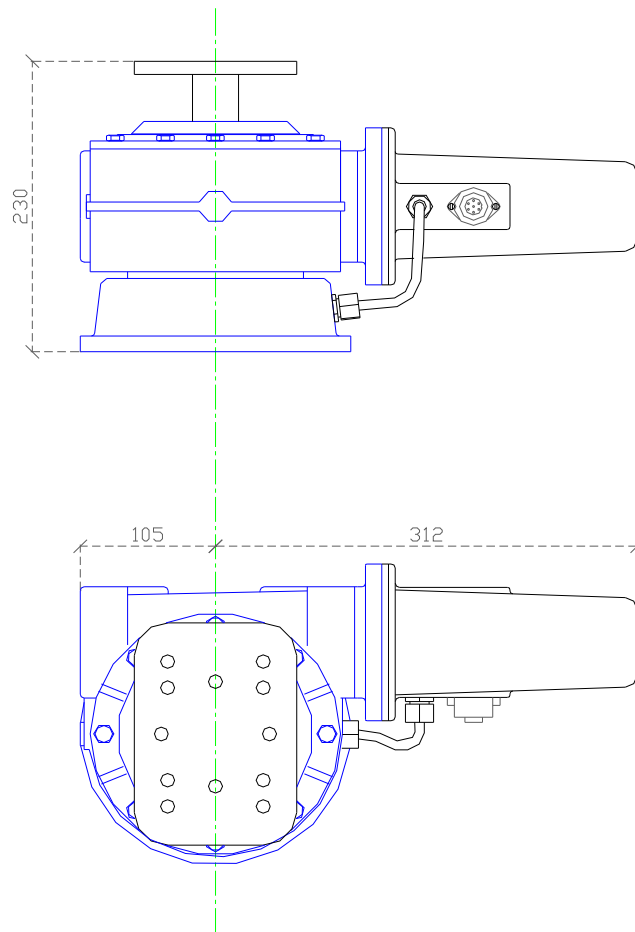





PRO.SIS.TEL.
C.da Conghia 298
70043 Monopoli BA ITALY
tel. ++39 80 8876607

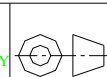




Draw: PST71DC general dimensions

Scale: 1:1	Drawn by: Capitano Piero	Serial number:
Date: April 09/2008	Checked by:	Rev:


Note: measurements in mm

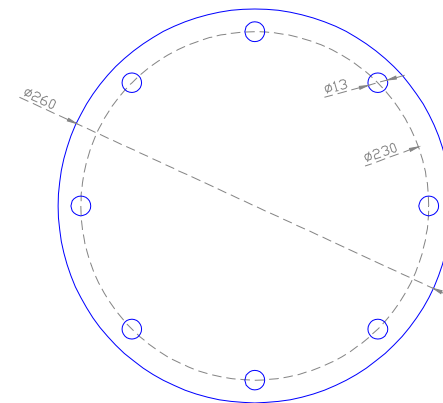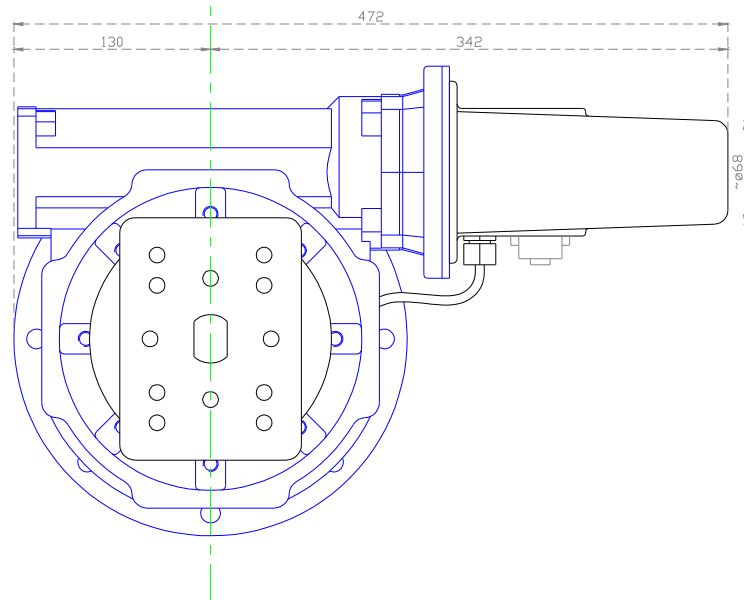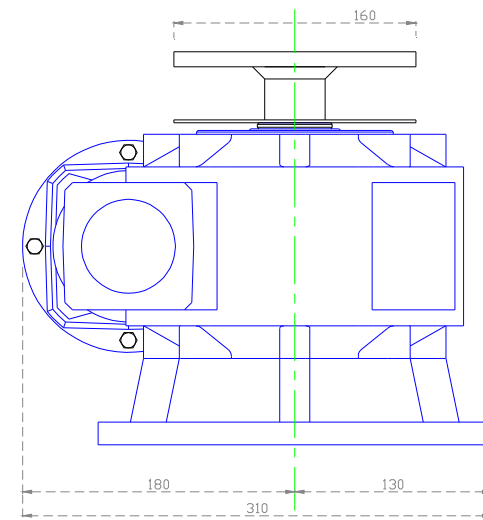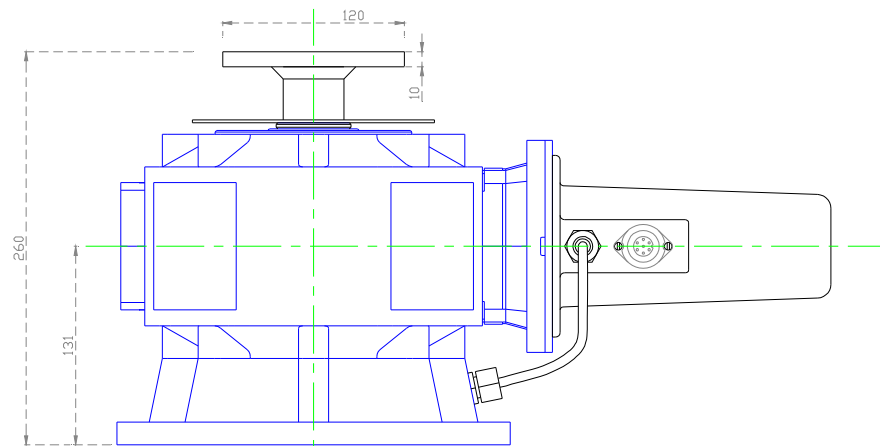

	Company: Pro.Sis.Tel.
	Draw: PST110D-Dimensions
	Date: Sept. 03/2010
	Rev:
Note: Quotes in millimeters	

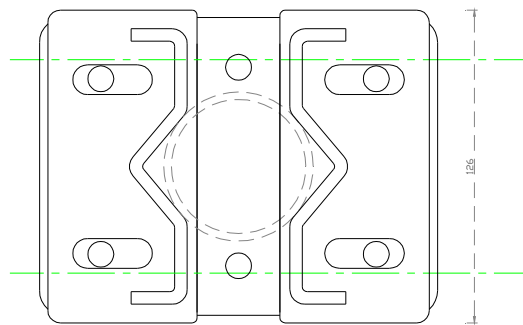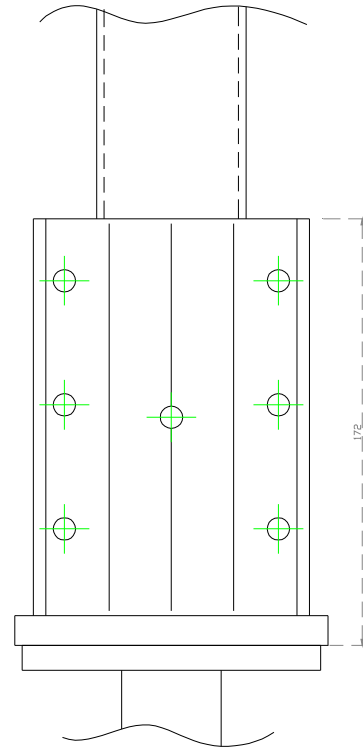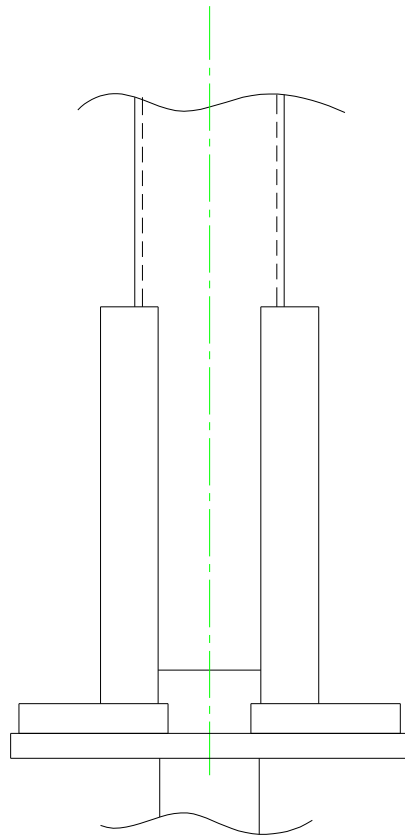

COMPANY: PRO.SIS.TEL.
DRAW: MastClampConfiguration
MATERIAL: Fe360 zinc plated
DATE: Sept. 03/2010

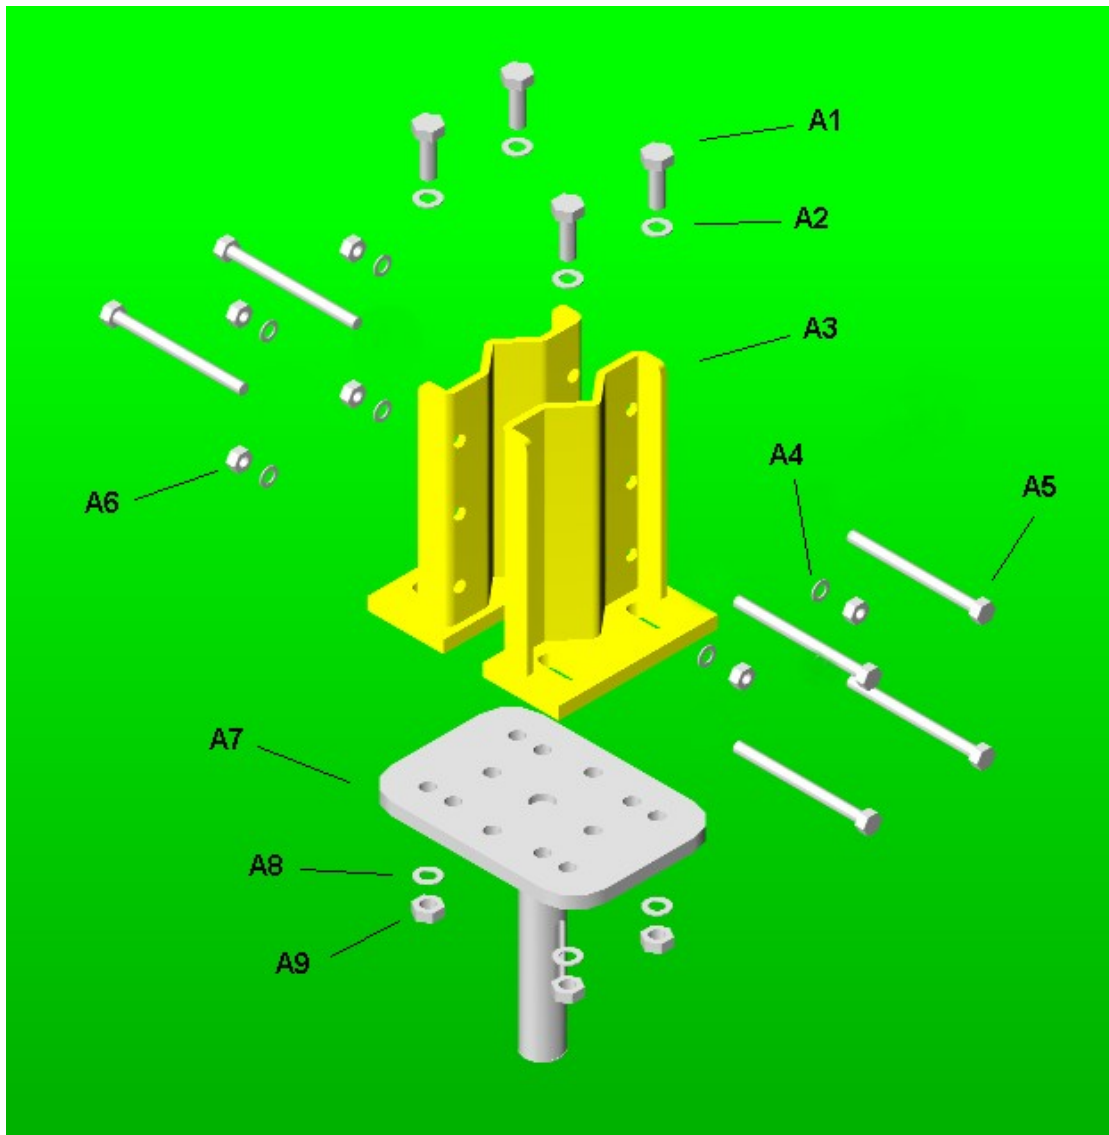

A1- Bolt, stainless steel, M10x40mm	x 4
A2- Washer ø10mm, stainless steel	x 4
A3- Mast clamps 3", zinc galvanized steel	x 2
A4- Split washer ø8mm, stainless steel	x 6
A5- Bolt, stainless steel, M8x100mm	x 6
A6- Stainless steel nut, M8	x 6
A7- Rotator shaft with plate, zinc galvanized steel	x 1
A8- Split washer ø10mm, stainless steel	x 4
A9- Nut M10, stainless steel	x 4

Warning

Protect your equipment

The rotator and controller are electronic devices containing sensitive components that could be damaged from lightning, heavy electrostatic charges or electric fields or something else.

Make sure to disconnect rotator cable from the controller and controller power cord when not used as you do with your coax cables when a tunder storm is approaching.

Pay attention, **Protect your equipment** because if happens it isn't covered by the warranty.