



SLOW JUICER

User Manual

Model:R-450 VitaMax



Please read these instructions carefully before use.

Safety Precautions:

When using the electrical appliances, basic safety precautions should always be followed including the following:

1. Please carefully read the instructions and components before operating.
2. This appliance is intended for household use only.
3. Do not use the appliance other than intended or specified purposes.
4. Make sure the voltage mark on the appliance corresponds to the voltage in your home before plugging in the power cord in order to avoid damage to the appliance.
5. To protect against electrical shock, do not place cord, plug, or base unit in water or other liquids. Don't operate machine with wet hand or place on a wet working place. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Unplug from outlet when not in use.
8. It is prohibited to plug or unplug with wet hand to avoid electric shock.
9. To disconnect, remove plug from the electric outlet.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Check the strainer every time you want to use the appliance. If you detect any cracks or damage, do not use the appliance and contact the nearest service centre.
13. Always securely clamp in place all parts before the motor is turned on. Do not unfasten while appliance is in operation.
14. Avoid contacting moving parts. Make sure the motor stops completely before disassembling.
15. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
16. Do not let the appliance go on working when you move away.
17. Do not disassemble the base.
18. Do not put any foreign materials into the machine.
19. Do not use for more than 30 minutes continuously.
20. It is prohibited to let the machine operate in idle state. Idling time can't exceed 2 minutes or it will damage the spiral blade.
21. During operation, please feed the food material slowly to avoid clogging rotation. If clogging happens, please stop working immediately. Reverse it for a while then open the lid to take out the food and then it can work again.
22. Please use the special pressing stick to feed food into the feeder opening.
23. Before use, please cut ingredients into small pieces and take out core or it will cause clogging.
24. It is prohibited to insert too big or too hard food materials. If those foods have been put into the feed tube and thus blocking the spiral blades, immediately press the reverse button to anti-block. If blocking rotation protection happens


during operation, please unplug the power and clear up and 10 seconds later, you connect the power to use it again.

25. Do not use too hard food materials. Cereals should be carefully immersed and soaked in water before it can be fed into the feeder opening. This can avoid damage to the machine.
26. When using, if there are any abnormal sound, smell, overheating, smoke, etc., immediately turn off the power and apply to the service center for maintenance and repair. This can avoid electric shock, electricity leakage and fire hazard.
27. It is prohibited to scrub and wash the machine body on water-filled platform or pour water to wash the inside of the machine to avoid fire, electric shock or damage to machine body, etc.
28. When making the carrot juice, please pay attention to the size of carrots, the size should be no more than 80mm in length, no more than 15mm in width, no more than 15mm in height. Interval feeding time should be no less than 5 seconds.

SPECIFICATIONS

| | |
|--------------------------|------------------|
| Rated Voltage:AC220~240V | Rated Power:150W |
| Rated Frequency:50HZ | Speed:80RPM |

ATTACHMENT LIST

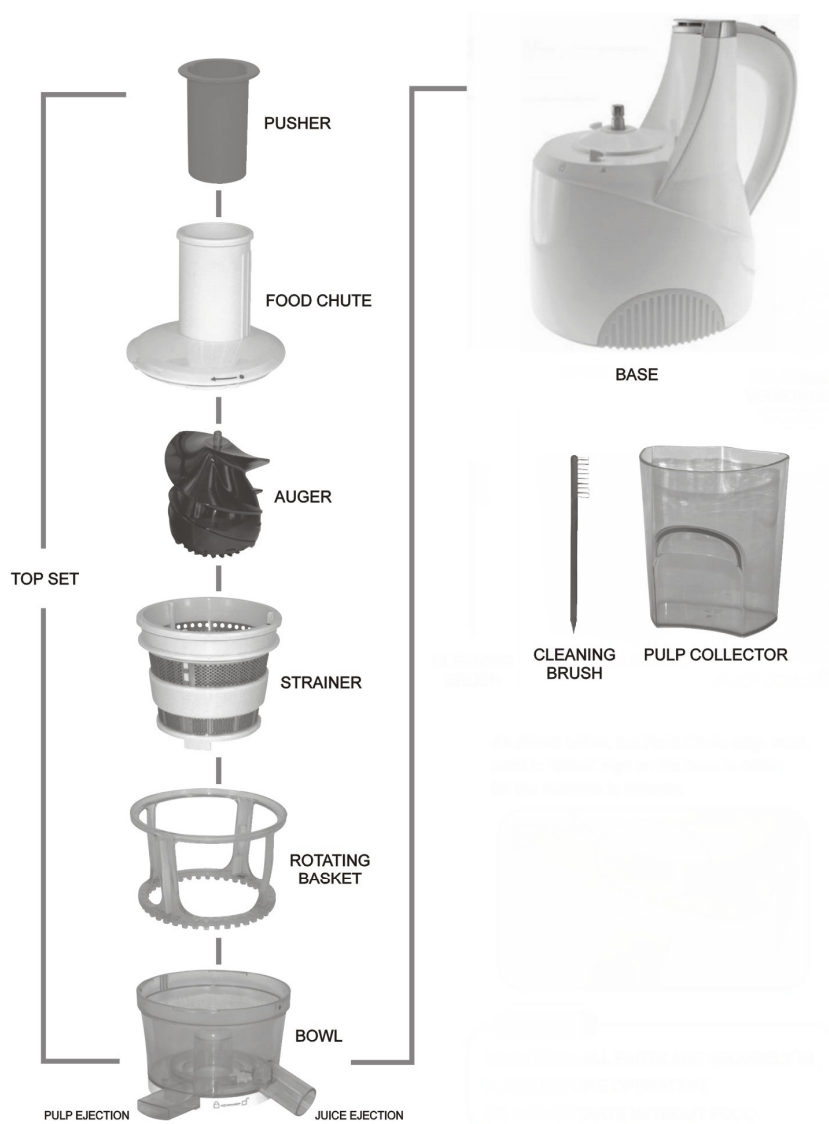


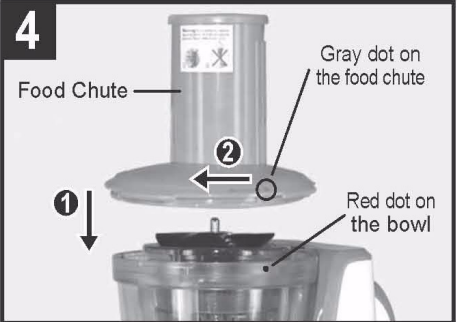



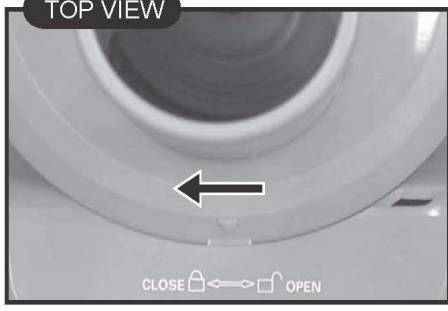
What is a Slow Juicer ?

The slow juicer is a juice extractor that uses Low Speed Technology System (LSTS). It is called a slow juicer. Because it operates at only 80~90RPM and uses a mere 150watt of energy, instead of 1,000~24,000RPM and up to 1,500watt of energy like a typical centrifugal "High Speed" juicer. But don't let the name fool you. The slow juicer actually juices faster than typical juicer and expels much drier pulp with a much higher yield. The method of extraction is masticating and pressing, using the screw-like auger like mortar and pestle. The action crushes and presses the food, releasing its deep-seated nutrients and enzymes. It also breaks up more of phytonutrients, resulting in a richer colored juice that retains more vitamins and minerals. The slow RPM ensures that it does not disturb the cellular structure of fruits and vegetables, eliminating oxidation and separation. Thus, it preserves the precious enzymes and nutrients that are closed to its natural form.


HOW TO ASSEMBLE

The Slow Juicer is virtually assembled straight out of the box. We suggest taking it apart and wash the removable parts in warm water with a biodegradable, non-abrasive liquid detergent before the first use. Rinse thoroughly with water and allow to air-dry. This will eliminate any traces of dust or residue from manufacturing or shipping. Never submerge the Slow Juicer motor base in water or any other liquid.


| | |
|---|--|
|  <p>1</p> <p>Bowl</p> <p>Base</p> |  <p>2</p> <p>Red dot on the strainer</p> <p>Strainer</p> <p>Rotating Basket</p> |
| <p>1. Assemble the bowl on the base. Make sure the bowl fits all the way into the shaft of the base. Twist the bowl to close.</p> | <p>2. Assemble the strainer and rotating basket into the bowl. Make sure the red dot and the red arrow align.</p> |
|  <p>3</p> <p>Auger</p> |  <p>4</p> <p>Food Chute</p> <p>Gray dot on the food chute</p> <p>Red dot on the bowl</p> |
| <p>3. Place the auger in the center of the bowl.</p> | <p>4. Place the food chute onto the bowl. Make sure the gray dot on the food chute and the red dot on the bowl align.</p> |

| | |
|--|---|
|  <p>5. Make sure the gray dot on the food chute points to close sign on the base.</p> |  <p>6. Reverse the step carefully when disassembling.</p> |
|--|---|


As shown below, the Food Chute edge must point to “close” sign on the base in order for the machine to operate.

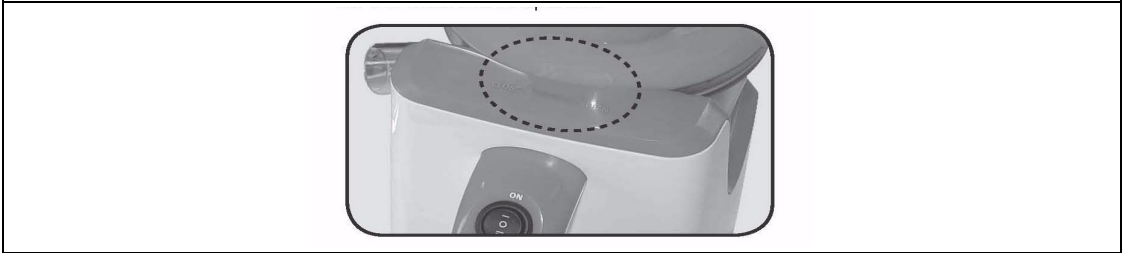

WARNING: Make sure all parts are securely in place before operation. Do not operate without food.

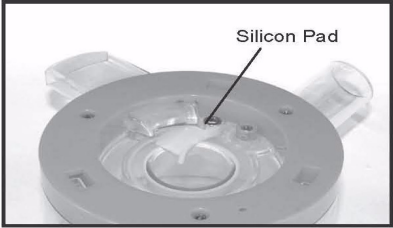
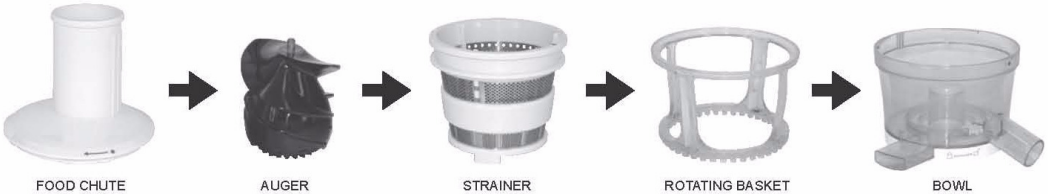
| | |
|--|--|
| <p>NOTE: Under the bowl, there is a silicon pad that prevents juice from exiting through the pulp ejector. When using the Slow Juicer, make sure the silicon pad is firmly in place. You may slide the pad out when cleaning.</p> |  |
|--|--|

OPERATION

| | |
|---|--|
| <p>1. Once all parts are securely in place, connect the power cord to an approved power source.</p> | |
| <p>2. Place the pulp container under the pulp ejection and a glass under the spout for juice.</p> | |
| <p>3. The Slow Juicer has three settings: ON – This starts the motor for juicing. OFF – This stops the operation. REV – This moves the auger in the opposite direction.</p> |  |

4. Before placing food in the juicer, please make sure all foods are thoroughly washed and cleaned, cut all foods to an appropriate size to easily fit into the food chute. Please remove any hard seeds before juicing.
 5. For the most part, when placing food into the Slow Juicer, the auger will pull in the food and start juicing immediately. You will need the included pusher with some foods.
 6. The Slow Juicer has a unique simple cleaning process when switching between different flavors of juices and fruits. When you are ready, simply pour water through the food chute. This will rinse out most of the residue and you are ready to keep juicing.
- NOTE: This is not an alternative to a complete cleaning of each disassembled part.**

Cleaning and Maintenance

- | | |
|---|--|
| 1. Switch off the machine and disconnect from power source. |  |
| 2. Turn the food chute in an anti-clockwise direction to unlock. | |
| 3. Twist the bowl anti-clockwise to the unlock position and lift out the entire section. | |
| <p>4. Disassemble the upper unit in the following order:</p> <ul style="list-style-type: none"> - FOOD CHUTE - AUGER - STRAINER - ROTATING BASKET - BOWL | |
|  | |
| 5. Using the included cleaning brush, thoroughly clean each of the disassembled parts using warm soapy water. Do not use abrasive cloths or liquids. | |
| 6. Do not rinse the Slow Juicer base. | |
| 7. Dry all attachments before reusing. | |

Helpful Tips:

Due to the powerful staining properties of the carotenoids that are found in many vegetables especially carrots, we suggest the following cleaning procedures:

1. Biodegradable soap in enough warm water to cover parts.

2. 1 part warm water to 1 part cider vinegar.
3. 1/2 small box baking soda in enough warm water to cover parts.
4. 1/4 cup bleach in sink full of warm water.
5. Never use strong household cleaners, ammonia or abrasives.
6. Bleach helps remove the stains caused by some fruits and vegetables. However, if you prefer NOT to use bleach, clean the parts as soon as possible after use.

TROUBLESHOOTING

| Problem | Solution |
|------------------------------------|--|
| If machine does not operate | <ul style="list-style-type: none"> - Check power cord and power source. - Check that all parts are assembled correctly. |
| If machine jams or stops operating | <ul style="list-style-type: none"> - Check that the food chute is clear and not blocked. - Hard seeds should be removed before juicing. - Turn machine off and switch to reverse for 3 seconds. - Disassemble upper section and clear pulp. - Unplug the power cord, remove big food and clean it then connect again the power. It can start to work again. |

NOTE: Do not throw away the appliance with the normal household waste at the end of its life. Hand it in at an office collection point for recycling. By doing this, you help to preserve the environment.

