

User Manual

Optical Fiber Arc Fusion Splicer

SWIFT S5

Read this service manual carefully
before running S5.

Table of Contents

I . For Your Safety	4
II . Specifications and Components	8
1. Specifications	8
2. Components	9
3. Preparations for splicing	10
III. Product Description	11
1. External appearance of S5	11
2. Arc fusion splicing assembly	13
3. S5 Auto Stripper	14
4. S5 Cleaner	19
5. S5 Cleaver	21
6. S5 Sleeve Heater	27
IV . Operation	32
1. Supplying power	32
V . Menu Description	35
1. Function buttons	35
2. Turning on S5	36
3. Installing the protective sleeve loader / cooling tray	37
4. Placing the fiber in the splicer	38
5. Inserting fiber into the protection sleeve	38
6. Splice procedure	39
7. Removing spliced fiber	43
8. Installing the sleeve on the sleeve heater	43
9. Heating the protection sleeve	44
VI . Maintaining Splice Quality	45
1. Cleaning and examination prior to splicing	45
2. Regular maintenance and cleaning	47

VII. Menu	49
1. Splice menu	49
2. Heater menu	60
3. Auto Stripper menu	64
4. Additional functions for splice	66
5. Checking splicing result	70
6. Calibration	73
7. Electrode	80
8. Locking menu	83
9. Settings	83
10. Information	89
VIII. Data Sync	91
1. Operational environment and basic structure	91
2. Key functions: Setting the port	93
3. Key functions : Checking the memory data	94
4. Displaying Swift S5 parameters	97
5. Others	99
IX. Error Messages	100
1. FIBER DIRTY	100
2. REPLACE POSITION	100
3. TOO LONG FIBER	101
4. FIBER OVER ANGLE	101
5. LOSS LIMIT OVER	101
6. FIBER THIN ERROR	102
7. FIBER THICK ERROR	102
8. CORE BUBBLE	102
X. How to deal with splicing problems	103
1. When the splice loss is too high	103
2. Abnormal operation of arc fusion splice	104
XI. Q&A	105
1. Power	105
2. Splice operation	106

3. Operation of the tube heater	107
4. Maintenance	108
5. Other settings	108
XII. Warranty Period and Contact Information	109
1. Warranty period and services	109
2. Before sending the arc fusion splicer to us,	109
3. Information required for repair	109
4. Transport	110
5. Repair	110
Product Warranty	111

I . For Your Safety

Swift S5 has been designed and produced to maximize the user's convenience for both outdoor and indoor works, so its operation is easy and simple. However, we strongly recommend our customers to read this service manual carefully prior to running the device in order to prevent any accident and breakdown because improper handling of Swift S5 may cause serious danger. This service manual provides all the necessary information to ensure splicing safely.

- Keep this service manual with the device at all times

Ilsintech co. It is not liable for any personal injury, physical loss and damage to device caused by inappropriate use or remodeling of the equipment.

Warnings

Please, turn off the power of the device immediately and contact Ilsintech co. ltd if any of below mentioned incidents occurs while operating the machine.

- Fumes, bad odor, noise or overheating
- Liquid or foreign substances falls into the device
- The arc fusion splicer is dropped or damaged

Use the power cord provided with the device. Using an inappropriate AC power cord may cause fire, electric shock or injury.

DO NOT touch the electrode when the power of S5 is ON. The high voltage and temperature may cause electric shock or burn.

Connect the AC power cord to the battery charger provided with the device and wall outlet. Check to ensure no dust or foreign substance on the AC plug electrode before connecting it.

Unsafe connection may cause the occurrence of fumes, fire or damage to the device resulting in fire or serious injury or death.

Warnings

Apply correct voltage.

The correct input AC power to the adapter is AC 100-240V and 50-60Hz.

Examine the input AC power before applying. Applying incorrect AC power could result in electric shock, equipment breakdown, serious injury or even death. Abnormally high AC voltage or irregular frequencies are often generated by AC generator; hence it is necessary to check the AC output power with a circuit tester. Since abnormal high voltage and frequencies may result in serious electric shock, injury, death or damage to the equipment, it is important to regularly check the operation status of the generator before use.

DO NOT excessively pull, amend, misuse or apply heat to the AC power cable provided by the company. Using a damaged power cable may result in fire or injury.

Connect 3-core Ac power cord. DO NOT use 2-core, cable and plug.

DO NOT touch the AC plug, AC power cable or the arc fusion splicer with wet hands. It may cause an electric shock.

DO NOT disassemble the AC adapter, battery or the arc fusion splicer. Any amendment or changes of S5 may cause fire, electric shock or injury.

When using an external battery pack, follow instructions below.

- Using improper external battery may cause fumes, damage to the device, burn, serious injury or even death.
 - DO NOT throw the battery into fire or a trash incinerator.
 - DO NOT charge the battery near flame or fire.
 - DO NOT excessively or apply physical shock to the battery.
 - If the batter is not fully charged or green LED is not turned on in about six hours, stop charging immediately and contact Ilsintech co. ltd. DO NOT put any object on the AC adapter while it is being charged.
-

Use the adapter (S511) and battery pack (S513) that are provided by the company at all times. Using a different type of battery pack may cause fumes, fire, and damage to the device, injury and death.

Warnings

Use the battery adapter provided by the company at all times.
DO NOT use other type of AC power cord.

Make sure that no short circuit is made in the terminal of the AC adapter (S513) and the battery. Excessive electric current may cause damage to the machine and injury.

DO NOT run S5 in an environment there is flammable liquid or toxic gas. The electric arc of the arc fusion splicer may cause fire or explosion.

DO NOT clean S5 using compressed air or gas.

Check the condition of belt to ensure that it has no damaged or worn out parts before transporting the carrier case using the belt. If the carrier case is dropped due to worn out belt, it could damage the machine or people could get hurt.

Make sure to wear protective glasses while performing splicing works. If fiber fragments come into contact with the eye or skin, it can be extremely dangerous.

DO NOT operate the arc fusion splicer at a high temperature or near heat, otherwise injury or damage to the device may occur.

Take extra caution when handling the heater part whose surface is extremely hot. DO NOT touch it by hand and make sure nothing contact it.



: DO NOT TOUCH

The blade of the shear unit is extremely sharp. Be careful not to hurt yourself.



: Danger! High Voltage!



: EXTREMELY HOT



: DO NOT SPARY FREON GAS

Cautions

DO NOT touch the tube heater or the protection sleeve during or immediately after heating them. The hot surface may cause injury.

DO NOT place S5 in an unstable or unbalanced place. The machine may fall, causing injury or damage to the machine.

S5 has to be precisely adjusted and aligned. DO NOT allow the unit to receive a strong impact. Use the supplied carrying case for its transportation and storage. The carrying case protects S5 from breakage, moisture, shake and shock during storage and transportation.

Replace the electrode in a timely manner and maintain it as instructed below;

- Use only a specified electrode.
- Place a new electrode in the correct position.
- Replace the electrodes as a pair.

If the user fails to follow the above instructions, it may cause abnormal arc-discharge, resulting in damage to the machine or degradation in splicing performance.

Use no chemicals other than ethyl alcohol (96% or greater) to clean the objective lens, V-groove, windshield mirror, LCD monitor and body of the machine. Otherwise, blurring, discoloration, damage or performance deterioration may occur. S5 requires no lubrication. The use of oil or grease may degrade its performance and damage to the equipment

DO NOT store the device in a place where temperature or humidity is high. Damage to the machine may occur.

The technical examination of S5 must be carried out by a qualified engineer; otherwise, fire or electric shock may occur. If any problems occur, contact IIsintech co. ltd for repair and maintenance.

II. Specifications and Components

1. Specifications

Subject	Description
Arrangement	Core to core type
Applicable fiber types	SMF(ITU-T G.652), MMF(ITU-T G.651), DSF(ITU-T G.653), NZDSF(ITU-T G.655), EDFA, EI980, possible to splice different kinds of fibers (SM/MM), ITU-T G.657
Applicable diameters of fiber	Clad : 80 μ m ~ 150 μ m, Coating : 100 μ m ~ 1000 μ m(Single)
Cut length	250 μ m (Coat) : 8 ~ 16mm, 900 μ m : 16mm
Splice loss (Typical)	SMF : 0.02dB, MMF : 0.01dB, DSF : 0.04dB, NZDSF : 0.04dB
Splice reflection loss	>-60dB
Operation time	Splice time: about 9 seconds, heating time: about 26 seconds (when using a S-160 (60mm) tube)
Operation programs	Splice mode: 100, Heater mode: 50
Splice result count	Up to 2,000 times
Recommend temperature and humidity range for operation	-10 $^{\circ}$ C to 50 $^{\circ}$ C, humidity : 95%, non-condensing
Recommended temperature range for storage	-40 $^{\circ}$ C to 80 $^{\circ}$ C, 0 to 95% RH
Wind protection	15m/s
Specification	140W \times 225L \times 125H (including the monitor) 2.95Kg (including the battery pack)
Connection terminals for external device	USB, RCA, external power
Power	DC 14.8V battery (5600mAh) pack, 100 ~ 240V AC adapter
External power	Vehicle cigar jack (DC 12V)
Running times when using the battery pack	About 320 times (S513), lithium polymer batteries
Replacement cycle of electrodes	After 2,000 times of splicing

Tension stress test	2N/4.4N (OPTION)
Display	Two CMOS cameras and 4.3" color LCD monitor with touch panel.
Fiber view and magnification	X/Y 300X, 170X

2. Components



S5 Body



S513 Battery Pack



S511 AC Adapter



AC Cord

Other components

- Carrying case
- Service manual

3. Preparations for splicing


Fiber types	0.25 mm	0.9 mm
Fiber protection sleeve	<p><u>Basic sleeve</u></p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>40 mm long</p> </div> <div style="text-align: center;">  <p>60 mm long</p> </div> </div>	
	<p><u>Micro Sleeve</u></p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: left;"> <p>20 mm</p> <p>25 mm</p> <p>34 mm</p> <p>45 mm</p> </div> <div style="text-align: center;">  </div> </div>	
Fiber holder	<p><u>Fiber holder</u> <u>[Standard] (250/900)</u> Cleave length : 8mm (Fixed)</p>	<p><u>Fiber holder</u> <u>[FTTH] (Connector)</u> Cleave length : 8mm (Fixed)</p>
	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>HS-250</p>  <p>HS-900</p>  <p>HS-2.5F</p>  <p>HS-IN</p> </div> <div style="text-align: center;">  <p>HS-LC</p>  <p>FC</p>  <p>SC</p> </div> </div>	

III. Product Description




Optical fiber arc fusion splicer Swift S5 has been designed for splicing various types of optical fiber using IPS system technology. In order to meet the work conditions of both inside and outside, it is small, light and easy to operate maintaining very low rate in splice loss and fast splice capacity. Users have to read carefully the service manual for the maximum use of S5.

1. External appearance of S5



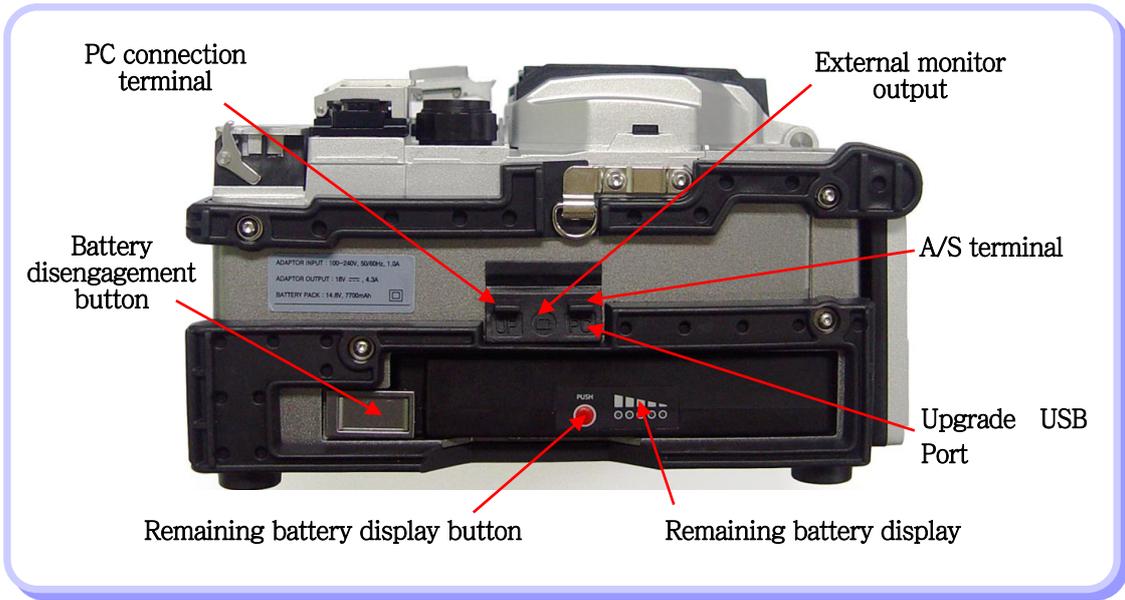

2. Arc fusion splicing assembly

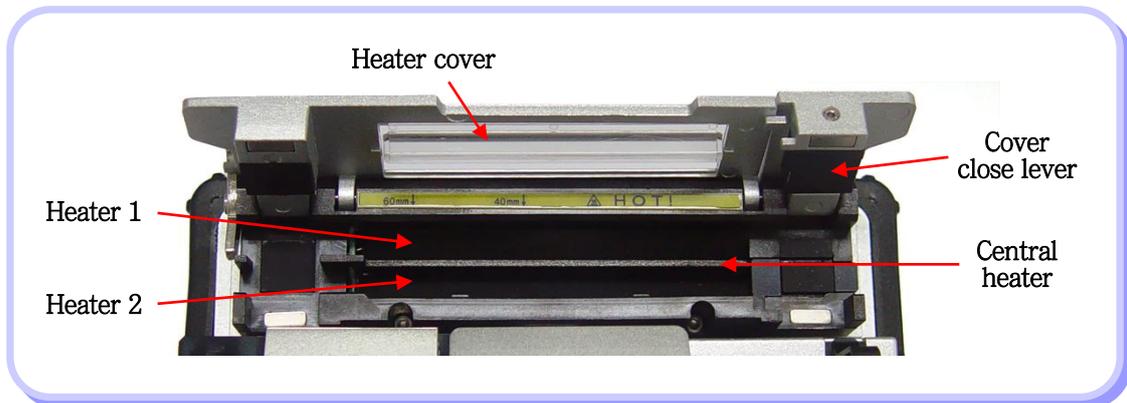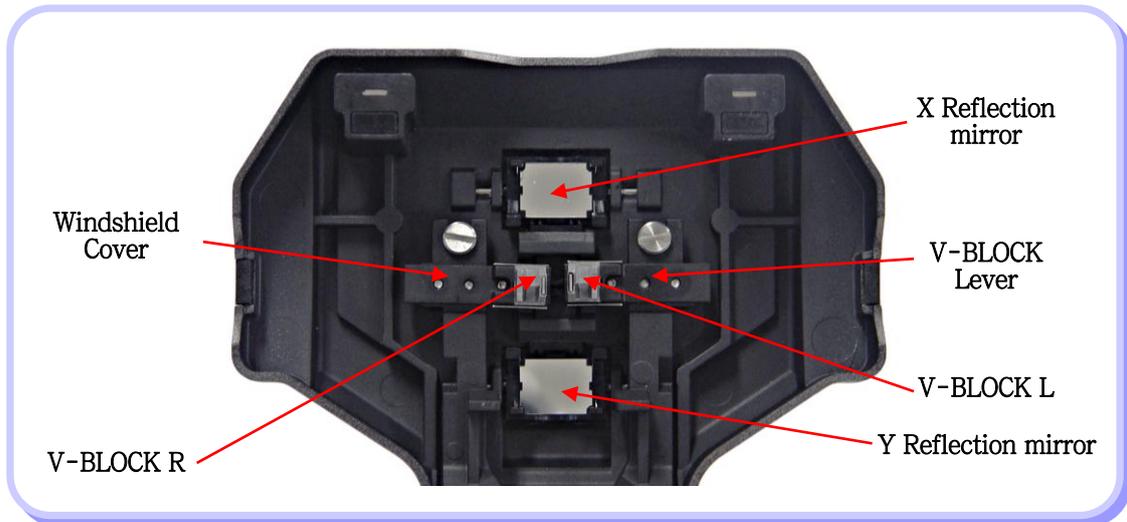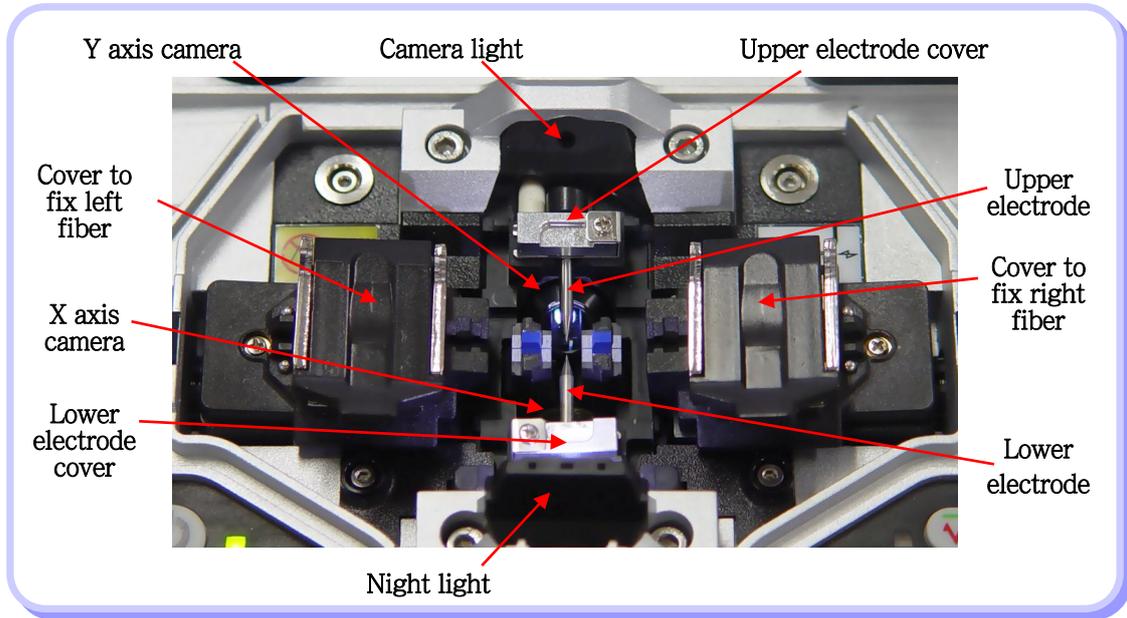

3. S5 Auto Stripper

1) Features

S5 automatic fiber stripper automatically carries out an accurate stripping of the coating of single- and multi-mode fibers. Featuring excellent tensile force of fiber, the automatic stripper strips up to 28.0mm in length without damaging the surface of fiber. Read the user manual sufficiently to maintain the best performance of the unit.




- Be careful not to wet the equipment.
- Maintain the unit in a clean condition at all times because many of splicing problems are caused by dust or moisture.
- Keep and use the unit at room temperature as it could be deformed by heat.
- Keep the equipment from being shaken or physically impacted as it could be broken.
- Never use organic solvents such as acetone except alcohol to clean rubber part of the equipment.

2) Specifications

Applicable Fiber Diameter	125 μ m
Applicable Cable Diameter	250 μ m, 900 μ m
Strip Length	Max 28.0 mm
Heating Time	0 ~ 15 sec
Heat Temp. Range (HEATING TYPE)	60 °C ~ 150 °C
Tensile Force after Stripping	4kgf


3) Configuration and name of each part

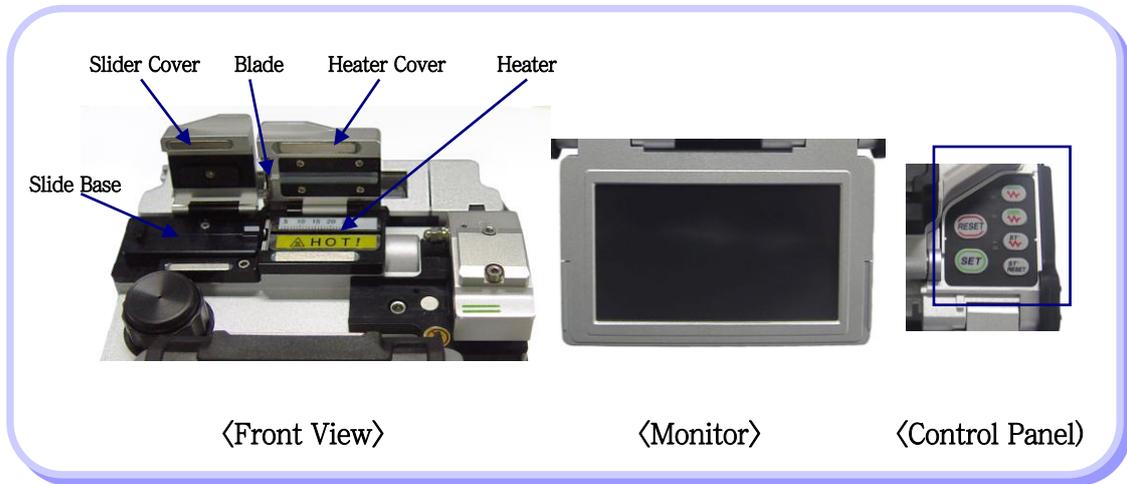


4) Operation Procedure (Fiber stripper)

(1) Stripping Procedure

- 1 Warm up the thermal stripper after applying power to the control area. Open thermal stripper cover and slide cover for preparation.

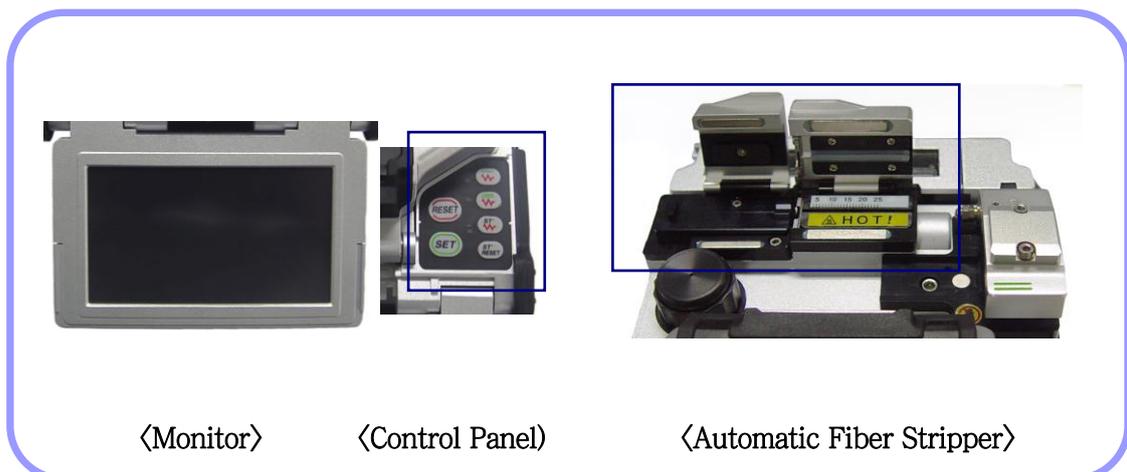


- 2 Place fiber into the holder as shown below pictures. The minimum stripping length should be longer than 18mm.

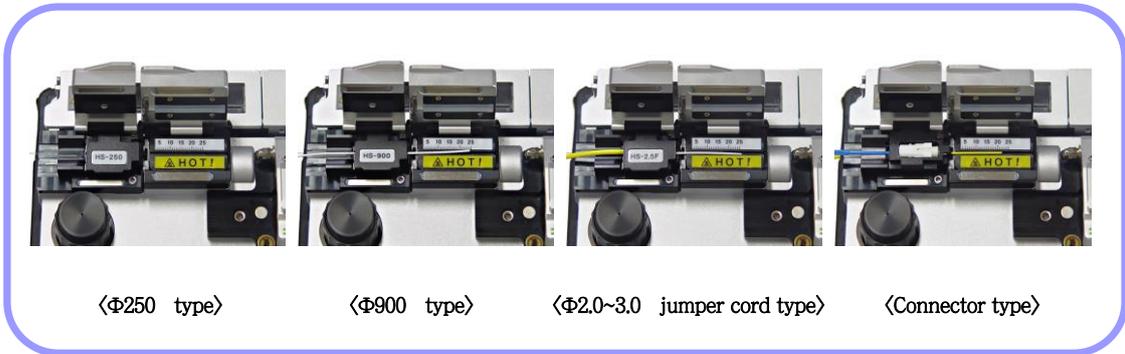

- 3 Mount the holder containing the fiber onto the slider and close slide cover.



- 4 Once the thermal stripper cover is closed, the fiber is heated up for a pre-defined time and the coating is stripped by moving the slider.

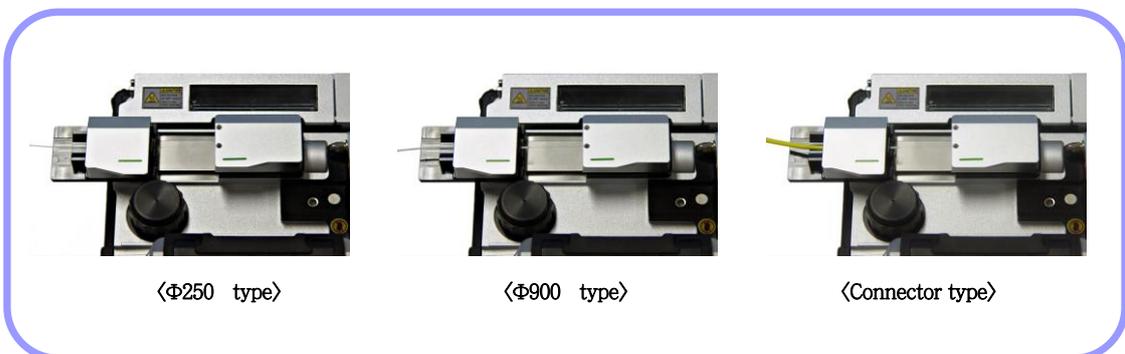

- 5 When stripping is completed, open the slide cover and detach the holder containing the stripped fiber. The slider part moves to the initial position as thermal stripper cover is opened.


- 6 Remove any remaining coating residue from thermal stripper and blade areas using a soft brush for next operation. Be careful in handling blade part which is very sensitive.



5) maintenance

(1) Replacement & Adjustment of Blade

- 1 Remove worn out blade by unscrewing fixing bolts as shown below picture. At this time, move the slide part to the left hand side.

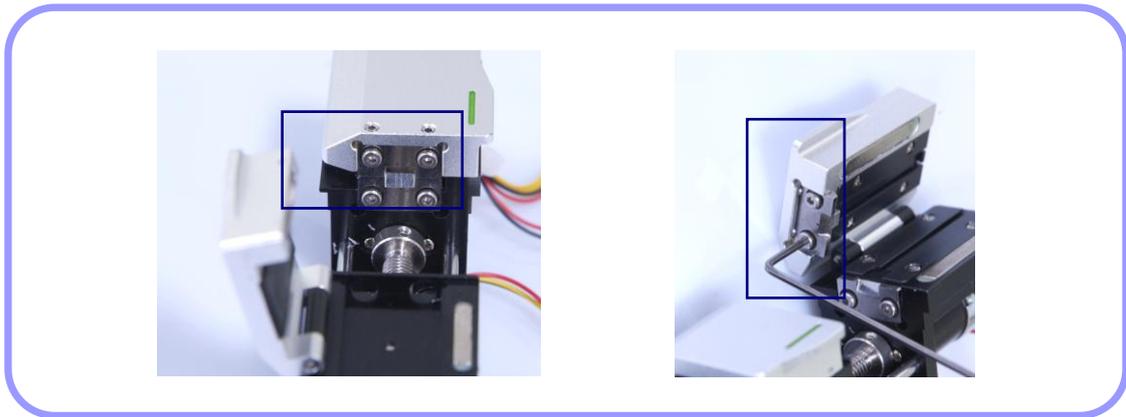

- 2 Place new blades in the reverse manner of removing.

(Two blades as a pair at top and bottom)

Make sure that both blades fit tightly in place in order to achieve a good strip result.

(2) Handling and storage

- Be careful of using, handling or storing principal parts including blades, heater, etc as they are closely related to the equipment's operation life.
- Do not apply unnecessarily weight or physical impact in handling the equipment.
- Keep the principal parts of the equipment in a clean condition always.
- Keep it clean and in a case when not using, which will increase the life of the equipment.

4. S5 Cleaner

1) Features

The alcohol dispenser in the S5 has a limited capacity, The alcohol pump can be removed and refilled with cleaning fluid.



- Be careful not to wet the equipment.
- Maintain the unit in a clean condition at all times because many of splicing problems are caused by dust or moisture.
- Keep and use the unit at room temperature as it could be deformed by heat.
- Keep the equipment from being shaken or physically impacted as it could be broken.
- Never use organic solvents such as acetone except alcohol to clean rubber part of the equipment.

2) Configuration and name of each part



< Assembled >



< Disassembled >

3) Cleaning Procedure

- 1 When cleaning, press down on the alcohol dispenser 2 or 3 times, using cleaning cotton (wipe) as shown in the picture below.

At this time, to avoid splashing the alcohol please cover the top part of dispenser with cleaning cotton and push it



- 2 If no alcohol is discharged, open cap and refill the dispenser.

Add alcohol after completely removing it from the F-1 body by pulling upward. It is connected to the body by magnet.



- 3 The recommended cleaning fluid is MCC-POC03M.

5. S5 Cleaver

1) Features


- (1) The cleaver is designed to cleave the fiber at a 90 degree angle.
- (2) For the best result, following requirements should be met.

- The coating of fiber shall be cleanly stripped.
- The fiber shall be properly placed on the holder upon cleaving.
- The physical condition and height of the cleaver blade shall be adequately maintained.



- Be careful not to wet the equipment
- Maintain the unit in a clean condition at all times because many of splicing problems are caused by dust or moisture.
- Keep and use the unit at room temperature as it could be deformed by heat.
- Keep the equipment from being shaken or physically impacted as it could be broken.
- Never use organic solvents such as acetone except alcohol to clean rubber part of the equipment.

2) Configuration and name of each part

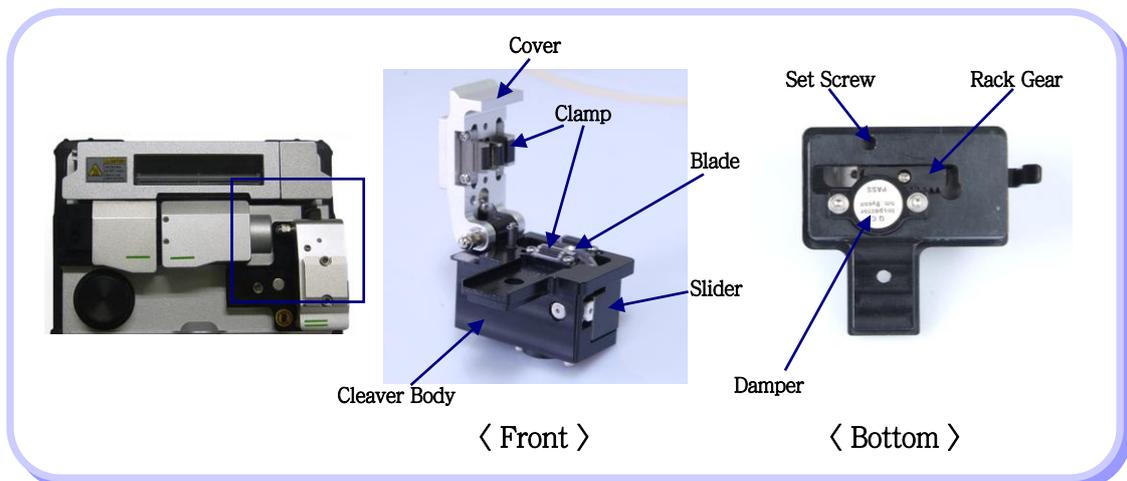


3) Operation Procedure (Fiber Stripper)


- 1 Open cover and set the holder containing stripped fiber into the cleaving position.

Check whether the fiber is lying in place.


Use the chip-box located at the right side of the body.

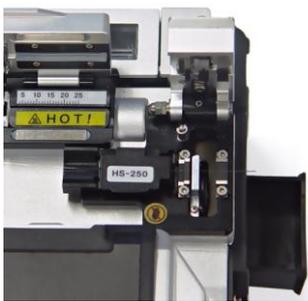

〈Φ250 type〉

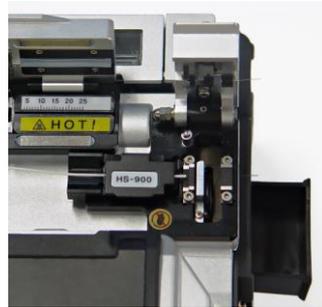


〈Φ900 type〉

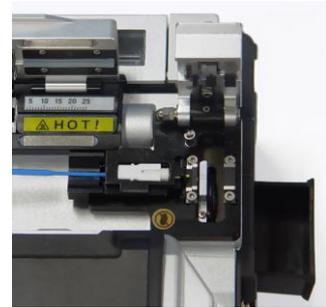


〈Connector type〉


- 2 Press the cover to cleave the fiber.

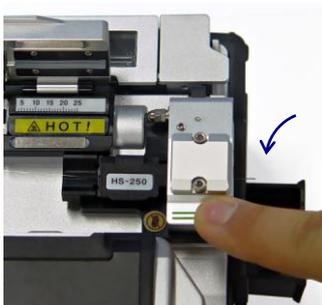

〈Φ250 μm type〉

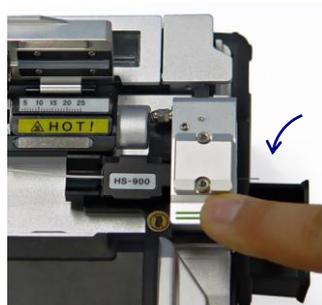


〈Φ900 μm type〉

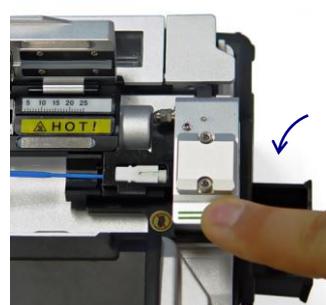


〈Connector type〉

- 3 Open the cover and check the result.

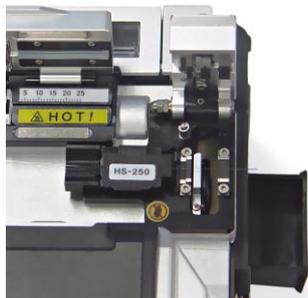

〈Φ250 type〉


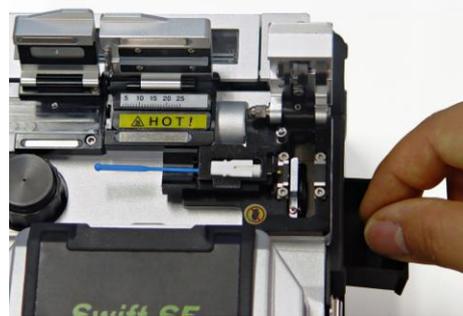


〈Connector type〉

- 4 Take out the cut fiber and holder.

Be careful not to contaminate the fiber with dust or foreign substance.

The fiber shards are collected in the slide-type chip-box placed at the side of F-1 body.

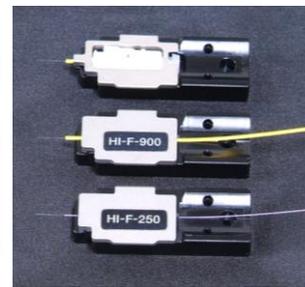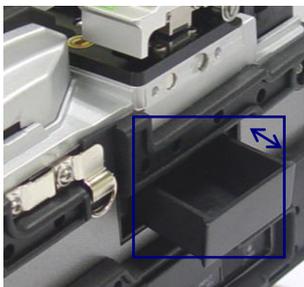

Connector type

Φ900 type


Φ250 type

4) Replacement & Adjustment of Blade


- 1 to 16 channel (cleave positions) is marked on a blade.
- If cutting is carried out not properly, clean the edge and top and bottom rubber pads of the blade with a cotton swab wet in alcohol (Do not use acetone or solvent in cleaning the rubber pads.)
- If the life of the blade is almost over, fiber is not cleaved at all. In that case, change the blade channel or replace with new one.

(1) The change of blade channel. (cleave position)


- 1 Detach the automatic cleaver from the F-1 body using a hexagon wrench as shown below picture.

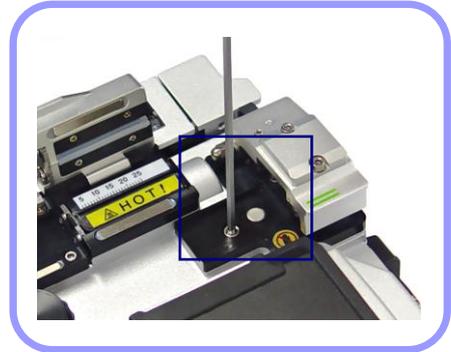

- 2 Open the cover and push the slider forward. When the slider is fixed, loosen the set screw a little bit (about 2 turns) with a hexagon wrench.

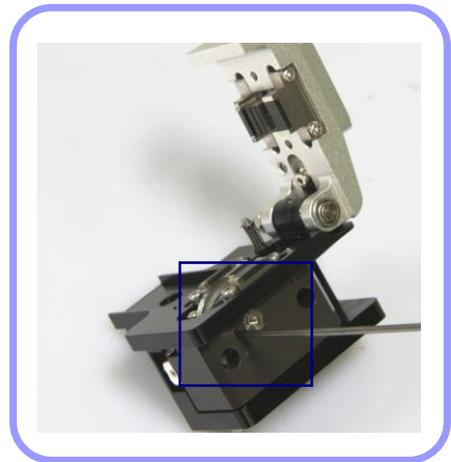


- 3 Turn the markings on the blade counter clock wise one by one with a cotton swab. Assemble the automatic cleaver in the reverse manner of detaching.

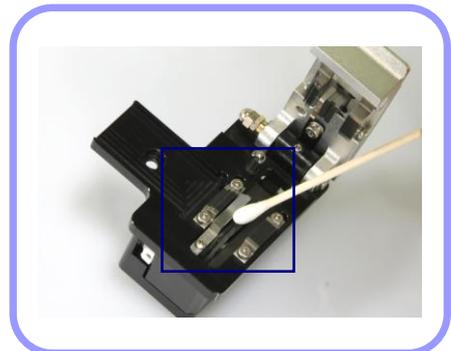


(2) Blade replacement


- 1 As shown below picture, loosen the set screw at the side of the cleaver detached from the body a little bit (around 2 turns) with a wrench.

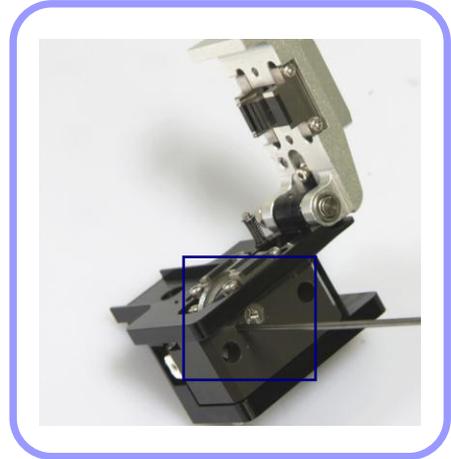

- 2 Insert a wrench into the hole at the bottom of the cleaver and loosen the set screw of the slider a little bit (about 2 turns). At this point, the slider has to be moved backward.

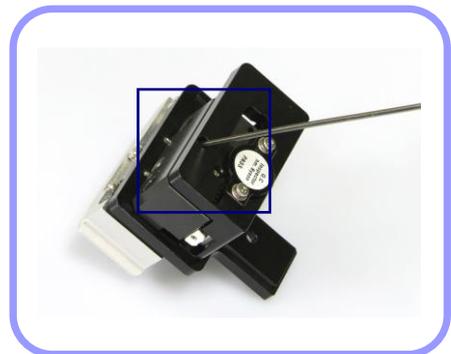


- 3 Insert the wrench bolt into the cam pin and pull it with tweezers and detach the slider.

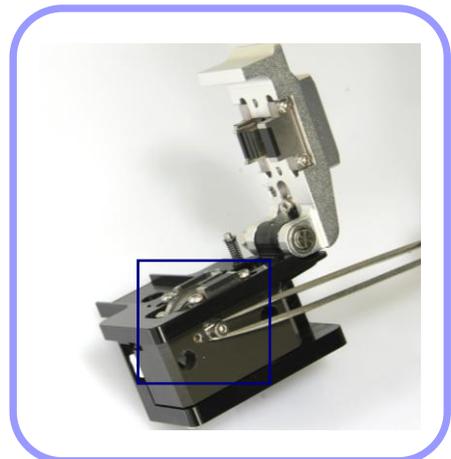


- 4 Be careful not to damage the blade. Assemble the part in the reverse manner. Tighten the set-screw firmly.

(3) Adjustment of blade height

- 1 Insert a wrench into the hole at the bottom of the cleaver and loosen the set screw of the slider a little bit (about 2 turns).
At this point, the slider has to be moved backward.

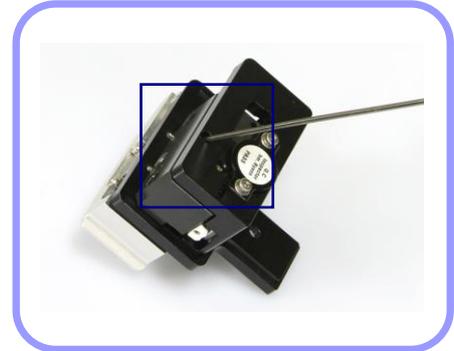

- 2 Adjust the blade height by turning Cam Pin with a flat-head screwdriver.
Clockwise turning: going upward
Counterclockwise turning: going downward

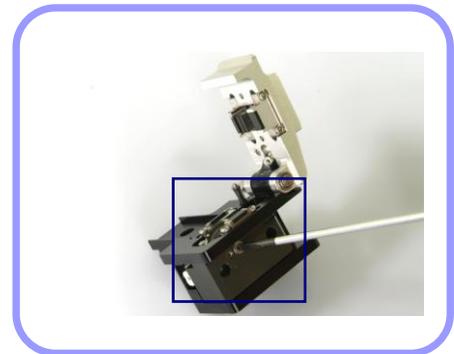

- 3 When the blade reaches required position, tighten the set-screw of the slider. Thoroughly and accurately set the height using a gauge because the height directly effects the cleave quality of fiber.

6. S5 Sleeve-heater

1) Features

The sleeve heater is designed to strengthen the fiber splice.

To ensure maximum reinforcement the following conditions must be met

- After splicing the fiber splice must be visually perfect
- The fiber and sleeve must be placed correctly in the heater, failure to place the sleeve and fiber in the correct position can result in incorrect heating and possible damage to the splice joint.
- When splicing, the heater cover cannot be left open, it must be in the fully closed position




- Be careful not to wet the equipment.
- Maintain the unit in a clean condition at all times because many of splicing problems are caused by dust or moisture.
- Keep and use the unit at room temperature as it could be deformed by heat.
- Keep the equipment from being shaken or physically impacted as it could be broken.
- Never use organic solvents such as acetone except alcohol to clean rubber part of the equipment.

2) Specifications

Applicable Cable Diameter	$\Phi 250\mu\text{m}$, $\Phi 900\mu\text{m}$, $\Phi 2.0\text{mm}$ ~ $\Phi 3.0\text{mm}$
Sleeve Length	32mm(standard)
Sleeving Time	20~35 sec
Heat Temp. Range	130°C ~ 200 °C

3) Configuration and name of each part

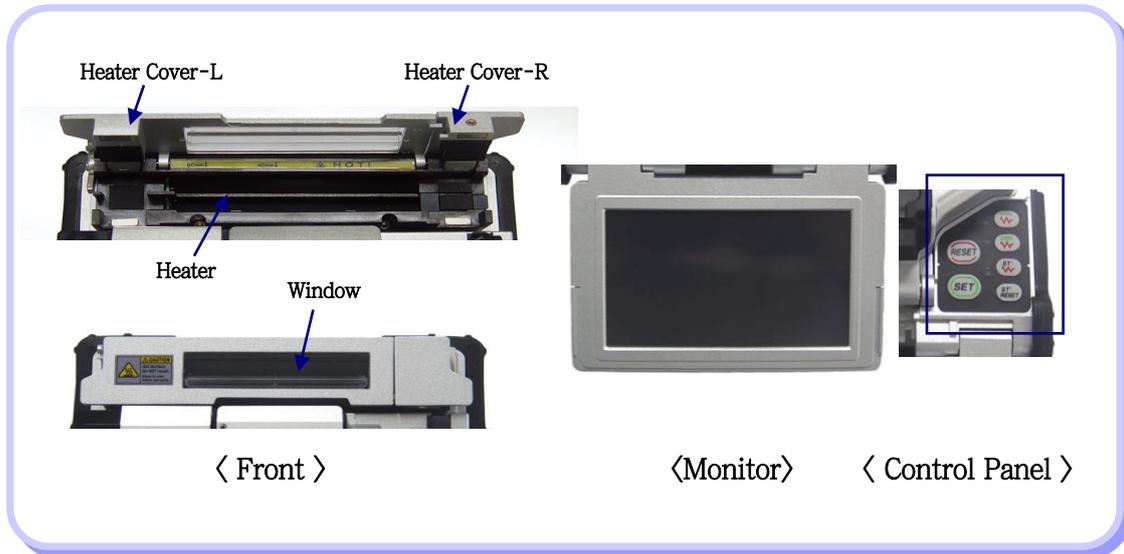

4) Operation Procedure (Heating Sleeve)


(1) Sleeve Procedure

- 1 As shown in the picture below, apply power to the control panel and open the cover of the heater to prepare.




- 2 Set the sleeve tube to the area of arc-fused fiber that needs to be reinforced and place the fiber inside the heater.


The connector type should be set to the right-most position so that sleeve tube moves the heater as closely as possible.

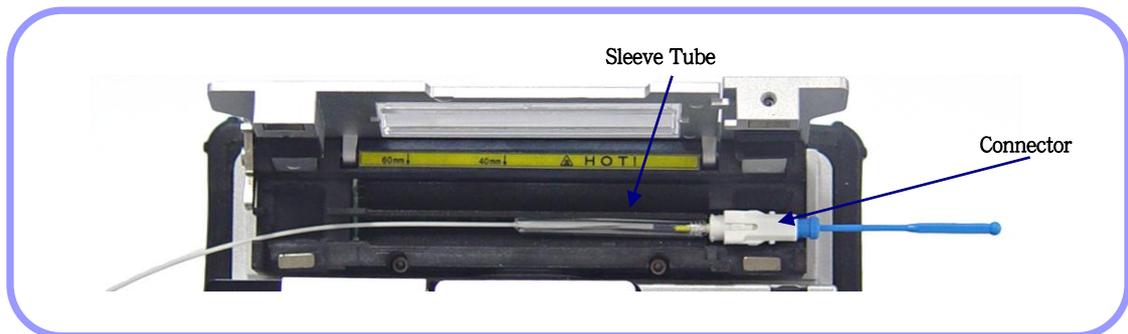

- 3 Activate the heater after placing the fiber. Cooling fan is run to cool the tube 20 seconds after heater activation.

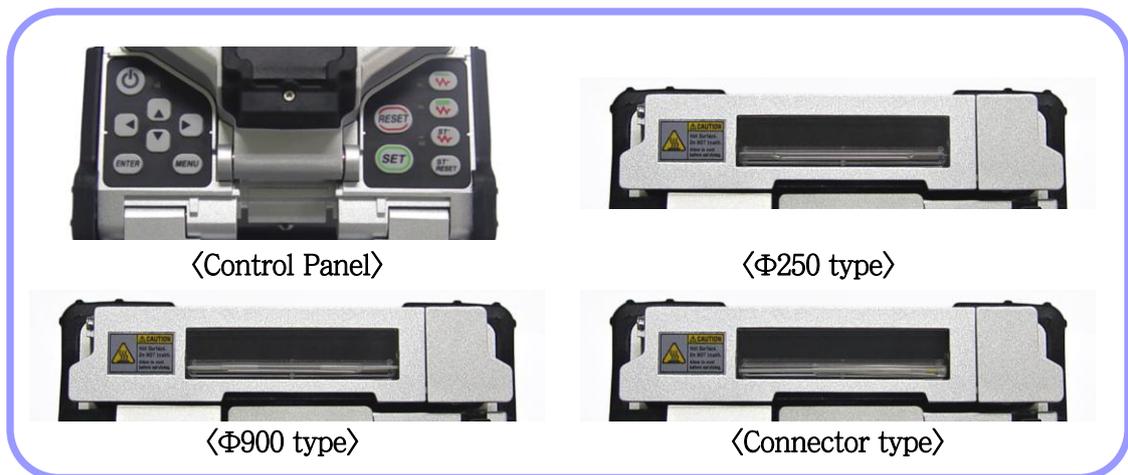

- 4 Open the cover when cooling is completed and take out the reinforced fiber.

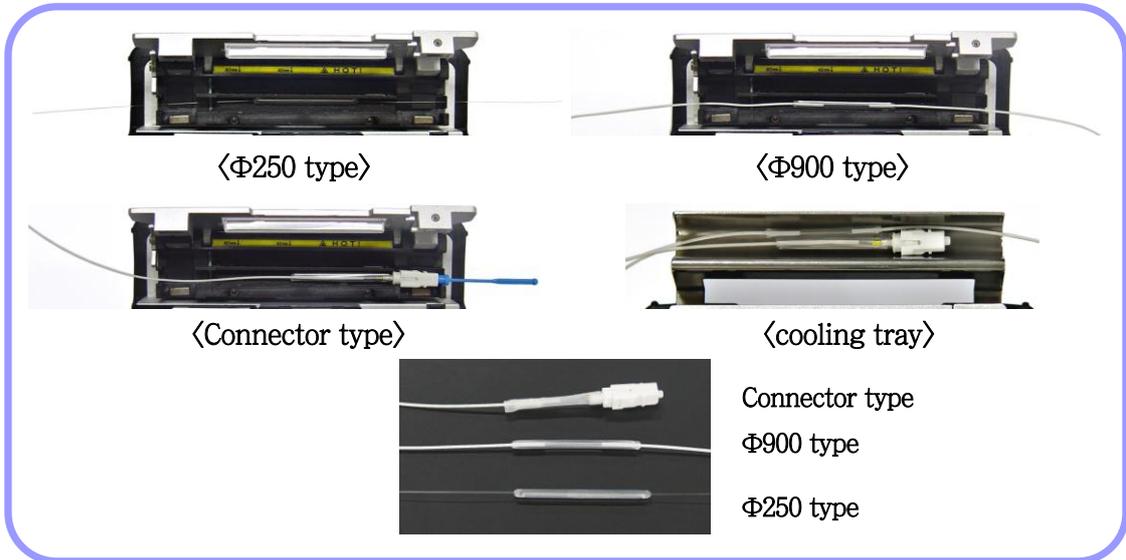


5) Maintenance

(1) Replacement & Adjustment of Sleeve Heater Block, Lever Block


- 1 Sleeve Heater Assembly are as picture.




- 2 Disassemble and replace the Sleeve Heater Assembly with wrench as picture, as to fiber type.

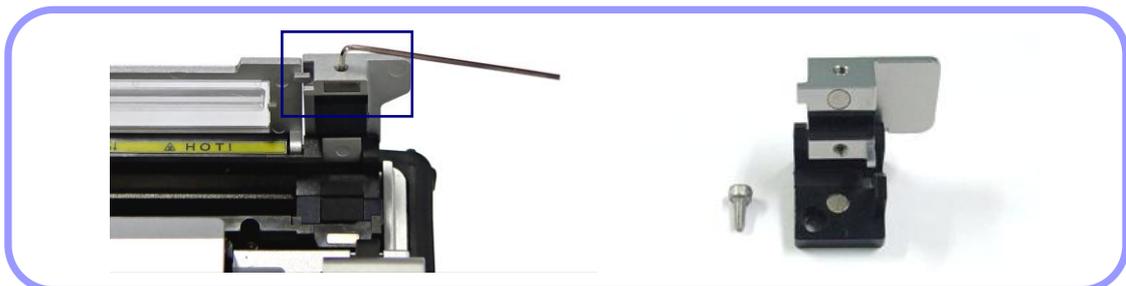

- 3 Disassemble and replace the Lever Block of left/right side with wrench as picture, as to fiber type.

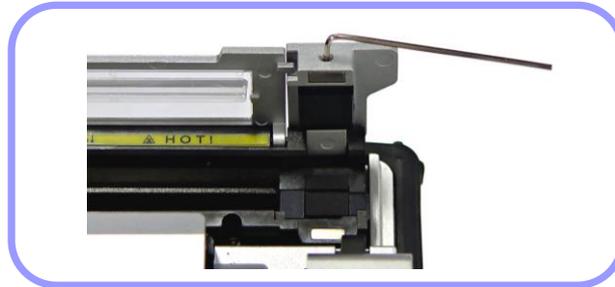

(2) The Choice of Heater Block / Lever Block by fiber type

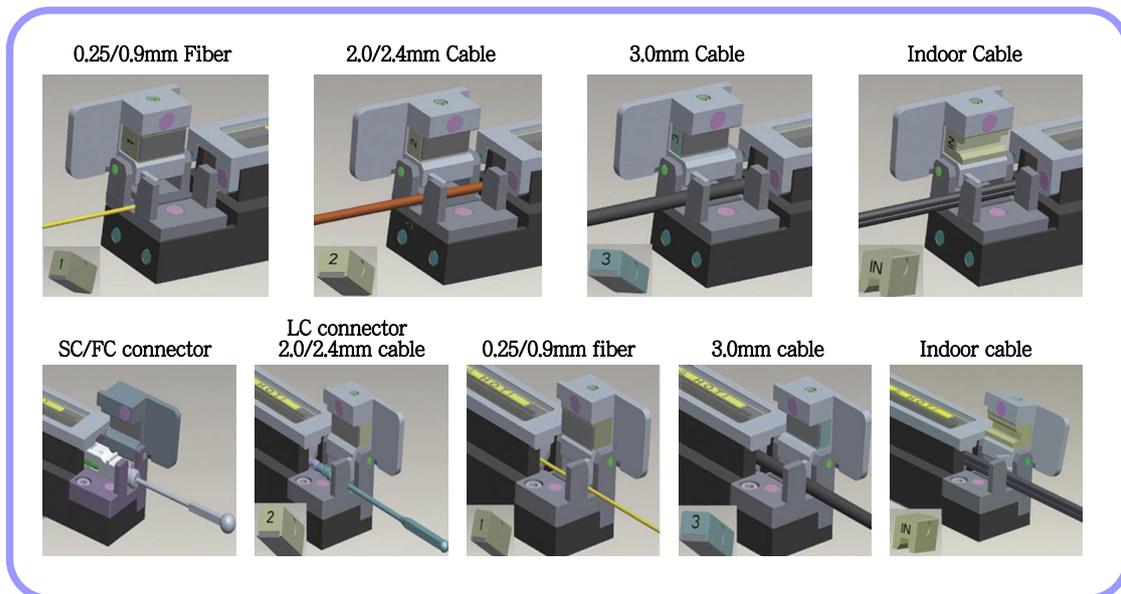

(3) Handling and storage

- Be careful in using, handling or storing principal parts including blades, heater, etc as they are closely related to the life of the equipment.
- Do not apply unnecessarily weight or physical impact in handling the equipment.
- Keep the principal parts of the equipment in a clean condition always.
- Keep it clean and in a case when not using, which will increase the life of the equipment.

IV. Operation

1. Supplying power

The high performance battery and its power adapter allow S5 to be operated while it is being charged.

Charging the battery

Connect the adapter to the DC jack of the battery and the AC cord to a wall AC outlet. The LED is changed to green when the charging is completed.

Since the floating charging method is applied to S5, it can run while it is being charged.





The battery pack includes the protection circuit so that over discharge and over charge can be prevented. The supply of power stops once the protection circuit is activated. In order to deactivate the protection circuit and resume feeding power, wait about 10 seconds and connect the DC plug to the DC jack of the battery pack and the AC cord of the charger to a wall outlet.

When using AC

Connect the DC Plug of the AC adapter to the DC jack of the battery installed in the body. An amber or green light of the battery is on when proper AC power is fed. Make sure the rated power is supplied. 250V or higher voltage is not allowed. Connect the AC power cable of the adaptor provided by the company to a wall AC outlet.




Never use an adapter other than the one provided with the machine; otherwise an incident such as fire may occur.

Battery capacity

Press the remaining battery display to display the remaining amount of battery



Remaining battery amount (Monitor)	Remaining battery amount display (LED)	Percentage
 (5 bars)	 5 LED	80 ~ 100%
 (4 bars)	 4 LED	60 ~ 80%
 (3 bars)	 3 LED	40 ~ 60%
 (2 bars)	 2 LED	20 ~ 40%
 (1 bar)	 1 LED	10%
 (No bar)	 0 LED Nothing displayed	5% or less



The battery must be charged when the remaining battery is as low as one bar.

V. Menu Description

1. Function buttons



To turn the power on and off.

When the switch is pressed and held for about 0.5 second, the power and monitor are turned on and the indicator next to the switch is changed to green. When the switch is pressed and held for about one second, the indicator and power are turned off.



To move the cursor to left.

The monitor becomes darker if it is pressed on the initial screen. In addition, it is used to control the movement of fiber and adjust the camera focus in manual mode. (Refer to the manual mode instruction for more detailed information).



To move the cursor to right.

The monitor becomes brighter if it is pressed on the initial screen. In addition, it is used to control the movement of fiber and adjust the camera focus in manual mode (Refer to the manual mode instruction for more detailed information).



To move the cursor upward.

In manual mode it is used to select each motor (Refer to the manual mode instruction for more detailed information).



To move the cursor downward.

In manual mode it is used to select each motor (Refer to the manual mode instruction for more detailed information).



To open the menu screen



To cancel a selection command and return it.

To move to previous level on menu screen or cancel a setting in edit mode.



To confirm a setting and enter function

To move to next level on menu screen or confirm a setting in edit mode.



To execute splicing command.

To activate next action when the separated performance med is in use.



To cancel splicing command or initialize the splicing function.



It supplies power to run the sleeve heater at low temperature.

It repeats ON/OFF whenever it is pressed.

When it is turned on, the left indicator light is turned on.



It supplies power to run the sleeve heater at high temperature.

It repeats ON/OFF whenever it is pressed.

When it is turned on, the left indicator light is turned on.



It supplies power to run the stripper heater at temperature.

It repeats ON/OFF whenever it is pressed.

When it is turned on, the left indicator light is turned on.



It resets the stripping unit when activated.

It is activated when an error occurs.

2. Turn on S5

Monitor angle

The angle of the monitor can be adjusted to provide better view.

Monitor ON

Press the power key for about 0.5 second without opening the windshield cover.

The initial screen is displayed after resetting all the motors to their respective initial position.



Initial Screen

It is important to choose a right splice mode to ensure an accurate splicing result. The current splice mode is displayed on the initial page.

A right heater mode must be selected to heat the protection sleeve. The current heater mode is displayed on the initial page.



- Press MENU key to change splice mode on the initial page.
- The splice mode and heater mode are displayed on the screen.

3. Installing the protective sleeve loader / cooling tray


Pull out the protection sleeve loader and inset it into the right or left groove. Insert the cooling tray into the groove at the rear side of the heater.



4. Placing the fiber on the splicer

1 Open the windshield and holder of the fixer.

2 Place the fiber between the V-groove and the electrode.

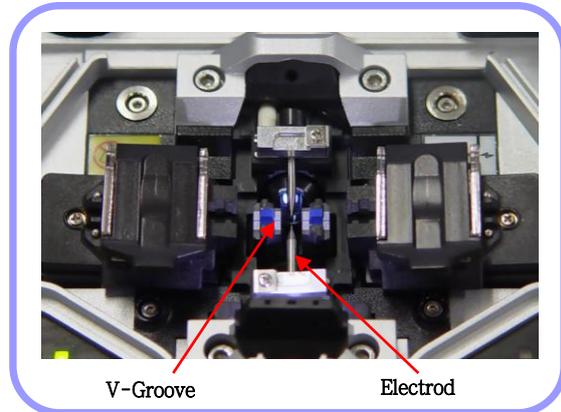

- If the coated part of the fiber is bent, place the bent part downward.
- Make sure that the tip of the prepared fiber does not contact other object.


3 Hold the fiber with a hand so that it does not move and close the fixer holder.

4 Place the other fiber in the same way as 3

5 Close the windshield cover.

5. Inserting fiber into the protection sleeve


Insert the fiber into the protection sleeve.

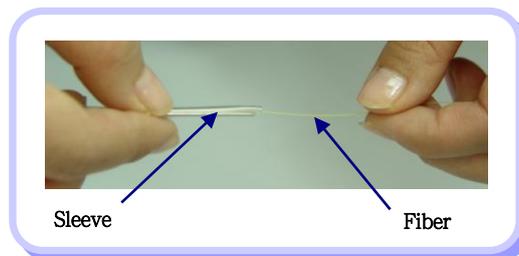


6. Splice procedure

The condition of the fiber can be observed via the image processing system installed in Swift S5. However, an examination with operator's naked eyes is necessary to ensure better splice result.

- 1 The fibers installed in the splicer move toward each other. The moving fibers can stop at precise positions at which point splicing can be carried out after completing a discharge for cleaning. Then, the cut angle, physical condition of the tip area and dust existence need to be checked. If the measured cut angle

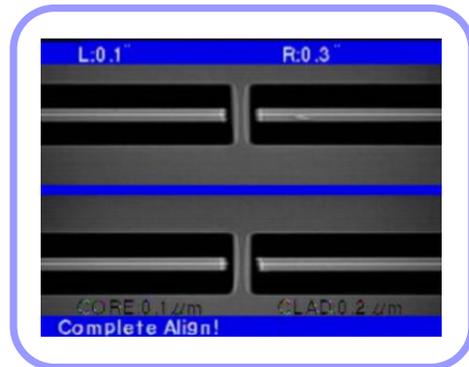

is bigger than the preset limit value or any damage to the fiber is discovered, an error message appears on the screen and the splice process stops. If no error message appears on the screen, examine the condition of the cross sections with your eyes based on following figures. Any fiber that has similar condition to any of below figures has to be removed and a new fiber must be placed. These general defects can cause a wrong splice.

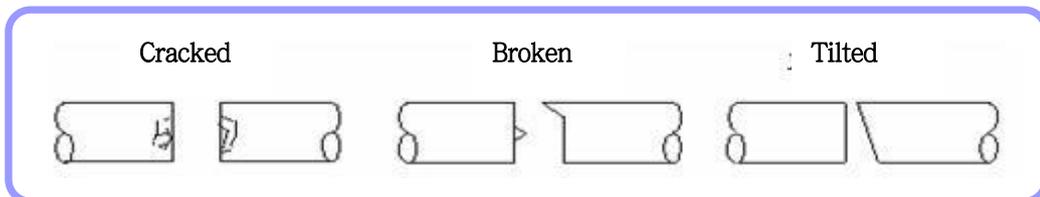

- 2 The fibers whose examination has completed are arranged core to core or clad to clad. The measured values of clad axis deviation and core axis deviation can be displayed on the screen.



- It is possible to set the fibers not to be arranged after checking the cut angles.
- The maximum limit of cut angle can be changed.
- Press SET key to proceed to the next step ignoring the error message about the cut angle.
- It is possible not to display the cut angle and the deviations of clad axis and core axis during arc fusion.

- 3 Discharge is carried out to perform splicing the fibers after completing the arrangement of the fibers.



The discharge is initiated when the ARC key is pressed after completing the arrangement in non-continuous operation mode.

- 4 The splice loss value is measured after completing arc fusion and displayed on the screen. The loss value is affected by error elements. And, these elements also influence the estimation and computation of the value. The computation of the loss value is based on such clear measurement factors as MFD.



If the measured cut angle or computed loss value is greater than the preset limit, an error message appears on the screen. Also, an alarm can be triggered by the discovery of an abnormal condition of the spliced part including too thick or thin area or bubbles. Even if an error message does not occur, it is recommended to perform the arc fusion process again if the result on the screen does not look good enough when examining it with naked eyes.







- Sometimes, the spliced area can seem fatter or larger than other part. This is normal situation and does not affect the splice loss.
- Please refer to relevant parts for more information about changing the limit values of computed splice loss or cut angle.


The splice loss can be corrected and improved in some cases via conducting additional arc fusion. Press ARC key to conduct additional arc fusion, which will perform the computation of splice loss value and check the condition of the spliced area.



However, in some cases, the splice loss can be aggravated by performing additional arc fusion splicing; hence the operator can set the additional discharge off or limit the number of discharge.

Growth of splice loss: causes and corrective measures

Symptoms	Cause	Corrective measures
Core axis deviation 	Dust on the V-groove or holder	Clean the V-groove or holder
Core angle 	Dust on the V-groove or holder	Clean the V-groove or holder
	Bad condition of fiber's tip	Check the performance of fiber cutter.
Core deformation 	Dust on the V-groove or holder	Clean the V-groove or holder
Irregular core 	Bad condition of fiber's tip	Check the performance of fiber cutter.
	Too low initial discharge or too short initial discharge time	Increase the initial discharge or initial discharge time
Inconsistent MFD 	Too low discharge	Too low discharge
Burned 	Bad condition of fiber's tip	Check the performance of fiber cutter.
	There is still dust after cleaning or discharge for cleaning.	Clean carefully the fiber or increase the discharge duration for cleaning.
Bubbles 	Bad condition of fiber's tip	Check the performance of fiber cutter.
	Too low initial discharge or too short initial discharge time	Increase the initial discharge or initial discharge time
Separation 	Too much initial discharge or too long initial discharge time	Increase the duplicated area.
		Decrease the initial discharge or initial discharge time

<p>Thick</p> 	Fiber is too long.	Decrease the duplicated area.
<p>Thin</p> 	<p>Incorrect discharge amount</p> <p>Some discharge elements are not correct</p>	<p>Conduct discharge calibration</p> <p>Adjust initial discharge, time and duplicated area.</p>
<p>Line</p> 	Some discharge elements are not correct	Adjust initial discharge, time and duplicated area.



A vertical line appears on the spliced area sometimes when splicing multimode fibers or not similar fibers (i.e. whose diameters are different). However, it does not affect the splice loss or the splice quality including tensile strength.

Saving splice results

The splice result can be saved and the procedure is as follows;




Total 2,000 results can be recorded and the 2001th result will be warren on the line of the 1st result.

How to automatically save splice results (a note cannot be entered)?

When SET or RESET is pressed after completing splicing, the result is saved automatically. Or, it can be recorded when the windshield is opened after completing a splice process on the last screen.

7. Removing the spliced fiber

- 1 Open the sleeve heater cover.
- 2 Open the windshield cover.
- 3 Hold the left fiber with your left hand from the edge of the windshield and open the left fixer cover.

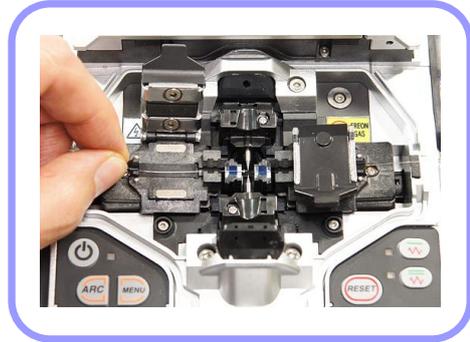

Keep holding the fiber until transporting it to the tube heater.

- 4 Open the right fixer cover
- 5 Hold the right fiber and remove the spliced fiber from the splicer.

8. Installing the sleeve on the sleeve heater

Place the arrow of the sleeve heater to the center of the protection sleeve. Slowly move the spliced fiber from the light until it reaches to the left hand at the edge of the tube heater. Place the protection sleeve in the middle of the tube heater.



Make sure that the splice area is placed in the middle of the protection sleeve.

9. Heating the protection sleeve

- 1 Move the fiber inserted into the protection sleeve to the middle of the tube heater.
- 2 Place the fiber covered by the protection sleeve on the tube heater. Apply tension to the fiber downward so that the tube heater cover is closed automatically



When placing it on the tube heater (it applies to only the heater 1).



- Make sure that the spliced area is placed in the middle of the protection sleeve.
- Place the supporting part inside the protection sleeve toward bottom.

- 3 Press HEAT key to start tube heating.
LED of HEAT (red) is turned off when tube heating is completed.



Tube heating stops if the HEAT key is pressed again during heating.

- 4 Open the heater cover and remove the fiber that has been protected from the heater.
Apply tensile force to the fiber while removing it from the heater.



The protection sleeve may have been attached to the floor of the heater. Use a cotton swab when removing the sleeve from the heater.

- 5 Check to ensure there is no bubble, fragments or dust in the sleeve at all times.

VI. Maintaining Splice Quality


1. Cleaning and examination prior to splicing

For cleaning and maintaining of important parts, follow below instructions.

Cleaning the V-groove

Any foreign substances inside the V-groove will affect the fixing condition of the fiber, resulting in high splice loss. Hence, it is important to examine the V-groove often and clean in a regular manner in accordance with following ways.

- 1 Open the windshield cover
- 2 Clean the bottom of the V-groove with a cotton swab soaked in alcohol and remove the remaining alcohol inside the V-groove with a clean and dry cotton swab.

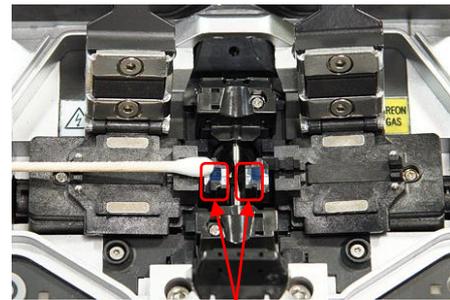

V-groove



- Make sure not to touch the tip of the electrode.
- DO NOT apply too much strength when cleaning the V-groove. The V-groove may be damaged.


- 3 If the foreign substances inside the V-groove are not removed by the cotton swab soaked in alcohol, use the tip of the cut fiber. And then, repeat step 2 again.



Cleaning the fiber holder

Any foreign substances remaining in the holder can affect the holding position and result in bad splice result. Hence, it is important to examine the fiber holder often and clean in a regular manner in accordance with following ways.


- 1 Open the windshield cover.
- 2 Clean the surface of the fiber holder with a cotton ball soaked in alcohol and remove the remaining alcohol with a clean and dry cotton swab.

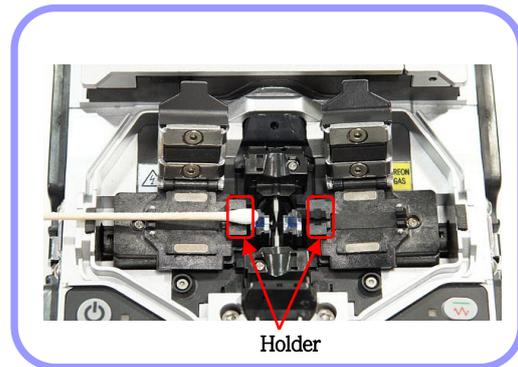

Cleaning the windshield mirror

If the windshield mirror gets dirty, it will decrease the transparency level of the fiber path and cause the improper core position of the fiber, resulting in high splice loss rate. Clean the mirror in accordance with following instructions.

- 1 Clean the surface of the fiber holder with a thin cotton ball soaked in alcohol and remove the remaining alcohol on the mirror surface with a clean and dry cotton swab.
- 2 The windshield mirror must be kept clean without a line, scratch or stain.

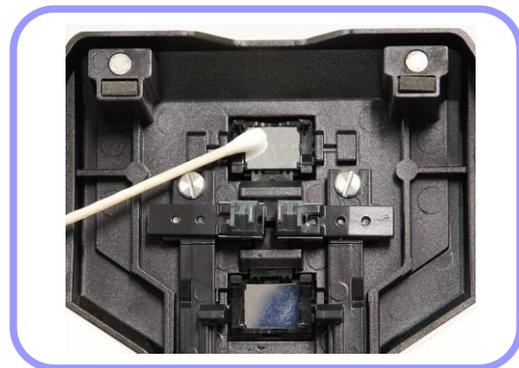

Cleaning the fiber cutter

The performance of cutting fibers can be deteriorated if the blade or clamp pads of the fiber cutter are contaminated. In addition, the contamination of the fiber surface or tip can cause high splice loss. For this reason, it is important to clean both the blade and clamp pads of the cutter with a cotton ball soaked in alcohol.

2. Regular maintenance and cleaning

It is crucial to perform examination and cleaning in a regular manner to maintain the splice quality of the device.

Cleaning the object lenses

The contamination of the object lens surface may cause incorrect observation of the core position, resulting in high splice loss and abnormal performance of the device. Therefore, the two object lenses have to be cleaned in regular manner. Otherwise, the dust will settle on the surface continuously and it may not be removed in the end. Clean them as instructed below.


- 1 Turn off the power of the device prior to cleaning the lenses.
- 2 With an alcohol-soaked soft cotton swab, clean the (X axis and Y axis) lenses drawing spiral in form from the middle to the edge of the lenses. Remove remaining alcohol on the surface of the lenses with dry and clean cotton ball.



- Make sure to remove the electrode before cleaning the object lenses.
- Be careful not to touch the tip of the electrode when cleaning the object lenses.

- 3 The surface of the lenses must be kept clean without a line, scratch or stain.


- 4 Check to ensure there is no line, scratch or stain on the surface via the monitor screen after turning on the power. The condition of the lens surface must be examined on the X and Y screens, changing the screen by pressing X and Y keys.

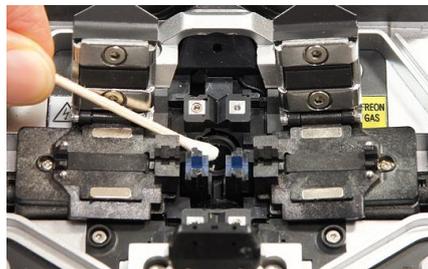

Replacement of the windshield mirror

If you cannot clean the mirror clearly or remove stains completely, the mirror has to be replaced.

- 1 Turn of the power of the splicer
- 2 Open the windshield cover and, as shown in the below figures, push out the mirror case hook until you hear a click sound. Lift the mirror lock and detach the mirror.

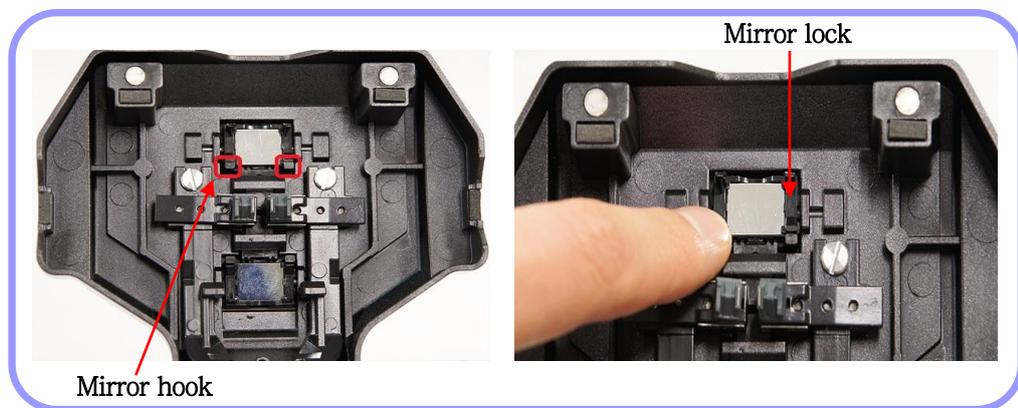

- 3 Insert a new mirror into the mirror lock and assemble the parts in reverse manner of disassembling.



Make sure that the surface of the mirror has been properly inserted. If it is not properly placed, the central line of the fiber cannot be observed accurately.



- 4 Clean the mirror.
- 5 Turn on the power and examine if there is any line, scratch or stains on the surface via the monitor screen. The condition of the lens surface must be examined on the X and Y screens, changing the screen by pressing X and Y keys.

1. Splice menu

The most optimized splice settings for the accurate combination of fibers consists of following factors for splicing. Here, the splice factors depend on the combination of and differences between fibers.

- Factors for adjusting discharge and heating
- Factors for computing the estimated loss
- Factors for adjusting the arrangement and splice process
- Maximum tolerance values before triggering an error message.


The types of the optimized splicing factors for the best combination of fibers have already been saved in the splicer. These information saved as database can be used by copying to the user program part. These factors can be amended for a better combination of fibers.

Splice mode	Description
AUTO	<p>The key profiles of fibers are observed and the fibers are automatically spliced. Users are not allowed adjusting the discharge amount.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin: 10px 0;">  <p>Key points of auto mode</p> <ul style="list-style-type: none"> <input type="checkbox"/> The basic NZDS splice mode is used for splicing NZDS fibers. However, it recommends the most optimized splice mode selected for the NZDS fiber in question to ensure the best result. It is because the changes in the nature of the fiber. The most optimized splice factor is the difference between the types of NZDS fiber. <input type="checkbox"/> The fibers placed at right and left, respectively, are separately identified. If one of the fibers is identified differently, an error message appears. In order to cancel it, press SET key. Then, the splice of the fibers is carried out </div>
SM	For splicing basic single mode fibers. MFD is 9~10um at the frequency of 1310nm.
NZ	For splicing NZDS fibers. MFD is 9~10um at the frequency of 1550nm. WDM fibers can be spliced in this mode as well.
DS	For splicing DS fibers. MFD is 7~9um at near 550nm.
MM	For splicing multi mode fibers. Core diameter : 50.0 ~ 62.5um
AT1/AT2	Attenuation splice
Others	Splice modes other than presented above are saved in the arc fusion splicer database. New splice modes will be continuously added to the database. Please contact Ilsintech for the latest available splice modes.


Selection of a splice mode

Select the most appropriate splice mode depending on the type of the fibers to be spliced.

- 1 In ready status, press “MENU” or touch “MENU” icon on the screen to call menu. The splice mode appears when the splice menu is selected or clicked using the cursor.

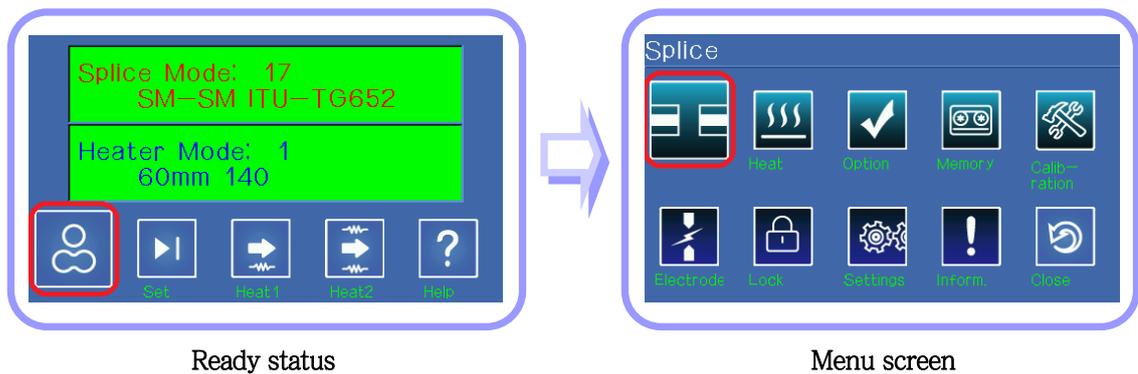

- 2 Move the selection bar up and down using arrows and enter to select. Or, simply tap the desired mode on the screen and tap “Select” again.

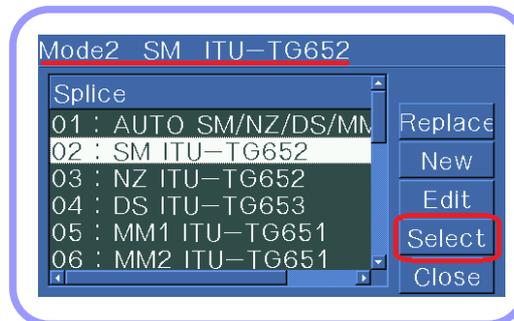


Press ESC key or tap Close on the screen to end the splice mode selection menu.

Generation and deletion of a splice mode


How to generate a splice mode

Tap “New” on the screen. Move to the type of fiber that is about to use and press “ENTER”. Or, tap the mode and “OK” on the LCD.

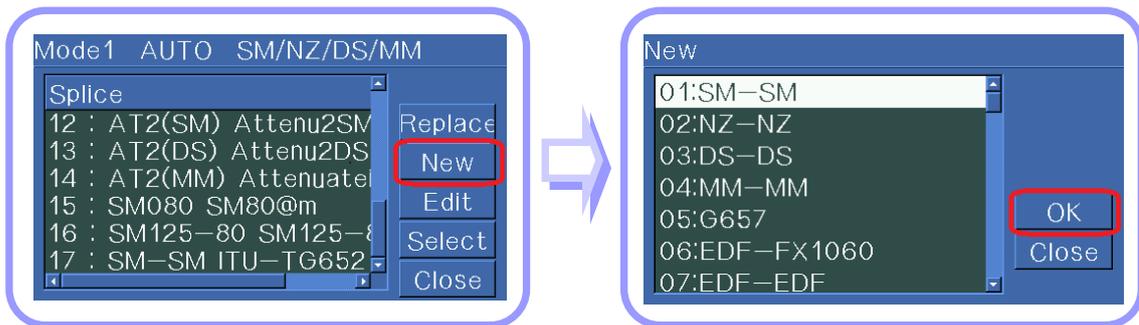

Splice mode setting


Selection of the to-be-generated

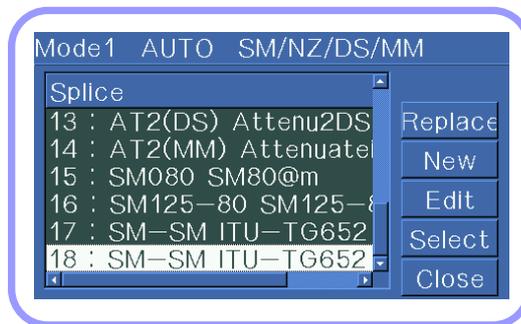

The generated splice mode

How to change the splice mode

Tap “Replace” on the screen. Move to the type of fiber that is about to use and press “ENTER”. Or, tap the mode and “OK” on the LCD.

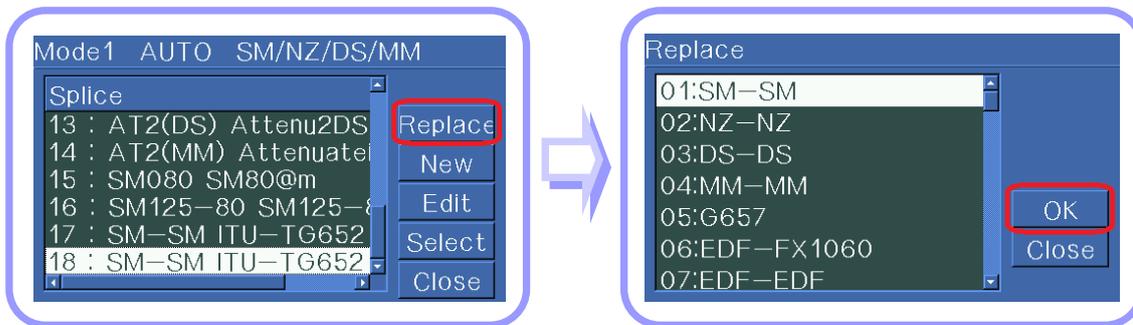

Splice mode setting

Selection of the mode to be changed

The modes that are generated and listed after number 16 on the list can be changed.

How to remove a splice mode

A splice mode can be deleted. Follow the instructions below.


- 1 Select the desired splice mode and press the right arrow key to open the splice mode edit menu. Press “ENTER” key to select the fiber type.
- 2 Select “0:BLANK” and press “ENTER” to activate it.

 Splice modes from 1 to 16 on the list cannot be deleted.
 Mode number 1 is automatically selected when a splice mode is deleted.

Editing reference or splice modes


The splice factors belonging to each splice mode can be modified. The two of most important factors – discharge and time – can be amended as follow;

- 1 Press the right direction arrow to display the splice mode edit on the splice mode setting. Or tap “Edit”.

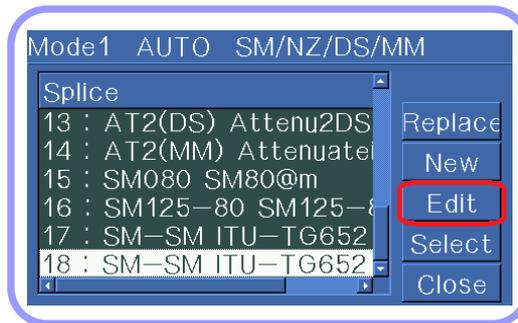

Splice mode setting

- 2 Move the cursor to the element that needs to be changed by pressing the up and down keys or tapping the screen.
- 3 Press right arrow or tap “Edit” to select an element. The values can be adjusted using right or left direction key or tapping the screen in each element edit screen. Press “ENTER” to save the amended value.

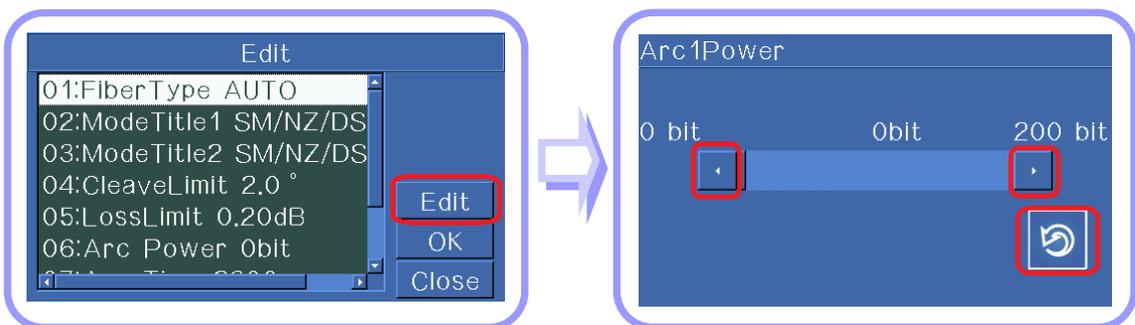

Splice mode setting

Changing the value

The list of the splice factors for splice modes including AUTO, SM, DS, MM and NZ is presented below.

Only some elements as shown below are displayed on the screen in the Auto, SM, DS, MM and NZ modes for the sake of easy operation. Other factors that are not shown on the screen have been set to the most appropriate values in the factory.

Factor	Description
Fiber type	The splice modes saved in the database are displayed. The mode selected by the user is copied to the splice mode in the user side program.
Splice method 1	The titles of splice ways are displayed as 11 characters.
Splice method 2	Detailed description of the splice ways are described as 11 characters. The titles are presented in the splice edit mode.
Cut angle	An error message appears if the cut angle of either left or right end of fiber exceeds the limit.
Loss rate	An error message appears if the estimated splice loss value exceeds the limit.
Discharge	The discharge amount is set differently for each mode.
Discharge time	The discharge time is set differently for each mode and automatically decided in accordance with fiber type when the auto mode is selected.
Cleaning duration	The discharge for cleaning occurs for short time for burning the fine dust on the fiber surface. It can be modified in this factor.
Re-discharge time	In some cases, the splice loss can be improved by applying additional discharge. And the duration of the re-discharge can be modified here.

Editing splice mode

This function allows you to set multiple splice modes that meet the work environment. Description of various parameters and their uses are explained below.

Parameters	Description
Fiber type	The user can select appropriate modes from the default splice modes and edit the copy of the splice modes saved in the database.
Mode title 1	The title can be composed of 1 to 11 characters.
Mode title 2	It consists of up to 11 characters and is used to provide more detailed information. It can be found in the [Splice Mode] menu.
Arrangement	It is used to set the fiber arrangement methods “Core” : Fibers are arranged to the core positions of both fibers. “Clad” : Fibers are arranged to the center position of clad.
Left focus Right focus	It allows focusing during the observation of fibers. The focal plane moves to near core and away from the core by increasing and reducing the figure, respectively. Auto focusing is recommended. Fibers in the left and right position are focused independently. It works when different types of fibers are spliced.
Eccentricity adjustment	It is used to set the offset ratio of axes when arranging fibers.
Auto power	The effect of discharged amount is maximized as the fibers have been arranged the most closely to the core center and fewer errors occur.
Tensile force test	If [Tensile force] is set to “ON”, a test is carried out during the opening the windshield after splicing or pressing SET.
Cut angle range	It sets the tolerance range of cut angle. An error message appears when a measured right, left or both angles exceed the range.
Loss rate	It sets the error range of estimated loss. An error message appears when the estimated loss is greater than the maximum range.
Fiber angle limit	An error message appears when the bending value of the spliced two fibers exceeds the set limit.
Discharge time for cleaning	A short period of discharge is performed to remove the fine dust on the fiber surface as setting the distance between the cross sections of fibers. The duration of the discharge is set here.

Distance	It sets the distance between the left and right cross sections during the arrangement and initial discharge time.
Center position	It sets the position of the fibers to the center of discharge. When the MFD of the left and right fibers are inconsistent, the MFD can be spliced by melting the fiber with smaller MFD. The splice loss can be improved by moving the set distance position toward the fiber with larger MFD from the center of discharge so that more heat is given to the fiber with smaller MFD.
Initial discharge	It is set by the initial discharge amount from the beginning of discharge to the moment before the fibers start moving forward. At this moment, if the initial value is too low, the axis' offset can occur due to bad cross section angle of the fiber. On the other hand, if the initial value is too high, the fiber can be burned out or shaped round, resulting in aggravating the splice loss.
Initial discharge time	It is set by the initial discharge time beginning of discharge to the moment before the fibers start moving forward. The meaning of [long discharge time] indicates greater [amount of initial discharge].
Duplication	It sets the duplication amount of the fibers from the forward amount. If [the initial discharge] is weak or [initial discharge time] is not long enough, the [duplication] needs to be smaller. On the other hand, it should be set to bigger if the discharge is strong or the time is longer.
Discharge 1	The discharge can be adjusted by two steps. The first step is discharge 1 and second is discharge 2. Discharge 1 is set here.
Discharge time 1	It sets the time of discharge 1.
Discharge 2	It is the second step of discharge. Discharge 2 is set here.
Discharge time 2	It sets the time of discharge 2. In general, [Discharge time 2] is set to "OFF". It is possible to set a very long discharge time; however, if the discharge time 1 and 2 is longer than 30 seconds, the discharge unit can be damaged.
Discharge time ON	It sets discharge to ON and OFF alternatively while the discharge 2 is performing discharge. The duration of discharge 2's operation is set here. The discharge time ON has to be set always in order to conduct re-discharge.
Discharge time OFF	It is used to set the duration of discharge 2's off time. When the discharge 2 stops working, the re-discharge stops as well sometimes. Set this parameter to "OFF" if a continuous re-discharge is required.

Re-discharge time	It sets the re-discharge time. It automatically sets the re-discharge to discharge the same amount as [Discharge 2] in [Splice Mode Edit]. If discharge 2 is set to ON and OFF, the re-discharge is automatically set to ON and OFF as well.
Attraction splice	The splice loss rate increases sometimes when the fiber becomes thinner. The attraction splice is set to "ON". The three factors of the attraction are decided by following three parameters.
Attraction waiting time	It sets the time between the last moment of fiber's moving forward and the initiation of attraction.
Attraction speed	It sets the speed of fiber attraction.
Attraction time	It sets the time of attraction.
Estimation modes	"OFF", "Core" or "Clad" "Clad" is selected during the MMF splicing. One of these can be chosen as a method to estimate the splice loss.
Left MFD	The MFD of left and right is set. The estimated splice loss for left and right MFDs has to be computed, respectively.
Right MFD	
Deviation	It refers to the sum of the initially measured splice loss value and increased loss value. When splicing special types of fiber or different kinds of fiber, a high splice loss can occur even under an optimized discharge condition. The minimum value of the actual splice loss has to be set in order to accord the actual splice loss value with estimated splice loss value.
Core arrangement proceed	Core arrangement proceed, Core irregularity and Inconsistent MFD affect the measurement of splice loss. If the estimated mode is set to "OFF" or "Clad", the core step, core irregularity and MFD defect are automatically set to "OFF". If the splice estimation that is considered to be certain is required to be amended, it is modified using Core arrangement proceed, Core irregularity and Inconsistent MFD.
Core irregularity	
Inconsistent MFD	

Entering mode title / notes / password

The list of characters is displayed underneath when choosing the mode title, note or password.

- 1 Select desired characters using up, down, left and right keys or tapping each character on the screen. Then, press “ENTER” to confirm the selections.




- 2 Confirm the selection of characters by pressing “ENTER” or tapping “Done” on the screen.

Attenuation splice

The attenuation mode is designed to attenuate the focal point of splice by intentionally generating the deviation of axes; it consists of two types.

One of “AT1(SM)”, “AT1(DS)”, “AT2(SM)”, “AT2(DS)” and “AT2(MM)” has been selected by default.

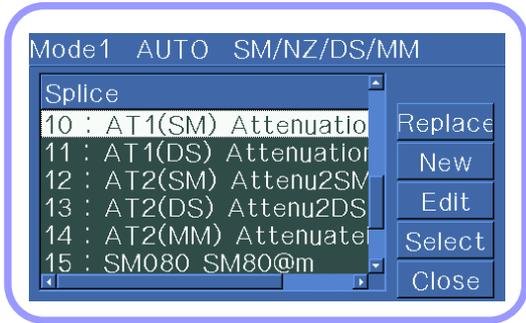

[AT1] Mode

[AT1] performs fiber splice intentionally using the core axis deviation. [AT1] displays the estimated splice loss value. But this data is not an accurate loss value but just a reference. It is recommended to use power meter to measure the accurate splice loss value.

2. Heater menu

The heater mode consists of 12 different modes. The operator needs to choose the most appropriate heater mode prior to using the protection sleeve.

The protection sleeve type uses the tube heat functions. The reference of this mode can be found in the database. Any contents required can be copied to and amended in the user's program.


Database

Parameters	Description
S-160	A mode to heat the standard 60mm sleeve. Ilsintech S-160
S-140	Ilsintech S-140 A mode to heat the standard 40 mm sleeve.
34mmA	A mode to heat the standard 34 mm macro sleeve.
25mmA	A mode to heat the standard 25 mm macro sleeve.
20mmA	A mode to heat the standard 20 mm macro sleeve.
40mmB	A mode to heat the standard 40 mm macro sleeve.
34mmB	A mode to heat the standard macro sleeve.
25mmB	A mode to heat the standard 25 mm macro sleeve.
20mmB	A mode to heat the standard 20 mm macro sleeve.
45mmC	A mode to heat the standard macro 45 mm sleeve.
34mmC	A mode to heat the standard 34 mm macro sleeve.
25mmC	A mode to heat the standard 25 mm macro sleeve.

Selecting a heater mode

Select a heater mode that is the most appropriate for the fiber protection sleeve in use.

- 1 The menu appears when pressing “MENU” is pressed or tapping “MENU” icon on the screen in ready mode.
The heater mode is displayed when selecting the heater menu with the cursor or tapping it.

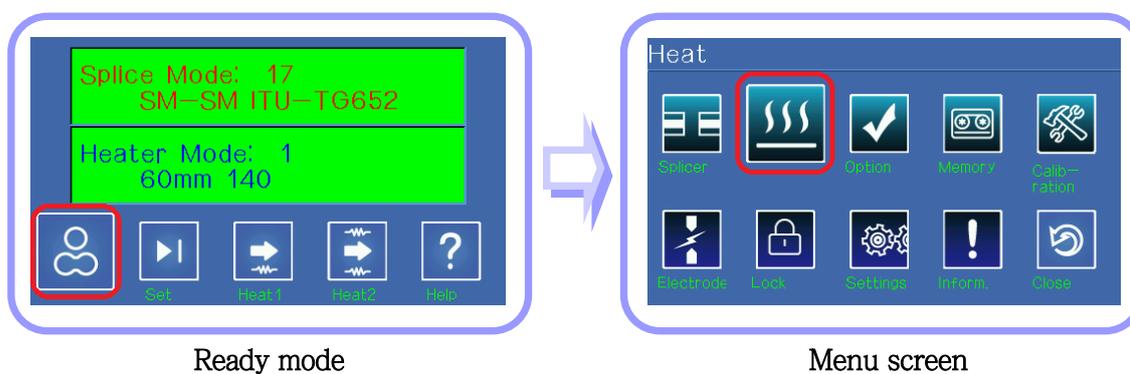

- 2 Use up and down keys to select a heater mode and press “ENTER” to confirm the selection. Or, select a heater mode by tapping it and tap “Select” to confirm it.



Setting a heater mode

Modifying heater mode

It is allowed to modify or amend the status of the tube heater, which are saved in the heater mode.

- 1 Select the edit mode in the [Heater mode selection] menu using the cursor. Click it to display [Heater mode edit].



Setting heater mode

Editing each element

- 2 Move the cursor to a desired location by using up and down keys or tapping the screen.
- 3 Press right arrow key or tap “Edit” to select an item. The value of each item can be adjusted by using left and right keys or tapping the screen. Press “ENTER” to save the modified value.

Editing of each item and generation / modification of a heater mode can be done in the same way as the splice mode (see page 38).

Parameters	Description
Sleeve type	<ul style="list-style-type: none"> • To set the proper sleeve type • Entire heater mode list is displayed. • The program mode that the user intends to use can be copied or selected from the list.

Method name 1	<ul style="list-style-type: none"> • A heater mode title is displayed at the right bottom on the screen while splice and heating are in operation. • Up to 5 characters
Method name 2	<ul style="list-style-type: none"> • The heater mode is described in the [Sleeve type] screen. • Up to 13 characters
Heater adjustment	<ul style="list-style-type: none"> • It sets heater adjustment sequence. • LONG 1 : use of 60mm protection sleeve • LONG 2 : The 60 mm protection sleeve is also used for a fiber cut by 8 mm and coated with Ny. • MIDDLE : The 40 mm protection sleeve is used. • MICRO 1 : The micro sleeve is used for a fiber with 900μm in external diameter. • Micro 2 : The 34mm micro sleeve or a little longer sleeve. • Micro 3 : The 34mm micro sleeve or a little shorter sleeve.
Heating time	<ul style="list-style-type: none"> • It sets the heating time. • The heating time is automatically adjusted depending on the surrounding temperature. The actual heating time could be longer or shorter than the set [Heating time].
Heater temperature	<ul style="list-style-type: none"> • It sets the heating temperature. • Ny coated fibers are used by cutting them by 8 mm and [Heating temperature] has to be higher than 190°C.
Ending temperature	<ul style="list-style-type: none"> • It sets the ending temperature. • The sleeve can be removed after completing heating. • [Caution] If the ending temperature is higher, a buzzer sound occurs before the sleeve cools down. If the temperature is higher than 1,000°C, the fiber remaining in the splice point could be compressed and transformed when removing the sleeve from the tube heater.



- Set the temperature below 200°C when heating the standard sleeve.
- DO NOT set the heating time longer than 120 seconds at high temperature (higher than 150°C).


3. Stripper Mode

There are two stripper modes.


Since the types of fibers are varied, select the most suitable stripper mode should be selected.

Stripper mode selection


- 1 Select Stripper Mode] is selected in [Main Menu] to display stripper modes.

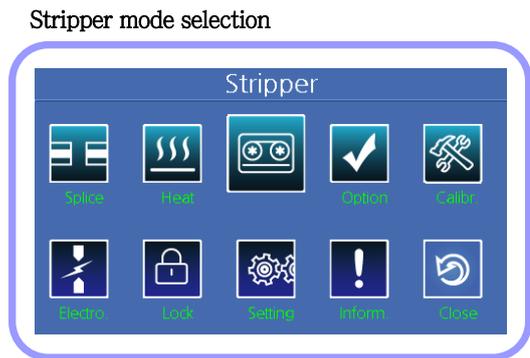

- 2 When  is selected, temperature setting bar shows current set temperature.

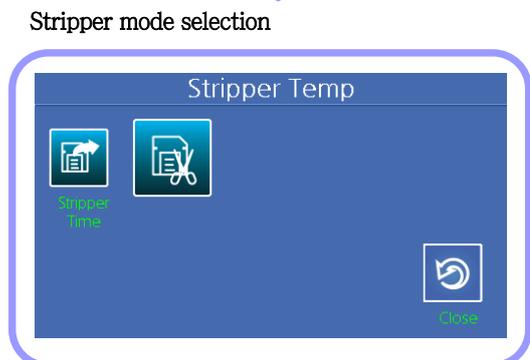

Selection

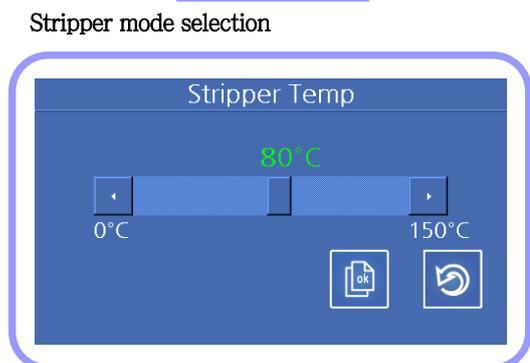


Selection of strip time

- 1 Select [Strip Time Selection] to display strip time.


Select splice mode





Strip time selection

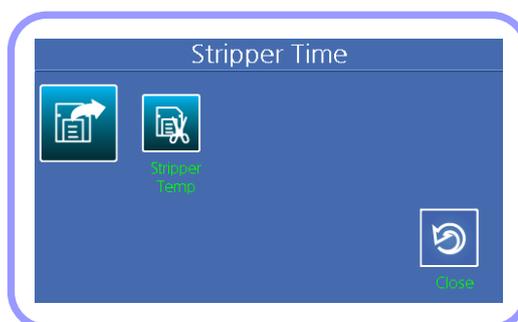

Strip time setting

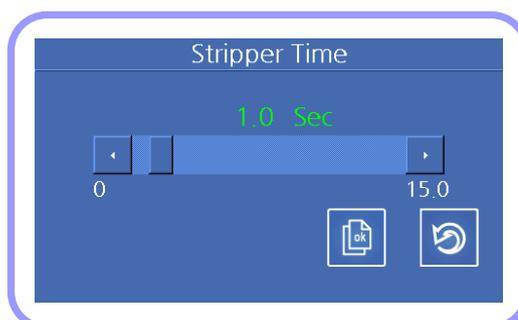

- 2 When  is pressed, time setting bar shows the current set time.


- 3 Select appropriate strip time by using  or  and confirm the adjustment by pressing .



Strip time can be set from 0 to 15 seconds. Select a time frame suitable for the sheath of the fiber to be used.

4. Additional functions for splice


There are 6 sub menus within the additional functions for splice menu.

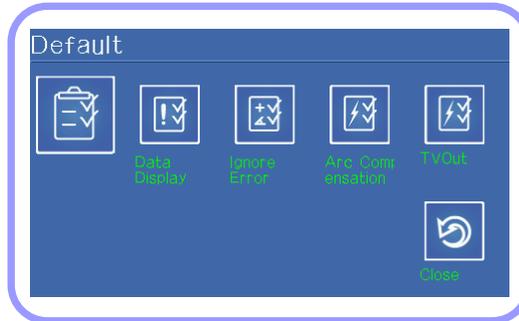

It can be selected using left and right keys and "ENTER" or tapping the screen.

Basic matters

General settings for the entire modes of splice and tube heater operation can be done.

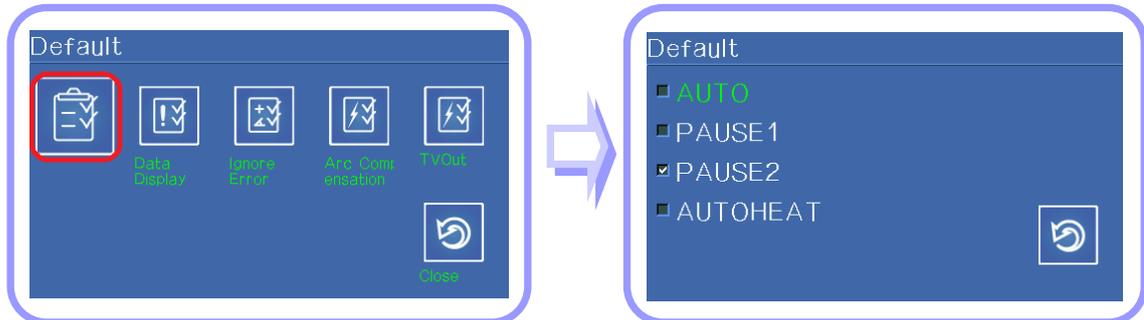

Setting menu

Parameters	Description
Auto splice	The splice process is performed automatically if “Auto splice” is set to “ON”. The splice process is carried out automatically when the windshield is closed after preparing fibers inside the splicer.
Pause 1	The splice work stops after completing the adjustment of the distance between fibers when Pause 1 is set to ON. The splice process is continued when pressing SET button. The cut angle is displayed on the screen during the pause.
Pause 2	The splice work stops after completing the arrangement of fibers when Pause 2 is sent to ON. Discharge splice process is activated when pressing ARC button.
Data display	
Cut angle	When it is set to ON, the cut angles of left and right are measured and displayed on the screen.
Axis deviation	When it is set to ON, the result of measuring the arrangement deviation of core and clad is displayed on the screen.


Displaying data

The user can choose whether to display the cut angle and axis deviation on the screen during splicing.



Ignoring a splice error

The user is allowed to choose whether an error is detected or not while the splice is in progress or it is completed.

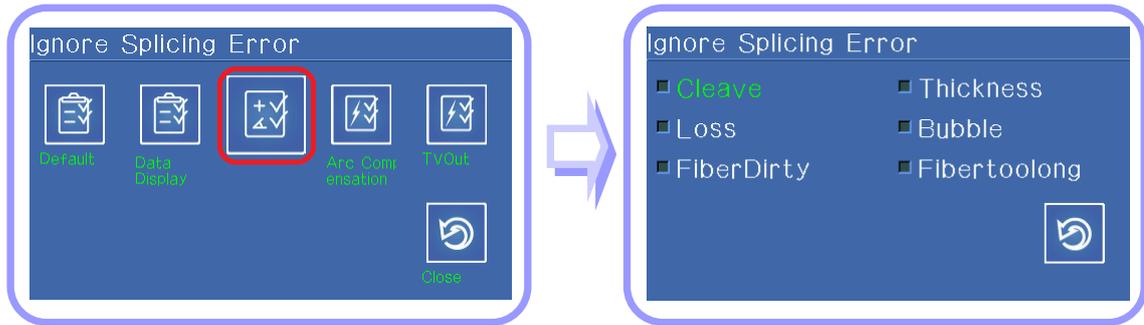


Setting menu

Parameters	Description
Cleave	If it is set to ON, an error message appears when the cut angle set for each mode is exceeded.
Loss	If it is set to ON, an error message appears when the loss limit for each mode is exceeded.
Fiber Dirty	If it is set to ON, an error message appears if the surface of the fibers placed in the splicer is not clean.
Thickness	If it is set to ON, an error message appears when the spliced area of the fiber whose splice is done is too thick or thick.
Bubble	If it is set to ON, an error message appears when bubbles are generated in the core of the priced area.
Fiber too long	If it is set to ON, an error message appears when too long fibers are placed in the V-groove.


Compensating discharge

Air pressure and temperature are crucial factors for discharging when performing splice. Therefore, the user is allowed to choose whether to compensate the discharge depending on air pressure and temperature.

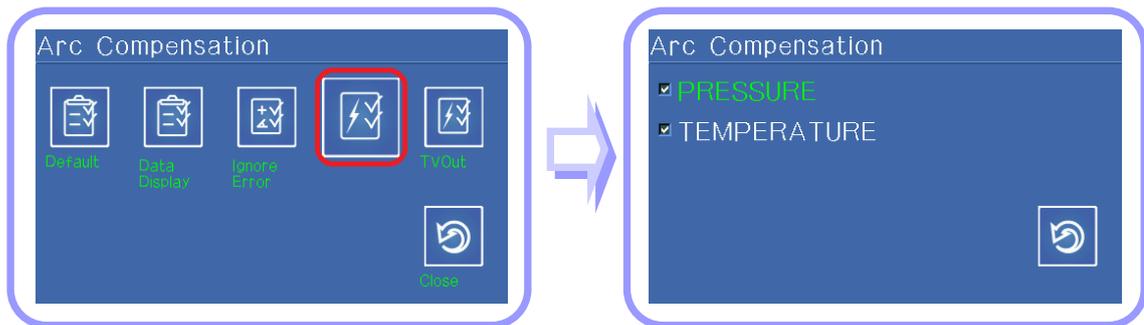


TV Output

The contents of the splicer can be printed via external visual equipment and applicable output methods can be determined.

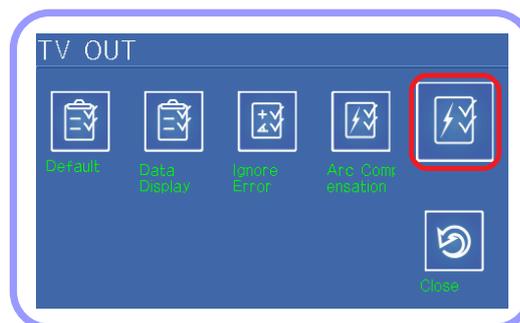

5. Checking arc fusion splice result



The splice result saved in the memory can be displayed and the saved result can be added or modified.

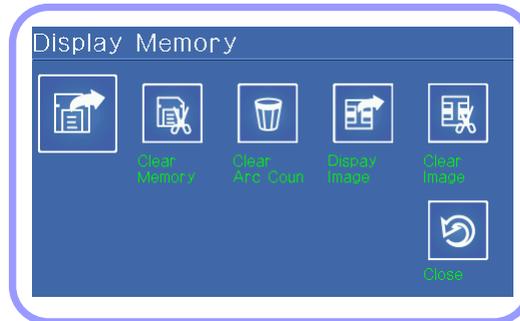

It can be selected using left and right keys and "ENTER" or tapping the screen.


Displaying splice result

The splice mode type, fiber condition, climate conditions and splice result can be verified. Select a desired item among the displayed splice items and press "ENTER" key.

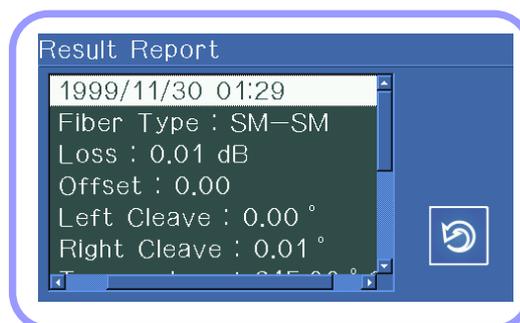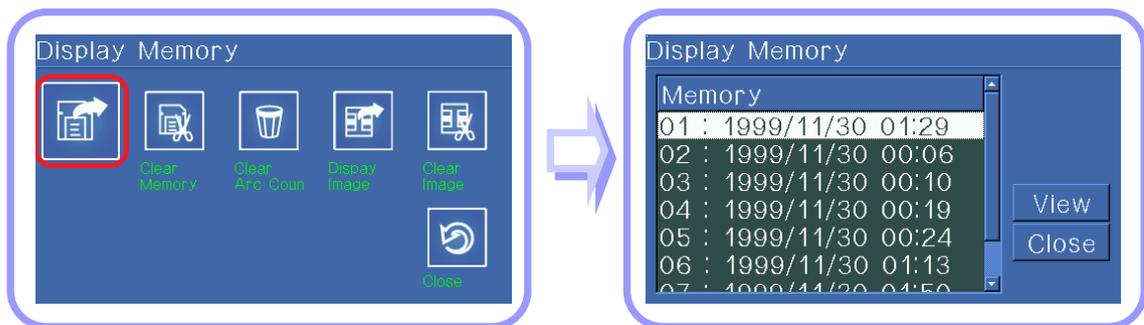


Deleting a result

A part of or the entire splice results can be deleted.

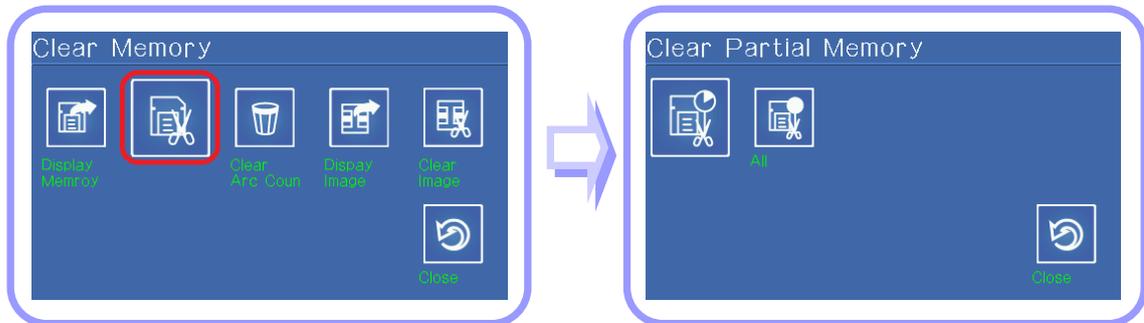

Deleting discharge count


The use count of the electrode in use can be deleted. An error message requiring the replacement of electrode may appear if a new electrode is used without deleting the count after replacement.

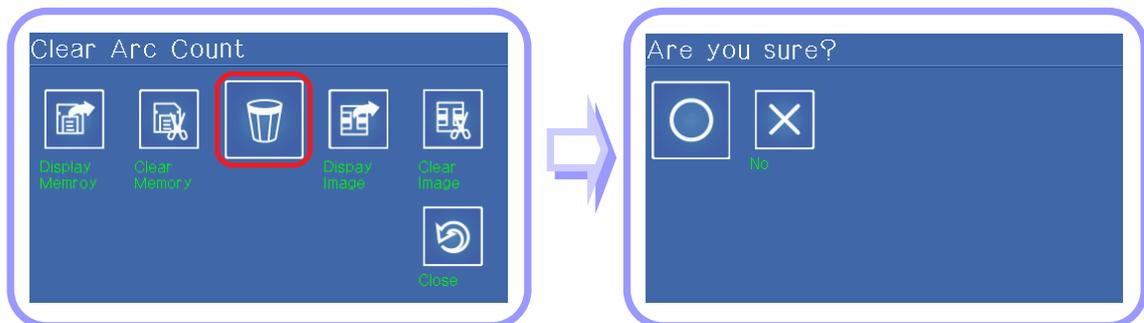

This function should be activated after replacing the electrode.


Splicing result image

The slicing status of fiber during splicing can be saved and checked later.

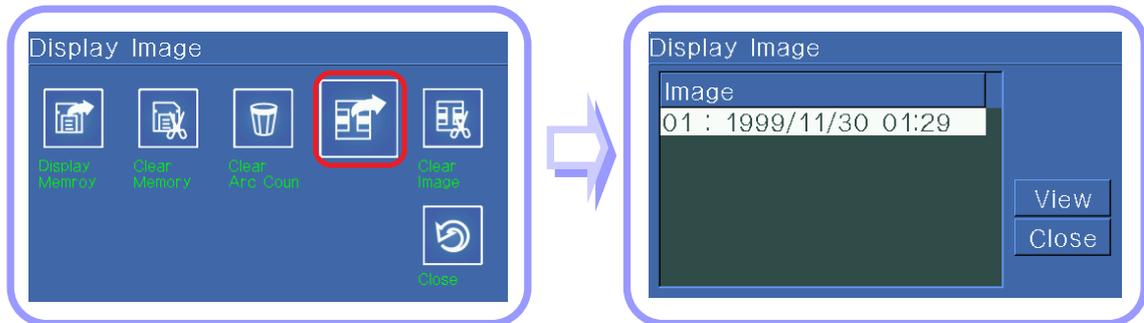


Deleting splicing result image

A part of or the entire images that have been saved can be deleted.

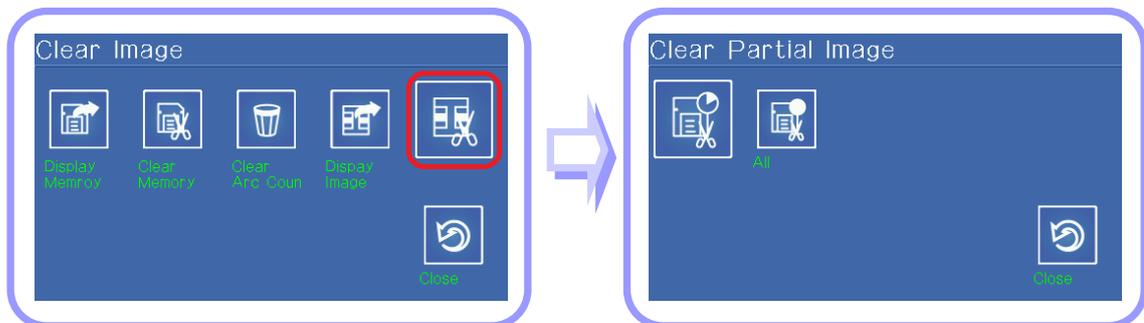


6. Calibration

The calibration menu consists of 7 sub menus and is used for checking the basic matters that can be troubled during the operation of the splicer and the condition of the device. It includes discharge calibration, self diagnosis and dust inspection.

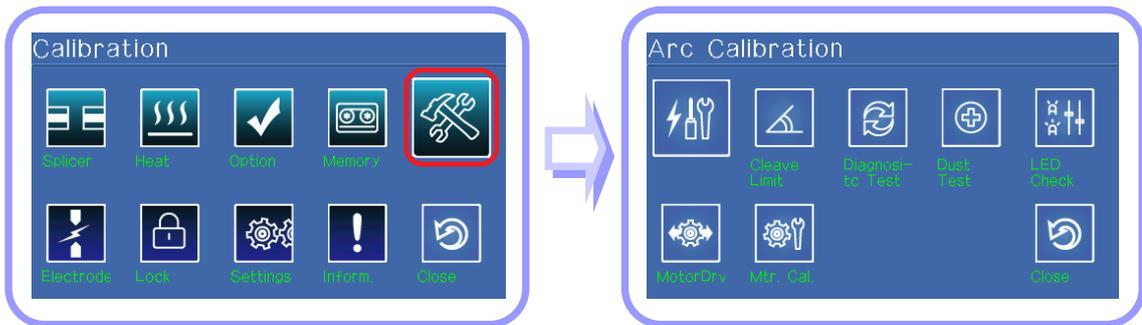

Discharge calibration

The changes of surrounding temperature, humidity and air pressure that have been detected by relevant sensors affect the calibration of discharge. But the changes in discharge due to the abrasion of the electrode and splice are not automatically calibrated. Also, the center axis can be moved to left or right while performing splice resulting in the change of the spliced position of the fiber. For this reason, discharge calibration is required.

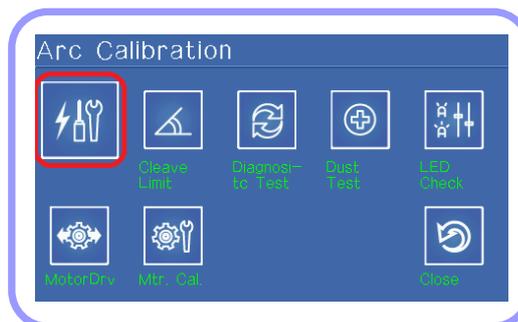

- [Discharge calibration] is a function to change the “element” value of the discharged voltage. The value is used for the computation program for splicing. In addition, the calibration value of discharge cannot be changed in the splice mode.
- For the purpose of discharge calibration, a single mode fiber is used.


1 Select [discharge calibration] in the [Splice menu] to open discharge calibration screen.

2 Place the fiber to splice on the splicer



- In general, SM or DS fibers are used for discharge calibration.
- If there is dust on the fiber used for calibration, the discharge calibration may be affected.

3 To activate it, press “ENTER” or tap the activation icon.

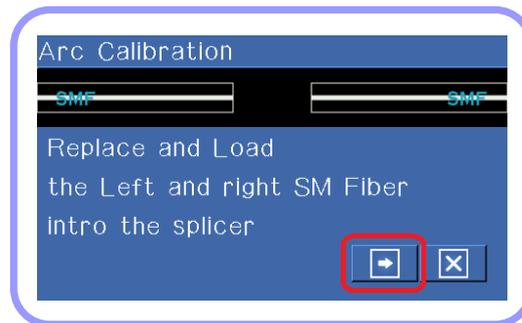

Discharge is carried out after arranging the fibers and the amount of discharge is adjusted according to the discharge condition.

4 Result similar to following is displayed on the screen when measuring is completed.

“Test Finish” message

This message indicates that discharge voltage calibration and splice position have been successfully completed. Press “Esc” to end this function.


“Test again” message

This message indicates that the discharge voltage calibration and splice position have been completed but since the measured value after calibration has been changed a lot comparing to the set value, the discharge calibration has to be carried out again. The calibration can be stopped by pressing “Esc” even if it has not completed.

 In some cases, re-discharge has to be conducted multiple times until “Test Finish” or a message indicating test success is displayed. Even if no message indicating test success is presented after several times of re-discharge, it could be considered to have been almost completed.

Setting cut angle limit

It indicates the cut angle that is measured during the discharge calibration. Therefore, it does not affect the cut angle set for each splice mode and the set angle will be applied only during the calibration.

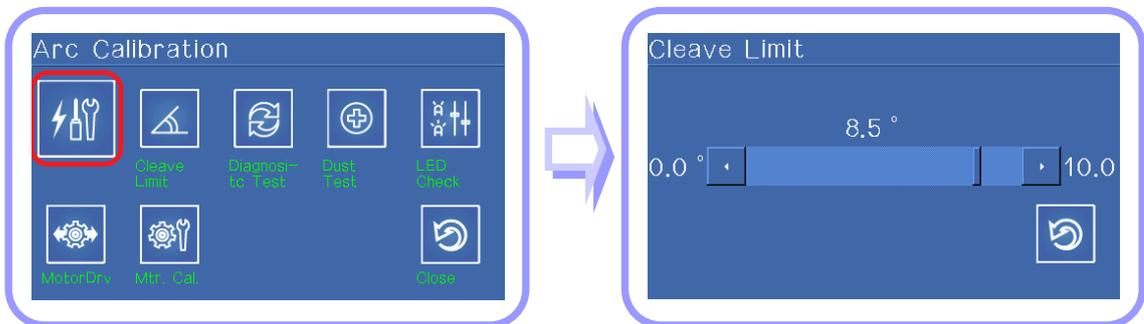


Self diagnosis

Swift S5 is designed to check its entire functions by simple self diagnosis tests. It is useful to check the functional condition of the arc fusion splicer.




- 1 The self-diagnosis can start by pressing “ENTER” or tapping the screen after removing fibers from the device. See the table below.

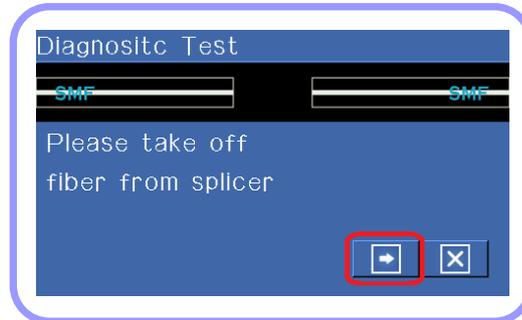

	Test item	Description
1	LED Test	Check the brightness of LED.
2	Motor Test	Check the performance of each motor.
3	Dust Test	Observe fibers to find if there is any dust or foreign substances.


- 2 Place properly fibers in the V-groove of splicer after completing dust test. The process of calibrating motors is initiated when pressing “ENTER” or tapping the screen.

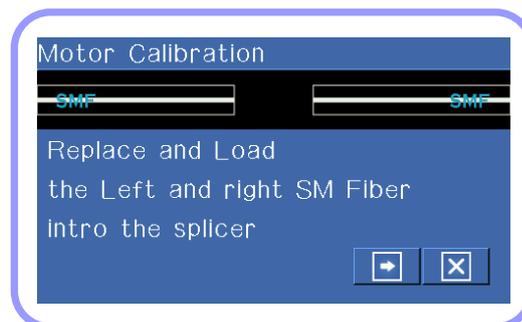

- 3 The result will be displayed on the screen when the tests are completed. If necessary, clean the object lenses. If the foreign substances are not removed after cleaning the object lenses, it is possible that there is a problem in the optic transfer path. In this case, contact Ilsintech. Perform dust test and LED test from [Calibration menu].

Dust test

The arc fusion splicer observes fibers through after processing the image visually. Dusts or dirt on the camera, lenses or windshield mirror may interrupt normal observation of fibers, causing a wrong splice result. This function checks the optic fiber path if it is contaminated so it can result in a splice problem.

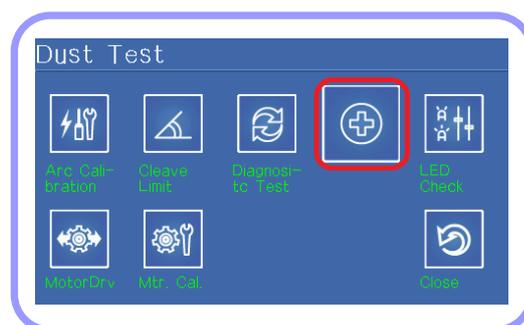


- 1 Remove any fibers placed in the splicer and press “ENTER” key to start the test.
- 2 If an error message appears on the screen after checking, clean the windshield mirror and the objective lenses and perform [Dust test] again. Refer to “Maintaining splice quality” for the instructions on how to clean.
- 3 Press “Esc” to end dust test.



If the foreign substances are not removed after cleaning the windshield mirror or the object lenses, contact Ilsintech.

LED Test

The arc fusion splicer observes fibers after processing the image visually. Dusts or dirt on the camera, lenses or windshield mirror may interrupt normal observation of fibers, causing a wrong splice result. This function checks the optic fiber path if it is contaminated so it can result in a splice problem.

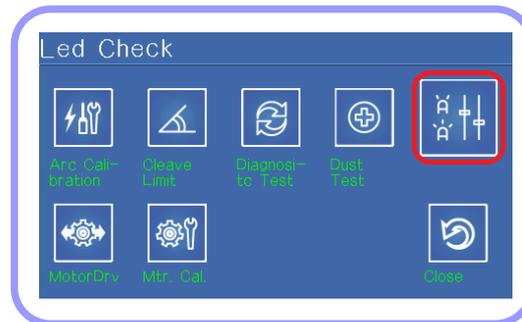


- 1 Remove any fibers placed in the splicer and press “ENTER” key to start the test.
- 2 If an error message appears on the screen after checking, clean the windshield mirror and the objective lenses and perform [Dust test] again. Refer to “Maintaining splice quality” for the instructions on how to clean.
- 3 Press “Esc” to end dust test.



If the foreign substances are not removed after cleaning the windshield mirror or the object lenses, contact Ilsintech.

Running motors

The each of six motors installed in the splicer can be run manually, respectively. The motors can be run using this menu after activating [Pause 1] or [Pause 2] during splicing.

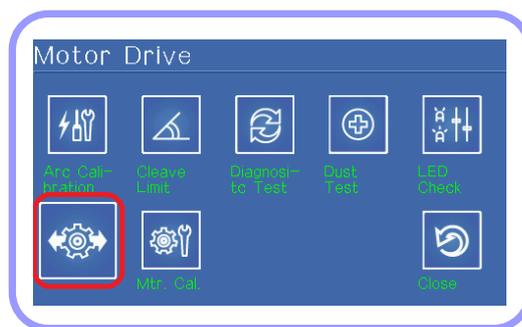


- 1 Use   buttons to select a motor. The name of the selected motor is displayed at the top left on the screen.

- 2 Use   buttons to move the selected motor to a desired direction.

Motor		
ZL/ZR	ZL/ZR Move forward	ZL/ZR Move backward
X/Y	Fibers are moved downward.	Fibers are moved upward.
X CAM Y CAM	The lenses are moved away from the fiber	The lenses are moved toward the fiber.


7. Electrode

It is necessary to regularly check and clean the splicer because the electrode is worn out and silica oxidized substances is deposited. This menu is about replacing the electrode and composed of 4 sub menus.

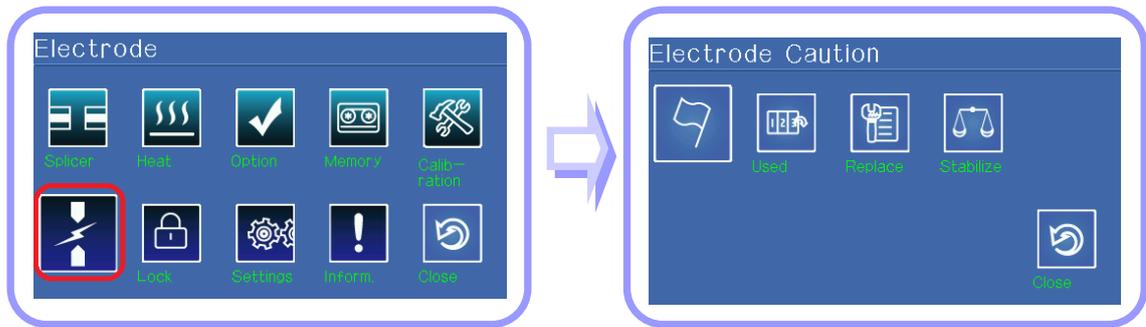


Electrode warning

The recommended replacement cycle of an electrode is 3,000 times use. You can set the replacement cycle. Then, when the set cycle completes, a message to recommend the replacement of the electrode appears.

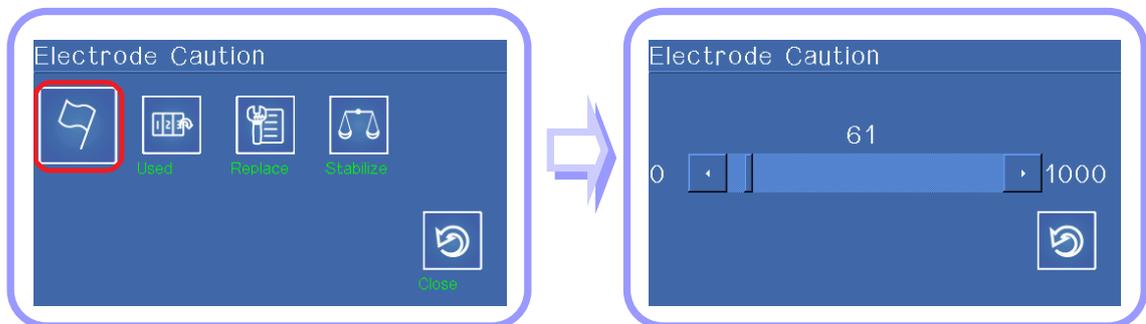

Use count of electrode


The use count of electrode is displayed.

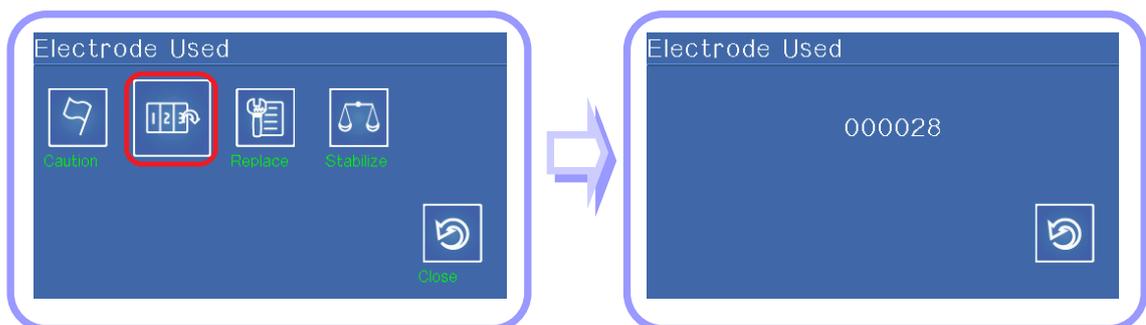

Electrode replacement

The recommended replacement cycle of an electrode is 3,000 times use. When the set cycle completes, a message to recommend the replacement of the electrode appears. For the replacement of the electrode, you have to turn off the power of the device. If you continue operating the splicer without replacing the worn electrode, the splice loss rate increases and the spliced point becomes weaker.

- 1 Turn off the splicer power.
- 2 Open the electrode cover and unscrew the bolt.
- 3 Remove the electrode cover and take out the used electrode.
- 4 Carefully clean the new electrodes with a cotton swab soaked in alcohol and install it in the splicer.

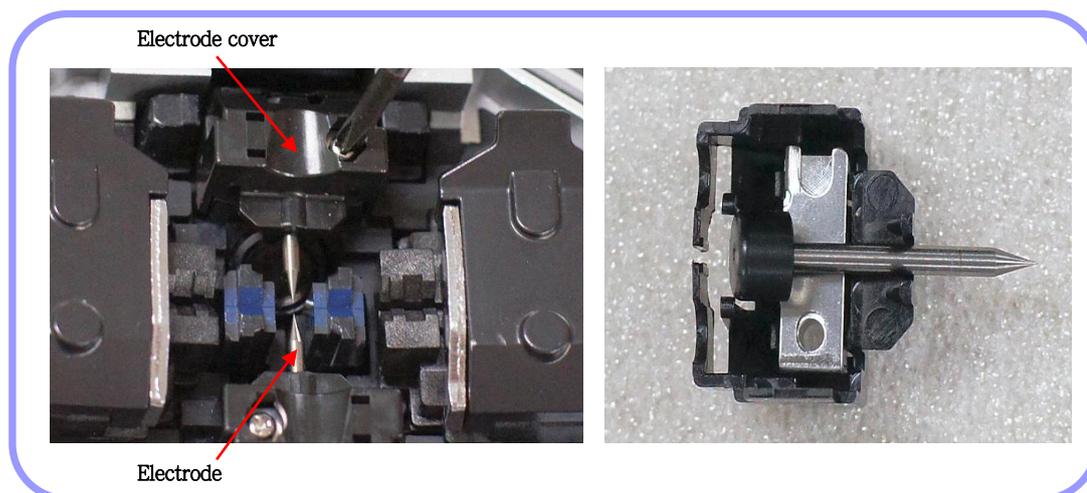

- i. Place the electrode inside the groove in the electrode cover.
- ii. Close the electrode cover.
- iii. Fasten the bolt again.




- Make sure that no damage to the splicer occurs.
- Place the electrode cover at the precise position and fasten the bolt, pressing the cover.

- 5 Turn on the power. Perform the stabilization of the electrode from the [Electrode] menu.

Electrode stabilization


Sometimes, surrounding environment may cause the occurrence of irregular discharges or splice loss increase. In particular, since it takes a while until discharge is stabilized when the splicer is in lower or higher location, you have to keep adjusting the discharge until the electrode in the case is stabilized. When the measuring is completed “Test Finish” message appears, which indicates that [Discharge calibration] has been properly completed.

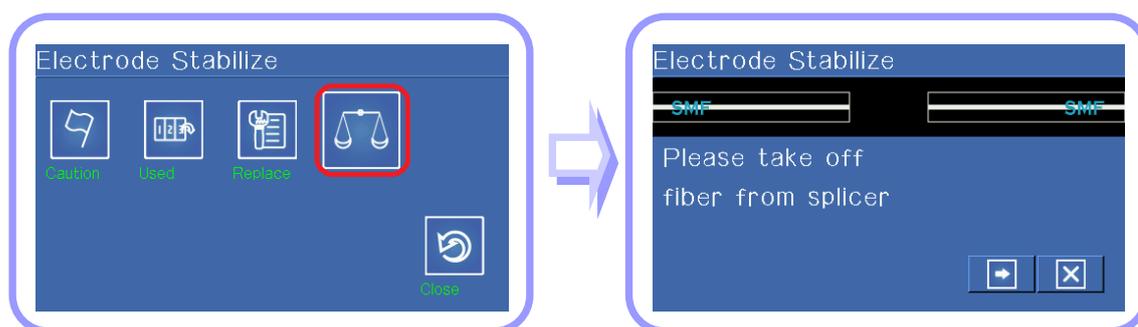

- 1 Remove the fibers in the splicer to perform splicing.
- 2 Press “ENTER” key to activate the process for the stabilization of the electrode.
- 3 The stabilization process is completed when [Discharge calibration] ends.

8. Locking menu


Menus of the splicer can be locked.

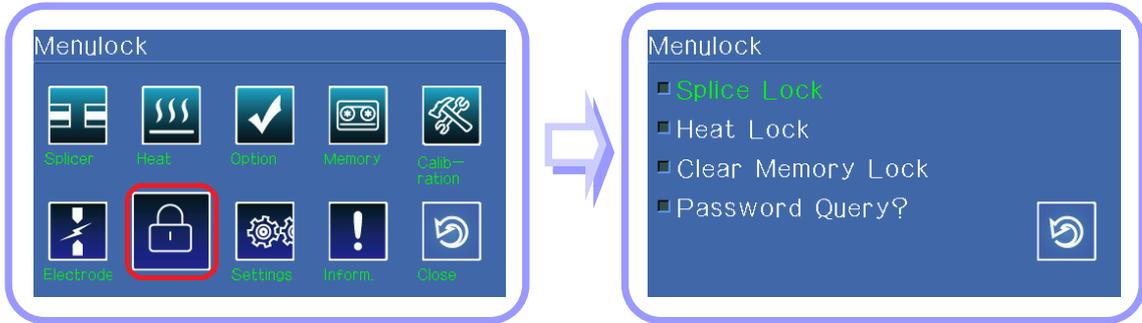

Item	Description
Splice Lock	Check the item to lock it.
Heater Lock	Check the item to lock it.
History Lock	Check the item to lock it.
Splice Lock	If this item is checked, you will be asked to enter password when entering the lock menu.


9. Settings

You can modify the detailed settings of the splicer in this menu which contains 8 sub menus.

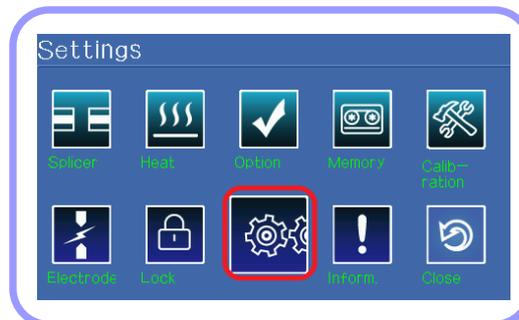


Language

It is used to set the language display.

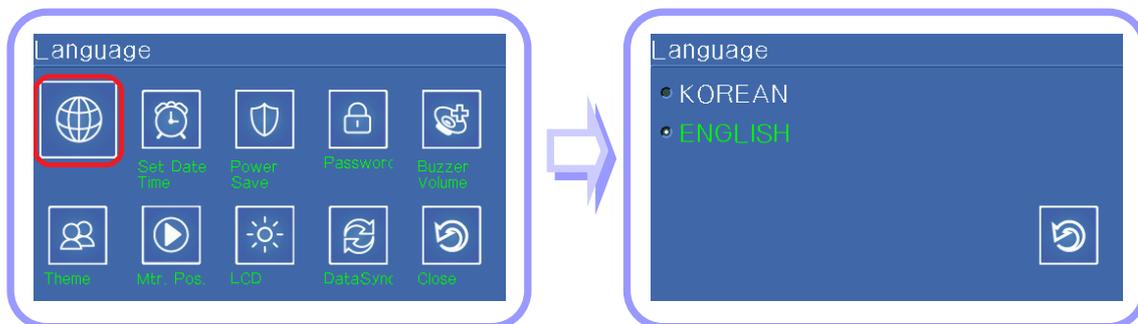

Date


It is used to set the date and time that is saved in the splicer.

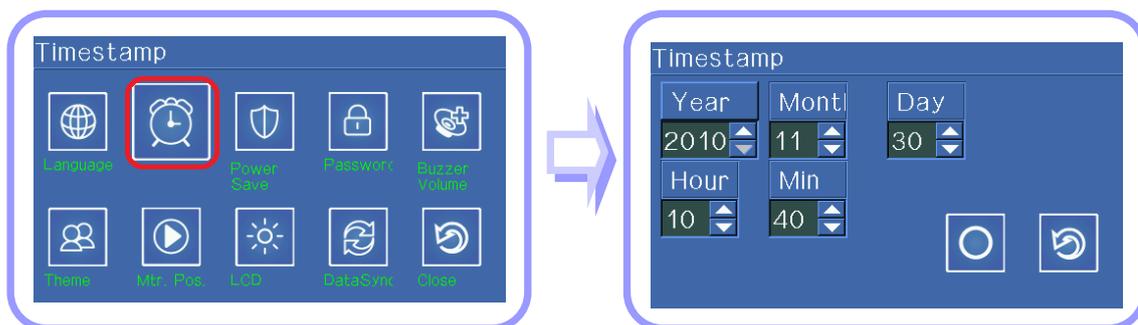

- 1 Select the menu for [Setting date].
- 2 When the screen for setting Year, Month, Date appears, enter appropriate date and time information using left and right direction key to move the cursor and up and down keys to change the figure. Or you can enter them by tapping the screen.
- 3 Press "ENTER" key to save the settings.


Power saving

The function to save power is an important function in terms of energy efficiency. When the device is powered by the battery pack, operating the device without setting the power saving mode will result in the decrease of available splice times. It is recommended to use the power saving function. Specifically, you can set following functions.

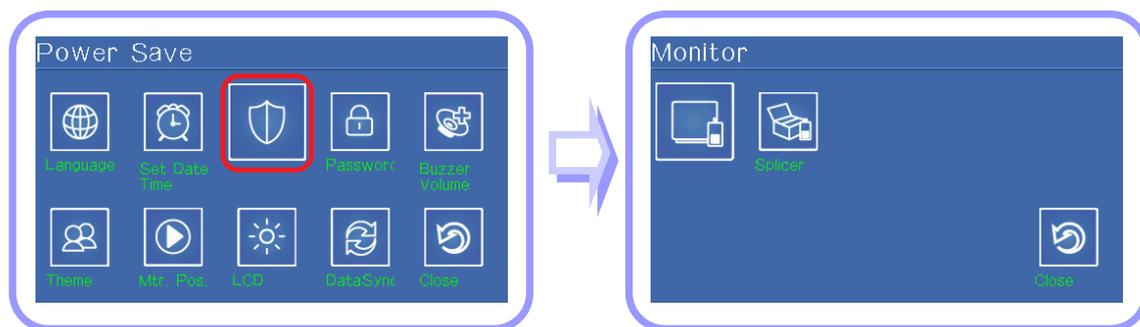

Turning off the monitor


The LCD will be automatically turned off, if the splicer is not used for a specific period of time. When run by the battery pack, make sure to activate this function.

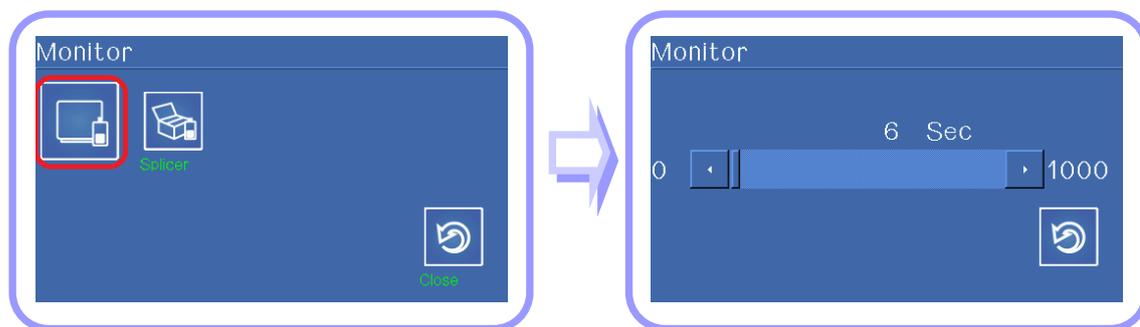

The monitor is turned on again when you press any key on the keypad.


Turning off the splicer

The splicer will be automatically turned off, if the splicer is not used for a specific period of time.

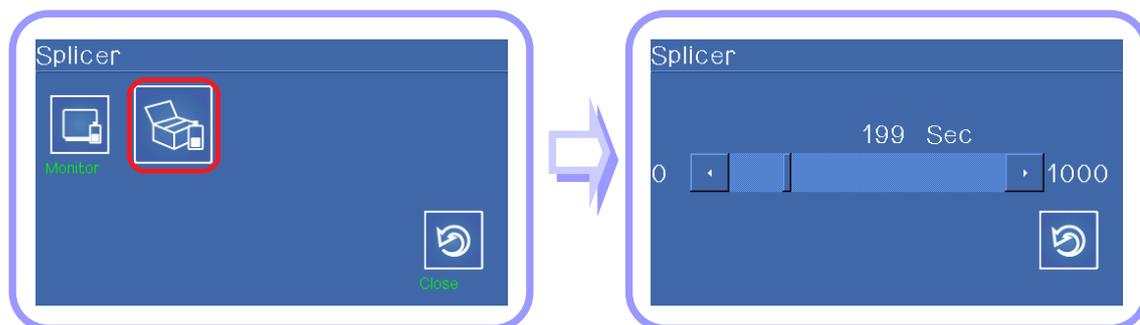

Changing password


The password of the splicer can be changed.

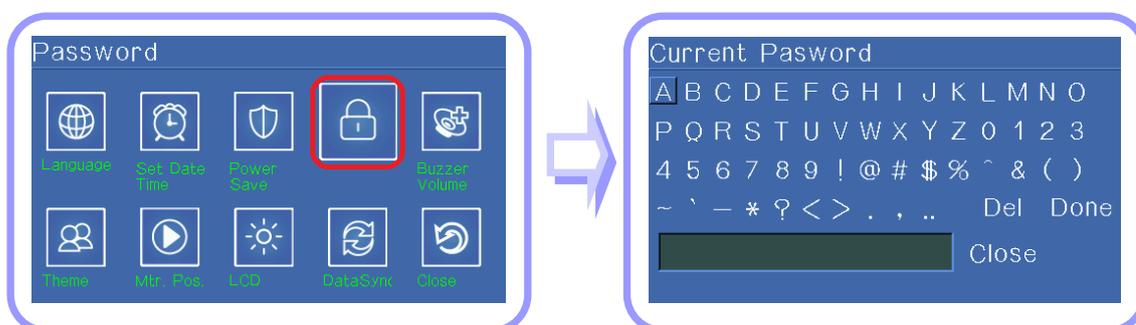

- 1 Enter the current password using up, down, left and right keys and tapping the characters by a finger and press "ENTER" key.




The password was set to 12345678 in the factory.

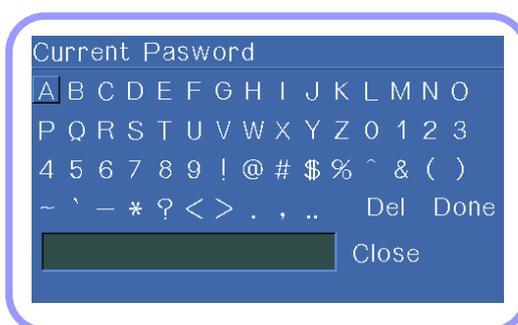

- 2 Enter new password.




- 3 Enter the new password again to check if it is correctly set.

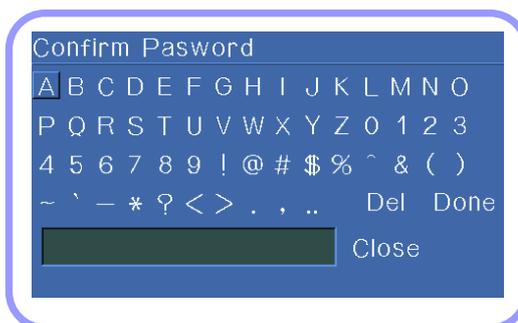




When changing the password, if an incorrect password is entered or you press a wrong button, the screen moves to upper level. You have to remember the password. If you lose the password, the device has to be brought to the factory to repair it.

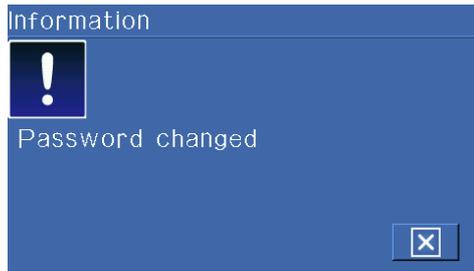


If the correct password is entered, the change is completed.

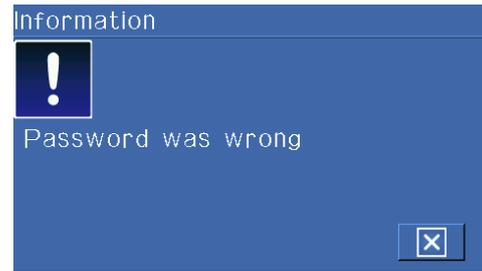

If an incorrect password is entered, the process has to start over.


Buzzer

The buzzer can be turned on or off.

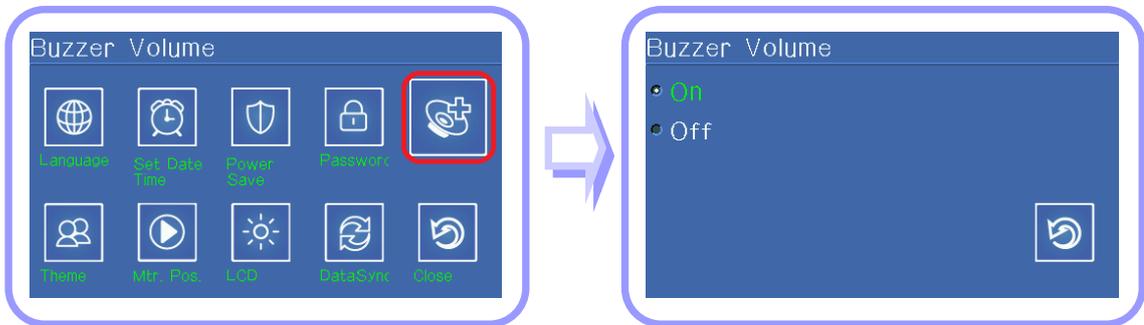


Theme

The screen theme can be changed.

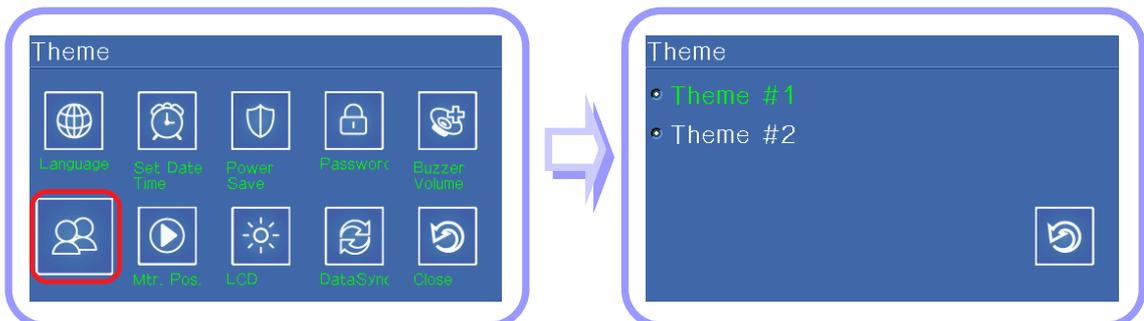


Monitor display

The position of the swivel monitor can be changed depending on work situation.

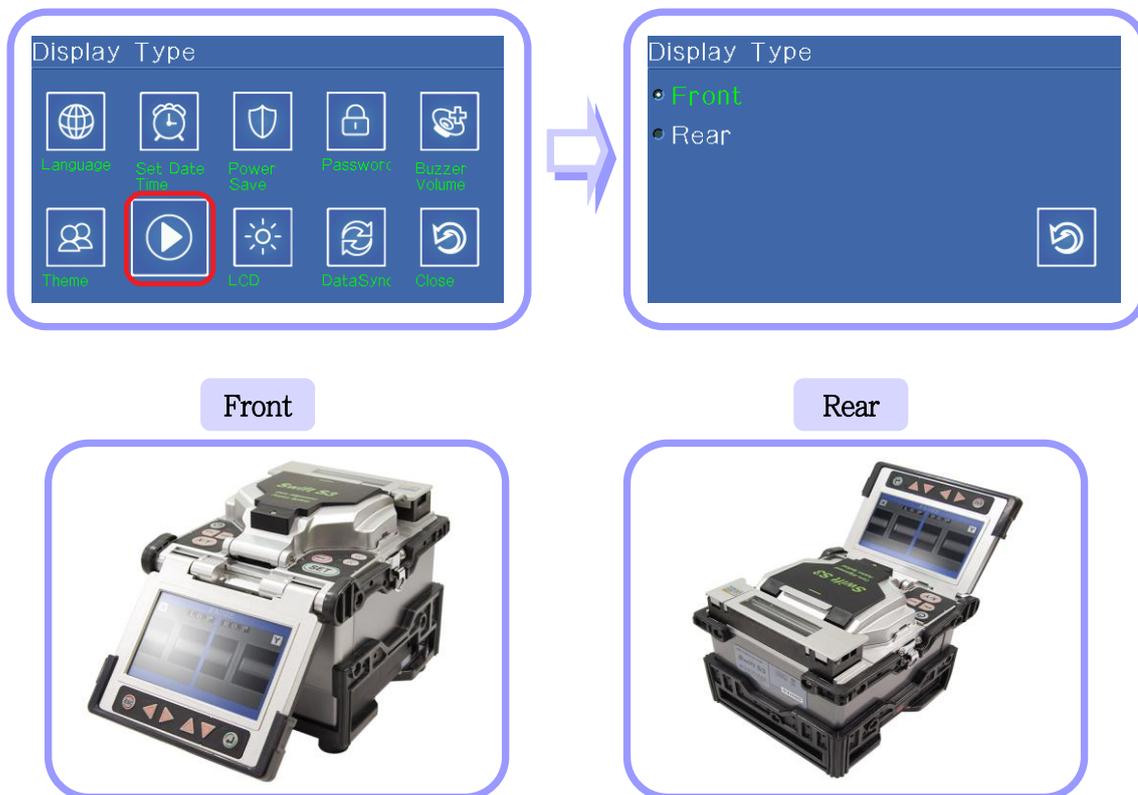


Adjusting monitor brightness

The brightness of LCD can be adjusted.

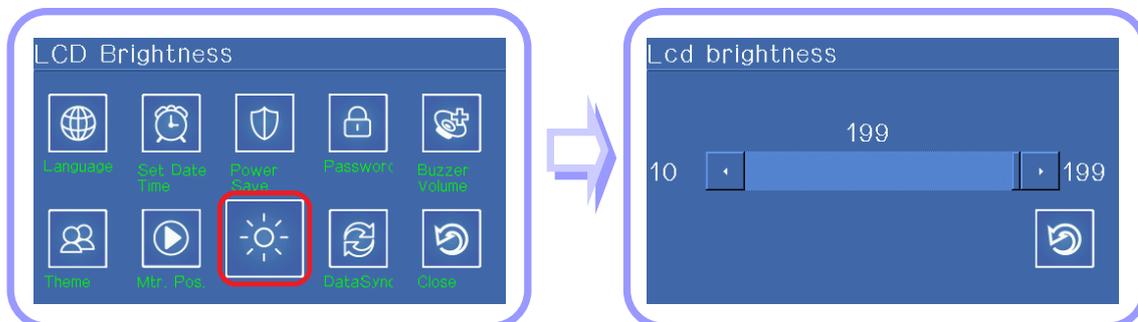


10. Information

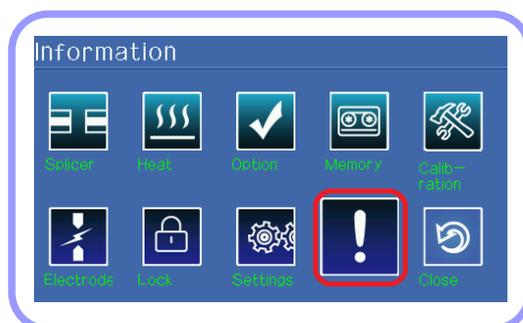

Maintenance information


When [Maintenance information] is selected, following information is displayed.

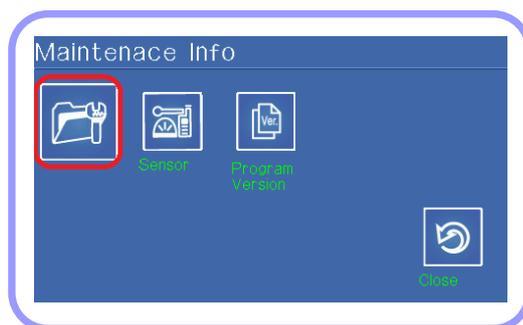

Items	Description
Production date	The date when equipment was manufactured (year, month and date).
Discharge count	Discharge count since the replacement of the electrode. It can be initialized to '0' by activating [Deleting discharge count] in the [Sub] menu.
Total discharge count	Total discharge count since its first operation.
Last maintenance date	The date when the device was maintained most recently.
Next maintenance date	The date where the device will be maintained next time.
Serial number	The unique serial number given to the device.


Sensor information

The splicer consists of various sensors including temperature, pressure and humidity.

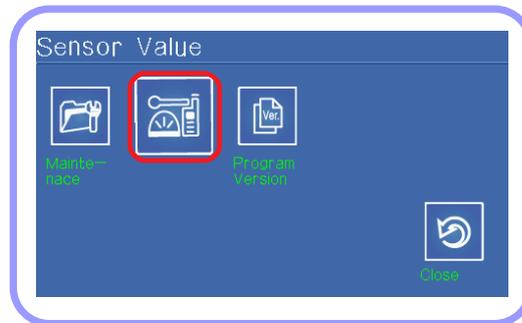

Program information

The version of the program in use can be checked.

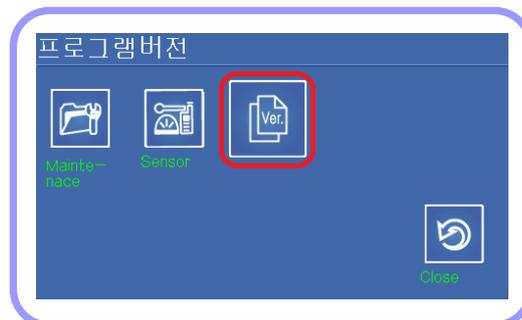

1. Operational environment and basic structure

1) Program overview

- The remaining memory, various parameters and settings of Swift S5
- The splice images saved in Swift S5

2) Operational environment

- OS : Windows XP, Windows Vista, Windows 7
- It supports 32 bit operating system.
- Serial communication is used to transmit data to Swift S5.

3) How to run the program


- 1 Connect the equipment with PC through the USB to Serial Cable provided by the company.
- 2 Select “Menu → Setting → Data Sync” on the control panel of Swift S5.
- 3 PC Double click S5_DataSync.exe on the PC.
- 4 Enter the number of the port with which S5 equipment has been connected.
- 5 Run the program.

4) How to end the program

- 1 Click “X” button at the top right on the screen.
- 2 Stop the process of data synchronization of Swift S5.

5) Operating screen

See below figure.

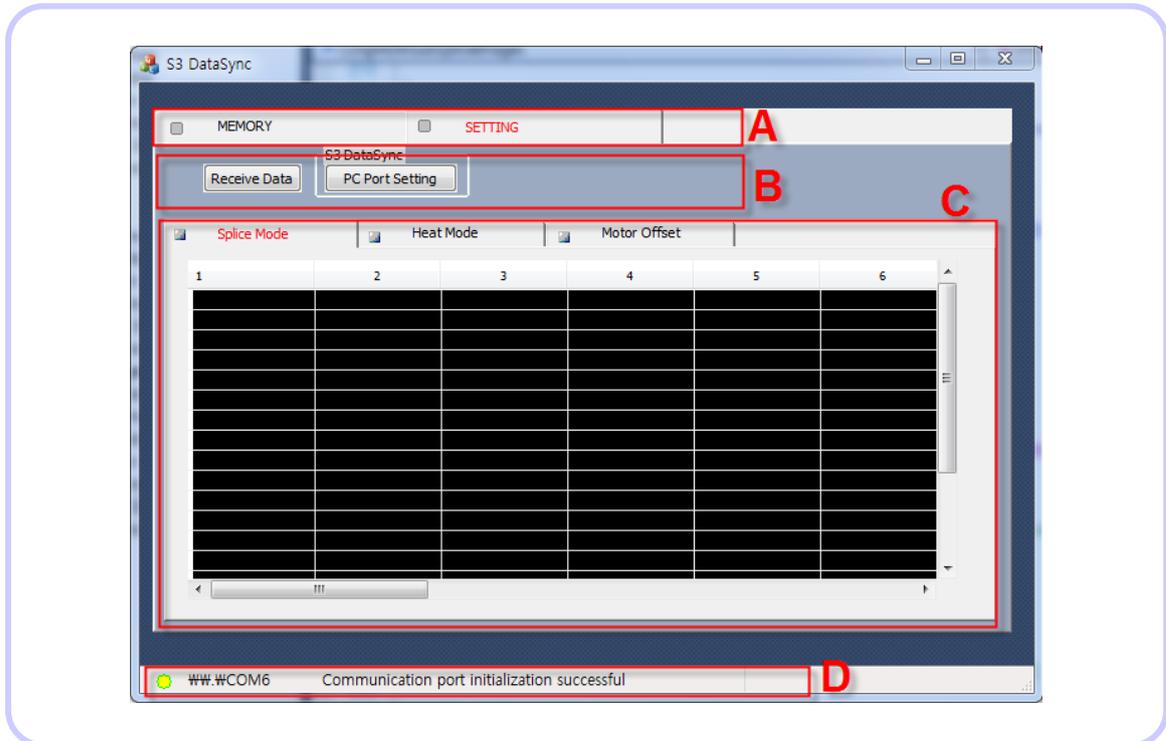

A : Main menu tap: Memory and Setting

B : User can send data and set parameters.

- Possible to download data that are selected in the sub-menus of C.
- Additional functions of the main menu selected.

C : The data received from Swift S5 are presented.

D : Current port selected and important comments are displayed.

2. Key functions: Setting the port

Step : 1


Enter the number of port that is connected when the program was run first time and click [Ok].

Step : 2

Changing or setting the connection port while the program is running: Click Setting -> PC Port Setting

Others

For verifying the number of port that has been in use, see below image.

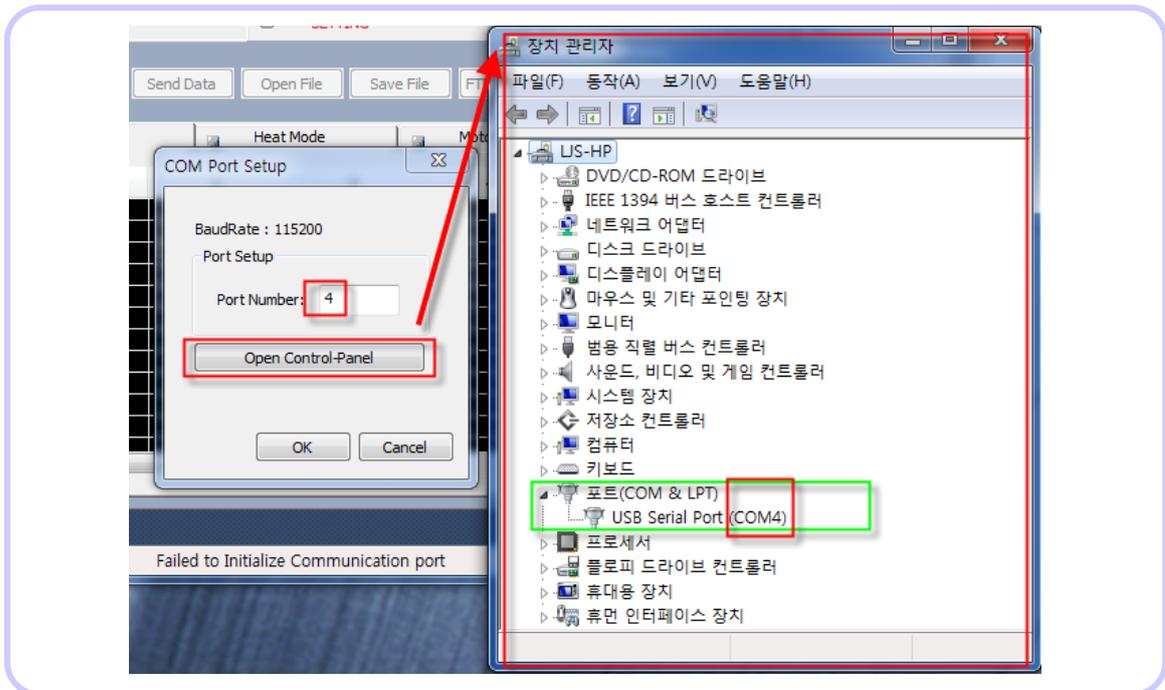

Display of port status

When the port has been successfully connected, the port number is displayed on the status bar at the bottom.




Note) The number of the port that has been set is recorded in the system so that it is used when the program is activated again.

2) View the results of splicing


- 1 Select the Memory tap at the top.
- 2 Select Splice Images tap at the bottom of the memory screen.
- 3 Press Receive button to fetch splice image list from Swift S5 to the PC.
- 4 Double click the fetched list to show the image on the right space.
- 5 Up to 6 images can be displayed on the screen at the same time.
 - Click “X” on the image to remove the image from the screen.
 - Even if an image has been removed on the screen, the original file saved in the images folder in the PC is not deleted.
 - Even if an image has been removed on the screen, its original image in Swift S5 is not deleted.
 - Press the “Clear All” button to remove the entire images out of screen at the same time.
 - If a message “No more images can be viewed” appears, press “X” or “Clear All” button to remove one or all the image from the screen.

Note) Downloading an image may take some time because it is serial communication transmission.

When downloading an image starts, the status is shown under the Receive button.

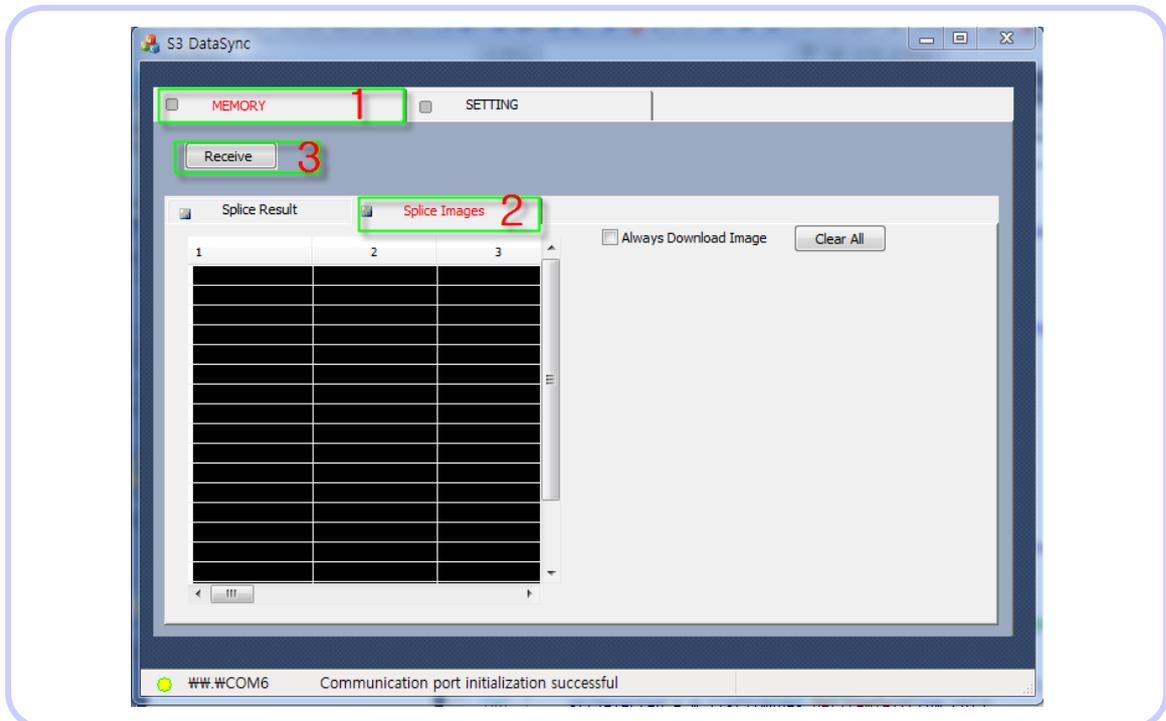

< How to view a splice image list >

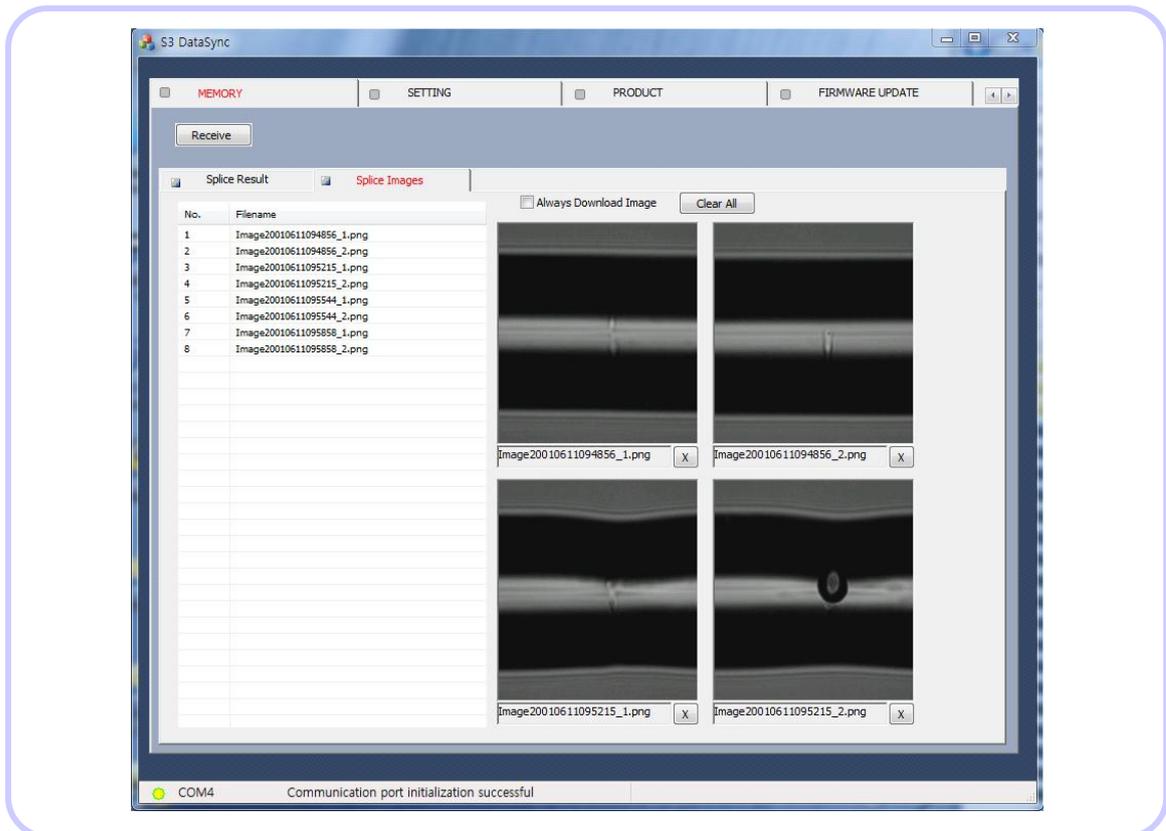

〈 Double click the list downloaded to view a splice image 〉

Note) “Always Download Image” check box

: The system automatically opens the image saved in the images folder under the program directory, if the same image has been already downloaded and still exists without downloading the image from Swift S5 again.

However, if this check box is selected, the system always downloads images selected by user from Swift S5 to display regardless of the existence of the images that have the same file name.


: This function is used when user wants to replace existing image files with new images.

Note) The image box can be moved by dragging it. This function is useful for user who is using a monitor with low resolution. Use the “Clear All” button to clear the screen.

3) Displaying the motor offset settings

- 1 Select the Setting tap at the top.
- 2 Select the Setting Motor Offset tap at the bottom.
- 3 Click the Receive button to fetch the motor offset mode settings of Swift S5.
- 4 The motor mode information is downloaded and saved as “config_motoroffset.csv”

Note) The “.csv” files are saved in a folder under the directory in which executable files are saved.

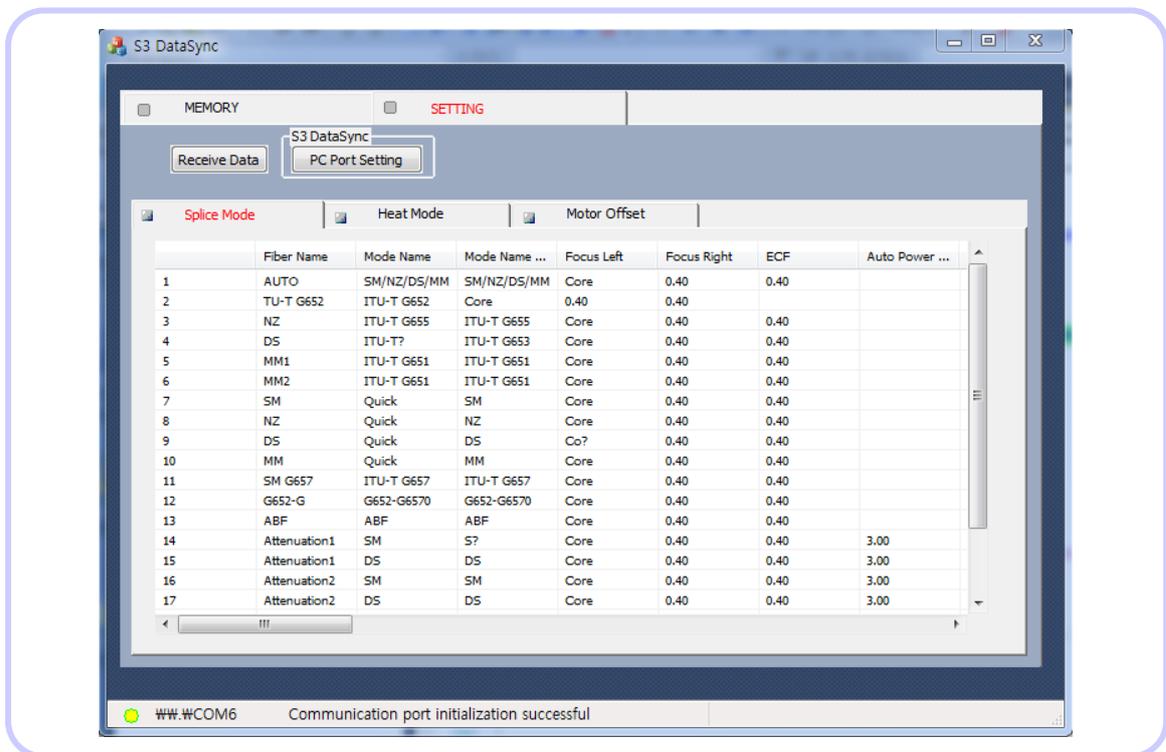

5. Others

1) Enlarging or reducing the screen


- The program window can be enlarged as much as the resolution of the PC monitor allows by pressing the button at the top right to review many items on the screen.
- Also, the screen size can be adjusted using the adjustment bar at the bottom.

2) Resolving data transmission errors

- If the name of the file transmitted from Swift S5 includes strange characters including “?” or the list is broken, it is likely that the data have been damaged during the transmission.
- In that case, it is necessary to receive the data again by clicking the Receive button.
 - : Transmitting a splice image through the serial communication may take up to 40 seconds.
 - : If no image appears on the image box when opening a splice image, the file has been damaged during transmission. The image needs to be downloaded again.
 - : If the status bar is not changed for some time during transmission, press the Receive button again.

3) Swift S5 screen during data synchronization

- : The synchronization can be stopped by pressing the Stop button.

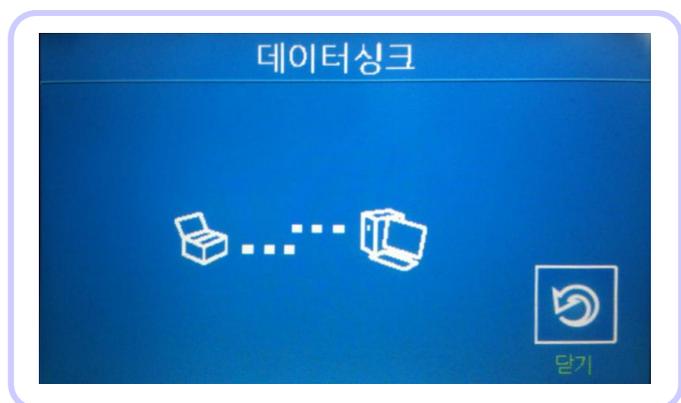

IX. Error Messages

1. FIBER DIRTY

It is displayed when the fiber prepared for splice is contaminated more than normal status.

⇒ Reset the fiber after cleaning the fiber



2. REPLACE POSITION

It is displayed when the fiber is not placed in the middle of the electrode and V-groove or the object lenses or reflection mirror is contaminated.

⇒ Press Reset button and place the fiber in the middle of the electrode and V-groove.
⇒ Check the condition of the lenses and reflection mirror and remove any dirt.



3. Too Long Fiber

It is displayed when the fiber is placed too close to the electrode, the lenses or reflection mirror is dirty or LED light is not bright enough.


- ⇒ Press Reset button and place the fiber again.
- ⇒ Remove dust and dirt from the lenses and reflection mirror.
- ⇒ Conduct an LED test. If an error occurs,



4. FIBER OVER ANGLE

It is displayed when the measured cut angle of the fiber is greater than the limit.

- ⇒ Reset the fiber after checking the condition of the fiber cutter.
- ⇒ Check the value of the cut angle.

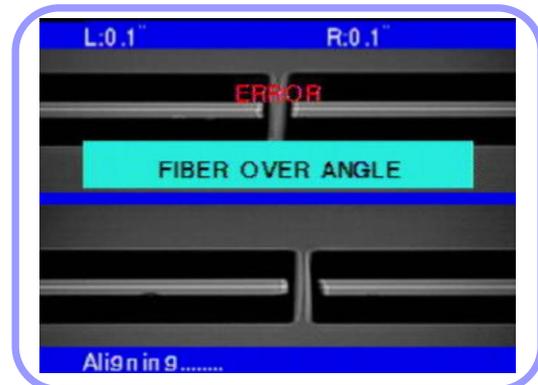

5. LOSS LIMIT OVER

It is displayed when the estimated splice loss is greater than the limit.

- ⇒ Check the value of the splice loss limit.



6. FIBER THIN ERROR

It is displayed when the spliced part becomes thinner after completing the splice.

- ⇒ Reduce the attraction length of the attraction splice.
- ⇒ Check whether the discharge amount is set too big or the discharge time is set to long.

7. FIBER THICK ERROR

It is displayed when the spliced part becomes unnecessarily thicker after completing the splice.

- ⇒ Reduce the set value of duplication.
- ⇒ Check whether the discharge amount is set too small or the discharge time is set to short.

8. CORE BUBBLE

It is displayed when bubbles or dots exist in the spliced part after completing the splice.

- ⇒ Check the condition of the fiber cutter.
- ⇒ Clean the V-groove.
- ⇒ Check the condition of the electrode.

X. How to deal with splicing problems

Please do as instructed below when the splice loss is too big or any abnormal operation is discovered.

1. When the splice loss is too high

1 It may have been caused by dirt or dust on the surface of fibers.

- Carefully clean the surface of the fibers.
- DO NOT clean the fiber after being cut so as to prevent the contamination of its cross section.
- DO NOT push the fiber through the V-groove when setting it.
- Set the fiber by putting it down from the top.

2 The arrangement of the fibers can be interrupted by the dirt in the V-groove.

Keep the V-groove and fiber fixer clean at all times.

3 Bad electrode

Replace the electrode if it is worn out, its tip is bent or contaminated.

4 Improper discharge or discharge time

- Check the set values of discharge amount and discharge time and reset them, if necessary.
- The machine is delivered after being set to the most optimized values.

5 Inappropriate splice mode

Check if the proper splice mode for the fiber that is to be spliced has been selected.

2. Abnormal operation of arc fusion splice

1 The arrangement activity is repeated.

- Open the windshield cover and close it again.
- Rest the system by pressing Reset button when an error occurs by opening the windshield cover. Turn off the power and contact Ilsintech.

2 The error message of “Too Long Fiber” appears repeatedly.

Reset and turn off the power. Contact Ilsintech.

1. Power

- 1 Unable to turn off the power by pressing the power button.

Press the switch and hold it for about 1 second and release the button when the monitor is turned off.

- 2 Unable to perform many times of splicing with the battery pack that has been fully charged.

If the power saving mode is not activated, the battery runs out quickly. Please refer to [Power saving mode] for more information. If the battery pack has not been used for a while, charge it again until it is charged fully.

Use a new battery pack if the battery pack in use has been used for a long time and its recommended use period has passed. Since the battery works based on chemical reactions, the amount of power decreases at a low temperature and, in particular, it runs out very quickly when the temperature is below zero. Also, the battery runs out fast when it is used at a high temperature because the power consumption increases. If you cannot charge the battery pack fully, do as instructed below.

- 3 LED is not turned on while charging the battery pack.

Disconnect the AC power cord from the charger and connect the DC cord to the charging jack. Connect the AC power cord in 10 to 15 seconds. The LED of the battery pack is turned on red and charging begins.

- 4 Nothing is displayed on the indicator of the battery pack.

Charge the battery pack.

- 5 When the battery indicator provides wrong information.

Use the indicator information only for your information. This issue may occur when the indicator is not working properly.

2. Splice operation

- 1 When an error message appears on the screen.

Refer to the [Error message list] for detailed information.

- 2 Irregular or high splice loss

Cleaning the V-groove, fiber holder, windshield mirror and object lenses referring to [Maintaining splice quality]. Replace the electrode referring to [Replacing electrode]. Refer to “High estimated loss” on the [Error message list].

If the fiber is twisted or bent, place the bent direction down. The splice loss will vary depending on the cut angle, discharge conditions and the contamination condition of fiber. If you cannot fix the high splice loss problem after performing abovementioned methods, contact Ilsintech. It is recommended to conduct a regular maintenance of the machine once per year to ensure good splice quality.

- 3 Check the splice procedure.

Refer to [Splice procedure].

- 4 Monitor is turned off suddenly.

Press key and check the power saving menu.

- 5 The power of the splicer is turned off suddenly.

Turn on the splicer again and check the power saving menu.

- 6 How to change the limit values of the cut angle, splice loss and fiber angle.

Refer to [Editing splice modes].

- 7 An error message can be ignored.

Refer to [Additional functions for splice].

- 8 Unable to Discharge amount and time.

You cannot change discharge amount and time in SM, NZ, MM or Auto mode. A proper discharge amount can be maintained in these modes by performing [Discharge calibration]. The discharge amount and time will set automatically to prevent from being changed in other mode.

9 How to set pause?

Refer to [Additional functions for splice].

10 How to display the cut angle, fiber angle and core / clad?

Refer to [Additional functions for splice].

11 Difference between estimated splice loss and measured splice loss.

The estimated splice loss is just a result from computation so it has to be used for information only. The fiber parts of the splicer have to be maintained clean at all times. When splicing special fibers, adjust [MFD – left] and [MFD – right]. When splicing different kinds of fibers, [minimum loss] and [MFD difference] have to be adjusted. Refer to parameter settings of the other splice modes saved in the database sector for setting parameters.

12 Re-discharge is ON/OFF discharge when using special modes.

Set [Discharge 2 ON time] and [Discharge 2 OFF time] to 500 and “OFF”, respectively. Refer to [Editing splice modes].

3. Operation of the tube heater

1 The fiber protection sleeve is not fully contracted.

Increase the duration of heating. Refer to [Modifying heater mode] for more information.

2 The heater is overheated.

Stop the operation of the heater by pressing the heater key. Turn off the power and contact IIsintech.

3 The fiber protection sleeve is not separated from the heating plate after being contracted.

Use a cotton swab or a similar object to this to push or remove the sleeve.

4 How to initialize the heating condition in the heater mode?

Refer to [Editing splice modes] for more information.

5 How to cancel the heating process?

You cannot cancel the heating process by pressing “RESET” key. Press “HEAT” key one more time to cancel it.

4. Maintenance

1 Check if you can prohibit the user of the function list.

Refer to [Locking menu].

2 How to lock “Splice”, “Edit” or heater mode?

Refer to [Locking menu] for more information.

3 If you forget the password,

Contact Ilsintech.

5. Other settings

Splicing is repeated a number of times until “Test Finish” is displayed during [Discharge calibration].

Adjustment in various levels has to be done after replacing the electrode or surrounding conditions are changed much.

Splicing is repeated a number of times until “Test Finish” is displayed during [Discharge calibration].

Activate the [stabilization of the electrode] in [Maintenance menu]. If “Test Finish” is not displayed after then, replace the electrode using [electrode replacement] function.

Discharge amount is not changed after performing [discharge calibration].

Internal factors are calibrated. The discharge amount displayed on each splice mode is not changed. The calibration result affects entire splice modes.

XII. Warranty Period and Contact Information

1. Warranty period and services

The arc fusion splicer is warranted against defective materials and workmanship for one year from the date of shipment. However, the warranty will not cover any defects or damage to the machine and customers will be charged for the repair of the machine even if it within the warranty period, if such defect or damage occurred as a result of

- 1 Natural disaster(s),
- 2 Applying over-voltage,
- 3 Customer's mishandling,
- 4 Customer's misuse without following instructions or operation procedures provided by this service manual, or
- 5 Expendables (including electrode).

2. Before sending the arc fusion splicer to us,

It is necessary to contact Ilsintech first.

3. Information required for repair

- 1 Write following information on a piece of paper and attach it to the machine.
(Name, Department, Company, Address, Phone number, Fax number and email address)
- 2 Serial number of the machine
- 3 The operation condition of the splicer and error messages that have appeared by the time the machine is sent to Ilsintech.

4. Transport

The arc fusion splicer is high precision equipment, so it is required to transport after keeping it in a case to protect it from humidity, vibration and physical shock. In case of request for repair, the machine must be put in the case along with its parts before its transport.

5. Repair

Any data saved in the memory including splice results and splice modes may be deleted as a result of repair.

Product Warranty

Name of product	Swift S5		
Production Number			
Date of purchase			
Customer	Name		Telephone
	Address		

◆ General Product Limited Warrant

1. This product is manufactured under strict quality management and inspection processes.
2. Ilsintech Co., Ltd warrants this product against defective materials and workmanship for a period of one year from the date of purchase. However, this warranty does not cover a damage or failure caused by or attributable to a reason for Exclusion and Limitations even if the equipment is still under warranty.
3. This warranty card has to be presented when the product is repaired.
4. The arc fusion splicer is high precision equipment, so it is required to transport after keeping it in a case to protect it from humidity, vibration and physical shock.

◆ Exclusion and Limitations

- This warranty will not cover a damage or failure and charges (repairing charge + part + travel expenses) will apply even if the equipment is still under warranty, if such damage or failure has occurred due to or when

1. Natural disaster,
2. Applying over-voltage,
3. Customer's mishandling,
4. Customer's misuse without following instructions or operation procedures provided by this service manual, or
5. The stamped seal is broken or damaged.

※ Contact the service center or the dealer you purchased the machine when you require maintenance or repair service.

Tel: 82 – 42 – 671 – 5600

[http:// www.ilsintech.com](http://www.ilsintech.com)

E-mail : rnd@ilsintech.com