

Programmer's Guide



Literature Number: SWRU369B June 2014-Revised March 2015



Contents

| 1 | Introdu | oction | 5 |
|-----|------------|---|-----------|
| | 1.1 | Overview | 5 |
| | 1.2 | Software Components | 5 |
| | 1.3 | CC3200 LaunchPad Platform | 7 |
| 2 | Founda | ation SDK – Getting Started | 8 |
| | 2.1 | Installation | 8 |
| | 2.2 | Package Components Overview | 10 |
| | 2.3 | Prerequisite: Tools to be Installed | 12 |
| 3 | Founda | ation SDK – Components | 13 |
| | 3.1 | SimpleLink Component Library | 13 |
| | 3.2 | Peripheral Driver Library | 16 |
| | 3.3 | Reference Applications | 17 |
| | 3.4 | CC3200 PinMux Utility | 20 |
| 4 | Getting | Started with CC3200 Launchpad | 21 |
| 5 | Founda | ation SDK – Development Flow | 22 |
| | 5.1 | Simple Networking Applications | 22 |
| | 5.2 | SimpleLink APIs | 36 |
| | 5.3 | Compilation, Build and Execution Procedure | 36 |
| | 5.4 | Flashing and Running the .bin using Uniflash Tool | 61 |
| 6 | CC320 | 0 ROM Services | 62 |
| | 6.1 | CC3200 Boot Loader | 62 |
| | 6.2 | CC3200 Peripheral Driver Library Services in ROM | 63 |
| 7 | Additio | onal Resources | 65 |
| Rev | ision Hist | ory | 66 |
| Rev | ision Hist | orv | 66 |

www.ti.com

List of Figures

| 1 | CC3200 Overview of Peripherals | 5 |
|----|---|------------|
| 2 | CC3200 Software Components | 6 |
| 3 | CC3200 LaunchPad Platform | 7 |
| 4 | CC3200 SDK Installation 1 | 8 |
| 5 | CC3200 SDK Installation 2 | 8 |
| 6 | CC3200 SDK Installation 3 | 9 |
| 7 | SimpleLink Modular Composition | 13 |
| 8 | CC3200 SimpleLink IAR Config Switch | 16 |
| 9 | CC3200 CCS SimpleLink Config Switch | 16 |
| 10 | CC3200 Programmer Guide Device Manager | 21 |
| 11 | TCP Socket Terminal | 29 |
| 12 | UDP Socket Terminal | 33 |
| 13 | CC3200 Transceiver Application on the Hyperterminal | 35 |
| 14 | CC3200 Programmer Guide IAR Project Options | 37 |
| 15 | CC3200 IAR Compiling Project | 37 |
| 16 | CC3200 IAR Linker Project | 38 |
| 17 | CC3200 IAR Linker Config | 39 |
| 18 | CC3200 IAR Generating Binary | 40 |
| 19 | CC3200 IAR Executing | 41 |
| 20 | CC3200 IAR Download and Run | 41 |
| 21 | CCS App Center | 42 |
| 22 | TI-PinMux Tool | 43 |
| 23 | Select CCS Projects to Import | 44 |
| 24 | CC3200 CSS Editing Existing Project | 45 |
| 25 | CC3200 CCS Creating Project | 46 |
| 26 | CC3200 CCS Compiling Project | 47 |
| 27 | CC3200 CCS Compiling Project 1 | 48 |
| 28 | CC3200 CCS Compiling Project 2 | 49 |
| 29 | CC3200 CCS Linking Project 1 | 5 0 |
| 30 | CC3200 CCS Linking Project 2 | 51 |
| 31 | TI-RTOS OS Dependency | 52 |
| 32 | CC3200 CCS Generating Binary | 53 |
| 33 | CC3200 CCS Executing 1 | 54 |
| 34 | CC3200 CCS Executing 2 | 54 |
| 35 | CC3200 CCS Launch Config | 55 |
| 36 | Target Configuration | 56 |
| 37 | CC3200 CCS Executing 4 | 56 |
| 38 | CC3200 CCS Executing 5 | 57 |
| 39 | Connection Output Screen | 59 |
| 40 | Blinky GCC Application | 60 |





List of Tables

| 1 | Package Contents | 10 |
|---|---------------------|----|
| 2 | CC3200 Prerequisite | 12 |
| 3 | End of RAM | 63 |
| 4 | ROM APIs | 63 |
| 5 | ROM Interrupts | 63 |



CC3200 SimpleLink™ Wi-Fi® and IoT Solution, a Single Chip Wireless MCU

1 Introduction

The CC3200 SimpleLink™ Wi-Fi®™ is the industry's first single-chip microcontroller (MCU) with built-in Wi-Fi connectivity, created for the Internet of Things (IoT). The CC3200 device is a wireless MCU that integrates a high-performance ARM Cortex-M4 MCU, allowing customers to develop an entire application with a single IC. This document introduces the user to the environment setup for the CC3200 SimpleLink Wi-Fi, along with programming examples from the software development kit (SDK). This document explains both the platform and the framework available to enable further application development.

1.1 Overview

The Texas Instruments royalty-free CC3200 Embedded Wi-Fi Foundation software development kit is a complete software platform for developing Wi-Fi applications. It is based on the CC3200, a complete Wi-Fi SoC (System-on Chip) solution. The CC3200 solution combines a 2.4-GHz Wi-Fi PHY/MAC and TCP/IP networking engine with a microcontroller, up to 256 kB on-chip RAM (In XCC3200HZ and XCC3101GZ devices, only 176 kb of RAM is available for applications) and a comprehensive range of peripherals.

Refer to the CC3200 Product Preview and Data Sheet (SWAS032) for more details on the CC3200 chip.

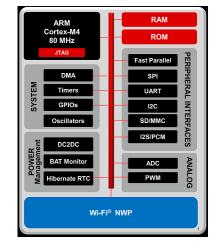


Figure 1. CC3200 Overview of Peripherals

1.2 Software Components


The CC3200 platform includes a user-programmable host, along with a comprehensive networking solution combined with a Wi-Fi engine. The CC3200 Foundation Software Development Kit provides an easy-to-use framework, hosted in the on-chip microcontroller, to use the WLAN networking services, and a comprehensive listing of drivers for peripherals interfaced with the microcontroller. The kit also includes a reference code for peripheral usage and a few simple applications for networking services.



Introduction www.ti.com

Figure 2 illustrates the various software components and their form in the CC3200 Foundation SDK.



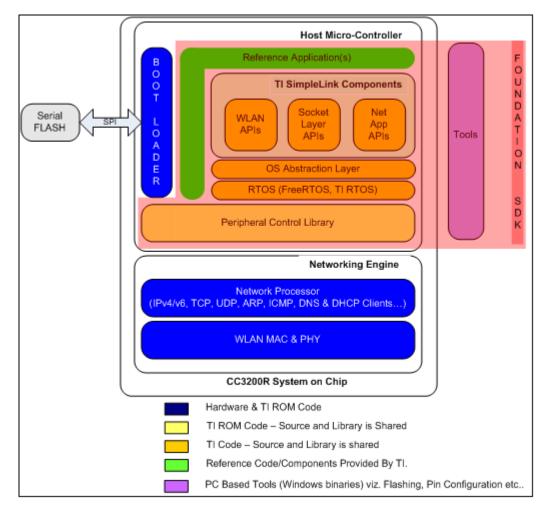



www.ti.com Introduction

1.3 CC3200 LaunchPad Platform

The CC3200 LaunchPad board is the default hardware companion for the foundation SDK. This board hosts the CC3200 device, with interfaces designed for application software development and debugging. The CC3200 LaunchPad also supports the TI Booster Pack interface, allowing the user to interface with a rich repertoire of peripheral systems.

Refer to the CC3200 Launch Pad user manual (SWRU372) for more details

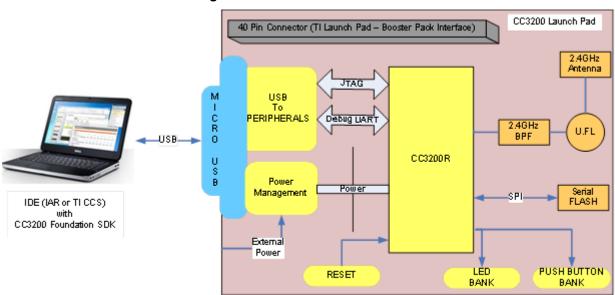


Figure 3. CC3200 LaunchPad Platform



2 Foundation SDK – Getting Started


This section familiarizes the user with installation process and the directory structure of CC3200 Foundation SDK.

2.1 Installation

Run the installer by double-clicking the CC3200 SDK installer.

Read and accept the license agreement to proceed.

Figure 4. CC3200 SDK Installation 1

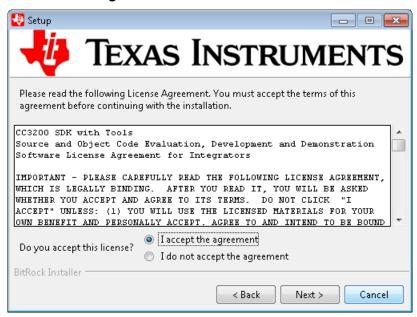

Choose an appropriate path to place the package (else default is chosen).

Figure 5. CC3200 SDK Installation 2





Proceed with the installation and click Finish once done.

Figure 6. CC3200 SDK Installation 3





2.2 Package Components Overview

Table 1. Package Contents

| Directory Name | Information |
|----------------|---|
| Directory Name | Information |
| docs | CC3200 Programmer's Guide Documentation for hardware details present in Hardware folder Documentation for SimpleLink host driver in html format under docs\simplelink_api' directory Application notes for all the sample application present in docs\examples directory. Peripheral driver library user's guide Documentation for netapps libraries Simplelink OTA Extlib API user's guide |
| driverlib | Contains the peripheral driver library source files.The driverlib.a is also provided in the ccs and ewarm directories. |
| example | Getting Started in STA Mode: Configures CC3200 in STA mode. It verifies the connection by pinging the client connected to it. Getting Started in AP Mode: Configures CC3200 in AP mode. It verifies the connection by pinging the client connected to it. TCP Socket: Demonstrates the connection scenario and basic TCP functionality. UDP Socket: Demonstrates the connection scenario and basic UDP functionality. Scan Policy: Demonstrates the scan-policy settings in CC3200. SSL: SSL certificates are designed to provide two principles, privacy and authentication. Privacy is achieved by encryption/decryption and authentication is achieved by signature/verification. The application demonstrates using a certificate with SSL. MAC Filters (NWP Filters): The Rx-Filters feature enables the user to define and manage the Rx-filtering process to reduce the amount of traffic transferred to the host and achieve efficient power management. File_operations: Demonstrates the use of File-System APIs. Transceiver_mode: Demonstrates building a proprietary protocol on top of Wi-Fi PHY layer, with the user given full flexibility to build their own packet. The RX Statistics feature inspects the medium in terms of congestion, distance, validation of the RF hardware, and help using the RSSI information. Provisioning with SmartConfig: Demonstrates the usage of TI's SmartConfigTM Wi-Fi provisioning technique. Provisioning with WPS: Demonstrates the usage of WPS Wi-Fi provisioning with CC31xx/CC32xx. Deepsleep Usage: Showcases deepsleep as a power saving tool in a networking context. Hib: Showcases the hibernate as a power saving tool in a networking context. Hib: Showcases the hibernate as a power saving tool in a networking context. Hib: Showcases the mass of the provision sends a preconfigured email at the push of a button or a user-configured email th |
| | timers to generate interrupts which in turn toggle the state of the GPIO (driving LEDs). Watchdog Demo Application: Showcases the usage of Watchdog timer (WDT) DriverLib APIs. The objective of this application is to showcase the watchdog timer functionality to reset the system whenever the system fails. |



Table 1. Package Contents (continued)

| Directory Name Information | | | |
|----------------------------|--|--|--|
| Directory Name | | | |
| | UART Demo Application: Showcases the usage of UART DriverLib APIs. The application demonstrates a simple echo of anything the user types on the terminal. | | |
| | Interrupt Application: Showcases the usage of Interrupt DriverLib APIs. This is a sample application to showcase interrupt preemption and tail-chaining capabilities. | | |
| | I2C Demo: Showcases the usage of I2C DriverLib APIs. It provides a user interface to read-from or write-to the I2C devices on the Launch-Pad. | | |
| | MCU Sleep-DS: Exercises the Sleep and Deepsleep functionality of the MCU. | | |
| | uDMA Application: Showcases the usage of UDMA DriverLib APIs. Various DMA mode functionalities are shown in this application. | | |
| | FreeRTOS Demo Application: Showcases the FreeRTOS features like multiple task creation and inter task communication using queues. | | |
| | AES Demo Application: Showcases the usage of AES Driverlib APIs. Provides a user interface to exercise various AES modes. | | |
| | DES Demo Application: Showcases the usage of DES Driverlib APIs. Provides a user interface to exercise various DES modes. | | |
| | CRC Demo Application: Showcases the usage of CRC Driverlib APIs. Provides a user interface to exercise various CRC modes. | | |
| | SHA-MD5 Demo Application: Showcases the usage of SHA-MD5 Driverlib APIs. Provides a user interface to exercise various SHA-MD5 modes. | | |
| | ADC Demo Application: Showcases the functionality of CC3200 ADC module by using the Driverlib APIs. | | |
| | PWM Demo Application: Showcases general 16-bit pulse-width modulation (PWM) mode feature supported by purpose timers (GPTs). | | |
| | SD Host Application: Showcases the basic use case of initializing the controller to communicate with the attached card, reading and writing SD card block. | | |
| | SD Host FatFS Application: Uses the FatFS to provide the block level read/write access to SD card, using the SD Host controller on CC3200. | | |
| | SPI Demo Application: Displays the required initialization sequence to enable the CC3200 SPI module in full duplex 4-wire master and slave mode(s). | | |
| example | Wi-Fi Audio App: Demonstrates 'Bi-directional Audio Application' on a CC3200 LaunchPad setup. This application requires the audio boosterpack. | | |
| | Camera Application: Demonstrates the camera feature on CC3200 device. User can invoke the image capture command on the web browser hosting on the CC3200 device. This application requires the camera boosterpack. | | |
| | UART DMA Application: Showcases use of UART along with uDMA and interrupts. | | |
| | Antenna Selection: Gives the option to select an antenna with more signal for APs using a web-browser. | | |
| | Out of Box Application: Demonstrates how the user can view different demo and SDK web links on their web-browser. | | |
| | Peer to Peer Application: Demonstrates the Wi-Fi direct feature on CC3200 device. | | |
| | Timer Count Capture: Showcases Timer's count capture feature to measure the frequency of an external signal. | | |
| | Idle Profile: Exercises hibernation using Power Management Framework (middleware). | | |
| | Sensor Profile: Exercises low power modes (lpds) using Power Management Framework (middleware). | | |
| | Watchdog System Demo: Illustrates full system recovery using watchdog, including the network subsystem. | | |
| | TFTP Client: Demonstrates file transfer using TFTP (Trivial File Transfer Protocol). Requires a TFTP Server running on a connected device such as a PC or Smartphone. | | |
| | WebSocket Camera: Demonstrates Websocket HTTP Server functionality by transmitting continuous JPEG frames to a websocket client. This application requires a camera boosterpack and a connected PC or smartphone with a browser supporting HTML 5. | | |
| | Application Bootloader: Showcases the secondary bootloader operations, to manage updates to application image. | | |
| | HTTP Client Demo: Illustrates the usage of HTTP Client library, to enable the device as an HTTP client. | | |
| | • Idle Profile (Non OS): Exercises the low power modes (LPDS) using Power Management Framework in a Non-OS environment. | | |
| | MQTT Client: Showcases the device acting as a MQTT client in a fully-functional MQTT network. MQTT Server: Showcases the device acting as an MQTT server capable of managing multiple local | | |
| | clients, and allowing the local clients to communicate with remote MQTT clients. | | |



Table 1. Package Contents (continued)

| Directory Name | | Information | | |
|-----------------------|--------------|--|--|--|
| example | | OTA Update: Illustrates Over-The-Air (OTA) update of service pack, user application, and user files. Dynamic Library Loader: Exercises an approach to enable dynamic loading of an application-binary from non-volatile memory while the program is being executed. | | |
| Inc | | Contains the register definition header files. | | |
| Oslib | | Contains the interface file to configure Free-RTOS or TI-RTOS. | | |
| Middleware | | Contains power management framework to provide a simple infrastructure for developers to create a power aware solution. | | |
| NetApps | | http: Contains the HTTP (Hyper Text Transfer Protocol) client and server library smtp: Contains the SMTP (Simple Mail Transfer Protocol) client library tftp: Contains the TFTP (Trivial File Transfer Protocol) client library xmpp: Contains the XMPP (Extensive Messaging and Presence Protocol) client library json: Contains JSON parser library mqtt: Contains the MQTT (Message Queue Telemetry Transport) client and server library | | |
| Simplelin | (| Contains 'SimpleLink Host Driver' code. | | |
| Simplelinl | c_extlib | Contains the OTA (Over the Air) library | | |
| Document | s | Documentation for netapps libraries | | |
| Third_ | FatFS | Contains the FatFS source files. | | |
| party | FreeRT OS | Contains the FreeRTOS source files. Current SDK supports FreeRTOS v8.0.1. | | |
| Ti_rtos | | Contains the Ti RTOS config file and CCS, IAR, GCC project to support TI-RTOS with all three IDEs. Current SDK supports TI-RTOS v2.1.0.03. | | |
| Tools | | ccs_patch – Contains the files required for CCS-FTDI-LP connection. iar_patch – Contains the files required for IAR-FTDI-LP connection. ftdi - Contains FTDI PC driver. gcc_scripts - Contains the scripts to use GCC and openocd with CC3200. | | |

2.3 Prerequisite: Tools to be Installed

Table 2. CC3200 Prerequisite

| Tools | Remarks | Location | | |
|-----------------------------------|--|---|--|--|
| Development Environment | | | | |
| IAR | IAR version 7.20 onwards must be installed. After the installation, follow the tools\iar_patch\readme.txt to be able to debug over FTDI. | Installation: http://www.iar.com/Products/IAR- Embedded-Workbench/ARM/ | | |
| Or/and | | | | |
| ccs | CCS 6.0.1 version and 'TI v5.1.6' compiler version. After the installation, follow the tools\ccs_patch\readme.txt to be able to debug over FTDI. | Installation: http://www.ti.com/tool/ccstudio | | |
| CC3200 Support package in CCSv6.0 | Though CCS 6.0.1 provides an option to install this add-on during installation, the user must check and install if a newer version is available. | Refer to Section 5.3.2.1 | | |
| Or/and | | | | |
| GCC | To enable CC3200 SDK development on Linux environment. | Refer to Section 5.3.3 | | |
| CC32xx PinMux Utility | | | | |
| CC32xx PinMux Utility.exe | Utility to assign a desired personality to the general purpose pins available at the CC3200 device boundary. | Installation: http://processors.wiki.ti.com/index.php/TI_ PinMux_Tool or refer to Section 5.3.2.2 | | |



| Tuble 2. Goozof Ferequisite (continued) | | | | | |
|---|--|---------------------------------|--|--|--|
| Tools | Remarks | Location | | | |
| CC32xx Programmer Utility | CC32xx Programmer Utility | | | | |
| Uniflash | Tool to download firmware, application image, and certificate to CC3200 device. | http://www.ti.com/tool/uniflash | | | |
| Support Tools | Support Tools | | | | |
| HyperTerminal or Teraterm | Serial communication tool to communicate over the UART with the CC3200 device. | | | | |
| Iperf | A useful tool for measuring TCP and UDP bandwidth performance. | | | | |
| FTDI Driver | FTDI Windows drivers need to be installed for a successful connection to the CC3200 LP over USB. This FTDI connection can be used for debugging over JTAG/SWD and communicating over UART. | tools\ftdi | | | |

Table 2. CC3200 Prerequisite (continued)

3 Foundation SDK – Components

The CC3200 Foundation SDK package includes two main building blocks:

- SimpleLink Library This library hosts APIs that serve the connectivity features.
- Peripheral Driver Library This library hosts APIs to access MCU peripherals.

This section also lists the sample and reference applications packaged in the Software Development Kit.

3.1 SimpleLink Component Library

3.1.1 SimpleLink Modular Decomposition

Device WLan Socket Netapp Netcfg FS

Driver

Peripheral Abstraction Layer

Figure 7. SimpleLink Modular Composition

TI SimpleLink Framework provides a wide set of capabilities, including basic device management through wireless network configuration, BSD socket services, and more. For better design granularity, these capabilities are segregated into individual modules. Each module represents different functionality or capability of the SimpleLink Framework.

The following list enumerates the different components in the SimpleLink Framework:



| Components | Functionality |
|------------|---|
| device | Initializes the host Controls the communication with the Network Processor |
| wlan | Connection to the access point Scan access points Add/Remove access point profiles WLAN Security |
| socket | UDP/TCP Client Socket UDP/TCP Server Socket UDP/TCP Rx/Tx |
| netapp | DNS Resolution Ping remote device Address Resolution Protocol |
| netcfg | IP/MAC address configuration |
| fs | File system Read/Write |

3.1.2 Using the TI SimpleLink Framework

TI SimpleLink Framework provides a rich, yet simple set of APIs. For detailed information on the APIs and their usage, refer to the document docs\simplelink_api\programmers_guide.html available in the SDK.

TI SimpleLink Framework has a ready-to-use port available in the CC3200 Foundation SDK. The source code is also shared if further customization is desired by the developer. The following note describes simple possible customizations and the associated procedure.

Note: All modifications and adjustments to the driver should be made in the user.h header file only, to ensure a smooth transaction to future versions of the driver.

Modify user.h file – Modify the user.h file that includes the default configurations and adjustments.

Select the capabilities set required for your application – TI has focused on building a set of predefined capability sets that fit most target applications. TI recommends trying and choosing one of these predefined capabilities sets before building a customized set. Once a compatible set is found, skip the rest of this step. The available sets are:

- # SL_TINY Compatible with platforms with very limited resources. Provides the best-in-class footprint in terms of code and data consumption.
- # SL_SMALL Compatible with most common networking applications. Provides the most common APIs with a balance between code size, data size, functionality, and performance.
- # SL_FULL Provides access to all SimpleLink functionalities.

Memory management model - The SimpleLink driver supports two memory models:

- Static (default)
- Dynamic

The CC3200 default configuration is Static. In the dynamic model, the configuration uses the malloc and free, as defined by the operating system. If the user wishes to define their own memory management, they can define these interfaces.

Asynchronous event handlers routines – The SimpleLink device generates asynchronous events in several situations. These asynchronous events could be masked. Provide handler routines to catch these events. If a handler routine was not provided and the event is received, the driver will drop this event without any indication of a drop.

Interface communication driver – The CC3200 host driver implements SPI communication interface. The interface for this communication channel includes four simple access functions:

- 1. open
- 2. close
- read



4. write

The CC3200, SPI implementation uses DMA to increase the utilization of the communication channel.

OS adaptation – The SimpleLink driver can run on two kinds of platforms:

- Non-OS / Single-Threaded (default)
- Multi-Threaded

The CC3200 SimpleLink host driver is ported on both Non-OS and Multi-Threaded OS environments. The host driver is made OS-independent by implementing an OS Abstraction layer. Reference implementation for OS Abstraction is available for FreeRTOS and TI-RTOS.


To work in a multi-threaded environment under a different operating system, provide some basic adaptation routines to allow the driver to protect access to resources for different threads (locking object) and to allow synchronization between threads (sync objects). In addition, the driver support runs without a dedicated thread allocated solely to the SimpleLink driver. To work in this mode, supply a spawn method that enables functions to run on a temporary context.



3.1.3 Switch Between OS and NON-OS Configuration

IAR: Choose configuration options from menu *Project->Edit configurations->OS/NON_OS/PM_Framework/NON_OS_PM*, as indicated in the snapshot below:

Figure 8. CC3200 SimpleLink IAR Config Switch

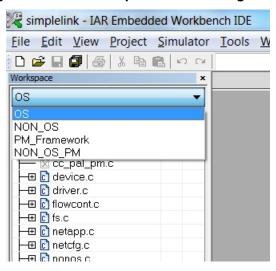

CCS: Choose configuration options from menu *Project->Build Configurations->Set active* or as indicated in Figure 9:

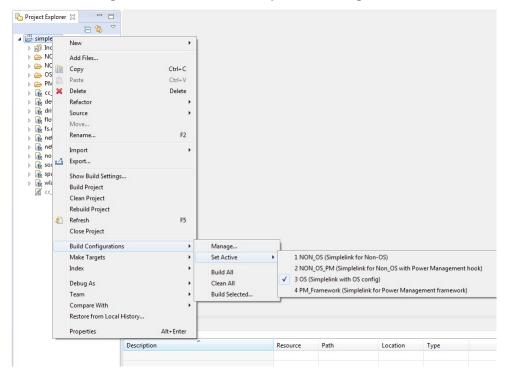


Figure 9. CC3200 CCS SimpleLink Config Switch

3.2 Peripheral Driver Library

The CC3200 ROM contains the peripheral driver library (DriverLib) and the boot loader. DriverLib can be utilized by applications to reduce their flash footprint, allowing the flash (or RAM) to be used for other purposes (such as additional features in the application).

The Driverlib supports APIs for the modules listed below:



- ADC_Analog_to_Digital_Converter_api
- AES Advanced Encryption Standard api
- Camera api
- CRC_Cyclic_Redundancy_Check_api
- DES Data Encryption Standard api
- Flash_api
- GPIO General Purpose InputOutput api
- HwSpinLock_api
- I2C api
- I2S_api
- Interrupt api
- Pin_api
- PRCM Power Reset Clock Module api
- Secure Digital Host api
- SHA_Secure_Hash_Algorithm_api
- SPI Serial Peripheral Interface api
- Systick_api
- GPT_General_Purpose_Timer_api
- UART_api
- UDMA_Micro_Direct_Memory_Access_api
- Utils_api
- WDT Watchdog Timer api

For detailed information on the APIs and their usage, refer to the document docs\CC3200 Peripheral Driver Library User's Guide.chm.

3.3 Reference Applications

The reference applications available as a part of the SDK package are example implementations, which demonstrate key features and peripherals supported by the subsystem built around the CC3200 device on the LaunchPad. A brief description of the reference applications are tabulated below. Refer to the readme.txt present in the individual folders for further information. All examples are broadly divided into two types: the network reference and the MCU-only reference examples.

3.3.1 **Network Reference Examples for the CC3200 LP**

| Application / Demo | Description | Peripheral/Feature exercised |
|-----------------------------------|---|------------------------------|
| Getting started with wLAN Station | This application showcases the device's capability as a station in a typical networking system. | Networking (STA mode) |
| Getting started with wLAN AP | This application showcases the device's capability as an AP in a typical networking system. | Networking (AP mode) |
| TCP Socket Application | This application showcases the device's communication over network using TCP protocols. | Networking (Basics) |
| WLAN Scan Policies Application | This application sets scan policy and enables the scan in the device. | Networking (Scan policies) |
| UDP Socket Application | This application showcases the device's communication over network using TCP protocols. | Networking (Basics) |
| SSL Demo Application | This application showcases SSL implementation on CC3200 device. | Networking (SSL) |
| NWP Filter Application | This application showcases the Rx-Filter feature on CC3200 device. | Networking (MAC Filters) |



| Application / Demo | Description | Peripheral/Feature exercised |
|---|---|--|
| File Operations Application | This application showcases the file operation on the serial flash of the device. | SFlash (File operations) |
| Transceiver mode Application | The RX Statistics feature inspects the medium in terms of congestion and distance, validates he RF hardware, and help using the RSSI information. | Networking (Raw sockets), GPIO, UART, Timer |
| Provisioning - Smart Config Application | The application demonstrates how to associate/connect CC31xx/CC32xx to any access point. | Networking (Provisioning) |
| Deep-Sleep Application | This application showcases the deepsleep as a power saving tool in a networking context of CC3200 device. | Networking, Low power modes (DeepSleep), UART, GPIO, Timer |
| Hibernate Application | This application showcases hibernate as a power saving tool in a networking context (in this case a UDP client). | Networking, Low power modes (HIB), UART, GPIO, Timer |
| Info Center-Get Time Application | The application connects to an SNTP server and requests for time information. | Networking (Internet) |
| Info Center-Get Weather Application | The application connects to 'Open Weather Map' and requests for weather data. | Networking (Internet) |
| Email Application | The email application on the CC3200 sends emails via SMTP. | Networking, GPIO, UART, Timer |
| XMPP Reference Application | The application demonstrates the connection scenario with an XMPP server. | Networking (Internet) |
| Provisioning-WPS Application | This application demonstrates how to use WPS Wi-Fi provisioning with CC3200. | Networking (Provisioning), GPIO |
| Mode-Configuration Application | This application configures the device either to a station or an AP mode. | Networking (STA/AP mode) |
| Serial Wi-Fi Application | Serial Wi-Fi is a capability designed to provide easy, self-contained terminal access behavior over a UART interface. | Networking |
| Connection Policy Application | The application demonstrates the connection policies in CC3200. The connection policies determine how the CC3200 is connected to AP. | Networking(STA Mode) |
| ENT WLAN Application | The example demonstrates the connection to an enterprise network using the flashed certificate. Certificate is flashed in SFLASH. | Networking(STA mode) |
| HTTP Server Application | The application demonstrates the Http server capability of CC3200. | Networking(STA Mode) |
| mDNS Application | The application demonstrates the usage of mDNS functionality in CC3200. The application showcases both "mDNS advertise" and "mDNS listen" functionality. | Networking(STA Mode) , UART |
| Provisioning-AP Application | This application demonstrates the AP provisioning feature. CC3200 AP Provisioning is method by which user can configure the AP information on the CC3200 device from a Browser. | Networking(AP Mode) |
| Out of Box Application | This application demonstrates the how the user can view different demo and SDK web links on a web-browser. | Networking(AP/STA mode), I2C, GPIO |
| Wi-Fi Audio Application | This example demonstrates 'Bi-directional Audio Application' on a CC3200 LaunchPad setup. The system is comprised of two LPs (in STA mode). Audio is streamed from one LP and rendered on another LP over Wi-Fi. This application requires the audio boosterpack. | Networking(STA/AP mode) |
| Antenna Selection Application | This example allows the user to select the antenna with the highest signal for APs using a web-browser. | Networking(AP mode) |
| Camera Application | This example demonstrates the camera feature on CC3200 device. This application requires the camera boosterpack. | Networking(AP mode) |
| Peer to Peer Application | This example demonstrates the Wi-Fi direct feature on CC3200 device. | Networking(p2p mode) |
| Idle Profile | This application exercises hibernation using Power Management Framework (middleware). | Networking(STA Mode) |
| Sensor Profile | This application exercises low power modes (lpds) using Power Management Framework (middleware). | Networking(STA Mode) |
| File Download Application | This application demonstrates file downloading from the web server and stores it to the device memory feature on the CC3200 device. | Networking (STA Mode) |



| Application / Demo | Description | Peripheral/Feature exercised |
|-----------------------|---|------------------------------|
| Watchdog System Demo | This application illustrates a full system recovery using watchdog, including the network subsystem. | Networking (STA Mode) |
| TFTP Client | This application demonstrates file transfer using TFTP (Trivial File Transfer Protocol). Requires a TFTP Server running on a connected device such as PC or smartphone. | Networking (STA Mode) |
| WebSocket Camera | This application demonstrates Websocket HTTP Server functionality by transmitting continuous JPEG frames to a websocket client. This application requires camera boosterpack and a connected PC or smartphone with a browser supporting HTML 5. | Networking (AP Mode) |
| HTTP Client Demo | This application illustrates the usage of HTTP Client library to enable the device as an HTTP client. | Networking (STA mode) |
| Idle Profile (Non OS) | This application exercises the low power modes (LPDS) using Power Management Framework in a Non-OS environment. | Networking (STA mode) |
| MQTT Client | This application showcases the device acting as a MQTT client in a fully-functional MQTT network. | Networking (STA mode) |
| MQTT Server | This application showcases the device acting as an MQTT server capable of managing multiple local clients, and allowing the local clients to communicate with remote MQTT clients. | Networking (STA mode) |
| OTA Update | This application illustrates Over-The-Air (OTA) update of service pack, user application and user files. | Networking (STA mode) |

MCU Only Reference Examples for the CC3200 LP 3.3.2

| Application / Demo | pplication / Demo Description | |
|-------------------------------|---|--|
| LED Blink Application | This application showcases the blinking feature of available LEDs connected over GPIO on LP. | GPIO |
| Timer Demo Application | This application showcases the usage of 16 bit timers to generate interrupts which toggle the state of the GPIO. | Timer, GPIO, UART |
| Watchdog Demo Application | This application showcases the watchdog timer functionality to reset the system whenever the system fails. | WDT, GPIO, UART |
| UART Demo Application | This application showcases the use of UART. | UART |
| Interrupt Demo Application | A sample application showcasing interrupt preemption and tail-chaining capabilities. | NVIC, UART |
| I2C Demo | A sample application showing i2c read/write/read from features on CC3200 device. | I2C, UART |
| MCU Sleep-DeepSleep | This application exercises the Sleep and DeepSleep functionality of the MCU. | Low power modes (Sleep, DeepSleep), UART |
| uDMA Application | This application showcases different DMA modes of transfer. | uDMA, UART |
| Autorun non-OS Application | This application showcases the basic packet send and receive functionality of CC3200 in a non OS environment. | 0.2 |
| AES Demo Application | This application showcases the AES Encryption feature on CC3200 device. | Crypto, UART |
| DES Demo Application | This application showcases the DES Encryption feature on CC3200 device. | Crypto, UART |
| CRC Demo Application | This application showcases the CRC feature on CC3200 device. | Crypto, UART |
| FeeRTOS Demo Application | TOS Demo Application This application showcases the FreeRTOS features like Multiple task creation, Inter task communication using queues. | |
| SHA-MD5 Demo Application | 3 | |
| ADC Demo Application | C Demo Application This application showcases the functionality of CC3200 ADC module by using the Driverlib APIs. | |
| PWM Demo Application | This application showcases the PWM mode of CC3200 GPTs. The general purpose timers (GPTs) support a 16-bit pulse-width modulation (PWM) mode with software-programmable output inversion of the PWM signal. | Timer, GPIO |



| Application / Demo | Description | Peripheral/Feature exercised |
|----------------------------------|---|------------------------------|
| SDHost Demo Application | This application showcases the functionality of SDHost module in CC3200. The Secure Digital Host (SD Host)controller on CC3200 provides an interface to standard SD memory cards in 1-bit transfer mode and handles the SD protocol and data packing at transmission level with minimum CPU intervention. | UART, SDHOST |
| SDHost FatFS Demo Application | This application uses the FatFS to provide the block level read/write access to SD card, using the SD Host controller on CC3200. | |
| SPI Demo Application | The demo application shows the required initialization sequence to enable the CC3200 SPI module in full duplex 4-wire master and slave mode(s). | |
| UART dma Application | The demo application showcases use of UART along with uDMA and interrupts. | UART, DMA |
| Timer Count Capture Application | This application showcases Timer's count capture feature to measure frequency of an external signal. | TIMER |
| Application Bootloader | This application showcases the secondary bootloader operations to manage updates to application image. | |
| Dynamic Library Loader | This application exercises an approach to enable dynamic loading of an application-binary from non-volatile memory while the program is being executed. | |

3.4 CC3200 PinMux Utility

The CC3200 pinmux utility provides a convenient interface to select the personality of the general purpose pins available at the CC3200 device boundary. The tool generates the source files based on the information selected using the tool, and can be directly included in the project. Refer to the CC3200 PinMux tool wiki page for further details.

Refer to Section 5.3.2.2 for getting the new TI-Pinmux Tool.




4 Getting Started with CC3200 Launchpad

To start with CC3200 Launchpad:

- Connect the CC3200 Launchpad to PC.
- As the FTDI driver is auto-installed from the SDK installer, the device will enumerate with one com port (CC3200LP Dual Port), as in this snapshot:

Figure 10. CC3200 Programmer Guide Device Manager

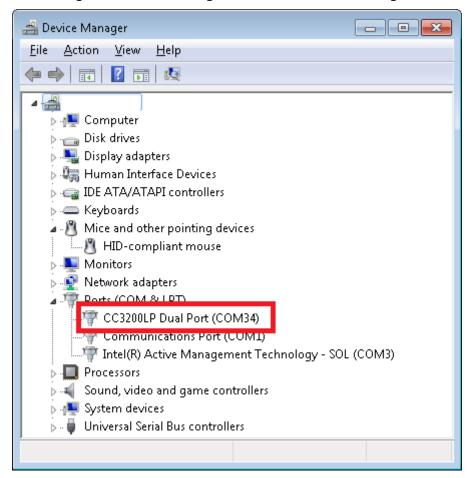

To configure the device into SWD/JTAG mode, refer to cc3200-sdk\docs\hardware\CC3200-LP_User's guide.pdf.



5 Foundation SDK – Development Flow

This section familiarizes the developer with the typical development flow using the building blocks hosted in Foundation SDK, and emphasizes more of the network aspects of the CC3200. For this purpose, a suite of Getting Started applications are presented in the SDK. Start with a comprehensive description of these applications, build and execute procedure with the IDEs, and finally burn the application image in the non-volatile storage.

The SDK contains five simple network applications to demonstrate the connection and packet-handling functionality. These applications use the SimpleLink APIs to demonstrate the functionality. The source in these applications is modular, and can be referred or re-used by the developer.

| | Application | Description |
|----|---|--|
| 1. | Getting started with WLAN Station | Reference application to use the CC3200 in STA mode |
| 2. | Getting started with WLAN AP | Reference application to use the CC3200 in AP(Access Point) mode |
| 3. | TCP Socket Application | Reference application showcasing the TCP server and client functionality |
| 4. | UDP Socket Application | Reference application showcasing the UDP server and client functionality |
| 5. | Raw Socket (Transceiver Mode Application) | Reference application showcasing the Raw socket functionality |

5.1 Simple Networking Applications

Any SimpleLink API (sl_*) must be invoked only after the sl_Start() API has completed. This function starts the SimpleLink (Networking) device. This function also initializes the communication interface.

5.1.1 Getting Started with WLAN Station

5.1.1.1 Application Details

This application shows the CC3200 device as a station in a simple network. Developers and users can refer the function or re-use them while writing a new application. The device connects to an AP (access point), with AP configurations stored in the form of macros in the application. If the connection is successful, it will try to get the IP address of "www.ti.com" and then ping to the IP address. Zero is the expected return value. A different return code indicates that the internet connection is not available or that the ping was not successful. The application uses LEDs to indicate the test results; RED indicates an AP connection, GREEN indicates ping to AP, and ORANGE indicates a ping to www.ti.com.

Security Macros

```
#define SSID_NAME "cc3200demo"
#define SECURITY_TYPE SL_SEC_TYPE_OPEN
#define SECURITY_KEY ""
```

5.1.1.2 Source Files Briefly Explained

The application source can be found in example\getting_started_with_wlan_station.

- main.c Main file creates the SimpleLink task which handles most of the network related operations, while a WlanStationMode task makes calls to the network-related APIs of the SimpleLink library.
- startup_ewarm.c IAR workbench-specific vector table implementation for interrupts
- pinmux.c Contains the configurations to mux the device pins
- gpio if.c Common interface file for LED use
- uart_if.c Common interface file for UART prints

Supporting folders/files



The *ewarm* folder contains the IAR workspace. The *ccs* folder contains the CCS Project, the *driverlib* folder contains all the driver files, the *oslib* folder contains the project to build the TI-RTOS/Free-RTOS library, and the *simplelink* folder contains SimpleLink host files.

5.1.1.3 Code Flow Connection

```
void WlanStationMode( void *pvParameters )
{
//Start the SimpleLink
lRetVal = sl_Start(0, 0, 0);
// Connecting to WLAN AP
lRetVal = WlanConnect(); /* ...
                          lRetVal = sl_WlanConnect(...);
                          // Wait for WLAN Event
                          while((!IS_CONNECTED(g_ulStatus)) | |
                                      (!IS_IP_ACQUIRED(g_ulStatus))) { ... }
// Checking the Lan connection by pinging to AP gateway
lRetVal = CheckLanConnection(); /* ...
                                     // Check for LAN connection
                                     lRetVal = sl_NetAppPingStart(...);
                                     // wait for Ping report event
                                     while(!IS_PING_DONE(g_ulStatus)) { ... }
\ensuremath{//} Checking the internet connection by pinging to external host
lRetVal = CheckInternetConnection(); /* ...
                                             // Get external host IP address
                                         lRetVal = sl_NetAppDnsGetHostByName(...);
                                             // Try to ping HOST_NAME
                                         lRetVal = sl_NetAppPingStart(...);
                                             // Wait for Ping done event
                                         while(!IS_PING_DONE(g_ulStatus)) { ... }
```



· · · }

Using the CC3200 as a STA is a three step process.

- 1. Start the SimpleLink by calling the sl_Start() API.
- 2. Connect to the AP by calling the sl_WlanConnect() API.
- 3. Ping to the AP and external host by calling the sl NetAppPingStart() API.

Refer to the main.c file of the reference application for more details.

5.1.1.4 Usage

- 1. Run the application (getting_started_with_wlan_sta) from IAR/CCS, or flash the bin file to the device.
- 2. The device switches to STA mode if it is in the other mode.
- 3. The device tries to connect to open a pre-defined AP (cc3200demo). The red LED glows upon a successful connection.
- 4. The device pings to AP. If the ping is successful, the green LED glows.
- 5. The device checks for an internet connection by pinging to www.ti.com. If this ping is successful, the orange LED glows.

5.1.2 Getting Started with WLAN AP

5.1.2.1 Application Details

This application aims to exhibit the CC3200 device as an AP. Developers and users can refer or re-use the function while writing a new application. The device comes up as an AP (access point), then waits for a station to connect to it. If the connection is successful, it pings to that station. Zero is the expected return value. A different return code indicates that the ping to the station was unsuccessful.

5.1.2.2 Source Files Briefly Explained

- main.c Main file creates the SimpleLink task which handles most of the network related operations, while a WlanStationMode task makes calls to the network-related APIs of the SimpleLink library.
- startup_ewarm.c IAR workbench-specific vector table implementation for interrupts
- pinmux.c Contains the configurations to mux the device pins
- uart if.c Common interface file for UART prints

Supporting folders/files

The *ewarm* folder contains IAR workspace. The *ccs* folder contains CCS Project, the *driverlib* folder contains all the driver files, the *oslib* folder contains the project to build the TI-RTOS/Free-RTOS library and the *simplelink* folder contains SimpleLink Host Files



5.1.2.3 Code Flow Connection

```
void WlanAPMode( void *pvParameters )
{
lRetVal = sl_Start(NULL,NULL,NULL);
// Configure the networking mode ssid name (for AP mode)
ConfigureMode(lRetVal) ;
                                       lRetVal = sl_WlanSetMode(ROLE_AP);
                                       // set SSID name
                                       lRetVal = sl_WlanSet( ... );
while(!IS_IP_ACQUIRED(g_ulStatus))
//looping till ip is acquired
// get network configuration
lRetVal = sl_NetCfgGet(SL_IPV4_STA_P2P_CL_GET_INFO,&ucDHCP,&len, (unsigned char *)&ipV4);
while(!IS_IP_LEASED(g_ulStatus))
//wating for the STA to connect
// Ping to connected client
iTestResult = PingTest(ulIpAddr);
}
```

Using the CC3200 as an AP is a two step process:

- (a) Start the SimpleLink by calling the sl_Start() API.
- (b) Wait until the device gets an IP address.

After the device comes up in AP mode, follow these steps to ensure the device can act as an AP:

- 1. Wait for a station to connect to the device (the user must connect a machine to the device).
- 2. Ping the station (machine)

Refer to the main.c file of the reference application for more details.

NOTE: If the device is not able to ping to the connected machine, try disabling the antivirus on the machine.

5.1.2.4 Usage

- 1. Run the application (getting_started_with_wlan_ap) from IAR/CCS or flash to the device.
- 2. Application will switch to AP mode if it is not in AP mode.
- 3. After the client connects to the device, the device (AP) pings the client and prints the result over UART.
- 4. All results can be viewed on the terminal screen.
- 5. Observe the execution flow to understand the result.



5.1.3 TCP Socket Application

5.1.3.1 Application Details

This application illustrates how to use the device as a client or server for TCP communication. Developers and users can refer or re-use the function while writing new applications. The device connects to an AP (access point), with the SSID for AP stored as a macro in the application. Initially, the application implements a TCP client and sends 1000 TCP packets to a socket address, port number, and IP address specified as macros. Zero is the expected return code. A different return code indicates that a socket error has occurred. The default setting is defined as in the following macros, which can be changed either in the source code or at runtime.

```
#define SSID_NAME "cc3200demo"
#define IP_ADDR 0xc0a8006E
#define PORT_NUM 5001
#define TCP_PACKET_COUNT 1000
```

5.1.3.2 Source Files Briefly Explained

- main.c Main file calls SimpleLink APIs to connect to the network, creates a socket, and uses it to communicate over TCP by acting as a TCP client or server.
- pinmux.c Pinmux file to mux the device to configure a UART peripheral.
- startup_ccs.c CCS-specific vector table implementation for interrupts
- uart if.c Common interface file for UART prints
- udma_if.c Common interface file for uDMA functionalities
- startup_ewarm.c IAR workbench-specific vector table implementation for interrupts

Supporting folders/files

The *ewarm* folder contains IAR workspace. The *ccs* folder contains CCS Project, the *driverlib* folder contains all the driver files, and the *simplelink* folder contains Simple Link Host Files

5.1.3.3 Code Flow Connection

```
void main()
{
// Starting SimpleLink
lRetVal = sl_Start(0, 0, 0);
lRetVal = WlanConnect(); /* ...
                         lRetVal = sl_WlanConnect(...);
                         // Wait for WLAN Event
                         while((!IS_CONNECTED(g_ulStatus)) | |
                                    (!IS_IP_ACQUIRED(g_ulStatus))) { ... }
                          * /
/* following calls depend on user's input at runtime */
// Before proceeding, please make sure to have a server waiting on PORT_NUM
lRetVal = BsdTcpClient(PORT_NUM);
// After calling this function, you can start sending data to CC3100 IP
// address on PORT_NUM
lRetVal = BsdTcpServer(PORT_NUM);
}
```



TCP Client

```
int BsdTcpClient(unsigned short usPort)
. . .
//Open a socket with standard parameters
iSockID = sl_Socket(SL_AF_INET,SL_SOCK_STREAM, 0);
if( iSockID < 0 )
// error
ASSERT_ON_ERROR(TCP_CLIENT_FAILED);
//Connect to the server IP and port number
iStatus = sl_Connect(iSockID, ( SlSockAddr_t *)&sAddr, iAddrSize);
if( iStatus < 0 )</pre>
// error
ASSERT_ON_ERROR(TCP_CLIENT_FAILED);
//Send packet using the sl_Send API call
iStatus = sl_Send(iSockID, g_cBsdBuf, sTestBufLen, 0 );
if( iStatus < 0 )
// error
ASSERT_ON_ERROR(TCP_CLIENT_FAILED);
//Close the socket
sl_Close(iSockID);
SUCCESS
}
```

Sending the TCP packets is a four step process.

- 1. Open the socket
- 2. Connect to the server
- 3. Send the packets
- 4. Close the socket



TCP Server

```
int BsdTcpServer(unsigned short usPort)
iSockID = sl_Socket(SL_AF_INET,SL_SOCK_STREAM, 0);
if( iSockID < 0 )</pre>
// error
ASSERT_ON_ERROR(TCP_SERVER_FAILED);
iStatus = sl_Bind(iSockID, (SlSockAddr_t *)&sLocalAddr, iAddrSize);
if( iStatus < 0 )</pre>
// error
ASSERT_ON_ERROR(TCP_SERVER_FAILED);
iStatus = sl_Listen(iSockID, 0);
if( iStatus < 0 )
ASSERT_ON_ERROR(TCP_SERVER_FAILED);
iStatus = sl_SetSockOpt(iSockID, SL_SOL_SOCKET, SL_SO_NONBLOCKING,
                   &lNonBlocking, sizeof(lNonBlocking));
iNewSockID = SL_EAGAIN;
while( iNewSockID < 0 )</pre>
iNewSockID = sl_Accept(iSockID, ( struct SlSockAddr_t *)&sAddr,
                  (SlSocklen_t*)&iAddrSize);
if( iNewSockID == SL_EAGAIN )
UtilsDelay(10000);
else if( iNewSockID < 0 )</pre>
// error
ASSERT_ON_ERROR(TCP_SERVER_FAILED);
iStatus = sl_Recv(iNewSockID, g_cBsdBuf, iTestBufLen, 0);
if( iStatus <= 0 )
// error
ASSERT_ON_ERROR(TCP_SERVER_FAILED);
}
sl_Close(iNewSockID);
sl_Close(iSockID);
SUCCESS
}
```



To receive TCP packets from a TCP client:

- 1. Open the socket
- 2. Create a TCP server
- Listen for connection
- Accept a connection
- 5. Receive packets
- Close the socket

5.1.3.4 Usage

- 1. Setup a serial communication application (HyperTerminal/TeraTerm). For detailed information visit the Setup Terminal on the host PC. The settings are:
 - Port: Enumerated COM port (CC3200LP Dual port)
 - Baud rate: 115200
 - Data: 8 bitParity: NoneStop: 1 bit
 - Flow control: None
- 2. Run the application (tcp_socket) from IAR/CCS, or flash the bin file to device.
- 3. Connect a PC to the same AP that the device is connected to.
- 4. Get the IP address of the PC and fill this value for the IP_ADDR macro, or change the setting as specified in Figure 11:

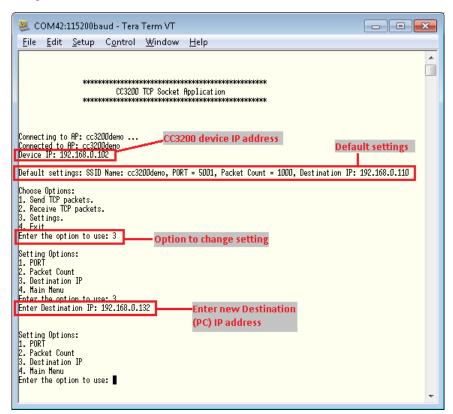


Figure 11. TCP Socket Terminal

5. Change the other setting (port, SSID name, packet count) as required.



- 6. Choose the options:
 - Send TCP packets
 - · Receive TCP packets
- 7. After selecting one of the above options, run the iperf command on the PC command prompt as given in the TeraTerm/HyperTerminal screen.
- 8. Observe the execution flow to understand the results.

Note: Disable PC anti-virus while running iperf.

5.1.4 UDP Socket Application

5.1.4.1 Application Details

This application illustrates how to use the device as a client or server for UDP communication. Developers and users can refer or re-use the function while writing new applications. The device connects to an AP (access point), with the SSID for the AP stored as a macro in the application. Initially, the application implements a UDP client and sends 1000 UDP packets to a socket address, port number, and IP address specified as macros. Zero is the expected return code. A different return code indicates that a socket error has occurred. The default setting is defined in the following macros, changed either in the source code or at runtime.

#define SSID_NAME "cc3200demo"
#define IP_ADDR 0xc0a8006E
#define PORT_NUM 5001
#define UDP_PACKET_COUNT 1000

5.1.4.2 Source Files Briefly Explained

The application source can be found in example\udp_socket.

- main.c Main file calls SimpleLink APIs to connect to the network, creates a socket, and uses it to communicate over UDP by acting as a UDP client or server.
- pinmux.c Pinmux file to mux the device to configure the UART peripheral.
- startup_ccs.c CCS-specific vector table implementation for interrupts
- uart if.c Common interface file for UART prints
- udma if.c Common interface file for uDMA functionalities
- startup ewarm.c IAR workbench-specific vector table implementation for interrupts

Supporting folders/files

The ewarm folder contains IAR workspace. The ccs folder contains CCS Project, the driverlib folder contains all the driver files, the oslib folder contains the project to build free_rtos library, the third_party folder contains FreeRTOS files, and the simplelink folder contains Simple Link Host Files



5.1.4.3 Code Flow Connection

```
void main()
{
// Starting SimpleLink
lRetVal = sl_Start(0, 0, 0);
lRetVal = WlanConnect(); /* ...
                             lRetVal = sl_WlanConnect(...);
                             // Wait for WLAN Event
                             while((!IS_CONNECTED(g_ulStatus)) || (!IS_IP_ACQUIRED(g_ulStatus)))
{ ... }
/* following calls depend on user's input at runtime */
// Before proceeding, please make sure to have a server waiting on PORT_NUM
lRetVal = BsdUdpClient(PORT_NUM);
// After calling this function, you can start sending data to CC3200 IP
// address on PORT_NUM
lRetVal = BsdUdpServer(PORT_NUM);
}
```

UDP Client

```
int BsdUdpClient(unsigned short usPort)
{
//Open a socket with standard parameters
iSockID = sl_Socket(SL_AF_INET,SL_SOCK_DGRAM, 0);
if( iSockID < 0 )
// error
ASSERT_ON_ERROR(UCP_CLIENT_FAILED);
//Send packet using the sl_Send API call
iStatus = sl_SendTo(iSockID, g_cBsdBuf, sTestBufLen, 0,
                    ( SlSockAddr_t *)&sAddr, iAddrSize);
if( iStatus <= 0 )
// error
ASSERT_ON_ERROR(UCP_CLIENT_FAILED);
//Close the socket
sl_Close(iSockID);
SUCCESS
```

Sending the UDP packets is a three step process.

- 1. Open the socket
- 2. Send the packets
- 3. Close the socket



UDP Server

```
int BsdUdpServer(unsigned short usPort)
{
...
iSockID = sl_Socket(SL_AF_INET,SL_SOCK_STREAM, 0);
if( iSockID < 0 )
{
// error
ASSERT_ON_ERROR(UCP_SERVER_FAILED);
}
...
iStatus = sl_Bind(iSockID, (SlSockAddr_t *)&sLocalAddr, iAddrSize);
if( iStatus < 0 )
{
// error
ASSERT_ON_ERROR(UCP_SERVER_FAILED);
}
iStatus = sl_RecvFrom(iNewSockID, g_cBsdBuf, iTestBufLen, 0, &sAddr, &iAddrSize);
sl_Close(iSockID);
SUCCESS
}</pre>
```

Steps for receiving UDP packets as a UDP server are as follows:

- 1. Open the socket
- 2. Create a UDP server
- 3. Receive packets
- 4. Close the socket

5.1.4.4 Usage

- 1. Set up a serial communication application (HyperTerminal/TeraTerm). For detailed information, visit the Setup Terminal on the host PC. The settings are:
 - Port: Enumerated COM port (CC3200LP Dual port)
 - Baud rate: 115200
 - Data: 8 bit
 - · Parity: None
 - Stop: 1 bit
 - Flow control: None
- 2. Run the application (udp_socket) from IAR/CCS or flash the bin file to the device.
- 3. Connect a PC to the same AP that the device is connected to.
- 4. Get the IP address of the PC and fill this value for IP_ADDR macro, or change the setting as specified in Figure 12.



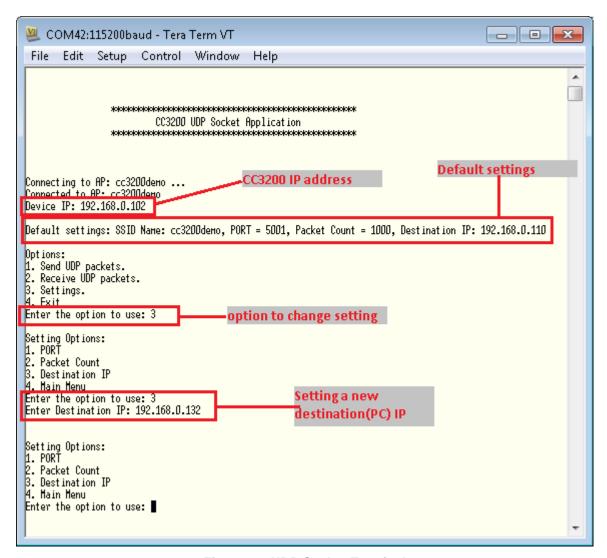


Figure 12. UDP Socket Terminal

- 5. Change the other setting (port, SSID name, packet count) as required.
- 6. Choose the options:
 - Send UDP packets
 - Receive UDP packets
- 7. After selecting from the above options, run the iperf command on the PC command prompt as given in the TeraTerm/HyperTerminal screen.
- 8. Observe the execution flow to understand the results.

Note: Disable PC anti-virus while running iperf.



5.1.5 Raw Socket Application

5.1.5.1 Application Details

The transceiver mode application in the SDK showcases the use of raw socket usage in CC3200. This example demonstrates how to build a proprietary protocol on top of a Wi-Fi PHY layer, with the user given full flexibility to build their own packet.

The first two bytes of the raw data are Wi-Fi PHY layer-specific.

- 1st byte: Wi-Fi rate. Definition for rate options can be found in wlan.h, RateIndex e structure.
- 2nd byte: 4 bits of power level and 4 bits of preamble type.

Defining a ping packet as a raw data structure

```
char RawData_Ping[] = {
/*--- wlan header start ----*/
                                                              0x88,
                                                                                                                                                                                        /* version , type sub type */
                                                             0 \times 02.
                                                                                                                                                                                        /* Frame control flag */
                                                             0x2C, 0x00,
                                                              0x00, 0x23, 0x75, 0x55,0x55, 0x55, /* destination */
                                                              0x00, 0x22, 0x75, 0x55,0x55, 0x55, /* bssid */
                                                              0x08, 0x00, 0x28, 0x19,0x02, 0x85, /* source */
                                                              0x80, 0x42, 0x00, 0x00,
                                                              0xAA, 0xAA, 0x03, 0x00, 0x00, 0x00, 0x08, 0x00, /* LLC */
                                                              /*---- ip header start ----*/
                                                              0x45, 0x00, 0x00, 0x54, 0x96, 0xA1, 0x00, 0x00, 0x40, 0x01,
                                                              0x57, 0xFA,
                                                                                                                                                                                      /* checksum */
                                                                                                                                                                                      /* src ip */
                                                              0xc0, 0xa8, 0x01, 0x64,
                                                             0xc0, 0xa8, 0x01, 0x02,
                                                                                                                                                                                      /* dest ip */
                                                              /* payload - ping/icmp */
                                                              0x08, 0x00, 0xA5, 0x51,
                                                              0x5E, 0x18, 0x00, 0x00, 0x41, 0x08, 0xBB, 0x8D, 0x00, 0x00, 0x00, 0x00,
                                                              0x00,\ 0x00,
                                                              0x00,\ 0x00,
                                                              0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00,
                                                              0 \times 00, 0 \times 00,
                                                              0x00,\ 0x00,
                                                              0x00\,,\; 0x00
                                                              0x00, 0x00, 0x00, 0x00 .... };
```

Raw socket send

```
void TxContinues(int iChannel,RateIndex_e rate,int iNumberOfPackets,double dIntervalMiliSec)
{
...
// Socket open
iSoc = sl_Socket(SL_AF_RF,SL_SOCK_RAW,iChannel);

// Send the data
for(ulIndex = 0 ; ulIndex < iNumberOfPackets&nbsp;; ulIndex++)
{
sl_Send(iSoc,RawData_Ping,sizeof(RawData_Ping),SL_RAW_RF_TX_PARAMS(iChannel, rate, iTxPowerLevel, PREAMBLE));
}
...
// Close the socket
sl_Close(iSoc);
...
}
```



The Rx statistics feature inspects the medium in terms of congestion and distance, validates the RF hardware, and helps using the RSSI information.

5.1.5.2 Source Files Briefly Explained

- main Demonstrates sending a raw ping packet in Tx continues, and usage of different API for getting the Rx statistics.
- uart if Displays status information over the UART.
- pinmux.c Pinmux file to mux the device and configure the UART peripheral.
- startup_ccs.c CCS-specific vector table implementation for interrupts
- startup_ewarm.c IAR workbench-specific vector table implementation for interrupts

Supporting folders/files


The *ewarm* folder contains IAR workspace. The *ccs* folder contains CCS Project, the *driverlib* folder contains all the driver files, and the *simplelink* folder contains Simple Link Host Files

5.1.5.3 Usage

- Setup a serial communication application (HyperTerminal/TeraTerm).
 - Port: Enumerated COM port (CC3200LP Dual Port)
 - Baud rate: 115200
 - Data: 8 bitParity: NoneStop: 1 bit
 - Flow control: None
 - Run the reference application (Flashing the bin/IAR/CCS).
- Observe the status messages on the host over serial port in response to the user's selection of either "sending packets" or "Collect statistics of received packets" to understand the sequence of operations performed by the application.

Terminal snapshot when application runs on device:

Figure 13. CC3200 Transceiver Application on the Hyperterminal

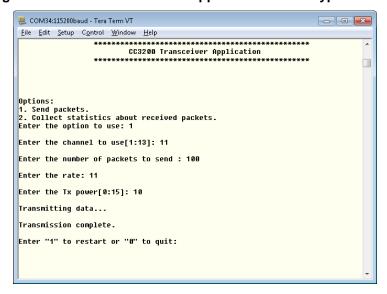

Common interface files: Common interface files are available under the example common folder



5.2 SimpleLink APIs

| | APIs | Description |
|----------------------|---------------------------|--|
| WLAN APIS | sl_Start | This function starts the SimpleLink (Networking) device. This function initializes the communication interface. Once this is complete LED1 starts blinking to indicate SI_start is complete and waiting to complete SI_Wlanconnect. |
| | sl_WlanConnect | This function connects the device to AP that is specified as parameter. Once the connection status is set, LED1 will be ON until the device is disconnected from the AP. After a successful WLAN connect, the name of the AP to which the device is connected is displayed on the terminal. |
| | sl_lpConfigGet | While in DHCP mode, this function is used to get an IP address from the associated AP. The IP address will be displayed on the terminal so that the client machine (iperf PC) can make use of this address to connect to the device. |
| | sl_WlanDisconnect | This function prompts the device to relinquish the connection (hence the association) with the AP. |
| Note – LED functiona | lity depends on applicati | on implementation. |
| Network APIs | sl_Socket | Creates UDP Socket. |
| | sl_SendTo | Sends a Welcome message to the destination IP address, given as input. The destination IP address is taken from Input. 200 packets will be sent to the specific destination address if the address is mentioned in the input. If the destination address is not mentioned, the message is broadcasted. Once this is complete an alert will be given on UART. While the device is sending messages Led2 will be on to indicate the device status. |
| | sl_Bind | Binds socket. The reception port is taken as 5002 in this application. |
| | sl_RecvFrom | Receives message from Client. The device will be waiting for 200 packets to receive. Once the device receives 200 packets, an alert indicating the same and the source address of the packets will be shown on UART. While receiving messages Led4 will be on to indicate the device status. |
| | sl_Close | Closes the socket. |
| Note - Number of pa | ckets and port depend o | n application implementation. |

5.3 Compilation, Build and Execution Procedure

Refer to the IAR/CCS help documentation that contains detailed information on compiling, building, and executing user applications. The following sections highlight key projects exercised during the development process. The basic Wi-Fi application is taken up as a reference to demonstrate the development environment. Similar procedures apply for any reference application or new developments. Most of the steps mentioned here are already performed for all the reference applications (present in examples/ folder) and captured in the project files. While using the debugger, clean and rebuild the libraries (driverlib, simplelink, FreeRTOS) to avoid any source file association problems.

NOTE: While creating new project under this SDK call PRCMCC3200MCUInit() as the first call in main() for proper initialization of the device.

NOTE: Visit the <u>CC3200 TI-RTOS page</u> before creating any TI-RTOS based application.

5.3.1 Development Environment – IAR

Follow the steps given in C:\T/\CC3200SDK\cc3200-sdk\tools\iar_patch\readme.txt to replace iarmLMIFTDI.dll.

5.3.1.1 Creating a Project

- File->New->Workspace
- Project->Create New Project (Tool Chain = ARM, Project Templates = 'C')
- Open Project Option and follow the settings as given in these snapshots:




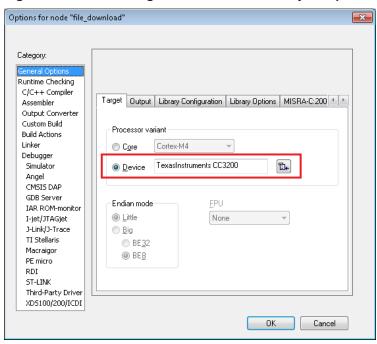


Figure 14. CC3200 Programmer Guide IAR Project Options

5.3.1.2 Compiling a Project

Figure 15. CC3200 IAR Compiling Project



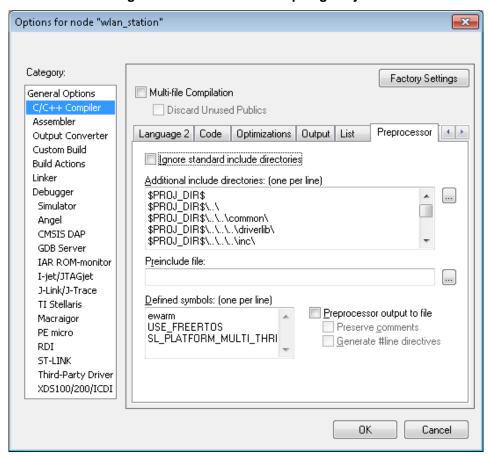

Additional include directories


- To use Driverlib APIs Include driverlib and inc folder path
- To use Simplelink APIs Include simplelink, simplelink\Source, and simplelink\Include folder paths
- To use Free-RTOS TI-RTOS APIs Include oslib path

Defined symbols (MACRO definition)

- USE_FREERTOS If application uses Free-RTOS OS
- USE_TIRTOS If application uses TI-RTOS OS
- ewarm Define for IAR-based application
- SL_PLATFORM_MULTI_THREADED If application uses any OS (Free-RTOS/ TI-RTOS)
- NOTERM If application does not need UART prints.

5.3.1.3 Linking a Project

Figure 16. CC3200 IAR Linker Project

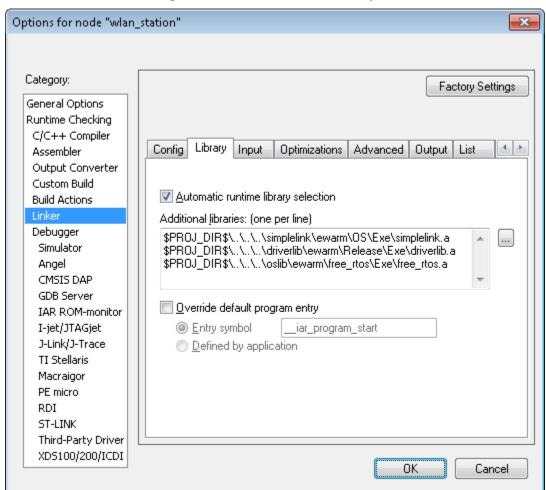

Additional libraries

- Add library path as per application needs:
 - driverlib.a: Available under the driverlib\ewarm\Release\Exe\ folder.
 - simplelink.a: Available under simplelink\ewarm\OS\, simplelink\ewarm\NON_OS\,
 simplelink\ewarm\NON_OS_PM, and simplelink\ewarm\PM_Framework\ folder for the OS, Non-OS,
 Non-OS with power management hook, and power management configuration for OS environment,
 respectively.



- free_rtos.a : Available under oslib\ewarm\free_rtos\Exe\ folder.
- ti_rtos.a: If application uses TI-RTOS, then the TI-RTOS library is available under the oslib\ewarm\ti_rtos\Exe\ folder.

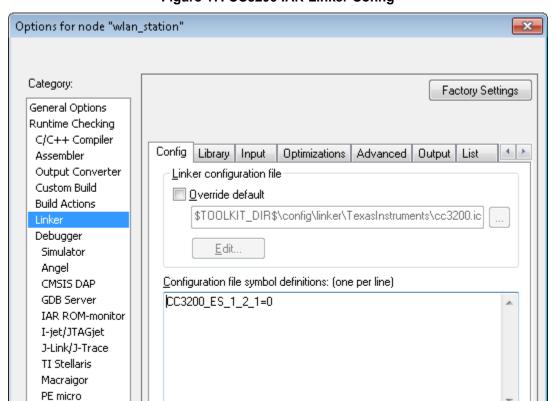


Figure 17. CC3200 IAR Linker Config

Linker configuration file

RDI ST-LINK

Third-Party Driver XDS100/200/ICDI

 Link to IAR linker file. By default, IAR links to CC3200.icf available in IAR installation. The developer can change this as per application requirement.

Symbol definitions

 Define CC3200_ES_1_2_1=1 only for the XCC3101GZ device, and CC3200_ES_1_2_1=0 for other devices.


0K

Cancel



5.3.1.4 Generating the Binary (.bin)

Figure 18. CC3200 IAR Generating Binary

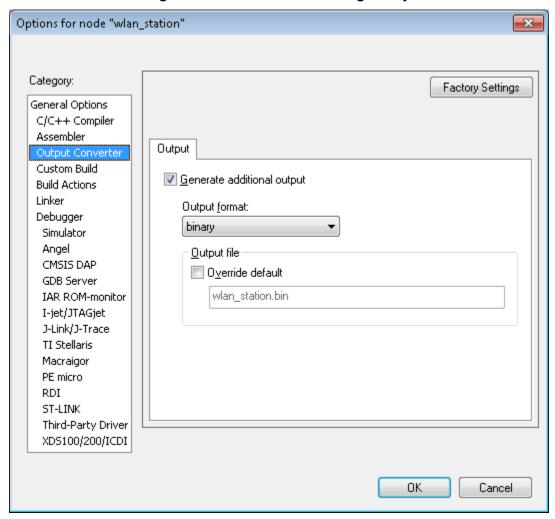

To generate additional output select the output format, a current SDK user must select the 'binary' option and override the .bin path. In CC3200 SDK, IAR generates bin file in the <example>lewarm\Release\Exe folder.

5.3.1.5 Executing a Project

To use the JTAG over FTDI, the TI Stellaris driver must be selected. The user can configure IAR to work with JTAG/SWD by choosing the option available in Options->Debugger->TI Stellaris->Interface. On the CC3200 Launchpad:

- JTAG Mode connect SOP-2 jumper only
- SWD mode connect SOP-0 jumper only

NOTE: The 4-Wire JTAG will work without connecting the SOP 2 jumper. However, TI recommends connecting the SOP 2 jumper to prevent the already-flashed code from executing while debugging.



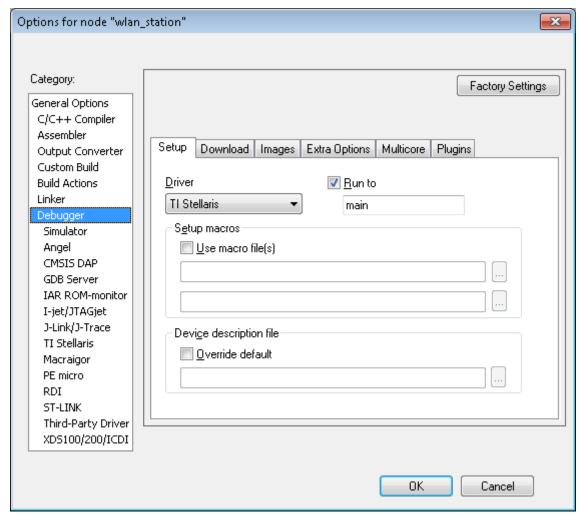


Figure 19. CC3200 IAR Executing

Click on the Download and Debug button to start the execution. The execution stops at the main function. Click the Go button (or F5) to run.

Figure 20. CC3200 IAR Download and Run



If the application uses UART to print the output on the terminal, then the user must setup a terminal application (such as HyperTerminal or TeraTerm). These are the serial port settings:

- Baud Rate 115200
- Data 8 bits
- Parity none
- Stop 1 bit
- Flow control- none

Note: To enable UART prints in any application:

 Add UART_if.c/.h to project and do pinmux for UART peripheral (refer to example\mode_config\pinmux.c).



 Disable the NOTERM macro and call InitTerm (example\common\uart_if.c) to initialize UART at the start of the application program.

5.3.2 Development Environment – TI Code Composer Studio

Current SDK supports CCS 6.0.1 version. The following are the steps to create a new project in CCS environment.

5.3.2.1 TI-RTOS 2.0 in CCSv6

To install TI-RTOS under a CCS environment:

- Start the CCS and open the app center from the Help->Getting Started screen.
- Search 'CC3200' in the app center, which results in 'CC3200 Add-on' and 'TI-RTOS for SimpleLink.'
- Select and install in CCS 6.0.1

Figure 21

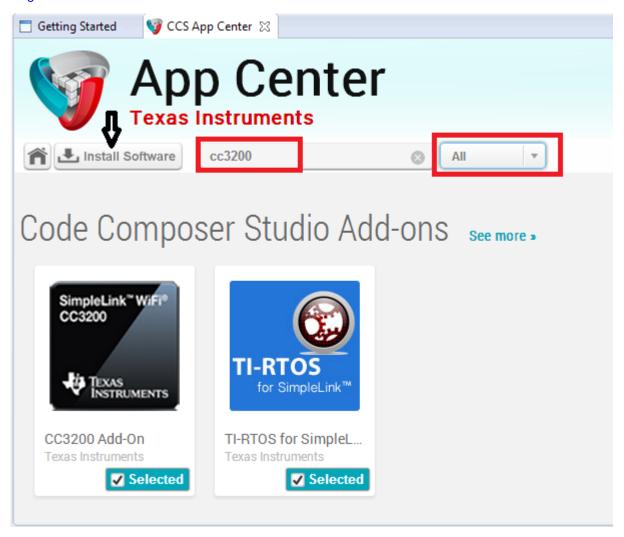


Figure 21. CCS App Center



5.3.2.2 Install TI-PinMux Tool

The user can install the TI-Pinmux Tool from http://www.ti.com/tool/pinmuxtool or as specified in Figure 22

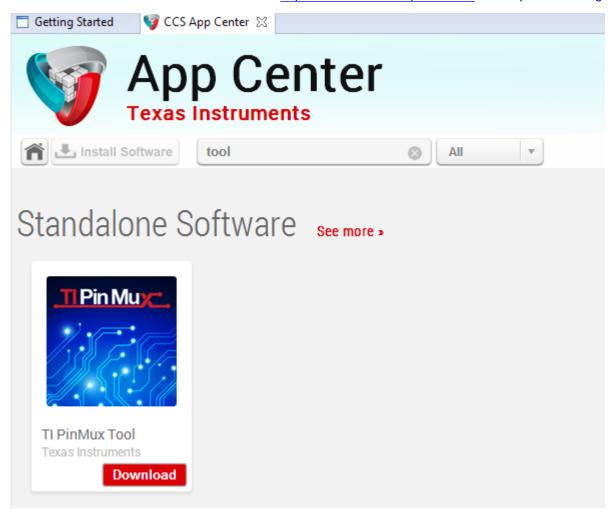



Figure 22. TI-PinMux Tool



5.3.2.3 Importing a Project

The current version of the SDK supports Copy Projects into Workspace, allowing the user to modify the example source as per requirement without touching the SDK repository.

Figure 23. Select CCS Projects to Import

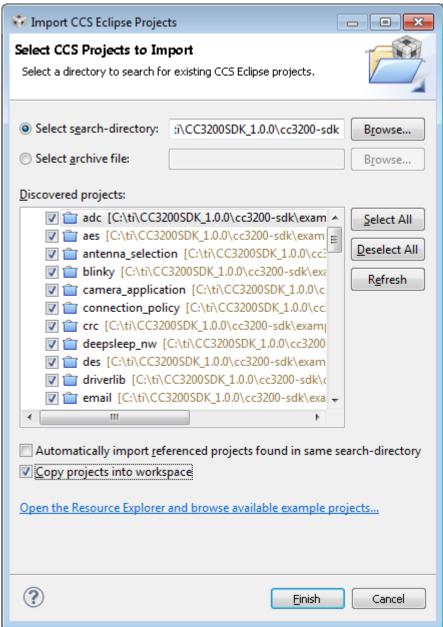

If the user copies any library project (such as driverlib, simplelink, or netapps) to the workspace and modifies it, ensure that the concerning application connects to the latest and modified >library>.a, available in the workspace (see Figure 30).

MACRO.ini: This file is used when the user copies any example folder to their working directory and tries to build a CCS project. Edit macro.ini and assign CC3200_SDK_ROOT to the SDK root path and import the project into the workspace, so that the example can connect to the SDK libraries and common files. CC3200_SDK_ROOT=C:\tau\text{TI\CC3200SDK_1.0.0\cc3200-sdk}




5.3.2.4 Creating a Project

- File -> New -> CCS Project
- Target -> Wireless Connectivity MCU
- Device -> Variant -> CC3200
- Open Project Option, and follow the settings as given in the snapshots.

For the application to work with TI-RTOS, ti_rtos_config project must be imported into the CCS workspace. Refer to *docs\CC3200-TI-RTOS User Guide.pdf* or http://processors.wiki.ti.com/index.php/CC32xx_TI-RTOS.

Figure 24. CC3200 CSS Editing Existing Project

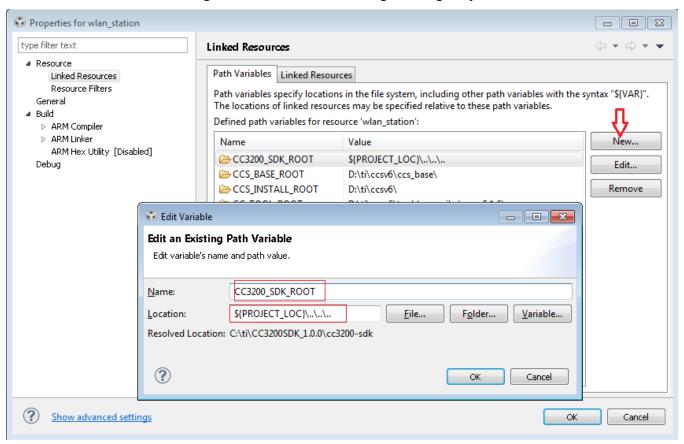

Add a path variable CC3200_SDK_ROOT in the CCS project, which locates to the root folder of the current SDK. The user can change this path to point to the desired version of the SDK path. This variable can be used to include paths, link libraries, and common source files.



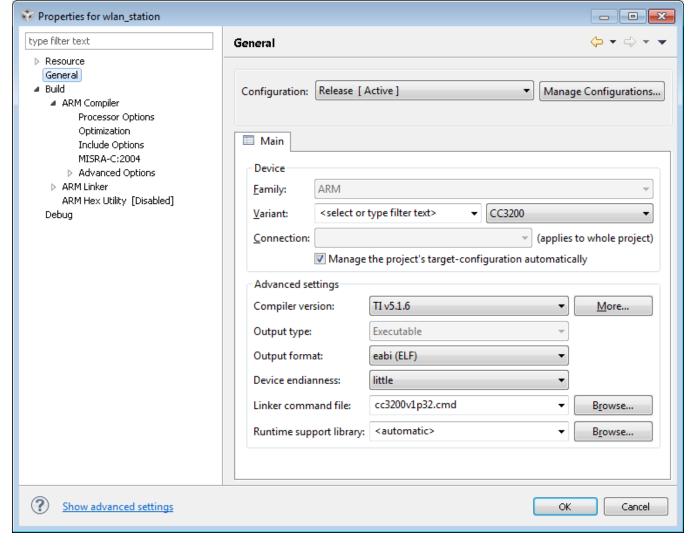


Figure 25. CC3200 CCS Creating Project


Linker command file:

- cc3200v1p32.cmd: for XCC3200JR, CC3200R1M2, and XCC3200HZ devices.
- cc3200v1p21.cmd for XCC3101GZ device.



5.3.2.5 Compiling a Project

Figure 26. CC3200 CCS Compiling Project

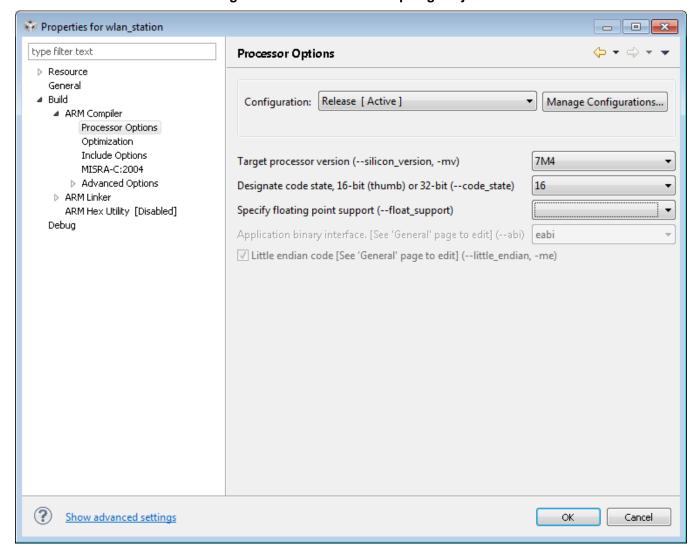



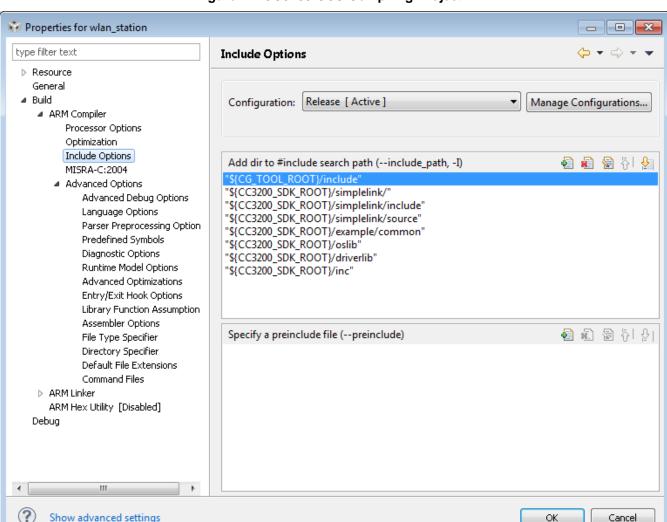


Figure 27. CC3200 CCS Compiling Project 1

Add dir to #include search path

- To use Driverlib APIs Include driverlib and inc folder path.
- To use Simplelink APIs Include simplelink, simplelink\source, and simplelink\include folder path.
- To use TI-RTOS APIs Include oslib folder path.
- To use common interface APIs Include example\common folder path.



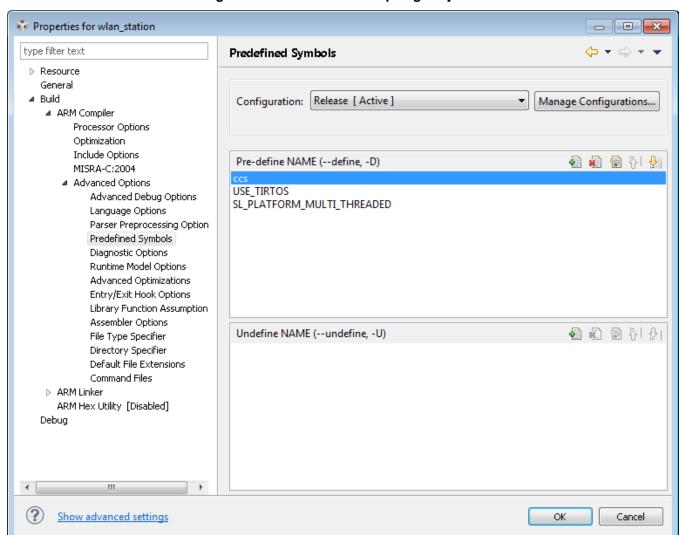


Figure 28. CC3200 CCS Compiling Project 2


Pre-define NAME

- USE_TIRTOS To use TI-RTOS OS APIs.
- USE_FREERTOS To use Free-RTOS OS APIs.
- SL_PLATFORM_MULTI_THREADED If application uses any OS.
- ccs For CCS-based application



5.3.2.6 Linking a Project

Figure 29. CC3200 CCS Linking Project 1

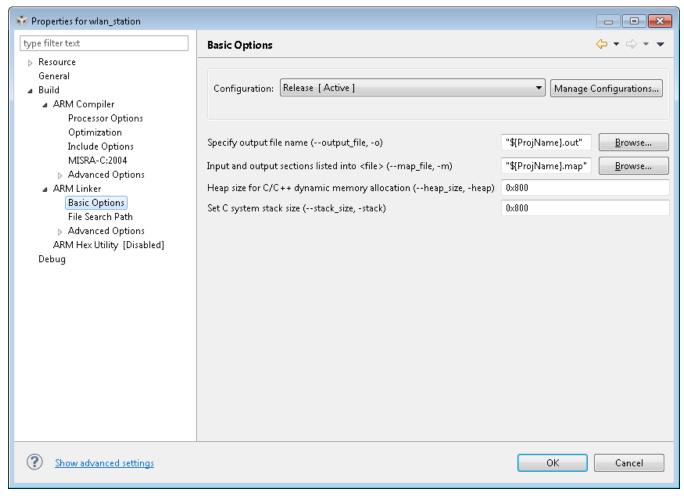

• Set heap and stack size as per the application requirements.



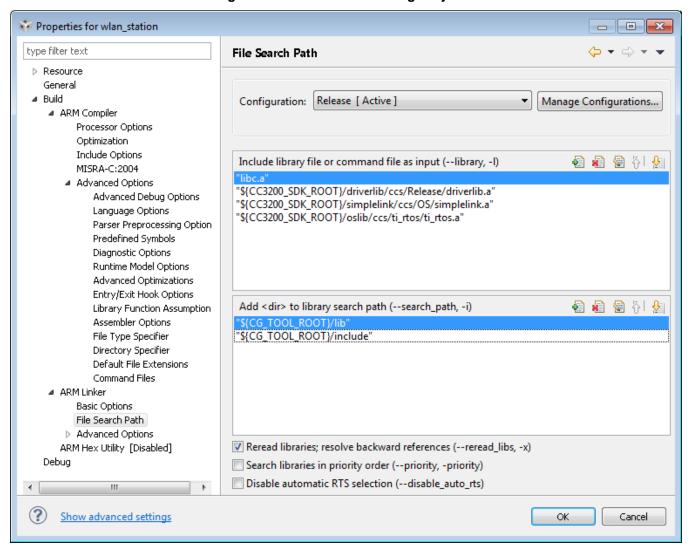


Figure 30. CC3200 CCS Linking Project 2


Include library file

- As per the application requirements, include driverlib.a, simplelink.a, ti_rtos.a, or free_rtos.a
 - driverlib.a is available under the driverlib\ccs\Release folder.
 - simplelink.a is available under the simplelink\ccs\OS', NON_OS,' NON_OS_PM', PM_Framework folder for OS, non-OS, power management for non-OS, or power management for OS-based applications respectively.
 - ti_rtos.a and free_rtos.a are present under the oslib\ccs\ti_rtos and oslib\ccs\free_rtos folders, respectively.



5.3.2.7 Dependency to Other Project

Figure 31. TI-RTOS OS Dependency

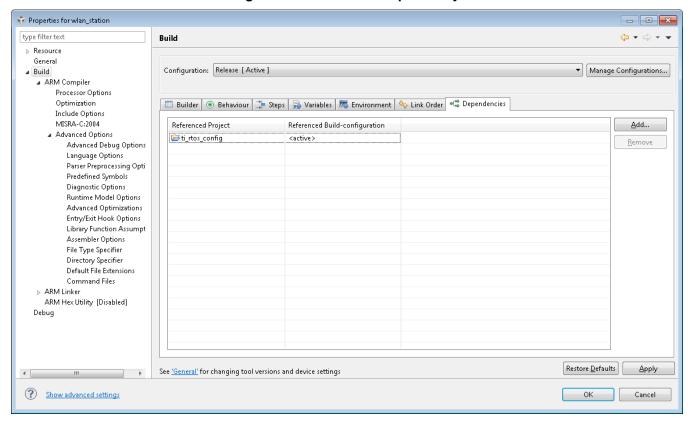

Dependencies


- If the application uses TI-RTOS OS, add ti_rtos_config project as dependency for the application.
 - ti_rtos_config project should be imported in CCS workspace for TI-RTOS based application.
 - Current SDK supports TI-RTOS 2.1.0.x

5.3.2.8 Generating a Binary (.bin)

Add the following script to generate a .bin file





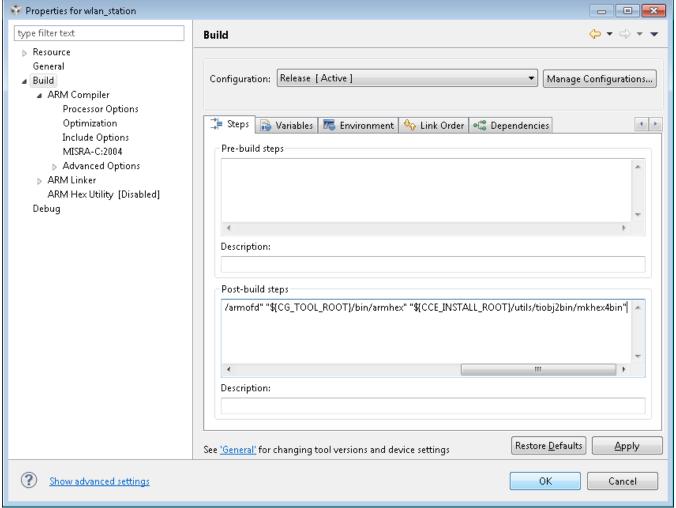




5.3.2.9 Executing a Project

Click on the target configuration under View.

Figure 33. CC3200 CCS Executing 1

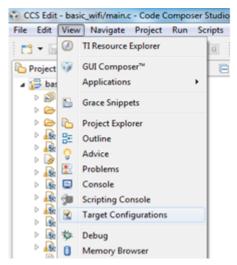

Right Click on the User Defined, click on Import Target Configuration, and select CC3200.ccxml from /tools/ccs/.

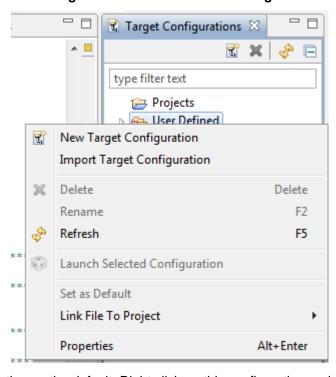


Figure 34. CC3200 CCS Executing 2

Set this new configuration as the default. Right click on this configuration and select Launch Selected Configuration.



🕄 Target Configurations 🔀 type filter text Projects User Defined cc3101 jtag.ccxml [Default] New Target Configuration Import Target Configuration Delete Delete Rename F2 Refresh F5 Launch Selected Configuration Set as Default Link File To Project Properties Alt+Enter

Figure 35. CC3200 CCS Launch Config

To switch between JTAG/SWD mode from CCS, follow the steps specified in Figure 36. On the CC3200 LaunchPad, configure the board for either:

- JTAG Mode connect SOP-2 jumper only
- SWD mode connect SOP-0 jumper only

NOTE: 4 Mire ITAC works with out some stir

NOTE: 4-Wire JTAG works without connecting the SOP 2 jumper. However, TI recommends connecting the SOP 2 jumper to prevent the already-flashed code from executing while debugging.




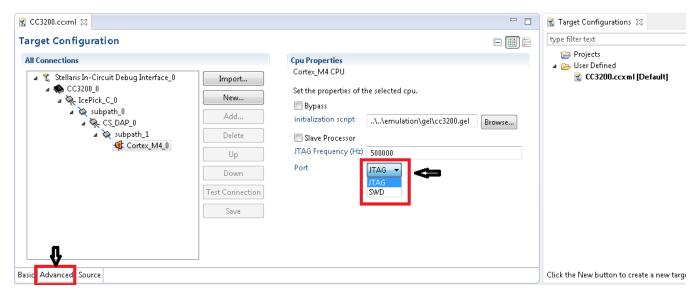


Figure 36. Target Configuration

In the Debug window, right click on Connect Target.


Figure 37. CC3200 CCS Executing 4

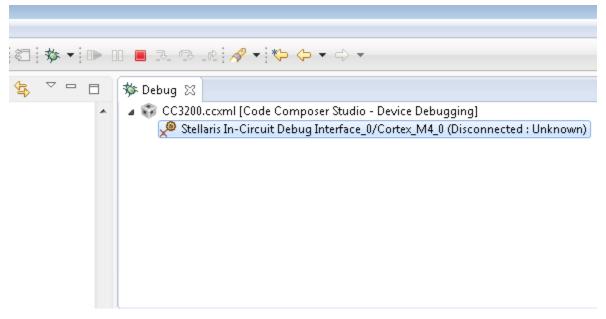

Once connected, load the .out file by selecting the appropriate application binary (Load Program).



Figure 38. CC3200 CCS Executing 5

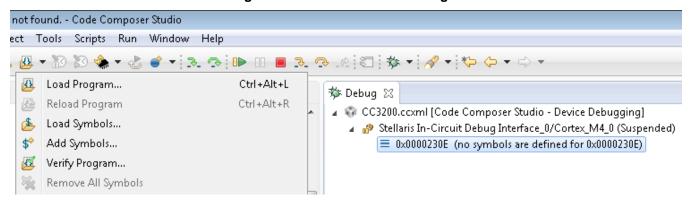

The execution will stop at the main function. Click the Go button (or F8) to run.

For UART-based applications, configure the terminal application:

- Baud Rate 115200
- Data 8 bits
- Parity none
- Stop 1 bit

5.3.3 Development Environment – Open Source [GCC/GDB]

This platform enables open source tool chains. In this section, developers can learn how to get started with GCC/GDB using the CC3200 LaunchPad, including the dependencies associated with the environment setup for Windows OS under Cygwin.

Included are a few validated sample applications with GCC (including building block libraries such as SimpleLink library and peripheral driver library).

5.3.3.1 Cygwin Installation (Windows)

Cygwin can be installed by downloading setup-x86.exe from http://cygwin.com/install.html and running it locally. Set the proxy setting in the Cygwin installation window and proceed further. CC3200 SDK is ported and tested with the Cygwin 32-bit version only.

Include the following packages in the Cygwin installation in addition to the base installation. The latest versions of all packages should be acceptable.

- 1. Archive/unzip
- 2. Archive/zip
- 3. Devel/autoconf
- 4. Devel/automake
- 5. Devel/libtool
- 6. Devel/make
- 7. Devel/subversion (Note: if you plan to use TortoiseSVN/Windows7, skip this)
- 8. Devel/qcc-core
- 9. Devel/gcc-g++
- 10. Devel/gcc-mingw-core
- 11. Devel/gcc-mingw-g++
- 12. Devel/mingw-runtime

After a successful Cygwin installation, add its path (c:\cygwin\bin\) to the Windows environment variable.



5.3.3.2 GNU Tools for ARM Embedded Processors

Download the latest version of *gcc-arm-none-eabi-<version>-win32.exe* from https://launchpad.net/gcc-arm-embedded, and install it under the Cygwin root directory (Default: *c:lcygwin*).

5.3.3.3 Open On-Chip Debugger (OpenOCD)

Open on-chip debugger (OpenOCD) can be downloaded in source form from http://sourceforge.net/projects/openocd/files/openocd/0.7.0/ and compiled locally.

To build OpenOCD for FTDI interface, download the FTDI driver library (x86 [32-bit] zip version) from http://www.ftdichip.com/Drivers/D2XX.htm.

To compile OpenOCD with FTDI support (Cygwin bash shell):

- Extract OpenOCD source into the Cygwin directory (c:\cygwin). This creates a directory called openocd-<version> under the Cygwin directory, which contains all OpenOCD source contents.
- Extract FTDI source into the openocd-<version> directory. This creates a directory called CDM 2.04.06 WHQL Certified; rename it to ftd2xx.
- 3. Change the director to openocd-<version>.
- 4. Run the following command at prompt:

```
./configure --enable-maintainer-mode --disable-werror --disable-shared --enable-ft2232_ftd2xx --with-ftd2xx-win32-zipdir=ftd2xx
```

- 5. This should successfully configure OpenOCD for building.
- 6. Run the make command followed by make install.
- 7. After the command runs successfully, check that openocd.exe is generated at *C:\cygwin\usr\loca\lbin*. Add the same path to the environment variable.

5.3.3.4 Compile the GCC SDK project

Go to <cc3200-sdk>\example\getting_started_with_wlan_station \gcc\ in the command prompt and run the following command:

```
make -f Makefile
```

This generates a wlan_station.axf file under the gcc\exe folder.

5.3.3.5 Target Connection and Debugging (GDB)

The OpenOCD configuration file for FTDI is under cc3200-sdk\ tools\gcc_scripts\ folder (cc3200.cfg). To test the connection to the CC3200 FTDI LaunchPad, go to the <cc3200-sdk>\tools\gcc_scripts folder, run the following command at the Cygwin prompt window and check the output to ensure the connection happened properly.

```
openocd -f cc3200.cfg
```

See Figure 39 for the connection output screen while the CC3200 device is connected through GDB.



Figure 39. Connection Output Screen

To start debugging using GDB on CC3200, go to <cc3200-sdk>\tools\gcc_scripts\ and run the following command at the Cygwin prompt:

```
arm-none-eabi-gdb -x gdbinit<app.axf>
```



See Figure 40 for the debugging result of a blinky application from GCC.

Figure 40. Blinky GCC Application

On the (gdb) prompt give a 'continue' command.

GDB Quick Guide - http://users.ece.utexas.edu/~adnan/gdb-refcard.pdf

5.3.4 Setup the Terminal Application

To view the UART-based application output on the terminal screen, the user should setup the terminal application (such as HyperTerminal or TeraTerm). Serial port settings:

- Baud Rate 115200
- Data 8 bits
- Parity none
- Stop 1 bit



5.4 Flashing and Running the .bin using Uniflash Tool

Once finalized, the binary images are flashed onto the non-volatile serial flash (SFlash) of the LaunchPad. The application starts the execution when the LaunchPad device is powered on. The Uniflash tool flashes the binaries onto the SFlash. The utility is available at http://processors.wiki.ti.com/index.php/Category:CCS_UniFlash.

Follow the Uniflash Quick Start Guide to download the .bin file to the CC3200 device.

Note: Connect the SOP 2 jumper on LaunchPad before flashing any image to the device. After the flashing is done, remove the SOP 2 jumper and reset the board to boot-up the application.

The .bin files for the reference examples are available in the folder example\<referenceapp>\ccs\Release (as generated by CCS) and example\<referenceapp>\ewarm\Release\exe (as generated by IAR). The application image filename must be /sys/mcuimg.bin.



CC3200 ROM Services www.ti.com

6 CC3200 ROM Services

The CC3200 ROM hosts the boot loader and peripheral driver library. The peripheral driver library is a collection of routines that abstract the peripheral programming (refer to accompanying doxygen output in the CC3200 SDK packages). This library is provided in the ROM to let the developer reduce the RAM footprint of the application.

Boot loader services allow the user to update the application binary image along with other user files in the serial flash, and are also responsible for loading the user application from the serial flash to MCU RAM.

6.1 CC3200 Boot Loader

The CC3200 boot loader resides in the ROM of the application processor.

- Update/Download The boot loader downloads an application image from the PC to the CC3200 device. The Bootloader-DNLD functionality is only triggered when the board is in UARTLOAD Sense On Power (SOP) mode.
- **Bootstrap** The boot loader is responsible for scanning a valid application image (binary) in the serial flash (for the CC3200R device). Subsequently, the image is loaded to internal memory and execution control is passed on to the user program.

6.1.1 Boot Loader Modes – Impact of Device "Sense On Power" (SOP) Pin

The CC3200 device has three SOP pins. A detailed explanation of the functionality is described in the data sheet (SWRS166). In the context of the boot loader there are two modes:

- A setting corresponding to SOP[2:0] = 0b100, makes the boot loader enter the DOWNLOAD mode; in this mode an external intervention triggers an operation – for example a "break" signal on UART from the SimpleLink programming application, followed by a sequence to push the application image to the device serial flash.
- A setting corresponding to SOP[2:0] = 0b000 instructs the boot loader to load the application image from the SFLASH to the internal MCU RAM.

6.1.2 Boot Loader / User Application – Sharing MCU RAM

In DOWNLOAD mode, the boot loader requires memory resources acquired from the MCU RAM. The amount of RAM used by the boot loader is 16 KB. This implies that for the production variant of a CC3200 device, the user application image must be restricted to 240 KB for the 256-KB MCU RAM variant of the CC3200. There are several key points for developers:

- MCU RAM address range 0x20000000 0x20003FFF: This area is shared between the application and
 the boot loader. The developer can only locate application data sections, as data sections are not part
 of the application image; this ensures that when the boot loader is loading the application image from
 serial flash to RAM, this memory region is made exclusive to the boot loader. Once the boot loader
 launches the application, this memory region can be used by the application for its data sections.
- 0x20004000 to END of RAM: This RAM area is exclusively for the application. The application image should always be within this region and start at 0x20004000.
- RAM range for different variants:
 - CC3200R1M1: 0x20004000 0x20020000
 - XCC3200JR, CC3200R1M2: 0x20004000 0x20040000
 - XCC3200HZ: 0x20004000 0x20030000

Note: Refer to the Blinky Linker command file (CCS /IAR / GCC), which defines 240 KB of RAM for the XCC3200JR and CC3200R1M2 devices.



www.ti.com CC3200 ROM Services

Table 3. End of RAM

END of RAM

Exclusively for application. Application should be part of this region and start at 0x20004000

[0x20004000]

16 KB Shared between boot loader and application [0x20000000]

6.2 CC3200 Peripheral Driver Library Services in ROM

Peripheral driver routines are used in the CC3200 MCU ROM for linking with user applications. Entire source codes of the peripheral driver routines are available in the CC3200 SDK. The developer could choose to build an application with the library while instructing the linker to use routines directly from RAM.

The focus of this section is to appraise the developer on how to use these routines, and the procedure to patch or extend any existing routines.

6.2.1 Peripheral Library Access in ROM

ROM APIs are invoked using the following re-direction flow to allow future extensions while retaining backward compatibility of location of access functions in the ROM memory map. While the API locations may change in future versions of the ROM, the API tables will not.

Two tables in the ROM resolve to the entry point of each supported API. Access is made through two levels; the main table contains one pointer per peripheral, which points to a secondary table that contains one pointer per API associated with that peripheral.

The main table is located at address 0x0000040C in the ROM. The following table shows a small portion of the API tables in a graphical form to illustrate the arrangement of the tables:

Table 4. ROM APIS

| ROM_API TABLE (at 0x0000040C) |
|-------------------------------------|
| [0] = RESERVED |
| [1] = pointer to ROM_UARTTABLE |
| [2] = pointer to ROM_TIMERTABLE |
| [3] = pointer to ROM_WATCHDOGTABLE |
| [4] = pointer to ROM_INTERRUPTTABLE |
| [5] = pointer to ROM_UDMATABLE |
| [6] = pointer to ROM_PRCMTABLE |
| [7] = pointer to ROM_I2CTABLE |
| |

Table 5. ROM Interrupts

| ROM_INTERRUPT TABLE |
|---------------------------------------|
| [0] = pointer to ROM_IntEnable |
| [1] = pointer to ROM_IntMasterEnable |
| [2] = pointer to ROM_IntMasterDisable |

The address of the ROM_INTERRUPTTABLE table is located in the memory location at 0x0000041C. The address of the ROM_IntMasterEnable () function is contained at offset 0x4 from that table. In the function documentation, ROM_APITABLE is an array of pointers located at 0x0000040C.

ROM_INTERRUPTTABLE is an array of pointers located at ROM_APITABLE[4].

ROM IntMasterEnable is a function pointer located at ROM INTERRUPTTABLE [1].



CC3200 ROM Services www.ti.com

6.2.2 Linking User Application with ROM APIs

Using the ROM driver lib APIs for devices before ES 1.32 is not recommended, as the number of APIs that would need to be patched would be higher. Nevertheless, below are the steps to use ROM driver lib APIs instead of the RAM APIs. These APIs could be used with the production version of a CC3200 device. These steps apply to all relevant source and project files that use driver lib APIs, such as the SimpleLink and oslib library.

- 1. All the .c files which use driver lib APIs should include these header files in order:
 - #include rom.h
 - #include rom map.h
- 2. All the project files should add the global preprocessor define TARGET_IS_CC3200.
- 3. All driver lib APIs should be invoked by MAP_apiname instead of apiname. For example, use MAP_UARTCharPut instead of UARTCharPut. Any changes or additions should follow this approach.
- 4. Rebuild all relevant projects.

6.2.3 Patching ROM APIs

Follow these steps to selectively patch the ROM driver lib APIs. Note that "patch" in this description means using the RAM driver lib API instead of the ROM driver lib API.

- 1. Add an entry in the file \driverlib\rom_patch.h for all APIs to be patched.
- 2. For example, to patch MAP_UARTCharPut and MAP_UARTBreakCtl entries in file rom_patch.h:
 - #undef ROM UARTCharPut
 - #undef ROM_UARTBreakCtl
- 3. Rebuild all the relevant projects that use driver lib APIs.

6.2.4 Linking with RAM-based Peripheral Driver Library

To de-link all ROM driver lib APIs and use the RAM driver lib APIs, follow these steps:

- Remove the global preprocessor define TARGET_IS_CC3200 from all project files that use driver lib APIs.
- 2. Rebuild all the relevant projects that use driver lib APIs.



www.ti.com Additional Resources

7 Additional Resources

Visit these links for additional resources on the SimpleLink Wi-Fi CC3200 and IoT Solution, a single chip wireless MCU device.

- CC32xx Wiki All additional resources.
- TI Product Folder for CC32xx.
- CC32xx SimpleLink Host Driver APIs and CC32xx Peripheral Drivers APIs.
- CC32xx Technical Reference Manual.



Revision History www.ti.com

Revision History

| Ch | anges from July 1, 2014 to March 11, 2015 | Page |
|----|---|------|
| • | Added Application Bootloader, HTTP Client Demo, Idle Profile (Non-OS), MQTT Client, MQTT Server, OTA Updated, Dynamic Library Loader to examples in Package Contents table. | |
| • | Added http, json, and mqtt to NetApps in Package Contents table. | |
| • | Added Simplelink_extlib and Documents values to Package Contents table | |
| • | Updated image | |
| • | Updated image | |
| • | Added HTTP Client Demo, Idle Profile (Non OS), MQTT Client, MQTT Server, and OTA Update to table | |
| • | Added Application Bootloader and Dynamic Library Loader to table. | |
| • | Updated Simple Networking Applications section. | 22 |
| • | Added Note. | 40 |
| • | Added Note. | 55 |
| • | Updated RAM range | 62 |
| | Revision History | |
| Ch | anges from Original (June 2014) to A Revision | Page |
| • | Changed to xCC3200HZ and XCC3101GZ | 5 |
| • | Added Watchdog System Demo, TFTP Client, and WebSocket Camera values | 11 |
| • | Added NetApps values to Package Contents table. | |
| • | Added Watchdog System Demo, TFTP Client, and WebSocket Camera to table. | 19 |
| • | Deleted security macro. | |
| • | Added pinmux, gpio, and uart values. | |
| • | Updated Code Flow Connection. | 24 |
| • | Reworded Step Five. | |
| • | Added pinmux and uart values. | |
| • | Updated Code Flow Connection. | |
| • | Updated Application Details section. | 26 |
| • | Added uart and udma values | |
| • | Updated Code Flow Connection. | |
| • | Updated Application Details. | |
| • | Added uart and udma values | |
| • | Updated Code Flow Connection. | |
| • | Added pinmux, startup_ccs, and startup_ewarm values | |
| • | Added NOTERM bullet point | |
| • | Added Note | |
| • | Added Importing a Project section | |
| • | Added macro.ini paragraph. | |
| • | Added image | |
| • | Updated image | |
| • | Updated images | |
| • | Updated image | |
| • | Updated image. | |
| • | Added RAM range for different variants. | |
| • | Deleted Changed from0x0000042C to 0x0000041C | |
| • | Changed from ROM_APITABLE[5] to ROM_APITABLE[4]. | 63 |

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive amplifier.ti.com Communications and Telecom www.ti.com/communications Amplifiers **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps DSP dsp.ti.com **Energy and Lighting** www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical Logic Security www.ti.com/security logic.ti.com

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Microcontrollers <u>microcontroller.ti.com</u> Video and Imaging <u>www.ti.com/video</u>

RFID www.ti-rfid.com

OMAP Applications Processors <u>www.ti.com/omap</u> TI E2E Community <u>e2e.ti.com</u>

Wireless Connectivity <u>www.ti.com/wirelessconnectivity</u>