



USER MANUAL


Quick User Guide - INFLATION



1) Unpack canopy roll out each leg. Be aware of the surface conditions, prep area if necessary.



2) Locate center valve at the peak of the canopy. Inflate center support through one-way valve.

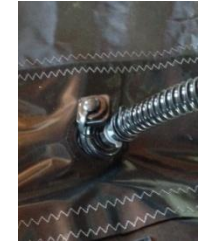

3) Locate valve(s) at the base of each leg. Insert and tighten valves, remove upper inflation cap only for one-way inflation.



4) Inflate each leg. After canopy is erect, it is recommend to check each leg, add air if necessary. Secure each inflation cap so no air leaks.



5) Attach accessories using the zipper connections. For marquees, first insert batons, zip to canopy, inflate arch, connect peak support and inflate.



6) Secure side panels using lateral straps; if necessary, to the legs or side panels. Perform at base and half panel. Secure your canopy with stakes, sandbags, weights, lateral straps and guy wire. The above described stabilization methods may or may not be adequate for your specific needs.

Quick User Guide - DEFLATION



1) Remove lateral connections for side panel(s). Remove accessories by lowering each zipper. For marquees, first deflate connection support and arch prior to unzipping.

3) Locate valve(s) at the base of each leg. Unscrew the larger/lower deflation cap.



3) Deflate each leg. The legs will deflate quickly.

4) Locate the center peak valve and open for deflation.



5) Carefully, lay each leg over one another. The canopy will lay outwards with three wings on one side and a single wing on the opposite. Fold them over in preparation for folding. Slowly begin fold the canopy- be aware not to place too much pressure on the canopy – especially at the start. It is recommended to lightly fold once removing the air and then repeating the process.