

Parts

Package include	
• Emitter	1
• Receiver(Headphone)	1
• Instruction Manual	1
• Audio cable	1
• Audio Transform cable	1
• The following parts are optional	
• 4.5V DC 200mA Power adaptor	1

Installation

Installing the receiver:

Insert two AAA batteries into the battery compartment according to the + and polarity. Draw the function switch (7) to the location of WIRELESS or FM. The indicator on the headphone shine to ensure that the headphone work well.

Installing the emitter:

Insert two AAA batteries into the battery compartment according to the + and polarity, or insert the power adaptor (optional) into power socket of emitter (4.5V DC). Insert audio plug of the emitter into AUDIO-OUT socket of audio source (such as TV set, audio device, PC, DVD player, CD player, MP3 player, etc.). Please see Fig.1, Fig.2, Fig.3, Fig.4 (Note: locate the emitter at a high position in order to achieve best reception effect)

Operation

Wireless headphone

- Please see Fig.1, Insert the emitter audio cable into the AUDIO-OUT socket of the electronic device or headphone socket, and move the function switch of the emitter to the "ON" position, then the emitter indicator shine.
- Build in the battery on the emitter and the receiver, draw the function switch

to the "WIRELESS" position, the indicator of the headphone go on. Put the volume control to a suitable position, then adjust the tiny modulation on the emitter till getting a best effect (largest sound and clearest).

Wireless net audio chat

- Connect the emitter audio cable to the adaptor cable (optional) (see Fig.2), and insert the other end of the adaptor cable into the audio out socket of the PC, then insert one end of the audio cable (optional) into the microphone socket (MIC) on the emitter, and insert the other end into the microphone in socket of the PC.
- Turn on the power switch of the emitter, then the indicator go on well, put the out-built MIC forward yourself and keep away with the distance of 0.5M(see Fig.2).
- Open your chat tool and draw the switch to the "WIRELESS" position, the indicator of the headphone go on well. Adjust the volume to the suitable position, then headphone can receive the sound via the SKYPE/MSN/QQ from your friends in the other end.

Listen to the radio



The receiver can be used separately as an FM radio. First draw the function switch to the "FM" position, and then press the "RESET" once, then press the "SCAN" key in turn to search a higher range and lock one radio channel; when the highest range is reached, press "RESET" key, and the frequency returns to the lowest range. Press "SCAN" key again, and the receiver will search the radio channels from the low range again.

Wired Headphone (without batteries)

Insert one end of the audio cable (optional) into the audio socket of the receiver (see Fig.4), and insert the other end into the headphone socket of the electronic devices, such as MP3 player, VCD player, DVD player, etc., and then the unit can be used as a wired headphone.

Turning off the unit

When the unit is not used, move the function switch on the emitter to "OFF" position to turn off the emitter, and turn the volume control receiver to the "OFF" position, and the power indicator receiver will go out, and the receiver will turn off. Remove batteries when not using unit for a long time.

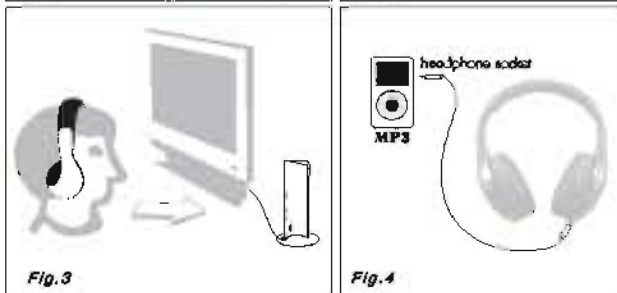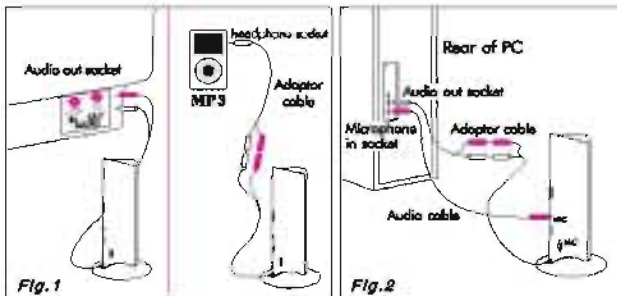

Technical Specifications

Emitter

Emission frequency: 86±0.5MHz
Modulation mode: FM
Emission distance: 30M (with no interference)
Power supply: 2xAAA batteries or 4.5V DC.

Receiver(headphone)

Frequency range: 86MHz for wireless headphone and 87-108MHz for FM radio.
Reception Mode: FM
Distortion: ≤ 2%
Power Supply: 2xAAA batteries

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance

Notes

- To achieve best reception spread out emitter audio cable of the emitter or locate the emitter at a higher position. (the emitter audio cable can also be used as antenna).
- If the sound is distorted or too strong, adjust the volume of the signal source (TV set, VCD, player, DVD player, PC, MP3, walkman etc.) to a lower level, and reception performance may be improve.
- Replace the batteries if you are having the following problems
 - The emitter indicator becomes dim.
 - The receiver reception is poor.
 - The volume becomes weak and the sound is distorted.

Appearance and Function Illustrations

A Receiver

- Battery compartment cover
- Volume control (VOL)
- Power/Function switch (OFF-WIRELESS-FM)
- Scan key(SCAN)
- Reset key(RESET)
- Power indicator
- Audio socket

B Emitter

- Power indicator (Front)
- Power switch (Tiny Frequency modulation)
- Microphone socket (MIC)
- Power socket (4.5V DC)
- Microphone (MIC)
- Audio cable of emitter
- Battery compartment (bottom)

