

Wireless Barcode Scanner User Manual

Performance

- Strong decoding capability
- Rugged housing design
- Proprietary intellectual property
- Comfortable and convenient to use
- long life time button--3 million times
- built-in chargeable lithium battery

Packing list:

- 1*wireless barcode scanner;
- 1*charging cable;
- 1*charger;(optional)
- 1*user manual;
- 1*USB adapter.



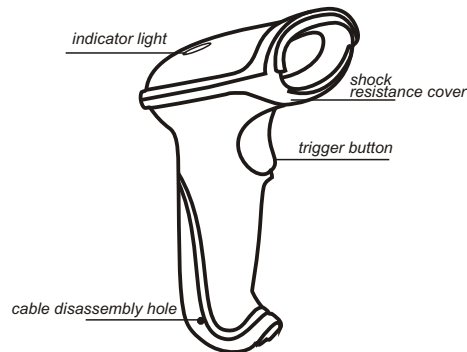
Warning:

1. Please pull out the power supply and cable from the scanner in stormy weather to avoid damaging.
2. Keep away from heat and maintain ventilation.
3. Keep away from water in the environment of storage, transportation and operation.
4. Please use the original USB adapter of the device.

Wireless Barcode Scanner Knowledge

With the high-performance processor and decoder, it has a rapid decoding and high precision reading ability. It can read bar codes easily on paper, products, etc. because of the high resistance to environmental interference. The scanning distance of it is much longer than other similar products. It has the advantages of fast speed, high accuracy and excellent reading performance.

Housing Design Description



To pull out the cable from the scanner, please plug in the clip to the cable disassembly hole. The scanner transfers data to the computer via the adapter. Please connect the adapter to the fixed computer USB interface. Do not plug in or pull out the adapter frequently in order to help improving the working efficiency and avoid man-made damage.



How to Use

First, connect the USB adapter to the computer.(No driver needed.)

Second, place the cursor to where you want to enter the information or open a document in the computer, then use the barcode scanner to scan 1D barcodes. When the document shows the information, it reads successfully.

Third, connect the charging cable to the bottom of the scanner and use the computer USB interface or USB adapter to charge. The charging time is 2 hours. After finishing charging, the scanner can work 10 hours continuously.

The wireless barcode scanner has been set well before delivery. It can be used directly. Please do not scan the barcodes in the manual optionally to test the scanner. **In case of scanning the setting barcodes and abnormal condition occurs, Please scan the 'initialization setting' barcode and 'serial mode' barcode in the manual to reset the scanner to the Default settings.**




Initialization Setting




Serial Mode

Reading Angle


- Maintain a bevel between the scanner and the barcode to make a best reading.
- Do not keep the scanner in 90° with the barcode, otherwise the scanner can't read.
- The scanner must aim at the barcode and the beam must cover the whole barcode. If don't, error maybe occur.




correct way of reading

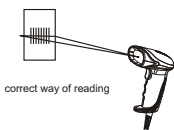

correct way of reading



incorrect way of reading



incorrect way of reading

Technology Parameters

Physical Parameters

Size: 168mm*73mm*93mm

Weight: 300g

Charging interface: RJ-45 plug, 2 meters (with 5V charger, red light for charging, green light for battery charged)

Housing material: ABS+PC

Performance Parameters

Light source: visible laser diode, wave length 650nm
Trigger mode: manual (long press the button to turn off the scanner)

Scanning mode: single line scanning

Scanning speed: 150±2 scans/sec

Resolution: ≥3mil

Error rate: 1/50million

Scanning resolution: minimum 30% contrast

Transmit frequency: 2.4G

Transmit distance: visible distance 30m (customized)

Depth of scanning field: 5mm-630mm

Scanning angle: ±60°±65°±42°

Decoding capability: international standard 1D barcodes like LIPC/EAN/JAN, UPC/EAN with Supplemental, LICC/EAN 128, Code 39, MSI, Code11, Codabar,

Code93, Discrete 2 of 5, IATA, RSS variants, Codabar, Chinese 2 of 5, Interleaved 2/5, Interleaved 2 of 5, China post code, etc.

Prompt mode: beeper& LED

Setup mode: manual (scan the setting barcodes)

Laser safety level: EN60825-1, Class 1, National Class 1 Laser Safety Standard
EMC

EMC: EN55022, En55024

Electric safety: EN60950-1

Testing standard: EN55022:2006+A1:2007

EN55024:1998+A1:2001+A2:2003

EN61000-3-2:2006+A2:2009

EN61000-3-3:2008

Electrical Parameters

Charging time: 2 hours

Charging voltage: DC5V±5%

Power: 100MW(operation), 500MW (maximum)

Currency: 20MA(operation), 100MA(maximum)

Standby currency: <20uA

Environmental Parameters

Light intensity: 3000-12000LUX

Temperature: 0℃-50℃(operation mode); -40℃-60℃(storage)

Package level: IP 52

Shock resistance: design to fall from 2 meters height from concrete surface

Scanning Standard



Correct Way of Scanning

.....



Incorrect Way of Scanning



Incorrect Way of Scanning

Wireless Barcode Scanner Operation

Power On

Press the button. The scanner will beep two times and indicator light is on.

Power Off

Press the button for 5 seconds. The indicator light is off.

LED Indicator& Beeper

Indicator Light Color	Instruction
Green light and will be off soon	a short beep when reading successfully
Beep Sound	Instruction
A short beep	reading barcodes and the green light will be off soon
A long beep	low voltage and please connect the charger to charge
Double short beep	turn on the scanner
Three long beep	fail to upload data and need to reset the channel setting

Scanning Mode Setup

- Setup instruction:
- Normal mode means real-time transmission. Scan 'Normal Mode' bar code,the scanner will be in real-time transmission.
- In inventory mode, the scanner will save the barcode it reads. When need to upload the data to computer, scan 'Data Upload' bar code.
- Scan 'Total Number of Data' bar code, the computer will show how many bar codes the scanner reads under inventory mode.
- Scan 'clear data' bar code means clear all the bar codes being read under inventory mode.



Normal Mode



Inventory Mode



Data Upload



Total Number of Data



Clear Data

Sleep Time Setting

To set sleep time, first we need to scan 'sleep time' bar code.
Second, scan the time you want to set.



Sleep Time



20 seconds



30 seconds



60 seconds



2 minutes



5 minutes



10 minutes



20 minutes

Paired with the Adapter& User ID Settings

Channel Settings

- If the scanner doesn't connect to the computer (data will not be uploaded to the computer), please do the following steps
- Channel settings need to be finished within 10 seconds after connect the adapter to the computer USB interface.
- Scan 'Channel Settings' bar code
- Scan two numeral bar codes on page 6. For example, scan '0' and '1', channel number will be 01.
- The setting range of the channel number can only be 01-20.



Channel Settings

User ID Settings

- First, scan 'ID settings' .
- Scan two numeral bar codes below. For example, scan '0' and '1' , ID number will be 01. After finish setup, the ID number will be shown in front of all the barcodes read by the scanner.



ID Settings

User ID is set to be shown. If need to hide user ID, scan 'ID Hidden' . Scan 'ID Display' will show the User ID.



ID Display



ID Hidden



0



1



2



3



4



5



6



7



8



9

Shutdown/Default value/Version information



Shutdown



Software information



Hardware information



Default value

Barcode Setting

Code 11



Code 11 /on



Code 11 /off



ID Character 'm'



ID Character 'z'



Code 11
redundancy enable



Code 11
redundancy disable

Code 93



Code 93 /on



Code 93 /off



ID Character 'h'



ID Character 'z'



Code 93
redundancy enable



Code 93
redundancy disable

Code 39



Code 39/on



Code 39/off



Code 39 ALL ASCII-on



Code 39 ALL ASCII-off



Guide character - None



Guide character '+'



Send start/stop
CHARS - enable



Send start/stop
CHARS - disable



ID Character 'a'



ID Character 'z'



Code 39
redundancy enable



Code 39
redundancy disable

Code 128



Code 128 /on



Code 128/off



ID Character 'g'



ID Character "z"



Code 128
redundancy enable



Code 128
redundancy disable

CODABAR



CODABAR/on



CODABAR/off



Send start/stop
CHARS - enable



Send start/stop
CHARS - disable



ID Character 'k'



ID Character 'z'



CODABAR
redundancy enable



CODABAR
redundancy disable



Bar width gap
allowed- enable



Bar width gap
allowed - disable

Interleaved/ITF25



Interleaved/ITF25-on



Interleaved/ITF25-off



ID Character 'l'



ID Character 'z'



ITF25 redundancy enable



ITF25 redundancy disable

Industrial 25



Industrial 25/on



Industrial 25/off



ID Character 'k'



ID Character 'z'



Industrial 25
redundancy enable



Industrial 25
redundancy disable

MSI/PLESSEY



MSI-on



MSI-off



ID Character 'f'



ID Character 'z'



MSI redundancy enable



MSI redundancy disable

UPC-A



UPC-A/on



UPC-A/off



Convert UPC-A
into EAN13 enable



Convert UPC-A
into EAN13 disable



Transmit system bit enable



Transmit system bit disable



Transmit check digit enable



Transmit check digit disable



ID Character 'b'



ID Character 'z'

UPC-E



UPC-E/on



UPC-E/off



Convert UPC-E
into UPC-A enable



Convert UPC-E
into UPC-A disable



Transmit system bit enable



Transmit system bit disable



Transmit check digit enable



Transmit check digit disable



ID Character 'C'



ID Character 'z'

EAN-13



EAN-13/on



Convert EAN-13
into ISBN enable



Transmit system bit enable



Transmit check digit enable



ID Character 'e'

EAN-8



EAN-8/on



Transmit system bit enable



Transmit check digit enable



ID Character 'd'



EAN-13/off



Convert EAN-13
into ISBN disable



Transmit system bit disable



Transmit check digit disable



ID Character 'z'



EAN-8/off



Transmit system bit disable



Transmit check digit disable



ID Character 'z'

ISBN



ISBN/on



ID Character 'f'



ISBN/off



ID Character 'z'

UPC/EAN



UPC/EAN
supplements disable



UPC/EAN
supplements- 5 digits



UPC/EAN redundancy enable



UPC/EAN
supplements- 2 digits



UPC/EAN
supplements- 2&5 digits



UPC/EAN redundancy disable

Code 32



CODE 32/on



CODE 32/off

Function Setting

Output Mode



Version Number



Initialization



Keyboard wedge



Serial

Language Setting



American English



German



French



Italian



Russian



Spanish

Reading Mode



Single scan



Single scan no trigger



Multiscan



Multiscan no trigger



Auto continuous scan



Pulse

Edit Setup Barcodes



Show barcode type



Hide barcode type



Lower case



Capital



Reset



Hide the first character



Hide the last character

Suffix Setting



Cancel suffix



Termination CHAR- CR



Termination CHAR- space



Termination CHAR- TAB



Termination CHAR- TAB/CR



Termination CHAR- CR+CR



All codes preamble- STX



All codes postamble- ETX

1. Add prefix

The first step: scan the set-up code below (this step will clear the pre-set prefix)



Add prefix

The second step: scan the needed character codes (maximum add 10 characters)

E.g. To add prefix "MG", scan character M and G orderly.



M



G

Now "MG" will be added when scanning the normal bar codes.



Scan the above testing bar code, "MGTEST" will show.

2. Add suffix

The first step: scan the set-up code below (this step will clear the pre-set suffix)



Add suffix

The second step: scan the needed character codes (maximum add 10 characters)

E.g. To add suffix "OK", scan character O and K orderly.



O



K

Now "OK" will be added when scanning the normal bar codes.



Scan the above testing bar code, "TESTOK" will be shown.

3. Hide the front characters

The first step: scan the set-up code below (this step will clear the previous settings)



Hide the front characters

The second step: scan the number needs to be hidden (maximum hide 10 characters)
E.g. To hide two front characters, scan the set-up code “02”.



Now two front characters will be hidden when scanning the normal bar codes.



Scan the above testing bar code, “3456789” will be shown.

4. Hide the behind characters

The first step: scan the set-up code below (this step will clear the previous settings)



Hide the behind characters

The second step: scan the number needs to be hidden (maximum hide 10 characters)
E.g. To hide three behind characters, scan the set-up code “03”.



Now three behind characters will be hidden when scanning the normal bar codes.












Scan the above testing bar code, “987654” will be shown.

 0C001 add prefix	 \$08 BS/Back Space	 \$14 DC4
 0C002 add suffix	 \$09 HT/TAB	 \$15 NAK
 0C003 hide the front characters	 \$0A LF	 \$16 SYN
 0C004 hide the behind characters	 \$0B VT	 \$17 ETB
 \$00 NUL/SP	 \$0C FF	 \$18 CAN
 \$01 SOH	 \$0D CR/ENTER	 \$19 EM
 \$02 STX	 \$0E SO	 \$1A SUB
 \$03 ETX	 \$0F SI	 \$1B ESC/ESC
 \$04 EOT	 \$10 DLE	 \$1C FS
 \$05 ENQ	 \$11 DC1	 \$1D GS
 \$06 ACK	 \$12 DC2	 \$1E RS
 \$07 BEL	 \$13 DC3	 \$1F US

 \$20 SP	 \$2C ,	 \$38 8
 \$21 !	 \$2D =	 \$39 9
 \$22 "	 \$2E .	 \$3A :
 \$23 #	 \$2F /	 \$3B ;
 \$24 \$	 \$30 0	 \$3C <
 \$25 %	 \$31 1	 \$3D =
 \$26 &	 \$32 2	 \$3E >
 \$27 ,	 \$33 3	 \$3F ?
 \$28 (	 \$34 4	 \$40 @
 \$29)	 \$35 5	 \$41 A
 \$2A *	 \$36 6	 \$42 B
 \$2B +	 \$37 7	 \$43 C

 \$44 D	 \$50 P	 \$5C \
 \$45 E	 \$51 Q	 \$5D]
 \$46 F	 \$52 R	 \$5E ^
 \$47 G	 \$53 S	 \$5F
 \$48 H	 \$54 T	 \$60 ,
 \$49 I	 \$55 U	 \$61 a
 \$4A J	 \$56 V	 \$62 b
 \$4B K	 \$57 W	 \$63 c
 \$4C L	 \$58 X	 \$64 d
 \$4D M	 \$59 Y	 \$65 e
 \$4E N	 \$5A Z	 \$66 f
 \$4F O	 \$5B [	 \$67 g

 \$68 h	 \$74 t	 \$80 F1
 \$69 i	 \$75 u	 \$81 F2
 \$6A j	 \$76 v	 \$82 F3
 \$6B k	 \$77 w	 \$83 F4
 \$6C l	 \$78 x	 \$84 F5
 \$6D m	 \$79 y	 \$85 F6
 \$6E n	 \$7A z	 \$86 F7
 \$6F o	 \$7B {	 \$87 F8
 \$70 p	 \$7C 	 \$88 F9
 \$71 q	 \$7D }	 \$89 F10
 \$72 r	 \$7E ~	 \$8A F11
 \$73 s	 \$7F DEL	 \$8B F12

 \$8C L SHIFT ON	 \$98 /(KP)	 \$A4 6(KP)
 \$8D L SHIFT OFF	 \$99 *(KP)	 \$A5 7(KP)
 \$8E R SHIFT ON	 \$9A _(KP)	 \$A6 8(KP)
 \$8F R SHIFT OFF	 \$9B +(KP)	 \$A7 9(KP)
 \$90 L ALT ON	 \$9C .(KP)	 \$A8 Inert
 \$91 L ALT OFF	 \$9D Enter(KP)	 \$A9 Delete
 \$92 R ALT ON	 \$9E 0(KP)	 \$AA Home
 \$93 R ALT OFF	 \$9F 1(KP)	 \$AB End
 \$94 L CTRL ON	 \$A0 2(KP)	 \$AC Page Up
 \$95 L CTRL OFF	 \$A1 3(KP)	 \$AD Page Down
 \$96 R CTRL ON	 \$A2 4(KP)	 \$AE Up
 \$97 R CTRL OFF	 \$A3 5(KP)	 \$AF Down

