

*CD inside contains  
the latest User Manuals  
and firmware*

# **CWR-264XC EVENT RECORDING SYSTEM**

**USER MANUAL**

*Rail  
Signal  
Products*

**MICRO-AIDE**

*EVENT RECORDERS SPEED MONITORS CURRENT SENSORS  
ISOLATED MODEMS BATTERY MONITORS VOLTAGE MONITORS  
LIGHT OUT DETECTORS CLOCK SYNCHRONIZERS WHISTLE DETECTORS LOCAL CONTROL PANELS*



# MICRO-AIDE



USER MANUAL

## CWR-264XC EVENT RECORDING SYSTEM

Revised: November 17, 2010

MICRO-AIDE CORPORATION

Tel: 626-915-5502 Fax: 626-331-9484  
685 Arrow Grand Circle Covina, CA 91722

E-mail: [sales@micro-aide.com](mailto:sales@micro-aide.com)

Copyright © 2004 by MICRO-AIDE Corporation

All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means without the written permission of MICRO-AIDE Corporation.

The information in this document is subject to change without notice. MICRO-AIDE believes the information contained in this document to be accurate. However, MICRO-AIDE assumes no responsibility for any errors or omissions.

Windows, Windows XP, Excel and Access are registered trademarks of Microsoft Corporation.

HyperTerminal is a registered trademark of Hilgraeve Inc.

Procomm is a registered trademark of Symantec Corporation.

Ethernet is a registered trademark of Xerox Corporation.

# TABLE OF CONTENTS

## CHAPTER 1 GENERAL DESCRIPTION

Introduction . . . . .	1
Key Features . . . . .	4
CWR-264XC versus CWR-264E . . . . .	6
About this Manual . . . . .	6

## CHAPTER 2 INSTALLATION AND SETUP

Introduction . . . . .	7
Unpacking . . . . .	7
Initial Check-out Procedure . . . . .	7
Installation Procedure . . . . .	16
Location . . . . .	16
Mounting . . . . .	16
Site Preparation . . . . .	16
Peripheral Equipment . . . . .	17
Cabling . . . . .	17
Power . . . . .	17
Alarm Relay . . . . .	18
Peripherals . . . . .	18
Ethernet Switch . . . . .	18
Input Circuits . . . . .	18
Jumper Combs . . . . .	19
CWR-CS Current Sensor . . . . .	19
Applying Power . . . . .	19
Setup Procedure . . . . .	19
User Interface Conventions . . . . .	20
Logging On . . . . .	20
Commands and Fields . . . . .	20
Working with Fields . . . . .	21
Completing Commands . . . . .	21
Data Flow Control . . . . .	22
Main Menu . . . . .	22
Setup (S) . . . . .	22
Time/Date (T) . . . . .	23
Reset System (R) . . . . .	23
Reset Setup Data (S) . . . . .	24
Reset Event Memory (E) . . . . .	25
Reset Both (B) . . . . .	26
System Parameters (S) . . . . .	26
Unit Name . . . . .	26
Terminal Port 1 and 2 Baud Rates . . . . .	27
Administrative and Restricted Passwords . . . . .	27
Passcode . . . . .	27

Ring Count . . . . .	27
Primary and Secondary Dial Numbers . . . . .	28
Clock Sync Input . . . . .	28
High and Low Temp Limits . . . . .	29
Time Zone . . . . .	29
Daylight Saving Time . . . . .	29
Detect Times/Flash Enable (D) . . . . .	30
Detection Times . . . . .	30
Flash Enable . . . . .	30
Global Detect Time (G) . . . . .	31
Analog Configuration (A) . . . . .	32
Range . . . . .	33
Filter . . . . .	33
Low and High Limits . . . . .	33
Timer Inputs (W) . . . . .	34
Event Names (E) . . . . .	36
Input Names/Identifiers (I) . . . . .	36
Virtual Inputs (V) . . . . .	37
Assigning Variables . . . . .	38
Selecting States . . . . .	40
Measure Speed (M) . . . . .	41
First/Second Sensor Input . . . . .	42
Distance between Sensors . . . . .	42
Threshold . . . . .	43
Network (N) - Primary Unit . . . . .	43
IP Address . . . . .	43
Subnet Mask . . . . .	44
Gateway . . . . .	44
Ethernet MAC Address . . . . .	44
TCP/IP Port . . . . .	44
TCP/IP Mode . . . . .	44
Primary UDP Port . . . . .	44
Secondary UDP Port . . . . .	44
Secondary IP Addresses . . . . .	44
Print Setup Data (P) . . . . .	46
Transfer Files (T) . . . . .	47
Saving the Setup Database (D) . . . . .	47
HyperTerminal . . . . .	48
Procomm Plus . . . . .	48
Restoring the Setup Database (U) . . . . .	49
HyperTerminal . . . . .	49
Procomm Plus . . . . .	50
Network (N) - Secondary Unit . . . . .	50
IP Address . . . . .	51
Subnet Mask . . . . .	51
Gateway . . . . .	51
Ethernet MAC Address . . . . .	51
UDP Port . . . . .	52
Primary IP . . . . .	52
Primary Port . . . . .	52
Log Off (X) . . . . .	52

**CHAPTER 3 OPERATION**

Introduction . . . . .	55
Multi-User Operation . . . . .	55
Remote Operation . . . . .	55

Establishing a Modem Connection . . . . .	.55
Establishing an Ethernet Connection . . . . .	.56
Entering the Password . . . . .	.56
How to Operate the CWR-264XC . . . . .	.57
Query Events (Q) . . . . .	.57
Start Time . . . . .	.58
End Time . . . . .	.58
Record Details . . . . .	.59
All Details (4) . . . . .	.59
Digital Details (2) . . . . .	.59
Analog Details (2) . . . . .	.59
Virtual Details (2) . . . . .	.59
No Details (1) . . . . .	.59
Reverse Order . . . . .	.59
Report Type . . . . .	.59
Dump . . . . .	.60
Print . . . . .	.60
Browse . . . . .	.60
Comma . . . . .	.60
Inputs . . . . .	.62
View Events (V) . . . . .	.63
Record Details . . . . .	.63
Output To . . . . .	.63
Screen . . . . .	.64
Printer . . . . .	.64
Inputs . . . . .	.64
Live Status (L) . . . . .	.64
Measure Flash Rate (M) . . . . .	.65
Event Record Formats . . . . .	.66
No Details . . . . .	.67
Virtual Details . . . . .	.67
Digital Details . . . . .	.68
Analog Details . . . . .	.68
All Details . . . . .	.69
Symbol Legend . . . . .	.69
X (upper-case) . . . . .	.69
x (lower-case) . . . . .	.69
: (colon) . . . . .	.70
. (period) . . . . .	.70
* (asterisk) . . . . .	.70
! (exclamation mark) . . . . .	.70
= (equals sign) . . . . .	.70
(blank) . . . . .	.70

**CHAPTER 4 DISPLAY AND KEYPAD**

Introduction . . . . .	.71
Front Panel Description . . . . .	.71
Liquid Crystal Display . . . . .	.71
Keypad . . . . .	.71
How to Use the Keypad . . . . .	.72
Idle Mode . . . . .	.72
Event Record Format . . . . .	.73

Printing Records While in Idle Mode . . . . .	74
Start Time . . . . .	74
End Time . . . . .	75
Record Details . . . . .	75
Reverse Order . . . . .	75
Query . . . . .	75
Browse Mode . . . . .	76
Event Records . . . . .	76
Query by Input Number . . . . .	77
Printing a Record While in Browse Mode . . . . .	78
Input Status . . . . .	78
Flash Rate . . . . .	79
Setup Mode . . . . .	80
Alphanumeric Editing Procedure . . . . .	82
Clock . . . . .	82
CSync . . . . .	83
UName . . . . .	83
ENames . . . . .	84
INames . . . . .	84
Analog . . . . .	85
Virtual . . . . .	86
Assigning Variables . . . . .	86
Selecting States . . . . .	87
DTime . . . . .	88
GTime . . . . .	89
Timer . . . . .	89
TLimits . . . . .	90
PCode . . . . .	90
Modem . . . . .	91
Baud . . . . .	91
Speed . . . . .	92
Print . . . . .	92
Diag . . . . .	93
Checksum . . . . .	93
Flash . . . . .	94
Modem . . . . .	94
Relays . . . . .	94
Temp . . . . .	94
RESET . . . . .	95

**CHAPTER 5 MAINTENANCE**

Introduction . . . . .	97
Adjusting the LCD Contrast . . . . .	97
Analog Input Switches (SW1) . . . . .	97
Working Inside a Recording Unit . . . . .	98
Replacing the Internal Modem . . . . .	98
Replacing the Ethernet Port . . . . .	99
Replacing the Fuses . . . . .	99
Reconnecting the Internal Cables . . . . .	101
Diagnostic Testing . . . . .	101
Checksum Test Program Memory (C) . . . . .	101
Flash Memory Test (F) . . . . .	102
Modem Test (M) . . . . .	102

Keypad Test (K) . . . . .	103
Relay Test (R) . . . . .	103
Temperature (T) . . . . .	104
System Events . . . . .	104
Upgrading the Firmware . . . . .	106
HyperTerminal . . . . .	107
Procomm Plus . . . . .	108
Trouble-shooting Guide . . . . .	108
<b>APPENDIX A TECHNICAL DATA</b>	
CWR-264P Specifications . . . . .	113
CWR-264S Specifications . . . . .	115
Terminal Port Cable . . . . .	116
<b>APPENDIX B OPTIONS AND ACCESSORIES</b>	
<b>APPENDIX C CWR-CS CURRENT SENSOR</b>	
Introduction . . . . .	119
Key Features . . . . .	119
Installation and Setup . . . . .	119
<b>APPENDIX D BILLS OF MATERIAL</b>	
CWR-264XC Bill of Material . . . . .	121
CWR-264P Primary Recorder . . . . .	121
CWR-264P Subassemblies . . . . .	122
PA85-0112/00 Processor PCB . . . . .	122
PA85-0066/00 Keypad PCB . . . . .	124
PA85-0106/00 Modem PCB . . . . .	124
PA85-0111/00 Ethernet Port PCB . . . . .	126
CWR-264S Secondary Recorder . . . . .	126
CWR-264S Subassemblies . . . . .	127
PA85-0110/02 Processor PCB . . . . .	127
PA85-0097/01 DC Input PCB . . . . .	129
PA85-0111/00 Ethernet Port PCB . . . . .	130
CWR-CS Bill of Material . . . . .	130
CWR-CS Subassemblies . . . . .	130
PA85-0038/00 Quad Current Sensor PCB . . . . .	130



# GENERAL DESCRIPTION

## Introduction

Since 1988 MICRO-AIDE has provided the rail signal industry with a broad range of Event Recorders that vary significantly in capacity, size and features. The MICRO-AIDE Crossing and Wayside Recorder Model 264XC, hereinafter referred to as the CWR-264XC, provides its user with the largest capacity and most extensive set of features of any system presently available. Its input capacity makes it ideally suited for use in transit applications involving large interlockings.

The key feature of the CWR-264XC that distinguishes it from all other recording systems is its ability to be modularly configured to a capacity of 4096 Digital Inputs. The CWR-264XC utilizes an Ethernet-based Local Area Network (LAN) to interconnect a single primary recording unit and a variable number of secondary recording units. The latter can be any number ranging from one to sixteen. An Ethernet Switch and standard CAT-5 cables complete the LAN. The CWR-264P serves as the Primary Unit. The CWR-264S serves as the Secondary Unit. One port of the Ethernet Switch is used by the Primary Unit and each Secondary Unit. A PC equipped with an Ethernet Port can be used to provide a user interface that is a higher speed alternative to that available via a serial Terminal Port. Figure 1 on page 2 illustrates a typical system configuration involving three Secondary Units and a networked PC.

The Ethernet-based LAN provides a great deal of system flexibility. A combination of fiber optic cables and additional Ethernet Switches can be used to create separation distances of several thousand feet between the Primary and Secondary Units. The IP Address of the Primary and Secondary Units can be assigned by the user to suit the characteristics of a LAN. Additionally, the MAC address of each Ethernet Port, although preassigned at the factory, can be modified as required.

In general, the CWR-264P provides the user interface, time keeping, Event Record processing and storage functions required by the system. The CWR-264S is responsible for all event detection and validation functions involving Digital and Analog Inputs. It serves as a front-end device to the Primary Unit.

Along with 256 optically isolated Digital Inputs each CWR-264S is equipped with eight general purpose Analog Inputs. Unlike other systems, the use of Analog Inputs does not reduce the number of available Digital Inputs. The Analog Inputs can be used to monitor both DC and AC signals such as battery levels, commercial power voltages or relay coil voltages. Analog DC and AC currents can be monitored by using the CWR-CS Current Sensor. MICRO-AIDE's Failed Lamp Detector (FLD-2) can be used in conjunction with the CWR-264S to detect burned-out

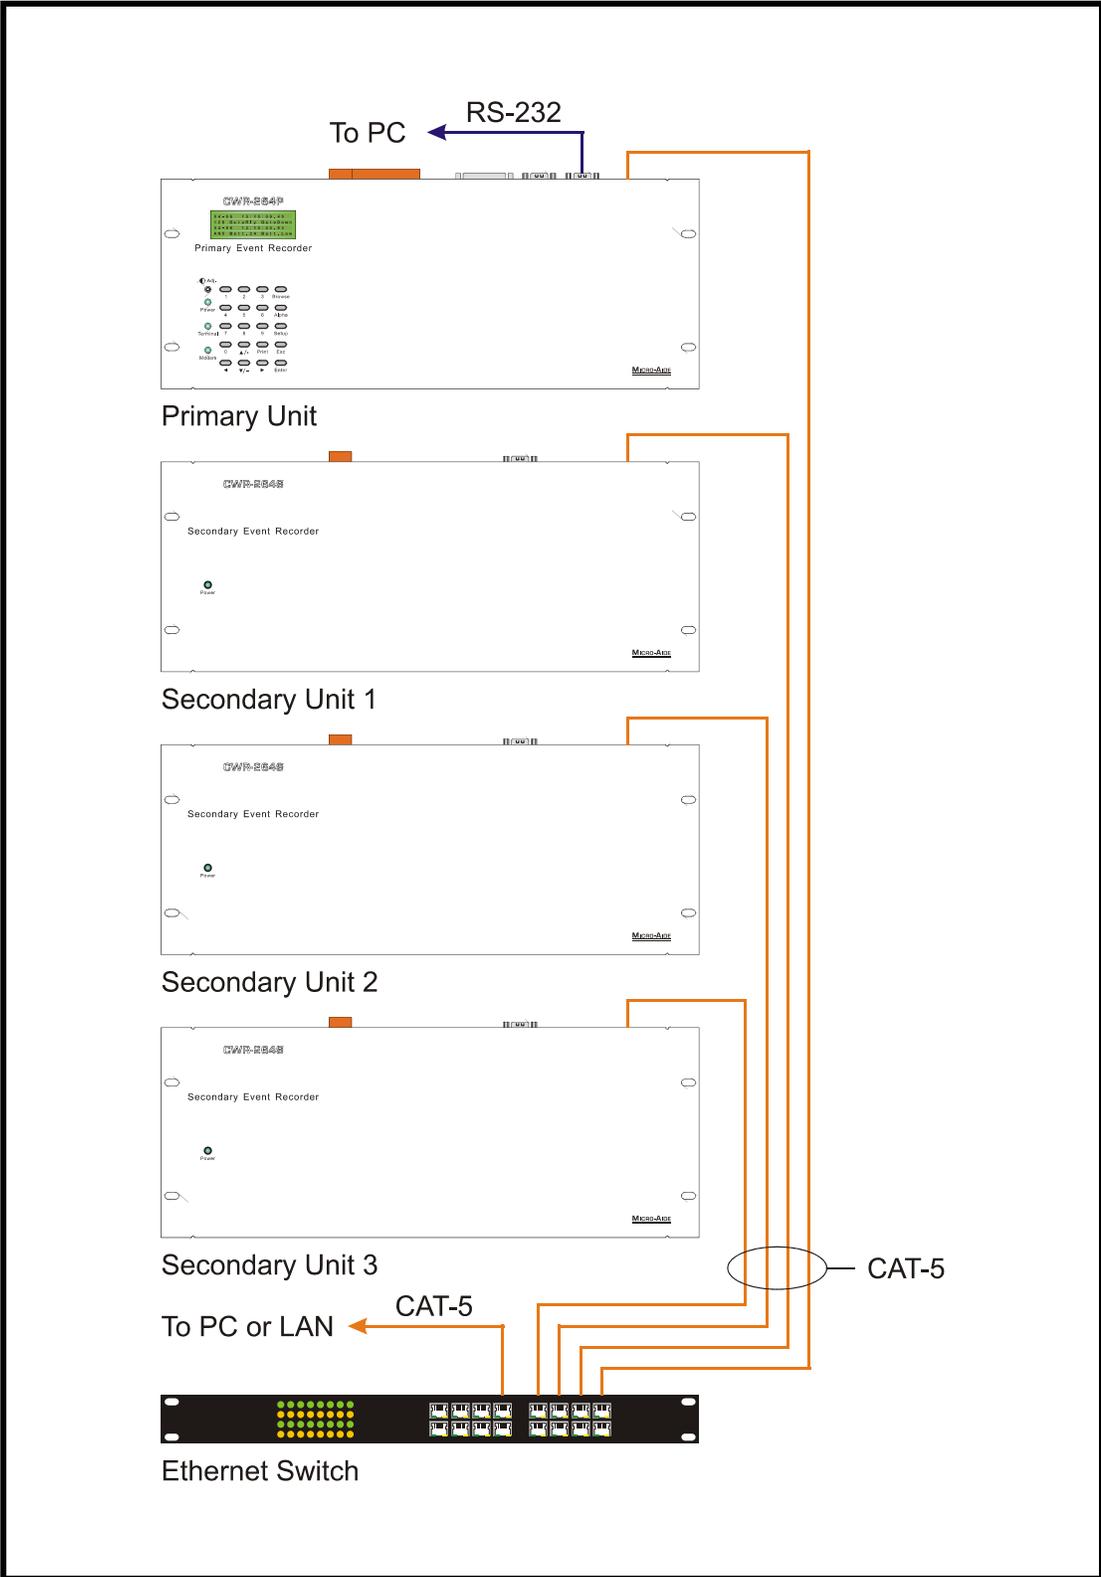


Figure 1 - Typical System Configuration

bulbs in wayside facilities. The internal temperature of the recorder is also measured and reported as an analog value.

Thirty-two Virtual Inputs allow the user to create Event Records based upon a specific logical association of several physical inputs (both analog and digital). The Virtual Input feature can be very useful in analyzing failure conditions or in creating alarm indications. Tedious and confusing site specific profiles are not required when using the Virtual Input feature.

The 999 Timer Inputs of the CWR-264XC can be used to measure and report the elapsed time between any two events. As an example, the duration of a relay operation, the time between two relay events or the occurrence of an Analog Input event and a relay event can be reported. Additionally, separate Low and High Limit Values can be assigned for each timer. An event occurrence that is too fast or slow when compared to the Limit Values is identified in a Timer Input Event Record.

The CWR-264P comes equipped with a built-in keypad and display screen located on the front panel. This allows the user to effectively operate the system without additional peripheral devices. However, the Primary Unit will support applications that require file storage of Event Records. Two RS-232 ports are provided. They can be connected to the communications port of any personal computer. The PC is then used to retrieve, store and review Event Record data of interest to the user. The PC can also be used to set up the system. A parallel printer port is provided. Connecting a standard inkjet or laserjet printer to the port allows hard copy printing of important data while on site.

The CWR-264P is also equipped with a 10/100 Base-T Ethernet Port. It allows a remote user to communicate with the recorder via an Ethernet-based LAN. TCP/IP and Telnet protocols are fully supported by the Ethernet option. The Ethernet Port option also allows the real-time clock used by the CWR-264P to be synchronized in accordance with the Simple Network Time Protocol (SNTP) standard. The real-time clock can also be enabled for automatic Daylight Saving Time (DST) adjustment. The SNTP implementation allows the CWR-264P to operate as a multi-cast time client.

A pre-installed 33,600 Baud internal modem provides the user with an alternative means of remotely accessing the system. A standard phone line connection allows the user to gather critical Event Records from any location, however distant. The modem can also be used to provide dial-out alarm reporting to a maintenance facility.

All MICRO-AIDE rail signal products, including the CWR-264XC Event Recording System, are designed to be easy to use and maintain. Each design is based upon the premise that value and reliability start with attention to detail and a concern for usability rather than needless complexity. Our goal in creating the CWR-264XC was to provide the rail signal industry with an instrument maintainers and signal technicians will find easy to operate long after the system has been installed and set up.

## Key Features

Listed below are just a few of the many features included with every CWR-264XC Event Recording System.

- Modularly expandable to 4096 Digital Inputs in increments of 256.
- The standard storage capacity is 1,816,045 Event Records.
- Event Records can be logged for 128 distinct days.
- Event Records are stored in Flash Memory devices that do not require a battery power source. Records are retained even if power is removed.
- Setup data and Event Record data can be easily and quickly transferred to a PC file.
- Relay signals in the range from 5 to 40 Vdc can be sensed by the Digital Inputs.
- Both positive and negative voltages can be sensed.
- Attaching the system to an event generating circuit is completely non-intrusive to the circuit. This is ensured by the high impedance nature of the design. Each Digital Input utilizes opto-isolation technology to provide ground isolation of at least 3800 Vdc.
- Every Event Record includes a measurement for each of eight Analog Inputs.
- Analog Inputs can range from 51.1V (.1V scale) to 255V (1V scale), DC or AC.
- Analog Inputs are tested against separate Low and High Limit Values that are assigned by the user. Crossing either Limit Value will create an Event Record.
- Current levels as great as 25.5 Adc or Aac can be monitored by using the optional CWR-CS.
- Excessive train speed can be reported by use of the Train Speed Monitor feature. Speed violations are reported in the form of Event Records that are saved to memory.
- Sixteen separately programmable Train Speed Monitors can be employed.
- The FLD-2 Failed Lamp Detector can be used at crossings to detect burned-out bulbs.
- Event Detection Times can be set by the user on an input-by-input basis. Default values are provided as an aid to the user.
- Event Detection Times can be set to a hundredth of a second (.01 seconds) to capture fast, electronically generated control signals.
- Events satisfying the Detection Time criteria are date and time stamped to the nearest hundredth of a second.
- The real-time clock used by the recorder can be synchronized to an external signal connected to a spare Digital Input. Alternatively, the real-time clock can be synchronized to a LAN-based SNTP time server.

- The real-time clock can be enabled for automatic DST adjustment.
- The time zone setting of the recorder can be set to any of seven zones used in North America.
- The real-time clock of each Secondary Unit is automatically synchronized to the Primary Unit clock every 10 seconds.
- Flashing signal events are detected.
- The flashing rate of a circuit can be precisely measured and reported.
- 999 Timer Inputs can be programmed to measure and report the elapsed time between any two events.
- Each Timer Input can be assigned separate Low and High Limit Values.
- Time measurements that satisfy or violate the Limit Values are reported as either nominal or violation records, respectively. In either case, the measured time is always listed in the Event Record for the Timer Input.
- A Timer Input can be used to trigger a second Timer Input.
- 32 Virtual Inputs can be programmed to create Event Records that identify alarm or fault conditions of special interest to the user.
- Installation is quite simple. Input wires are terminated in detachable, screw-down terminals. Wire sizes as large as 12AWG can be used.
- Power consumption is typically less than 6W for the Primary Unit and 6W per Secondary Unit. A 10 to 36Vdc power source can be used to power the system. The Ethernet Switch requires nominal 110Vac at 60Hz.
- The internal temperature of the Primary Unit is measured, reported and tested against Low and High Limit Values. The internal temperature of each Secondary Unit is tested against the same Limit Values.
- The user interface provides full cursor control when using a PC.
- Three distinct levels of password security provide protection against unauthorized access to the Primary Unit. Only restricted access is allowed to the Secondary Units.
- Several diagnostic commands can be executed to verify important system operations.
- Remote access to the system is supported by use of the 33,600 Baud internal modem and/or 10/100Mbps Ethernet Port.
- Firmware updates can be downloaded to the Primary and Secondary Units when a PC is connected to the Terminal Port of the unit.
- MICRO-AIDE's GEA (Graphical Event Analyzer) software is fully compatible with the CWR-264XC. GEA can be used to poll, save, review, plot and analyze Event Record data.

## CWR-264XC versus CWR-264E

The CWR-264XC is a companion product to MICRO-AIDE's highly regarded CWR-264E Event Recorder. The CWR-264XC was intentionally designed to "look and feel" like a larger capacity version of the CWR-264E. Consequently, the hardware and firmware designs of each recorder share a great deal in common. The CWR-264S is, in fact, a CWR-264E with limited memory and without an LCD panel, a keypad, or any output relays. CWR-264S firmware is different as well.

The CWR-264XC has application anywhere the required capacity exceeds 256 Digital Inputs. Its selection is always preferable to system solutions involving multiple recorders, user interfaces and real-time clocks for time stamping Event Records.

## About this Manual

This document is intended to provide the user with comprehensive, easy-to-read instructions on how to install, set up, operate and maintain the MICRO-AIDE CWR-264XC Event Recording System. This document refers to Version 1.07 of the CWR-264P firmware. Specifically, the sample data and command details depicted were prepared using a Version 1.07 Primary Unit. Wherever possible, step-by-step instructions have been included. In the event the user has questions about any of the described procedures the user should contact MICRO-AIDE for assistance. Additional copies of this manual are available upon request.

### MICRO-AIDE CORPORATION

685 Arrow Grand Circle

Covina, CA 91722

Tel: 626-915-5502 Fax: 626-331-9484

E-mail: [support@micro-aide.com](mailto:support@micro-aide.com)

**Note** The MICRO-AIDE Material Return and Limited Warranty policies can be found on the inside back cover of this manual.

# INSTALLATION AND SETUP

## Introduction

This chapter describes how to properly unpack, install and set up the CWR-264XC prior to operation. It is advisable to review the Unpacking, Initial Check-out and Installation sections before actually performing the procedures described in this chapter.

## Unpacking

Each CWR-264XC is packed in several shipping cartons. The cartons are properly sized for the various units that comprise the recording system. Abundant packing materials are provided to minimize mechanical shock to the contents. Before opening a carton inspect it for damage. Damage to any carton should be noted. Carefully remove the unit. It is advisable to save all packing materials in the event a unit ever needs to be returned to MICRO-AIDE.

Inspect each recording system component for visual damage. They should not be scratched, dented or deformed in any way. If it appears a unit was damaged in shipment the responsible carrier should be notified immediately. MICRO-AIDE will assist the user in filing a claim in the event damage was sustained during shipment.

## Initial Check-out Procedure

Before the CWR-264XC is installed at a signal facility it is recommended that an operational check of the system be performed. The following materials are required as a part of this procedure. The other materials that are required (e.g., CAT-5 and RS-232 cables) are provided by MICRO-AIDE as a part of every shipment.

- 12Vdc power source.
- Common hook-up wire for power and testing inputs (12 to 22AWG).
- Wire strippers and small, flat-head screwdriver.
- PC equipped with a communications program (e.g., HyperTerminal® or Procomm Plus®) set to operate at 38,400 Baud.
- Digital Voltmeter (DVM).

Perform each step in the sequence listed below. If a problem arises, refer to the section entitled “Trouble-shooting Guide” on page 108. Figure 2 on page 9 through Figure 7 on page 14 illustrate useful information for every CWR-264XC installation.

**Tip** This procedure requires that a Primary Unit, Secondary Unit and Ethernet Switch be interconnected. It may be more convenient to temporarily mount each unit in a 19" equipment rack.

1. With the power off, connect the power source positive and negative conductors to either pair of screw terminals labeled “B” and “N”, respectively. They are located along the top-left edge of each unit. Power must be connected to the Primary Unit and one of the Secondary Units.
2. Using two of the CAT-5 cables provided, connect the Primary and Secondary Units to two ports of the Ethernet Switch.
3. Connect 120Vac power to the Ethernet Switch.
4. Connect the PC to the DE-9 male connector labeled “Terminal 1” or “Terminal 2” of the Primary Unit. Use the cable provided by MICRO-AIDE. Figure 13 on page 116 illustrates the proper wiring of the cable.

**Note** The factory default setting for both Terminal Ports is 38,400 Baud. Refer to the procedure entitled “Terminal Port 1 and 2 Baud Rates” on page 27 for details on changing the Baud rate.

**Note** The CWR-264P requires no parity, 8 data bits and 1 stop bit (i.e., N-8-1).

5. Set the PC to emulate an ANSI terminal by doing one of the following:
  - If HyperTerminal is being used click on the File, Properties command. Select the Settings tab. Enable Terminal keys. Select ANSI from the Emulation drop-down list box.
  - If Procomm Plus is being used the ANSI BBS setting should appear in the lower left-hand corner of the Procomm Plus window. If the correct setting does not appear click on the current setting, then select ANSI BBS from the pop-up menu.
6. Apply power to the PC. Ensure that the communications program is set for a direct connection to the appropriate communications port.
7. Apply power to the CWR-264XC. The green power indicator located on each front panel should illuminate. After a few seconds the date and time should appear on the Liquid Crystal Display (LCD) of the CWR-264P. The date and time may need to be changed but this can be performed later. The procedure for changing the date and time is described in the section entitled “Time/Date (T)” on page 23.
8. Shortly after power is applied the PC will display the following message.

```
Micro-Aide CWR-264XC Flash Boot Loader  
Press ESC for boot loader
```

**Caution** The preceding message should be ignored. Do not press the **ESC** key. The user must wait several seconds for the CWR-264P program to load into executable memory.

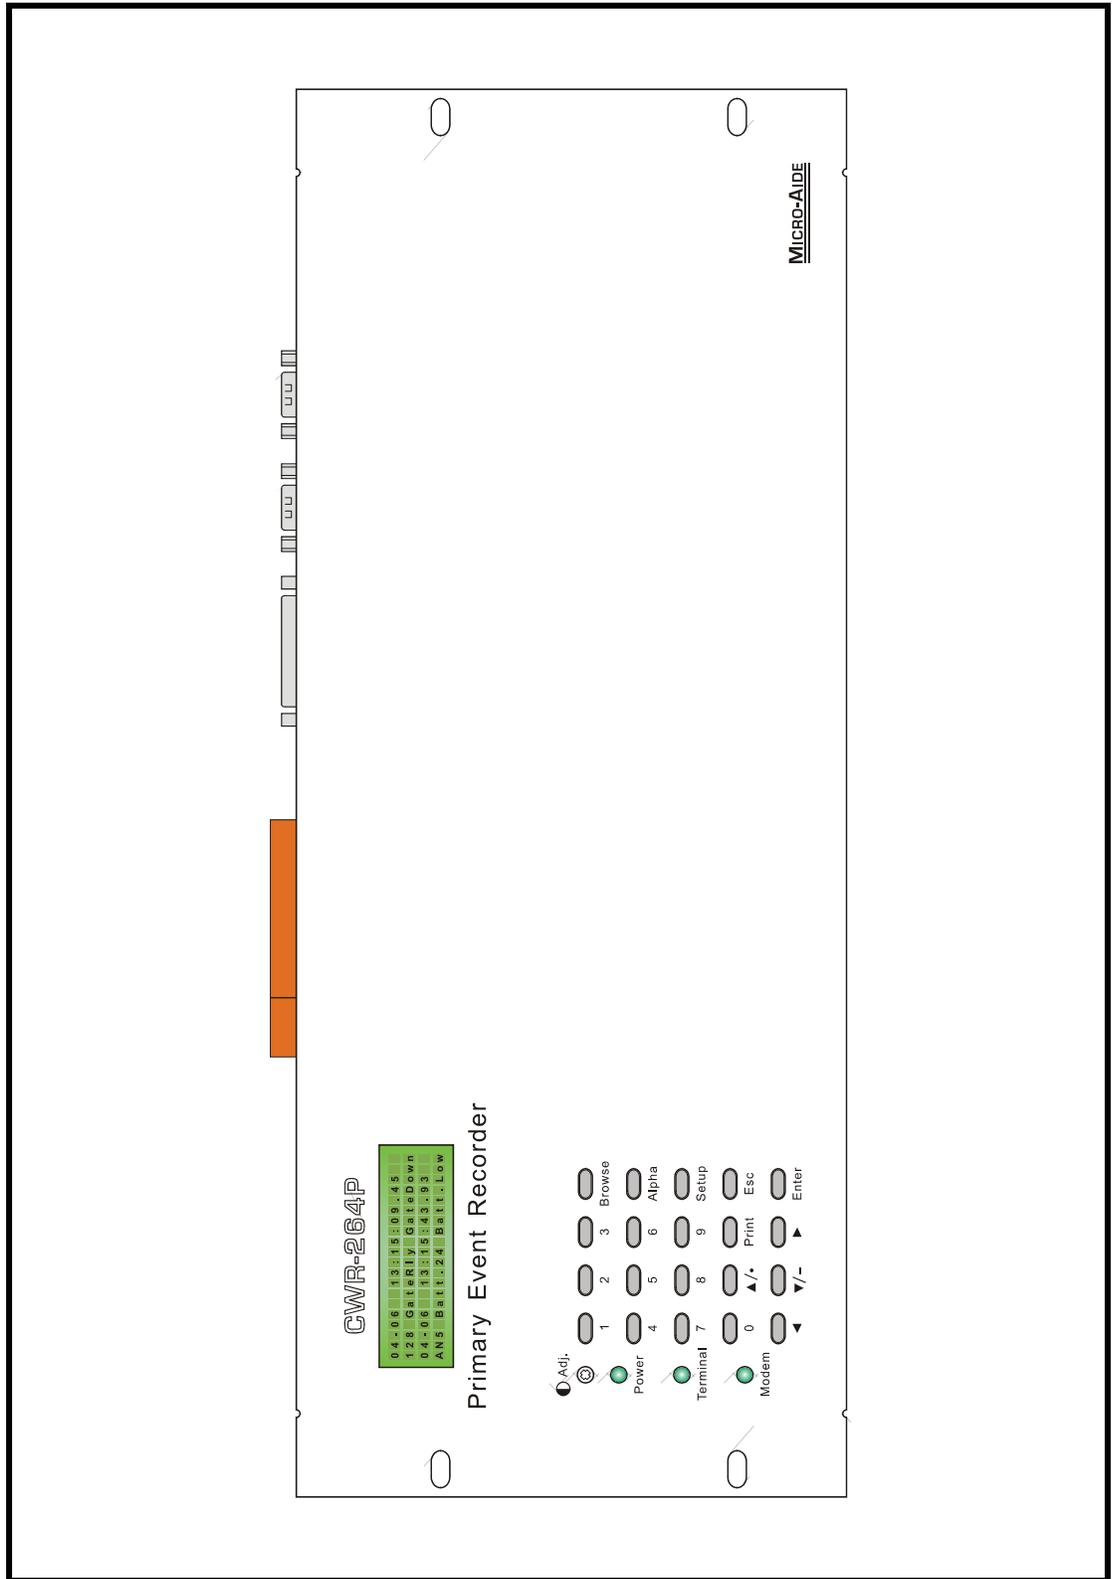


Figure 2 - CWR-264P Front Panel View

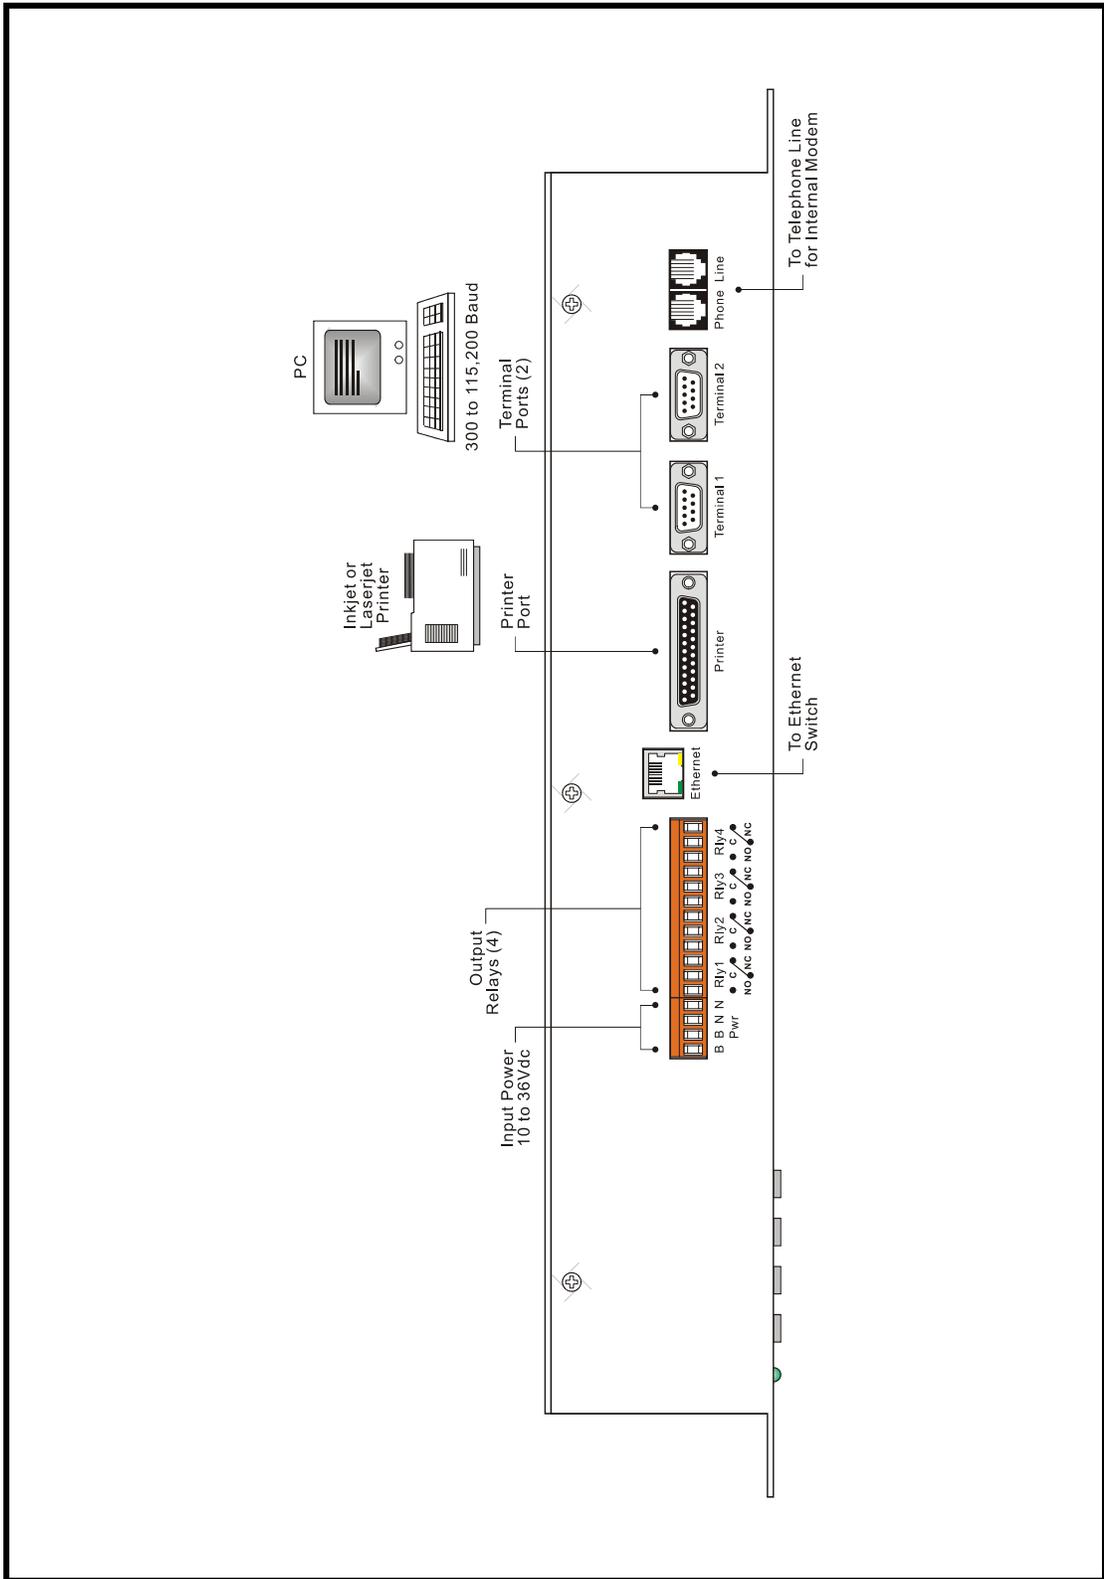


Figure 3 - Typical Installation - CWR-264P Top Panel View

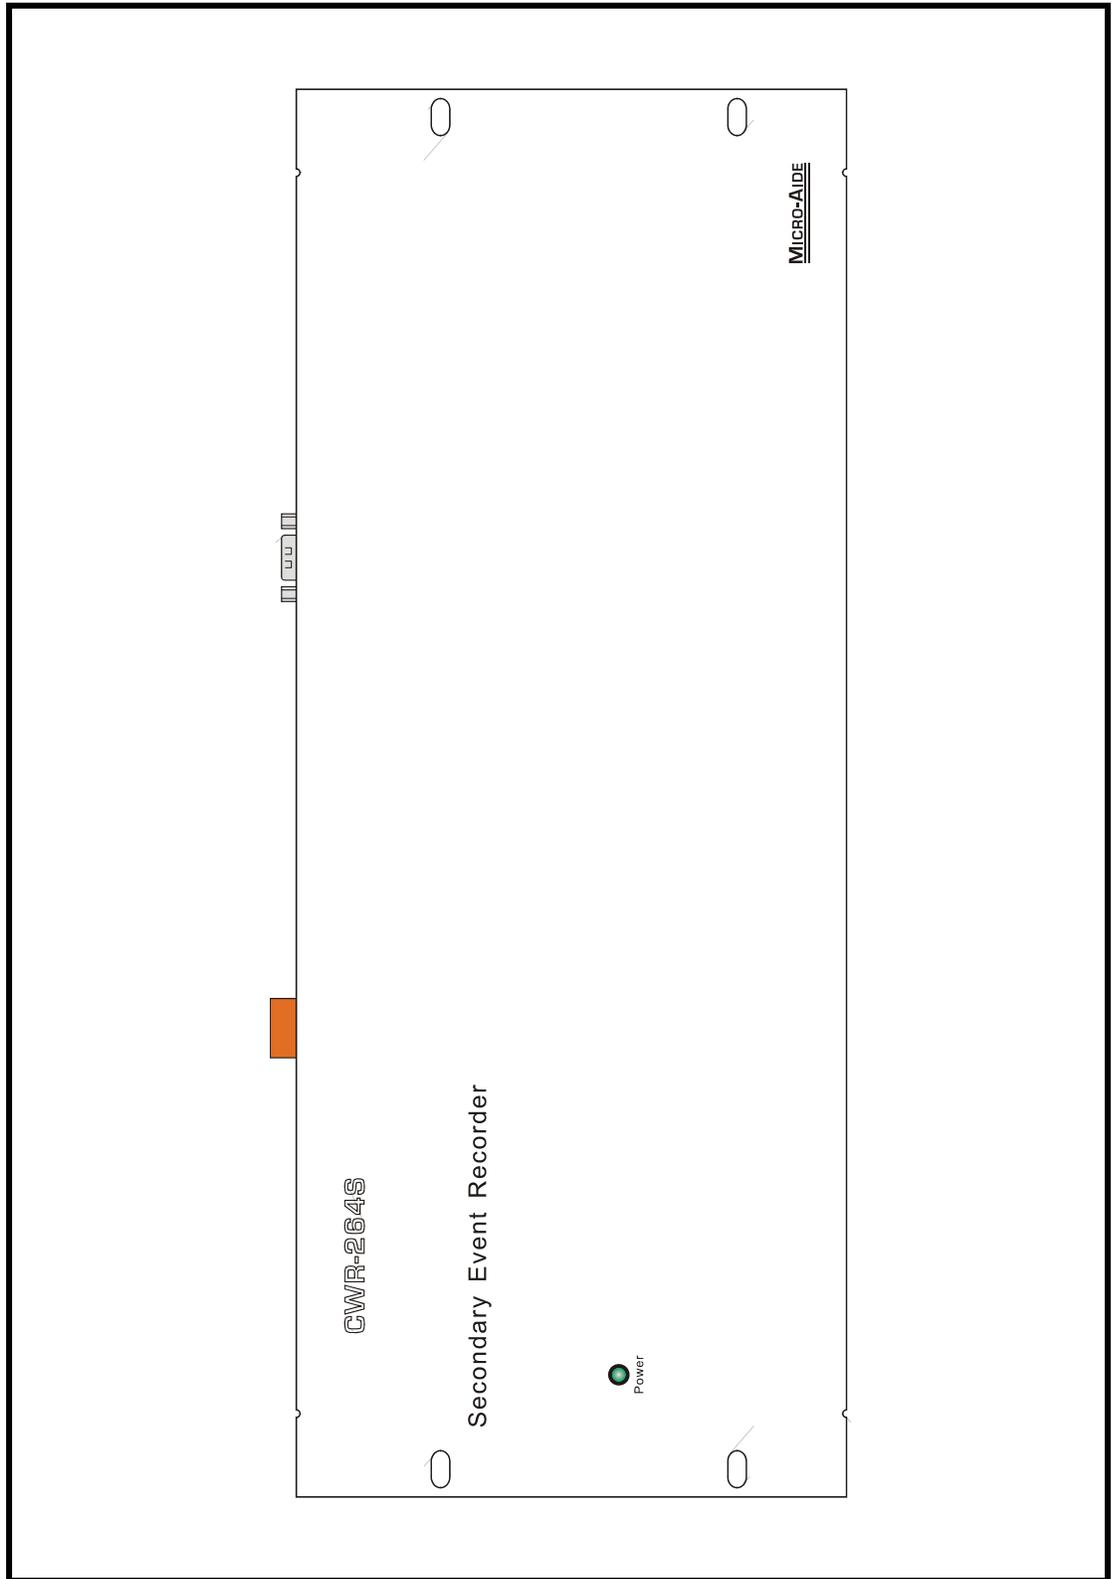


Figure 4 - CWR-264S Front Panel View

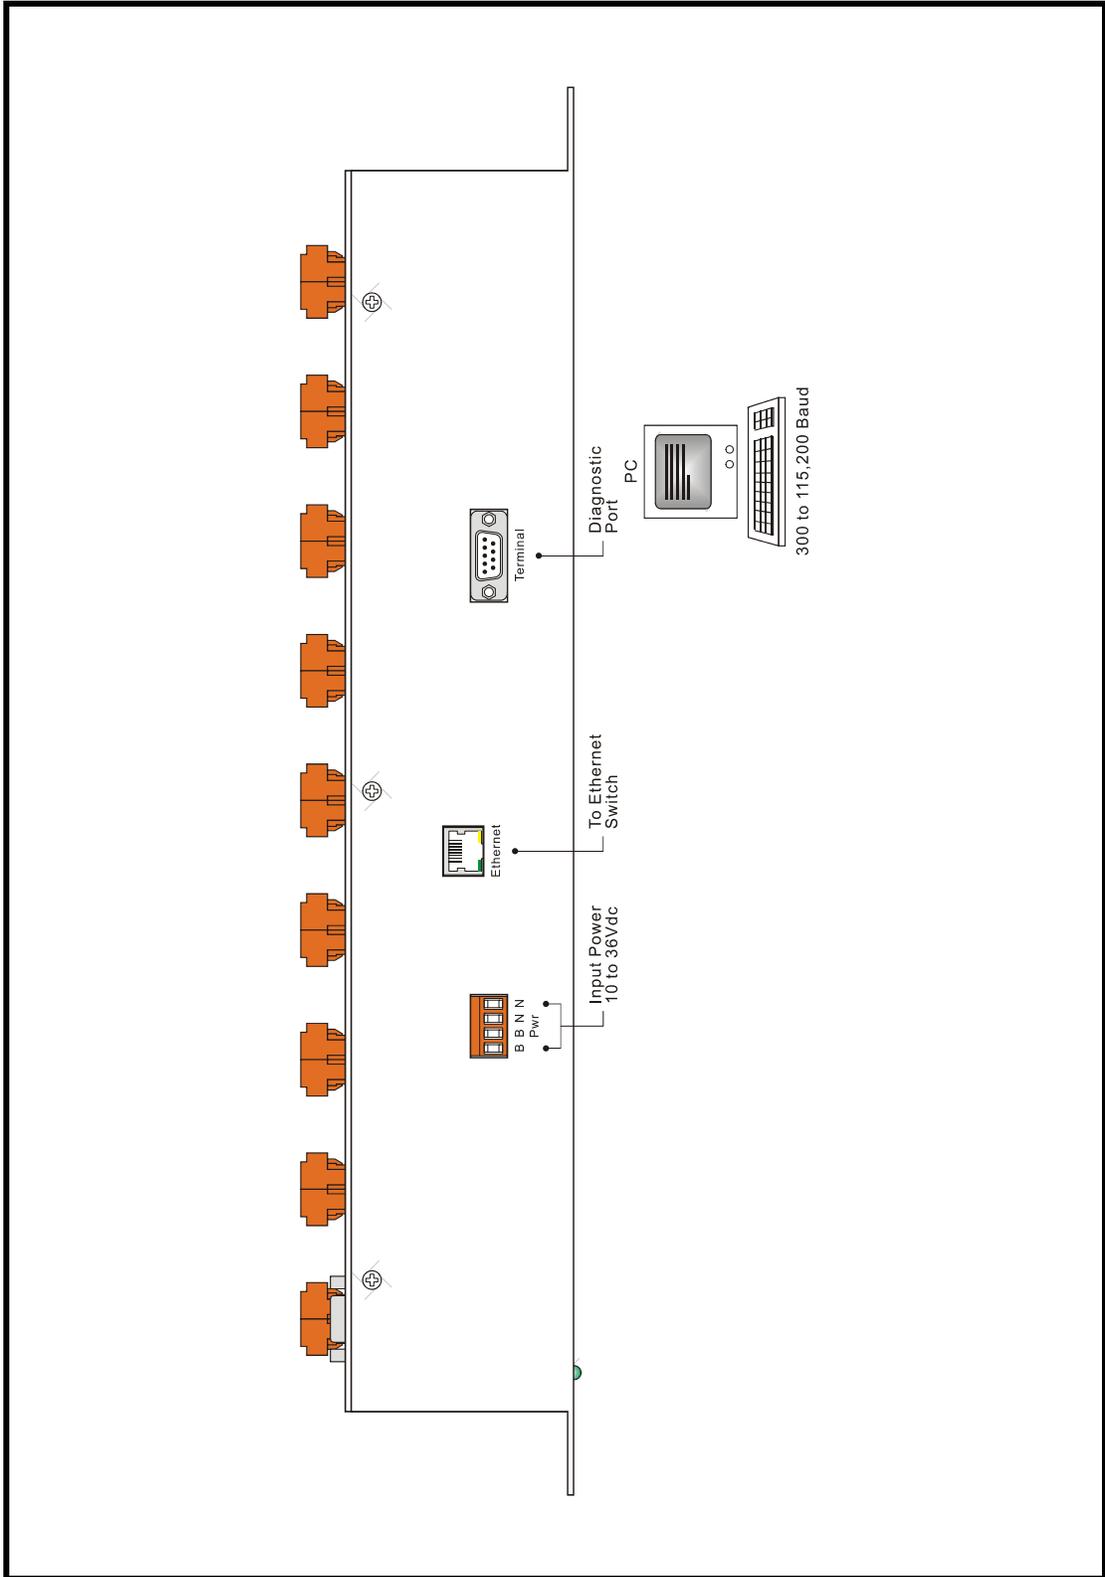


Figure 5 - Typical Installation - CWR-264S Top Panel View

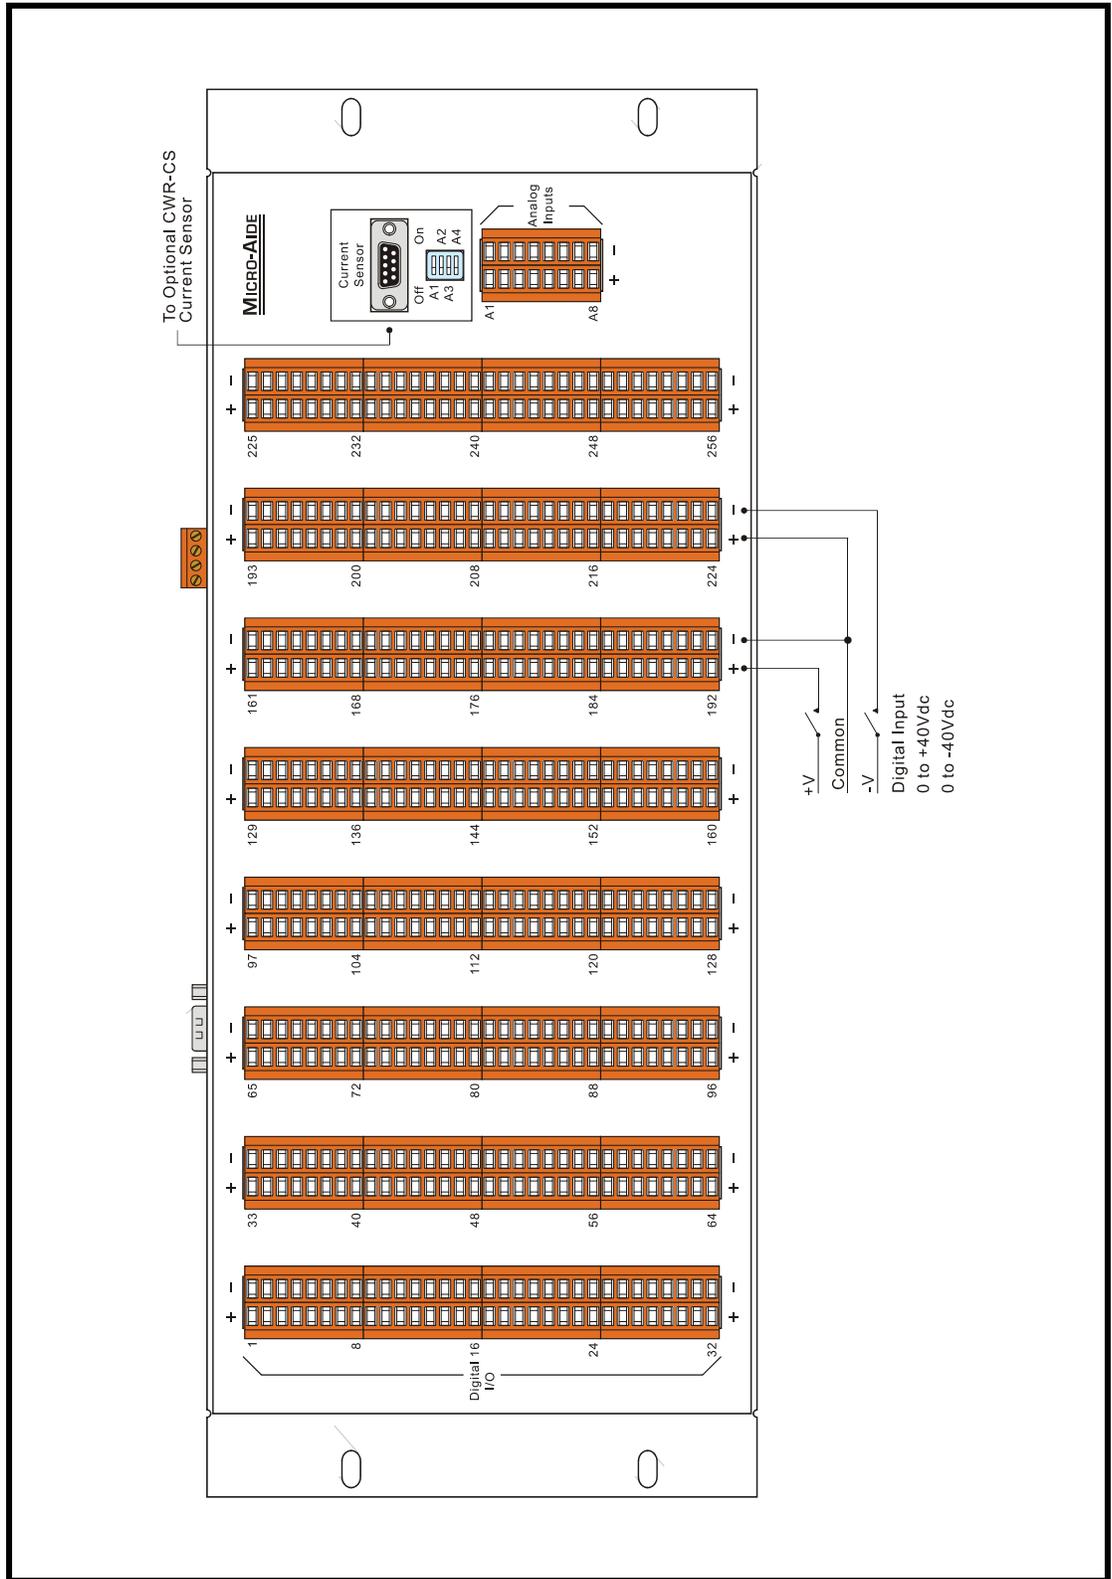


Figure 6 - Typical Installation - CWR-264S Rear Panel View

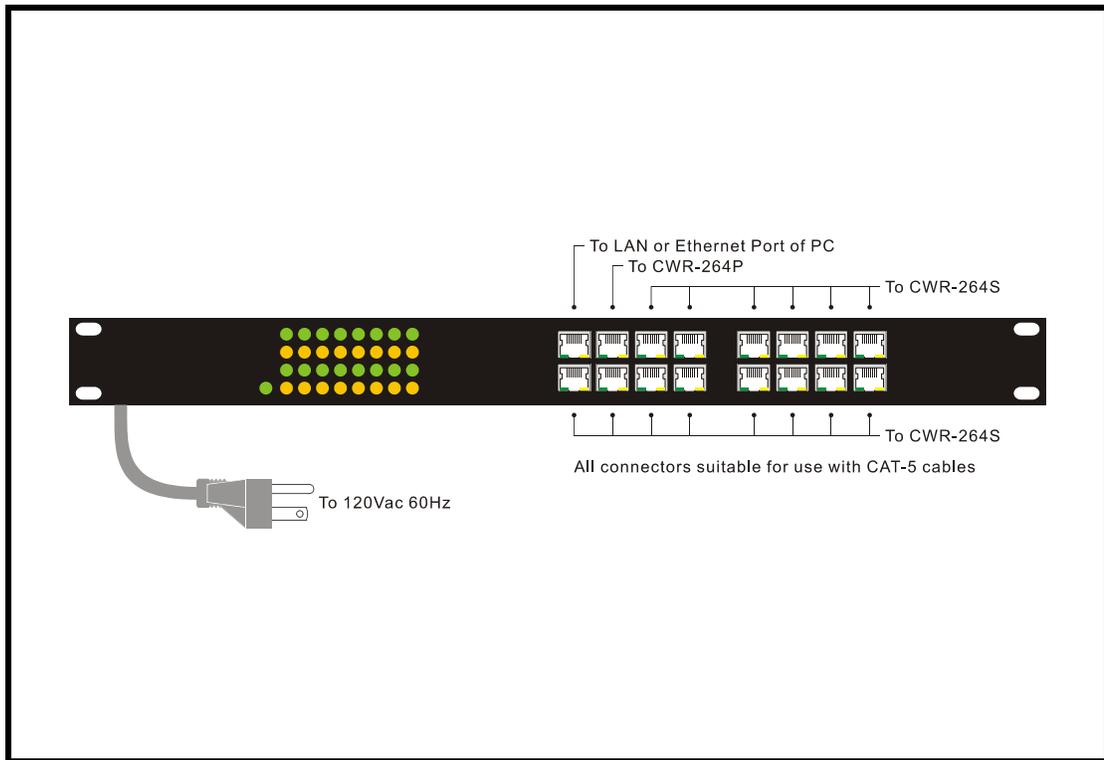


Figure 7 - Typical Installation - 51-0001 Ethernet Switch

9. After the program is loaded the following password challenge will be displayed. This will confirm that the user can dialog with the Primary Unit.

```
Model CWR-264P Event Recorder. Ver 1.07 (C) 2004 MICRO-AIDE Inc.  
***** NOT SET *****  
Event storage capacity: 1816045  
Enter password:
```

*Password Request*

10. If the Primary Unit fails to display the password request, check the power and peripheral connections and Baud rate and communications settings. If the problem can be isolated to the CWR-264P contact MICRO-AIDE customer service for instructions on how to proceed.

**Note** Repair and return policies are described on the inside back cover of this manual.

11. The remainder of the Initial Check-out Procedure presumes the recording system is configured to operate with the factory default settings and Event Records have not been logged into memory. If this is not the case the user may wish to reset the system. Refer to the section entitled "Reset System (R)" on page 23 for details.

- From the PC's keyboard type **PASSWORD** in upper-case letters. This is the default password. Complete the entry by pressing the **Enter** key. The Main Menu, shown below, will be displayed.

```

MICRO-AIDE CWR-264P Event Recorder

S Setup
L Live Status
Q Query Events
V View Events
M Measure Flash Rate
T Transfer Files
D Diagnostics
X Log Off

```

*Main Menu*

- Using a short pair of stripped jumper wires place +12Vdc and negative to Digital Input number 1 of the CWR-264S. Refer to the silkscreened labels located near the input terminals. Positive voltage should be placed on the terminal to the left and negative voltage on the right. The voltage must be held for at least three seconds before proceeding.
- Use the same procedure described in the previous paragraph to test additional Digital Inputs.
- Perform a Query of the Event Records by pressing **Q** at the PC keyboard. Select today's date and then press **Enter**. Finally, press the **F1** function key. Refer to the section entitled "Query Events (Q)" on page 57 for additional details.
- Verify that an Event Record is reported for each Digital Input tested. Note any inputs not displayed and test the inputs again, being careful to hold the voltage for at least three seconds. A second Query should verify the retested inputs.
- Press the **Esc** key once to return to the Main Menu. Press the **L** key. The Primary Unit will now display the real-time status of the Secondary Unit Digital and Analog Inputs.
- Connect the 12Vdc positive and negative test leads to the two inputs of Analog Input A1.
- Verify the Analog Input reading for A1 is within .15Vdc of the correct reading. The correct polarity of the applied voltage should also be indicated.
- Repeat the previous two steps for the remaining seven Analog Inputs. This completes the test of the Secondary Unit.
- Turn power off to the Primary and Secondary Units. Swap the tested CWR-264S with another Secondary Unit.
- Repeat steps 7 through 21 for each additional Secondary Unit.
- Before completing the Initial Check-out Procedure verify the LCD is providing acceptable contrast. If it needs to be improved adjust the potentiometer accessible via the small hole in the front panel labeled "Adj". Refer to the section entitled "Adjusting the LCD Contrast" on page 97.

This concludes the Initial Check-out Procedure. This procedure may be used at any time to verify that the CWR-264XC is operating properly. Power can now be removed from the system. Connections to the PC should also be removed.

**Note** In the event that a failure occurs during any part of this procedure a series of diagnostic tests should be performed. Refer to the section entitled “Diagnostic Testing” on page 101. Alternatively, the user may wish to contact MICRO-AIDE customer service. Instructions on how to proceed will be offered. Material Return and Limited Warranty policies are described on the inside back cover of this manual.

## Installation Procedure

The following sections describe the recommended Installation Procedure. Figure 3 and Figure 5 through Figure 7 illustrate elements that are common to most installations. The illustrations also depict the location of each connector used in the installation.

### Location

The physical location where the CWR-264XC is to be installed should comply with a few simple requirements. The ambient temperature near the system should be in the range from -40°C to 72°C.

### Mounting

Each unit of the CWR-264XC is designed to be mounted in a standard 19" equipment rack. The front panel sheetmetal includes mounting holes that comply with the standard 1-3/4" hole pattern. Approximately 10" of vertical rack space are required for the CWR-264P and each CWR-264S unit. This allows adequate room to clear the cable connectors located along the top face. If a PC is to be used it must be properly secured.

**Note** Contact MICRO-AIDE in the event 23" rack mounting brackets are required. Refer to Appendix B for ordering details.

### Site Preparation

The equipment location must have access to a stable 10 to 36Vdc power source. A pair of wires must be run from the power source to the location where the recording system will be mounted. The Primary and Secondary Unit wire ends must be stripped approximately 1/4". The stripped ends will be secured by screw-down terminals located along the top-left edge of each unit. One wire must be connected to the positive voltage of the power source and the other wire must be attached to the return of the power source. The screw-down terminals will accept wire sizes as large as 12AWG. The two wires must be properly secured to prevent damage. It is preferable not to run the wires adjacent to electrical equipment such as motors that may generate large electrical disturbances.

The Digital and Analog Inputs use the same screw-down terminals as those required by the power leads. Each wire should be tagged with its circuit identity. Each input cable or wire bundle should be secured to prevent damage to the connections at either end.

The CWR-264P can be programmed to issue an alarm indication signal. Four form C relays with normally closed and normally open sets of contacts are available at the connector where power is attached to the unit. Each set of contacts is rated for 2A<sub>dc</sub> at 24V<sub>dc</sub> and 1A<sub>ac</sub> at 125V<sub>ac</sub>. The relays can be used to control an external light or warning device.

## Peripheral Equipment

If a PC or printer is to be co-located with the CWR-264P an appropriate AC power source must be available. The Ethernet Switch also requires an AC power source. The Terminal Port and printer cables should be kept to a minimum distance, preferably less than 20'. MICRO-AIDE provides, as a standard feature, an RS-232 DE-9 to DE-9 cable. This cable is suitable for use with most PCs. In the event a DE-9 to DB-25 cable is needed either contact MICRO-AIDE or purchase a DE-9 to DB-25 converter at any computer supply store. The cable from the printer to the Printer Port is supplied with the printer.

**Caution** Each system is shipped with a MICRO-AIDE recommended RS-232 cable. The recommended cable ensures that the connector bodies are not electrically attached. **The shield wire is not attached.** The cable is constructed in such a way that the unit chassis and peripheral device are electrically isolated. This further improves the isolation properties of the system.

The CWR-264P can be remotely accessed via an Ethernet-based LAN. A standard CAT-5 cable is used to connect the Ethernet Switch of the recording system to the LAN via a hub or switcher. The length of this cable should be limited to 50'.

The CWR-264P is equipped with an internal modem. To use the modem a standard telephone line must be attached to the Primary Unit. The telephone line must be terminated with an RJ-11 connector like those commonly used in residential telephone service. Test the telephone line first to ensure that a dial tone is available.

## Cabling

Follow the steps listed below to complete the cabling installation.

### Power

1. Ensure that the power is off at the power source.
2. Two wires from the power source must be secured to either pair of screw-down terminals labeled "B" and "N", respectively. This applies to the CWR-264P and each CWR-264S.
3. Connect AC power to the Ethernet Switch, PC and printer (as required).

**Tip** The power, input and alarm relay wires all terminate in screw-down connectors that are detachable. The cable installation can be performed more easily if the female connectors are first detached from their male halves that remain secured to the various circuit boards of the Primary and Secondary Units.

## Alarm Relay

1. Wire the alarm indicating device or circuit to the appropriate relay terminals labeled “C”, “NO” or “NC” (i.e., common, normally open, normally closed, respectively).

## Peripherals

1. If an Ethernet-based LAN is used, connect one end of a CAT-5 cable to any available port of the Ethernet Switch. Connect the other end to an appropriate hub or switcher. The Ethernet Port of a co-located PC can be directly connected to a spare port of the Ethernet Switch via a CAT-5 cable. As an alternative, the communications port of a co-located PC can be directly connected to either of the DE-9 male connectors labeled “Terminal 1” or “Terminal 2” of the CWR-264P. Use the RS-232 cable provided by MICRO-AIDE for this purpose.
2. Attach the printer cable to the DB-25 female connector of the CWR-264P labeled “Printer”.
3. If the internal modem is to be used, connect the telephone line to the RJ-11 connector of the CWR-264P labeled “Line”.

## Ethernet Switch

1. Using one of the CAT-5 cables provided, connect the Ethernet Port of the Primary Unit to a spare port of the Ethernet Switch.
2. Connect the Ethernet Port of each Secondary Unit to a spare port of the Ethernet Switch.

## Input Circuits

Events will only be recorded if the input circuits are wired properly to the Secondary Units. The correct polarity of Digital and Analog Inputs must be identified.

Digital Input circuits are typically wired to eight-position, detachable connectors located at the rear of the Secondary Unit. Individual pairs are wired horizontally to adjacent terminals. The positive lead of the digital circuit to be monitored must be connected to the left side terminal labeled “+”. The common, or return, lead of the digital circuit must be connected to the right side terminal labeled “-”.

Positive and negative voltages can be monitored by a Digital Input, even if they occur from the same circuit. In such cases the circuit is wired to two inputs of the Secondary Unit, one for each polarity. Figure 6 on page 13 illustrates how to connect negative voltage circuits.

Analog Inputs are connected identical to Digital Inputs. The eight Analog Inputs terminate in separate connectors also located at the rear of the Secondary Unit. They are labeled as inputs “A1” through “A8”.

**Note** Event Records will indicate positive and negative polarities for each Analog Input.

The user may wish to verify the proper operation of each input. The “Initial Check-out Procedure” on page 7 should be used to identify any faulty input wiring.

### Jumper Combs

As an aid to the installer each CWR-264S is provided with several Jumper Combs (Weidmuller part number 147250). Each Jumper Comb allows ten adjacent screw-down terminals to be connected together. Unwanted points may be removed by cutting them or bending them away from the detachable connector.

### CWR-CS Current Sensor

The optional CWR-CS Current Sensor is an accessory that can be used to monitor DC and AC current flow through various lamp and control circuits. It is designed to provide a completely passive, non-intrusive method of measuring current. As many as four circuits are monitored by the CWR-CS.

The CWR-CS utilizes Analog Inputs A1 through A4 of the Secondary Unit. Among these inputs, any combination of voltage and current inputs not exceeding four total is permitted. If an Analog Input is to be used to monitor a current signal the voltage source to that input must be disconnected. The disconnection is required to prevent a conflict between the voltage input and current signal from the CWR-CS. The proper procedure for assigning an Analog Input to the CWR-CS involves changing one to four switch settings. Refer to the section entitled “Analog Input Switches (SW1)” on page 97 for additional details.

**Caution** Never attach the CWR-CS to the CWR-264S without first disconnecting the Analog Inputs. This will prevent placing an interfering signal on the analog circuit that is attached to the CWR-264S.

## Applying Power

Once the cabling is installed the power can be applied. Shortly after power is applied the PC will display the password request. Refer to the sample data labeled “Password Request” on page 14. After the initialization sequence is completed the front panel LCD will indicate the time and date.

This completes the CWR-264XC Installation Procedure. The Setup Procedure can now be started.

## Setup Procedure

Before the CWR-264XC is ready for use the recording system must be configured to reflect the operation required by the user. The following steps should be performed in the sequence listed. It

is assumed that the user is accessing the CWR-264P via a PC. Succeeding chapters describe how to use the front panel display and keypad, as well as access the recording system via the internal modem. It is further assumed that the user has not previously altered any of the factory default settings and that the PC is connected to one of the Terminal Ports of the CWR-264P.

**Note** Both Terminal Port default settings are 38,400 Baud, no parity, 8 data bits, 1 stop bit (i.e., N-8-1).

The Setup Procedure involves several steps that permit the user to program a variety of parameters that will best suit the user's recording requirements. Each step involves the selection and execution of a particular command. Before the actual programming is performed the user should be aware of several conventions employed by the CWR-264P user interface.

**Note** Unless stated otherwise, for the remainder of this chapter it is assumed that the user is connected to the CWR-264P.

## User Interface Conventions

### Logging On

User sessions are initiated only after the log on procedure is completed. To log on the user must enter the correct password in response to the password challenge. A typical password challenge message is shown in the sample data labeled "Password Request" on page 14.

**Note** The factory default password is **PASSWORD** in upper-case letters.

Complete the password entry by pressing the **Enter** key. The Main Menu will be displayed after the correct password has been entered. The user is allowed three password attempts.

### Commands and Fields

The CWR-264P user interface allows commands and parameter fields to be easily and quickly selected. Commands are listed vertically in a menu. Some commands direct the user to sub-menus containing additional commands (e.g., Setup command). Fields allow the user to either select or enter parameter values. A specific field is always uniquely associated with a particular command.

To select a command from a menu or a field within a command simply move the rectangular highlight to the location of the desired command or field. Pressing the appropriate arrow keys located on the PC keyboard will move the highlight. The left, right, up and down arrow keys may be used in any sequence to position the highlight.

To execute a command that has been previously selected (i.e., highlighted) simply press the **Enter** key. Alternatively, the command may be executed by pressing the single letter code listed to the left of the command. Upper- and lower-case letters may be used. Every command listed in a menu has a distinct single letter code that permits immediate execution of that command.

### Working with Fields

The CWR-264P utilizes two types of fields. Selection Fields allow the user to select a parameter from a list of predefined values (e.g., Terminal Port Baud rate). Edit Fields can be set to any alphanumeric value desired by the user (e.g., Unit Name).

To change the value of a Selection Field simply press the **Spacebar** on the PC keyboard. The next value from a predefined list of values will be displayed each time the **Spacebar** is pressed. The first value in the list will automatically follow the last value.

Input Names, Detection Times and Limit Values are examples of parameters that are defined by Edit Fields. After the desired Edit Field is highlighted the user may type any combination of alphanumeric characters appropriate to the field. The initial value of the field is completely removed after typing the first character. Consequently, it is not necessary to delete each character that comprises the initial value. Errors in typing can be corrected by using the **Backspace** key. At any time while editing a field the user may press the **Esc** key and thereby restore the field to its previous value.

Upper- and lower-case letters may be used. Limit values are assigned negative values by preceding the numeric entry with a minus sign. Numeric values that exceed the range of the field are automatically set to the maximum or minimum value (as appropriate) permitted by the range.

To accept the new value assigned to an Edit Field the user can either press the **Enter** key or move the highlight to a new field. The initial value of an Edit Field cannot be restored after the new value has been accepted. When all of the fields contain values suitable to the user the command may be completed.

**Note** Once a field has been accepted by pressing the **Enter** key or moving the highlight it may, depending upon the command, be programmed into the Primary Unit as an updated operating parameter. Accordingly, the acceptance may occur before completion of the command.

### Completing Commands

Generally, commands are completed by pressing the **Esc** key. However, pressing the **Esc** key will not complete the command if the user is in the process of editing a field. Pressing the **Esc** key prior to accepting the new value will instead restore the highlighted field to its previous value. To complete a command that requires pressing the **Esc** key, first accept the contents of the last Edit Field by pressing the **Enter** key or moving the highlight to another field.

Some commands are completed by responding to a choice listed in a Selection Field (e.g., No or Yes). In these cases the command is completed by highlighting the desired choice and then pressing the **Enter** key. Pressing the **Esc** key is the equivalent of selecting the default choice (generally the No option). As a rule of thumb, executing the No option will abandon any field changes made prior to the completion.

Other commands are completed by pressing the key described in a prompt message displayed with the command. Prompts are frequently listed with commands as an aid to the user. After the command is completed the user will be returned to the menu that was previously displayed.

## Data Flow Control

Several of the setup and operational commands can generate considerable amounts of displayed data. If the user wishes to observe this data on the screen of a PC it may be helpful to temporarily pause the data stream being sent by the recording system. The Pause and Resume commands may be used to provide the required data flow control.

To Pause the data being sent press the **Ctrl** and **S** keys simultaneously. The data flow will be stopped indefinitely. To Resume data flow press the **Ctrl** and **Q** keys simultaneously. This technique can be used to freeze the data at the PC.

Another useful command is the Abort command. At any time during a lengthy data dump the remaining data can be ignored or aborted by pressing the **Esc** key. The user can then issue another command immediately after the Abort is executed rather than wait until the lengthy data dump is completed.

## Main Menu

The Main Menu of commands will be displayed immediately after logging on. Refer to the sample data labeled “Main Menu” on page 15. The Setup Procedure described in this chapter will familiarize the user with the Setup, Transfer Files and Log Off commands listed in the Main Menu.

For the remainder of this chapter the Setup, Transfer Files, Log Off commands and their numerous sub-commands will be described in the sequence recommended by MICRO-AIDE for their execution as part of the Setup Procedure. Each command will be identified by its name as listed in the menu where it resides. The single letter code that executes the command will be listed in parenthesis. The Setup Procedure commences with the execution of the Setup command listed at the top of the Main Menu.

## Setup (S)

The following menu of sub-commands will be displayed after executing the Setup command.

```
Setup Menu
T Time/Date
E Event Names
I Input Names/Identifiers
D Detect Times/Flash Enable
G Global Detect Time
A Analog Configuration
V Virtual Inputs
W Timer Inputs
M Measure Speed
N Network
S System Parameters
P Print Setup Data
R Reset System
```

## Time/Date (T)

Working in concert, the Primary and Secondary Units will time stamp all Event Records regardless of their type or origin. The recording system's real-time clock is resident in and maintained by the Primary Unit. Once every 10 seconds the Primary Unit automatically synchronizes the real-time clock of every Secondary Unit. Event Records from Digital and Analog Inputs are time and date stamped by their respective Secondary Unit. Virtual Input, Train Speed Monitor and System Event Records are time and date stamped by the Primary Unit.

The recording system will automatically account for leap year. All of the real-time clocks will continue to keep accurate time even if power is interrupted for a prolonged period.

To change the time or date execute the Time/Date command. The sample data listed below shows a typical response to the Time/Date command.

```
Time/Date
          HH:MM:SS
Time: 13:46:01
          MM-DD-YY
Date: 04-06-05 Wednesday
```

The highlight may be moved to the hour, minute or second time fields or month, day or year date fields. The CWR-264P utilizes a military-style clock. Accordingly, 12:01:02AM is defined as 00:01:02 and 12:59:58PM is defined as 23:59:58. Leading zeros are not required. The day of week is displayed automatically as determined by the date selected by the user.

The clock of the CWR-264P (and in turn the clock of each CWR-264S) can be synchronized to an external source that is connected to a Digital Input. Alternatively, the CWR-264P can be synchronized via a LAN-based Simple Network Time Protocol (SNTP) time server. Refer to the section entitled "Clock Sync Input" on page 28.

The real-time clock can be automatically adjusted for Daylight Saving Time (DST). Refer to the section entitled "Daylight Saving Time" on page 29.

**Tip** If the clock cannot be synchronized via SNTP or an external source, MICRO-AIDE recommends that the clock be manually set at least once per week.

To complete the command press the **Esc** key. The user can then accept or abandon the changes.

## Reset System (R)

The Reset System command can be used at any time to restore the recording system to its factory default settings. The command can also be used to clear previously logged Event Records. This step is listed as part of the Setup Procedure since it can be useful in restoring the system to a known state consistent with this documentation. Additionally, any programming or Event Records created as a part of the Initial Check-out Procedure will be erased.

**Note** The time, date and Ethernet related settings are not affected by the Reset System command.

The following menu will be displayed after executing the Reset System command.

```

Reset System

S Reset Setup Data
E Reset Event Memory
B Reset Both
    
```

Each command is described in the sections that follow.

**Reset Setup Data (S)**

The CWR-264P and CWR-264S utilize two non-volatile memories. The first is referred to as the Setup Database. The Setup Database contains all of the programmed parameters established by the user. It is saved in and maintained by the Primary Unit. These parameters can be restored to their factory default values by executing the Reset Setup Data command. Table 1 lists the default values for each of the programmable parameters.


Parameter	Default Value
Unit Name	***** NOT SET *****
Terminal Port Baud Rates	38,400
Administrative Password	PASSWORD
Restricted Password	LOOKWORD
Passcode	12345678
Ring Count	2
Primary Dial Number	(none assigned)
Secondary Dial Number	(none assigned)
Clock Sync Input	--- (none assigned)
High Temp Limit	257°F
Low Temp Limit	-67°F
Time Zone	(last assigned)
Daylight Saving Time	Enabled
Digital Input Names	Digital Input 0001, Digital Input 0002, etc.
Analog Input Names	Analog Input 001, Analog Input 002, etc.
Virtual Input Names	Virtual Input 01, Virtual Input 02, etc.
Timer Input Names	Timer 001, Timer 002, etc.
Digital Input Identifiers	DInp0001, DInp0002, etc.
Analog Input Identifiers	Alnpt001, Alnpt002, etc.
Virtual Input Identifiers	VInput01, VInput02, etc.
Timer Input Identifiers	Timer001, Timer002, etc.

*Table 1 - Factory Default Settings*

On Event Names	On (pairs 1-15), Violate (pair 16)
Off Event Names	Off (pairs 1-15), Nominal (pair 16)
Assigned Event Name Pairs	1, 16 for Timer Inputs
Digital Input Detection Times	3.00 seconds
Digital Input flash statuses	No (disabled)
Analog Input Ranges	±25.5Vdc
Analog Input Filter speeds	Slow
Analog Input Low Limits	-25.6Vdc
Analog Input High Limits	25.5Vdc
Timer Input Low Limits	--- (none assigned)
Timer Input High Limits	--- (none assigned)
Virtual Input Variables	--- (none assigned)
Virtual Input relay controls	No (disabled)
Virtual Input modem control	No (disabled)
Train Speed, First Sensor Input	--- (none assigned)
Train Speed, Second Sensor Input	--- (none assigned)
Train Speed, Distance Between Sensors	0 feet
Train Speed, Threshold	0mph
Flash Rate Input	(last assigned)
Ethernet settings	As set by factory or user

*Table 1 - (Continued) Factory Default Settings*

The following precaution will be displayed after selecting the Reset Setup Data command.

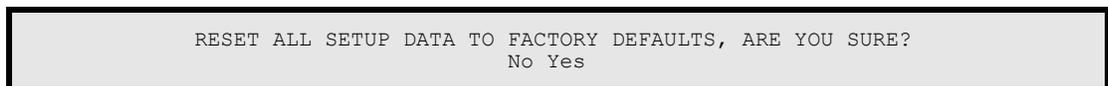

Select No to abort the reset. Select Yes to proceed.

**Note** The Reset Setup Data command will return both Terminal Port Baud rates to their default setting of 38,400 Baud. The PC Baud rate may have to be adjusted.

### **Reset Event Memory (E)**

The Reset Event Memory command will permanently remove from memory all Event Records that were previously logged within the Primary Unit. Records from each of 128 possible days will be deleted.

The following precaution will be displayed after selecting the Reset Event Memory command.

```
ERASE ALL EVENTS FROM MEMORY, ARE YOU SURE?  
No Yes
```

Select No to abort the reset or Yes to proceed. If a reset is performed the following precaution will be displayed.

```
Erasing memory, do not turn power off for 60 seconds,  
Press any key to continue
```

**Caution** It is important that the user not turn off the power while the CWR-264P is clearing its Event Record memory.

### Reset Both (B)

The Reset Both command allows the user to clear both memories simultaneously. The precaution noted in the preceding paragraph applies to this command as well.

## System Parameters (S)

System Parameters are those parameters that affect the recorder as a whole. They do not affect individual inputs or their behavior. System Parameters include, but are not limited to, the Unit Name, passwords and modem. The twelve System Parameters are defined with a single command containing multiple fields. A typical response to the System Parameters command is shown below. The use of each System Parameter is described in the following sections.

```
                                System Parameters  
                                -----  
Unit Name  
***** NOT SET *****  
Terminal Port1 Baud Rate 38400  
Terminal Port2 Baud Rate 38400  
Administrative Password PASSWORD  
Restricted Password LOOKWORD  
Passcode 12345678  
Ring Count 2  
Primary Dial Number  
Secondary Dial Number  
Clock Sync Input ---  
High Temp Limit 257 Degrees F  
Low Temp Limit -67 Degrees F  
Time Zone PST (UTC-8)  
Daylight Saving Time Enabled
```

### Unit Name

The Unit Name serves as a comprehensive system and site ID. Data from several CWR-264XC systems can be easily distinguished by providing each system with a unique and descriptive name. A total of eighty alphanumeric characters can be used to define the Unit Name. It may include city, milepost, street and DOT designation data. It is assigned using standard Edit Field techniques described in “Working with Fields” on page 21.

### Terminal Port 1 and 2 Baud Rates

Either Terminal Port Baud rate may be assigned one of ten values. Valid settings are: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200bps. Press the **Spacebar** to select a Baud rate.

The following message will be displayed if the Baud rate was changed.

```
Change baud rate now, then  
Press any key to continue
```

The user must change the Baud rate of the PC to match the new setting assigned to the recorder.

### Administrative and Restricted Passwords

Access to the CWR-264P via the Terminal Ports, Ethernet Port and internal modem is protected by a dual level password system. Administrative Access permits unrestricted access to all system functions. Administrative Access allows the Setup Database to be altered and the Event Record memory to be cleared. The Administrative Password should be known to a limited number of users with a genuine need to know.

Restricted Access permits only limited access to the system. It allows the user to review, but not alter, the Setup Database and Event Record memories. The Restricted Password can be shared with users that only need access to Event Record data when investigating an incident or resolving a maintenance issue.

The Administrative and Restricted Passwords are defined similarly. Each may be assigned any combination of alphanumeric characters not exceeding eight total. To defeat the password security system assign one of the passwords a null value. This can be done by deleting all of the characters in the password field and then accepting the empty field. When the password challenge is issued the user will be able to access the system by simply pressing the **Enter** key.

**Caution** Care should be exercised in assigning and saving the Administrative Password. If it is lost or forgotten it will be necessary to contact MICRO-AIDE for assistance.

### Passcode

The CWR-264P can be effectively programmed and operated from its front panel. The Passcode is used to protect the system from unwanted access via the front panel. It must be entered when the user attempts to alter the Setup Database. The Passcode can be assigned any combination of digits not exceeding eight total. Alphabetic characters cannot be assigned to the Passcode.

### Ring Count

The Ring Count parameter determines the number of ring cycles that must occur before the internal modem will answer an incoming call. Setting the Ring Count to a sufficiently large value will allow an on-site maintainer to answer a voice call prior to the CWR-264P answering. The Ring Count can be set in the range from 0 to 99. A setting of 0 will disable the modem's auto-answer feature (i.e., incoming calls will not be answered by the modem).

The following message will be displayed below the last field in the Systems Parameter command if the modem is not installed. No message will appear if the modem is installed.

```
Modem is NOT installed
```

### Primary and Secondary Dial Numbers

The Virtual Input feature of the CWR-264P allows users to program a fault reporting capability into the system. If the fault is detected the internal modem can be enabled to dial out to a maintenance facility and transmit an Event Record that specifies the fault.

The telephone number the modem dials is defined by the Primary and Secondary Dial Number parameters. Dial numbers will generally contain numeric values. An exception to this rule is that parentheses, hyphens and space characters can be placed into the number field for clarity. These characters will be ignored by the modem. Additionally, the comma character can be placed anywhere in the field to create an arbitrary two-second delay. A total of twenty alphanumeric characters can be entered for each of the dial numbers.

The CWR-264P attempts to establish a connection by dialing the Primary Dial Number first. If the connection fails the next attempt is made to the Secondary Dial Number. Successive failures will force the modem to dial alternately between the two numbers. The modem ceases further attempts after ten failures to each number have occurred.

**Note** The CWR-264P modem is programmed to accept only reliable connections. Consequently, the far end modem must be programmed to establish connections that use error correction protocols such as LAP-M and MNP 2-4.

### Clock Sync Input

The CWR-264P contains a real-time clock that allows the system to time stamp Event Records to the nearest hundredth of a second. With any clock a small amount of drift can be expected. The CWR-264P clock will drift approximately one minute per month. The Clock Sync Input feature allows an external signal to set the system's clock to the nearest fifteen minute mark.

To synchronize the CWR-264P clock to an external input enter a Digital Input number in the Clock Sync Input field. The input entry must take the form **Dnnnn**, where **nnnn** must be in the range of 1 to 4096 while not exceeding the Digital Input capacity of the system. Leading zeros are not required.

The Clock Sync Input is treated like any other Digital Input. Changes in state of the Clock Sync Input will create Event Records. When the input transitions to an active state (i.e., voltage applied) the clock will be rounded to the nearest fifteen minute value. Accordingly, the count of seconds will be cleared to 00.00. As an example, if the time is 12:16:03.95 the Clock Sync Input feature will set the clock to 12:15:00.00. If the time is 12:44:20.26 the Clock Sync Input feature will set the clock to 12:45:00.00.

**Caution** The Clock Sync Input will normally be connected to the output of a PLC. The time between successive PLC output pulses must be a whole multiple of 15 minutes. Otherwise the recorder

clock will indicate a significant error. Additionally, the Detection Time setting for the Clock Sync Input must be less than the duration of the PLC output pulse. Refer to the section entitled “Detection Times” on page 30 for details.

**Caution** The real-time clock of the CWR-264P can be synchronized by use of the Clock Sync Input or the SNTP Clock Sync feature (the latter employs the SNTP-multicast method). **Both methods cannot be employed simultaneously.** If enabled, the Clock Sync Input feature will prevent the clock from being controlled by a time server. To enable the SNTP feature the Clock Sync Input must be set to 0 (appears as “---”).

**Note** The Clock Sync Input feature operates independently of the Primary Unit’s automatic synchronization of the Secondary Unit real-time clocks.

### High and Low Temp Limits

The temperature inside the Primary and Secondary Units is constantly monitored. If the temperature reaches an extreme value a System Event will be declared and logged to memory. Refer to “System Events” on page 104 for additional information. The High and Low Temp Limits are used to define the range of acceptable operation. The settings must range from -67°F to 257°F.

### Time Zone

The Time Zone setting is only used when SNTP is used to synchronize the real-time clock. The setting is otherwise ignored. SNTP indicates time in accordance with the UTC standard. To display the correct local time the Event Recorder must convert the reported UTC time by applying the correct time zone adjustment.

The Time Zone setting can be selected from seven different values that are common to North America. Each setting is explained in Table 2.

Time Zone Code	Description	Shift from UTC (hours)
AST	Atlantic Standard Time	-4
EST	Eastern Standard Time	-5
CST	Central Standard Time	-6
MST	Mountain Standard Time	-7
PST	Pacific Standard Time	-8
AKST	Alaska Standard Time	-9
HAST	Hawaii Standard Time	-10

Table 2 - Time Zone Settings

### Daylight Saving Time

The real-time clock of the CWR-264XP can be adjusted automatically to compensate for DST. This feature operates independently of either clock sync option. If enabled, the real-time clock will be shifted by one hour on the second Sunday of March and the first Sunday of November. In both cases the clock is adjusted at 2:00 AM.

## Detect Times/Flash Enable (D)

The Digital Inputs of each Secondary Unit will generally be connected to relay-based control circuits. Since relay contacts typically bounce, the CWR-264S must have the ability to de-bounce these inputs. The Detection Time feature allows the user to establish a validation time for each Digital Input.

Each Digital Input can also be set to monitor a flashing circuit. The Detect Time/Flash Enable command allows the user to program each of these features. A typical response to the Detect Time/Flash Enable command is shown below. Only the first several lines and last line of text are shown. Press the **F1** or **F2** function keys to access another group of 64 Digital Inputs. To jump directly to a specific group of 64 Digital Inputs press the **F3** function key. Then enter an input number in the form **Dnnnn** where **nnnn** is in the range of 1 to 4096. Press the **Enter** key followed by the **Esc** key.

Detect Times/Flash Enable											
Detect			Detect			Detect			Detect		
Input	Time	Flash	Input	Time	Flash	Input	Time	Flash	Input	Time	Flash
D0001	3.00	No	D0017	3.00	No	D0033	3.00	No	D0049	3.00	No
D0002	3.00	No	D0018	3.00	No	D0034	3.00	No	D0050	3.00	No

[F1]=Next Page [F2]=Prev Page [F3]=Goto Input

The procedure for programming both parameters is described in the following sections.

### Detection Times

In the sample data shown above the Detection Times are set to the factory default value of 3.00 seconds. The range of valid Detection Times is 0 to 327.67 seconds. A value of zero prevents the Digital Input from logging events. Use the decimal point key to enter fractional values. The Detection Time of inputs assigned as sensors in the Train Speed Monitor feature cannot be altered. They are set to a fixed value of .05 seconds.

**Tip** Set the Detection Times to values slightly greater than the longest expected bounce time of the relay contacts. This will insure that noise or transient induced voltage changes are not recorded and that legitimate short duration events will be logged.

The Detection Time assigned to a Digital Input enabled for flashing operation represents a special case requiring additional explanation. The correct programming procedure is described below.

### Flash Enable

The CWR-264S is able to validate and report Event Records from flashing circuits. A typical flashing event is created by the operation of a crossing light or approach signal. Each time the light flashes a new pulse is seen at the Digital Input. The recorder should only log the start and end events, not an event for each pulse. Assigning the proper Detection Time to the input and enabling the input for flashing operation solves the problem of multiple flash events when only a

single pair of events is actually required. Figure 8 on page 31 illustrates the algorithm used by the CWR-264S to detect flashing events.

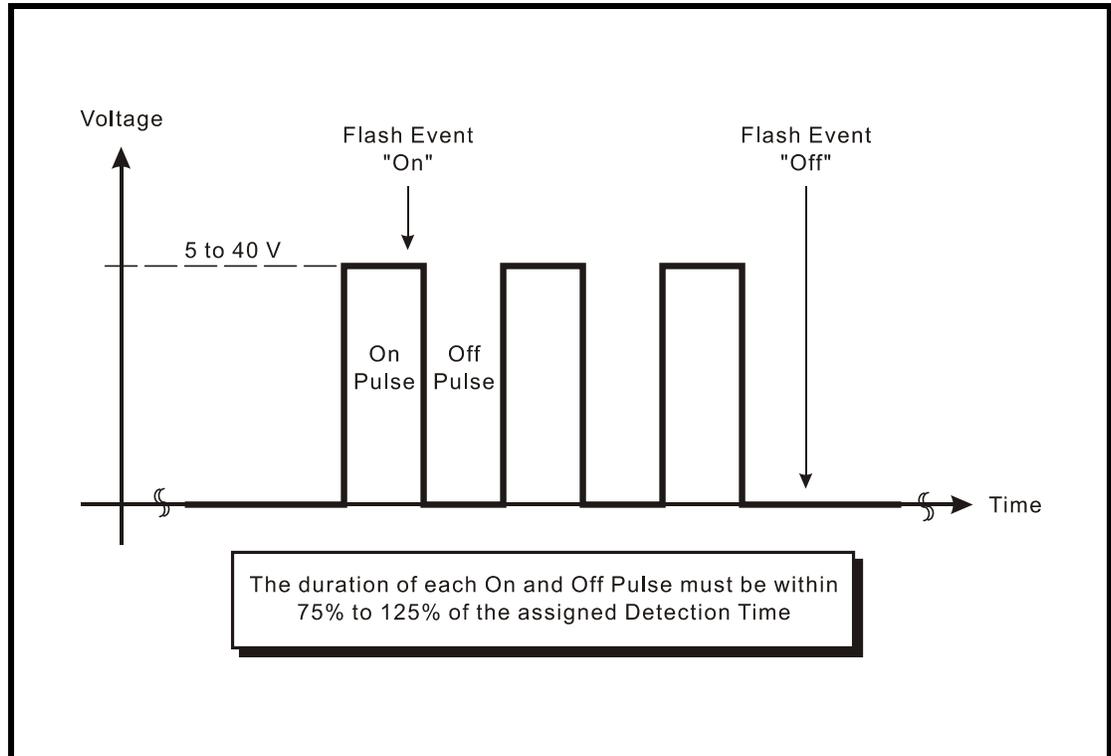


Figure 8 - Typical Flashing Pulse Sequence

The Detection Time must be set to the nominal duration of a flash pulse. Pulses are expected to be on and off for the same duration. However, the CWR-264S is designed to allow for some variation in the duration of each pulse. Each on and off pulse must have a duration in the range from 75% to 125% of the assigned Detection Time. Use either of the two methods listed below to determine the correct Detection Time for inputs with non-varying flash rates.

**Tip** The Measure Flash Rate command can be used to determine the Detection Time for Flashing Inputs. Refer to the section entitled “Measure Flash Rate (M)” on page 65. Alternatively, the correct Detection Time (in seconds) is equal to 30 divided by the number of flashes per minute (i.e.,  $30 \div \text{fpm}$ ).

To enable an input for flashing operation simply highlight the field in the Flash column and press the **Spacebar**.

## Global Detect Time (G)

The Detect Times command allows each Digital Input to be set individually. Setting each of 4096 possible inputs to values that differ from the factory default setting can be extremely time consuming. Alternatively, the Global Detect Time command can be used to set all inputs to a single Detection Time value.

The following edit field will be displayed in response to the Global Detect Time command.

```

Global Detect Time
Detect Time for All Inputs:  0.00
    
```

To set the Detection Time for each Digital Input simply enter a number in the range from 0 to 327.67. The value zero will disable event recording entirely. To complete the entry press **Enter**.

**Note** A value of 0.00 is always listed in the edit field. The Global Detect Time command will not alter the setting of Digital Inputs assigned as sensors for the Train Speed Monitor.

## Analog Configuration (A)

The eight Analog Inputs of each CWR-264S can be used in a variety of applications. Battery voltages, AC voltage levels and current flows can be measured and reported by the Analog Inputs. The user can select an entry from a preset menu that best suits the intended application. A typical response to the Analog Configuration command is shown below. Default settings are listed.

Input	Range	Analog Configuration		
-----	-----	Filter*	Low Limit	High Limit
-----	-----	-----	-----	-----
A01	+/-25.5Vdc	Slow	-25.6	25.5
A02	+/-25.5Vdc	Slow	-25.6	25.5
A03	+/-25.5Vdc	Slow	-25.6	25.5
A04	+/-25.5Vdc	Slow	-25.6	25.5
A05	+/-25.5Vdc	Slow	-25.6	25.5
A06	+/-25.5Vdc	Slow	-25.6	25.5
A07	+/-25.5Vdc	Slow	-25.6	25.5
A08	+/-25.5Vdc	Slow	-25.6	25.5
A09	+/-25.5Vdc	Slow	-25.6	25.5
A10	+/-25.5Vdc	Slow	-25.6	25.5
A11	+/-25.5Vdc	Slow	-25.6	25.5
A12	+/-25.5Vdc	Slow	-25.6	25.5
A13	+/-25.5Vdc	Slow	-25.6	25.5
A14	+/-25.5Vdc	Slow	-25.6	25.5
A15	+/-25.5Vdc	Slow	-25.6	25.5
A16	+/-25.5Vdc	Slow	-25.6	25.5

\*Recommend "Slow" for AC  
[F1]=Next Page [F2]=Prev Page [F3]=Goto Input

The first column identifies the input. Analog Inputs are consistently labeled by the CWR-264P as “A01”, “A02”, etc. The A prefix is always used to distinguish Analog from Digital and Virtual Inputs. This first column of fields is fixed and cannot be altered by the user. Four parameters can be used to characterize an Analog Input. Each parameter is described in the sections that follow. Table 3 lists the Resolution, Filter and Limit Values applicable to each of the seven Ranges.

Range	Resolution	Filter	Low Limit	High Limit
±25.5Vdc	.1Vdc	Slow or Fast	-25.6 to 25.5Vdc	-25.6 to 25.5Vdc
+51.1Vdc	.1Vdc	Slow or Fast	0.0 to 51.1Vdc	0.0 to 51.1Vdc
±255Vdc	1Vdc	Slow or Fast	-256 to 255Vdc	-256 to 255Vdc
25.5Vac	.1Vac	Slow or Fast	0.0 to 25.5Vac	0.0 to 25.5Vac
255Vac	1Vac	Slow or Fast	0 to 255Vac	0 to 255Vac
±25.5Adc	.1Adc	Slow or Fast	-25.6 to 25.5Adc	-25.6 to 25.5Adc
25.5Aac	.1Aac	Slow or Fast	-25.6 to 25.5Aac	-25.6 to 25.5Aac

*Table 3 - Analog Input Parameters*

### Range

The Range setting allows the user to configure the Analog Input for DC or AC voltage or DC or AC current measurements. The Range setting also selects the span of voltages or currents that will be monitored. Lastly, the Range setting selects the resolution that will be reported by the measurement. The +51.1 Vdc range is particularly useful in monitoring batteries that may exceed 24Vdc when charging. The 255 Vac range is useful for monitoring the AC power source connected to a battery charger. The DC and AC current ranges are intended to be used with the CWR-CS Current Sensor.

**Tip** Each of the Ranges identified as AC utilize a true RMS method of measurement. Consequently, these settings can also be used when monitoring inputs with variable DC or pulse content.

### Filter

The Filter parameter can be set to either Fast or Slow. The Fast setting utilizes a time constant of .1 seconds. It is generally used when monitoring DC signals. The Slow setting utilizes a time constant of .64 seconds. It should be used when monitoring AC signals in order to smooth out their ripple content. If the user is unconcerned about the Filter time constant it is best to use the Slow (default) setting.

### Low and High Limits

Analog Inputs are constantly compared to two Limit Values. The Low and High Limit Values define regions of acceptable and unacceptable operation. Outside the acceptable region the input is considered to be in an abnormal state. An Event Record will be created when the Analog Input transitions into or out of either region.

Figure 9 on page 34 illustrates the relationship of the Low and High Limit Values to the Analog Input state. Each region defines the type of Event Record that is created by transitions of the input. The figure depicts an Analog Input configured to monitor a typical 12Vdc battery source. The figure indicates that the unacceptable region includes all voltages less than 10.2Vdc and all voltages greater than 14.5Vdc. The unacceptable region always consists of two portions separated by the acceptable region. If the input is within the range extending from 10.2 to 14.5Vdc the battery voltage is considered to be acceptable.

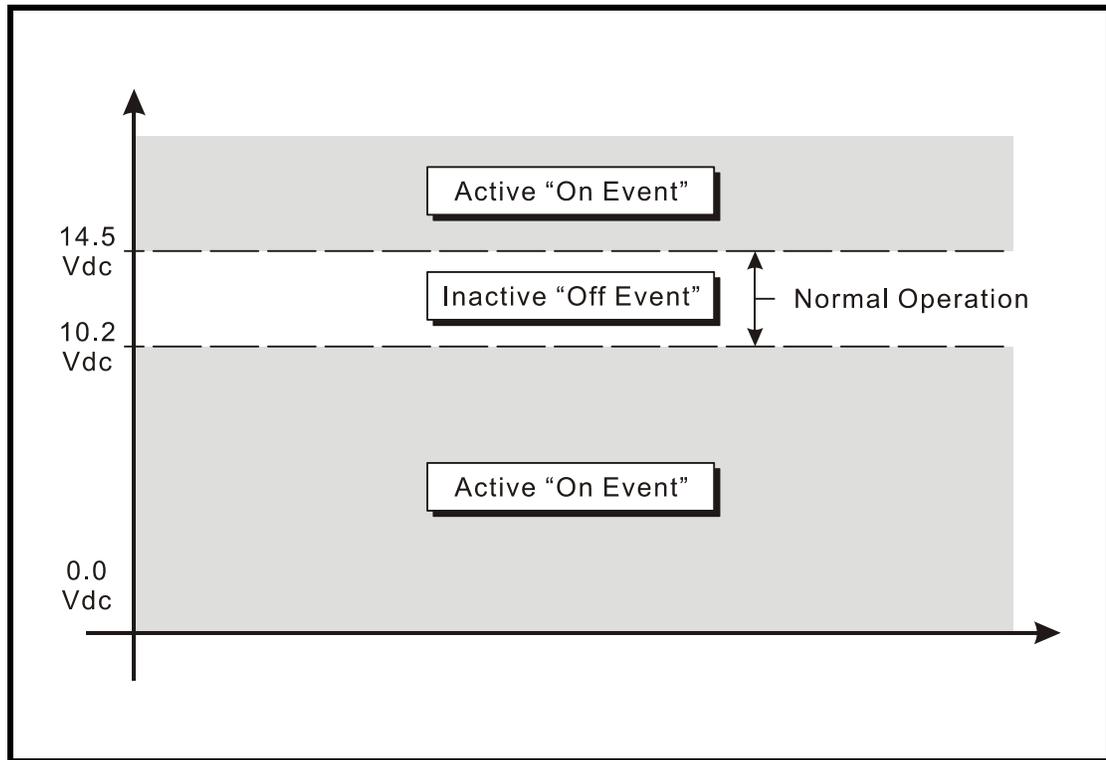


Figure 9 - Analog Input Operating Regions vs. Limit Values

**Note** Analog Inputs with levels greater than the Low Limit Value but less than the High Limit Value will create Event Records defined by the inactive or Off Event state. Levels found to be outside these limits will create Event Records defined by the active or On Event state.

## Timer Inputs (W)

Irrespective of input capacity, the CWR-264P implements 999 general purpose Timer Inputs. Each timer can be programmed individually. A Timer Input can be used to measure the elapsed time between any two events. As an example, the time between two relay events can be measured. The time a single relay is energized or un-energized can be measured. The interval between the loss of adequate BN voltage and a relay operation can be measured. Additionally, the user can assign Limit Values to each Timer Input. In this way, time delays that are unacceptably short or long can be reported. Finally, Timer Inputs will generate distinguishable Event Records like any other input. Included in each record is the measured time value.

An array of fields similar to the following will be displayed after selecting the Timer Input command. In the example cited, parameters for the first Timer Input have been entered. The other fields have retained their factory default settings. Only the first three Timer Inputs are listed.

Timer Configuration						
Timer	From	Event	To	Event	LowLimit	HighLimit
T001	D0001	On	D4096	Off	7.5	12.5
T002	---	Off	---	Off	0.0	0.0
T003	---	Off	---	Off	0.0	0.0

[F1]=Next Page [F2]=Prev Page

To program a Timer Input follow the steps listed below.

1. Position the highlight anywhere in the row identified by the Timer Input to be programmed (e.g, T0001).
2. Move the highlight into the column labeled “From”. The From input is used to trigger the timer. Assign it by entering **Dnnnn**, **Annn**, **Vnn** or **Tnnn** where n is 1 to 4096 for Digital Inputs, 1 to 128 for Analog Inputs, 1 to 32 for Virtual Inputs or 1 to 999 for Timer inputs. Leading zeros are not required.
3. Move the highlight to the right into the first column labeled “Event”. Assign the trigger event by pressing the **Spacebar** as required to select the On or Off setting.
4. Move the highlight to the right into the column labeled “To”. The To input is used to terminate the timer. Assign it by entering **Dnnnn**, **Annn** or **Vnn** where n is 1 to 4096 for Digital Inputs, 1 to 128 for Analog Inputs or 1 to 32 for Virtual Inputs. Leading zeros are not required.
5. Move the highlight to the right into the second column labeled “Event”. Assign the terminating event by pressing the **Spacebar** as required to select the On or Off setting.
6. Move the highlight to the right into the column labeled “LowLimit”. Enter a value within the range of 0 to 999.9 seconds. Any measured time interval that is less than this value will generate an Event Record tagged with an Event Name of Violate.
7. Move the highlight to the right into the column labeled “HighLimit”. Enter a value within the range of 0 to 999.9 seconds. Any measured time interval that is greater than this value will also generate an Event Record tagged with an Event Name of Violate.
8. Move the highlight to another row to program an additional Timer Input. Press the **F1** or **F2** function key to access another group of 16 Timer Inputs.
9. After each of the required Timer Inputs are programmed press the **Esc** key to complete the command.

In the example cited above the time after Digital Input 1 reaches its On state until Digital Input 4096 reaches its Off state will be measured. A measured time interval of 10.0 seconds  $\pm 25\%$  is considered acceptable. Measured time intervals that are within the range established by the Limit Values will generate Event Records tagged with an Event Name of Nominal. Refer to the section entitled “Event Record Formats” on page 66 for additional information.

## Event Names (E)

There are two types of Event Records. Active Event Records are created when a Digital Input is found to have sufficient input voltage (greater than 5Vdc) or when an Analog Input transitions into its unacceptable region as defined by its Limit Values. Conversely, inactive Event Records are created when a Digital Input has less than 2Vdc or an Analog Input is within its acceptable region of operation.

Event Names allow the user to distinguish Event Records from each other in a quick and unambiguous manner. They should not be confused with Input Names and Input Identifiers (see next section). Event Names always occur in pairs. The On Event and Off Event names form the pair. They in turn distinguish the active and inactive Event Records, respectively.

As many as sixteen Event Name pairs can be defined. Once the pairs are defined they can be assigned to inputs of the CWR-264XC in any manner that helps the user distinguish Event Records precisely and quickly. By way of example, the Event Records for Digital Input 1 could be labeled “XR\_On” and “XR\_Off”. The Event Records for Analog Input A1 could be labeled “Bat\_Norm” and “Bat\_Fail”.

A typical response to the Event Name command is shown below. In the interest of brevity only four of the sixteen pairs are listed (i.e., 1-3 and 16). The factory default Event Names are shown.

Event Names		
Number	ON Name	OFF Name
1	On	Off
2	On	Off
3	On	Off
16	Violate	Nominal

To define a new Event Name simply position the highlight to the desired field and type the new name. Event Names are restricted in length to eight characters. They can be formed by any combination of letters, numbers and syntax symbols.

**Note** As an aid to the user Event Name pair 16 is by default labeled “Violate” and “Nominal”. Furthermore, pair 16 is by default assigned as the Event Name Pair to all Timer Inputs. The pair assignment and names can, however, be changed by the user to better suit the intended application.

## Input Names/Identifiers (I)

The CWR-264XC utilizes two types of inputs. Digital and Analog Inputs are referred to as physical inputs because actual circuits are wired to the recorder’s input connectors. The CWR-264XC also includes 32 Virtual and 999 Timer Inputs. Contrary to physical inputs, Virtual and Timer Inputs are defined by the user for the purpose of detecting failure or alarm conditions typically among physical inputs. Refer to the section entitled “Virtual Inputs (V)” on page 37.

All inputs, regardless of type, share one common programming characteristic. The user can define a unique Input Name, Input Identifier and Event Name pair to each input. The Input Name can be any combination of alphanumeric characters not exceeding twenty total. The Input Name appears in each Event Record created by the input in question. It is the primary means by which inputs are distinguished.

The Input Identifier can be thought of as an abbreviated name. It is limited in length to eight alphanumeric characters. It too appears in the Event Record. It is primarily used to distinguish Event Records displayed on the LCD panel of the Primary Unit. Several of the setup commands use the Input Identifier rather than the lengthier Input Name to reference inputs.

The Event Name pairs are described in the preceding section. As many as sixteen Event Name pairs can be defined by the user. Each pair is identified by a number ranging from one to sixteen. After the pairs are defined the Input Names/Identifiers command is used to assign Event Name pairs to inputs. The Event Name pair can be assigned by using either of two methods. The **Spacebar** can be repeatedly pressed when the highlight is located within the OnEvent/OffEvent field until the desired pair is listed. Alternatively, the number of the required Event Name pair can be entered in the last column.

A typical response to the Input Names/Identifiers command is shown below. Only the first three Digital Inputs and Timer Input T999 have been listed. Analog Inputs follow Digital Inputs. The Virtual Inputs follow the Analog Inputs. They are followed by the Timer Inputs.

Input	Input Names/Identifiers				
	Name	ID	OnEvent/OffEvent	Event	Pair
D0001	Digital Input	0001	DInp0001	On/Off	1
D0002	Digital Input	0002	DInp0002	On/Off	1
D0003	Digital Input	0003	DInp0003	On/Off	1
T999	Timer 999		Timer999	Violate/Nominal	16

[F1]=Next Page [F2]=Prev Page [F3]=Goto Input

To advance to the next screen press the **F1** function key. To return to the previous screen press the **F2** function key. A total of 263 screens are required to view all of the Digital, Analog, Virtual and Timer Inputs associated with a maximum capacity system. Rather than pressing the F1 or F2 keys repeatedly, the **F3** function key can be used as an alternative to jump to a specific group of twenty inputs. To use this feature press the **F3** function key and then enter an input number in the form Dnnnn, Annn, Vnn or Tnnn. Press the **Enter** key followed by the **Esc** key.

## Virtual Inputs (V)

Virtual Inputs are a unique feature only found in MICRO-AIDE's family of CWR Event Recorders. The CWR-264XC is a powerful, general purpose recording system that can be used to satisfy the data logging demands of a variety of applications. An Event Recorder is frequently used to gather data on a failure condition thought to exist in a relay-based control circuit. The failure

condition may occur intermittently. The need to log data over a significant period of time will often impose an additional requirement upon the recorder. The suspected failure can often be defined as the abnormal occurrence of two or more relay states. The normal operation of the circuit predicts that only certain relay states can occur. It follows that any deviation from these normal states suggests a failure that should be flagged and carefully examined.

Identifying failures that occur as the result of abnormal relay states is greatly simplified by using the Virtual Input feature. The CWR-264P allows a total of 32 Virtual Inputs to be defined. Each Virtual Input is defined by specific logical associations among particular physical inputs or other Virtual Inputs.

Virtual Inputs are defined by two essential properties. The first property concerns the selection of variables. Variables are merely the inputs (physical, virtual or timer) that will be checked to determine if a Virtual Input event is to be logged. The number of variables that define the Virtual Input can range from one to four. Variables can be Digital Inputs, Analog Inputs, other Virtual Inputs or Timer Inputs. Assigning a Virtual Input as a variable to another Virtual Input is referred to as nesting. Nesting allows the user to create a higher level Virtual Input that evaluates more than four variables in total.

The second property pertains to the state of each assigned variable. A fault condition in a relay-based circuit can only be identified if the state of each variable is properly evaluated. Within the CWR-264XC the state of a variable is always defined as either On or Off. Both states are described below.

- **On:** The Digital Input voltage is in the range from 5 to 40Vdc. The Analog Input level is outside the acceptable range as defined by the region between the Limit Values (refer to Figure 9 on page 34). The Virtual Input evaluates to a true logic state. The Timer Input has reported a timed interval that is either too fast or too slow as compared to its assigned Low and High Limit Values, respectively (refer to the section entitled “Timer Inputs (W)” on page 34).
- **Off:** The Digital Input voltage is less than 2Vdc. The Analog Input level is within the acceptable range as defined by the region between the Limit Values. The Virtual Input evaluates to a false logic state. The Timer Input has reported a timed interval that is within its range of assigned Low and High Limit Values.

The procedure used to define Virtual Inputs is described in the following two sections.

### Assigning Variables

An array of fields similar to the following will be displayed after selecting the Virtual Inputs command. In the example cited, only variables for Virtual Input V3 have been entered. The other fields have retained their factory default settings. Only the first six Virtual Inputs are listed.

Input	Function of:				Virtual Input Parameters				
	Relay 1	Relay 2	Relay 3	Relay 4	Dial Out				
V01	---	---	---	---	Yes	No	No	No	No
V02	---	---	---	---	No	No	No	No	No
V03	D0256	D0007	A008	---	No	Yes	No	No	Yes
V04	---	---	---	---	No	No	No	No	No
V05	---	---	---	---	No	No	No	No	No
V06	---	---	---	---	No	No	No	No	No

[F1]=Next Page [F2]=Prev Page [F3]=edit virtual output function

**Assigning Variables to Virtual Inputs**

To assign variables perform the following steps in the order described.

1. Position the highlight anywhere in the row identified by the Virtual Input to be programmed (e.g, V3). Then move the highlight within the row to the extreme left-most column.
2. Assign the first variable by entering **Dnnnn**, **Annn**, **Vnn** or **Tnnn** where n is 1 to 4096 for Digital Inputs, 1 to 128 for Analog Inputs, 1 to 32 for Virtual Inputs or 1 to 999 for Timer Inputs. Leading zeros are not required.
3. Move the highlight to the right. Assign the remaining variables using the previous step. Not all fields need to be assigned a variable. To remove a variable press the **0** key or simply delete all of the characters in the field.
4. Move the highlight to the field in the columns labeled “Relay 1” through “Relay 4”. Press the **Spacebar** to select the desired setting. The Yes setting will operate the selected internal relay if the Virtual Input definition is satisfied. The internal relays will remain in their energized state for as long as the conditions that define the Virtual Input persist. The No setting leaves the relay unaffected by the Virtual Input. All four relays can be controlled by a single Virtual Input.
5. Move the highlight to the field in the column labeled “Dial Out”. Press the **Spacebar** to select the desired setting. The Yes setting will allow the internal modem to dial the telephone numbers defined by the Primary and Secondary Dial Number parameters. Refer to “Primary and Secondary Dial Numbers” on page 28. If the modem is able to connect with the far end an Event Record for the Virtual Input will be issued.
6. To proceed to the next step press the **F3** function key while the highlight is still positioned within any field of the desired Virtual Input.

A sample response listing three variables is shown below. To complete the definition of the Virtual Input the state of each variable must now be assigned.

Virtual Output Function					
Inputs:	D0256	D0007	A008	---	Output:
	POK Rly	App Lite	Battery		V03 VInput03
	-----	-----	-----	-----	-----
	POK Up	Lite On	Bat Norm		Alrm Off
	POK Dwn	Lite On	Bat Norm		Alrm Off
	POK Up	Lite Off	Bat Norm		Alrm Off
	POK Dwn	Lite Off	Bat Norm		Alrm Off
	POK Up	Lite On	Bat Bad		Alrm Off
	POK Dwn	Lite On	Bat Bad		Alrm Off
	POK Up	Lite Off	Bat Bad		Alrm Off
	POK Dwn	Lite Off	Bat Bad		Alrm On

*Assigning States to Virtual Inputs*

**Selecting States**

Before proceeding further the table of state selection fields must be understood. Each Virtual Input will have its own data table. However, the basic structure of each table will remain the same. Refer to the sample data labeled “Assigning States to Virtual Inputs” on page 40. Each row lists, from left to right, the Input Numbers that are assigned to each variable (e.g., labeled “D0256”, “D0007” and “A008”). Unassigned variables are labeled “---”. The last column of the third line lists the Input Number of the Virtual Input being defined (e.g., labeled “V03”). Directly below the Input Numbers on the fourth line of text is listed the Input Identifier for the variable. For the sample data shown the Input Identifiers are labeled “POK Rly”, “App Lite” and “Battery”. The Virtual Input has retained its default Input Identifier, labeled “VInput03”.

The remaining lines of text will vary with the number of assigned variables. One variable will list two lines of text. Two variables will list four lines of text. Three variables (example cited) will list eight lines of text. Four variables will list sixteen lines of text. Each line will specify a state for each of the assigned variables (i.e., inputs). Each state is identified by its user-defined Event Name. The states for the variable labeled “POK Rly” are “POK Up” and “POK Dwn”. The sample data includes three variables, so eight lines of text lists all of the possible variable states.

The last column of data in each line includes a selection field. The field can be set, line by line, to an active or inactive state. The user decides which state to assign to the Virtual Input for each combination of variable states. For the sample data shown, the Virtual Input is assigned to its active state (labeled “Alrm On”) when the variable’s states are POK Dwn, Lite Off and Bat Bad. Anytime this combination of states is found to exist among inputs D256, D7 and A8, respectively, an active Event Record for Virtual Input V3 will be created and stored in memory. An additional, inactive Event Record will be created when the variable states no longer satisfy these requirements.

Perform the following steps to complete the Virtual Input programming procedure.

1. Move the highlight to the first line of text that lists the input states.
2. Press the **Spacebar** to select the correct Event Name for that combination of input states.
3. Move the highlight to the next line and repeat the preceding step.

4. When the Virtual Input state is correctly defined for each line press the **Esc** key and return to the variable assignment table.
5. Press the **Esc** key to exit the command or reposition the highlight and select the next Virtual Input. Repeat both of the previously described procedures as required.

## Measure Speed (M)

The CWR-264XC features a speed measuring capability that can be used to continuously monitor train speed and log speed violations. The use of this feature is strictly optional. It is referred to as the Train Speed Monitor feature and it is controlled by the Measure Speed command.

The recording system must be properly configured before the Train Speed Monitor can be used. Regardless of other variations in the configuration the following list of requirements must be satisfied.

- There are a total of sixteen Train Speed Monitors per recording system. For each monitor two train sensors must be wired to two spare Digital Inputs of any Secondary Unit.
- Each train sensor must reliably indicate the presence of a train.
- The sensor outputs must be either open (no train) or closed to positive battery (nearby train).
- The distance between each sensor must be in the range from 50' to 5280'.

An array of fields similar to the following will be displayed after selecting the command. Only the first six Train Speed Monitors are listed.

		Measure Speed Parameters			
Speed#	(Event)	Sensor1	Sensor2	Distance	Threshold
1	(S04)	---	---	0 Feet	0 MPH
2	(S05)	---	---	0 Feet	0 MPH
3	(S06)	---	---	0 Feet	0 MPH
4	(S07)	---	---	0 Feet	0 MPH
5	(S08)	---	---	0 Feet	0 MPH
6	(S09)	---	---	0 Feet	0 MPH

To disable measure speed feature:  
set sensor inputs(s) to none (---),  
or distance or speed limit to zero.

The use of each field is described in the following three sections.

**Note** The sixteen Train Speed Monitors are always disabled by their factory default settings.

Excessive train speed is reported in a time stamped Event Record. Refer to the section entitled “Event Record Formats” on page 66. Figure 10 illustrates a typical Train Speed Monitor installation.

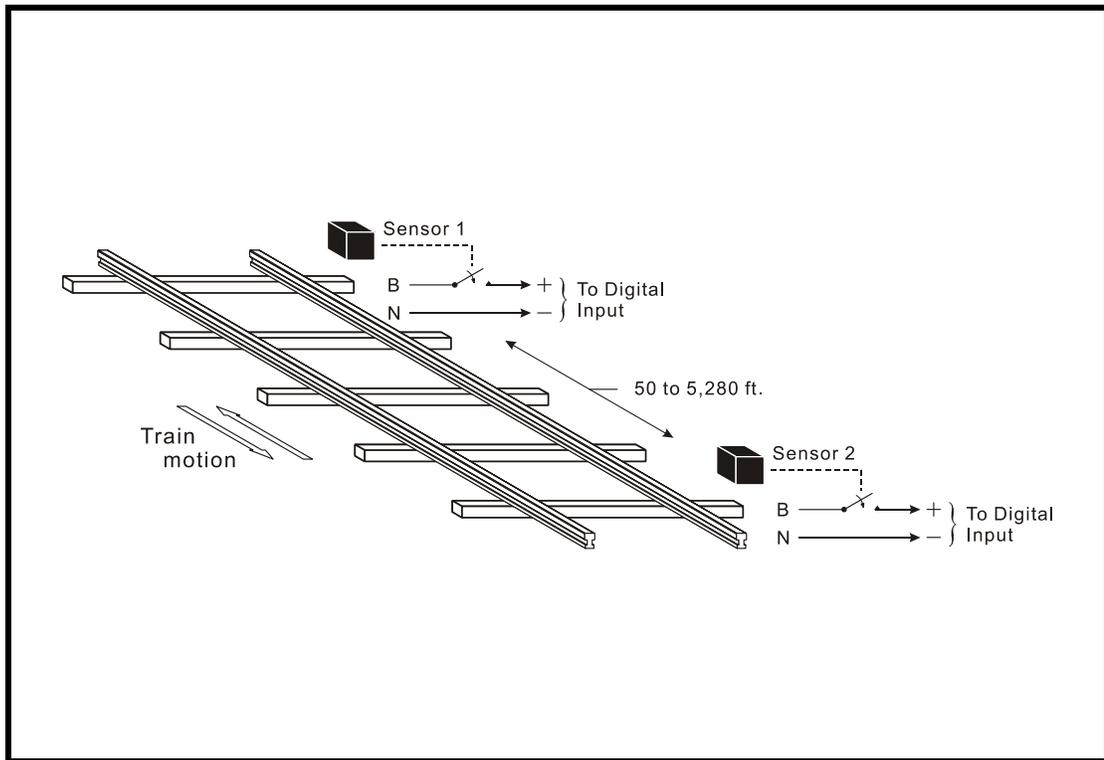


Figure 10 - Typical Installation - Train Speed Monitor

### First/Second Sensor Input

The First and Second Sensor Input fields can be assigned any valid Digital Input number. Leading zeros are not required. The values can be non-consecutive or in ascending or descending order. The Train Speed Monitors report motion in either direction with a positive value.

The two Digital Inputs assigned to the train sensors are subject to the following treatment.

- Previously enabled Clock Sync, Flashing Input and Measure Flash Rate settings will be automatically disabled.
- Contact closures from either sensor will not result in Event Records being logged to memory.
- The Detection Time for each input will be automatically set to .05 seconds to de-bounce the sensor output signals.
- The user will not be able to alter the Clock Sync, Flashing Input, Measure Flash Rate and Detection Time settings. To regain control of these settings the Train Speed Monitor must first be disabled.

**Note** To disable the Train Speed Monitor enter a zero value in any of the four fields.

### Distance between Sensors

The distance between each sensor must be known in order to calculate the speed of the train. The value must be in the range from 50' to 5280'. The value must be entered as a whole number.

**Tip** Greater values of distance (e.g, 500' instead of 50') will result in improved speed accuracy.

**Threshold**

The Threshold setting establishes a Limit Value which, if exceeded, will result in an Event Record being created. The Threshold setting must be entered as a whole number, in miles per hour. It must be in the range from 5 to 180mph.

A train found to be in motion at a rate greater than the Threshold value will have its speed reported as a System Event Record. System Events are also used to log power on and off occurrences. System Events are numbered like other inputs. They are identified with an S prefix. The System Event number is listed in parenthesis to the right of the Train Speed Monitor number. Refer to the section entitled “System Events” on page 104 for additional information.

**Network (N) - Primary Unit**

The Network command is used to configure the Ethernet Port of the Primary Unit. It is also used to identify the IP Address associated with each of the Secondary Units. A set of 24 user-assigned fields with data similar to that shown below will be displayed after the command is selected. The first eight fields define the Ethernet Port of the Primary Unit.

**Note** This section concerns assignments that pertain to the Primary Unit’s Ethernet Port. It describes the procedure for assigning the IP Address, Subnet Mask, UDP Ports, etc. Similar assignments must be made to each of the Secondary Units. However, a different command is used that involves directly accessing the Secondary Unit via its Terminal Port. Refer to the section entitled “Network (N) - Secondary Unit” on page 50.

```

                                Network Setup
                                -----
IP Address                       192.168.  0.100
Subnet Mask                      255.255.255.  0
Gateway                          0.  0.  0.  0
Ethernet MAC Address             00-08-DC-00-00-03
TCP/IP Port                      5000
TCP/IP mode                      Raw TCP/IP
Primary UDP Port                 4001
Secondary UDP Port               4000
Secondary IP Addresses:
1: 192.168.  0.101      9:  0.  0.  0.  0
2: 192.168.  0.102     10: 0.  0.  0.  0
3: 192.168.  0.103     11: 0.  0.  0.  0
4:  0.  0.  0.  0      12: 0.  0.  0.  0
5:  0.  0.  0.  0      13: 0.  0.  0.  0
6:  0.  0.  0.  0      14: 0.  0.  0.  0
7:  0.  0.  0.  0      15: 0.  0.  0.  0
8:  0.  0.  0.  0      16: 0.  0.  0.  0

```

A description of each field follows.

**IP Address**

The IP Address must be set in accordance with the requirements of the LAN or the same as the address used by the TCP/IP connection of the PC when it is connected to the system’s Ethernet Switch. The initial setting is 192-168-0-100.

### **Subnet Mask**

The Subnet Mask must also be set in accordance with the requirements of the LAN. A value of 255-255-255-0 should be acceptable. The initial setting is 255-255-255-0.

### **Gateway**

If a Gateway is being used by the LAN it too must be set in accordance with the LAN requirements. A setting of 0-0-0-0 is acceptable for a PC connected to the system's Ethernet Switch or a LAN when communications through a Gateway are not required. The initial setting is 0-0-0-0.

### **Ethernet MAC Address**

The first three numbers that comprise the MAC Address must be 00-08-DC. They must not be changed as they are uniquely associated with the Ethernet module used by the CWR-264P. The remaining three numbers must not be shared by any other Ethernet device on the LAN. The initial setting is 00-08-DC-aa-bb-cc, where aa-bb-cc is the serial number assigned by MICRO-AIDE to the Primary Unit. By way of example, a Primary Unit with a serial number of 10142 will have a factory assigned MAC Address of 00-08-DC-00-01-01-42. This address is guaranteed to be unique.

### **TCP/IP Port**

The TCP/IP Port assignment must also be selected in accordance with the requirements of the LAN. It is the port used by devices to communicate with the Primary Unit that are external to the system. For a PC connected to the system's Ethernet Switch any value greater than 1024 is acceptable. The initial setting is 5000.

### **TCP/IP Mode**

A Selection Field is used to assign the TCP/IP Mode setting. Press the **Spacebar** to select either Raw TCP/IP or Telnet. Generally, the Raw TCP/IP setting is acceptable. However, the Telnet setting must be used when the Setup Database is being uploaded or downloaded. These data transfers rely upon the Xmodem protocol. Xmodem is data transparent over TCP/IP only when the Telnet setting is selected. Raw TCP/IP is the initial setting.

### **Primary UDP Port**

The Primary UDP Port is used by the Primary Unit to receive data from the Secondary Units. It is only associated with the intra-system LAN. The initial setting is 4001.

### **Secondary UDP Port**

The Secondary UDP Port is used by the Primary Unit to transmit data to the Secondary Units. It is only associated with the intra-system LAN. The initial setting is 4000.

### **Secondary IP Addresses**

The number of Secondary Addresses to be assigned relate directly to the number of Secondary Units the system will comprise. Each Secondary Unit must have a unique address. It must be assigned in accordance with the Subnet Mask parameters. The initial setting starting with

Secondary Unit number one is 192-168-0-101. The last three digits of each successive unit are initially assigned as 102, 103, etc.

The Secondary Unit number reported by the Network command (i.e., 1 to 16) controls the range of Digital and Analog Input numbers in accordance with the following table. To avoid gaps in the numbering sequence Secondary IP Addresses must be assigned contiguously (i.e starting at unit 1 followed by unit 2, etc.)

Secondary Unit Number	Digital Inputs	Analog Inputs
1	D0001 - D0256	A001 - A008
2	D0257 - D0512	A009 - A016
3	D0513 - D0768	A017 - A024
4	D0769 - D1024	A025 - A032
5	D1025 - D1280	A033 - A040
6	D1281 - D1536	A041 - A048
7	D1537 - D1792	A049 - A056
8	D1793 - D2048	A057 - A064
9	D2049 - D2304	A065 - A072
10	D2305 - D2560	A073 - A080
11	D2561 - D2816	A081 - A088
12	D2817 - D3072	A089 - A096
13	D3073 - D3328	A097 - A104
14	D3329 - D3584	A105 - A112
15	D3585 - D3840	A113 - A120
16	D3841 - D4096	A121 - A128

*Table 4 - Digital and Analog Input Assignments*

Press the **ESC** key after all of the fields are properly defined. The following message will be displayed if the MAC Address was altered.

```
CHANGE MAC ADDRESS (normally 00-08-DC-xx-xx-xx), are you SURE?
No Yes
```

Select Yes to proceed. Finally, the following message will confirm the change(s) to be made.

```
Network settings changed, restart network now?
No Yes
```

**Note** The 24 fields that comprise the Ethernet Port settings can only be altered by use of the Network command or by uploading a different Setup Database. The Reset System command will not change any of the Network settings.

## Print Setup Data (P)

The Print Setup Data command can be used to display the setup parameters assigned by the user. The following menu of sub-commands is displayed after selecting the Print Setup Data command.

```
Print Setup Data
P Print All
E Print Event Names
I Print Input Names/Identifiers
D Print Detect Times/Flash Enable
A Print Analog Configuration
V Print Virtual Inputs
T Print Timer Configuration
M Print Measure Speed Parameters
N Print Network Settings
S Print System Parameters
```

The Print All command can be used at the end of the Setup Procedure to display the entire Setup Database. The remaining commands are used to display specific portions of the Setup Database.

The following message will be displayed after selecting one of the print commands.

```
Print to:
Screen
Printer
```

Selecting Screen will direct the output to the port currently in use (i.e., Terminal Port, Ethernet Port or modem). Selecting Printer will send the data to the Printer Port. The inkjet or laserjet printer must be connected to the CWR-264P Printer Port via a standard parallel printer cable. The printer must be online. At the completion of printing the following message will be displayed.

```
Report Done
hit any key to continue
```

The user must press the “Page Eject” button at the printer to print the last page of the report.

If the printer is not turned on, is not online or is not loaded with paper the following message will be displayed.

```
PRINTER ERROR
hit any key to continue
```

The problem should be corrected and another attempt performed.

**Tip** The default or currently selected font of the printer will be used by the print feature. To improve the readability of the report the printer should use a mono-spaced font like COURIER. This will force the characters in each row of the report to line up in straight columns.

**Tip** The Print All command when used with the Screen option will issue a lengthy stream of data that will exceed the viewing capacity of a single terminal screen. The user may wish to temporarily pause the data for better viewing. Refer to the procedure entitled “Data Flow Control” on page 22.

## Transfer Files (T)

A CWR-264XC will require a considerable amount of data entry if every input is assigned an Input Name, Detection Time, Event Name pair, etc., that differs from its factory default value. In the event of an accidental loss of data memory (e.g., a reset performed by mistake) each Input Name, Detection Time and Event Name pair will need to be re-entered. The Transfer Files command provides the user with a quick and simple data exchange alternative to re-entering the Setup Database by hand.

The Download Setup Data command is used to transmit the Setup Database to a data storage system. A PC running a communications program like HyperTerminal or Procomm Plus makes an ideal storage system. A file containing the setup parameters can be permanently saved on the hard disk or a diskette for later retrieval via the Upload Setup Data command.

To initiate a download or upload of the Setup Database, execute the Transfer Files command. The following sub-menu will be displayed. Both procedures are described in the following sections.

```
Xmodem File Transfer
D Download Setup Data CWR to PC
U Upload Setup Data PC to CWR
```

## Saving the Setup Database (D)

Before the Setup Database can be saved the PC and communications program must be properly configured. The following list describes the correct configuration.

- **Transfer protocol:** Xmodem.
- **Connection:** If a Terminal Port is being used select Direct connect-Com1 or Direct connect-Com2 (whichever is available). If the Ethernet Port is being used select a TCP/IP connection. If the modem is being used the host modem must be logged-on with the CWR-264P.
- **Baud rate:** as required by the Terminal Port, set to N-8-1.

**Note** The failure to select the proper transfer protocol (i.e., Xmodem) is the most common mistake made in this procedure.

To save the Setup Database to a PC file select the Download Setup Data command. The following message will be displayed.

```
Sending Setup Data via XMODEM... (Ctrl-X to stop)
```

The steps necessary to complete the download depend upon which communications application is being used. The following sections describe the HyperTerminal and Procomm Plus methods, respectively. Windows XP was used in the following procedures. Later versions of these programs may be slightly different. However, the fundamental approach will remain valid.

### **HyperTerminal**

1. With the mouse, click on the Transfers command, then the Receive File ... command. The Receive File dialog box will open. Verify that the Xmodem protocol is selected.
2. Select the correct disk drive and folder. Click the Receive button. The Receive Filename dialog box will open.
3. Enter a filename (e.g., setup\_10.bin). The three-character file extension must be defined. If the various settings are correct click on the OK button.
4. An information box will automatically open. It will indicate the progress of the transfer. After a few seconds (depending upon the Baud rate) the information box will close automatically to indicate a successful transfer.

### **Procomm Plus**

1. With the mouse, click once on the Receive File icon near the top center of the Procomm Plus window. The icon appears as a downward pointing arrow. The Procomm Plus Receiving File using Xmodem dialog box will open.
2. Select the correct disk drive, folder and filename (e.g., setup\_11.xmd). If the various settings are correct click on the Save button.
3. An information box labeled Xmodem will appear. It will indicate the progress of the transfer. After a few seconds (depending upon the Baud rate) the information box will close and the PC may beep to indicate that the transfer is complete.
4. If the transfer is successful a message similar to "Transfer complete - setup\_11.xmd" will appear in the lower left-hand corner of the Procomm Plus window.

After a successful completion of the transfer the CWR-264P will issue the following message.

```
Transfer complete  
Press any key to continue
```

The following message is issued if the file is not promptly opened after initiating the download.

```
Transfer error
Press any key to continue
```

The user can then make a second attempt by selecting the Download Setup Data command again.

## Restoring the Setup Database (U)

Before the Setup Database can be restored to the CWR-264P it must have been previously saved. Refer to the procedure entitled “Saving the Setup Database (D)” on page 47. The PC and communications program must be properly configured before the Setup Database can be restored. The following list describes the correct configuration.

- **Transfer protocol:** Xmodem.
- **Connection:** If a Terminal Port is being used select Direct connect-Com1 or Direct connect-Com2 (whichever is available). If the Ethernet Port is being used select a TCP/IP connection. If the modem is being used the host modem must be logged-on with the CWR-264P.
- **Baud rate:** as required by the Terminal Port, set to N-8-1.

**Note** The failure to select the proper transfer protocol (i.e., Xmodem) is the most common mistake made in this procedure.

To restore the Setup Database to the CWR-264P from a PC file select the Upload Setup Data command. The following message will be displayed.

```
Are you SURE you want to upload new Setup Data from PC to CWR?
No Yes
```

Select No to abort the upload. Select Yes to proceed. If the user elects to proceed with the upload the following message will be displayed.

```
CCCCC Receiving Setup Data via XMODEM... (Ctrl-X to stop)
```

The sequence of C characters indicates the recorder is awaiting the Xmodem file.

The steps necessary to complete the upload depend upon which communications application is being used. The following paragraphs describe the HyperTerminal and Procomm Plus methods, respectively. Windows XP was used in the following procedures. Later versions of these programs may be slightly different. However, the fundamental approach will remain valid.

### HyperTerminal

1. With the mouse, click on the Transfers command, then the Send File ... command. The Send File dialog box will open. Verify that the Xmodem protocol is selected.

2. Select the correct disk drive, folder and filename (e.g., setup\_10.bin). If the various settings are correct click the Send button.
3. An information box will automatically open. It will indicate the progress of the transfer. After a few seconds (depending upon the Baud rate) the information box will close automatically to indicate a successful transfer.

### Procomm Plus

1. With the mouse, click once on the Send File icon near the top center of the Procomm Plus window. The icon appears as an upward pointing arrow. The Procomm Plus Send File using-Xmodem dialog box will open.
2. Select the correct disk drive, folder and filename (e.g., setup\_11.xmd). If the various settings are correct click on the Open button.
3. An information box labeled Xmodem will appear. It will indicate the progress of the transfer. After several seconds and a pause (depending upon the Baud rate) the information box will close and the PC may beep several times to indicate that the transfer is complete.
4. If the transfer is successful a message similar to "Transfer complete - setup\_11.xmd" will appear in the lower left-hand corner of the Procomm Plus window.

After a successful completion of the transfer the CWR-264P will issue the following message.

```
Upload completed  
Press any key to continue
```

The following message will be issued if the file is not promptly sent after initiating the upload.

```
Transfer error  
Press any key to continue
```

The user can then make a second attempt by selecting the Upload Setup Data command again.

## Network (N) - Secondary Unit

The Setup Procedure has thus far required the user to only access the recording system via the Primary Unit. However, to assign the network settings used by a Secondary Unit it is necessary to directly access the unit via its Terminal Port. Changing the network setting of a Secondary Unit requires the user to first log into the unit via a PC. The procedure for doing so is listed below.

1. Using HyperTerminal or Procomm Plus verify that the 38,400 Baud, ANSI and N-8-1 settings are still in use by the PC.
2. Connect the PC to the Terminal Port of the Secondary Unit using the same RS-232 cable previously connected to the Primary Unit.

3. The Secondary Unit will issue a password challenge.
4. The word **LOOKWORD** must be typed using only upper-case letters. After pressing the **Enter** key the user will be logged-on with Restricted Access privileges only, except that changes to the network settings are permitted.

The Main Menu of the Secondary Unit will be displayed. The user interface of the Secondary Unit is identical to that used by the Primary Unit. Commands can be selected by either moving the highlight or pressing the single letter code associated with the command.

After selecting the Network command a collection of seven fields similar to the following will be displayed.

Network Setup	
-----	
IP Address	192.168. 0.101
Subnet Mask	255.255.255. 0
Gateway	0. 0. 0. 0
Ethernet MAC Address	00-08-DC-00-00-01
UDP Port	4000
Primary IP	192.168. 0.100
Primary Port	4001

**Note** The network settings used by each Secondary Unit must be assigned in accordance with those settings used by the Primary Unit. Refer to the section entitled “Network (N) - Primary Unit” on page 43 for additional information.

A description of each field follows.

### **IP Address**

The IP Address must be identical that reported by the Primary Unit for the Secondary Unit in question. The initial settings are 192-168-0-101 through 192-168-0-016.

### **Subnet Mask**

The Subnet Mask must also be identical to that reported by the Primary Unit. The initial setting is 255-255-255-0.

### **Gateway**

Since the LAN used by the recording system never requires a Gateway, the Gateway setting can be left as 0-0-0-0. The initial setting is 0-0-0-0.

### **Ethernet MAC Address**

The first three numbers that comprise the MAC Address must be 00-08-DC. They must not be changed as they are uniquely associated with the Ethernet module used by the CWR-264S. The remaining three numbers must not be shared by any other Ethernet device on the LAN. The initial setting is 00-08-DC-aa-bb-cc, where aa-bb-cc is the serial number assigned by MICRO-AIDE to the Secondary Unit in question. By way of example, a Secondary Unit with a

serial number of 10143 will have a factory assigned MAC Address of 00-08-DC-00-01-01-43. This address is guaranteed to be unique.

### UDP Port

The UDP Port is used by the Secondary to receive data from the Primary Unit. It is only associated with the intra-system LAN. It must be identical to that reported by the Primary Unit as the Secondary UDP Port. The initial setting is 4000.

### Primary IP

This setting is the IP Address of the Primary Unit. It must be identical to that reported by the Primary Unit as the IP Address. The initial setting is 192-168-0-100.

### Primary Port

The Primary Port is used by the Secondary Unit to transmit data to the Primary Unit. It is only associated with the intra-system LAN. It must be identical to that reported by the Primary Unit as the Primary UDP Port. The initial setting is 4001.

Press the **ESC** key after all of the fields are properly defined. The following message will be displayed if the MAC Address was altered.

```
CHANGE MAC ADDRESS (normally 00-08-DC-xx-xx-xx), are you SURE?  
No Yes
```

Select Yes to proceed. Finally, the following message will confirm the change(s) to be made.

```
Network settings changed, restart network now?  
No Yes
```

## Log Off (X)

The Log Off command is used to terminate Administrative and Restricted Access sessions. The command applies to the Primary and Secondary Units. If the previous user logs off of the system, access can be regained only by entering the correct password. If the previous user fails to log off, a second user will be allowed access without entering a correct password.

**Note** All sessions should be terminated by executing the Log Off command.

To log off of the recorder press the **X** key. The following message will be displayed.

```
About to Log Off, are you sure?  
No Yes
```

If the user proceeds with the log off the current session will be immediately terminated.

This completes the Setup Procedure for the CWR-264XC recording system. The system is now prepared to log events in accordance with the setup performed by the user. Since the installation and setup of the system are critical to how the CWR-264XC will perform, it is advisable to review the steps taken earlier.

The next chapter describes how to operate the CWR-264XC.



# OPERATION

## Introduction

This chapter describes how to operate the CWR-264XC from either a keyboard equipped printer or PC running a suitable communications program. Local (i.e., on-site) as well as remote methods of operating the recording system are described. Before the system can be operated it must be properly installed and set up. A PC or printer must be online with the CWR-264P. The use of the LCD panel and keypad are described in the next chapter.

## Multi-User Operation

A unique feature of all MICRO-AIDE recorders is their ability to handle simultaneous operation from multiple users via either of the Terminal Ports, Ethernet Port, modem or front panel keypad. This multi-user capability eliminates the annoying practice in some recorders of one user effectively locking-out a second or third user.

## Remote Operation

The setup procedures and operational capabilities of the CWR-264XC can be exercised remotely since the CWR-264P is equipped with an internal modem and Ethernet Port. The modem will operate at speeds up to 33,600 Baud. It provides industry standard error correction and data compression features. A modem or Ethernet equipped PC running a communications program (e.g., GEA, HyperTerminal or Procomm) makes an ideal remote access system. Event Records and other data from several remote CWR-264XC recording systems can be easily gathered and saved to either a hard disk or diskette file.

There are a few steps the remote user or host system must perform before remote access is possible. Each of these steps is described in the sections that follow.

## Establishing a Modem Connection

A standard telephone line must be attached to the modem of the CWR-264P. To access the Primary Unit the host system must dial the telephone number of the CWR-264P and wait for an answer. The Primary Unit's modem will answer after a predetermined number of rings. Refer to the section entitled "Ring Count" on page 27. The modems will then handshake. The handshake

ensures that the modems can communicate with each other at an appropriate speed. A connection is established upon the successful completion of the handshake.

**Note** The CWR-264P will only permit reliable connections to be established. The host modem should be programmed for MNP 2-4 or LAP-M operation.

## Establishing an Ethernet Connection

Before an Ethernet connection can be established the Primary Unit's Ethernet Port must be properly configured. An IP Address and Port Number must be assigned. The correct procedure for doing so is described in the section entitled "Network (N) - Primary Unit" on page 43.

After the Primary Unit's Ethernet Port is configured perform the following steps to establish an Ethernet connection.

1. Connect the PC or LAN to the recording system's Ethernet Switch using a CAT-5 cable.
2. Configure the communications application (e.g., HyperTerminal) to connect using a TCP/IP port.
3. Within the communications application enter the Primary Unit's IP Address and Port Number as the target IP Address and associated Port Number. HyperTerminal refers to the target device as a host.
4. Click the icon or execute the command that initiates the connection.

A successful connection is indicated by a log on password request regardless of the interconnection method employed.

## Entering the Password

Immediately after a connection is established the CWR-264P will issue a password request similar to the following.

```
Model CWR-264P Event Recorder. Ver 1.07 (C) 2004 MICRO-AIDE Inc.  
***** NOT SET *****  
Event storage capacity: 1816045  
Enter password:
```

The host system must issue the correct password followed by an **Enter**. Passwords are defined in accordance with the procedure entitled "Administrative and Restricted Passwords" on page 27.

**Note** The default Administrative and Restricted Access passwords are **PASSWORD** and **LOOKWORD**, respectively. Passwords are case sensitive.

The host system is given three attempts to enter the correct password. A third error will result in a disconnect by the Primary Unit. This procedure prevents unwanted users from accessing the system.

After the password is entered the user will be able to operate the system in a manner identical to that specified by local operation. Accordingly, the CWR-264P will display the Main Menu of commands. Refer to the sample data entitled “Main Menu” on page 15.

## How to Operate the CWR-264XC

An explanation of each operational command is included in the remaining sections of this chapter. Operational commands may be executed in any sequence. The user may wish to perform operations in one sequence and then, depending upon the observed data, perform a different sequence of commands. Each command is listed by its name (as it appears in the Main Menu) followed by its command code contained within parenthesis.

**Note** For the remainder of this chapter it is assumed that the user is accessing the recording system via the CWR-264P (i.e., Primary Unit).

### Query Events (Q)

The Query Events command provides the principal means by which Event Records are inspected. It allows the user to inspect events for a particular time frame and/or specific set of inputs. Additionally, the Query Events command includes several data output options that can be selectively employed depending upon the user’s data display requirements.

A typical response to the Query Events command is shown below.

```

                                Select Range of Dates
04-06-05  04-07-05  04-08-05  04-09-05  04-10-05  04-11-05  04-12-05  04-13-05
04-14-05  04-15-05  04-16-05  04-17-05  04-18-05  04-19-05  04-20-05  04-21-05
04-22-05  04-23-05  04-24-05  04-25-05  04-26-05  04-27-05  04-28-05  04-29-05
04-30-05  05-01-05  05-03-05

Use arrow keys to move, Space=start selection, Enter=accept, ESC=cancel

```

The data array forms a table of dates in MM-DD-YY format. The table indicates that at least one Event Record was logged in memory for each day listed. Days where no records were logged will

not be included in the table (e.g., 05-02-05 in the above). The CWR-264P can store Event Records for 128 different dates provided the event storage capacity is not exceeded.

**Note** The CWR-264P utilizes a rotating memory. Records from the 129th day will automatically overwrite records from the first day regardless of how many records are stored in memory.

The first step in using the Query Events command is to select the date or range of dates that the user wishes to inspect. To select a single date simply position the highlight to the desired date and press the **Enter** key. To select a range of dates follow the steps listed below.

1. Using the appropriate arrow keys highlight the first date in the range.
2. Press the **Spacebar** to anchor one end of the range to be highlighted.
3. Press the appropriate arrow keys until each date in the desired range is highlighted.
4. Press the **Enter** key to accept the highlighted range of dates.

The **ESC** key can be pressed at any time to cancel the selection. The user will then be returned to the Main Menu. If, however, the selection is accepted an array of Selection and Edit Fields entitled “Query Report” will be displayed. A sample Query Report is shown below.

```
                                Query Report
Start Date:                      04-06-05
Start Time:                      00:00:00

End Date:                        04-06-05
End Time:                        23:59:59

Record Details:                  All Details (4)

Reverse order:                   No
Report Type:                     Dump

Inputs:
(blank=all)

                                [F1]=Execute Report, ESC=cancel
```

The Event Records of interest to the user can be further qualified by the six fields listed in the Query Report. The use of each field is described in the sections that follow.

## **Start Time**

Event Records that are time stamped after the assigned Start Time (for the day selected as the Start Date) will be issued by the Query Command. The Start Time can be assigned any value from 00:00:00 to 23:59:59. The default setting is always 00:00:00. The Start Time must be entered in military format.

## **End Time**

Event Records that are time stamped before the assigned End Time (for the day selected as the End Date) will be issued by the Query Command. The End Time can be assigned any value from

00:00:00 to 23:59:59. The default setting is always 23:59:59. The End Time must be entered in military format.

## Record Details

The CWR-264P can format Event Records in five different ways. Press the **Spacebar** to select one of the five formatting options described below. As a convenience to the user the last option selected is automatically pre-selected the next time the command is used.

A complete explanation of Event Record formats is included at the end of this chapter. Refer to the section entitled “Event Record Formats” on page 66. The numbers included in each of the headings listed below specify the number of lines of text each formatting option will create.

### All Details (4)

The status of each Digital Input in a group of 64, the level of each Analog Input for the selected Secondary Unit and the status of each Virtual Input is listed with data concerning the input that created the record.

### Digital Details (2)

The status of each Digital Input in a group of 64 is listed with data concerning the input that created the record.

### Analog Details (2)

The level of each Analog Input for the selected Secondary Unit is listed with data concerning the input that created the record.

### Virtual Details (2)

The status of each Virtual Input is listed with data concerning the input that created the record.

### No Details (1)

Only information concerning the input that created the record is listed.

## Reverse Order

The Reverse Order option can be set to either No (default setting) or Yes. The default setting will result in the oldest records being issued first. If enabled, the Reverse Order option will issue the most recent records first. They will be followed by older records. In either case, Event Records are always issued in chronological sequence.

## Report Type

The Report Type field can be set to Dump (default setting), Print, Browse or Comma. The proper selection depends upon the user's requirement. Each option is described in the following sections.

## Dump

The Dump option will issue Event Records in a continuous stream. The streaming of records will only cease when the last record is issued or the user executes a Pause or Abort command. Refer to the section entitled “Data Flow Control” on page 22. Generally, the Dump option is used if a large number of records are to be inspected.

**Note** The Dump option is generally used if Event Records need to be captured to a PC file.

## Print

The Print option allows the user to make a locally printed hard copy report that includes all of the Event Records previously selected. Before selecting the Print option the printer must be connected to the Printer Port of the CWR-264P. A standard parallel printer cable is required. The printer must be turned on, online and supplied with paper. The user must remember to press the “Page Eject” button on the printer to print the last page of the report.

**Tip** The default or currently selected font of the printer will be used by the print feature. To improve the readability of the report the printer should use a mono-spaced font like COURIER. This will force the characters in each row of the report to line up in straight columns.

## Browse

The Browse option allows the user to inspect a set of records one screen at a time. It will typically display eleven one-line records, seven two-line records or four four-line records per screen. The same set of records will be displayed indefinitely until the user presses an arrow key to review additional records. The Browse option is most useful when a limited number of records in a narrow time frame need to be reviewed.

A completely new screen of records can be displayed by pressing the up and down arrow keys. A single new record can be displayed by pressing the left and right arrow keys. The last line of text in each screen explains the use of the arrow keys.

## Comma

The Comma option formats the Event Record data so that it can be easily imported to a spreadsheet or database application such as Excel® or Access®, respectively. This option takes the various data fields that comprise a record and separates them with a comma. Intervening spaces are eliminated. The processing application will place the record fields into cells or fields that satisfy its own processing requirements. This formatting technique is frequently referred to as Comma Separated Values (CSV).

**Note** When the Record Type is set to Comma the Record Details setting is ignored. All Event Records for the selected time period will be issued and similarly formatted.

Listed below is a typical response to the Query Events command when the Record Type is set to Comma. In the interest of brevity only a partial listing of Digital Input states is shown. Only two Event Records are listed. The text shown between brackets (i.e., [ and ]) is included only for descriptive clarity. They would not normally appear in the report.



Input Source	CSV Input Number
D1 to D4096 (Digital)	1 to 4096
A1 to A128 (Analog)	4097 to 4224
V1 to V32 (Virtual)	4225 to 4256
T1 to T999 (Timer)	4257 to 5255
S1 (Power - Primary Unit)	5256
S2, S3 (Temperature - Primary Unit)	5257, 5258
S4 to S19 (Train Speed Monitors 1 to 16)	5259 to 5274
S20 (Power - Secondary 1)	5275
S21, S22 (Temperature - Secondary 1)	5276, 5277
S23 (unassigned)	5278
S24 (Power - Secondary 2)	5279
S25, S26 (Temperature - Secondary 2)	5280, 5281
S27 (unassigned)	5282
S28 to S79	5283 to 5334
S80 (Power - Secondary 16)	5335
S81, S82 (Temperature - Secondary 16)	5336, 5337

Table 5 - CSV Input Numbers

## Inputs

The Inputs field allows the user to inspect Event Records from specific inputs. The default setting (Inputs field is blank) will issue records from all inputs. To select specific inputs a valid Input Number must be entered. Digital Inputs are entered as **D**nnnn where nnnn is a number between 1 and 4096. Analog Inputs are entered as **A**nnn where nnn is a number between 1 and 128. Virtual Inputs are entered as **V**nn where nn is a number between 1 and 32. Timer Inputs are entered as **T**nnn where nnn is a number between 1 and 999. Leading zeros are not required.

Multiple inputs can be selected by using the following methods. Separate two Input Numbers by a single space character. Select a contiguous range of inputs by including a - (hyphen) between two n numbers. The contiguous range option can be applied to all inputs regardless of type.

The set of Input Numbers must be terminated by pressing the **Enter** key. The following example illustrates a typical Inputs field entry.

```
Inputs: D2 d5-8 a3 d256 v16 A6-8
(blank=all)
```

As the example indicates, the input type designator can be entered as an upper- or lower-case letter. Input Numbers can be entered without regard to sequence. Event Records for Digital Inputs 2, 5, 6, 7, 8, 256, Analog Inputs A3, A6, A7, A8 and Virtual Input V16 will be issued.

After the inputs are selected the user must press the **F1** function key to complete the command. Event Records will then be issued in accordance with all of the settings selected by the user. Event Records will automatically cease being issued when the Report Type is set to Dump, Print or Comma. After the last Event Record a message similar to the following will be displayed.

```
Number of records = 126  Checksum = F515
End of report
Hit any key to continue
```

The exact number of records included in the report is always specified. A checksum is also included. The checksum is calculated from the first character of the first record through the last character of the last record. Any report that issues the same set of records will always list the same checksum value regardless of when the report was generated. Accordingly, alteration of the record data can be detected provided the original data and checksum are known.

## View Events (V)

The View Events command allows the user to display Event Records in real-time. Immediately after an event is detected its corresponding Event Record will be issued to one of the Terminal Ports, Ethernet Port, modem or Printer Port. This command can be very useful in tracking events that are occurring while the user is online with the Primary Unit. It can also be used effectively during the Initial Check-out Procedure to verify that each input is properly cabled.

The following message will be issued after the command has been selected.

```

                                View Events Report
                                Record Details:    All Details (4)
                                Output To:         Screen
Inputs:
(blank=all)

                                [F1]=Execute Report, ESC=cancel
```

The Event Records of interest to the user can be qualified by the three fields listed in the View Events Report. The use of each of these fields is described in the following sections.

### Record Details

This setting allows the user to select the level of detail to be included in each Event Record. Refer to the section entitled “Event Record Formats” on page 66 for additional information regarding the use of this field.

### Output To

The Output To field includes the Screen and Printer options. Both are described below.

### Screen

Selecting the Screen option will direct the Event Records to the peripheral device connected to one of the Terminal Ports, Ethernet Port or modem.

### Printer

The Printer option allows the user to make a locally printed hard copy report that includes selected Event Records. Before selecting the Printer option the printer must be connected to the Printer Port of the CWR-264P. A standard parallel printer cable is required. The printer must be turned on, online and supplied with paper. The user must remember to press the “Page Eject” button on the printer to print the last page of the report.

**Tip** The default or currently selected font of the printer will be used by the print feature. To improve the readability of the report the printer should use a mono-spaced font like COURIER. This will force the characters in each row of the report to line up in straight columns.

### Inputs

The use of the Inputs field allows the user to review records from specific inputs. The use of this field is described in “Inputs” on page 62.

After the selection fields are assigned press the **F1** function key to start the report. The Primary Unit will continue to print records as they occur in real-time. Press the **Esc** key to stop the report.

## Live Status (L)

The Live Status command provides a single-screen snapshot of the present state of every input (i.e., Digital, Analog and Virtual Inputs) associated with a specific Secondary Unit. The state or measured value of each input will be continuously and automatically updated. The Live Status report indicates the state of Analog and Virtual Inputs by their user-assigned Input Identifier and Event Names. Input Identifiers and Event Names are described in “Input Names/Identifiers (I)” on page 36 and “Event Names (E)” on page 36, respectively.

**Note** To properly view the Live Status report the PC must be configured to emulate an ANSI terminal.

An example of the Live Status report is shown below.

```

79 Degrees F      Live Status      08:31:51 04-06-05
D0257-D0288 X . . . . .
D0289-D0320 . . . . .
D0321-D0352 . . . . .
D0353-D0384 . . . . .
D0385-D0416 . . . . .
D0417-D0448 . . . . .
D0449-D0480 . . . . .
D0481-D0512 . . . . .

Alarm_1: Active  VInput02: Off    VInput03: Off    VInput04: Off
VInput05: Off    VInput06: Off    VInput07: Off    VInput08: Off
VInput09: Off    VInput10: Off    VInput11: Off    VInput12: Off
VInput13: Off    VInput14: Off    VInput15: Off    VInput16: Off
VInput17: Off    VInput18: Off    VInput19: Off    VInput20: Off
VInput21: Off    VInput22: Off    VInput23: Off    VInput24: Off
VInput25: Off    VInput26: Off    VInput27: Off    VInput28: Off
VInput29: Off    VInput30: Off    VInput31: Off    VInput32: Off

Bat_24  AInpt010  AInpt011  AInpt012  AInpt013  AInpt014  AInpt015  Battery
Good    Hi_Curr    Off       Off       Off       Off       Off       Normal
24.3Vdc 13.5Adc   0.0Vdc   0.0Vdc   0.0Vdc   0.0Vdc   0.0Vdc   13.4Vdc
[ESC]=exit [F1]=next page [F2]=prev page

```

The Live Status report includes a header that lists the present time, date and temperature inside the Secondary Unit. The state of each Digital Input is listed in the eight rows that follow the header. An X or . (period) character is used to indicate the state as either active or idle, respectively. The next eight rows list the Input Identifiers and Event Names for the 32 Virtual Inputs. The next three rows list Analog Input data. The Input Identifier, Event Name and measured value are listed from top to bottom, respectively. The last line of text provides directions for viewing the state of inputs from other Secondary Units.

The sample data indicates that Digital Input 257 is active. The other Digital Inputs are idle. There is an active alarm condition reported by Virtual Input V1. The DC voltage source connected to Analog Input A9 is acceptable at 24.3Vdc and is therefore reported as being in a Good state. Finally, the Battery potential at Analog Input A16 is 13.4Vdc, which is considered to be Normal.

The Live Status command can be very useful in verifying that inputs are wired and labeled correctly. Additionally, it can be used to determine if the inputs are operating properly and if the assigned Detection Times are set in accordance with the characteristics of the monitored circuits.

## Measure Flash Rate (M)

Typical railroad operating procedures require that the flashing rate of crossing signals be periodically measured and reported. The Measure Flash Rate command allows the CWR-264XC recording system to precisely determine the flashing rate of a circuit.

Enabling the Measure Flash Rate feature imposes several pre-conditions upon the Setup Database of the system. The circuit to be measured must be connected to a Digital Input. The selected Digital Input will be assigned a Detection Time of .1 seconds. This will insure that the flashing pulses will not be filtered out by the de-bounce properties of the Detection Time feature. Refer to “Detection Times” on page 30. Finally, the selected Digital Input cannot be enabled as the Clock Sync Input. Refer to “Clock Sync Input” on page 28 for additional information.

**Note** The CWR-264P will automatically adjust the Digital Input's Detection Time setting to .1 seconds and disable its Clock Sync Input setting when the Measure Flash Rate command is executed. These settings will be automatically restored to their prior values when the measurement is concluded.

The following Edit Fields will be displayed after the Measure Flash Rate command is selected.

```
Measure Flash Rate
Input to Measure: D0001
[F1] to measure, [ESC] to quit
```

The user must enter a valid Digital Input number in the Input to Measure field. The entry must take the form Dnnnn, where nnnn must be in the range from 1 to 4096. Leading zeros are not required. Press the **Enter** key to accept the Input Number. Finally, press the **F1** function key to initiate the measuring process. A data screen similar to the following will be displayed.

```
Measure Flash Rate
Input to Measure: D0001
Measuring..., [ESC] to quit
Flashes/Minute: 46.5
On Time: 0.65 Sec
Off Time: 0.64 Sec
Cycle Time: 1.29 Sec
Detect Time: 0.64 Sec
```

The lower five lines of text reflect the Measure Flash Rate data. The first line indicates the number of flashes per minute (e.g., 46.5). The second and third lines report the On Time and Off Time durations, respectively. The data listed in the fourth line (referred to as Cycle Time) is the duration of one on/off sequence. It is the sum of the On Time and Off Time durations. Finally, the fifth line specifies the optimum Detection Time to be assigned to inputs using the reported flash rate.

The data listed in the Measure Flash Rate report is updated continuously and automatically. For typical flash rates the data will be updated every several seconds. To stop the measuring process simply press the **ESC** key. The Digital Input can then be connected to another circuit. The original Detection Time and Clock Sync Input settings will be automatically restored.

## Event Record Formats

Event Records provide the user with information about the status of an input at a specified moment in time. Event Records consist of printable ASCII characters. Five different formatting methods are employed by the CWR-264P. They create one-, two- and four-line records. All five formatting options are available in the Query Events and View Events commands. In the sections that follow, each of the five formatting options are described in order of increasing detail.

## No Details

The one-line form is used to provide event information from a single input. Analog Input levels are not listed in this format. Three sample records are shown below.

14:57:54.69	04/06/05	NS_Gate_Down_Relay	GateDwn	Up	D0001	
14:58:03.33	04/06/05	AC_Power_120V	AC_Power	AC_Fail	A001	
15:01:17.74	04/06/05	Switch_Delay_R127	R127-3	Violate	T999	15.9s

Each record consists of six or seven data fields. Each is fully described below (from left to right).

- **Time:** The time the event was detected is indicated in military-style HH:MM:SS format. The time is identified to the nearest hundredth of a second.
- **Date:** The date the event was detected is indicated in MM/DD/YY format.
- **Input Name:** The twenty-character Input Name identifies the input. The names NS\_Gate\_Down\_Relay, AC\_Power\_120V and Switch\_Delay\_R127 are listed in the sample records.
- **Input Identifier:** The eight-character Input Identifier further identifies the input. The identifiers GateDwn, AC\_Power and R127-3 are listed in the sample records.
- **Event Name:** The Event Name identifies the type of event detected at the input. The Event Name listed will always be a member of the Event Name Pair assigned to the input. The Event Names Up, AC\_Fail and Violate indicate clearly to the user the type of event that was recorded.
- **Input Number:** For non-Timer Input records the Input Number is the last data field listed. The record may be from a Digital (D0001 to D4096), Analog (A001 to A128), Virtual (V01 to V32) or Timer Input (T001 to T999).
- **Measured Time or Speed:** The Measured Time field only appears at the end of a Timer Input Event Record (refer to last sample record listed above). The Measured Time will be reported as a value in the range of 0.0 to 999.9 seconds. A value is listed regardless of the Event Name that identifies the record type (e.g., Violate or Nominal). If the Event Record is from one of the Train Speed Monitors the measured speed in mph will be reported.

## Virtual Details

The Virtual Details format uses two lines of text. The first line is formatted identically to that used by the No Details option. See the previous section for additional information. The three sample records listed earlier are shown below using the Virtual Details format. The second line of text includes a sequence of 32 characters that indicate the state of each Virtual Input at the time the event was logged to memory. A pattern of x and . (period) characters are shown in the sample records below. The left-most character indicates the state of Virtual Input V1. The right-most

character indicates the state of Virtual Input V32. There are four symbols used to indicate the state of Digital and Virtual Inputs. They are described in the section entitled “Symbol Legend” on page 69.

14:57:54.69	04/06/05	NS_Gate_Down_Relay	GateDwn	Up	D0001	
x.....x	x.....x	.....	.....	.....	.....	.....
14:58:03.33	04/06/05	AC_Power_120V	AC_Power	AC_Fail	A001	
x.....x	x.....x	.....	.....	.....	.....	.....
15:01:17.74	04/06/05	Switch_Delay_R127	R127-3	Violate	T999	15.9s
x.....x	x.....x	.....	.....	.....	.....	.....

## Digital Details

The Digital Details format also requires two lines of text. The first line is formatted identically to that used by the No Details option. The three sample records listed earlier are shown below using the Digital Details format.

14:57:54.69	04/06/05	NS_Gate_Down_Relay	GateDwn	Up	D0001	
X.....X	x.....x	.....X.	.....	.....	.....	.....X
14:58:03.33	04/06/05	AC_Power_120V	AC_Power	AC_Fail	A001	
x.....x	x.....x	.....X.	.....	.....	.....	.....X
15:01:17.74	04/06/05	Switch_Delay_R127	R127-3	Violate	T999	15.9s
x.....x	x.....x	.....X.	.....	.....	.....	.....X

The second line of text is used to indicate the state of each Digital Input, in a common group of 64, at the time the event was recorded. The Digital Details record format lists the state of each input in the group applicable to the input that created the event (e.g., input 130 lists group 129 to 192). Analog Input events always indicate the state of Digital Inputs in the first group for the applicable Secondary Unit. Virtual and Timer Input events always indicate the state of Digital Inputs in the first group for the system as a whole (e.g., D0001 to D0064).

A pattern of x and . (period) characters are shown in the sample records. The left-most character indicates the state of Digital Input 1. The right-most character indicates the state of Digital Input 64. There are four symbols used to indicate the state of Digital and Virtual Inputs. They are described in the section entitled “Symbol Legend” on page 69.

## Analog Details

The Analog Details format also requires two lines of text. The first line is formatted identically to that used by the No Details option. The three sample records listed earlier are shown below using the Analog Details format.

```

14:57:54.69 04/06/05 NS_Gate_Down_Relay GateDwn Up D0001
101Vac 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 13.6Vdc

14:58:03.33 04/06/05 AC_Power_120V AC_Power AC_Fail A001
89Vac* 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 12.9Vdc

15:01:17.74 04/06/05 Switch_Delay_R127 R127-3 Violate T999 15.9s
87Vac! 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 12.8Vdc

```

The second line of text lists the measured levels of each Analog Input for the applicable Secondary Unit. For the sample data shown A1 through A8 are reported from left to right. The units of measurement are always displayed to the right of the measured level (e.g., Vdc and Vac). To the right of the units of measurement data is a single character indicator. It is used to indicate the state of the Analog Input relative to the user-defined Limit Values. There are four symbols used to indicate the state of Analog Inputs. They are described in the section entitled “Symbol Legend” on page 69.

## All Details

The All Details format incorporates all of the detail content defined in the Virtual, Digital and Analog Details options. It requires four lines of text. From top to bottom the details include Virtual Input states, Digital Input states and Analog Input measured levels. The sample records from the previous sections are shown below using the All Details format.

```

14:57:54.69 04/06/05 NS_Gate_Down_Relay GateDwn Up D0001
x..... x.....
X.....x x.....X.....
101Vac 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 13.6Vdc

14:58:03.33 04/06/05 AC_Power_120V AC_Power AC_Fail A001
x..... x.....
x.....x x.....X.....
89Vac* 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 12.9Vdc

15:01:17.74 04/06/05 Switch_Delay_R127 R127-3 Violate T999 15.9s
x..... x.....
x.....x x.....X.....
87Vac! 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 0.0Vdc 12.8Vdc

```

## Symbol Legend

The four symbols used to indicate the state of Digital and Virtual Inputs are described below.

### X (upper-case)

The Digital or Virtual Input has transitioned into its On state. The referenced input is the source of the Event Record. The assigned On Event Name is listed as the Event Name.

### x (lower-case)

The Digital or Virtual Input remains in its On state. The referenced input is not the source of the Event Record.

### **: (colon)**

The Digital or Virtual Input has transitioned into its Off state. The referenced input is the source of the Event Record. The assigned Off Event Name is listed as the Event Name.

### **. (period)**

The Digital or Virtual Input remains in its Off state. The referenced input is not the source of the Event Record.

The four symbols used to indicate the state of an Analog Input are described below.

### **\* (asterisk)**

The Analog Input has transitioned into its unacceptable region of operation. The referenced input is the source of the Event Record. The assigned On Event Name is listed as the Event Name.

### **! (exclamation mark)**

The Analog Input remains in its unacceptable region of operation. The referenced input is not the source of the Event Record.

### **= (equals sign)**

The Analog Input has transitioned into its acceptable region of operation. The referenced input is the source of the Event Record. The assigned Off Event Name is listed as the Event Name.

### **(blank)**

The Analog Input remains in its acceptable region of operation. The referenced input is not the source of the Event Record.

Event Names and Limit Values are described in “Event Names (E)” on page 36 and “Low and High Limits” on page 33, respectively.

This concludes the chapter on how to operate the CWR-264XC from the Primary Unit’s Terminal Ports, Ethernet Port and modem. The user should remember to use the Log Off command to end the current session. Refer to “Log Off (X)” on page 52.

The next chapter describes the use of the front panel LCD and keypad.

# DISPLAY AND KEYPAD

## Introduction

The CWR-264XC is designed to provide its user with the greatest degree of versatility and functionality. All MICRO-AIDE Event Recorders, including the CWR-264P, come equipped with a front panel mounted Liquid Crystal Display (LCD) and keypad. Together these features allow the user to perform all of the setup and operational procedures required to effectively use the recording system. The advantage to the user is that a PC or printer, although helpful, is not required to operate the system.

Setup and operation of the CWR-264XC from the front panel of the Primary Unit is somewhat different than operation via a peripheral device. The tasks to be performed and the end results are identical but the methods employed are different. This chapter describes the methods that are unique to front panel operation. Figure 2 on page 9 provides an illustration of the LCD panel and keypad.

## Front Panel Description

### Liquid Crystal Display

The LCD panel consists of a display approximately 3" by 1" in size. It is configured to present four lines of data. Each line can contain twenty alphanumeric characters and symbols. The LCD characters are large and can be viewed easily from several feet away. The super-twist design of the LCD panel provides a viewing angle of  $\pm 20^\circ$  from the level of the display. The contrast level of the display may be adjusted. This can be helpful when the Primary Unit is exposed to very hot or cold temperatures. The single-turn potentiometer that controls the contrast level is accessible through a small hole in the front panel of the unit. It is labeled "Adj". Use a small flat-head screwdriver to adjust the setting.

### Keypad

The keypad contains twenty individual keys. Each key consists of a pushbutton switch. They are clearly labeled as to their various functions. The keys are spaced .65" apart to minimize double hits. A special editing technique allows alphabetic characters to be entered via the keypad. The left ( $\leftarrow$ ) and right ( $\rightarrow$ ) arrow and *Enter* keys also provide for quick menu item selection. Except

while selecting a command or performing the special editing procedure, the left arrow key may be used to backspace over characters when an incorrect number has been entered.

**Note** Unless otherwise stated, characters shown in italics are used to refer to specific keys on the keypad (e.g., *Browse*). This convention is used throughout the remainder of this chapter.

## How to Use the Keypad

After power is applied, the CWR-264P will perform a firmware boot-up procedure. The LCD will remain blank for 10 to 15 seconds while the unit is booting. The following message will be briefly displayed at the completion of the boot-up procedure.

```
MICRO-AIDE  
Model CWR-264P  
Event Recorder  
Version 1.07
```

The reference to firmware version 1.07 may vary. The firmware version number should be recorded and saved in the event service ever needs to be performed on the unit. After the boot-up procedure is completed the Primary Unit will automatically enter Idle Mode. There are three operational modes, each is described in the following sections.

## Idle Mode

Except as noted below, the real-time clock and Unit Name are displayed during Idle Mode. It is the at rest condition of the Primary Unit. An example of the real-time clock display is shown below. The first twenty characters of the Unit Name are listed in the last row. Refer to the section entitled “Unit Name” on page 26 for additional information.

```
TIME      DATE  
16:35:52  04-06-05  
CWR264PEventRecorder  
San Dimas SC-27.793
```

The CWR-264P utilizes the 24-hour, military time convention (e.g., 7:00PM is shown as 19:00:00). The Idle Mode display is altered once every minute for five seconds. Alternating messages referring to the Setup and Browse Modes are displayed during this period.

The real-time clock display is also interrupted in Idle Mode when new Event Records are logged. Each new event will be displayed only briefly. This process is useful in verifying that the recording system is continuing to detect events. The Event Record format used by the LCD is described in the following section.

## Event Record Format

Event Records consist of four lines of text. Sample records for each input type are shown below.

```
14:57:54.69 04-06-05
D0001 1xx.....x
NS_Gate_Down_Relay
GateDwn Up
```

*LCD Event Record - Digital Input*

```
14:58:03.33 04-06-05
A001 89Vacx.....
AC_Power_120V
AC_Power AC_Fail
```

*LCD Event Record - Analog Input*

```
21:03:15.82 04-06-05
V03 ..x.....
Lamp_Fail_Test
VInput03 Test:Bad
```

*LCD Event Record - Virtual Input*

```
15:01:17.74 04-06-05
T999 15.9s
Switch_Delay_R127
R127-3 Violate
```

*LCD Event Record - Timer Input*

The first line of text always specifies the time and date the event was logged to memory. The date is listed in MM-DD-YY format.

The second line of text lists the Input Number. It is generally followed by a sequence of x and . (period) characters. An x indicates an input with an active or On Event state. A . (period) indicates an input with an inactive or Off Event state. In the case of Analog Inputs the state indicators are preceded by the measured Analog Input level (e.g., 89Vac in the second sample record). In the case of Digital Input records all 4096 Digital Input states cannot be depicted in the second line of text. Only a group of ten are shown. The one- to four-digit number that precedes the state field is the Input Number of the first state indicator in the group of ten. For Analog Inputs the state indicators, from left to right, pertain to the eight Analog Inputs of the applicable Secondary Unit. For Virtual Inputs the state indicators, from left to right, pertain to V1 through V16 or V17 through V32. In the case of Timer Input and Train Speed Monitor records the Measured Time or speed value is listed.

The third line always lists the twenty characters of the assigned Input Name (e.g., Lamp\_Fail\_Test in the third sample record).

Finally, the eight characters of the assigned Input Identifier and Event Name are listed in the fourth line from left to right, respectively. Refer to “Input Names/Identifiers (I)” on page 36 and “Event Names (E)” on page 36, respectively.

## Printing Records While in Idle Mode

The CWR-264P is equipped with a parallel printer port that can be used with commonly available inkjet or laserjet printers. Provided a printer is connected it can be used to create a hard copy printout of an entire range of Event Records while the CWR-264P is in Idle Mode.

To print records from the keypad press the **Print** key while in Idle Mode. The following message will be displayed briefly.

```
Select start date
```

It will be followed by a table of dates similar to the following.

```
040605 040705 040805  
040905 041005 041105  
041205 041405
```

Select the start date by highlighting the appropriate date and pressing the **Enter** key. A message requesting an end date will then be displayed briefly. Use the same procedure to select the end date. Data similar to the following will then be displayed.

```
04-06-05 00:00:00  
To:04-06-05 23:59:59  
Det:All Details  
Rev:No Query:---
```

The data screen shown above contains five fields that allow the user to select the time span and format of the records to be printed. The use of each field is described in the sections that follow.

### Start Time

Event Records that are time stamped after the assigned Start Time (for the day selected as the Start Date) will be printed. The Start Time can be assigned any value from 00:00:00 to 23:59:59. The default setting is always 00:00:00. The Start Time must be entered in military format.

### End Time

Event Records that are time stamped before the assigned End Time (for the day selected as the End Date) will be printed. The End Time can be assigned any value from 00:00:00 to 23:59:59. The default setting is always 23:59:59. The End Time must be entered in military format.

### Record Details

Event Records can be printed from the keyboard using five different formats. In order of appearance, the five formats are referred to as All Details, Digital Details, Analog Details, Virtual Details and No Details. After highlighting the field labeled “Det”, press the **Enter** key repeatedly to select the desired formatting option. Refer to the section entitled “Event Record Formats” on page 66 for additional information concerning the formatting of printed records.

### Reverse Order

The Reverse Order option can be set to either No (default setting) or Yes. The No setting will print the oldest records first. The Yes setting will print the most recent records first. In either case, Event Records will always be printed in chronological sequence. Press the **Enter** key to toggle the setting.

### Query

The Query field allows the user to print records for a specific input or all inputs. The default setting is labeled “---”, which prints records for all inputs. To print records from a specific input follow the steps listed below.

1. Highlight the Query field and press the **Enter** key.
2. Press the **Alpha** key repeatedly until the desired input type is displayed (i.e., D, A, V, T or S).
3. Press the appropriate number keys to enter the Input Number. Leading zeros are not required.
4. Accept the setting by pressing the **Enter** key.

After the various fields are defined properly the user must press the **Esc** key. The following message will be displayed.

```
Print the report?  
Yes No
```

The printer must be turned on, online and supplied with paper. After printing has ceased the user must remember to press the “Page Eject” button at the printer to print the last page of the report.

**Tip** The default or currently selected font of the printer will be used by the print feature. To improve the readability of the report the printer should use a mono-spaced font like COURIER. This will force the characters in each row of the report to line up in straight columns.

## Browse Mode

Browse Mode is most commonly used to view Event Records via the LCD panel. Event Records may be viewed in either forward or reverse chronological order. Events are selected by date and time and optionally by Input Number. However, two additional features allow the user to inspect the current status of an input or to measure the flash rate of a flashing circuit.

To access any of the Browse options press the **Browse** key. The following message will appear.

```
Browse:
Event Records
Input Status
Flash Rate
```

Each of the three options are described in the sections that follow.

### Event Records

After selecting the Events option a table of dates similar to the following will be displayed.

```
040605 040705 040805
040905 041005 041105
041205 041405
```

At least one Event Record must be logged for each date listed. Dates are listed in the MMDDYY format. The Events option may list as many as 128 dates. Only eight dates are listed in the example cited above. The up and down arrow keys can be used to scroll quickly through a large collection of dates. Press the **Enter** key after highlighting a date. The display will then specify a start time as shown below.

```
Browse Event Records
Start Time: 00:00:00
```

Press the **Esc** key if records starting from midnight are to be inspected. To inspect records starting later in the day perform the following steps.

1. Using the left and right arrow keys position the highlight in the hour, minute or second field.
2. Press the **Enter** key to select the highlighted field.
3. Enter the required hours, minutes or seconds by pressing the appropriate numeric keys. Leading zeros are not required.
4. Press the **Enter** key to complete the entry.

5. Repeat the previous steps to adjust the remaining fields.

After the correct starting time is specified the **Esc** key should be pressed. The following message describing the use of the arrow keys will be briefly displayed.

```
Use ←→↑↓ to scroll,
Browse to select
input to query
```

Provided the **Browse** key has not been pressed, the first Event Record meeting the specified date and time criteria will be displayed. Refer to “Event Record Format” on page 73. The left and right arrow keys can be used to review Event Records in forward or reverse chronological order.

**Tip** Holding down an arrow key allows the user to search through the record set very quickly.

The limits of the record set will be indicated by a message stating either “Start of Data” or “End of Data”. To exit Browse Mode and return to Idle Mode press the **Esc** key.

Press the **Browse** key any time after the start time is specified to inspect records for a particular input. This procedure is referred to as Query by Input Number.

### Query by Input Number

To inspect Event Records for a specific input press the **Browse** key after the starting time is specified. The following message will be displayed.

```
Input to query,
(--- selects all)
---
```

A flashing highlight will be positioned in the Input Number field located in the third row of text. To specify an input follow the steps listed below.

1. Press the **Alpha** key repeatedly until the desired input type (i.e., D, A, V, T or S) is displayed.
2. Press the appropriate number keys to enter the Input Number. Leading zeros are not required.
3. Press the **Enter** key to display the first Event Record satisfying the date, time and Input Number criteria. Several seconds may be required to locate the first record.
4. Use the arrow keys to inspect additional records for the specified input.

The **Browse** key can be pressed again at any time if a different input is to be inspected. Press the **Esc** key to exit the Query by Input Number procedure and return to Idle Mode.

**Note** The CWR-264P will log an Event Record to memory when the power is turned off as well as on. Additionally, a record will be logged if the measured temperature is outside the Temp Limits

assigned by the user. These records are referred to as System Records and are associated with S type inputs. Refer to the section entitled “System Events” on page 104 for additional details.

### Printing a Record While in Browse Mode

The CWR-264P is equipped with a printer port that can be used with commonly available inkjet or laserjet printers. Provided a printer is connected it can be used to create a hard copy of any record displayed at the LCD while the user is in Browse Mode and using the Event Record option.


To print the Event Record displayed at the LCD simply press the *Print* key. The user must then press the “Page Eject” button at the printer. The printer must be connected to the Printer Port, powered on, online and supplied with paper. The record will be printed in the All Details form. Refer to the section entitled “Event Record Formats” on page 66 for additional information.

**Tip** Only one Event Record will be printed when the *Print* key is pressed. To print a greater number of records press the *Print* key while in Idle Mode. Refer to “Printing Records While in Idle Mode” on page 74.

### Input Status

The Input Status option allows the user to inspect the current state of each input. The status of Digital, Analog and Virtual Inputs is indicated by their assigned Event Names. Voltage and current measurements are reported for Analog Inputs. The Input Status feature can be of great use when setting up the system. Without a peripheral device the user can verify that inputs are assigned proper Input Identifiers and Event Names. Each input can be checked to verify that it will report a change of state. Additionally, the command provides a DVM-like function for each Analog Input.

After selecting the Input Status option the following message will be displayed briefly.

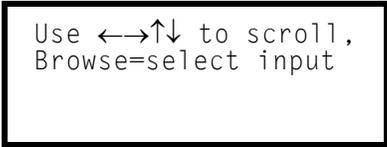

Use ←→↑↓ to scroll,  
Browse=select input

The arrow keys can be used to scroll from one input to the next. Digital Inputs are followed by Analog Inputs. They are followed by Virtual Inputs. Rather than use the arrow keys to scroll sequentially through each input the user can jump to a specific input by pressing the *Browse* key. Select the input using the procedure described in “Query by Input Number” on page 77.

Sample status data for each input type is listed below.

```
D0001
NS_Gate_Down_Relay
GateDwn      Down
```

*LCD Input Status - Digital Input*

```
A001
AC_Power_120V
AC_Power      AC_Fail
                89Vac
```

*LCD Input Status - Analog Input*

```
V03
Lamp_Fail_Test
VInput03      Test:OK
```

*LCD Input Status - Virtual Input*

The Input Number and Input Name are listed in the first and second rows, respectively. The Input Identifier and Event Name are listed in the third row. The fourth row is used to report analog levels. The data listed is updated automatically and in real-time. Without the aid of a PC the user can check the sequence of events at a crossing or while a control function is being exercised. Press the **Esc** key to exit the Input Status feature and return to Idle Mode.

## Flash Rate

The third option included with the Browse command allows the user to measure the flash rate of a circuit. The following request for a Digital Input number will be displayed after selecting the Flash Rate option.

```
Measure Input:D0001
```

The user must enter the number of the flashing input (1-4096). Leading zeros are not required. Press the **Enter** key to complete the entry. Flash rate data similar to the following will be displayed.

```
Measure Input:D0001
Flashes/Min: 46.5
On/Off: 0.65/ 0.64
Cycle Time: 1.29
```

The Input Number and flash rate, measured in flashes per minute, are listed in the first two rows. The average on and off intervals of each flash pulse, measured in seconds, are listed in the third row. The lesser value is the optimum value to be assigned as the Detection Time for inputs using the reported flash rate. The sum of the average on and off intervals is reported as the cycle time in the fourth row.

Press the **Esc** key to exit the Flash Rate command and return to Idle Mode.

## Setup Mode

Setup Mode allows the user to set up the CWR-264P to a specific set of application requirements. The various commands that can be executed from the keypad form a subset of those performed via a peripheral device. Only a few commands are not applicable to the keypad (e.g., Transfer Files, Network). The results from any keypad-performed command are indistinguishable from those performed from a peripheral device. Accordingly, the setup descriptions that are a part of Chapter 2 may be used to provide a more detailed explanation of the keypad commands.

To enter Setup Mode from Idle Mode press the **Setup** key. The following message will be displayed. The user must enter the correct Passcode before any setup command can be executed.

```
Enter the passcode:
```

**Note** The factory default Passcode is **12345678**.

Passcodes are assigned numeric values only. Press the **Enter** key to complete the entry. If the user fails to enter the correct Passcode an error message will be displayed.

Assuming the correct Passcode is entered the following message will be briefly displayed.

```
Use ←→↑↓ to select  
items and then ENTER
```

The Setup Menu of front-panel-accessible commands will then be displayed as shown below.

```
Clock CSync UName  
ENames INames Analog  
Virtual DTime GTime  
Timer TLimits PCode
```

*Main Menu - LCD*

Moving the highlight beyond the limits of the first menu will display the following additional commands.

```

Modem  Baud  Speed
Print  Diag  RESET
    
```

The Setup Menu consists of eighteen commands. Table 6 provides a brief explanation of each command. To select a command advance the highlight to the desired command and press the *Enter* key. The use of each command is explained in the final sections of this chapter.

Name	Description
Clock	Set date and time
CSync	Assign Clock Sync Input
UName	Create Unit Name
ENames	Create Event Name pairs
INames	Create Input Names and Identifiers Assign Event Name pairs
Analog	Configure Analog Inputs
Virtual	Configure Virtual Inputs
DTime	Assign Detection Times
GTime	Assign Detection Time to all Digital Inputs
Timer	Configure Timer Inputs
TLimits	Assign Temperature Limits
PCode	Create Passcode
Modem	Assign Dial Numbers and Ring Count
Baud	Select Terminal Port Baud rates
Speed	Configure Train Speed Monitors
Print	Print all or part of Setup Database
Diag	Perform system diagnostics
RESET	Erase all Event Records Restore Setup Database to factory default values

Table 6 - Front Panel Setup Commands

Before proceeding the user should note that several of the commands require alphabetic characters to be used in the creation of a name or label (e.g., Input Name). The keypad, however, contains only numeric and function keys. A special Alphanumeric Editing Procedure which is a feature of all MICRO-AIDE Event Recorders allows the user to create names and labels from an extensive set of characters. This procedure is described below.

## Alphanumeric Editing Procedure

The first step in the Alphanumeric Editing Procedure is to select the parameter that is to be edited (e.g., Input Name or Input Identifier). A flashing highlight is used to indicate a specific parameter. To select the highlighted parameter press the **Enter** key. A blank field of characters will be displayed. An underscore (i.e., \_) will be positioned in the first character location. The underscore character is used as a cursor in the Alphanumeric Editing Procedure. The left and right arrow keys can be used at any time to position the cursor as required. To create an alphanumeric name perform the following steps.

1. Press the **Alpha** key. The following list of characters will be displayed.

```
ABCDEFGHIJKLMNOPQRSTUVWXYZ  
UVWXYZ !"#%&'()*+,-/  
abcdefghijklmnopqrstuvwxyz  
vwxyz : ; < = > ? @ [ ] ^ _ { | }
```

2. Using the arrow keys reposition the highlight until the desired character is highlighted. A total of eighty characters plus ten numbers are available for selection.
3. Press the **Enter** key to select the highlighted character. The selected character is placed into the name at the present location of the cursor. The cursor is then automatically moved one position to the right.
4. To enter a number into the name press the appropriate number key. To correct an error reposition the cursor under the character in error and overwrite it with a new character. To insert a space, assuming no characters have been inserted to the right, simply move the cursor to the right. The space character follows the upper-case Z in the character set.
5. Repeat the previous steps until the name is completed.
6. Press the **Enter** key to accept the newly defined name. Alternatively, press the **Esc** key to retain the previously assigned name or to start again by ignoring all of the character entries.

## Clock

The Clock command is used to change the date or time. The time is always listed in 24-hour, military-style format (e.g., 7:00PM is listed as 19:00:00). In accordance with this convention the user must enter the time by using the same format. The date is always listed in MM-DD-YY format as shown below.

```
Time: 16:07:09  
      MM-DD-YY  
Date: 04-06-05  
      Wednesday
```

To change the date or time position the highlight in one of the numeric fields. Press the **Enter** key. Enter a valid one- or two-digit number (leading zeros are not required). Press the **Enter** key to accept the new value. Adjust the other fields as required.

**Note** The day of week is automatically calculated by the CWR-264P based upon the day, month and year selected by the user.

Press the **Esc** key after the changes have been made. The following message will be displayed.

```
Change the clock now
      Yes  No
```

To complete the command press the **Enter** key after selecting the desired option.

## CSync

The real-time clock used by the CWR-264P can be synchronized to an external source by use of the Clock Sync Input feature. Refer to “Clock Sync Input” on page 28 for additional details.

To synchronize the real-time clock a Digital Input must be assigned as the Clock Sync Input. The following message will be displayed after selecting the CSync command.

```
Clock Sync Input:
      ---
```

The field labeled “---” is the place holder for the Digital Input number. A valid Input Number may instead be listed if one was previously assigned. Press the **Enter** key to edit the field. Press the **Alpha** key to select a Digital Input. The D designator will appear. Press the appropriate number keys to select the Input Number. Complete the command by pressing the **Enter** key or **Esc** key to accept the new assignment or ignore the change, respectively.

**Tip** To disable the Clock Sync Input feature press the **Enter** key and then the **Alpha** key. The displayed Input Number will return to the --- setting. Complete the entry by pressing the **Enter** key again.

## UName

The UName command is used to assign a unique name to the recording system. Refer to the section entitled “Unit Name” on page 26 for additional details. A message similar to the following will be displayed after selecting the UName command.

```
Unit name:  
***** NOT SET *****
```

The first twenty characters of the existing Unit Name are displayed in the second line of text. The default Unit Name is displayed in the sample data cited above. To change the name press the **Enter** key. Assign a new name or modify the existing name by using the “Alphanumeric Editing Procedure” on page 82. Press the **Esc** key to complete the command.

**Note** Due to restrictions in the size of the LCD panel the UName command can be used to assign a Unit Name limited in length to twenty characters. Lengthier Unit Names (up to eighty characters) must be assigned by selecting the Unit Name command from the Main Menu.

### ENames

Event Names are created by the user to uniquely identify Event Records. By way of example only, the state of an input can be labeled as “Up” or “Down” or “GateUp” or “GateDwn”. Event Names add clarity to Event Records that would otherwise not be possible if input states were labeled as only “On” or “Off”. Event Names are always assigned in pairs to identify the active and inactive state of an input. As many as sixteen Event Name pairs can be assigned. Refer to the section entitled “Event Names (E)” on page 36 for additional details.

Data similar to the following will be displayed after selecting the ENames command.

```
Event ON      OFF  
01 FlashOn   FlashOff  
02 AC_Fail   Norm_AC  
03 On        Off
```

Three Event Name pairs are displayed at one time. The number (i.e., 1 to 16) of the pair is listed at the start of each row. It is followed by the currently assigned active or On Event Name (e.g., FlashOn) and the existing inactive or Off Event Name (e.g., FlashOff). To create a new name or modify an existing name select the Event Name pair by pressing the up or down arrow keys to advance through the list of sixteen pairs. Use the left and right arrow keys to select either the on or off field. Press the **Enter** key. A blank field with a cursor in the left-most position will be displayed. Use the “Alphanumeric Editing Procedure” on page 82 to create a new name. Use the same procedure to modify additional names.

### INames

The INames command is a multi-purpose command that allows the user to assign Input Identifiers, Input Names and Event Name pairs to each input of the recording system. Input Identifiers and Input Names allow the user to interpret Event Records more precisely by referring to inputs with labels that are unambiguous (e.g., Track Switch Control vs. Digital Input 219). Refer to the section entitled “Input Names/Identifiers (I)” on page 36 for additional details.

Data similar to the following will be displayed after selecting the INames command.

```
D0001 ID: DInp0001
Digital Input 0001
Event ON/OFF pair:
01 On Off
```

The Input Number is always displayed in the upper left-hand corner. To select a different input press the up or down arrow keys repeatedly. Alternatively, press the **Browse** key to jump to a different input. Press the **Alpha** key repeatedly until the desired input type is displayed (i.e., D, A, V or T). Enter an Input Number by pressing the appropriate number keys. Leading zeros are not required. Press the **Enter** key to jump directly to the selected input.

The field labeled “ID” will initially be highlighted. Move the highlight to the second row to select the Input Name. Press the **Enter** key to modify the highlighted assignment. A blank field with a cursor in the left-most position will be displayed. Use the “Alphanumeric Editing Procedure” on page 82 to create a new Input Identifier or Input Name.

To assign an Event Name Pair to a specific Input Number move the highlight to the fourth row. Press the **Enter** key repeatedly until the desired Event Name pair (i.e., 1 to 16) is displayed. Each time the **Enter** key is pressed the fourth line of text will be automatically updated to reflect the contents of the selected Event Name pair. Pressing the **Enter** key while pair number sixteen is displayed will return the user to pair number one. After all of the names and pairs are assigned press the **Esc** key to complete the command.

## Analog

The Analog command is used to configure the Analog Inputs of the recording system. Each Analog Input can be used to monitor AC or DC voltages or currents. Like a DVM, the system can report its measurements using several different scales and resolutions. Analog Inputs that vary beyond an acceptable range of operation can be reported by setting appropriate Limit Values. Refer to the section entitled “Low and High Limits” on page 33 for additional details.

Data similar to the following will be displayed after selecting the Analog command.

```
A001 Rnge:+/-25.5Vdc
Filter: Slow
High Limit: 25.5
Low Limit: -25.6
```

The Analog Input number is displayed in the upper left-hand corner. To select a different Analog Input press the up or down arrow keys repeatedly. Alternatively, press the **Browse** key to jump to a different input. Specify the Input Number by pressing the appropriate numeric keys. Leading zeros are not required. Press the **Enter** key to jump directly to the selected input. The first row also indicates the Range setting. The Filter setting and High and Low Limit values are listed in the remaining rows.

To change the Range setting, highlight the existing setting and press the **Enter** key until the desired Range is displayed. The sequence of possible Range settings is  $\pm 25.5\text{Vdc}$ ,  $+51.1\text{Vdc}$ ,  $\pm 255\text{Vdc}$ ,  $25.5\text{Vac}$ ,  $255\text{Vac}$ ,  $\pm 25.5\text{Aac}$  and  $25.5\text{Aac}$ .

The Filter setting controls the amount of smoothing the measured signal is subjected to. AC signals require the Slow setting to remove their ripple content. DC signals can generally use either the Slow or Fast setting. To toggle the existing setting simply press the **Enter** key.

**Note** All AC voltage and current measurements are reported in RMS units.

The Limit Values can be set separately. They cannot exceed the bounds of the Range setting. To change an existing setting highlight the value and press **Enter**. Use the number keys to enter the new value. Enter fractional and negative values by using the decimal and minus keys, respectively. After the new settings have been assigned press the **Esc** key to complete the command.

## Virtual

Virtual Inputs allow the CWR-264P to identify and report a variety of signal conditions that may be of interest to the user. Generally, these conditions will refer to anomalies in the state of several relay circuits. High or low analog levels may also be of special concern to the user. The 32 Virtual Inputs of the CWR-264P are configured by use of the Virtual command. Refer to the section entitled “Virtual Inputs (V)” on page 37 for additional information.

Data similar to the following will be displayed after selecting the Virtual command.

```
V01 Uses:---  ---  
          ---  ---  
Rlys:1=N 2=N 3=N 4=N  
Dial=N (SETUP=funct)
```

In the sample data cited above Virtual Input number 1 has not been assigned. It retains its default settings. The Virtual Input number is displayed in the upper left-hand corner. To select a different Virtual Input press the up or down arrow keys repeatedly. Alternatively, press the **Browse** key to jump to a different input. Specify the Input Number by pressing the appropriate numeric keys. Leading zeros are not required. Press the **Enter** key to jump directly to the selected input.

The first and second lines of text includes four place holders for variables. Variables are Digital, Analog, Timer or other Virtual Inputs. The procedure for assigning variables is described below.

Each Virtual Input can selectively operate the four internal relays of the CWR-264P. Press the **Enter** key to toggle either of the four existing Relay settings from No to Yes or vice versa. Virtual Input records can be transmitted to a remote maintenance facility via its internal modem. Press the **Enter** key to toggle the existing Dial setting.

### Assigning Variables

A variable can be any valid Digital, Analog, Timer or other Virtual Input. To assign variables complete the steps listed below.

1. Press the left and right arrow keys to locate the highlight in a place holder field.
2. Press the *Enter* key.
3. Press the *Alpha* key until the desired input type designator appears (i.e., D, A, V or T).
4. Enter the desired Input Number by pressing the appropriate number keys.
5. Accept the new entry by pressing the *Enter* key.
6. Repeat the preceding steps if additional variables are required.

The final step is to select the states that each variable assumes in defining a Virtual Input.

### Selecting States

A Virtual Input can be thought of as a logical relationship shared by one to four inputs. Accordingly, the state a Virtual Input assumes is dependent upon the state of each assigned variable. It follows that a Virtual Input dependent upon one variable is defined by a combination of two states. Two variables yield a combination of four states. Three variables yield eight states. Four variables yield sixteen states. Selecting states involves the assignment of a Virtual Input state for each combination of variable states.

Press the *Setup* key after all of the variables have been assigned. Data similar to the following will be displayed.

```

V03  Output=Off
-----Inputs-----
D0256 Off  D0007 Off
A008  Off  ---
```

For the sample data cited above three of four possible variables have been assigned to Virtual Input V3. The third and fourth lines of text list the assigned variables by Input Number. They also list to the right of the Input Number a specific state (i.e. On or Off) for each variable. By pressing the up and down arrow keys a different combination of variable states can be selected. The assigned state of the selected Virtual Input is listed in the first line. Its state is identified by its assigned Event Name.

Variable and Virtual Input states always assume one of two values. Each value is described below.

- **On:** The Digital Input voltage is in the range from 5 to 40Vdc. The Analog Input level is outside the acceptable range as defined by the region between the Limit Values (refer to Figure 9 on page 34). The Virtual Input evaluates to a true logic state. The Timer Input has measured a delay that is less than or greater than its Low Limit or High Limit value, respectively.
- **Off:** The Digital Input voltage is less than 2Vdc. The Analog Input level is within the acceptable range as defined by the region between the Limit Values. The Virtual Input evaluates to a false logic state. The Timer Input has measured a delay that is within the range of its Limit Values.

Press the **Enter** key to toggle the state of the Virtual Input from Off to On or vice versa. This setting will apply only to the combination of variable states currently displayed. To define the Virtual Input for the next combination press the down arrow key. Listed below are the eight variable state combinations associated with the Virtual Input described previously. Each combination can be selected in the sequence listed by pressing the up or down arrow keys.

D0256	D0007	A008	V03
Off	Off	Off	Off
On	Off	Off	Off
Off	On	Off	Off
On	On	Off	Off
Off	Off	On	Off
On	Off	On	Off
Off	On	On	Off
On	On	On	Off

In the sample data cited above the state of the Virtual Input is set in all cases to its initial value of Off. Change the state of the Virtual Input as required by the remaining variable states. Press the **Esc** key to accept the new settings and complete the command.

## DTime

The Detection Time feature of the CWR-264P is used to prevent relay contact bounce from logging false Event Records. The Detection Time can be set to any value in the range from .00 to 327.67 seconds. A value of zero prevents the input from detecting events. The DTime command is used to establish a unique Detection Time for each Digital Input. The command is also used to enable an input as a Flashing Input. Refer to “Detect Times/Flash Enable (D)” on page 30.

Data similar to the following will be displayed after selecting the DTime command.

Inp	DetTime	Flashing
D0001	3.00	No
D0002	3.00	No
D0003	3.00	No

The default settings are displayed in the sample data cited above. The Digital Input number is listed at the start of each line. Press the up or down arrow keys repeatedly to select a different input. Alternatively, press the **Browse** key to jump to a different input. Specify the Input Number by pressing the appropriate numeric keys. Leading zeros are not required. Press the **Enter** key to jump directly to the selected input. To change the Detection Time for the selected input press the **Enter** key while the existing value is highlighted. A blank field with a cursor in the left-most position will be displayed. Enter a value by pressing the appropriate number keys. Use the decimal point (labeled “↑/.”) to enter a fractional value. Leading zeros are not required. Press the **Enter** key to accept the new value.

To set an input as a Flashing Input position the highlight in the Flashing field. Press the **Enter** key to change the existing setting. Yes enables the input as flashing. No disables the input.

After all of the new settings have been assigned press the **Esc** key to complete the command.

## GDTIME

Use the Global Detection Time command to assign a common Detection Time value to all Digital Inputs. Data similar to the following will be displayed after selecting the GDTIME command.

```
GLOBAL
Detect Time: 0.00
```

To change the Detection Time for all inputs press the **Enter** key. A blank field with a cursor in the left-most position will be displayed. Enter a value by pressing the appropriate number keys. Use the decimal point (labeled “↑/.”) to enter a fractional value. Leading zeros are not required. Press the **Enter** key to accept the new value. Press the **Esc** key to complete the command.

**Note** The Detection Time of Digital Inputs assigned as sensors for the Train Speed Monitor feature cannot be altered by the DTIME or GDTIME commands.

## TIMER

The CWR-264P is equipped with 999 general purpose Timer Inputs. Refer to the section entitled “Timer Inputs (W)” on page 34 for additional information. To configure a Timer Input via the front panel select the TIMER LCD command. Data similar to the following will be displayed.

```
T001 From:--- Off
      To:--- Off
      LowLim: 0.0
      HighLim: 0.0
```

The presently selected Timer Input is always displayed in the top-left corner (e.g., T001). To change the input press the up or down arrow keys repeatedly. Alternatively, jump to a specific input by pressing the **Browse** key and then the appropriate number keys. Complete the entry by pressing the **Enter** key.

To select the From and To Inputs move the highlight to the appropriate field and press the **Enter** key. Press the **Alpha** key repeatedly until the desired input type designator appears (i.e., D, A, V or T). Press the appropriate number keys. Complete the entry by pressing the **Enter** key.

Select the desired event setting by moving the highlight to the correct field and then pressing the **Enter** key. The current setting will be toggled between On and Off.

Finally, assign the Low and High Limit Values by locating the highlight as needed and pressing the **Enter** key. Press the appropriate number and/or decimal keys to assign a value. Complete the entry by pressing the **Enter** key.

Select another Timer Input and repeat the preceding steps as necessary. After all of the required Timer Inputs are configured terminate the command by pressing the **Esc** key.

## TLimits

The TLimits command allows the user to assign a High and Low Limit against which the internal temperature of the Primary and Secondary Units is compared. If the temperature is found to be outside the acceptable limits of operation an Event Record will be logged to memory. A second record will be logged when the temperature recovers to a normal level.

Data similar to the following will be displayed after selecting the TLimits command.

```
Temperature Limits:
High Limit:      257
Low Limit:       -67
```

The default Limit Values are listed above. To change a Limit Value move the highlight to the appropriate field and press the **Enter** key. Enter a number using the number keys. Negative values can be entered. Accept the new value by pressing the **Enter** key.

**Note** The internal temperature and Limit Values are reported in degrees Fahrenheit.

## PCode

The Passcode feature prevents unauthorized users from altering the Setup Database via the front panel. Passcodes can contain any combination of numeric values not exceeding eight total.

A message similar to the following will be displayed after selecting the PCode command.

```
Passcode: 12345678
```

In the sample data cited above the Passcode is set to its default value. To change the Passcode press the **Enter** key. A blank field with the cursor in the left-most position will be displayed. Assign a new Passcode by pressing the appropriate number keys. To assign a null Passcode press the **Enter** key instead. This will effectively disable the Passcode protection feature. Access to the recording system will be permitted by simply pressing the **Enter** key when the request for Passcode message is displayed.

Accept the new Passcode by pressing **Enter**. Press the **Esc** key to complete the command.

**Tip** If the user forgets the assigned Passcode the System Parameters command should be executed. It will display the current Passcode assignment. Refer to “System Parameters (S)” on page 26.

## Modem

The CWR-264P is equipped with an internal 33,600 Baud modem. The modem allows remote users to access the system. Additionally, the modem's dial out feature allows Event Records from Virtual Inputs to be transmitted to a remote maintenance center.

There are three parameters that control the operation of the modem. The Ring Count determines the number of rings that must occur prior to the modem answering an incoming call. The Primary and Secondary Dial Numbers identify the number to dial when attempting to transmit a Virtual Input record. Refer to "Primary and Secondary Dial Numbers" on page 28 for additional information regarding these parameters.

Data similar to the following will be displayed after selecting the Modem command.

```
Modem ring count: 2
Prim/Sec Dial Number
626-915-5502
626-331-9484
```

To change the Ring Count setting move the highlight to the appropriate field and press the *Enter* key. Enter a number in the range from 0 to 99. Accept the new value by pressing the *Enter* key. A setting of zero will prevent the modem from answering incoming calls.

To assign a Primary or Secondary Dial Number move the highlight to the third or fourth row, respectively. The existing assignment will be highlighted. Press the *Enter* key. A blank field with the cursor in the left-most position will be displayed. Enter a valid dial number by pressing the appropriate number keys. The "Alphanumeric Editing Procedure" on page 82 can be used to insert non-numeric characters such as a comma to insert a two-second pause. Press the *Enter* key to accept the new assignment. Complete the command by pressing the *Esc* key.

## Baud

The Baud command allows the user to change the Baud rate of either Terminal Port. The following message will be displayed after the Baud command is selected.

```
Select port:
  PORT1  PORT2
```

Select the desired port by moving the highlight appropriately and then pressing the *Enter* key. The following array of Baud rates will be displayed for each port.

```
PORT1 Baud rate: 300
  600   1200   2400
 4800   9600  19200
38400  57600 115200
```

It is likely that the 38,400 setting will be highlighted. It is the default setting used by the Primary Unit. To assign a new Baud rate move the highlight to the desired setting by pressing the arrow keys. Press the **Enter** key to accept the new selection. The Baud rate of the peripheral device attached to the Terminal Port must be changed to match the new setting.

## Speed

The Speed command is used to configure the sixteen Train Speed Monitors. Once parameters that comprise the feature are set the system will report train speeds and instances of excessive speed. Refer to the section entitled “Measure Speed (M)” on page 41 for additional information regarding these parameters. Train speeds are reported via Event Records that are logged to memory.

Data similar to the following will be displayed after selecting the Speed command.

```
01: Sensor1: ---  
    Sensor2: ---  
    Distance:  0 feet  
    Threshold: 0 MPH
```

There are four distinct parameters that must be assigned per monitor. The selected monitor (1 through 16) is always displayed in the top-left corner. To change the selected monitor press the up or down arrow keys repeatedly. Alternatively, jump to a specific input by pressing the **Browse** key and then the appropriate number keys. Complete the entry by pressing the **Enter** key.

Both sensors must be assigned a valid Digital Input number. To assign a Digital Input highlight the appropriate field. Press the **Enter** key followed by the **Alpha** key. Enter a numeric value from 1 to 4096. Leading zeros are not required. Complete the input assignment by pressing the **Enter** key.

The separation between the two sensors is used to set the Distance parameter. It can be set to any value in the range from 50' to 5280'.

Trains with monitored speeds in excess of the Threshold value will be identified by a unique Event Record. The Threshold value must be in the range from 5 to 180mph. Setting either the Distance or Threshold parameters to zero will disable the selected Train Speed Monitor. Complete the command by pressing the **Esc** key.

## Print

The Print command allows the user to create a locally generated printout of all or selected portions of the Setup Database. The following menu of options will be displayed after selecting the Print command.

```

Item to Print All
ENames INames DTimes
Analog Timer Speed
Virtual Net System
    
```

Before executing one of the Print options the printer must be connected to the Printer Port of the CWR-264P. A standard parallel printer cable is required. The printer must be turned on, online and supplied with paper. The user must remember to press the “Page Eject” button at the printer to print the last page of the report.

**Tip** The default or currently selected font of the printer will be used by the print feature. To improve the readability of the report the printer should use a mono-spaced font like COURIER. This will force the characters in each row of the report to line up in straight columns.

An error message will be displayed if the printer is not turned on, is not online or is not loaded with paper. The problem should be corrected and another attempt performed.

### Diag

The Diag command is used to test five critical system elements. They include the program memory, Event Record memory, modem, internal relays and temperature inside the Primary Unit. Each test can be performed at any time and is completely non-destructive. The contents of the Setup Database and Event Record memories will remain unmodified.

The following data will be displayed after selecting the Diag command.

```

Select Item to Test:
Checksum Flash
Modem Relays
Temp
    
```

The highlight will initially be positioned over the Checksum field. To select a different test, position the highlight in the desired field. Press the **Enter** key to perform the test. Each test is described in the following sections.

#### Checksum

A checksum will be calculated and displayed after a few seconds. The results of a typical Checksum test are listed below.

```

Program memory
Checksum=1d00

Hit any key...
    
```

**Note** The reported checksum value will vary depending upon the version of the installed firmware.

## Flash

The results of a typical Flash test are listed below.

```
#1:4096K #2:4096K  
#3:4096K #4:4096K  
#5:4096K #6:4096K  
#7:4096K #8:4096K
```

The Flash test verifies that the microprocessor can properly access the Event Record memory. The number of Flash Memory positions should always equal eight. A value of 0K indicates that a failure has been detected in that position.

## Modem

Either of two results should normally be expected from the Modem test. The following response verifies that a modem is installed and that the microprocessor is able to communicate with the modem. A typical test takes a few seconds for the microprocessor to complete.

```
Modem Test...  
Modem found:H  
  
Hit any key...
```

The “H” reference listed above indicates that the CWR-264P is equipped with a Silicon Labs modem. A “33600” reference indicates that a Conexant modem is installed. A “NONE” reference indicates that the modem has been removed or has failed.

## Relays

The following message will be displayed after the Relays test is selected.

```
Relay 1: 1=ON, 2=OFF  
Relay 2: 3=ON, 4=OFF  
Relay 3: 5=ON, 6=OFF  
Relay 4: 7=ON, 8=OFF
```

Press the odd numbered keys to energize the selected relay. Press the even numbered keys to un-energize the selected relay. The internal relay and any circuitry attached to the relay contacts will be tested. Press the **Esc** key to complete the test. The relay will immediately assume the un-energized state when the **Esc** key is pressed. Press any key to exit the test.

## Temp

The Temp command reports the temperature inside the Primary Unit. A typical response follows.

```
Temp 89 Degrees F
Hit any key...
```

The temperature is always reported in degrees Fahrenheit.

**Caution** The measured temperature inside the CWR-264P will generally be about 10°F to 15°F warmer than the surrounding ambient temperature. Temperature readings should never exceed 180°F.

**Note** The user may wish to contact MICRO-AIDE customer service if a failure occurs as the result of any diagnostic testing. Instructions on how to proceed will be offered. Material Return and Limited Warranty policies are described on the inside back cover of this manual.

## RESET

The Reset command should be used with caution. It allows the user to selectively restore the entire Setup Database to its factory default values or to clear the Event Record memory. Refer to “Reset System (R)” on page 23 for additional information.

The following message will be displayed after the Reset command is selected.

```
Select Item to Erase
Set Factory Defaults
Erase Event Memory
```

To restore the entire Setup Database to its default settings highlight the Set Factory Defaults field and press the **Enter** key. Select Yes to perform the reset or No to ignore the reset.

To completely erase all of the Event Records from the event memory highlight the Erase Event Memory field and press **Enter**. Select Yes to perform the reset or No to ignore the reset.

**Caution** It is important that the user not turn off power to the CWR-264P for 60 seconds after initiating a reset of the Event Record memory.

This concludes the chapter on how to operate the CWR-264XC from the front panel of the Primary Unit. Since the setup of the system is critical to how the CWR-264XC will perform, it is advisable to review any changes that may have been made to the Setup Database.

The next chapter describes general maintenance techniques that may benefit the user in case a problem symptom is ever encountered.



# MAINTENANCE

## Introduction

The primary purpose of this chapter is to describe the recommended trouble-shooting methods to be used with the CWR-264XC. It should be referred to if ever a questionable symptom arises during the operation of the recording system.

The CWR-264XC is designed to provide its user with many years of trouble-free operation. There are no user serviceable parts inside the various units. There are no consumable items or supplies that need to be replaced or replenished. The user may occasionally need to wipe dust away from the external surfaces of a unit. This should be done with a clean, dry cloth. The mechanical design of each chassis provides the internal electronic assemblies with a nearly sealed environment. Due to the low power consumption of each unit ventilation holes are not required. The inside of each unit should remain clean indefinitely. Additionally, MICRO-AIDE printed circuit boards (PCBs) are sealed with a moisture and fungus resistant conformal coating.

## Adjusting the LCD Contrast

The contrast level of the Primary Unit's LCD panel may occasionally need to be adjusted to compensate for variations in ambient temperature. To adjust the contrast level rotate the potentiometer labeled "Adj". It is accessible through a small hole in the front panel of the CWR-264P.

## Analog Input Switches (SW1)

There is a single, four position DIP switch assembly located at the rear panel of the CWR-264S. It is referred to as the Analog Input Switch. The DIP switch assembly contains four switches. Labeling on the body of the switch assembly indicates the on and off positions for each switch. Refer to Figure 6 on page 13 to locate the described switch.

The Analog Input Switch is used to configure the CWR-264S for use with the CWR-CS Current Sensor. To assign an Analog Input to the Current Sensor the switch for that input must be closed. To assign the input as a voltage input the switch must be opened. Analog Inputs A1 through A4 use switch positions SW1-1 through SW1-4, respectively.

An Analog Input must be enabled as a voltage input or a Current Sensor input, never both. To ensure this, open the appropriate switch for voltage operation and make sure that nothing is connected to an Analog Input if it is assigned as a current input.

**Caution** Never connect a Current Sensor input to an Analog Input that has a voltage source connected. Damage to the Current Sensor or improper operation of the voltage source may result.

## Working Inside a Recording Unit

The user may have occasion to work inside one of the units. Such work may include replacing the internal modem PCB, Ethernet module or fuse(s). The following sections describe the recommended method for conducting these tasks. Observe the steps listed below before attempting any task. Refer to Figure 2 on page 9 through Figure 6 on page 13. They illustrate the front, top and rear views of the Primary and Secondary Units, respectively.

1. Remove power from the unit by detaching the connector labeled “Pwr” located along the top side of the chassis.
2. Remove all of the Analog and Digital Input connectors and peripheral cables. Remove the unit from the equipment rack.
3. Remove the six 6-32 1/4" screws from the top and bottom sides of the cover assembly.
4. If the task requires that the cover assembly be completely removed, disconnect the cable that connects the Processor and I/O PCBs.

The task can now be performed safely. After the work is completed reassemble the unit by reversing the steps listed above.

**Caution** The Processor and I/O PCBs are each equipped with a potentiometer that is set and sealed at the factory. Do not attempt to alter these settings.

**Caution** Electrostatic discharges can cause serious damage to electronic components. When handling circuitry inside the unit it is recommended that the user wear a wrist grounding strap.

## Replacing the Internal Modem

The CWR-264P is equipped with a 33,600 Baud internal modem. The modem provides accessibility to remote users of the recording system. Unlike commercially available external modems, the CWR-264P modem will operate over the entire temperature range applicable to the unit. It uses the internal power of the CWR-264P rather than commercial AC power.

**Note** The CWR-264S is never equipped with a modem.

The modem PCB is provided as a standard feature of the Primary Unit. However, it may need to be replaced in the event of damage caused by a severe lightning strike. To install a replacement modem follow the steps listed below.

1. Remove the unit’s cover assembly in accordance with the procedure described earlier.
2. Locate the existing modem near the upper left-hand corner of the Processor PCB. The modem’s outline and mating connector are illustrated in Figure 11 on page 100.

3. Remove the 6-32 1/4" screw and lock washer secured to the hex stand-off located near the modem connector labeled "J2". Remove the modem by unseating it from the connector.
4. Install the replacement modem, component side up, by mating its sixteen-pin female connector with the Processor PCB connector. Use the 6-32 screw and lock washer to secure the modem to the hex stand-off. Reassemble the unit.

When the CWR-264P is reinitialized the firmware will automatically detect the modem's presence and configure it for auto-answer and originate operation.

## Replacing the Ethernet Port

The Primary and Secondary Units are each equipped with a 10/100 Base-T Ethernet Port. Like the internal modem, it uses the internal power of the unit rather than commercial AC power.

An Ethernet Port is always provided as a factory installed item within each unit. However, in the event of a failure the user can replace the Ethernet module without returning the entire unit to the factory for repair. To install a replacement Ethernet Port follow the steps listed below.

1. Remove the unit's cover assembly in accordance with the procedure entitled "Working Inside a Recording Unit" on page 98.
2. Locate the existing Ethernet module along the upper edge of the Processor PCB. The module's outline and mating socket are illustrated in Figure 11 and Figure 12 on page 100. Carefully remove the existing module by prying the end of the module slightly upward.
3. Carefully align all of the pins on the replacement Ethernet module with their socket counterparts. Press firmly on the module to insure it is seated properly and fully into the socket.
4. Reassemble the unit.

After power is reapplied to the unit and the firmware is initialized the Ethernet Port must be properly assigned. Refer to the procedure entitled "Network (N) - Primary Unit" on page 43.

## Replacing the Fuses

There are five fuses mounted on the Primary Unit's Processor PCB. A single fuse is used by the Processor PCB of the Secondary Unit. The fuses are designed to protect the input power source and the contacts of the output relays. They are all rated at 1 A and conform to the 2AG size standard. Before replacing a fuse the cause of the blown fuse should be ascertained and cleared if possible.

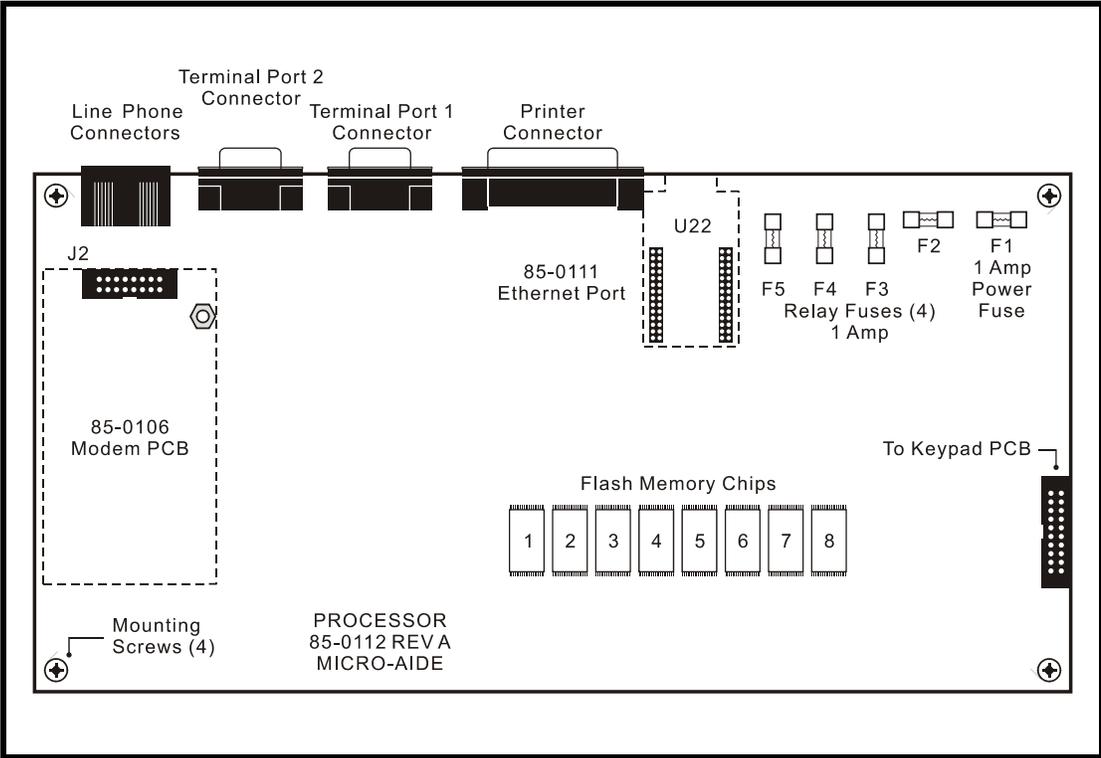


Figure 11 - CWR-264P Processor PCB

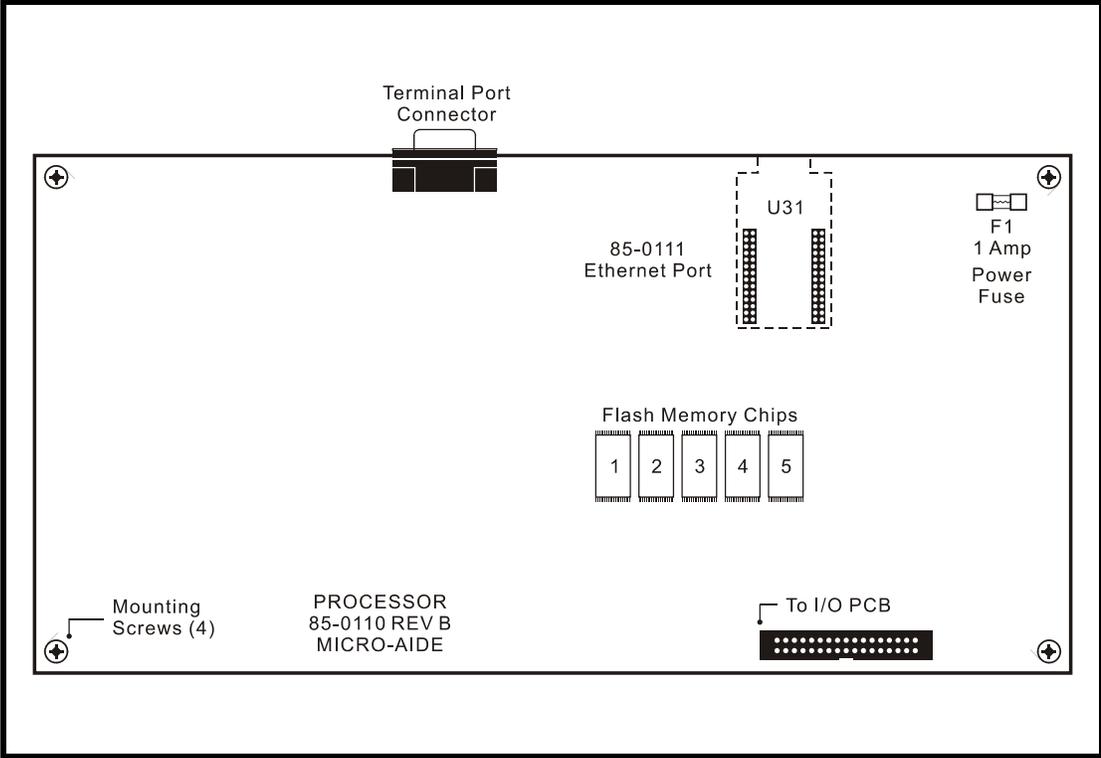


Figure 12 - CWR-264S Processor PCB

## Reconnecting the Internal Cables

Each unit contains a single ribbon cable. In the case of the Primary Unit, a ribbon cable connects the Processor PCB to the Keypad PCB and LCD panel. In the Secondary Unit a ribbon cable connects the Processor PCB to the I/O PCB. These cables have 20 and 34 conductors, respectively. When removing the cover assembly the I/O cable of the Secondary Unit may need to be disconnected. To reconnect the cables simply seat them into their respective connectors. The connector end of each cable is keyed. Do not force the connector end into place. It should fit snugly but easily.

## Diagnostic Testing

The Main Menu of commands for the CWR-264P includes the Diagnostics command. Refer to the sample data labeled “Main Menu” on page 15. The Diagnostics command can be used to quickly verify the operational integrity of several hardware elements of the CWR-264P. Each of the six tests can be performed at any time. They are non-destructive and therefore will not alter the Setup Database or Event Record memories.

The following menu of commands will be displayed in response to selecting the Diagnostics command.

```
System Diagnostics
C Checksum Test Program Memory
F Flash Memory Test
M Modem Test
K Keypad Test
R Relay Test
T Temperature
```

Each command performs a specific test. The tests are described in the following sections.

**Note** The Checksum, Flash Memory and Temperature tests can also be performed via the Diagnostic Port of the Secondary Unit.

### Checksum Test Program Memory (C)

The Checksum Test reads every memory address location used to store the program code. As part of the reading process a checksum is calculated and displayed at the completion of the test. The same checksum must be calculated each time the test is performed. Any variation in the result is an indication of a problem.

A typical response to the Checksum Test Program Memory command is listed below.

```
Program Memory Checksum=1d00

Test Complete
Press any key to continue
```

The checksum takes only a few seconds to be calculated. The checksum value labeled “1d00” in the above example will vary with the version of the firmware installed in the Primary Unit. The Secondary Unit will report a different checksum value (e.g., 2e00 for Version 1.01).

## Flash Memory Test (F)

The Flash Memory Test is performed on the memory chips used to store Event Records. The test verifies that the microprocessor can access the Event Record memory.

The correct response to the Flash Memory Test command is listed below.

```
Flash Memory #1: 4096K
Flash Memory #2: 4096K
Flash Memory #3: 4096K
Flash Memory #4: 4096K
Flash Memory #5: 4096K
Flash Memory #6: 4096K
Flash Memory #7: 4096K
Flash Memory #8: 4096K

Test Complete
Press any key to continue
```

Each of the Flash Memory positions should indicate a reading of “4096K”. A value of 0K indicates that a memory failure has been detected. The Secondary Unit is configured with only one Flash Memory device. It is always in the first position and should report a value of 2048K.

## Modem Test (M)

The Modem Test can be performed at any time to verify that the microprocessor can communicate properly with the internal modem. The test can be performed while the modem is idle or while a call is active.

Assuming that the modem is operating properly there are two possible responses to the Modem Test command. Both responses are listed below.

```
Modem Test in progress...
Modem found: H

Test Complete
Press any key to continue
```

```

Modem Test in progress...
Modem found: 33600

Test Complete
Press any key to continue
    
```

The H and 33600 responses indicate that a Silicon Labs or Conexant modem is installed, respectively. If a modem is installed but none is indicated a problem has occurred and must be corrected.

## Keypad Test (K)

Each of the twenty keys that comprise the front panel keypad can be checked by using the Keypad test. The following instructions are displayed after selecting the command.

```
Keypad test, press ESC to cancel
```

A single unique character is displayed in response to pressing a key. The correspondence between non-numeric keys and displayed characters is listed in Table 7, below.

Key	Browse	Alpha	Setup	Esc	Enter	Print	↑/.	↓/-	←	→
Displayed	B	A	S	E	N	P	^	v	<	>

Table 7 - Keypad Test Characters

To exit the test press the **ESC** key located at the keyboard of the peripheral device that is communicating with the CWR-264P.

## Relay Test (R)

The Relay Test allows the user to verify the operation of the internal relays and any alarm or indication circuitry connected to the contacts of the relays.

The following message will be displayed in response to selecting the Relay Test command. To energize a relay select one of the On options. To un-energize a relay select one of the Off options.

```

Relay Test

1 Relay 1 ON
2 Relay 1 OFF
3 Relay 2 ON
4 Relay 2 OFF
5 Relay 3 ON
6 Relay 3 OFF
7 Relay 4 ON
8 Relay 4 OFF
    
```

To exit the test press the **Esc** key. The relays will automatically assume an un-energized state.

## Temperature (T)

The Temperature command simply reports the temperature inside the unit. A typical response is shown below. The temperature is always reported in degrees Fahrenheit.

```
Unit Temperature  89 Degrees F

Test Complete
Press any key to continue
```

**Note** The measured temperature inside the CWR-264P or CWR-264S will generally be 10°F to 15°F warmer than the surrounding ambient temperature. Temperature readings should never exceed 180°F.

**Note** The user may wish to contact MICRO-AIDE customer service if a failure occurs as the result of any diagnostic testing. Instructions on how to proceed will be offered. Material Return and Limited Warranty policies are described on the inside back cover of this manual.

## System Events

Event Records are normally created by a change in state of an input. Exceptions to this rule concern the cycling of power to a Primary or Secondary Unit, variations in the measured temperature and events related to the Train Speed Monitor feature. The latter feature is described in the section entitled “Measure Speed (M)” on page 41.

Each time power to a unit is turned on or off an event will be logged into memory. If the temperature transitions into or out of the acceptable range of operation or the speed of a train is reported, an event will also be logged. These events are classified as System Events. To distinguish them the Input Number always includes an S-prefix (e.g., S01). Additionally, the Input Name, Identifier and Event Name fields within the record are uniquely labeled. They cannot be changed by the user. Table 8 on page 105 lists the various fields used by each System Event Record.

Input Number	Input Name	Identifier	Event Name Pair
S01	System Power	Power	ON / OFF
S02	High Temperature	HighTemp	ON / OFF
S03	Low Temperature	LowTemp	ON / OFF
S04 to S19	Speed Monitor 1 to 16	SpeedLim	ON / OFF
S20	System Power-1	Power-1	ON / OFF
S21	High Temperature-1	HiTmp-1	ON/OFF
S22	Low Temperature-1	LoTmp-1	ON/OFF
S23	unassigned	unassigned	unassigned
S24 through S79			
S80	System Power-16	Power-16	ON / OFF
S81	High Temperature-16	HiTmp-16	ON/OFF
S82	Low Temperature-16	LoTmp-16	ON/OFF

*Table 8 - System Event Records - Field Labels*

System Events can be reviewed using any of the five formatting options. Record formats are described in the section entitled “Event Record Formats” on page 66. Listed below are five sample Event Records as they would appear at the PC. In the interest of simplicity only the No Details, single-line form is shown.

05:18:27.00	04/06/05	System Power	Power	OFF	S01
05:18:59.24	04/06/05	System Power	Power	ON	S01
14:11:51.00	04/06/05	High Temperature	HighTemp	ON	S02
15:00:09.00	04/06/05	High Temperature	HighTemp	OFF	S02
15:31:04.37	04/06/05	Speed Monitor 8	SpeedLim	ON	S11 16MPH

The first two records indicate that power was off to the Primary Unit for approximately 32 seconds. Later in the same day the measured temperature was found to be excessive for approximately 48 minutes. A train speed violation of 16mph occurred at 15:31:04. The Input Names, Input Identifiers and Event Name pairs shown above are the permanent assignments used in System Event records. They cannot be changed by the user.

The first record listed above is also shown below as it would appear at the front panel LCD.

05:18:27.00	04-06-05
S01	
System Power	
Power	OFF

System Events can be Queried and Browsed just like other Event Records. Instead of selecting a D, A, V or T input type designator, select the S type.

**Note** System Event Records that include the Digital Input details will indicate the state of Digital Inputs 1 through 64 only.

**Tip** System Events are always logged to memory in chronological sequence. The power on event will immediately follow the power off event. The time between the two Event Records indicates the period during which no logging was possible. All of the Analog Input measurements for S1 records will be reported with a zero value. This is done to eliminate erroneous readings.

## Upgrading the Firmware

Like any microprocessor-based product the Primary and Secondary Units execute a stored memory program. The program, referred to as firmware, is saved in a Flash Memory chip. Flash Memory chips are uniquely characterized by their permanent storage and multiple write properties. Their use allows the firmware to be upgraded to a newer version by simply uploading a new program file. The more common practice of shipping and replacing a Programmable Read Only Memory (PROM) chip does not apply to the CWR-264XC. Consequently, there is no need to open a unit to gain access to the Processor PCB.

**Note** The firmware upgrade procedure is normally performed via a PC connected to a Terminal Port of the Primary or Secondary Unit. It cannot be performed via the front panel keypad. An upgrade can be performed remotely via the Primary Unit's internal modem. In such cases MICRO-AIDE support personnel can perform the upgrade at the request of the user. An Ethernet Port cannot be used to perform a firmware upgrade.

Before the upgrade can be performed the PC communications program (e.g., HyperTerminal® or Procomm Plus®) must be properly configured. The following list describes the correct configuration. The procedure applies to both the Primary and Secondary Units.

- **Transfer protocol:** Xmodem.
- **Connection:** Typically Direct connect-Com1 or Direct connect-Com2 (whichever is available at the PC).
- **Baud rate:** set to 38,400 and set to N-8-1. The boot loader can only communicate at 38,400 Baud.

Each of the steps required to perform the upgrade are listed below.

1. Turn the power off and then back on to the unit. After a few seconds the following message will be displayed at the PC.

```
Micro-Aide CWR-264P Flash Boot Loader  
Press ESC for boot loader
```

2. Press the **ESC** key at the keyboard of the PC within five seconds after the boot message is displayed. The following menu of commands will then be displayed.

```
Menu
U Upload new program to Flash memory
D Display sample of uploaded code
F Display flash
R Run main program
Enter Command:
```

3. Press the **U** key followed by the **Enter** key to proceed with the upload. A message similar to the following will be displayed.

```
Enter Command: uFlash memory mfg-dev code is 01-41
For AMD 8/16/32Mbit this should be 01-d5/ad/41
For ST 8/16Mbit this should be 20-f1/ad
Hit enter to erase and start upload, any other key to abort
```

4. Before the new firmware can be uploaded the contents of the Flash Memory chip must be erased. To initiate the erase press the **Enter** key. The following message will be displayed.

```
Start XMODEM upload now
CCCC
```

5. The C characters listed in the last line of text are an indication that the unit is ready to receive the new program file. The next several steps depend upon whether the user is accessing the unit via HyperTerminal or Procomm Plus. Both procedures are listed below.

## HyperTerminal

1. With the mouse, click on the Transfers command, then the Send File ... command. The Send File dialog box will open. Verify that the Xmodem protocol is selected.
2. Select the correct disk drive, folder and filename (e.g., CWR-264P V108.bin). If the various settings are correct click on the Send button.
3. An information box will automatically open. It will indicate the progress of the transfer. The information box will close automatically to indicate a successful transfer. The following message will be displayed to indicate the completion of the transfer.

```
End of file, transfer completed
Hit any key to continue
```

4. Press any key to display the following menu of commands.

```
Menu
U Upload new program to Flash memory
D Display sample of uploaded code
F Display flash
R Run main program

Enter Command:
```

5. Press the **R** key followed by the **Enter** key to run the program just loaded. The request for a password message will be displayed and normal operation of the unit will commence.

## Procomm Plus

1. With the mouse, click once on the Send File icon near the top center of the Procomm Plus window. The icon appears as an upward pointing arrow. The Procomm Plus Send File using-Xmodem dialog box will open.
2. Select the correct disk drive, folder and filename (e.g., CWR-264P V108.bin). If the various settings are correct click on the Open button.
3. An information box labeled Xmodem will appear. It will indicate the progress of the transfer. The information box will close automatically. The following message will be displayed to indicate the completion of the transfer.

```
End of file, transfer completed
Hit any key to continue
```

4. Press any key to display the following menu of commands.

```
Menu
U Upload new program to Flash memory
D Display sample of uploaded code
F Display flash
R Run main program

Enter Command:
```

5. Press the **R** key followed by the **Enter** key to run the program just loaded. The request for a password message will be displayed and normal operation of the unit will commence.

**Note** After completing the firmware upgrade procedure it may be necessary to execute the Reset System command. A reset should be performed only if recommended by MICRO-AIDE customer service technicians. Refer to “Reset System (R)” on page 23.

## Trouble-shooting Guide

The following guide is provided to assist the user in resolving problems that may occur with the operation of the CWR-264XC. It can be especially helpful when attempting to operate the

recording system for the first time. Procedures for resolving both local and remote problems are listed. Where multiple steps are indicated it is recommended that they be performed in the order listed. Corrective actions to be performed inside a unit must be carried out in accordance with the procedure entitled “Working Inside a Recording Unit” on page 98.

If the user is unable to resolve the problem, MICRO-AIDE customer service technicians should be contacted. The user will be asked to state the problem, related symptoms, and indicate any operations or conditions that have a bearing on the problem. If available, the results of any diagnostic tests should be reported. The internal modem of the CWR-264P may prove to be helpful in diagnosing the problem from the MICRO-AIDE factory. The user will be asked to provide the appropriate telephone number and correct password.

Symptom or Problem	Resolution
No indication of power	Verify 10 to 36Vdc at B and N power terminals Inspect fuse on Processor PCB
PC does not display data when connected to a Terminal Port	Check cable connection to Terminal Port Verify cable is assembled per Figure 13 on page 116 Check Baud rate setting Check if Terminal LED on front panel illuminates
Data at PC is garbled when connected to a Terminal Port	Check Baud rate setting Verify following setting: 8 data bits, 1 start bit, 1 stop bit
Printer connected to Terminal Port is missing data	Use Pause and Resume commands to prevent overflowing data buffer of printer
Highlight cannot be moved at PC	Set the PC for ANSI emulation
PC does not communicate via an Ethernet Port	Verify Primary and Secondary IP Addresses and Port Numbers are correctly assigned Verify the Ethernet Port in the PC is configured properly Verify PC's communications application is set up for TCP/IP protocol Verify Ethernet cable is a standard CAT-5 type
Initial Check-out Procedure fails on all inputs	Verify polarity of test voltage is applied correctly Verify Detection Times are not set to zero Check inputs using View Events command Check network settings
Setup Database transfer fails via Ethernet Port connection	Use Network command to change TCP/IP Mode setting to Telnet
Event Records are not being created on some inputs	Check wiring, especially polarity Set Detection Time to shorter value Verify Detection Times are not set to zero
Flashing Inputs create multiple Event Records	Enable flashing status for inputs Set Detection Time to a longer value

Table 9 - Guide to Trouble-shooting Techniques

Multi-page reports are not printed	Verify the printer is turned on Verify the printer is connected to the Printer Port with a parallel printer cable Verify the printer is online Verify the printer is supplied with paper
Browse key at front panel will display single Event Record; however, the Print key will not print the displayed record	Press the page eject button on the printer's control panel
Last page of the printed report is missing	Press the page eject button on the printer's control panel
Columns of the printed report do not line up	Select a mono-spaced printer font (e.g., Courier) Refer to the printer's user manual
Analog Input AC source measures 0	Analog Input is configured for DC, change to AC
Analog Input DC source measures correctly but reports AC units	Analog Input is configured for AC, change to DC
Negative Analog Input voltage is not reported, measures 0	Analog Input Range is set to +51.1Vdc, change to $\pm$ setting
AC analog readings are not stable	Reassign the analog Filter setting to Slow
DC analog readings are not tracking voltage changes	Reassign the analog Filter setting to Fast
Upload/Download of Setup Database fails	Verify XMODEM protocol is being used
Modem does not answer	Check phone line connection Verify Modem Ring Count is not set to zero
Modem answers but fails to connect	Check modem Baud rate at host end Verify host modem is compatible with Primary Unit's modem Test host modem with another auto-answer system
Modem will not dial out alarms	Test phone line for dial tone Perform Modem Test command Verify modem is enabled by Virtual Input Check Primary and Secondary Dial Numbers
Internal relay will not operate	Perform Relay Test command Verify relay is enabled by Virtual Input Disconnect the external circuit attached to the relay contacts, test again
CWR-CS Current Sensor is installed but current readings are 0	Set Analog Input Switches to on position
Visibility of LCD characters is poor	Adjust LCD contrast

*Table 9 - (Continued) Guide to Trouble-shooting Techniques*

This completes the User Manual for the CWR-264XC Event Recording System. As an aid to the user four appendices have been provided. They include detailed specifications and options appli-

cable to the CWR-264XC. Appendix C includes information pertaining to the CWR-CS Current Sensor. Appendix D includes a complete Bill of Materials for each sub-assembly.

Any comments the reader may have on how to improve this manual are welcomed. Comments should be forwarded to the Director of Marketing, MICRO-AIDE Corporation.



# TECHNICAL DATA

## CWR-264P Specifications

### Physical

#### Size

**Length:** 19.0"  
**Height:** 7.8" (10.5" of rack space)  
**Depth:** 3.2"

#### Weight

4lb.

### Environmental

#### Storage

**Temperature:** -50°C to 85°C  
**Humidity:** 0 to 95%, non-condensing

#### Operating

**Temperature:** -40°C to 72°C  
**Humidity:** 0 to 95%, non-condensing

### Mounting

**Standard:** mounts in 19" rack  
**Optional:** 23" rack mounting brackets available

### Construction

#### Chassis

Fully enclosed, anodized aluminum  
 Externally accessible keypad, LEDs and connectors

#### Electrical

All components mounted on conformal coated, internal PCBs

### Power

#### Voltage

**Range:** 10 to 36Vdc

#### Consumption

**Typical:** 6W  
**Maximum:** 7W

### Isolation

#### Power

**Minimum:** 3800Vdc from B and N terminals to chassis

#### Internal Modem

Designed to meet FCC part 68 standards

#### Ethernet Port

**Minimum:** 3800Vdc to any terminal

### Capacities

#### CWR-264S

1 to 16 Secondary Units

#### Programmable Inputs

**Virtual:** 32, user assigned  
**Timer:** 999, user assigned

#### Outputs

**Relays:** 4, dual form C, rated for 2A at 24Vdc or 1A at 125Vac, maximum switching capacity of 125VA or 60W, service life 1 million electrical (typical)

#### Event Storage

**Standard:** 1,816,045 records  
**Memory Full:** 129th day overwrites first day, newest data overwrites oldest data

#### Ethernet Port

**Quantity:** 1  
**Type:** 10/100 Base-T

#### RS-232 Port

**Quantity:** 2, for use with a PC  
**Emulation:** ANSI  
**Baud Rates:** 300, 600, 1200, 2400, 4800, 9600, 19,200, 38,400, 57,600, 115,200  
**Bit Format:** N-8-1

#### Printer Port

**Quantity:** 1, parallel, for use with inkjet and laserjet printers

### Capacities (continued)

#### Liquid Crystal Display

**Characters:** 80 total on 4 lines  
**Character Set:** A-Z upper- and lower-case, 0-9, various symbols  
**Viewing Area:** 2.8" by .8"

#### Front Panel Keypad

**Quantity:** 20 keys  
**Keys:** 0-9, Browse, Alpha, Setup, Esc, Enter, Print, left, right, up/., down/-

### Virtual Inputs

#### Quantity

32, user assigned

#### Definitions

Any logical association shared by 1 to 4 variables (i.e., Digital, Analog, Timer or Virtual Inputs)

Assigned by defining the state of the Virtual Input for each combination of variable states

#### Reporting

Creates standard Event Record  
 Relays can be controlled by each Virtual Input  
 Modem can be set up to dial-out Event Record

### Timer Inputs

#### Quantity

999, user assigned

#### Programming

Any Digital, Analog, Virtual or Timer Input can be assigned as the trigger source

Any Digital, Analog or Virtual Input can be assigned as the terminating source

On or Off events can be assigned as the trigger or terminating source

---

## Timer Inputs (continued)

### Limit Values

Separate high and low limits per assigned Timer Input, in multiples of .1 seconds

**Range:** 0.0 to 999.9 seconds

### Reporting

Measured Time is reported in each Timer Input Event Record

Violation of Limit Values are also reported

---

## Train Speed Monitor

### Quantity

16 total, separately programmable

### Operation

Reports excessive train speed

Logs standard Event Record

Sensors are wired to 2 spare Digital Inputs

### Limit Values

5 to 180mph

### Distance between Sensors

50' to 5280'

---

## Memory

### Type

Non-volatile, Event Records and Setup Database are stored in flash memory chips

### Storage Longevity

Infinite with power off

Rated for 1 million write operations

---

## Connectors

### Terminal Ports (2)

DE-9 male, configured as DCE

### Printer Port

DB-25 female, standard parallel printer configuration

### Power

Detachable, screw-down, 4-position, 12 to 22AWG

Dual B and N terminals

---

## Connectors (continued)

### Alarm Relays

Detachable, screw-down, 12-position, 12 to 22AWG

4 sets of N.O., N.C. and common

### Telephone Line (2)

RJ-11 female, wired in parallel

### Ethernet Port

RJ-45 female

---

## Controls

### Keypad

20 keys, located on front panel

### LCD Contrast Adjust

Single-turn potentiometer, located on front panel

---

## Indicators

### LCD Panel

Includes LED back lighting for enhanced visibility

Displays numerous command menus for configuring the recorder and retrieving data

### LEDs (3)

**Power:** green

**Terminal:** green, flashes with send/rcv data

**Modem:** green, flashes with send/rcv data and ring-in

---

## Internal Clock

### Accuracy

**Typical:**  $\pm 1$  minute per month (20ppm)

**Sync:** spare Digital Input used to synchronize real-time clock of Primary Unit

Synchronizes clock of Secondary Unit(s) every 10 seconds

### Resolution

Event Records are time stamped to nearest .01 seconds

### Operation

Full calendar, auto-adjusted for leap year

Non-volatile with power off

Y2K compliant

---

## Password Protection

### Administrative Level

Access to all functions, limit 8 characters

### Restricted Level

Access to Event Record and Setup Database viewing only, limit 8 characters

### Passcode

Protects against alterations to Setup Database via front panel, limit 8 digits

---

## Internal Modem

### Type

V.34, 33,600 Baud, data compression and error correction

### Usage

Remote access via auto-answer operation

Allows dial-out alarm reporting of Virtual Input records

### Compliance

Designed to meet FCC part 68 standards

---

## Dial-out Alarms

### Calling Method

Primary and secondary dial numbers, multiple attempts

Tone or pulse dialing

### Data

Issues Event Record for enabled Virtual Inputs

---

## Ethernet Port

**Type:** 10/100 Base-T

**Usage:** normally connected to LAN via CAT-5 cable to Ethernet Switch

**Speed:** 100Mbps

**Protocol:** TCP/IP, Telnet

**LED Indicators:** Green - link established; Yellow - data activity

*MICRO-AIDE reserves the right to make changes, at its sole discretion, to any specifications listed herein.*

# CWR-264S Specifications

## Physical

### Size

**Length:** 19.0"  
**Height:** 7.8" (10.5" of rack space)  
**Depth:** 3.8"

### Weight

7lb.

## Environmental

### Storage

**Temperature:** -50°C to 85°C  
**Humidity:** 0 to 95%, non-condensing

### Operating

**Temperature:** -40°C to 72°C  
**Humidity:** 0 to 95%, non-condensing

## Mounting

**Standard:** mounts in 19" rack  
**Optional:** 23" rack mounting brackets available

## Construction

### Chassis

Fully enclosed, anodized aluminum  
Externally accessible LED and connectors

### Electrical

All components mounted on conformal coated, internal PCBs

## Power

### Voltage

**Range:** 10 to 36Vdc

### Consumption

**Typical:** 6W  
**Maximum:** 7W

## Isolation

### Power

**Minimum:** 3800Vdc from B and N terminals to chassis and inputs

### Digital Inputs

**Minimum:** 3800Vdc to any terminal

### Analog Inputs

**Minimum:** 3800Vdc to any terminal

## Isolation (continued)

### Input to Adjacent Input

**Digital:** minimum 3800Vdc  
**Analog:** minimum 3200Vdc

### Ethernet Port

**Minimum:** 3800Vdc to any terminal

## Capacities

### Inputs

**Digital:** 256, all opto-isolated  
**Analog:** 8 total, 4 can measure current

### Event Storage

**Standard:** 100,000 Event Record buffer used to save records before polling by Primary Unit  
**Type:** non-volatile flash memory

### Ethernet Port

**Quantity:** 1  
**Type:** 10/100 Base-T

### RS-232 Port

**Quantity:** 1, for use with a PC  
**Usage:** serves as a diagnostic port  
**Emulation:** ANSI  
**Baud Rates:** 300, 600, 1200, 2400, 4800, 9600, 19,200, 38,400, 57,600, 115,200  
**Bit Format:** N-8-1

## Inputs

### Input Impedance

**Digital:** minimum 10KOhms, opto-isolated  
**Analog:** minimum 10MOhms

### Range

**Digital Input - On:** 5 to 40Vdc  
**Digital Input - Off:** 0 to 2Vdc  
**Analog DC Voltage:** 3 scales,  $\pm 25.5$ ,  $+51.1$ ,  $\pm 255$   
**Analog AC Voltage:** 2 scales, 25.5, 255

**Analog Current:** 2 scales (optional),  $\pm 25.5$ Adc, 25.5Aac

### Event Validation Times

**Digital:** .01 to 327.67 seconds, compatible with fixed rate flashing circuits  
**Analog:** fast and slow filter settings

## Analog Input Accuracy

**Typical Vdc:**  $\pm 1\%$  full scale  
**Typical Vac:**  $\pm 1.5\%$  full scale  
**Typical Current:**  $\pm 2\%$  full scale

## Analog Limit Values

### Voltage

Separate high and low limits, in multiples of .1V or 1V

### Current

Separate high and low limits, in multiples of .1A

### Internal Temperature

Separate high and low limits, -67°F to 257°F

## Memory

### Type

Non-volatile, Event Records and Setup Database are stored in flash memory chips

### Storage Longevity

Infinite with power off  
Rated for 1 million write operations

## Connectors

### Digital and Analog Inputs

Detachable, screw-down, 6 or 8 terminals each, 12 to 22AWG

### Terminal Port

DE-9 male, configured as DCE

### Power

Detachable, screw-down, 4-position, 12 to 22AWG  
Dual B and N terminals

### Ethernet Port

RJ-45 female

### Current Sensor

DE-9 female, used with CWR-CS

## Indicators

**LED:** power, green

## Internal Clock

### Accuracy

**Typical:**  $\pm 1$  minute per month (20ppm)

**Sync:** Primary Unit synchronizes each Secondary Unit cloc every 10 seconds

**Internal Clock (continued)**

**Resolution**

Event Records are time stamped to nearest .01 seconds

**Operation**

Full calendar, auto-adjusted for leap year

Non-volatile with power off  
Y2K compliant

**Password Protection**

**Type:** Restricted only, access to Event Record and Setup Database viewing only, limit 8 characters

Entire Setup Database is under control of the Primary Unit

**Usage:** applies only to Terminal Port

**Ethernet Port**

**Type:** 10/100 Base-T

**Usage:** normally connected to LAN via CAT-5 cable to Ethernet Switch

**Speed:** 100Mbps

**Protocol:** TCP/IP, Telnet

**LED Indicators:** Green - link established; Yellow - data activity

*MICRO-AIDE reserves the right to make changes, at its sole discretion, to any specifications listed herein.*

# Terminal Port Cable

The following cable is included with every CWR-264XC.

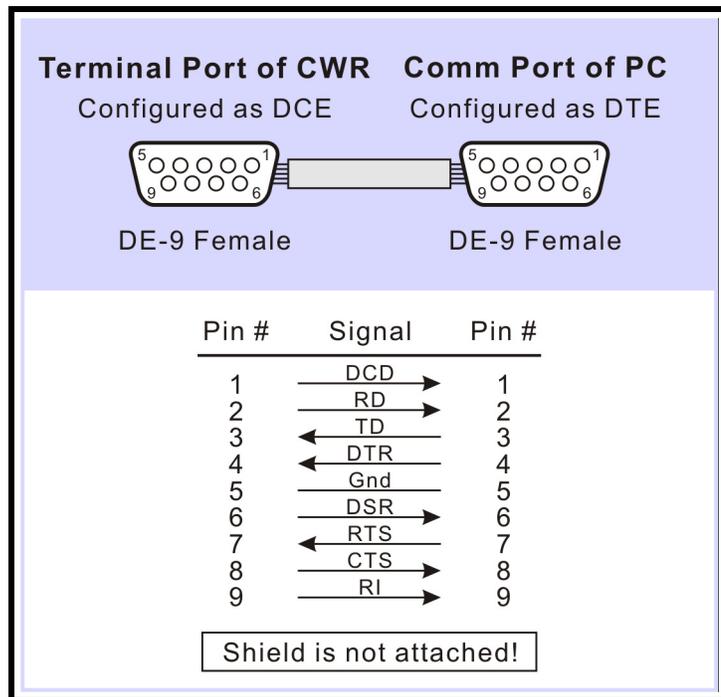


Figure 13 - Terminal Port Cable - Wiring Diagram

# OPTIONS AND ACCESSORIES

---

## Options (none available)

The CWR-264P is always equipped with an internal modem, Ethernet Port and the maximum memory configuration. These items are available as options with other CWR series recorders.

By way of comparison only, equivalent options are listed below.

### Internal Modem

**85-0106:** 33,600 Baud, V.34, V.32bis, V.32, V.22bis, V.22 and V.21, V.42bis and MNP 5 data compression, MNP 2-4 and LAP-M error correction

### Ethernet Port

**85-0111:** 10/100 Base-T, 100Mbps; TCP/IP, Telnet and SNMP compatible

### Memory Expansion

**40-1616:** 1,816,045 Event Records

---

## Accessories

### Current Sensors

**CWR-CS:** Current sensor for all CWR series recorders. AC or DC currents, .5 to 25.5A

**HCS-4:** High Current Sensor, 4 inputs, 1 to 20Adc or Aac

### Battery Charger Monitors

**CSI-1:** Charge Status Indicator, single input, monitors voltage and current

### Voltage Detectors

**FVD-2:** Failed Voltage Detector, 2 inputs, .5 to 48Vdc, .5 to 36Vac, high and low limit values

### Light Out Detectors

**FLD-2:** Failed Lamp Detector, 2 inputs, 3 to 11 lamps each input, DC or AC lamp current, compatible with all recorders

### Jumper Combs

**147250:** Weidmuller 10-position shorting clip used to connect multiple inputs to a single point (e.g., common return)

### Mounting

**31-0002:** 23" rack mounting brackets

**31-0003:** Wall mounting brackets

### Cables

**HC7377907/00:** CAT-5 (included with CWR-264P and CWR-264S)

DE-9 to DE-9 (included with CWR-264P)

Contact MICRO-AIDE when ordering any options or accessories. Purchase Order may list requested items as described in the above.



# CWR-CS CURRENT SENSOR

## Introduction

The CWR-CS is an optional accessory that can be used with any MICRO-AIDE CWR series Event Recorder. It is equipped with four general purpose current sensing inputs. Any of the first four Analog Inputs (i.e., A1 - A4) of the CWR-264S can be configured to measure either AC or DC current. Refer to the section entitled “Analog Configuration (A)” on page 32. The CWR-CS provides the hardware by which the voltage sensing Analog Inputs of the recorder are converted to current operation. Figure 13 on page 120 provides an illustration of the CWR-CS.

## Key Features

There are several important features concerning the CWR-CS the user may wish to consider.

- Either AC or DC currents in the range from 0 to 25.5 A can be measured.
- Each input is completely isolated from the current carrying conductor. The conductor is simply inserted through one of four holes in the unit.
- Hall-Effect circuitry is used to provide a wide operating range and stable performance.
- No adjustments or calibration steps are required prior to operation.
- No external power connections are required. The Event Recorder provides the power.
- The CWR-CS can be located up to 15' away from the recorder.
- Each insertion hole will accommodate a conductor terminated with a .5" ring lug.

## Installation and Setup

Figure 13 illustrates a typical CWR-CS installation. The unit may be mounted in any orientation (e.g., vertical or horizontal). It is not sensitive to the earth's magnetic field. The base of the unit provides four mounting holes. A shelf or back board makes an ideal mounting platform.

The current carrying conductors to be measured must be inserted through the holes in the unit. Turn the power off to the CWR-264S. Enable the required Analog Input circuits in the CWR-264S by turning on the appropriate switches located at the rear panel of the recorder. The correct procedure is described in the section entitled “Analog Input Switches (SW1)” on page 97.

Each CWR-CS is shipped with a 15' cable. Connect the cable from the CWR-CS to the connector labeled "Current Sensor" located along the rear panel of the CWR-264S. Apply power to the recorder. The recorder is now ready to report current measurements.

**Caution** Never connect a Current Sensor input to an Analog Input that has a voltage source connected. Damage to the Current Sensor or improper operation of the voltage source may result.

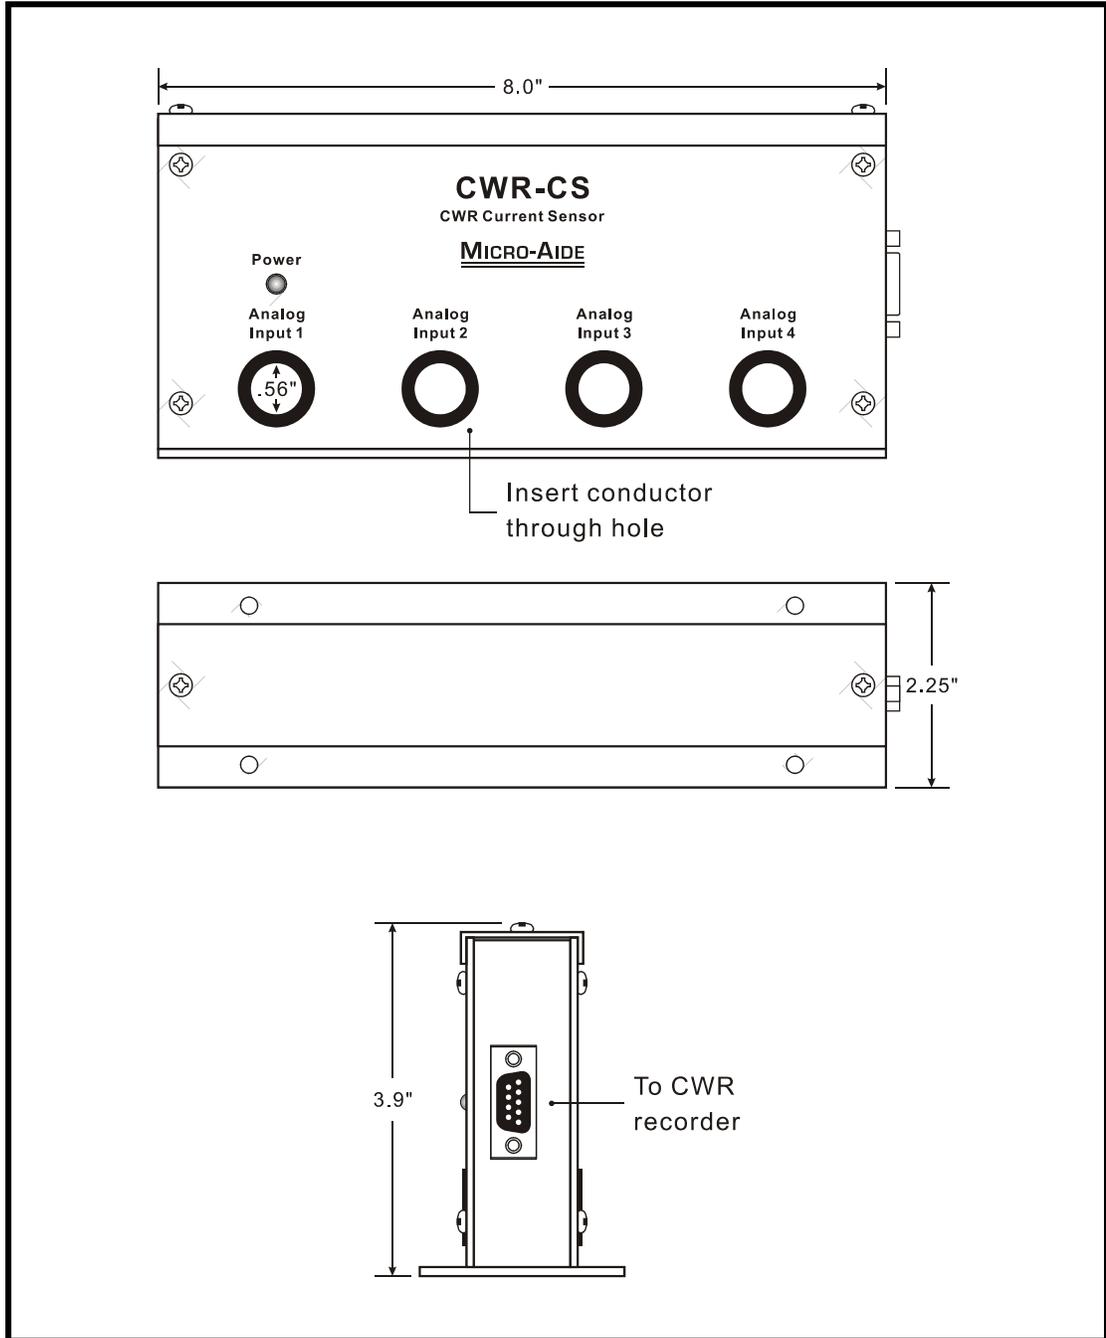


Figure 13 - CWR-CS Front, Top and Side Views

# BILLS OF MATERIAL

## CWR-264XC Bill of Material

M-A Part No.	Description / MFG Part No.	Qty.
CWR-264P	PRIMARY RECORDER	1
CWR-264S	SECONDARY RECORDER	1-16
51-0001	ETHERNET SWITCH, 16 PORT LINKSYS: EF3116	1
ZMCWR-264XC	USER MANUAL, CWR-264XC	1

## CWR-264P Primary Recorder

M-A Part No.	Description / MFG Part No.	Qty.
PA85-0112/00	PCB ASSEMBLY, PROCESSOR	1
PA85-0066/00	PCB ASSEMBLY, KEYPAD	1
PA85-0106/00	PCB ASSEMBLY, MODEM	1
PA85-0111/00	PCB ASSEMBLY, ETHERNET PORT	1
HC2402T6/01	CABLE, DE9 TO DE9, FEMALE TO FEMALE CABLE DEPOT: 2402-T-6 FF (MODIFIED)	1
HC7377907/00	CABLE, CAT-5, 7FT., GRAY AIM ELECTRONICS: 73-7790-7	2
I ACM2004/00	LCD, YELLOW-GREEN, 20 X 4, BACKLIT AMERICAN ZETTLER: ACM2004D-FL-GBS	1
J IDS-16T/00	CONNECTOR, 16-PIN, FEMALE, STRAIGHT SAMTEC: IDS-16-T	2
JPWW36-1R/01	WIREWRAP PINS, 36 BY 1 SAMTEC: TSW13607LS	16
JRIDS-C20/00	CONNECTOR, 20-PIN, FEMALE F/W AMP: 746285-4	2
JRSR-20K/00	STRAIN RELIEF, RIBBON, 20-CONDUCTOR AMP: 499252-2	2
JW171634/00	CONNECTOR, SCREW-DOWN, FEMALE, 4-POSITION WEIDMULLER: 171634	1
JW171642/00	CONNECTOR, SCREW-DOWN, FEMALE, 12-POSITION WEIDMULLER: 171642	1
M 220398/00	SHEETMETAL, BASE	1
M 220399/00	SHEETMETAL, COVER	1

## CWR-264P Subassemblies

### PA85-0112/00 Processor PCB

M-A Part No.	Description / MFG Part No.	Qty.
P 85-0112/00	PCB, PROCESSOR, CWR-264P	1
C 470PF/00	CAPACITOR, 470PF, 10%, 6KV XICON: CDR602P9-471K	1
C .1MF/00	CAPACITOR, .1MF, 50V, CERAMIC	31
C .47F/00	CAPACITOR, .47F, 5.5V, SUPER CAP ELNA: DH-5R5D474	1
CE220MF/01	CAPACITOR, 220MF, 16V, RADIAL, ELECTROLYTIC ELNA: RJ3-16V221MBX	2
CE220MF/02	CAPACITOR, 220MF, 50V, RADIAL, ELECTROLYTIC UCC: SME50VB221M10X16LL	1
CE2200MF/00	CAPACITOR, 2200MF, 6.3V, RADIAL, ELECTROLYTIC ELNA: RJ3-6V222MBX	1
CM47PF/00	CAPACITOR, 47PF, 100V, RADIAL, MICA CORNELL DUBILIER: CM04ED470J03	1
CT4.7MF/00	CAPACITOR, 4.7MF, 25V, RADIAL, TANTALUM	6
CT10MF/00	CAPACITOR, 10MF, 16V, RADIAL, TANTALUM	2
CT33MF/00	CAPACITOR, 33MF, 16V, RADIAL, TANTALUM	3
CT100MF/00	CAPACITOR, 100MF, 20%, 6.3V, TANTALUM SPRAGUE: 199D107X06R3DA1	3
D 1N4004/00	DIODE, 400V 1N4004	1
D 1N5822/00	DIODE 1N5822	1
D 1N914/00	DIODE 1N914	6
D MBR160/00	DIODE, SCHOTTKY, 60V MOTOROLA: MBR160	1
DZ1N5359B/00	ZENER DIODE, 24V, 5W 1N5359B	1
F 225001/00	FUSE, 1 AMP LITTELFUSE: 225001	5
FH111501/00	FUSE CLIP LITTELFUSE: 111501	10
H TP-101/00	TEST POINT COMPONENTS CORP.: TP-101-10	4
J 833-93/00	SOCKET STRIP, DUAL PIN MILMAX: 833-93-100-10-001000	28
J PLCC68/00	SOCKET, IC, 68-PIN KYCON: P-68LCC-1	1
JA555165/00	JACK, PHONE, RJ-11, RIGHT ANGLE AMP: 555165-1	2
JA747846/00	CONNECTOR, FEMALE, DB25 AMP: 747846-5	1
JMDE09PL/00	CONNECTOR, MALE, DB9, RIGHT ANGLE ADAM TECH: DE09PL23	2
JPCA02SJO/00	SHORTING JUMPER CIRCUIT ASSEMBLY: CA02SJO-A	1

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
JPWW18-2R/01	WIREWRAP PINS, 18 BY 2 SAMTEC: TSW11807LD	1
JRICO-203/00	SOCKET, IC, 20-PIN OUPIIN: 8003-20T3	3
JRIDH10LP/01	CONNECTOR, HEADER, 10-PIN, STRAIGHT ANGLE OUPIIN: 3012-10GSB	1
JRIDH16LP/01	CONNECTOR, HEADER, 16-PIN, STRAIGHT ANGLE OUPIIN: 3012-16GSB	1
JRIDH20LP/01	CONNECTOR, HEADER, 20-PIN, STRAIGHT ANGLE OUPIIN: 3012-20GSB	1
JW151286/00	CONNECTOR, 4-POSITION, RIGHT ANGLE WEIDMULLER: 151286	1
JW151366/00	CONNECTOR, 12-POSITION, RIGHT ANGLE WEIDMULLER: 151366	1
K G5V-2/00	RELAY, 5V, DIP OMRON: G5V-2-H1-DC5	4
L WFB-3.0/00	CHOKE, WOUND FERRITE BEAD FAIR-RITE: 2943666631	2
Q PN2222A/00	TRANSISTOR, TO-92 PN2222	5
QR1117-3/00	VOLTAGE REGULATOR, 3.3V, SMT BURR BROWN: REG1117-3.3	1
QRLT1171/00	VOLTAGE REGULATOR, SWITCHING, TO-220 LINEAR TECHNOLOGIES: LT1171CT	1
R 18 OHM/00	RESISTOR, 18 OHM, 5%, .25W	2
R 33 OHM/00	RESISTOR, 33 OHM, 5%, 1/8W	25
R 470 OHM/00	RESISTOR, 470 OHM, 5%, .25W	1
R 1K/00	RESISTOR, 1K, 5%, .25W	8
R 10K/00	RESISTOR, 10K, 5%, .25W	5
RA25010/00	ARRESTOR, GAS, 3-TERMINAL CP CLARE: PMT 3(310)25010	1
RN6S10K/00	RESISTOR NETWORK, 6-PIN, SIP, 10K, 2% BI TECHNOLOGIES: L061C103	1
RP5K/00	POTENTIOMETER, 5K, 1-TURN, TOP ADJUST BI TECHNOLOGIES: 72PR5K	1
TFPC40RM8/00	TRANSFORMER, ASSEMBLY, FLYBACK	1
U 75C185/00	IC, RS-232 TRANSCEIVER, DIP TI: SN75C185N	2
U 80386EX/00	IC, MICROPROCESSOR, 25MHZ, PQFP INTEL: KU80386EXTC-25	1
U DS1233/00	IC, POWER RESET DALLAS SEMICONDUCTOR: DS1233-10	1
U DS1302/00	IC, CLOCK, DIP DALLAS SEMICONDUCTOR: DS1302	1
U DS1620/00	IC, TEMPERATURE SENSOR DALLAS SEMICONDUCTOR: DS1620	1
UA16C552/00	IC, UART, PLCC STARTECH: 16C552IJ68	1
UF29F032B/00	IC, FLASH MEMORY, 32MBIT, TSOP, 85C AMD: AM29F032B-90EI	8

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
UP18CV8/06	PEEL, 85C, DIP ICT: 18CV8PI-15	1
URK6X4016/00	RAM, 256K X 16, 55NS, TSOP SAMSUNG: K6X4016C3F-T55	1
USHC14/00	IC, CMOS INVERTER, DIP TI: SN74HC14N	1
USHCT138/00	IC, DECODER, 3 TO 8, DIP TI: SN74HCT138N	1
USHCT245/00	IC, CMOS, OCTAL BUS XRCV, DIP TI: SN74HCT245N	1
X 32.768/01	CRYSTAL, 32.768KHZ, 6PF EPSON: C-002RX-32.768KHZE	1
XO44.2399/00	OSCILLATOR, 44.2399MHZ, DIP EPSON: SG-8002DC-44.2399MPTMB	1

**PA85-0066/00 Keypad PCB**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
P 85-0066/00	PCB, KEYPAD, CWR-56, -72, -96E, -264, -264E, -264P, -272E	1
C .1MF/00	CAPACITOR, .1MF, 50V, CERAMIC	2
C 1MF/00	CAPACITOR, 1MF, 50V, CERAMIC	1
DH126-210/00	STANDOFF, POTENTIOMETER BIVAR: DH126-210	1
DHC-174/00	STANDOFF, LED BIVAR: DHC-174	3
DL3962/00	LED: GREEN, SINGLE HP: HLMP-3962	3
JPWW36-1R/01	WIREWRAP PINS, 36 BY 1 SAMTEC: TSW13607LS	16
JRIDH20LP/01	CONNECTOR, 20-PIN, STRAIGHT ANGLE OUPIN: 3012-20GSB	1
R 4.7 OHM/00	RESISTOR, 4.7 OHM, 5%, .25W	1
R 330 OHM/00	RESISTOR, 330 OHM, 5%, .25W	3
RP10K/00	POTENTIOMETER, 10K, 1-TURN, TOP ADJUST BI TECHNOLOGIES: 72PR10K	1
SP320.04/00	SWITCH, PUSHBUTTON ESWITCH: 320.04 E1-1 GRY	20
U 74C923/00	IC, KEYBOARD INTERFACE MOTOROLA: MM74C923N	1

**PA85-0106/00 Modem PCB**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
P 85-0106/00	PCB, MODEM, SILICON LABS, ALL CWR EVENT RECORDERS	1
C 560PF/00	CAPACITOR, 560PF, 1KV, CERAMIC, DIP XICON: 140-102P6-561K	2
C .001MF/04	CAPACITOR, .001MF, 10%, 3KV, X7R, CERAMIC VISHAY: 30TSD10	2
C .1MF/00	CAPACITOR, .1MF, 50V, CERAMIC	2
CT10MF/00	CAPACITOR, 10MF, 16V, TANTALUM	2
CX10PF/00	CAPACITOR, 10PF, 10%, 50V, NPO, CERAMIC, 0805 XICON: 140-CC501N100D	1

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>. Qty.</b>
CX150PF/00	CAPACITOR, 150PF, 3KV, X7R, CERAMIC, 1808 JOHANSON: 302R29W151MV4	2
CX1800PF/00	CAPACITOR, 1800PF, 50V, X7R, CERAMIC, 0805 XICON: 140-CC501B182K	1
CX.0039MF/00	CAPACITOR, .0039MF, 50V, X7R, CERAMIC, 0805 XICON: 140-CC501B392K	2
CX.01MF/00	CAPACITOR, .01MF, 50V, X7R, CERAMIC, 0805 XICON: 140-CC501B103K	1
CX.022MF/00	CAPACITOR, .022MF, 630V, X7R, CERAMIC, 1206 PANASONIC: ECJ-3FB2J222K	1
CX.1MF/00	CAPACITOR, .1MF, 50V, X7R, CERAMIC, 0805 XICON: 140-CC501B104K	4
CX.22MF/00	CAPACITOR, .22MF, 50V, X7R, CERAMIC, 1206 KEMET: C1206C224K5RACTU	4
CXT.1MF/00	CAPACITOR, .1MF, 35V, TANTALUM, 3.2X1.6 KEMET: T491A104K035AS	1
CXT1MF/00	CAPACITOR, 1MF, 16V, TANTALUM, 3.2X1.6 KEMET: T491A105K016AS	1
D DB105/00	DIODE, BRIDGE, 600V, .8A MICRO SEMI: DB105	1
DXBAV99/00	DIODE, DUAL, SOT-23 FAIRCHILD: BAV99	2
DXZ5232B/00	DIODE, ZENER, 5.6V, SOD-123 FAIRCHILD: MMSZ5232B	2
DXZ5248B/00	DIODE, ZENER, 18V, SOD-123 FAIRCHILD: MMSZ5248B	1
JFBCS-108/00	CONNECTOR, HEADER, FEMALE, 16-PIN SAMTEC: BCS-108-L-D-TE	1
QR1117-3/00	VOLTAGE REGULATOR, 3.3V, SMT BURR BROWN: REG1117-3.3	1
QXBCP56/00	TRANSISTOR, NPN, SOT-223 ON SEMI: BCP56	1
QXMMBTA42/00	TRANSISTOR, NPN, SOT-23 FAIRCHILD: MMBTA42	2
QXMMBTA92/00	TRANSISTOR, PNP, SOT-23 FAIRCHILD: MMBTA92	1
RVERZV07D/00	VARISTOR, 175V, 1200A PANASONIC: ERZV07D241	2
RX10 OHM/00	RESISTOR, 10 OHM, 5%, .1W, 0805 XICON: 260-10	2
RX150 OHM/00	RESISTOR, 150 OHM, 5%, .1W, 0805 XICON: 260-150	1
RX402 OHM/00	RESISTOR, 402 OHM, 1%, .1W, 0805 XICON: 292-402	1
RX1.78K/00	RESISTOR, 1.78K, 1%, .1W, 0805 XICON: 292-1.78K	2
RX2.2K/00	RESISTOR, 2.2K, 5%, .1W, 0805 XICON: 260-2.2K	1
RX9.31K/00	RESISTOR, 9.31K, 1%, .1W, 0805 XICON: 292-9.31K	1
RX10K/00	RESISTOR, 10K, 5%, .1W, 0805 XICON: 260-10K	2

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
RX56K/00	RESISTOR, 56K, 5%, .1W, 0805 XICON: 260-56K	2
RX100K/01	RESISTOR, 100K, 1%, .1W, 0805 XICON: 292-100K	1
RX120K/00	RESISTOR, 120K, 5%, .1W, 0805 XICON: 260-120K	1
UXMAT2508/00	IC, EEPROM, 2.7V, SOIC-8 ATMEL: AT2508AN-10SI-2.7	1
UXSI2433/00	IC, MODEM, TSSOP-24 SILICON LABS: SI2433-BT	1
UXSI3015/00	IC, MODEM DAA, SOIC-16 SILICON LABS: SI3015-BS	1
XXO4.9152/00	OSCILLATOR, 4.9152MHZ, SMT EPSON: SG-8002JF-4.9152M-PCMB	1

**PA85-0111/00 Ethernet Port PCB**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
U NM7010A/00	IC, ETHERNET PORT MODULE, IINCHIP: NM7010A	1

**CWR-264S Secondary Recorder**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
PA85-0110/02	PCB ASSEMBLY, PROCESSOR	1
PA85-0097/01	PCB ASSEMBLY, DC INPUT	1
PA85-0111/00	PCB ASSEMBLY, ETHERNET PORT	1
DLSSI-LXH/00	LED, GREEN, WIRED LUMEX: SSI-LXH600GD-150	1
H PST-3/00	STANDOFF, NYLON, 3/16" RICHCO: PST-3-01	7
HC7377907/00	CABLE, CAT-5, 7FT., GRAY AIM ELECTRONICS: 73-7790-7	1
JRIDS-C34/00	CONNECTOR, 34-PIN, FEMALE F/W AMP: 746285-8	2
JRSR-34K/00	STRAIN RELIEF, RIBBON, 34-CONDUCTOR AMP: 499252-6	2
JW147250/00	JUMPER COMB, 10-POSITION, .2" WEIDMULLER: 147250	32
JW171634/00	CONNECTOR, SCREW-DOWN, FEMALE, 4-POSITION WEIDMULLER: 171634	1
JW171638/00	CONNECTOR, SCREW-DOWN, FEMALE, 8-POSITION WEIDMULLER: 171638	66
JX5375023/00	CONNECTOR, 2-PIN, FEMALE MOLEX: 50-37-5023	1
JX8701040/00	CONNECTOR, CRIMP TERMINAL MOLEX: 08-70-1040	2
M 220391/00	SHEETMETAL, BASE	1
M 220400/00	SHEETMETAL, COVER	1
R 330 OHM/00	RESISTOR, 330 OHM, 5%, 1/4W	1

## CWR-264S Subassemblies

### PA85-0110/02 Processor PCB

M-A Part No.	Description / MFG Part No.	Qty.
P 85-0110/00	PCB, PROCESSOR, CWR-264E, -264S, -272E	1
C 470PF/00	CAPACITOR, 470PF, 10%, 6KV XICON: CDR602P9-471K	1
C .1MF/00	CAPACITOR, .1MF, 50V, CERAMIC	29
C .47F/00	CAPACITOR, .47F, 5.5V, SUPER CAP ELNA: DH-5R5D474	1
CE220MF/01	CAPACITOR, 220MF, 16V, RADIAL, ELECTROLYTIC ELNA: RJ3-16V221MBX	2
CE220MF/02	CAPACITOR, 220MF, 50V, RADIAL, ELECTROLYTIC UCC: SME50VB221M10X16LL	1
CE2200MF/00	CAPACITOR, 2200MF, 6.3V, RADIAL, ELECTROLYTIC ELNA: RJ3-6V222MBX	1
CM47PF/00	CAPACITOR, 47PF, 100V, RADIAL, MICA CORNELL DUBILIER: CM04ED470J03	1
CT4.7MF/00	CAPACITOR, 4.7MF, 25V, RADIAL, TANTALUM	6
CT10MF/00	CAPACITOR, 10MF, 16V, TANTALUM	2
CT33MF/00	CAPACITOR, 33MF, 16V, RADIAL, TANTALUM	3
CT100MF/00	CAPACITOR, 100MF, 20%, 6.3V, TANTALUM SPRAGUE: 199D107X06R3DA1	3
D 1N4004/00	DIODE, 400V 1N4004	1
D 1N5822/00	DIODE 1N5822	1
D 1N914/00	DIODE 1N914	2
D MBR160/00	DIODE, SCHOTTKY, 60V MOTOROLA: MBR160	1
DZ1N5359B/00	ZENER DIODE, 24V, 5W 1N5359B	1
F 225001/00	FUSE, 1 AMP LITTELFUSE: 225001	1
FH111501/00	FUSE CLIP LITTELFUSE: 111501	2
H TP-101/00	TEST POINT COMPONENTS CORP.: TP-101-10	4
J 833-93/00	SOCKET STRIP, DUAL PIN MILMAX: 833-93-100-10-001000	28
J PLCC68/00	SOCKET, IC, 68-PIN KYCON: P-68LCC-1	1
JMDE09PL/00	CONNECTOR, MALE, DB9, RIGHT ANGLE ADAM TECH: DE09PL24	1
JPCA02SJO/00	SHORTING JUMPER CIRCUIT ASSEMBLY: CA02SJO-A	1
JPWW18-2R/01	WIREWRAP PINS, 18 BY 2 SAMTEC: TSW11807LD	1

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
JRICO-203/00	SOCKET, IC, 20-PIN OUPIN: 8003-20T3	2
JRIDH10LP/01	CONNECTOR, HEADER, 10-PIN, STRAIGHT ANGLE OUPIN: 3012-10GSB	1
JRIDH34LP/01	CONNECTOR, HEADER, 34-PIN, STRAIGHT ANGLE OUPIN: 3012-34GSB	1
JW151286/00	CONNECTOR, 4-POSITION, RIGHT ANGLE WEIDMULLER: 151286	1
JX2235025/00	CONNECTOR, 2-PIN, MALE MOLEX: 22-03-5025	1
Q PN2222A/00	TRANSISTOR, TO-92 PN2222	1
QR1117-3/00	VOLTAGE REGULATOR, 3.3V, SMT BURR BROWN: REG1117-3.3	1
QRLT1171/00	VOLTAGE REGULATOR, SWITCHING, TO-220 LINEAR TECHNOLOGIES: LT1171CT	1
R 33 OHM/00	RESISTOR, 33 OHM, 5%, 1/8W	25
R 470 OHM/00	RESISTOR, 470 OHM, 5%, .25W	1
R 1K/00	RESISTOR, 1K, 5%, .25W	2
R 10K/00	RESISTOR, 10K, 5%, .25W	6
RN6S10K/00	RESISTOR NETWORK, 6-PIN, SIP, 10K, 2% BI TECHNOLOGIES: L061C103	1
RP5K/00	POTENTIOMETER, 5K, 1-TURN, TOP ADJUST BI TECHNOLOGIES: 72PR5K	1
TFPC40RM8/00	TRANSFORMER, ASSEMBLY, FLYBACK	1
U 75C185/00	IC, RS-232 TRANSCEIVER, DIP TI: SN75C185N	1
U 80386EX/00	IC, MICROPROCESSOR, 25MHZ, PQFP INTEL: KU80386EXTC-25	1
U DS1233/00	IC, POWER RESET DALLAS SEMICONDUCTOR: DS1233-10	1
U DS1302/00	IC, CLOCK, DIP DALLAS SEMICONDUCTOR: DS1302	1
U DS1620/00	IC, TEMPERATURE SENSOR DALLAS SEMICONDUCTOR: DS1620	1
UA16C552/00	IC, UART, PLCC STARTECH: 16C552IJ68	1
UF29F016/00	IC, FLASH MEMORY, 16MBIT, TSOP, 85C AMD: AM29F016D-90E4I	1
UP18CV8/06	PEEL, 85C, DIP ICT: 18CV8PI-15	1
URK6X4016/00	RAM, 256K X 16, 55NS, TSOP SAMSUNG: K6X4016C3F-T55	1
USHC14/00	IC, CMOS INVERTER, DIP TI: SN74HC14N	1
USHCT244/00	IC, CMOS, OCTAL BUS DRIVER, DIP TI: SN74HCT244N	1
USHCT245/00	IC, CMOS, OCTAL BUS XRCV, DIP TI: SN74HCT245N	1
X 32.768/01	CRYSTAL, 32.768KHZ, 6PF EPSON: C-002RX-32.768KHZE	1

M-A Part No.	Description / MFG Part No.	Qty.
XO44.2399/00	OSCILLATOR, 44.2399MHZ, DIP EPSON: SG-8002D-C-44.2399MPTMB	1

**PA85-0097/01 DC Input PCB**

M-A Part No.	Description / MFG Part No.	Qty.
P 85-0097/00	PCB, DC INPUT, CWR-264E, -264S	1
C 220PF/00	CAPACITOR, 220PF, 5%, 100V, CERAMIC AVX: SR211A221JAA	1
C .1MF/00	CAPACITOR, .1MF, 50V, CERAMIC	22
CT4.7MF/00	CAPACITOR, 4.7MF, 25V, RADIAL, TANTALUM	1
CT10MF/00	CAPACITOR, 10MF, 16V, RADIAL, TANTALUM	1
CT33MF/00	CAPACITOR, 33MF, 16V, RADIAL, TANTALUM	7
D IN4004/00	DIODE, 400V 1N4004	256
H TP-101/00	TEST POINT COMPONENTS CORP.: TP-101-10	3
JF171-009/00	CONNECTOR, FEMALE, DB9, VERTICAL NORCOMP: 171-009-212-031	1
JRIDH34LP/01	CONNECTOR, HEADER, 34-PIN, STRAIGHT ANGLE OUPIIN: 3012-34GSB	1
JW152246/00	CONNECTOR, 8-POSITION, STRAIGHT, OPEN WEIDMULLER: 152246	66
L 20-100K/00	INDUCTOR, 10UH ALLIED: AC20-100K	1
QR79L05/00	VOLTAGE REGULATOR, -5V, TO-92 NATIONAL: LM79L05AC2	1
R 4.7 OHM/00	RESISTOR, 4.7 OHM, 5%, .25W	2
R 100 OHM/00	RESISTOR, 100 OHM, 5%, .25W	1
R 10K/01	RESISTOR, 10K, 5%, 1/8W	256
R 16.5K/00	RESISTOR, 16.5K, 1%, .25W	1
R 30.9K/00	RESISTOR, 30.9K, 1%, .25W	1
R 100K/00	RESISTOR, 100K, 5%, .25W	1
R 221K/01	RESISTOR, 221K, 1%, 1/8W	16
R 1.4M/00	RESISTOR, 1.40M, 1%, .25W	4
R 10M/02	RESISTOR, 10M, 1%, 1/8W	16
RN5S4.7K/00	RESISTOR NETWORK, 5-PIN, SIP, 4.7K, 2% BI TECHNOLOGIES: L051C472	16
RN9S4.7K/00	RESISTOR NETWORK, 9-PIN, 4.7K, 2% BI TECHNOLOGIES: L091C472	24
RP10K/01	POTENTIOMETER, 10K, 20-TURN, TOP ADJUST BI TECHNOLOGIES: 67YR10K	1
SD4SPST/00	SWITCH, 4-POSITION, DIP AMP: 3-435640-5	1
U ADC1251/00	IC, A/D CONVERTER, 13 BIT, DIP NATIONAL: ADC1251CIJ	1
U ADG408/01	IC, MULTIPLEXER, 8 TO 1, SMT SILICONIX: DG408DY	2
U REF03GP/00	IC, VOLTAGE REFERENCE, DIP ANALOG DEVICES: REF03GP	1

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
ULOP27GP/00	IC, OP-AMP, DIP ANALOG DEVICES: OP27GP	1
ULOP490GP/00	IC, OP-AMP, QUAD, DIP ANALOG DEVICES: OP490GP	2
UOPC845/00	IC, OPTO-COUPLER, QUAD, DIP ISOCOM: PS2502-4	64
USHC165S/00	IC, SHIFT REGISTER, SMT MOTOROLA: MM74HCT165M	32

**PA85-0111/00 Ethernet Port PCB**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
U NM7010A/00	IC, ETHERNET PORT MODULE, IINCHIP: NM7010A	1

## CWR-CS Bill of Material

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
PA85-0038/00	PCB ASSEMBLY, QUAD CURRENT SENSOR	1
H 8477/00	GROMMET, .75" I.D. KEystone: 8477	8
HC2402T15/00	CABLE, DB9 TO DB9, MALE TO MALE CABLE DEPOT: 2402-T-15 MM	1
M 220183/00	SHEETMETAL, COVER	1
M 220183/01	SHEETMETAL, BASE	1
M 220183/02	SHEETMETAL, FRONT PANEL	1
M 220183/03	SHEETMETAL, REAR PANEL	1
M 220183/04	SHEETMETAL, SIDE PANEL, RIGHT	1
M 220184/04	SHEETMETAL, SIDE PANEL, LEFT	1
ZMCWR-CS	REFERENCE NOTE: PART OF CWR-264XC USER MANUAL	SEE NOTE

## CWR-CS Subassemblies

**PA85-0038/00 Quad Current Sensor PCB**

<b>M-A Part No.</b>	<b>Description / MFG Part No.</b>	<b>Qty.</b>
P 85-0038/00	PCB, QUAD CURRENT SENSOR	1
C 220PF/00	CAPACITOR, 220PF, 5%, 100V, CERAMIC AVX: SR211A221JAA	8
C 1MF/00	CAPACITOR, 1MF, 50V, CERAMIC	4
CT33MF/00	CAPACITOR, 33MF, 16V, RADIAL, TANTALUM	3
DL3962/00	LED, GREEN HP: HLMP-3962	1
H PTX2515/00	TOROID, .062" GAP EASTERN COMPONENTS: P-TX251510-3C81-G.062	4
H TP-101/00	TEST POINT COMPONENTS CORP.: TP-101-10	5

M-A Part No.	Description / MFG Part No.	Qty.
JFDB09S/00	CONNECTOR, FEMALE, DB9, RIGHT ANGLE FCI: ID09S33E4GV00	1
Q A3516/00	TRANSISTOR, HALL-EFFECT ALLEGRO: A3516EAU	4
QR7805/00	VOLTAGE REGULATOR, 5 V NATIONAL: LM340T-5	1
R 330 OHM/00	RESISTOR, 330 OHM 5%, .25W	4
R 1.8K/00	RESISTOR, 1.8K 5%, .25W	4
R 2.7K/00	RESISTOR, 2.7K 5%, .25W	1
R 4.99K/00	RESISTOR, 4.99K 1%, .25W	8
R 7.87K/00	RESISTOR, 7.87K 1%, .25W	4
R 8.87K/00	RESISTOR, 8.87K 1%, .25W	4
R 73.2K/00	RESISTOR, 73.2K 1%, .25W	8
RP1K/00	POTENTIOMETER, 1K, 20-TURN, HORIZONTAL, SIDE ADJUST BI TECHNOLOGIES: 68PR1K	8
ULOP490GP/00	OP-AMP, QUAD, 85C ANALOG DEVICES: OP490GP	1



## **Material Return Policy**

In the event the customer identifies a malfunction in any product, call or write MICRO-AIDE and obtain a Return Material Authorization (RMA) number from the customer service department. Return the product to MICRO-AIDE, freight prepaid, with a note (in-warranty repair) or a purchase order (out-of-warranty) for the repair listing the following information:

- RMA number from MICRO-AIDE
- Return shipment address
- Name and telephone number of person familiar with the problem
- Brief description of the problem (include any printouts that may have a bearing on the problem)
- Method of payment for repair costs (out-of-warranty)
- Send product to the following address:

### **MICRO-AIDE CORPORATION**

685 Arrow Grand Circle

Covina, CA 91722

Tel: 626-915-5502 Fax: 626-331-9484

E-mail: [support@micro-aide.com](mailto:support@micro-aide.com)

## **Limited Warranty**

MICRO-AIDE warrants its products to be free from defects in material and workmanship for a period of five (5) years from the date of shipment. This warranty is in lieu of any other warranty, expressed or implied. In no event shall MICRO-AIDE be held liable for incidental or consequential damage resulting from (1) the use of any of its products, or (2) any alleged breach of this warranty provision. MICRO-AIDE's liability shall be limited to repairing or replacing, at its sole discretion, any defective product which is returned in accordance with the MICRO-AIDE Material Return Policy.

Product that has been subjected to abuse, misuse, alteration, accident, lightning damage, neglect or unauthorized installation or repair shall not be covered by this warranty. MICRO-AIDE reserves the right to make a final decision as to the existence of any failures and the cause of such failures. No warranty is made with respect to custom equipment or products produced to buyer's specifications except as mutually agreed upon in writing.

**MICRO-AIDE CORPORATION**

685 Arrow Grand Circle

Covina, CA 91722

Tel: 626-915-5502 Fax: 626-331-9484

E-mail: [support@micro-aide.com](mailto:support@micro-aide.com)