



Simple Audio Mixer Installation and User Manual

A screenshot of a software login window titled "Simple Audio Mixer". The window has a blue border and standard Windows-style window controls (minimize, maximize, close) in the top right corner. The title bar is dark red with the text "Simple Audio Mixer" in white. The main area has a light gray background. On the left, there is a 3D illustration of a blue folder with a red padlock. To the right of the folder are two text input fields. The first field is labeled "Username" in dark red text. The second field is labeled "Password" in dark red text. Below the password field are two buttons: "Cancel" and "OK", both in dark blue with white text. Below the buttons is a checkbox labeled "Music On Hold Service Resellers Only". At the bottom left is the "interalia" logo. At the bottom center is a button labeled "Change your password?". At the bottom right is a button with a question mark icon and the text "Need help?".

Simple Audio Mixer



Username

Password

Cancel **OK**

☐ Music On Hold Service Resellers Only

interalia

[Change your password?](#) [? Need help?](#)

Copyrights

This manual and the software accompanying it are copyrighted © 2015 by Interalia Inc. ®

Simple Audio Mixer Installation and User Manual

51-UM-514-001-00-EN-85

All rights reserved. No part of this book, including interior design, cover design, and icons, may be reproduced or transmitted in any form, by any means (electronic, photocopying, recording, or otherwise) without the prior written permission of Interalia Inc.

Interalia Inc. Marketing Department
6815 8th Street N.E, Suite N275
Calgary, Alberta, Canada T2E 7H7
Phone: (800) 661-9406 or (403) 288-2706
Fax: (403) 288-5935

Interalia and the publisher have used their best efforts in preparing this book as accurately and completely as possible, however we do not make any guarantees or warranties regarding its content.

Trademarks

Interalia is a registered trademark of Interalia Inc.
iProMOH is a registered trademark of Interalia Inc.

All other product names and services identified throughout this book are used in an editorial fashion only, and for the benefit of such companies. No such use, or the use of any trade name, is intended to convey endorsement or other affiliation with the book.

Canada	United States	United Kingdom
6815 - 8th Street NE.	701-24th Ave. SE.	58 Hershal Street
Calgary, Alberta	Minneapolis, Minnesota	Slough, UK
Canada T2E 7H7	U.S.A. 55414	SL1 1HD
Tel: 403 288 2706	Tel: 403 288 2706	Tel: +44 203 6082606
Toll Free 800 661 9406	Toll Free 800 661 9406	Fax: 403 288 5935
Fax: 403 288 5935	Fax: 403 288 5935	info@interalia.com
info@interalia.com	info@interalia.com	

1 Table of Contents

2	<i>Simple Audio Mixer Software Application</i>	7
2.1	Simple Audio Mixer Software Installation	7
2.2	Simple Audio Mixer Software Upgrade	8
2.3	Windows Media Player Codec Installation	8
2.4	Purchase / Activate	9
2.4.1	Purchase New License	10
2.4.2	Activate Simple Audio Mixer	10
2.5	Application Controls	11
2.5.1	Save / OK Button	11
2.5.2	Cancel Button / Corner "X"	11
2.5.3	Need Help? Button	12
2.6	Login Window	12
2.6.1	Changing Your Login Password	13
2.7	Supported Formats	13
3	<i>iProMOH-Mix</i>	14
3.1	Home Screen	14
3.2	File Menu	15
3.2.1	Open Existing File	15
3.2.2	Save Current Content to File	15
3.2.3	Create Audio Production	16
3.2.4	Preview Audio Production	16
3.3	Content Administration Page	17
3.3.1	Music and Messages	19
3.3.1.1	Music / Messages Lists	19
3.3.1.1.1	Media File Audio Playback	20
3.3.1.1.2	Media File Audio Recording	22
3.3.1.2	Add Default Music	23
3.3.1.3	Enable Music Shuffle / Enable Message Shuffle	23
3.3.1.4	Total Message Play Duration	23
3.3.2	Settings	24
3.3.2.1	Time between Messages	24
3.3.2.2	Music Cross-Fade Volume	24
3.3.2.3	Bass	24
3.3.2.4	Treble	24
3.3.2.5	Master Output Volume	25
3.3.2.6	Audio Balance	25
3.3.2.7	Music Input Level	25
3.3.2.8	Message Input Level	25
3.3.2.9	Time Between Repeats	25
3.3.2.10	Enable Local Volume Control	26

3.3.2.11	Enable External Music.....	26
3.3.2.12	Enable Auto-Add Default Music	26
3.3.2.13	Save Settings Button.....	26
3.3.2.14	Load Defaults Button.....	26
3.3.2.15	Time Remaining	26
3.3.3	Scheduled Messages	26
3.3.4	Content and Administration Page Buttons	27
3.3.4.1	Save Button.....	27
3.3.4.2	Cancel Button.....	27
3.4	Creating a Content File.....	28
4	iProMOH-One	30
4.1	Home Screen.....	30
4.2	File Menu	31
4.2.1	Open Existing File	31
4.2.2	Save Current Content to File.....	31
4.2.3	Preview Audio Production	33
4.3	Security and Settings Page (Music On Hold Mode Only).....	34
4.3.1	Service Provider Key	34
4.3.1.1	Assigning a Service Provider Key	35
4.3.1.2	Removing a Service Provider Key from a Device	36
4.3.2	Adding Devices	37
4.3.2.1	Add Device Button.....	37
4.3.2.2	Delete Device Button	38
4.3.2.3	Update Desc./Zone	38
4.3.3	Restore Data Button	38
4.3.4	Backup Data Button	39
4.3.5	Enable Media Stale Date	40
4.3.6	Cancel Button	40
4.3.7	OK Button	40
4.4	Content Administration Page.....	41
4.4.1	Music and Messages	43
4.4.1.1	Music / Messages Lists	43
4.4.1.1.1	Media File Audio Playback	44
4.4.1.1.2	Media File Audio Recording	46
4.4.1.2	Add Default Music	47
4.4.1.3	Enable Music Shuffle / Enable Message Shuffle	47
4.4.1.4	Total Message Play Duration	47
4.4.2	Settings	48
4.4.2.1	Time between Messages	48
4.4.2.2	Music Cross-Fade Volume.....	48
4.4.2.3	Bass	48
4.4.2.4	Treble	48
4.4.2.5	Master Output Volume	49
4.4.2.6	Audio Balance	49
4.4.2.7	Music Input Level	49
4.4.2.8	Message Input Level	49
4.4.2.9	Time Between Repeats.....	50
4.4.2.10	Enable Local Volume Control.....	50

4.4.2.11	Enable External Music.....	50
4.4.2.12	Enable Auto-Add Default Music	50
4.4.2.13	Save Settings Button.....	50
4.4.2.14	Load Defaults Button.....	50
4.4.2.15	Time Remaining	51
4.4.3	Scheduled Messages	51
4.4.4	Content and Administration Page Buttons	51
4.4.4.1	Save Button.....	51
4.4.4.2	Cancel Button.....	51
4.5	Creating a Content File.....	52
4.6	Loading Your Content onto the iProMOH-One	54
5	iProMOH-SU	55
5.1	Home Screen.....	55
5.2	File Menu	56
5.2.1	Open Existing File	56
5.2.2	Save Current Content to File.....	56
5.3	Security and Settings Page (Music On Hold Mode Only).....	58
5.3.1	Service Provider Key	58
5.3.1.1	Assigning a Service Provider Key	59
5.3.1.2	Removing a Service Provider Key from a Device	60
5.3.2	Adding Devices	61
5.3.2.1	Add Device Button.....	61
5.3.2.2	Delete Device Button	62
5.3.2.3	Update Desc./Zone	62
5.3.3	Restore Data Button	62
5.3.4	Backup Data Button	63
5.3.5	Enable Media Stale Date	64
5.3.6	Cancel Button	64
5.3.7	OK Button	64
5.4	Content Administration Page.....	65
5.4.1	Music and Messages	67
5.4.1.1	Music / Messages Lists	67
5.4.1.1.1	Media File Audio Playback	68
5.4.1.1.2	Media File Audio Recording	69
5.4.1.2	Add Default Music	70
5.4.1.3	Enable Music Shuffle / Enable Message Shuffle	70
5.4.2	Settings	70
5.4.2.1	Time between Messages	70
5.4.2.2	Music Cross-Fade Volume	70
5.4.2.3	Bass	71
5.4.2.4	Treble	71
5.4.2.5	Master Output Volume	71
5.4.2.6	Audio Balance	72
5.4.2.7	Music Input Level	72
5.4.2.8	Message Input Level	72
5.4.2.9	Time Between Repeats	72
5.4.2.10	Enable Local Volume Control.....	73
5.4.2.11	Enable External Music.....	73

5.4.2.12	Enable Auto-Add Default Music	73
5.4.2.13	Save Settings Button.....	73
5.4.2.14	Load Defaults Button.....	74
5.4.2.15	Time Remaining	74
5.4.3	Scheduled Messages (Music On Hold Mode Only).....	74
5.4.3.1	Scheduled Messages List	74
5.4.3.2	Start Time.....	75
5.4.3.3	Start Date	75
5.4.3.4	Stop Date	75
5.4.3.5	Days of Week.....	75
5.4.4	Content and Administration Page Buttons	76
5.4.4.1	Save Button.....	76
5.4.4.2	Cancel Button.....	76
5.5	Creating a Content File.....	76
5.6	Loading Your Content onto the iProMOH-SU	77

2 Simple Audio Mixer Software Application

2.1 Simple Audio Mixer Software Installation

The iProMOH utilizes the Simple Audio Mixer software application to create content files consisting of music and messages.


The application can be downloaded from:

<http://www.interalia.com/downloads/SimpleAudioMixerInstall.zip>

Save the file to your computer and select the "SimpleAudioMixerInstall_x.x.x.exe" application to start the installation.

Simple Audio Mixer requires the Microsoft Visual C++ 2012 Redistributables for operation. They will be automatically installed if they are not already present on the computer.

Select "**Install**" to begin the installation process. If a "**User Account Control**" window pops up, select "**Yes**" to continue installing the Microsoft Visual C++ 2012 Redistributables.

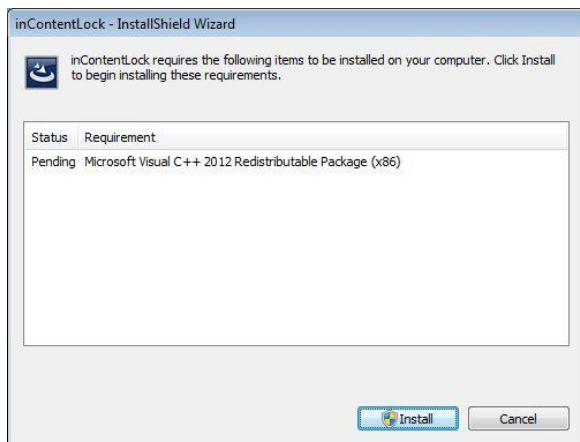

Select "**Next**" at the "InstallShield Wizard for Simple Audio Mixer" screen to start the installation, and select "**Next**" to use the default installation folder.

If the "**Launch the Program**" checkbox is selected (enabled by default), Simple Audio Mixer will automatically launch when "**Finish**" is selected.

When the installation completes, you will see the Simple Audio Mixer (sam) shortcut added to your Desktop and a folder called Interalia added to your Start Menu. Simple Audio Mixer can be launched at any time with either the desktop or menu shortcuts.

2.2 Simple Audio Mixer Software Upgrade

Before installing a new version, ensure the current Simple Audio Mixer application is closed. Follow the same instructions as the "**Simple Audio Mixer Software Installation**" above.

All previous settings, devices and passwords are retained during the upgrade.

2.3 Windows Media Player Codec Installation

Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. If the codecs are not installed, the following error screen is displayed when trying to playback or preview an audio file. The necessary codec is supplied with Simple Audio Mixer, and can be installed via "**Start Menu -> All Programs -> Interalia -> Install ogg Codec**". Right click on "**Install ogg Codec**", and select "**Run as administrator**". Follow the on-screen directions for installation.



2.4 Purchase / Activate

The application is 100% functional without activation. Certain functionality will have an audible watermark until the application is activated, as listed below:

- iProMOH-Mix - all previewed audio and audio production files
- iProMOH-One - all previewed audio

To purchase or activate the software, first select “iProMOH-Mix” from the “**Device**” pulldown, and then select the “**Purchase / Activate**” button in the top right of the home screen.



2.4.1 Purchase New License

For a new license, enter your contact information in the left side of the purchase window, and select **“Purchase”**. Select **“Send”** once your email client opens with the purchase request. Our team will contact you via the information provided to collect payment information. Once payment has been approved, you will receive your license key via email.

NOTE: You need to have an email client configured on the computer in order to purchase a license.

2.4.2 Activate Simple Audio Mixer

The license file received via email contains your contact information that needs to be copy /pasted into the left side of the screen. It also contains your license key that needs to be copy/pasted into the right side of the screen.

The entire license key section (including the begin and end markers must be pasted into the license key box). The key will be in this format:

```
<--- BEGIN LICENSE FILE --- 1
52D4E5A514E542E0F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
E884886D27B18C3DF163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
E884886D27B18C3DF163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
```

F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
E884886D27B18C3DF163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
53FA3B8D85669773F163B8D0C2157686F163B8D0C2157686F163B8D0C2157686
--- END LICENSE FILE --->

Purchase / Activate Simple Audio Mixer

Enter your information and select 'Purchase' to buy a single user license for \$49.99 USD. Our team will contact you for payment within 24 hours during normal business hours, and issue your license key via electronic delivery.

Your Name: SAM User

Your Phone Number: 403 555 5555

Your Email: samuser@mycompany.com

Your Company: My Company

Paste Your License Key:

E884886D27B18C3DF163B8D0C2157686F163B8D0
E884886D27B18C3DF163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
F163B8D0C2157686F163B8D0C2157686F163B8D0
E884886D27B18C3DF163B8D0C2157686F163B8D0
53FA3B8D85669773F163B8D0C2157686F163B8D0
--- END LICENSE FILE --->

Purchase Cancel Activate

interalia ? Need help?

Once the information has been entered, select **“Activate”** to unlock the software and remove the watermark from the audio.

2.5 Application Controls

Simple Audio Mixer uses consistent controls across all pages in the application.

2.5.1 Save / OK Button

Saves all changes for that particular page, and returns to the Home Screen.

2.5.2 Cancel Button / Corner "X"

Abandon all changes for that particular page, and returns to the Home Screen.

2.5.3 Need Help? Button

Displays the help screen which contains buttons to allow quick access to technical support, as well as display the application version.

2.6 Login Window

The Login Window is used to log into Simple Audio Mixer, or change the application password. Enter the username ("**admin**") and your password to log into the application. The default password is "**admin**", if you have not previously changed it. It is recommended that the password is changed from the default value of "**admin**" for security reasons. When the "**Music On Hold Service Resellers Only**" checkbox is selected, the software changes to allow media to be secured to a device as well as lock it to a particular vender. This functionality is not applicable to the iProMOH-Mix device.



2.6.1 Changing Your Login Password

Select the "**Change your password?**" button. Enter your current password (default "**admin**"), followed by your new password in the "**New Password**" and "**Repeat Password**" fields. Select the "**Save**" button to change your password or "**Cancel**" to discard changes. Record this password for safe keeping, as if the password gets lost, it cannot be retrieved.



2.7 Supported Formats

Audio Formats:

- Audio production format: .WAV or .OGG
- Decoded audio sampling frequency: 22 KHz
- Supports the following file formats,
 - AIFF (*.aiff)
 - FLAC (*.flac)
 - PCM (*.pcm)
 - MPEG4 (*.mp4, *.mpeg4)
 - MP3 (*.mp3)
 - WAV (*.wav)
 - WMA (*.wma)
 - OGG (*.ogg)

3 iProMOH-Mix

3.1 Home Screen

The "**Home Screen**" is the hub for all application operations. Every operation returns to this screen once complete.

The "**Home Screen**" allows access to:


- Device - Select the device to create content for. i.e. iProMOH-Mix
- Configure - modify media/messages, settings and playlists.
- File - Open files, save files, create audio production, preview audio production, and exit application.

For ease of use, the **Home Screen** lists the current status of the application (circled, below). These fields get populated as playlists are created, and devices are selected.



3.2 File Menu

The file menu allows access to the main application functions.

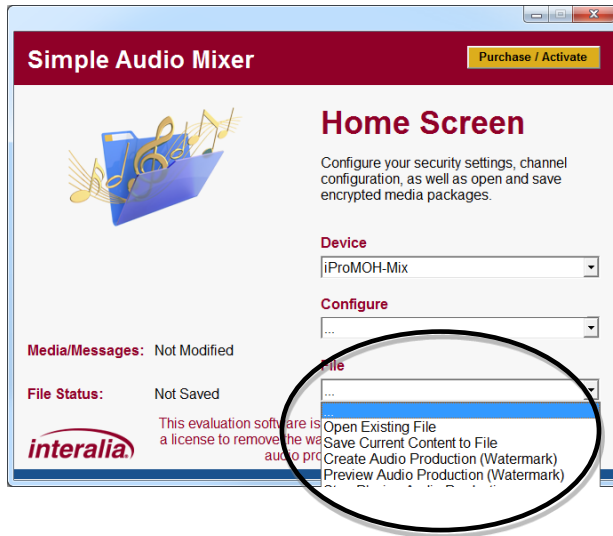

3.2.1 Open Existing File

To open an existing Simple Audio Mixer content file, select this menu item to launch the Windows Explorer file browser.

Each Simple Audio Mixer file contains information from the device it was created for. The application will automatically change to match the device type when the file is opened.

3.2.2 Save Current Content to File

The current progress of the file being configured may be saved at any time using this menu item. To save the current content to a Simple Audio Mixer file, select this menu item to launch the Windows Explorer file browser.

The Simple Audio Mixer filename consists of the following format:

<SAM>_<DEVICE TYPE>_<DATE OF CREATION>_<u>(OPTIONAL)</u><SPK(OPTIONAL)>_<DEVICE ID>.ipc

In the file explorer, the default "**SAM**" text can be changed to make the file easier to identify by the user. During the save process, the application will automatically append the rest of the information.

Example 1:

Device Type:	iProMOH-Mix
Date of Creation:	June 1, 2015
Service Provider Key:	Not applicable, all zeros.
Reset Service Provider Key:	Not applicable
Device Number:	Not applicable, all zeros.
Content Filename:	SAM_MIX_20150601_0000000000000000.ipc

IMPORTANT! The Simple Audio Mixer expects the filename to remain in this format. Only the "SAM" section may be renamed. Any other modification to the file name will result in the content file **NOT** being loaded by Simple Audio Mixer.

3.2.3 Create Audio Production

This will create and save the finished audio production can be saved in multiple formats (.OGG or .WAV). The finished file can then be played on any audio playback device.

NOTE: The finished file will contain an underlining watermark in the audio. If you select "Device -> iProMOH-Mix" and purchase a copy of the iProMOH-Mix software, the watermark will be removed.

3.2.4 Preview Audio Production

The finished audio production can be played back before it is saved to ensure the desired result. Select "Stop Playing Audio Production" to stop playback.

NOTE: Preview playback is an iProMOH-Mix demo. The audio playback for the preview will contain an underlining watermark in the audio. If you select "Device -> iProMOH-Mix" and purchase a copy of the iProMOH-Mix software, the watermark will be removed.

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the "Windows Media Player Codec Installation" section, above, for installation instructions.

3.3 Content Administration Page

Access the "**Media/Messages**" page from the "**Configure**" menu on the Home Screen



The "**Content Administration Page**" is used for:

- Adding music / messages to play.
- Adjust specific audio playback settings.

The "Content Administration Page" has three areas:

- Music and Messages
- Settings
- Scheduled Messages (Not available on this device)

The iProMOH-Mix utilizes a .OGG compression format to minimize file sizes.

The screenshot displays the 'Simple Audio Mixer' web interface. The top header is maroon with the title 'Simple Audio Mixer' in white. The main content area is divided into three sections: 'Music and Messages', 'Settings', and 'Scheduled Messages'. The 'Music and Messages' section on the left includes a 'Music' list with one entry '00:03:52 | default_music.ogg*' and a duration of '00:03:52'. It also has a 'Messages' section with a duration of '00:00:00'. The 'Settings' section on the right contains various controls: 'Time Between Messages (MM:SS)' set to 00:20, 'Music Cross-Fade Volume (%)' at 20, 'Bass' and 'Treble' sliders at 0, 'Master Output Volume (%)' at 50, 'Music Input Level (%)' and 'Message Input Level (%)' both at 100, 'Time Between Repeats (MM:SS)' at 00:00, and checkboxes for 'Enable External Music', 'Enable Local Volume Control', and 'Enable Auto-Add Default Music' (checked). There are 'Load Defaults' and 'Save Settings' buttons. A green progress bar at the bottom of the settings section shows 'Time Remaining (HH:MM)' as 01:56. The 'Scheduled Messages' section at the bottom left has a text input field and a 'Files: 0' indicator. The bottom right of the interface includes a 'Start Time (HH:MM)' set to 00:00, a 'Stop Date' set to January 1, and a 'Days of Week' section with checkboxes for SUN, MON, TUE, WED, THU, FRI, and SAT. At the very bottom, there are 'Cancel' and 'Save' buttons, the 'interalia.' logo, and a 'Need help?' link.

Simple Audio Mixer

Music and Messages

Music

00:03:52 | default_music.ogg*

Duration: 00:03:52 Files: 1

☐ Enable Music Shuffle [Add Default Music](#)

Messages

Duration: 00:00:00 Files: 0

☐ Enable Message Shuffle

Settings

Time Between Messages (MM:SS) 00 : 20

Music Cross-Fade Volume (%) 20

Bass 0

Treble 0

Master Output Volume (%) 50

Music Input Level (%) 100

Message Input Level (%) 100

Time Between Repeats (MM:SS) 00 : 00

☐ Enable External Music ☒ Enable Local Volume Control

☒ Enable Auto-Add Default Music

[Load Defaults](#) [Save Settings](#)

Time Remaining (HH:MM) 01:56

Scheduled Messages

Start Time (HH:MM) 00 : 00

Stop Date January 1

December 31

Days of Week SUN MON TUE WED THU FRI SAT

☐ ☐ ☐ ☐ ☐ ☐ ☐

[Cancel](#) [Save](#)

interalia.

[Need help?](#)

3.3.1 Music and Messages

The music and messages lists are used to configure reoccurring media. The operation is the same between the two lists, except the music list gets populated with the royalty free music by default.

3.3.1.1 Music / Messages Lists

Music and messages can be added by dragging and dropping them onto the desired list from a location on the computer. Alternatively, right-click on the desired list, and select "**Add Files**" from the menu. Multiple files can be added at once by selecting them in Windows Explorer.

The name contains a playback time prefix in "hours:minutes:seconds" format, and all unsaved media files have a "*" suffix after the name. As media is added, the "**Files**", "**Duration**", and "**Time Remaining**" bar get updated to reflect the current status.

Multiple items can be selected at once by using the "**shift**" and "**control**" keys on the keyboard. Holding "**control**" while selecting items allows for multiple individual items to be selected and deselected. To select a block of items, first select the start item, hold the "**shift**" key, and then select the last item. All items in the block will be selected. Utilize the intuitive right-click menu to manage files in each list. Files can also be moved in the list by left-clicking on highlighted items, and dragging them.

The music and message lists support keyboard input (arrow keys, delete, etc). The hot-key combinations are shown in the right-click menu.

NOTE: *The message playback operation is different in the iProMOH-Mix than in other iProMOH devices. Any messages in the message list box will **ONLY PLAY ONCE** in each production.*

For example:

- Music list has a 300 second music clip.
- Message list has a 60 second message clip.
- Time Between Messages setting is 30 seconds.

The playback production will then be:

30 seconds music
60 seconds music + message
210 seconds music
Repeat...

To play the message more than once, simply add multiple copies to the message playlist. At the bottom of the message list, the “Total Message Play Duration” displays how long the currently configured messages will play for.

For example:


- Music list has a 300 second music clip.
- Message list has a 60 second message clip, with 3 copies.
- Time Between Messages setting is 30 seconds.

The playback production will then be:

30 seconds music
60 seconds music + message (first message)
30 seconds music
60 seconds music + message (second message)
30 seconds music
60 seconds music + message (third message)
30 seconds music
Repeat...

3.3.1.1.1 Media File Audio Playback


It is possible to listen to the audio files in the playlists. Double clicking on a media file will start the playback of the file. Alternatively, single click on a desired file to select it, and then select “**Start Playing File**” from the right-click menu. During playback of the file, double-clicking on the same file again, or selecting “**Start Playing File**” from the right click menu will start playback from the beginning of the file. Playback can be stopped by selecting “**Stop Playing File**” from the right click menu. The name of the file being played is shown at the bottom of the screen.

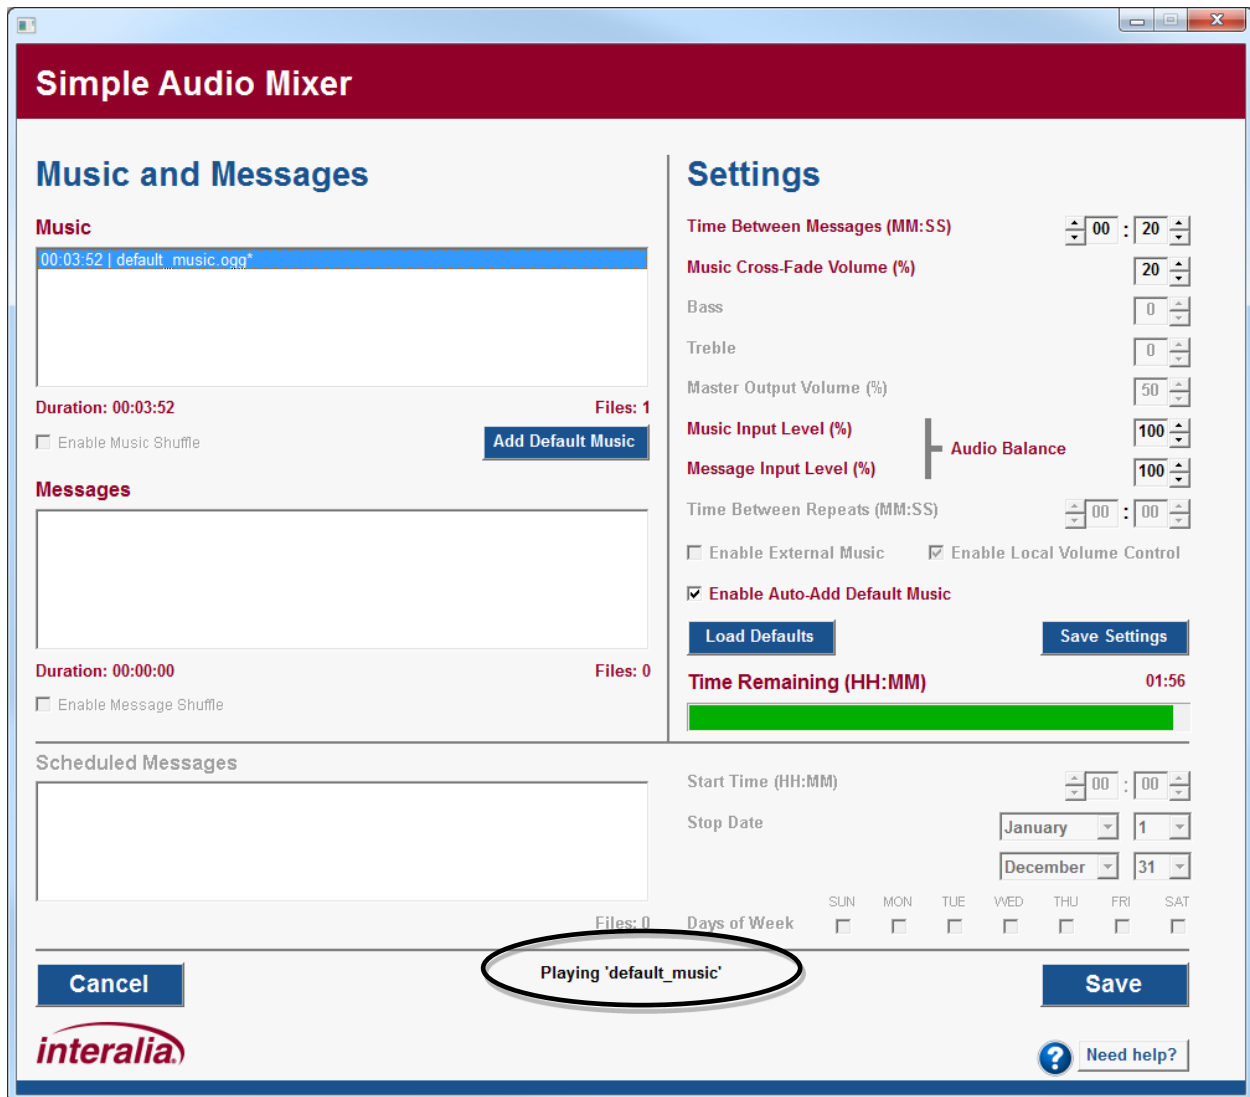

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the **“Windows Media Player Codec Installation”** section, above, for installation instructions.

3.3.1.1.2 Media File Audio Recording

Right-click on the desired list, and select “**Record Audio File**”. The following recording screen is shown.

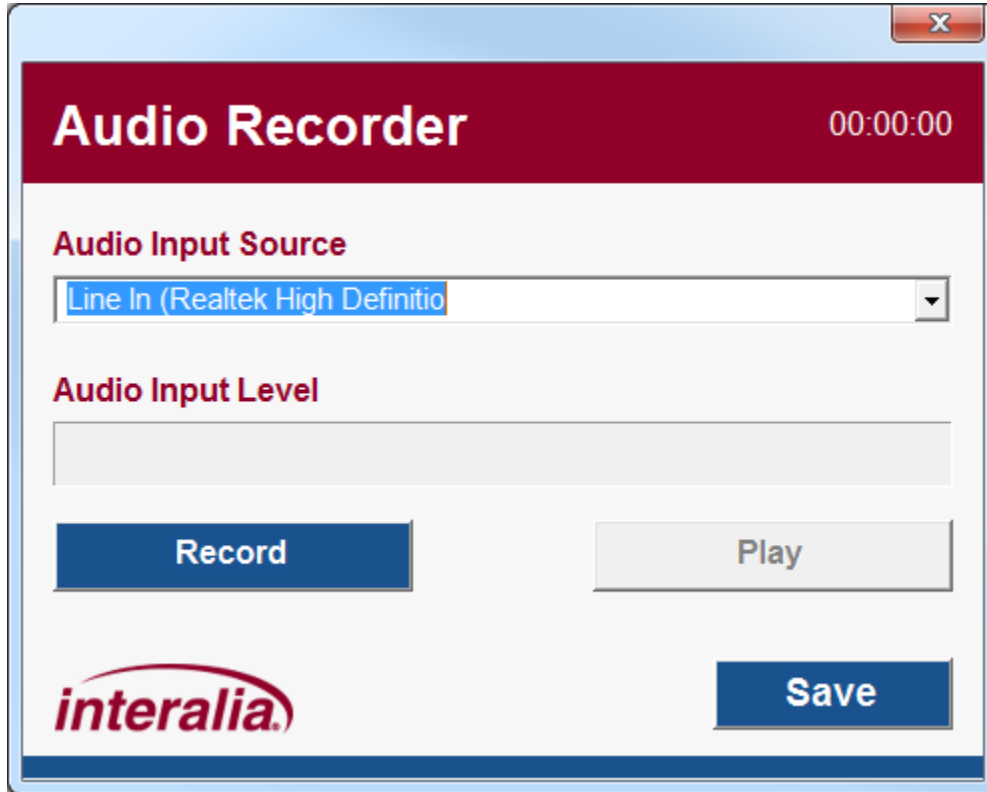

- Selecting the “X” in the top right will cancel the recording and not add the file to the list.
- The top right corner indicates the duration of the recording in HH:MM:SS format.
- The “**Audio Input Source**” pull-down lists all available recording sources on the computer. Select the desired source before selecting “**Record**”.
- The “**Audio Input Level**” indicates the volume during the recording.
- Selecting “**Record**” will start the record process. During this time, the button changes to “**Stop Recording**”. Selecting “**Stop Recording**” will stop the current recording.
- Selecting “**Play**” will playback the recording. During this time, the button changes to “**Stop Playing**”. Selecting “**Stop Playing**” will stop the current playback.
- Selecting “**Save**” will allow you to save the recording to a location on your computer, and then automatically add the recording to the list.

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the “**Windows Media Player Codec Installation**” section, above, for installation instructions.

3.3.1.2 Add Default Music

Select the "**Add Default Music**" button to add the royalty free music to the music list.

3.3.1.3 Enable Music Shuffle / Enable Message Shuffle

Not available on this device.

3.3.1.4 Total Message Play Duration

The play duration of all the message files and the time between messages spacing. See the "Creating a Content File" section for more information.

3.3.2 Settings

The "**Settings**" area allows the customization of the following items on a "per device" basis. This allows for user preferences to be loaded each time the application is started.

NOTE: *All changes are only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

3.3.2.1 Time between Messages

The time between the end of one message until the start of the next message. During this time, music will continue to play, if configured.

- Default: 20 seconds
- Minimum: 0 seconds
- Maximum: 99 minutes, 59 seconds
- Increment: 1 second

3.3.2.2 Music Cross-Fade Volume

During the message playback, the music will be reduced to this volume level, and still play in the background. If set to 0%, only the message will be heard.

- Default: 20%
- Minimum: 0%
- Maximum: 100%
- Increment: 10%

3.3.2.3 Bass

Not available on this device.

3.3.2.4 Treble

Not available on this device.

3.3.2.5 Master Output Volume

Not available on this device.

3.3.2.6 Audio Balance

Perceived Music/Message Level	Music Input Level	Message Input Level	Master Output Volume
Music sounds 20% louder than message	80%	100%	Adjust to give desired output level
Message sounds 40% louder than music	100%	60%	Adjust to give desired output level
Music and message level sounds the same	100%	100%	Adjust to give desired output level
<i>Note: Only one input level should be changed at any given time. The goal is to keep them as close to 100% for best audio quality, and lower one so that both media sources sound approximately the same. They should not be used to tailor the output level.</i>			

3.3.2.7 Music Input Level

Sound level for the music playlist / external music. Normally it is set to 100%, and is used to balance differences in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

3.3.2.8 Message Input Level

Sound level for the message playlist. Normally it is set to 100%, and is used to balance differences in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

3.3.2.9 Time Between Repeats

Not available on this device.

3.3.2.10 *Enable Local Volume Control*

Not available on this device.

3.3.2.11 *Enable External Music*

Not available on this device.

3.3.2.12 *Enable Auto-Add Default Music*

When selected, the application will automatically add the royalty free default music, if the following conditions are true:

- Channel and Settings page is not modified.
- There are no items in the music or messages lists.

3.3.2.13 *Save Settings Button*

Select the "**Save Settings**" button to use the above settings each time the application is started.

3.3.2.14 *Load Defaults Button*

Select the "**Load Defaults**" button to return the settings to the factory defaults.

NOTE: *This change is only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

3.3.2.15 *Time Remaining*

Indicates the available play time remaining on the iProMOH, based on the current amount of media files loaded.

3.3.3 Scheduled Messages

Not available on this device.

3.3.4 Content and Administration Page Buttons

3.3.4.1 *Save Button*

Saves all changes for that particular channel to the media package being created, and returns to the "**Home Screen**".

3.3.4.2 *Cancel Button*

Abandon all changes for that particular channel, and returns to the "**Home Screen**".

3.4 Creating a Content File

The typical process for creating content files is:

- Configure the media and settings.
- Save the content file (project file that it can be reloaded and modified later)
- Create an audio production file (the actual mixed audio file).

During the process, the status section on the left side of the "**Home Screen**" will indicate the completion and file status.

Simple Audio Mixer has the ability to create studio quality pre-blended music and messages into one file.

To illustrate how the settings are utilized, consider the following example:


Add the media:

- Music File #1: 2 minutes
- Music File #2: 1 minute 30 seconds
- Message File #1: 20 seconds
- Message File #2: 15 seconds
- Message File #3: 30 seconds

Configure the settings:

- Time Between Messages: 40 seconds
- Music Cross-Fade Volume: 20%
- Music Volume: 100%
- Message Volume: 90%
- Time Between Repeats: 10 seconds

This is the resulting file:

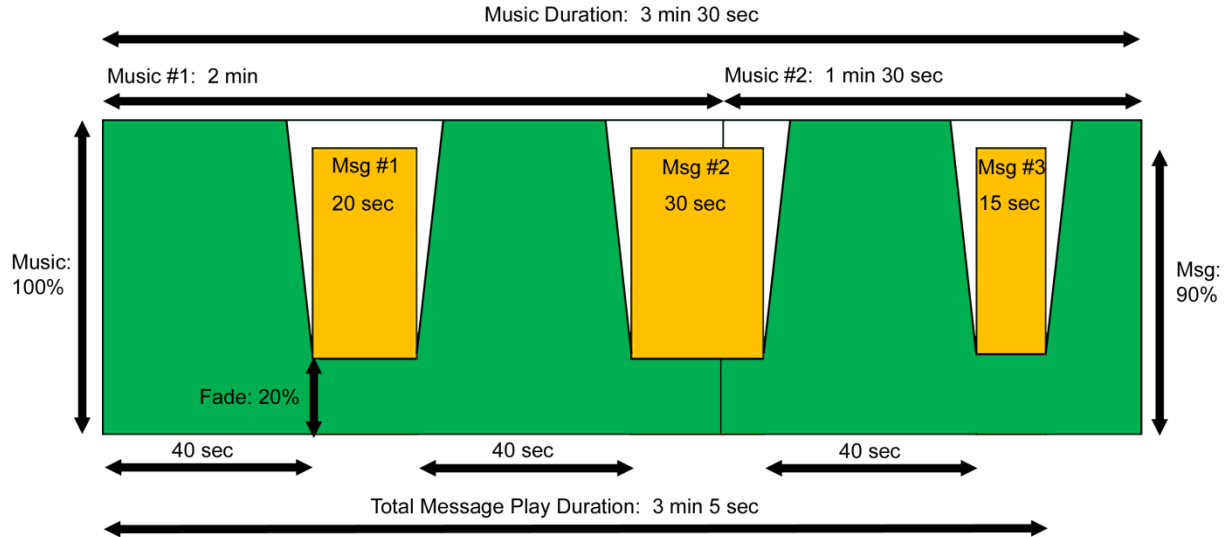

The music is played at 100% level, and fades to 20% level before each message is played at 90% level.

It is possible to create content files with just music, or just messages. When creating music and message blended files, the application indicates the Music "**Duration**" as well as the "**Total Message Play Duration**". For optimum effect, the Music "**Duration**" should be greater than or equal to the "**Total Message Duration**". This will ensure music is still being played in the background when the messages are being played. The application will warn if the music ends before the message play duration.

4 iProMOH-One

4.1 Home Screen

The "**Home Screen**" is the hub for all application operations. Every operation returns to this screen once complete.

The "**Home Screen**" allows access to:

- Device - Select the device to create content for. i.e. iProMOH-One
- Configure - media security (in Music On Hold mode only), modify media/messages, settings and playlists.
- File - Open files, save files, preview audio production, and exit application.

For ease of use, the "**Home Screen**" lists the current status of the application (circled, below). These fields get populated as playlists are created, and devices are selected. In Music On Hold mode, the extra device and security information is visible.

Normal Mode




Music On Hold Mode



4.2 File Menu

The file menu allows access to the main application functions.

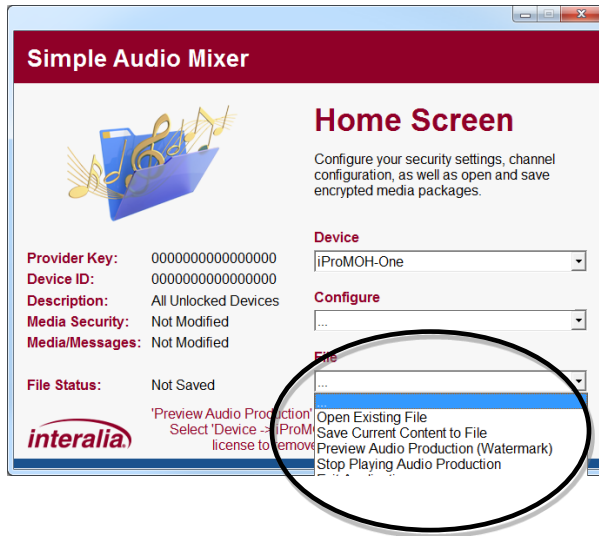

4.2.1 Open Existing File

To open an existing Simple Audio Mixer content file, select this menu item to launch the Windows Explorer file browser.

Each Simple Audio Mixer file contains information from the device it was created for. The application will automatically change to match the device type when the file is opened.

4.2.2 Save Current Content to File

The current progress of the file being configured may be saved at any time using this menu item. To save the current content to a Simple Audio Mixer file, select this menu item to launch the Windows Explorer file browser.

The Simple Audio Mixer filename consists of the following format:

```
<sam>_<DEVICE TYPE>_<DATE OF CREATION>_<u>(OPTIONAL)</u><SPK(OPTIONAL)>_<DEVICE ID>.ipc
```

In the file explorer, the default "**sam**" text can be changed to make the file easier to identify by the user. During the save process, the application will automatically append the rest of the information.

Example 1:

Device Type: iProMOH-One
Date of Creation: January 7, 2014
Service Provider Key: Selected, none zero
Reset Service Provider Key: No
Device Number: 800000
Content Filename: sam_ONE_20140107_SPK_0000000000800000.ipc

Example 2:

Device Type: iProMOH-One
Date of Creation: January 7, 2014
Service Provider Key: Selected, none zero
Reset Service Provider Key: Yes
Device Number: 800000
Content Filename: sam_ONE_20140107_uSPK_0000000000800000.ipc

Example 3:

Device Type: iProMOH-One
Date of Creation: January 21, 2014
Service Provider Key: Not selected, all zeros.
Reset Service Provider Key: No
Device Number: 800000
Content Filename: sam_ONE_20140121_0000000000800000.ipc

IMPORTANT! The Simple Audio Mixer expects the filename to remain in this format. Only the "sam" section may be renamed. Any other modification to the file name will result in the content file **NOT** being loaded by Simple Audio Mixer.

4.2.3 Preview Audio Production

The finished audio production can be played back before it is loaded into the iProMOH-One to ensure the desired result. Select “**Stop Playing Audio Production**” to stop playback.

NOTE: *Preview playback is an iProMOH-Mix demo. The audio playback for the preview will contain an underlining watermark in the audio. If you select “**Device -> iProMOH-Mix**” and purchase a copy of the iProMOH-Mix software, the watermark will be removed. This watermark is only present in the preview, and is not present on the file saved for the iProMOH-One.*

NOTE: *Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the “**Windows Media Player Codec Installation**” section, above, for installation instructions.*

4.3 Security and Settings Page (Music On Hold Mode Only)

Access the "Media Security" page from the "Configure" menu on the Home Screen.



This page is used to manage devices, as well as to select specific devices for content generation. Simple Audio Mixer supports three (3) valid security combinations:

- Content open to all devices from any provider (factory unit): Service Provider Key of all zeros, and a Device ID all zeros.
- Content locked to a specific device, but from **ANY** provider: Service Provider Key of all zeros, and a selected Device ID.
- Content locked to a specific device, from **ONE** provider: Service Provider Key set, and a selected Device ID.

Simple Audio Mixer does not allow for a set Service Provider Key, and a Device ID of all zeros.

4.3.1 Service Provider Key

The Service Provider Key is a customer assignable key used in conjunction with the Device ID to secure content created with the Simple Audio Mixer software to the playback device. This key can be up to sixteen (16) characters, and is a unique identifier for your company. For security reasons, it is recommended that it contains at least one uppercase letter, one number and one symbol.

If a content file was generated with a Service Provider Key assigned to it, this key is permanently linked to the device the first time the content is loaded. Subsequent updates would require this same key to be present in the content file.

IMPORTANT!


Record the Service Provider Key and store it in a secure location. Once a device has been linked to a Service Provider Key, future content updates are not allowed without that same key.

Service Provider Keys should ONLY be used by MOH Service Providers. If you are not an MOH Service Provider you should not use this feature as it will permanently lock your device if you lose the key.

Any locked device would need to return to the factory for reprogramming and would be subject to a reprogramming fee. Unless you are a MOH Service Provider, leave this field at the default zeros.

4.3.1.1 Assigning a Service Provider Key

Enter the key in the "**Service Provider Key**" field. Select "**Assign Key**" to link it to the application.

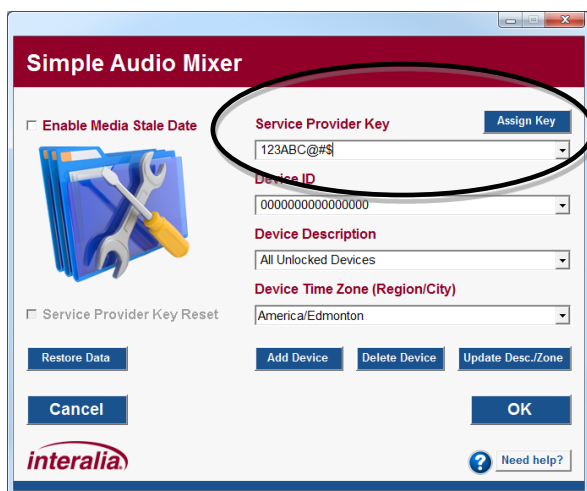


The screenshot shows the 'Simple Audio Mixer' application window. On the left, there is a sidebar with a folder icon and a wrench icon. The main area contains several fields and buttons. A black oval highlights the 'Service Provider Key' field, which contains the text '123ABC@#\$', and the 'Assign Key' button next to it. Below this, there are fields for 'Device ID' (containing '0000000000000000'), 'Device Description' (containing 'All Unlocked Devices'), and 'Device Time Zone (Region/City)' (containing 'America/Edmonton'). At the bottom, there are buttons for 'Restore Data', 'Add Device', 'Delete Device', 'Update Desc./Zone', 'Cancel', and 'OK'. The 'Interalia' logo is in the bottom left corner, and a 'Need help?' link is in the bottom right corner.

Once assigned, the application will automatically default to this key for future content files, and the **"Assign Key"** button is no longer visible. The blank service provider key can be selected for any devices that have not been loaded with content files containing this key. The Service Provider Key will be permanently assigned to the Simple Audio Mixer application once the **"OK"** button is selected.

4.3.1.2 Removing a Service Provider Key from a Device

If a device has been locked to a particular Service Provider Key, it can be unlocked and returned to factory security settings with the **"Service Provider Key Reset"** checkbox. This is useful should you wish to change the Service Provider Key, or if you wish to decommission and sell the device.

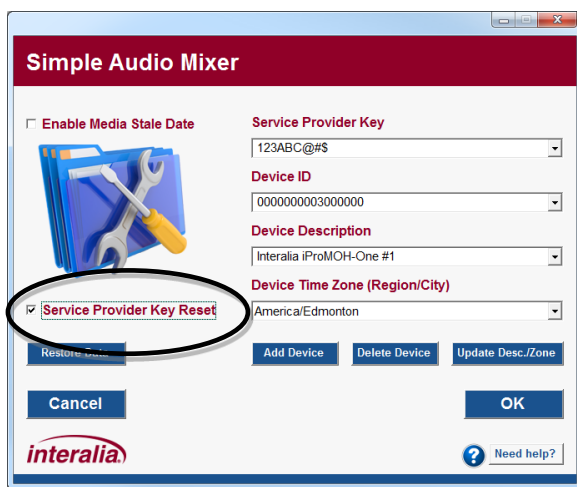

NOTE: The **"Service Provider Key Reset"** checkbox is only selectable if a non-zero Service Provider Key is selected.

NOTE: The Service Provider Key can only be reset in a device if the update file contains the **SAME** Service Provider Key in which it was locked to. This prevents unauthorized unlocking of the device.

4.3.2 Adding Devices

Adding a device consists of configuring the following three (3) areas:

- **"Device ID"** - Enter the serial number from the product label. The application will automatically add zeros to the left of the number to create a 16-digit ID.
- **"Device Description"** - Enter a description up to 24 characters that makes identifying the device easier (i.e. Clothing Store #1). This field is case insensitive, and the application will not allow for same phrase, with a different case (i.e. "store" and "STORE").
- **"Device Time Zone"** - Not available in this device.

The **"Device ID"** and **"Device Description"** fields will auto-complete to allow quick selection of a device.



4.3.2.1 Add Device Button

Once the **"Device ID"**, and **"Device Description"** are entered, select the **"Add Device"** button to add it to the list.

4.3.2.2 Delete Device Button

Select the device by either the "**Device ID**" or "**Device Description**", and select the "**Delete Device**" button to delete it from the list. Use this button to remove devices that are no longer in service, or if an error was made entering the "**Device ID**" when the device was added.

4.3.2.3 Update Desc./Zone

Make changes to the description field for a particular device, and then select the "**Update Desc./Zone**" button to update the information.

4.3.3 Restore Data Button

In the event that a previous install of Simple Audio Mixer becomes corrupt or the application is installed on a different computer, the "**Restore Data**" button allows you to restore a backup copy of the Simple Audio Mixer password, security settings, and device information. It does not restore any content information.

NOTE: The "**Restore Data**" button is only visible when the Security and Settings page has not been modified. Once the "**OK**" button has been selected on the page, the button changes to "**Backup Data**", and the application no longer allows you to restore a previous backup.


To restore a previously backed up instance of Simple Audio Mixer, select the "**Restore Data**" button and browse to the location where you have previously saved the backup file. Select the "**ICL_settings.isf**" file and select "**Open**". Simple Audio Mixer will be restored to its state at the time of the backup.

IMPORTANT! The backup file **MUST REMAIN NAMED "ICL_settings.isf"**


4.3.4 Backup Data Button

The "**Backup Data**" button is used to save the state of the Simple Audio Mixer application by allowing an easy means to save the "**ICL_settings.isf**" file. This file contains the log in password, Service Provider Key, and all Device information, and can be used to restore the application in case of computer failure. It is recommended to do regular backups to protect against data loss, and store that file in a safe location (different computer, network location, flash drive, etc).

NOTE: The "**Backup Data**" button is only visible after a Restore Data was completed, or when the Security and Settings page has not been modified by pressing the "**OK**" button on the page.

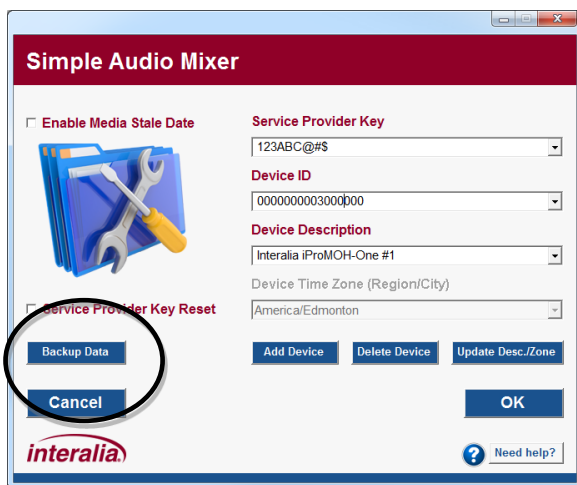

In normal operation, all information entered in the Security and Settings screen do not get committed to the "**ICL_settings.isf**" file until the "**OK**" button is pressed. To ensure all new information is backed up, the following confirmation window appears.

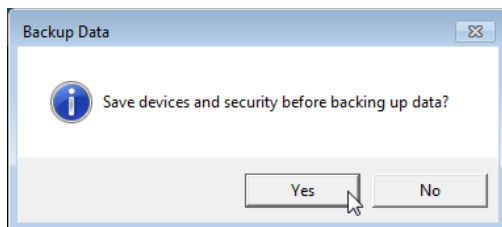

Select the "**Yes**" button to save all new information to the "**ICL_settings.isf**" file before doing the backup, or "**No**" to create the backup without adding new information.


4.3.5 Enable Media Stale Date

Media Stale Date allows the iProMOH to stop playing audio at a preset future date. This allows protection of content for customers being serviced on contract. Once the stale date is reached, the iProMOH will stop playing content, and a new content file with a new stale date would need to be loaded for operation to continue.

To enable Media Stale Date, select the **"Enable Media Stale Date"** check box to reveal the calendar. Select the day, month and year that the iProMOH will stop playing, up to January 31, 2036.

The iProMOH-One counts days of active playback. The stale date is based on elapsed playback days, not elapsed calendar days.

For example, if the stale date was chosen for 10 days in the future, and the device was powered on for 3 days, and then powered off for 5 days. It will then play for an additional 7 days after being powered on again.

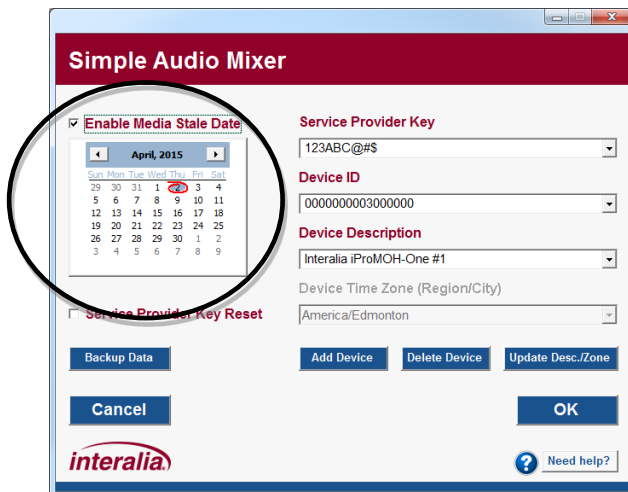

4.3.6 Cancel Button

Abandons all changes and returns to the Home Screen.

4.3.7 OK Button

Saves all changes and returns to the Home Screen.

4.4 Content Administration Page

Access the "**Media/Messages**" page from the "**Configure**" menu on the Home Screen



The "**Content Administration Page**" is used for:

- Adding music / messages to play.
- Adjust specific audio playback settings.

The "Content Administration Page" has three areas:

- Music and Messages
- Settings
- Scheduled Messages (Not available on this device)

The iProMOH-One utilizes a .OGG compression format to minimize file sizes.

The screenshot displays the Simple Audio Mixer web interface. At the top, a maroon header bar contains the title "Simple Audio Mixer" and system information: "Provider Key: 123ABC@#\$", "Device ID: 0000000000300000", and "Description: Interlalia iProMOH-One #1".

The interface is divided into three main sections, each outlined with a rounded rectangle:

- Music and Messages:** This section is split into two sub-sections. The "Music" sub-section shows a file list with one entry: "00:03:52 | default_music.ogg*", its duration "00:03:52", and a button "Add Default Music". The "Messages" sub-section is currently empty, showing a duration of "00:00:00" and a "Total Message Play Duration: 00:00:00".
- Settings:** This section contains various adjustable parameters: "Time Between Messages (MM:SS)" set to 00:20, "Music Cross-Fade Volume (%)" at 20, "Bass" and "Treble" sliders at 0, "Master Output Volume (%)" at 50, "Music Input Level (%)" and "Message Input Level (%)" both at 100 (controlled by an "Audio Balance" slider), and "Time Between Repeats (MM:SS)" at 00:00. There are checkboxes for "Enable External Music" (unchecked), "Enable Local Volume Control" (checked), and "Enable Auto-Add Default Music" (checked). Buttons for "Load Defaults" and "Save Settings" are present. A "Time Remaining (HH:MM)" display shows 00:08 with a green progress bar.
- Scheduled Messages:** This section includes a "Start Time (HH:MM)" set to 00:00, a "Stop Date" set to January 1, and a "Days of Week" selection where all days (SUN through SAT) are currently unchecked. A "Files: 0" indicator is also shown.

At the bottom of the interface, there are "Cancel" and "Save" buttons, the Interlalia logo, and a "Need help?" link.

4.4.1 Music and Messages

The music and messages lists are used to configure reoccurring media. The operation is the same between the two lists, except the music list gets populated with the royalty free music by default.

4.4.1.1 Music / Messages Lists

Music and messages can be added by dragging and dropping them onto the desired list from a location on the computer. Alternatively, right-click on the desired list, and select "**Add Files**" from the menu. Multiple files can be added at once by selecting them in Windows Explorer.

The name contains a playback time prefix in "hours:minutes:seconds" format, and all unsaved media files have a "*" suffix after the name. As media is added, the "**Files**", "**Duration**", and "**Time Remaining**" bar get updated to reflect the current status.

Multiple items can be selected at once by using the "**shift**" and "**control**" keys on the keyboard. Holding "**control**" while selecting items allows for multiple individual items to be selected and deselected. To select a block of items, first select the start item, hold the "**shift**" key, and then select the last item. All items in the block will be selected. Utilize the intuitive right-click menu to manage files in each list. Files can also be moved in the list by left-clicking on highlighted items, and dragging them.

The music and message lists support keyboard input (arrow keys, delete, etc). The hot-key combinations are shown in the right-click menu.

NOTE: *The message playback operation is different in the iProMOH-One than in other iProMOH devices. Any messages in the message list box will **ONLY PLAY ONCE** in each production.*

For example:

- Music list has a 300 second music clip.
- Message list has a 60 second message clip.
- Time Between Messages setting is 30 seconds.

The playback production will then be:

30 seconds music
60 seconds music + message
210 seconds music
Repeat...

To play the message more than once, simply add multiple copies to the message playlist. At the bottom of the message list, the “Total Message Play Duration” displays how long the currently configured messages will play for.

For example:


- Music list has a 300 second music clip.
- Message list has a 60 second message clip, with 3 copies.
- Time Between Messages setting is 30 seconds.

The playback production will then be:

30 seconds music
60 seconds music + message (first message)
30 seconds music
60 seconds music + message (second message)
30 seconds music
60 seconds music + message (third message)
30 seconds music
Repeat...

4.4.1.1.1 Media File Audio Playback


It is possible to listen to the audio files in the playlists. Double clicking on a media file will start the playback of the file. Alternatively, single click on a desired file to select it, and then select “**Start Playing File**” from the right-click menu. During playback of the file, double-clicking on the same file again, or selecting “**Start Playing File**” from the right click menu will start playback from the beginning of the file. Playback can be stopped by selecting “**Stop Playing File**” from the right click menu. The name of the file being played is shown at the bottom of the screen.

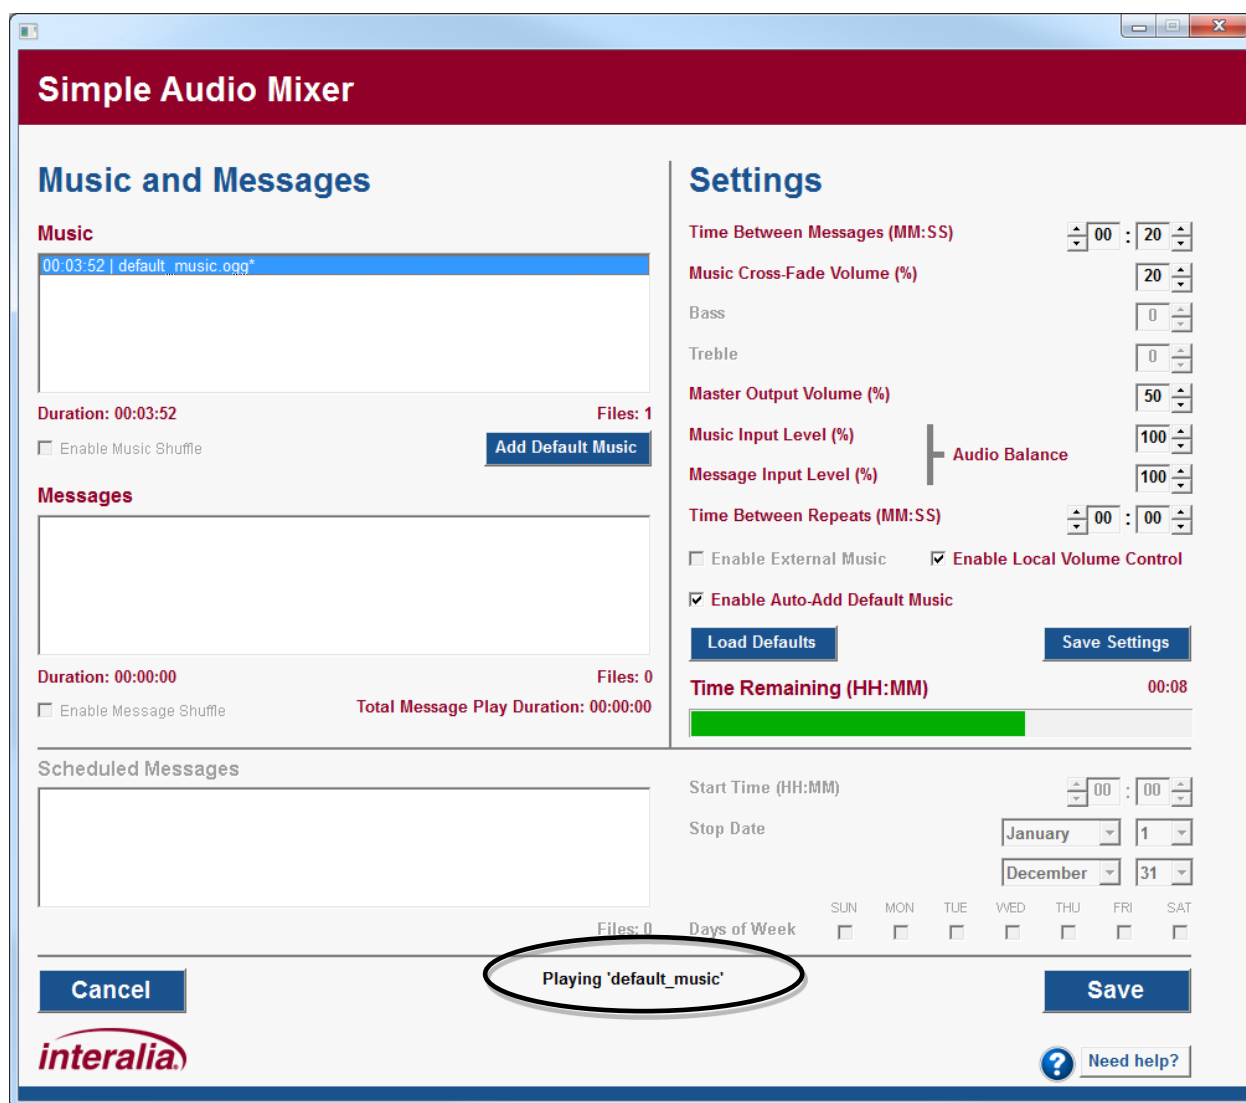

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the **"Windows Media Player Codec Installation"** section, above, for installation instructions.

4.4.1.1.2 Media File Audio Recording

Right-click on the desired list, and select “**Record Audio File**”. The following recording screen is shown.

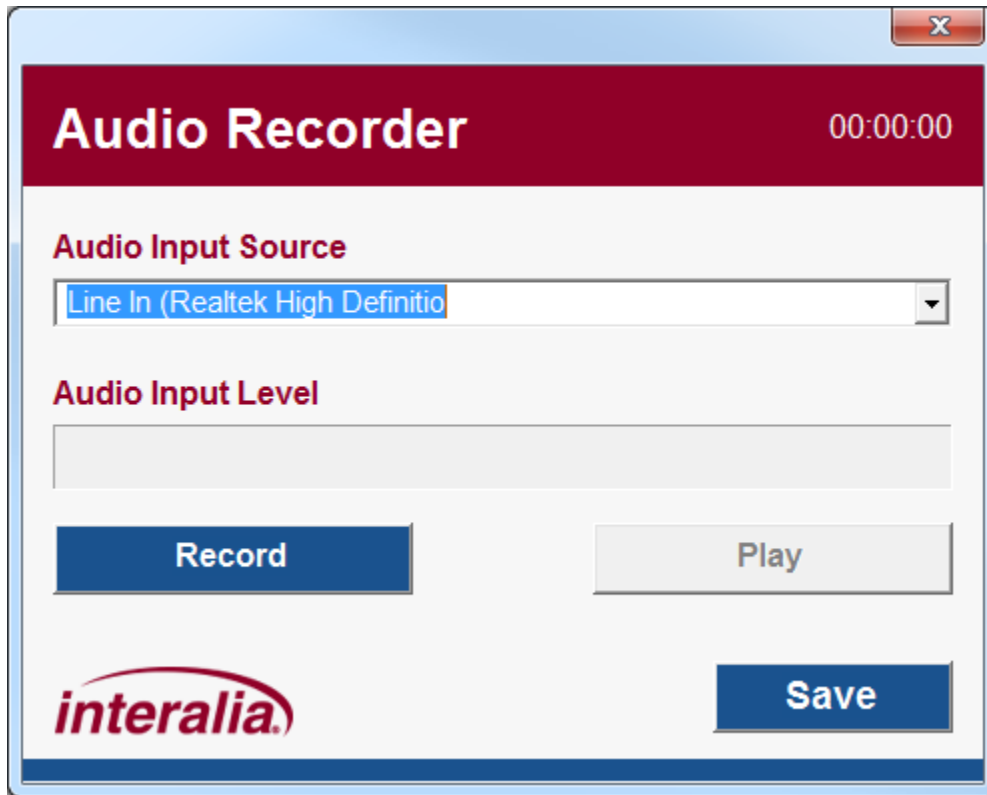

- Selecting the “X” in the top right will cancel the recording and not add the file to the list.
- The top right corner indicates the duration of the recording in HH:MM:SS format.
- The “**Audio Input Source**” pull-down lists all available recording sources on the computer. Select the desired source before selecting “**Record**”.
- The “**Audio Input Level**” indicates the volume during the recording.
- Selecting “**Record**” will start the record process. During this time, the button changes to “**Stop Recording**”. Selecting “**Stop Recording**” will stop the current recording.
- Selecting “**Play**” will playback the recording. During this time, the button changes to “**Stop Playing**”. Selecting “**Stop Playing**” will stop the current playback.
- Selecting “**Save**” will allow you to save the recording to a location on your computer, and then automatically add the recording to the list.

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the “**Windows Media Player Codec Installation**” section, above, for installation instructions.

4.4.1.2 Add Default Music

Select the "**Add Default Music**" button to add the royalty free music to the music list.

4.4.1.3 Enable Music Shuffle / Enable Message Shuffle

Not available on this device.

4.4.1.4 Total Message Play Duration

The play duration of all the message files and the time between messages spacing. See the "Creating a Content File" section for more information.

4.4.2 Settings

The "**Settings**" area allows the customization of the following items on a "per device" basis. This allows for user preferences to be loaded each time the application is started.

NOTE: *All changes are only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

4.4.2.1 Time between Messages

The time between the end of one message until the start of the next message. During this time, music will continue to play, if configured.

- Default: 20 seconds
- Minimum: 0 seconds
- Maximum: 99 minutes, 59 seconds
- Increment: 1 second

4.4.2.2 Music Cross-Fade Volume

During the message playback, the music will be reduced to this volume level, and still play in the background. If set to 0%, only the message will be heard.

- Default: 20%
- Minimum: 0%
- Maximum: 100%
- Increment: 10%

4.4.2.3 Bass

Not available on this device.

4.4.2.4 Treble

Not available on this device.

4.4.2.5 Master Output Volume

Main volume from the audio output connectors. This value is linked to the volume buttons on the device.

- Default: 50%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

4.4.2.6 Audio Balance

Perceived Music/Message Level	Music Input Level	Message Input Level	Master Output Volume
Music sounds 20% louder than message	80%	100%	Adjust to give desired output level
Message sounds 40% louder than music	100%	60%	Adjust to give desired output level
Music and message level sounds the same	100%	100%	Adjust to give desired output level
<i>Note: Only one input level should be changed at any given time. The goal is to keep them as close to 100% for best audio quality, and lower one so that both media sources sound approximately the same. They should not be used to tailor the output level.</i>			

4.4.2.7 Music Input Level

Sound level for the music playlist / external music. Normally it is set to 100%, and is used to balance differences in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

4.4.2.8 Message Input Level

Sound level for the message playlist. Normally it is set to 100%, and is used to balance differences in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

4.4.2.9 Time Between Repeats

The time between the end of the media file until that media file is played again.

- Default: 20 seconds
- Minimum: 0 seconds
- Maximum: 99 minutes, 59 seconds
- Increment: 1 second

4.4.2.10 Enable Local Volume Control

When selected, the volume button on the iProMOH can be used to change the device volume ("Master Output Volume"). If deselected, the user cannot change the volume on the device.

4.4.2.11 Enable External Music

Not available on this device.

4.4.2.12 Enable Auto-Add Default Music

When selected, the application will automatically add the royalty free default music, if the following conditions are true:

- Channel and Settings page is not modified.
- There are no items in the music or messages lists.

4.4.2.13 Save Settings Button

Select the "**Save Settings**" button to use the above settings each time the application is started.

4.4.2.14 Load Defaults Button

Select the "**Load Defaults**" button to return the settings to the factory defaults.

NOTE: *This change is only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

4.4.2.15 *Time Remaining*

Indicates the available play time remaining on the iProMOH, based on the current amount of media files loaded.

4.4.3 Scheduled Messages

Not available on this device.

4.4.4 Content and Administration Page Buttons

4.4.4.1 *Save Button*

Saves all changes for that particular channel to the media package being created, and returns to the "**Home Screen**".

4.4.4.2 *Cancel Button*

Abandon all changes for that particular channel, and returns to the "**Home Screen**".

4.5 Creating a Content File

The typical process for creating content files is:

- Select the device, security settings and stale date if required.
- Configure the media and settings.
- Save the content file which can then be loaded into the iProMOH-One.

During the process, the status section on the left side of the "**Home Screen**" will indicate the completion and file status.

Simple Audio Mixer has the ability to create studio quality pre-blended music and messages into one file for the iProMOH-One.

To illustrate how the settings are utilized, consider the following example:


Add the media:

- Music File #1: 2 minutes
- Music File #2: 1 minute 30 seconds
- Message File #1: 20 seconds
- Message File #2: 15 seconds
- Message File #3: 30 seconds

Configure the settings:

- Time Between Messages: 40 seconds
- Music Cross-Fade Volume: 20%
- Music Volume: 100%
- Message Volume: 90%
- Time Between Repeats: 10 seconds

This is the resulting file:

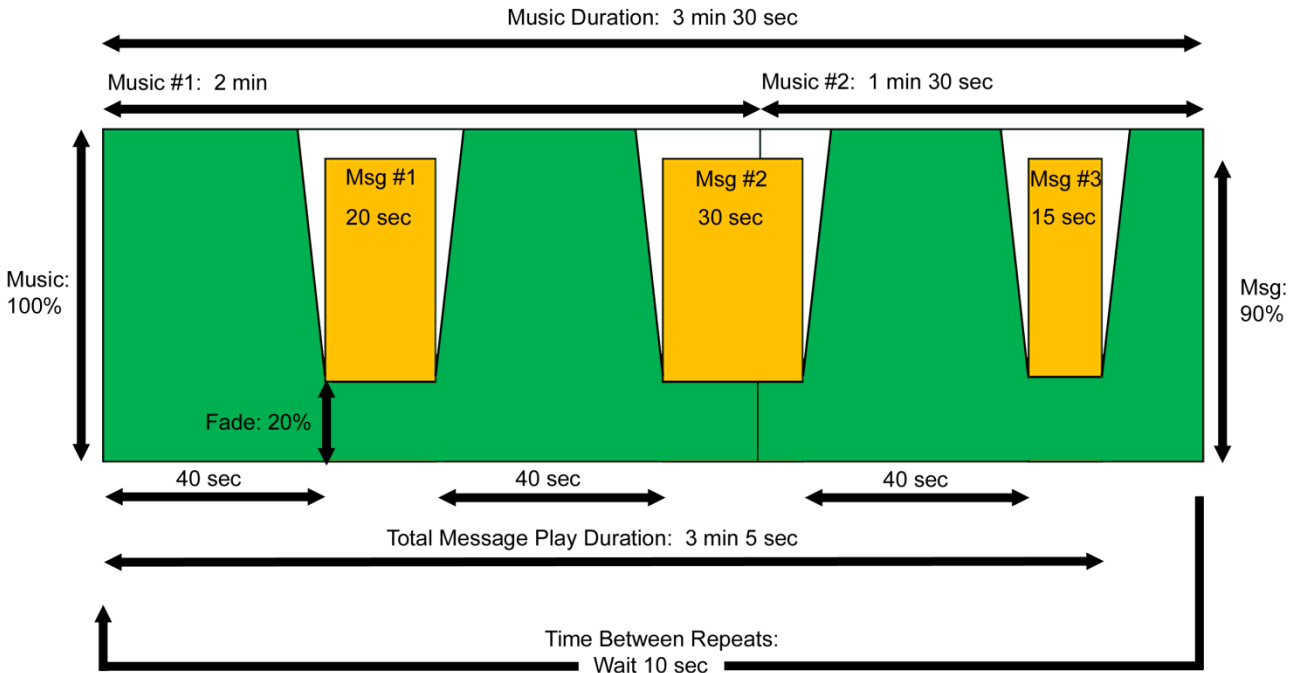

The music is played at 100% level, and fades to 20% level before each message is played at 90% level. Once the entire sequence is finished playing, the iProMOH-One will wait for the **"Time Between Repeats"** duration before restarting the sequence. If that value is zero, then playback resumes immediately.

It is possible to create content files with just music, or just messages. When creating music and message blended files, the application indicates the Music **"Duration"** as well as the **"Total Message Play Duration"**. For optimum effect, the Music **"Duration"** should be greater than or equal to the **"Total Message Play Duration"**. This will ensure music is still being played in the background when the messages are being played. The application will warn if the music ends before the message play duration.

4.6 Loading Your Content onto the iProMOH-One

IMPORTANT!

- A Simple Audio Mixer file with a "Service Provider Key" of all zeros and the "Device ID" of all zeros (unlocked, playback on all devices), **MUST NOT** be present on a USB stick that contains other content files.
- The USB stick **MUST NOT** contain multiple Simple Audio Mixer files for the same Device ID.

To update the iProMOH-One media:

- 1) Power on the iProMOH-One, wait for it to boot.
- 2) Copy the Simple Audio Mixer media file to the root folder of a USB flash drive. Multiple Device ID files can be present on the drive, as long as they meet the criteria stated above.
- 3) Insert the USB stick into the USB port of the iProMOH-One. Once the stick is detected, playback will stop, while the update occurs. Consult the "**Status LED Table**" for expected LED patterns during this process.
- 4) If successful, the status LED will flash green, and playback will resume.

5 iProMOH-SU

5.1 Home Screen

The "**Home Screen**" is the hub for all application operations. Every operation returns to this screen once complete.

The "**Home Screen**" allows access to:

- Device - Select the device to create content for. i.e. iProMOH-SU
- Configure - Select media security (in Music On Hold mode only), modify channel settings and playlists.
- File - Open files, save files, and exit application.

For ease of use, the **Home Screen** lists the current status of the application (circled, below). These fields get populated as playlists are created, and devices are selected. In Music On Hold mode, the extra device and security information is visible.

Normal Mode



Music On Hold Mode



5.2 File Menu

The file menu allows access to the main application functions.



5.2.1 Open Existing File

To open an existing Simple Audio Mixer content file, select this menu item to launch the Windows Explorer file browser.

Each Simple Audio Mixer file contains information from the device it was created for. The application will automatically change to match the device type when the file is opened.

5.2.2 Save Current Content to File

The current progress of the file being configured may be saved at any time using this menu item. To save the current content to a Simple Audio Mixer file, select this menu item to launch the Windows Explorer file browser.

The Simple Audio Mixer filename consists of the following format:

```
<sam>_<DEVICE TYPE>_<DATE OF CREATION>_<u(OPTIONAL)><SPK(OPTIONAL)>_<DEVICE ID>.ipc
```

In the file explorer, the default "**sam**" text can be changed to make the file easier to identify by the user. During the save process, the application will automatically append the rest of the information.

Example 1:

Device Type:	iProMOH-SU
Date of Creation:	January 7, 2014
Service Provider Key:	Selected, none zero
Reset Service Provider Key:	No
Device Number:	00007070FFFF
Content Filename:	sam_ONE_20140107_SPK_000000007070FFFF.ipc

Example 2:

Device Type:	iProMOH-SU
Date of Creation:	January 7, 2014
Service Provider Key:	Selected, none zero
Reset Service Provider Key:	Yes
Device Number:	00007070FFFF
Content Filename:	sam_ONE_20140107_uSPK_000000007070FFFF.ipc


Example 3:

Device Type:	iProMOH-SU
Date of Creation:	January 21, 2014
Service Provider Key:	Not selected, all zeros.
Reset Service Provider Key:	No
Device Number:	00007070FFFF
Content Filename:	sam_ONE_20140121_000000007070FFFF.ipc

IMPORTANT! The Simple Audio Mixer expects the filename to remain in this format. Only the "sam" section may be renamed. Any other modification to the file name will result in the content file **NOT** being loaded by Simple Audio Mixer and/or the iProMOH-SU.

5.3 Security and Settings Page (Music On Hold Mode Only)

Access the "Media Security" page from the "Configure" menu on the Home Screen.

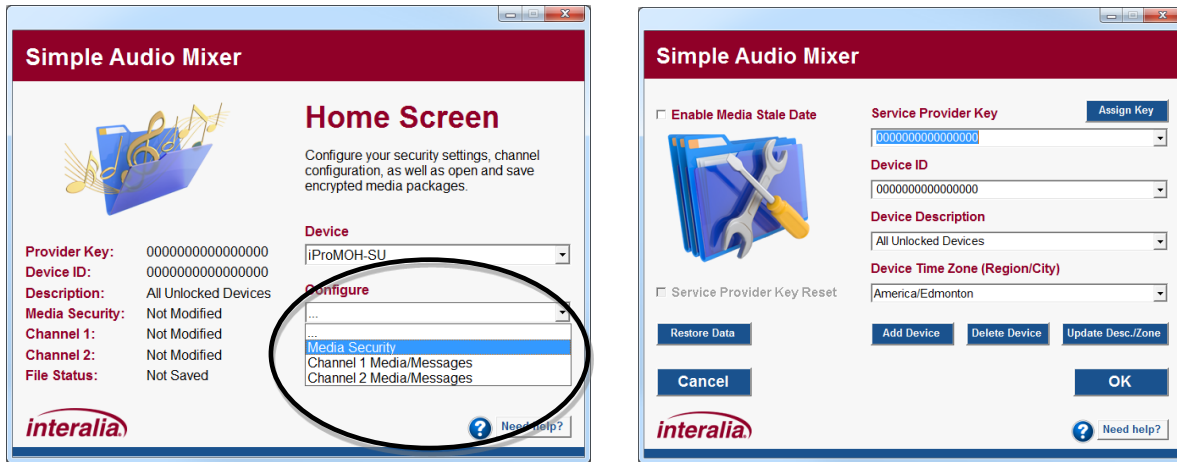

This page is used to manage devices, as well as to select specific devices for content generation. Simple Audio Mixer supports three (3) valid security combinations:

- Content open to all devices from any provider (factory unit): Service Provider Key of all zeros, and a Device ID all zeros.
- Content locked to a specific device, but from **ANY** provider: Service Provider Key of all zeros, and a selected Device ID.
- Content locked to a specific device, from **ONE** provider: Service Provider Key set, and a selected Device ID.

Simple Audio Mixer does not allow for a set Service Provider Key, and a Device ID of all zeros.

5.3.1 Service Provider Key

The Service Provider Key is a customer assignable key used in conjunction with the Device ID to secure content created with the Simple Audio Mixer software to the playback device. This key can be up to sixteen (16) characters, and is a unique identifier for your company. For security reasons, it is recommended that it contains at least one uppercase letter, one number and one symbol.

If a content file was generated with a Service Provider Key assigned to it, this key is permanently linked to the device the first time the content is loaded. Subsequent updates would require this same key to be present in the content file.

IMPORTANT!


Record the Service Provider Key and store it in a secure location. Once a device has been linked to a Service Provider Key, future content updates are not allowed without that same key.

Service Provider Keys should ONLY be used by MOH Service Providers. If you are not an MOH Service Provider you should not use this feature as it will permanently lock your device if you lose the key.

Any locked device would need to return to the factory for reprogramming and would be subject to a reprogramming fee. Unless you are a MOH Service Provider, leave this field at the default zeros.

5.3.1.1 Assigning a Service Provider Key

Enter the key in the "**Service Provider Key**" field. Select "**Assign Key**" to link it to the application.

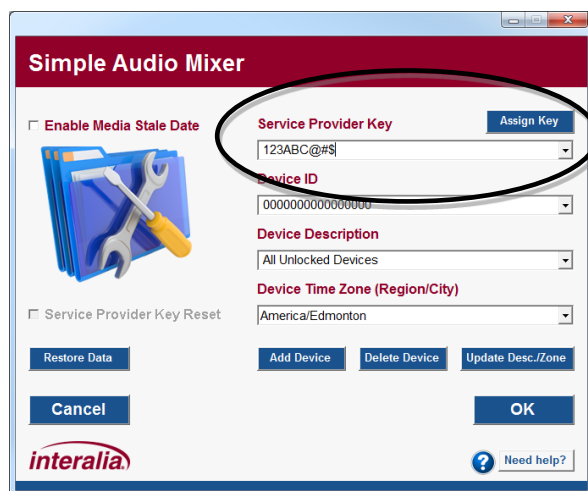


Once assigned, the application will automatically default to this key for future content files, and the "**Assign Key**" button is no longer visible. The blank service provider key can be selected for

any devices that have not been loaded with content files containing this key. The Service Provider Key will be permanently assigned to the Simple Audio Mixer application once the "OK" button is selected.

5.3.1.2 Removing a Service Provider Key from a Device

If a device has been locked to a particular Service Provider Key, it can be unlocked and returned to factory security settings with the "**Service Provider Key Reset**" checkbox.

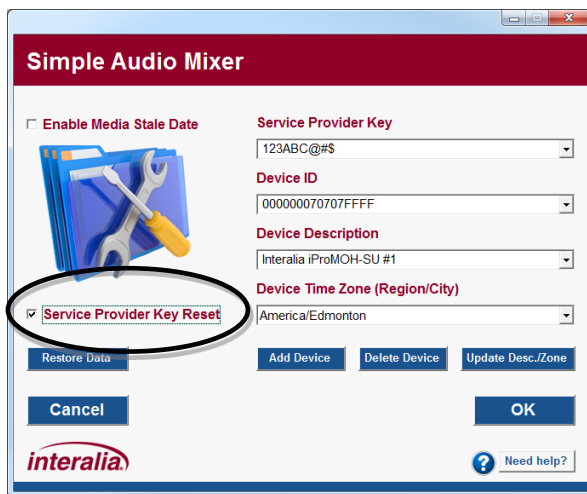

NOTE: The "**Service Provider Key Reset**" checkbox is only selectable if a non-zero Service Provider Key is selected.


NOTE: The Service Provider Key can only be reset in a device if the update file contains the **SAME** Service Provider Key in which it was locked to. This prevents unauthorized unlocking of the device.

5.3.2 Adding Devices

Adding a device consists of configuring the following three (3) areas:

- **"Device ID"** - Enter the 12-digit MAC address from the product label. The application will automatically add zeros to the left of the number to create a 16-digit ID, and will automatically convert it to uppercase. To facilitate the addition of multiple devices, a bar code scanner may be used.
- **"Device Description"** - Enter a description up to 24 characters that makes identifying the device easier (i.e. Clothing Store #1). This field is case insensitive, and the application will not allow for same phrase, with a different case (i.e. "store" and "STORE").
- **"Device Time Zone"** - Use the pull down to select the region and city closest to where the **iProMOH will be physically installed**. The list is populated by continents, with "America" covering North, Central and South America.

The **"Device ID"** and **"Device Description"** fields will auto-complete to allow quick selection of a device.

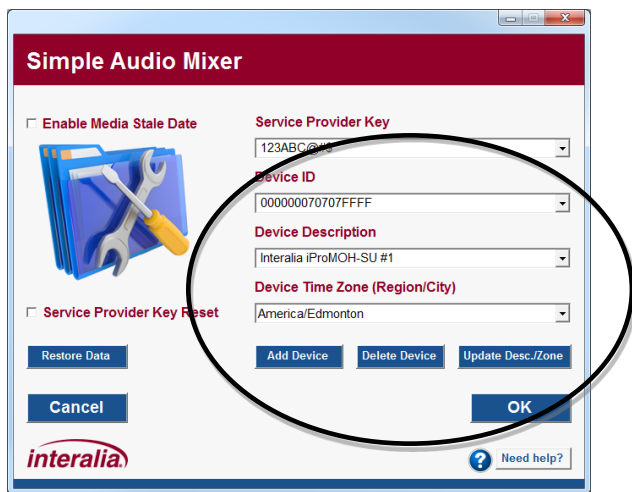

5.3.2.1 Add Device Button

Once the **"Device ID"**, **"Device Description"**, and **"Device Time Zone"** are entered, select the **"Add Device"** button to add it to the list.

5.3.2.2 Delete Device Button

Select the device by either the "**Device ID**" or "**Device Description**", and select the "**Delete Device**" button to delete it from the list. Use this button to remove devices that are no longer in service, or if an error was made entering the "**Device ID**" when the device was added.

5.3.2.3 Update Desc./Zone

Make changes to the description and/or time zone fields for a particular device, and then select the "**Update Desc./Zone**" button to update the information.

5.3.3 Restore Data Button

In the event that a previous install of Simple Audio Mixer becomes corrupt or the application is installed on a different computer, the "**Restore Data**" button allows you to restore a backup copy of the Simple Audio Mixer password, security settings, and device information. It does not restore any content information.

NOTE: The "**Restore Data**" button is only visible when the Security and Settings page has not been modified. Once the "**OK**" button has been selected on the page, the button changes to "**Backup Data**", and the application no longer allows you to restore a previous backup.


To restore a previously backed up instance of Simple Audio Mixer, select the "**Restore Data**" button and browse to the location where you have previously saved the backup file. Select the "**ICL_settings.isf**" file and select "**Open**". Simple Audio Mixer will be restored to its state at the time of the backup.

IMPORTANT! The backup file **MUST REMAIN NAMED "ICL_settings.isf"**.


5.3.4 Backup Data Button

The "**Backup Data**" button is used to save the state of the Simple Audio Mixer application by allowing an easy means to save the "**ICL_settings.isf**" file. This file contains the log in password, Service Provider Key, and all Device information, and can be used to restore the application in case of computer failure. It is recommended to do regular backups to protect against data loss, and store that file in a safe location (different computer, network location, flash drive, etc).

NOTE: The "**Backup Data**" button is only visible after a Restore Data was completed, or when the Security and Settings page has not been modified by pressing the "**OK**" button on the page.

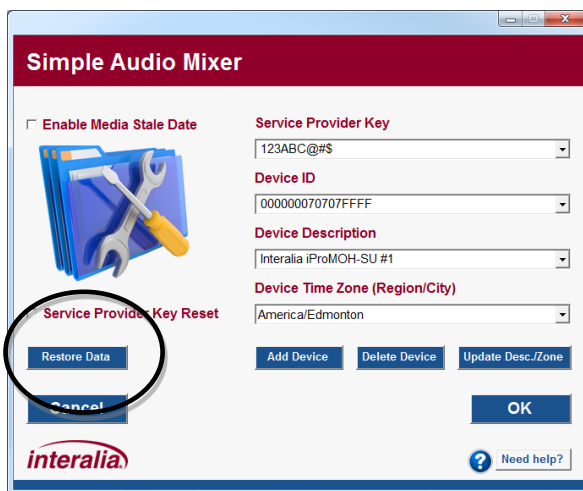

In normal operation, all information entered in the Security and Settings screen do not get committed to the "**ICL_settings.isf**" file until the "**OK**" button is pressed. To ensure all new information is backed up, the following confirmation window appears.

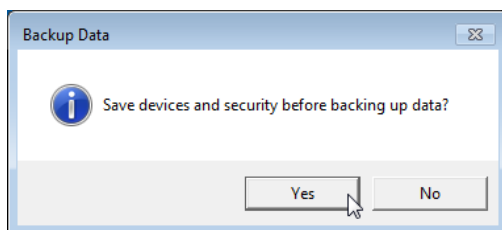

Select the "**Yes**" button to save all new information to the "**ICL_settings.isf**" file before doing the backup, or "**No**" to create the backup without adding new information.

5.3.5 Enable Media Stale Date

Media Stale Date allows the iProMOH to stop playing audio at a preset future date. This allows protection of content for customers being serviced on contract. Once the stale date is reached, the iProMOH will stop playing content, and a new content file with a new stale date would need to be loaded for operation to continue.

To enable Media Stale Date, select the **"Enable Media Stale Date"** check box to reveal the calendar. Select the day, month and year that the iProMOH will stop playing, up to January 31, 2036.



5.3.6 Cancel Button

Abandons all changes and returns to the Home Screen.

5.3.7 OK Button

Saves all changes and returns to the Home Screen.

5.4 Content Administration Page

Access the "**Channel 1 Media/Messages**" or "**Channel 2 Media/Messages**" page from the "**Configure**" menu on the Home Screen



The "**Content Administration Page**" is used for:

- Adding music to play on the selected channel.
- Adding messages to play on the selected channel.
- Scheduling up to 10 messages to play at preset times on the selected channel (Music On Hold mode only).
- Adjust channel specific audio playback settings.

The "Content Administration Page" has three areas:

- Music and Messages
- Settings
- Scheduled Messages (Only available in Music On Hold mode)

The iProMOH-SU utilizes an .OGG compression format to maximize storage capacity.

The screenshot displays the Simple Audio Mixer web interface. At the top, a maroon header bar contains the title "Simple Audio Mixer" on the left, and on the right, it shows the "Provider Key: 123ABC@#\$", "Device ID: 00000070707FFFF", "Description: Interlalia iProMOH-SU #1", and "Ch.1".

The main content area is divided into three sections:

- Music and Messages:** This section is split into two sub-sections. The "Music" sub-section has a text input field containing "00:03:52 | default_music.ogg*", a "Duration: 00:03:52" label, a "Files: 1" label, an "Add Default Music" button, and an unchecked "Enable Music Shuffle" checkbox. The "Messages" sub-section has an empty text input field, a "Duration: 00:00:00" label, a "Files: 0" label, and an unchecked "Enable Message Shuffle" checkbox.
- Settings:** This section contains various controls: "Time Between Messages (MM:SS)" set to 00:20, "Music Cross-Fade Volume (%)" set to 20, "Bass" and "Treble" sliders at 0, "Master Output Volume (%)" set to 50, "Music Input Level (%)" and "Message Input Level (%)" both set to 100, and an "Audio Balance" slider. It also includes "Time Between Repeats (MM:SS)" set to 00:00, checkboxes for "Enable External Music" (unchecked), "Enable Local Volume Control" (checked), and "Enable Auto-Add Default Music" (checked). There are "Load Defaults" and "Save Settings" buttons. At the bottom of this section, "Time Remaining (HH:MM)" is shown as 18:29 with a green progress bar.
- Scheduled Messages:** This section features a large empty text input field, a "Files: 0" label, a "Start Time (HH:MM)" set to 00:00, a "Stop Date" set to January 1, and a "Days of Week" section with checkboxes for SUN, MON, TUE, WED, THU, FRI, and SAT, all of which are currently unchecked.

At the bottom of the interface, there are "Cancel" and "Save" buttons, the Interlalia logo, and a "Need help?" link with a question mark icon.

5.4.1 Music and Messages

The music and message lists are used to configure reoccurring media. The operation is the same between the two lists, except the music list gets populated with the royalty free music by default.

5.4.1.1 Music / Messages Lists

Music and messages can be added by dragging and dropping them onto the desired list from a location on the computer. Alternatively, right-click on the desired list, and select "**Add Files**" from the menu. Multiple files can be added at once by selecting them in Windows Explorer.

The name contains a playback time prefix in "hours:minutes:seconds" format, and all unsaved media files have a "*" suffix after the name. As media is added, the "**Files**", "**Duration**", and "**Time Remaining**" bar get updated to reflect the current status.

NOTE: *The default music is already stored on the iProMOH-SU. Adding this music does not affect the "**Time Remaining**".*


NOTE: *Simple Audio Mixer only stores one copy of each media file. If multiple copies are added, only one is actually stored, and the "**Time Remaining**" will only get updated once.*

Multiple items can be selected at once by using the "**shift**" and "**control**" keys on the keyboard. Holding "**control**" while selecting items allows for multiple individual items to be selected and deselected. To select a block of items, first select the start item, hold the "**shift**" key, and then select the last item. All items in the block will be selected. Utilize the intuitive right-click menu to manage files in each list. Files can also be moved in the list by left-clicking on highlighted items, and dragging them.

The music and message lists support keyboard input (arrow keys, delete, etc). The hot-key combinations are shown in the right-click menu.

5.4.1.1.1 Media File Audio Playback


It is possible to listen to the audio files in the playlists. Double clicking on a media file will start the playback of the file. Alternatively, single click on a desired file to select it, and then select **“Start Playing File”** from the right-click menu. During playback of the file, double-clicking on the same file again, or selecting **“Start Playing File”** from the right click menu will start playback from the beginning of the file. Playback can be stopped by selecting **“Stop Playing File”** from the right click menu. The name of the file being played is shown at the bottom of the screen.

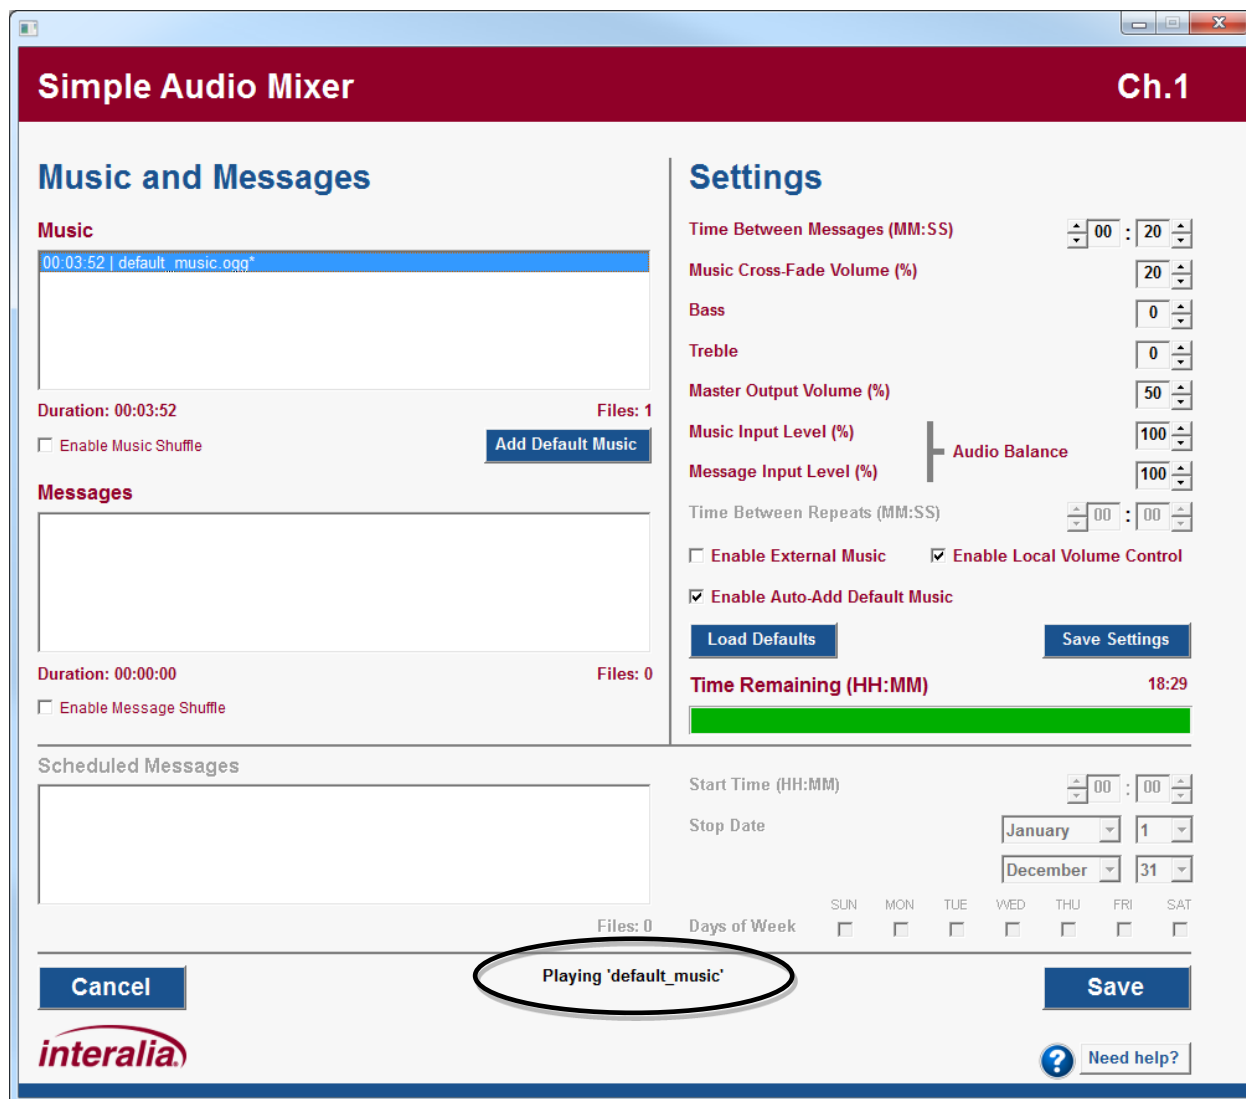

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the **“Windows Media Player Codec Installation”** section, above, for installation instructions.

5.4.1.1.2 Media File Audio Recording

Right-click on the desired list, and select “**Record Audio File**”. The following recording screen is shown.

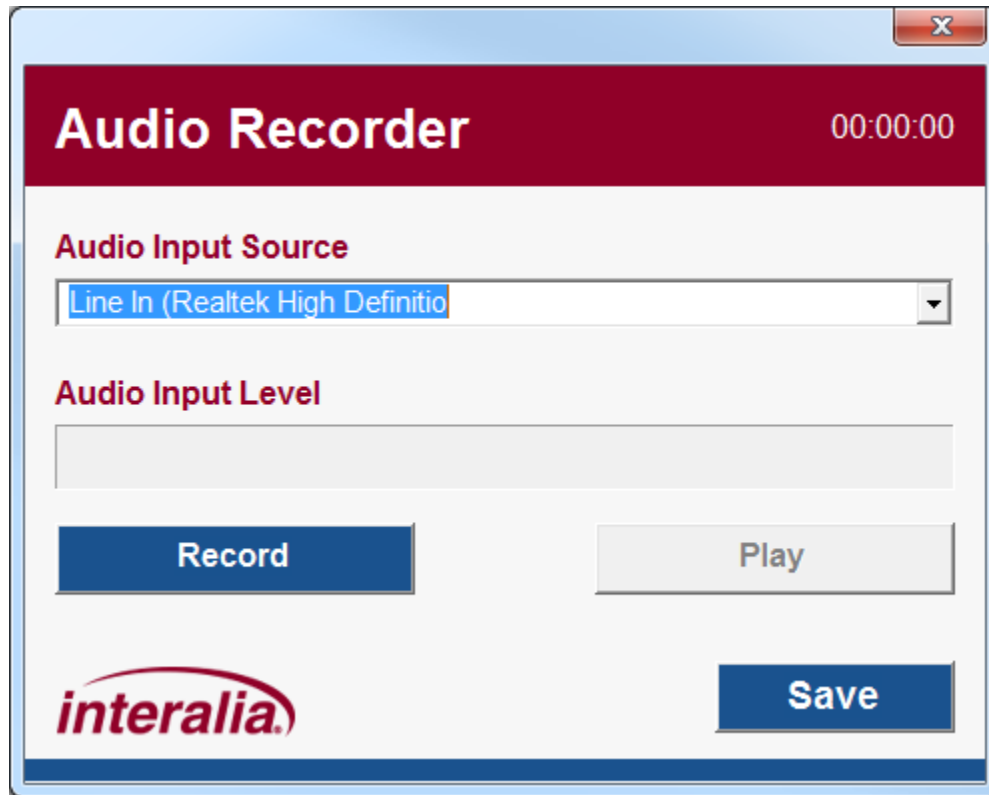

- Selecting the “X” in the top right will cancel the recording and not add the file to the list.
- The top right corner indicates the duration of the recording in HH:MM:SS format.
- The “**Audio Input Source**” pull-down lists all available recording sources on the computer. Select the desired source before selecting “**Record**”.
- The “**Audio Input Level**” indicates the volume during the recording.
- Selecting “**Record**” will start the record process. During this time, the button changes to “**Stop Recording**”. Selecting “**Stop Recording**” will stop the current recording.
- Selecting “**Play**” will playback the recording. During this time, the button changes to “**Stop Playing**”. Selecting “**Stop Playing**” will stop the current playback.
- Selecting “**Save**” will allow you to save the recording to a location on your computer, and then automatically add the recording to the list.

NOTE: Simple Audio Mixer requires the audio codecs for .OGG to be installed into Windows Media Player. Consult the “**Windows Media Player Codec Installation**” section, above, for installation instructions.

5.4.1.2 Add Default Music

Select the "**Add Default Music**" button to add the royalty free music to the music list. Multiple copies can be added.

5.4.1.3 Enable Music Shuffle / Enable Message Shuffle

Select the desired shuffle checkbox to enable the music and/or message shuffle functionality. When enabled, the iProMOH-SU will create a non-repeating playback order. All list items will get played before the list is shuffled again.

5.4.2 Settings

The "**Settings**" area allows the customization of the following items on a "per channel", and "per device" basis. This allows for user preferences to be loaded each time the application is started.

NOTE: *All changes are only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

5.4.2.1 Time between Messages

The time between the end of one message until the start of the next message. During this time, music will continue to play, if configured.

- Default: 20 seconds
- Minimum: 0 seconds
- Maximum: 99 minutes, 59 seconds
- Increment: 1 second

5.4.2.2 Music Cross-Fade Volume

During the message playback, the music will be reduced to this volume level, and still play in the background. If set to 0%, only the message will be heard.

- Default: 20%
- Minimum: 0%
- Maximum: 100%
- Increment: 10%

5.4.2.3 Bass

Bass level for the media playback.

- Default: 0
- Minimum: -5
- Maximum: +5
- Increment: 1

5.4.2.4 Treble

Treble level for the media playback.

- Default: 0
- Minimum: -5
- Maximum: +5
- Increment: 1

5.4.2.5 Master Output Volume

Main volume from the audio output connectors. This value is linked to the volume buttons on the device.

- Default: 50%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

5.4.2.6 Audio Balance

Perceived Music/Message Level	Music Input Level	Message Input Level	Master Output Volume
Music sounds 20% louder than message	80%	100%	Adjust to give desired output level
Message sounds 40% louder than music	100%	60%	Adjust to give desired output level
Music and message level sounds the same	100%	100%	Adjust to give desired output level
Note: Only one input level should be changed at any given time. The goal is to keep them as close to 100% for best audio quality, and lower one so that both media sources sound approximately the same. They should not be used to tailor the output level.			

5.4.2.7 Music Input Level

Sound level for the music playlist / external music. Normally it is set to 100%, and is used to balance differences in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

5.4.2.8 Message Input Level

Sound level for the message playlist. Normally it is set to 100%, and is used to normalize balance in volume between music and messages.

- Default: 100%
- Minimum: 10%
- Maximum: 100%
- Increment: 10%

5.4.2.9 Time Between Repeats

Not available on this device.

5.4.2.10 *Enable Local Volume Control*

When selected, the volume buttons on the iProMOH can be used to change the device volume ("**Master Output Volume**"). If deselected, the user cannot change the volume on the device.

5.4.2.11 *Enable External Music*

When selected, the iProMOH-SU will use the external music input as the source of the music played. The "**Music**" list box will get disabled, with an option to delete all music in the music list to optimize storage space, and reduce content update time.

5.4.2.12 *Enable Auto-Add Default Music*

When selected, the application will automatically add the royalty free default music, if the following conditions are true:

- Channel and Settings page is not modified.
- There are no items in the music, messages, or scheduled messages lists.

5.4.2.13 *Save Settings Button*

Select the "**Save Settings**" button to use the above settings each time the application is started.

5.4.2.14 Load Defaults Button

Select the "**Load Defaults**" button to return the settings to the factory defaults.

NOTE: *This change is only retained for the current channel / current device instance, unless the "**Save Settings**" button is selected. Then they will be applied to each future channel / future device instance.*

5.4.2.15 Time Remaining

Indicates the available play time remaining on the iProMOH, based on the current amount of media files loaded.

5.4.3 Scheduled Messages (Music On Hold Mode Only)

Up to ten (10) scheduled messages can be assigned to play on specific times, days and/or dates. This functionality is useful for seasonal announcements, or store open and close announcements. All functionality in the "**Scheduled Messages**" area is governed with the mouse right-click menu, and unlike the music / message lists, no keyboard inputs are allowed. The "**Files**" counter at the bottom of the list indicates the number of scheduled messages loaded.

IMPORTANT! *In order to use stale date and scheduled messages, the iProMOH-SU must be first connected to a network, and synchronized with a time server. See the "**Setting the iProMOH-SU Time**" section in this manual for details.*

5.4.3.1 Scheduled Messages List

Messages can be added by dragging and dropping them onto the list from a location on the computer. Alternatively, right-click on the list, and select "**Add Files**" from the menu. Multiple files can be added at once by selecting them in Windows Explorer. Up to ten (10) scheduled messages can be loaded, and will play at the assigned time, between the start and stop dates, for the selected days of the week. The scheduled messages will repeat on the next calendar year.

Once added, the message file name is visible in the list. The name contains a playback time prefix in "minutes:seconds" format, and all unsaved media files have a "*" suffix after the name.

As media is added, the "**Files**" counter and "**Time Remaining**" bar get updated to reflect the current status.

The playback schedule is shown for the selected message. Any changes to that message schedule are retained when a different message is selected in the list. Right-click on the selected message for the menu to quickly set / clear schedule items using the follow menu items:

- Clear All Days (Disables message)
- Set All Days (Checks Sunday through Saturday)
- Set Week Days (Checks Monday through Friday)
- Set Weekend Days (Checks Saturday and Sunday)
- Reset Start/Stop Date (Resets Start Date to January 1 and Stop Date to December 31 - All year playback)
- Exit (Closes the popup menu)

NOTE: Simple Audio Mixer only stores one copy of each media file. If multiple copies are added, only one is actually stored, and the "**Time Remaining**" will only get updated once

5.4.3.2 Start Time

Time of day that the message will be played in 24-hour format.

5.4.3.3 Start Date

The month and day that the message will start playing. This date must occur before the "**Stop Date**".

5.4.3.4 Stop Date

The month and day that the message will stop playing. This date must occur after the "**Start Date**".

5.4.3.5 Days of Week

The days of the week that the message should play. Any message can be disabled by deselecting all the "**Days of Week**" boxes.

5.4.4 Content and Administration Page Buttons

5.4.4.1 *Save Button*

Saves all changes for that particular channel to the media package being created, and returns to the "**Home Screen**".

5.4.4.2 *Cancel Button*

Abandon all changes for that particular channel, and returns to the "**Home Screen**".

5.5 Creating a Content File

The typical process for creating content files is:

- Select the device, security settings and stale date if required.
- Configure the channel 1 media and settings.
- Configure the channel 2 media and settings.
- Save the content file.

During the process, the status section on the left side of the "**Home Screen**" will indicate the completion and file status.

5.6 Loading Your Content onto the iProMOH-SU

IMPORTANT!

- A Simple Audio Mixer file with a "Service Provider Key" of all zeros and the "Device ID" of all zeros (unlocked, playback on all devices), **MUST NOT** be present on a USB stick that contains other content files.
- The USB stick **MUST NOT** contain multiple Simple Audio Mixer files for the same Device ID.

To update the iProMOH-SU media:

- 5) Power on the iProMOH-SU, wait for it to boot.
- 6) Copy the Simple Audio Mixer media file to the root folder of a USB flash drive. Multiple Device ID files can be present on the drive, as long as they meet the criteria stated above.
- 7) Insert the USB stick into the USB port of the iProMOH-SU. Once the stick is detected, playback will stop, while the update occurs. Consult the "**Status LED Table**" for expected LED patterns during this process.
- 8) If successful, the status LED will flash green, and playback will resume.