

WIRELESS NETWORK CAMERA

USER'S GUIDE
ENGLISH VERSION 1.0



 **LIVE**

LNC104

www.lorextechnology.com

BEFORE YOU START


Please make sure to register your product at www.lorextechnology.com to receive product updates and technical support

THIS PRODUCT MAY REQUIRE PROFESSIONAL INSTALLATION

LOREX IS COMMITTED TO FULFILLING YOUR SECURITY NEEDS



- We have developed user friendly products and documentation. Please read the Quick Start Guide and User Manual before you install this product.

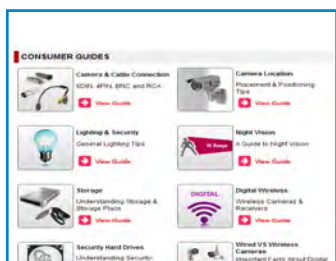

- Consumer Guides and Video Tutorials are available on our web site at www.lorextechnology.com/support



- If you require further installation assistance, please visit www.lorextechnology.com/installation or contact a professional installer.



- Please note that once the components of this product have been unsealed, you cannot return this product directly to the store without the original packaging.



LOREX[®]
VIEW YOUR WORLD™

VANTAGE

AVANT DE COMMENCER

Veuillez veiller à enregistrer votre produit à www.lorexcctv.com/registration pour recevoir des mises à jour et l'information de produit et le support technique

CE PRODUIT POURRAIT EXIGER UNE INSTALLATION PROFESSIONNELLE

LOREX S'ENGAGE À SATISFAIRE VOS BESOINS SÉCURITAIRES

- Veuillez lire le guide de démarrage rapide et le mode d'emploi avant d'installer ce produit
- Les guides du consommateur et les séances de tutorat vidéo sont disponibles sur l'Internet en visitant www.lorextechnology.com/support
- Si vous avez besoin de l'aide pour l'installation, veuillez visiter www.lorextechnology.com/installation ou contactez un spécialiste en installation
- Veuillez constater qu'une fois que les composantes de ce produit ont été retirées de l'emballage, vous ne pourrez plus retourner ce produit directement au magasin

ANTES DE EMPEZAR

Cerciórese de por favor colocar su producto en www.lorexcctv.com/registration para recibir actualizaciones y la información del producto y soporte técnico

ESTE PRODUCTO PUEDE EXIGIR UNA INSTALACIÓN PROFESIONAL

LOREX SE COMPROMETE A SATISFACER SUS NECESIDADES EN SEGURIDAD

- Favor de leer la guía de instalación rápida y la guía del usuario antes de instalar este product.
- Puede conseguir las guías del consumidor y los cursos en enseñanza video sobre el Internet visitando www.lorexcctv.com/support
- Si necesita ayuda para la instalación, visite www.lorextechnology.com/installation o contacte un especialista en instalaciones
- Favor de notar que una vez que los componentes de este producto han sido removidos del embalaje, no podrá devolver este producto directamente a la tienda



www.lorextechnology.com



LOREX[®]

VIEW YOUR WORLD™
VOIR VOTRE MONDE™
VER SUMUNDO™

VANTAGE



NEED HELP?

CONTACT US FIRST

DO NOT RETURN THIS PRODUCT TO THE STORE

Please make sure to register your product at www.lorextechnology.com to receive product updates and technical support.

2 Easy Ways to Contact Us



Online:

Product Support is available 24/7 including product information, user manuals, quick start up guides and FAQ's at **www.lorextechnology.com/support**

For all other matters, visit **www.lorextechnology.com**



By Phone:

North America:

Customer Service (for warranty matters): **1-888-425-6739** (1-888-42-LOREX)

Tech Support (for technical/installation issues): **1-877-755-6739** (1-877-75-LOREX)

Mexico: **001-800-514-6739**

International: **+800-425-6739-0** (Example: From the UK, dial 00 instead of +)



NECESITA AYUDA

COMUNÍQUESE PRIMERO CON NOSOTROS

NO DEVUELVA ESTE PRODUCTO A LA TIENDA

Cerciórese de por favor colocar su producto en www.lorexctv.com/registration para recibir actualizaciones y la información del producto

**2 maneras sencillas de comunicarse
con nosotros:**

En Línea:

Apoyo al producto disponible 24/7 incluyendo información del producto, manuales para el usuario, guías de inicio rápido y preguntas más frecuentes en

www.lorextechnology.com/support

Para todo lo demás, visite

www.lorextechnology.com

Por Teléfono:

Norte América:

Atención al cliente (en materia de garantía):

1-888-425-6739 (1-888-42-LOREX)

Soporte técnico (para asuntos técnicos/la instalación):

1-877-755-6739 (1-877-75-LOREX)

Mexico: **001-800-514-6739**

Internacional: **+800-425-6739-0**

(Ejemplo: Desde el Reino Unido, marque el 00 en lugar del +)

VOUS AVEZ BESOIN D'AIDE?

CONTACTEZ-NOUS D'ABORD

NE RETOURNEZ PAS CE PRODUIT AU MAGASIN

Veuillez veiller à enregistrer votre produit à www.lorexctv.com/registration pour recevoir des mises à jour et l'information de produit

2 façons faciles de nous contacter:

En Ligne:

Le support des produits est disponible 24 heures sur 24, 7 jours sur 7, y compris les informations sur les produits, les guides de l'utilisateur, les guides de démarrage rapide et les foires à questions

www.lorextechnology.com/support

Pour toutes les autres questions, visitez

www.lorextechnology.com

Par Téléphone:

L'Amérique du Nord:

Service à la clientèle (pour les questions de garantie):

1-888-425-6739 (1-888-42-LOREX)

Support technique (pour les questions techniques et l'installation):

1-877-755-6739 (1-877-75-LOREX)

Mexico: **001-800-514-6739**

International: **+800-425-6739-0**

(Exemple: À partir du Royaume-Uni, composez 00 au lieu de +)

Welcome!

Thank you for purchasing this Lorex wireless network camera. This user's guide refers to the following models:

- LNC104

Contents

Before you start, make sure you have the contents listed below.

- 1 x Camera
- 1 x Camera power adapter and USB power cable
- 1 x Ethernet cable
- 1 x Mounting kit
- 1 x Quick Start Guide
- 1 x Software/documentation CD

Safety Instructions

- Read this guide carefully and keep it for future reference.
- **Camera is rated for indoor use only.**
- Do not use in wet or humid areas.
- Use the camera within given temperature, humidity, and voltage levels noted in the Technical Specifications.
- Do not use the camera near a heat source, such as a radiator.
- Do not point the camera directly towards the sun or a source of intense light.
- Do not disassemble the camera.
- Periodic cleaning may be required. Use a damp cloth only. Do not use harsh cleaners or aerosol cleaners.
- Do not cover the camera with a towel or blanket.
- Keep all power and network cables out of reach of children.
- Use only the included power adapter or USB power adapters rated for 1A or higher.

Features

- iOS, Android, PC and Mac compatible¹
- Wi-Fi & wired internet connectivity²
- Easy connection to Wi-Fi networks with WPS³
- Night vision up to 30ft with single high-power IR LED⁴
- microSD recording & playback supported⁵
- Dual motion detection: PIR & video
- Sound activated alerts
- Push notification of events & email alerts with snap shot attachment
- Bandwidth-efficient VGA (640x480) resolution
- H.264 video compression
- Supports up to 20 simultaneous users
- Two-way audio supported⁶
- Flexible indoor mounting (counter, wall, ceiling)

As our product is subject to continuous improvement, Lorex Technology & subsidiaries reserve the right to modify product design, specifications & prices without notice and without incurring any obligation.

-
1. Up to 4 simultaneous camera views available on PC, Mac and tablets. Selectable single camera viewing on smartphones.
 2. Connection speed may vary depending internet bandwidth.
 3. Compatible with WPS enabled routers (not included).
 4. Infrared illumination range under ideal conditions. Actual range and clarity may vary depending on scene/object reflection and camera application.
 5. microSD Card not included (supports up to 32GB).
 6. External speaker required, not included.

TABLE OF CONTENTS


1. Camera Overview	1
2. Getting Started	3
2.1 Basic Setup	3
2.2 Connecting to your Camera	5
2.2.1 Connecting to Your Camera using a PC	5
2.2.2 Connecting to your Camera on iPhone	9
2.2.3 Connecting to your Camera on iPad	12
2.2.4 Connecting to your Camera on Android	15
2.3 WiFi Setup	18
2.3.1 PC WiFi Setup	18
2.3.2 iPhone WiFi Setup	20
2.3.3 iPad WiFi Setup	22
2.3.4 Android WiFi Setup	23
3. L-View 104 Software	26
3.1 System Requirements	26
3.2 L-View Interface	27
3.2.1 Display Sub-Menu	29
3.2.2 All Camera Action	30
3.3 Camera List (Managing Cameras)	31
3.3.1 Adding Cameras to Camera List	31
3.3.2 Saving Camera Passwords	32
3.3.3 Deleting Cameras	32
3.3.4 Configuring Mobile Streaming Settings	33
3.3.5 Configuring Night Mode Control	34
3.4 Playing Back Recordings on the microSD card with L-View	36
3.5 Configuring Camera Video Settings	37
3.5.1 Quality Tab (Configuring Resolution, Frame Rate, and Bandwidth)	38
3.5.2 Video Tab (Configure General Video Settings)	39
3.5.3 Control Tab (Configure Status LEDs and Motion Detection Sensitivity)	41
3.5.4 Camera Info Tab	42
3.6 Configuring L-View	42
3.6.1 Directories (Opening or Changing the Snapshot Folder)	43

3.6.2 Startup Options	43
3.6.3 Fixed IP Access	44
3.6.4 Login (Enabling Password to Access L-View)	45
3.6.5 Image Ratio	46
3.6.6 Software Update	47
4. iPhone App	48
4.1 Live Viewing with Lorex Ping for iPhone	48
4.1.1 Using 2-Way-Audio (Intercom)	49
4.1.2 Taking Snapshots	49
4.1.3 Recording Video to iPhone	49
4.2 Playing Back Video Recorded on iPhone	50
4.2.1 Using Playback	50
4.3 Playing Back Video Recorded on microSD on iPhone	50
4.4 Using Camera List to Edit Camera Settings	51
4.4.1 Editing Camera Connection Settings	52
4.4.2 Deleting Cameras from Camera List	53
4.4.3 Editing Alarm Notification Settings (Push Notifications)	54
4.4.4 Editing Camera Mobile Streaming Settings	55
4.4.5 Editing Camera Video Settings	56
4.4.6 Configuring LED Control and Motion Detection Sensitivity	57
4.4.7 Configuring Night Mode Settings	58
4.4.8 Editing Camera Wired Network Settings	60
4.4.9 Editing Camera WiFi Network Settings	61
4.4.10 Enabling Email Notifications	62
4.4.11 Enabling Speaker Alarms	63
4.4.12 Configuring microSD Recording	64
4.4.13 Configuring the Camera Recording and Alarm Schedule	66
4.4.14 Configuring the Camera Date and Time	68
4.4.15 Rebooting the Camera	69
4.5 Using Local Search to Add Cameras	69
5. iPad App	71
5.1 Live Viewing with Lorex Ping iPad	71
5.1.1 Using 2-Way Audio (Intercom)	72
5.1.2 Taking Snapshots	72
5.1.3 Recording Video to Ipad	72
5.2 Playing Back Video Recorded to iPad	72
5.3 Playing Back Video Recorded to microSD on iPad	73

5.4 Using Camera List to Edit Camera Settings	74
5.4.1 Editing Camera Connection Settings	75
5.4.2 Deleting Cameras from Camera List	76
5.4.3 Editing Alarm Notifications Settings (Push Notifications)	76
5.4.4 Editing Camera Mobile Streaming Settings	78
5.4.5 Editing Camera Video Settings	79
5.4.6 Configuring LED Control and Motion Detection Sensitivity	80
5.4.7 Configuring Night Mode Settings	81
5.4.8 Editing Camera Wired Network Settings	82
5.4.9 Editing Camera WiFi Network Settings	83
5.4.10 Enabling Email Notifications	84
5.4.11 Enabling Speaker Alarms	86
5.4.12 Configuring MicroSD Recording	87
5.4.13 Configuring the Camera Recording and Alarm Schedule	88
5.4.14 Configuring the Camera Date and Time	90
5.4.15 Rebooting the Camera	91
5.5 Using Local Search to Add Cameras	92
6. Android App	93
6.1 Live Viewing with Lorex Ping for Android	93
6.1.1 Using 2-way Audio (Intercom)	94
6.1.2 Saving Snapshots	94
6.2 Playing Back Video Recorded on microSD on Android	94
6.3 Using Camera List to Edit Camera Settings	96
6.3.1 Editing Camera Connection Settings	97
6.3.2 Deleting Cameras from Camera List	97
6.3.3 Editing Camera Mobile Streaming Settings	97
6.3.4 Editing Camera Video Settings	98
6.3.5 Configuring LED Control and Motion Detection Sensitivity	100
6.3.6 Configuring Night Mode Settings	101
6.3.7 Enabling Push Alarm Notifications	102
6.3.8 Editing Camera Wired Network Settings	103
6.3.9 Editing Camera WiFi Network Settings	104
6.3.10 Enabling Email Notifications	105
6.3.11 Enabling Speaker Alarms	107
6.3.12 Enabling microSD Recording	108
6.3.13 Configuring the Recording and Alarm Schedule	109
6.3.14 Configuring the Camera Date and Time	111

6.3.15 Rebooting the Camera	112
6.4 Using Local Search to Add Cameras	113
7. Configuring Camera Settings using a Web Browser	114
7.1 Web Configure Overview	115
7.2 Network	115
7.2.1 Wired Network (DHCP or Fixed IP)	115
7.2.2 WiFi Security (Configuring Wifi settings)	116
7.3 Video	117
7.3.1 Display	117
7.3.2 Video Settings	118
7.3.3 Mobile Video	120
7.3.4 Night Mode	121
7.4 Schedule	123
7.4.1 Email/FTP Alarm Settings (Configuring Email Alarms)	123
7.4.2 Speaker Alarm (Configuring Audio Alarms)	124
7.4.3 SD Card (Configuring microSD Recording)	125
7.4.4 Scheduling (Configuring Recording and Alarm Schedules)	126
7.5 Admin	128
7.5.1 Admin Login	128
7.5.2 Led Control	130
7.5.3 Date/Time	131
7.5.4 Upgrade	131
7.5.5 Reboot	133
8. Technical Specifications	134
9. Cleaning and Disposal	135
10. Notices	136
11. Wall or Ceiling Mounting	137
11.1 Installation Tips and Warnings	137
11.2 Installation	137
12. Troubleshooting	139



1. CAMERA OVERVIEW

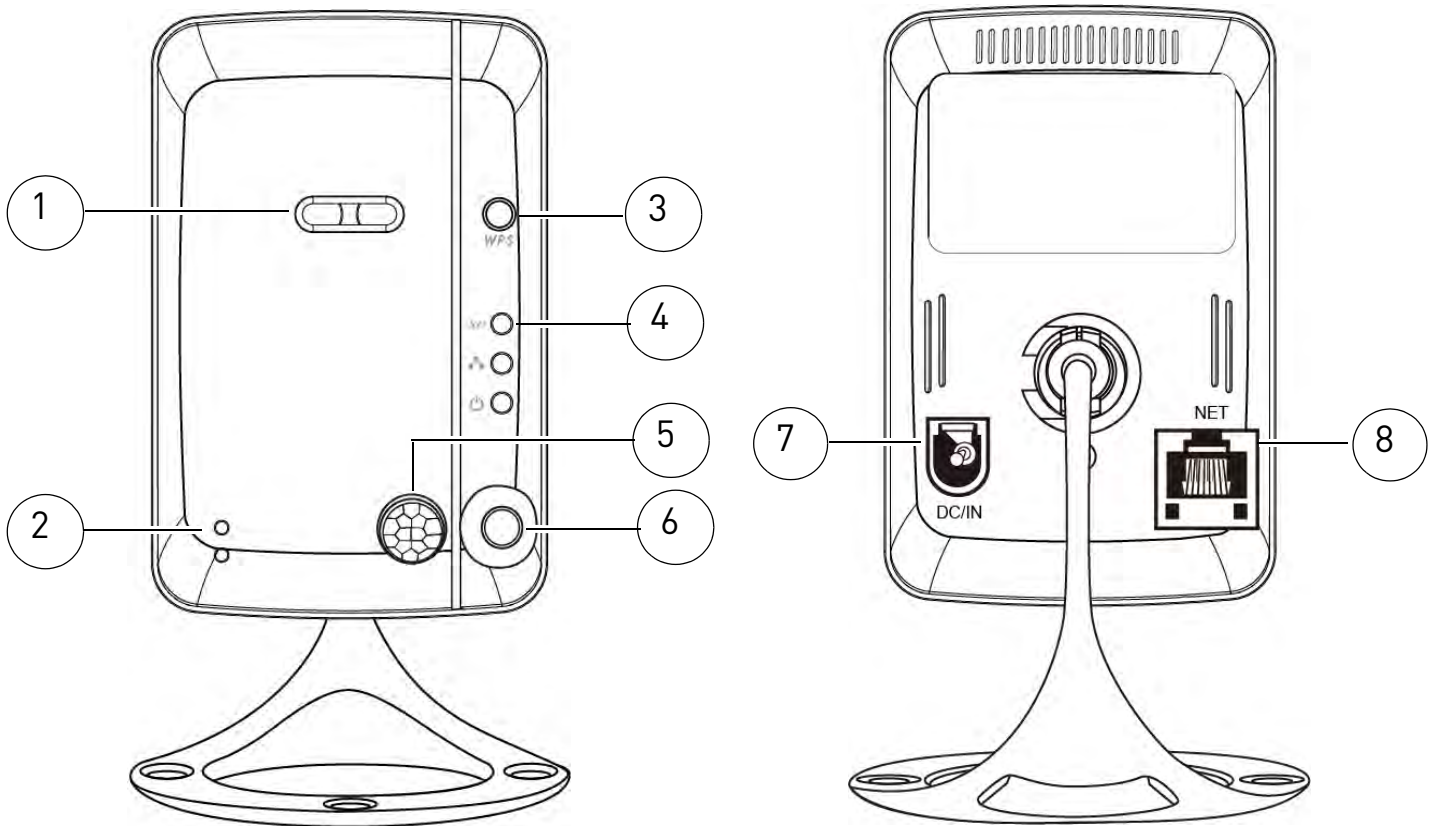

English

1. **Camera Lens:** The camera has separate lenses for day/night use.
2. **Microphone**
3. **WPS Button:** Used to connect the camera to a wireless router (not included) with a WPS button.
4. **Indicator Lights:**
 - **SD:** Glows when a microSD card (not included) is inserted. Flashes during recording.
 - **Network:** Glows when connected to an ethernet or WiFi network. Flashes when sending or receiving data.
 - **Status:** Glows when camera is connected to the Internet. Flashes when there is a connection problem.
5. **PIR Motion Sensor:** Allows the camera to detect motion by tracking body heat.
6. **Infrared LED:** Allows the camera to see in the dark.
7. **DC/IN:** Connect the included power adapter.

8. **NET:** Connect an Ethernet cable and connect the other end to your router (not included).

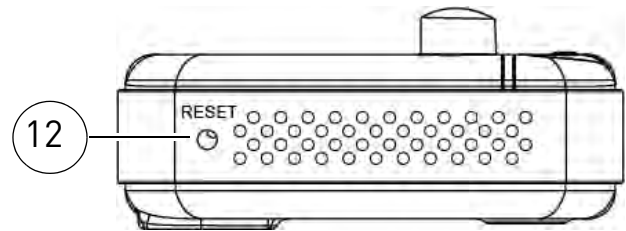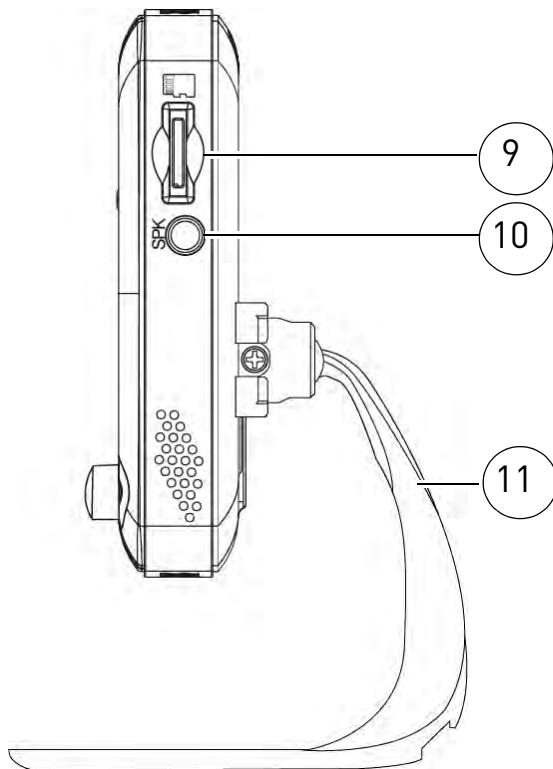


Bottom of camera

9. **MicroSD Card Slot:** Insert a microSD card (not included) to enable recording on the camera. Camera supports microSD cards up to a maximum size of 32GB.
10. **Audio Out:** Connect to an external speaker (not included) using a 3.5mm headphone jack to enable 2-way audio and alarms.
11. **Mounting Stand:** For mounting instructions, see “Wall or Ceiling Mounting” on page 137.
12. **Reset Button:** While the camera is powered on, press with a pin or small object for at least 4 seconds to reset the camera to factory defaults. This is useful if you have forgotten the password for the camera.


2. GETTING STARTED

2.1 BASIC SETUP


1. Connect the power adapter cable to the power adapter using the USB connector.

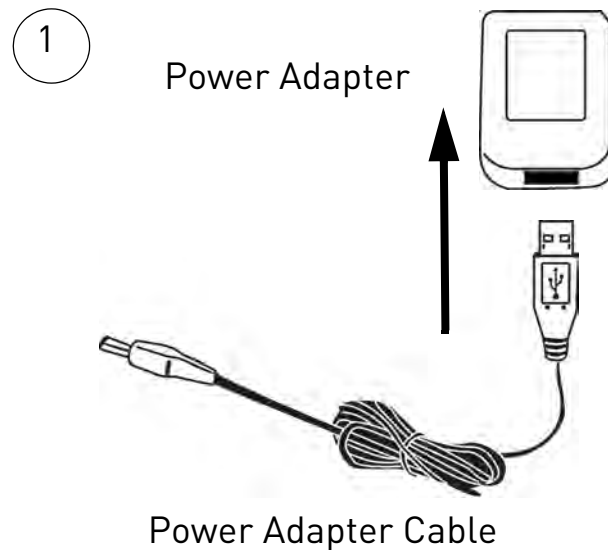

2. Connect the power adapter to a surge protector or power outlet. Connect the power adapter cable to the **DC/IN** port on the camera. The camera LEDs will begin flashing.

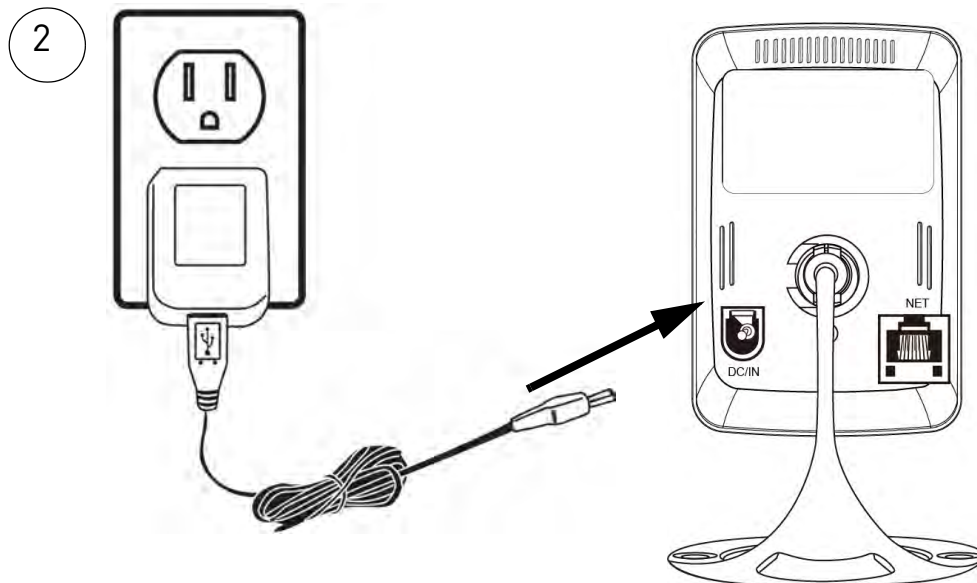


3. **A:** Connect an Ethernet cable (included) to the **NET** port on the camera and connect the other end to an available LAN port (usually numbered 1~4) on your router (not included). The blue Network LED on the camera will glow blue when the camera is connected to your network.

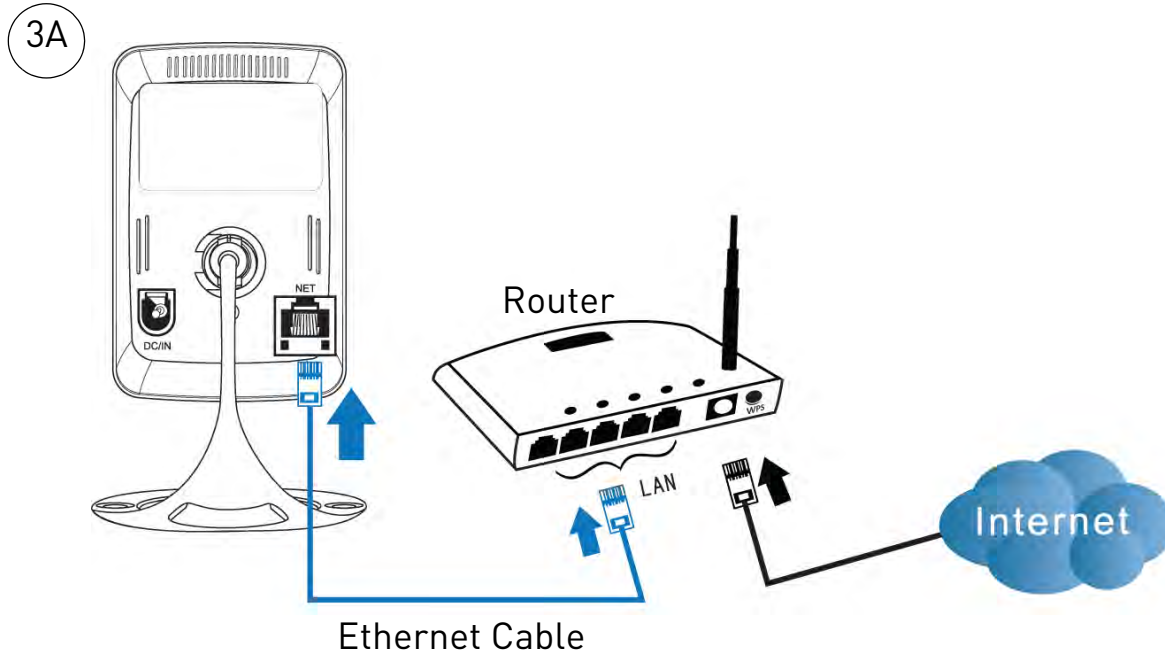

• **OR:**

B: If your router supports WPS, press and hold the **WPS** button on your router until the WPS light turns on. Then, press the **WPS** button on the camera within 1 minute. The camera will automatically connect to your WiFi network and the blue Network LED on the camera will turn on.

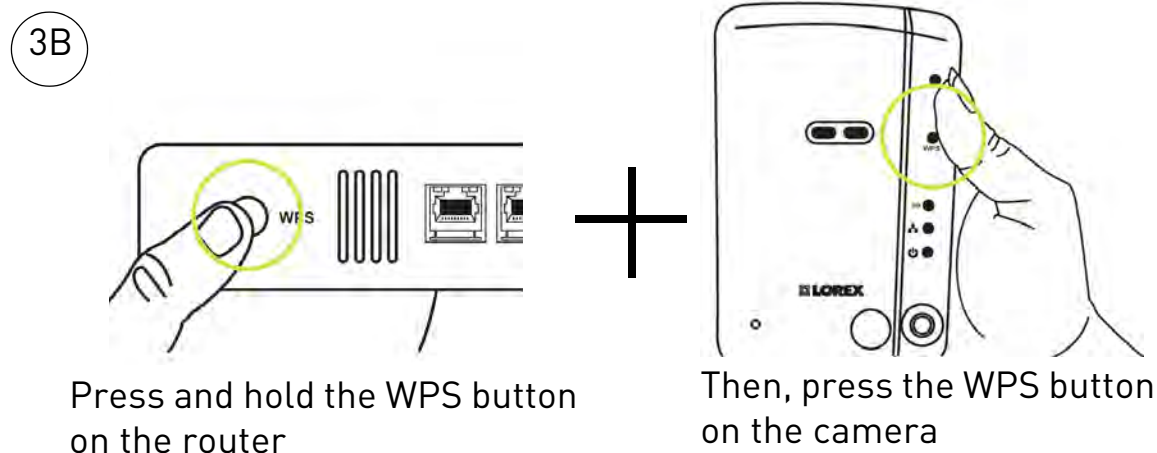

NOTE: Not all routers support WPS, and the location of the WPS button on your router depends on your router model. Check your router's instruction manual for details, or see "WiFi Setup" on page 18 for instructions on manually setting your camera up for WiFi.

2.2 CONNECTING TO YOUR CAMERA

Once your camera is connected to your wired or wireless network, you can connect to your camera using your PC, Mac, iPhone, iPad, or Android phone or tablet.

NOTE: For Mac software and instructions, please visit www.lorextechnology.com.


2.2.1 CONNECTING TO YOUR CAMERA USING A PC

To connect to your cameras using a PC, you must install the L-View software provided on the CD or as a free download at www.lorextechnology.com. The steps to connect to cameras depends on if you are connecting to a camera on a local network (i.e. your computer is connected to the same router as the camera) or over the Internet.

NOTE: For PC system requirements, see “System Requirements” on page 26.

To install L-View:


1. Insert the CD into your computer. The Autorun screen will appear. Click **Run Lorex.exe**.

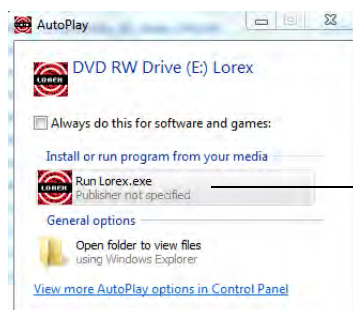

Run Lorex.exe

2. Click **Software**, then **L-View for PC** to begin the installation. Follow the on-screen instructions to install the software.


To connect to your camera on a local network:




1. Double-click the L-View icon to run L-View. L-View opens and scans the local network for connected cameras. Connected cameras are shown under Auto Search.

Getting Started

2. Double-click the camera under Auto Search or click and drag the camera to a desired screen on the display grid to connect to the camera.

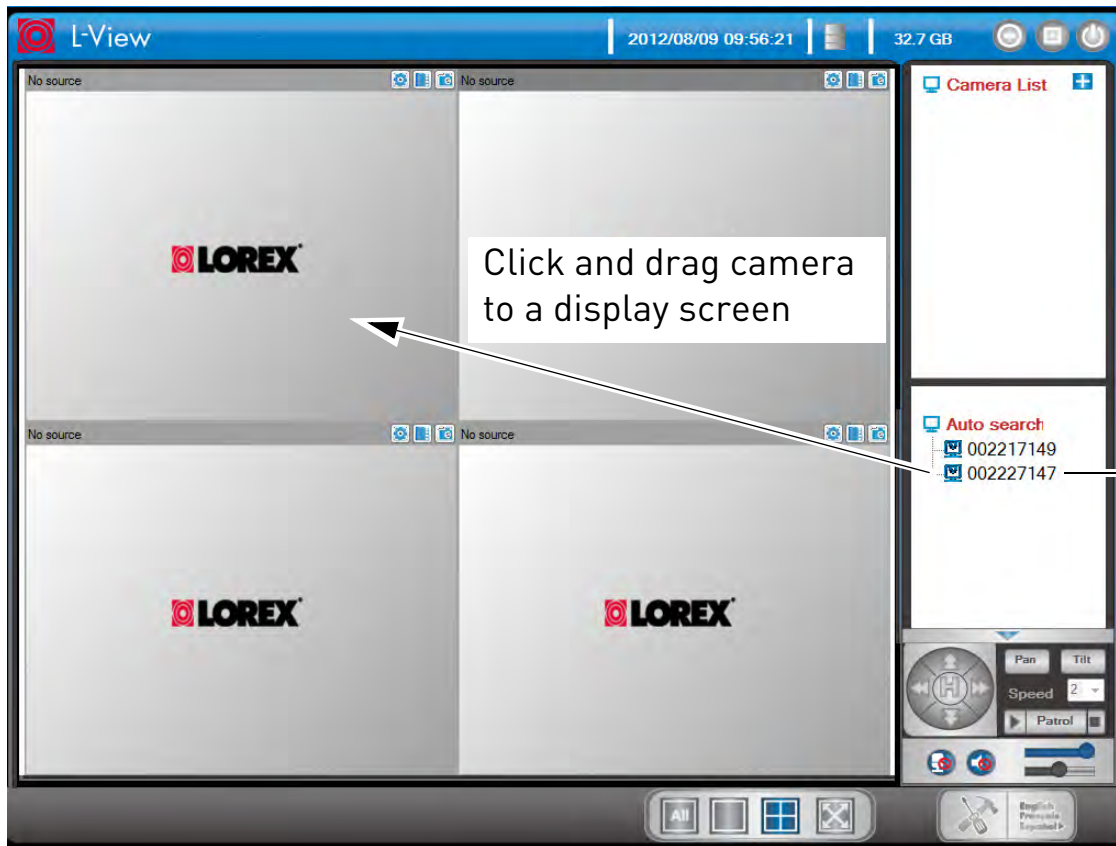


3. Enter the camera password. If this is the first time connecting to the camera, the password is **lorex**. Click **OK**.
4. If you have connected to this camera before, L-View connects to the camera. If this is the first time connecting to the camera, L-View will prompt you to create your own password for the camera. Click **OK**.

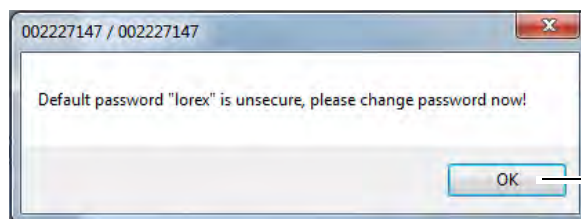


Click OK

- Under **New Password**, enter a password that will be used for the camera. Under **Confirm Password**, enter the password again. Click **OK**.

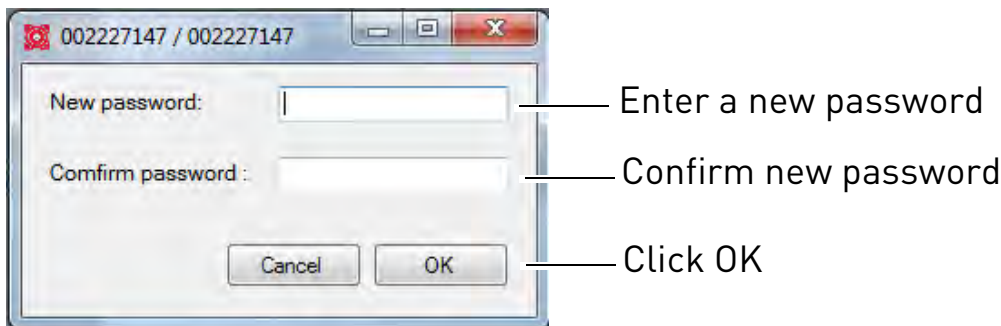


- Double-click the camera again under Auto Search to connect. Enter the new password for the camera then click **OK** to connect. L-View connects to the camera. If you would like to save the camera password in L-View, see “Saving Camera Passwords” on page 32.

Connecting to a Camera Over the Internet




- Double-click the L-View icon to run L-View.
- Click **+** next to Camera List.

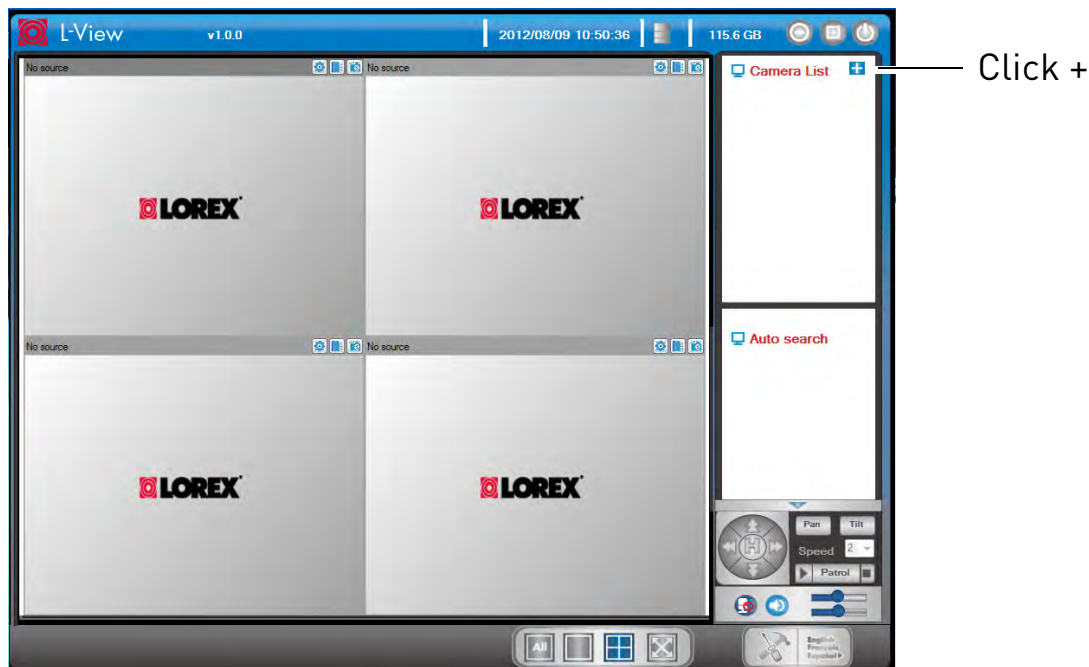


- Under **Name**, enter a camera name of your choice.
- Under **CamID**, enter the Cam ID number printed on the camera.


5. Under **Password**, enter the camera password. If this is the first time connecting to the camera, the password is **lorex**. Click **OK**.

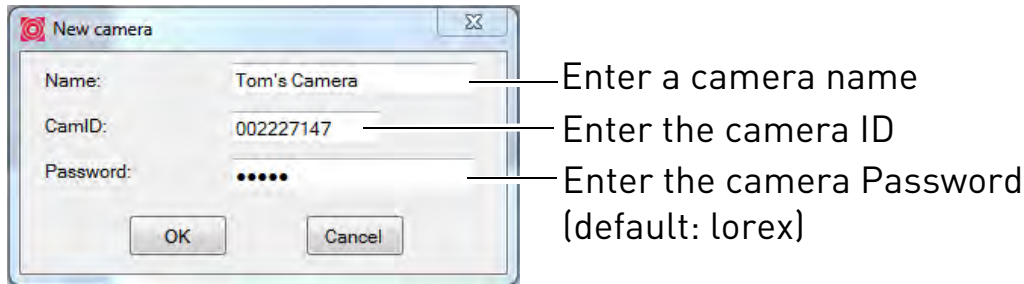

6. Double-click the camera or drag the camera to a display screen to connect to the camera.
7. If you have connected to this camera before, L-View connects to the camera. If this is the first time connecting to the camera, L-View will prompt you to create your own password for the camera. Click **OK**.

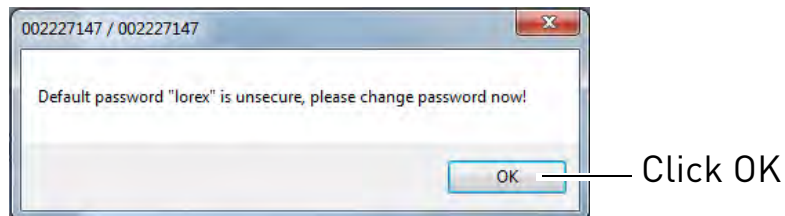

8. Under **New Password**, enter a password that will be used for the camera. Under **Confirm Password**, enter the password again. Click **OK**.

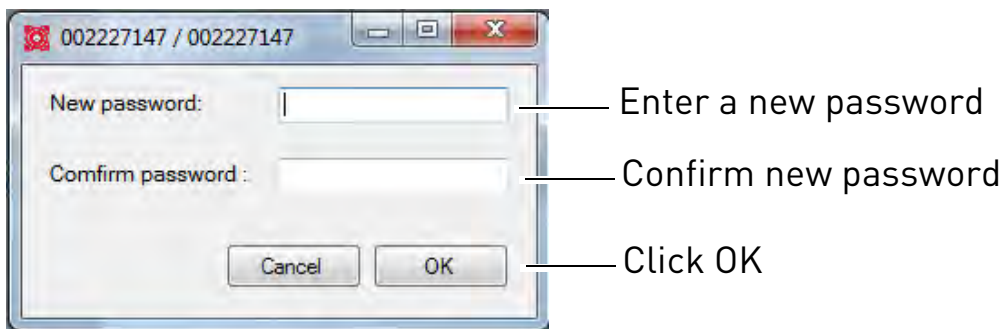

9. Double-click the camera again under Camera List to connect. For detailed instructions on using L-View, see "L-View 104 Software" on page 26.

2.2.2 CONNECTING TO YOUR CAMERA ON IPHONE

The app for iPhone is called **Lorex Ping iPhone**.


To connect to your camera using an iPhone:

1. Download **Lorex Ping iPhone** from the App Store.


NOTE: Lorex Ping is a free application, but it requires a valid iTunes account to download. Lorex Ping requires iOS v4.0 and higher.

2. Tap the Lorex Ping icon () from the home screen to open Lorex Ping. Lorex Ping opens to the Camera List.
3. Tap **+** to add a camera.

Tap +

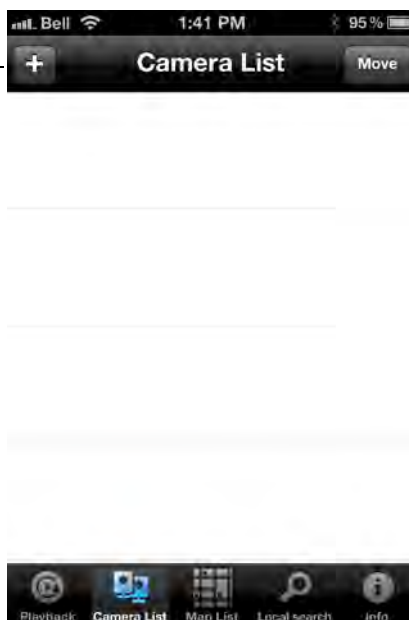

4. Under **Name**, enter a name for your camera. This can be anything of your choice.

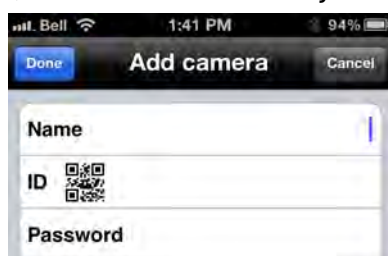

Enter a name for your camera of your choice

5. Under **ID**, press the QR code button () and line up the QR code printed on the back of the camera using the camera on the phone. The CamID will automatically be entered.



Press to scan the QR code printed on the back of the camera, OR manually enter the CamID printed on the camera



Line up the QR code to the middle using the phone camera


- **OR:** Manually enter the **CamID** printed on the camera.

6. Under **Password**, enter the camera password. If this is the first time connecting to the camera, enter **lorex**. Press **Done**.



Enter the camera password. The default password is lorex.

7. Tap the name of the camera in the Camera List to connect to the camera. Lorex Ping connects to the camera.

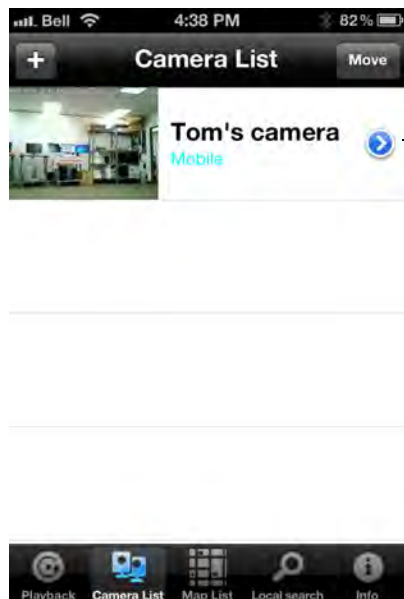

Tap the name of the camera to connect

8. If this is the first time connecting to the camera, you will be prompted to create your own password. Tap **OK**.



Tap OK

9. Under New password, enter a new password for the camera and repeat the password under Confirm password. Tap **OK**.



Enter a new password, confirm your password, and then tap OK

10. Tap the name of the camera in Camera List again to connect to the camera. For details on using the iPhone app, see "iPhone App" on page 48.

2.2.3 CONNECTING TO YOUR CAMERA ON IPAD

The app for iPad is called **Lorex Ping iPad**.


To connect to your camera using iPad:

1. Download the **Lorex Ping iPad** app from the App Store.

NOTE: Lorex Ping is a free application, but it requires a valid iTunes account to download. Lorex Ping requires iOS v4.0 and higher.

2. Tap the Lorex Ping icon () from the home screen to open Lorex Ping. Lorex Ping opens to the Camera List.
3. Tap **+** to add a camera.

Tap +

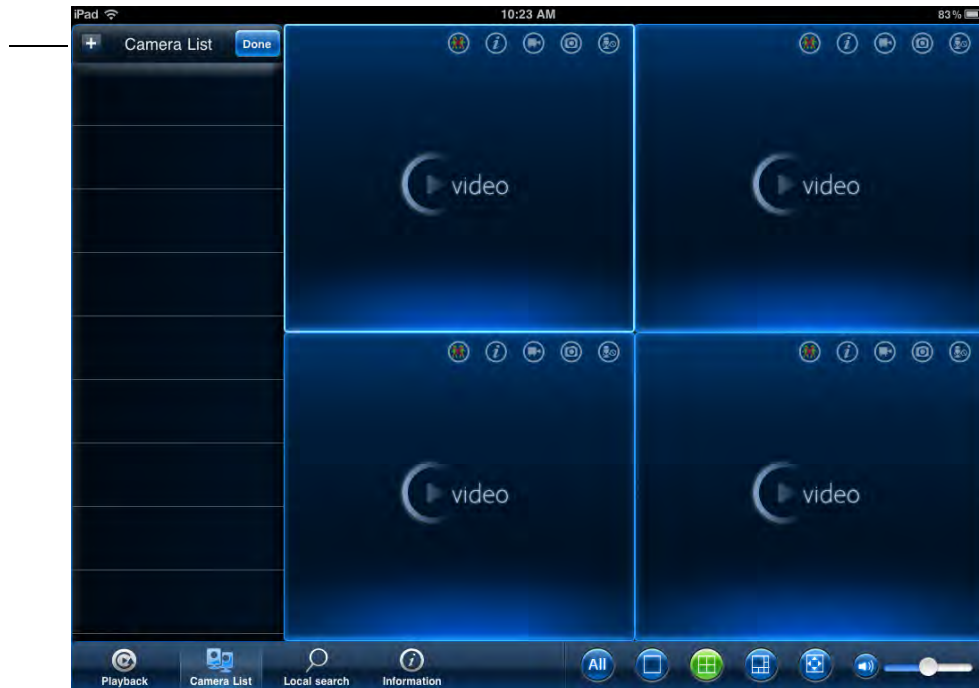

4. Under **Name**, enter a name for your camera. This can be anything of your choice.

Enter a name for your camera of your choice

5. Under **ID**, press the QR code button () and line up the QR code printed on the back of the camera using the camera on the iPad. The CamID will automatically be entered.

Press to scan the QR code printed on the back of the camera, OR manually enter the CamID printed on the camera




Line up the QR code to the middle using the iPad camera

- **OR:** Manually enter the **CamID** printed on the camera.

NOTE: QR code setup is not compatible with 1st generation iPads. If you have a 1st generation iPad, manually enter the CamID printed on the camera into ID.

- Under **Password**, enter the camera password. If this is the first time connecting to the camera, enter **lorex**. Press **Done**.

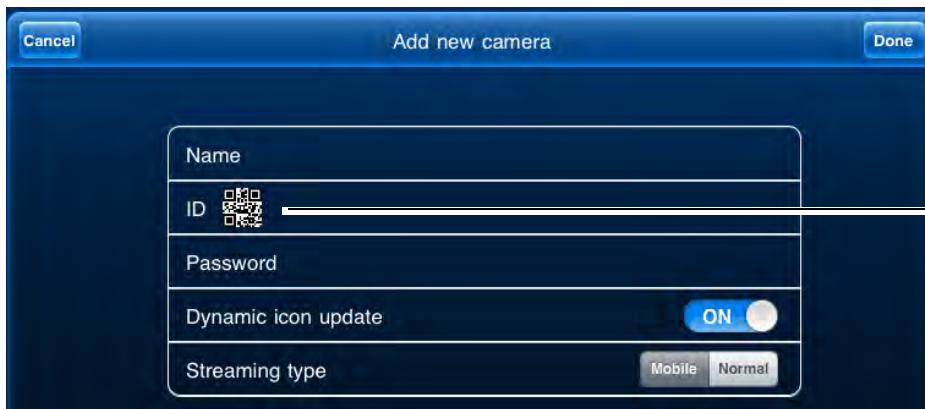

Enter the camera password. The default password is lorex.

- Tap the name of the camera in the Camera List to connect to the camera. Lorex Ping connects to the camera.

Tap the name of the camera to connect




- If this is the first time connecting to the camera, you will be prompted to create your own password. Tap **OK**.



Tap OK

- Under **New password**, enter a new password for the camera and repeat the password under **Confirm password**. Tap **Done**..

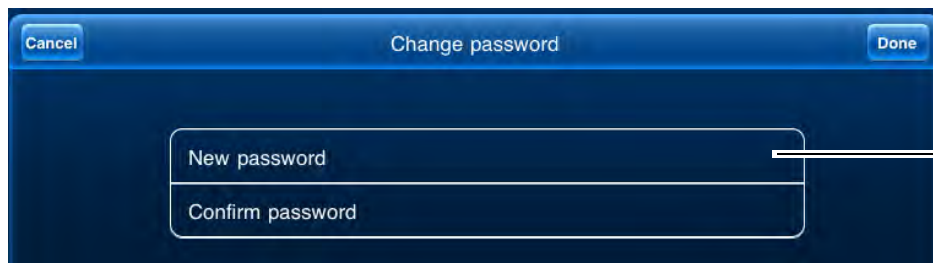

Enter a new password, confirm your password, and then tap Done then Cancel

- Tap the name of the camera in Camera List again to connect to the camera. For details on using the iPad app, see “iPad App” on page 71.

2.2.4 CONNECTING TO YOUR CAMERA ON ANDROID

The app for Android is called **Lorex Ping**.


To connect to your camera using Android:

- Download the **Lorex Ping** app from the Google Play store.


NOTE: Lorex Ping requires Android v.2.3 or higher.

- Tap the Lorex Ping icon () from the home screen or app list to open Lorex Ping. Lorex Ping opens to the Camera List.
- Tap **+** to add a camera.


Tap +

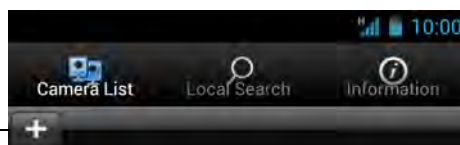

- Under **Camera Name**, enter a name for your camera. This can be anything of your choice.

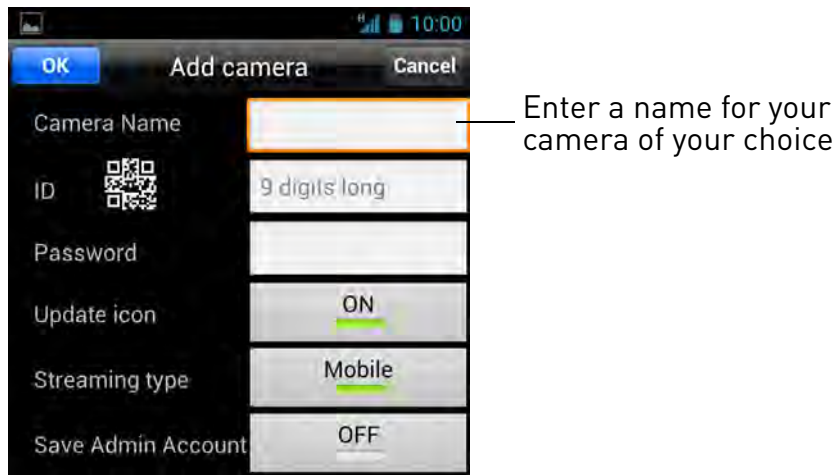


- Under **ID**, press the QR code button () and line up the QR code printed on the back of the camera using the camera on the Android phone or tablet. The CamID will automatically be entered.

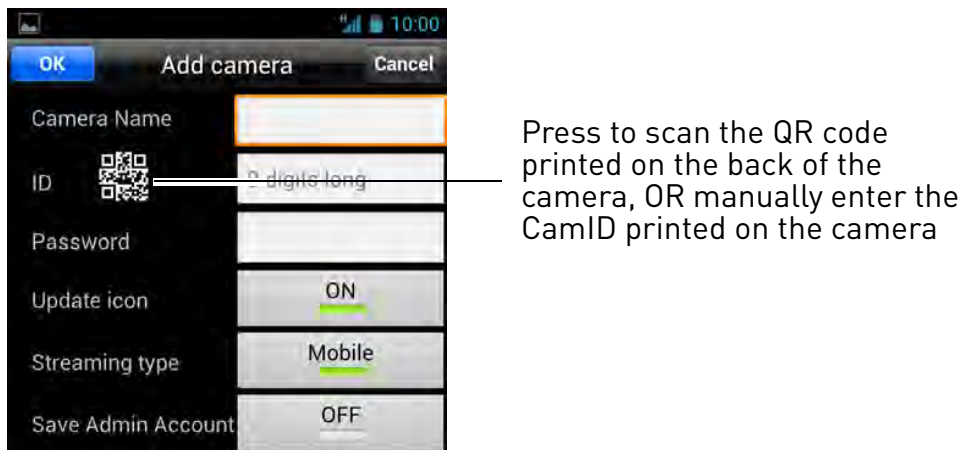

Line up the QR code to the middle using the camera on the phone or tablet


- **OR:** Manually enter the CamID printed on the camera.

6. Under **Password**, enter the camera password. If this is the first time connecting to the camera, enter **lorex**. Press **OK**.

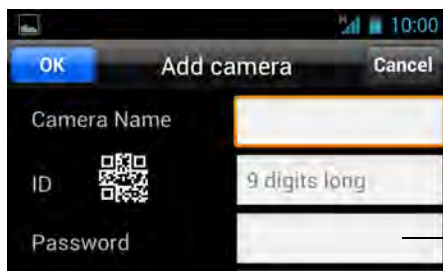

Enter the camera password. The default password is lorex.

7. Tap the name of the camera in the Camera List to connect to the camera. Lorex Ping connects to the camera.

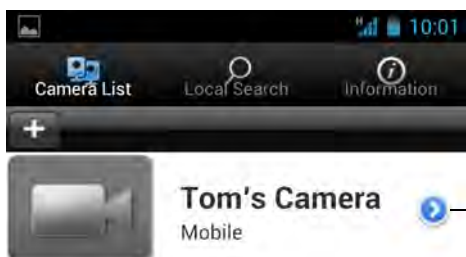


Tap the name of the camera to connect

8. If this is the first time connecting to the camera, you will be prompted to create your own password. Tap **OK**.



Tap OK

9. Under **New password**, enter a new password for the camera and repeat the password under **Confirm password**. Tap **OK**.

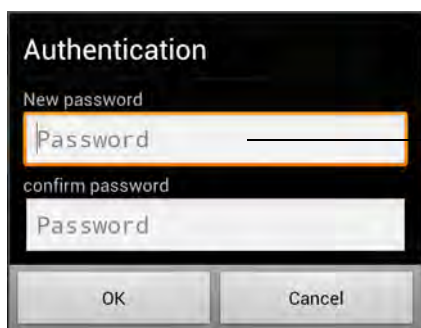

Enter a new password, confirm your password, and then tap OK

10. Tap the name of the camera in Camera List again to connect to the camera. For details on using the Android app, see "Android App" on page 93.


2.3 WIFI SETUP

You can setup the camera to use WiFi using your PC, iPhone, iPad, or Android phone or tablet. You can also quickly connect the camera to a WiFi network using WPS (WPS compatible router required; see step 3B on page 4 for instructions).

2.3.1 PC WIFI SETUP

NOTE: The camera must be connected to your router using an Ethernet cable before you can set it up to use WiFi.

1. Install L-View on a PC in your local network (must be connected to the same router as the camera) and connect to the camera. For details, see “Connecting to Your Camera using a PC” on page 5.
2. Right-click on the camera ID in the Auto Search area and click **Web Configure**.

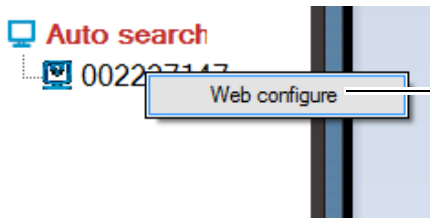

Right-click the camera under Auto Search and click Web Configure

3. Enter the camera admin user name and password. By default, the admin user name is **admin** and the admin password field is **left blank**. Click **Log in**. The Web Configure interface opens in your default web browser.

NOTE: Your camera admin user name and password differs from the password used to connect to your camera to view video.

4. Click on **Network** and then **WiFi Security**.

5. Click **WiFi Scan** and select your WiFi network from the list.

WiFi Security Settings

☐ Enable WiFi function ☒ Disable WiFi function

SSID

Security mode ☐ None ☐ WEP ☒ WPA(2)-PSK(WPA personal)

WEP Encryption

WEP Key

WPA Encryption

WPA-PSK Key

ESSID

[OpenWrt](#)

Properties

802.11b/g/n 54Mbps WPA

Click your WiFi network from the list

6. Under **WPA-PSK Key** or **WEP Key**, enter the WiFi password. Click **Save and Apply**.

WiFi Security Settings

☒ Enable WiFi function ☐ Disable WiFi function

SSID

Security mode ☐ None ☐ WEP ☒ WPA(2)-PSK(WPA personal)

WEP Encryption

WEP Key

WPA Encryption

WPA-PSK Key

Enter WiFi Password

Save & Apply

- Click **WiFi Security** again and click **WiFi Test** (this may take up to 60 seconds).

The screenshot shows the 'WiFi Security Settings' interface. At the top, there are two radio buttons: 'Enable WiFi function' (selected) and 'Disable WiFi function'. Below this are several input fields: 'SSID' (belkin.5f4), 'Security mode' (WPA(2)-PSK(WPA personal) selected), 'WEP Encryption' (64 bits(10 hex digits)), 'WEP Key' (1234567890), 'WPA Encryption' (TKIP), and 'WPA-PSK Key' (empty). At the bottom, there are four buttons: 'Save & Apply', 'IP address', 'WiFi test', and 'WiFi Scan'. An arrow points from the 'WiFi test' button to the 'WiFi testing status' section below. This section contains a 'Status' field with the text 'test success !' and a message 'If testing failed, please check the settings.' with an 'OK' button.


- When successful, **Status** will say **Test Success**. If unsuccessful, double check your wireless password and make sure your camera is close enough to the wireless router to get a good signal.
- Remove the Ethernet cable from the camera wait 60 seconds and then reconnect to your camera in L-View.

2.3.2 IPHONE WIFI SETUP

NOTE: The camera must be connected to your router using an Ethernet cable before you can set it up to use WiFi.

- Connect to your camera using Lorex Ping iPhone. For details, see “Connecting to your Camera on iPad” on page 12. **Your iPhone must be connected to your WiFi, not your 3G/mobile network.**
- Tap  to open the edit camera screen.

3. Tap **Camera Settings**. Enter the camera's admin username and password. By default, the admin username is **admin** and the password is **left blank**. Tap **OK**.

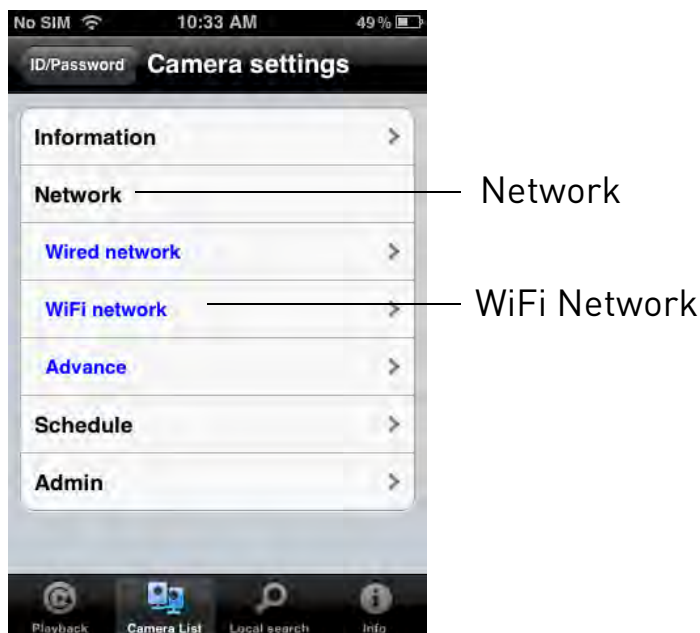

4. Tap **Network** then **WiFi Network**.
5. Slide Wi-Fi to **ON**. The camera scans for available networks in range.
6. Tap the name of your WiFi network, enter the password, and tap **OK**.




7. Wait for the update to complete.
8. Remove the Ethernet cable from the camera. It will connect to the wireless network. When it is connected, the blue Network LED will be on or flashing.
9. Press **Camera Settings**, **ID/Password**, and then **Back** to exit the edit camera screen.

10. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.

2.3.3 IPAD WIFI SETUP

NOTE: The camera must be connected to your router using an Ethernet cable before you can set it up to use WiFi.

1. Connect to your camera using Lorex Ping iPad. For details, see “Connecting to your Camera on iPad” on page 12. **Your iPad must be connected to your WiFi, not your 3G/mobile network.**
2. Press  to open the edit camera screen.
3. Tap **Camera Settings**. Enter the camera’s admin username and password. By default, the admin username is **admin** and the password is **left blank**. Tap **OK**.
4. Tap **Network** then **WiFi Network**.

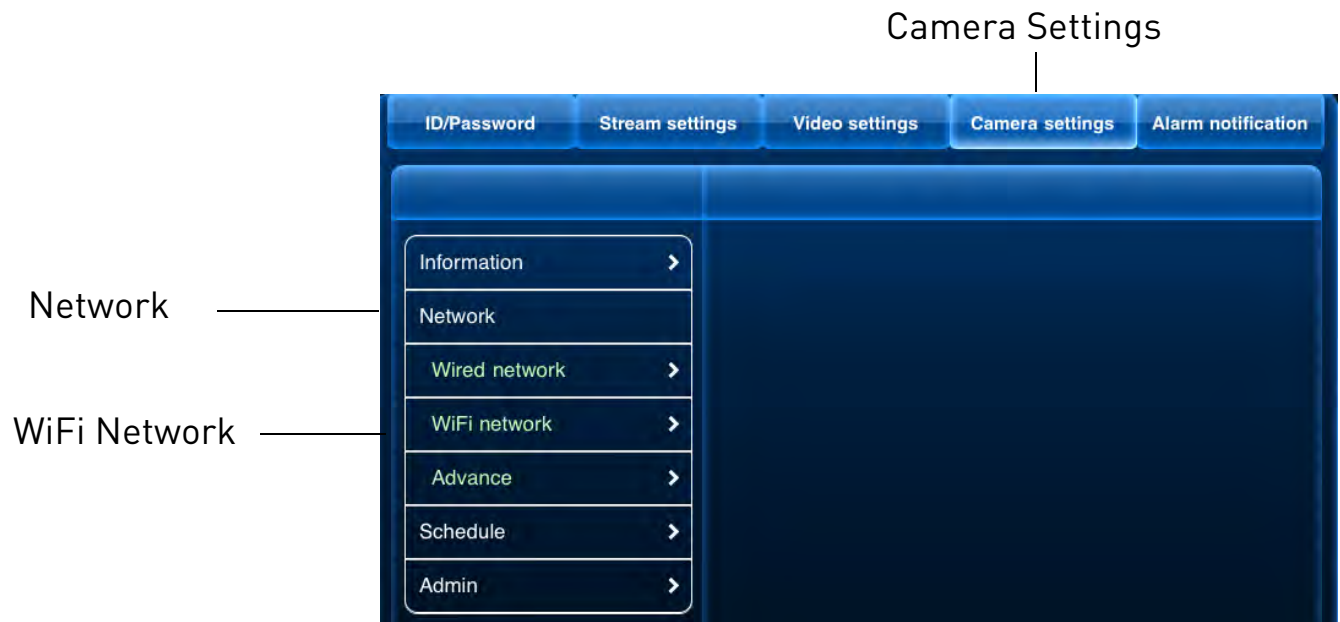

5. Slide **Wi-Fi** to **ON**. The camera will scan for available networks.

6. Tap the name of your WiFi network, enter the password, and tap **OK**. Wait for the update to complete.



Slide Wi-Fi to ON

Tap your WiFi network


7. Remove the Ethernet cable from the camera. It will connect to the wireless network. When it is connected, the blue Network LED will be on or flashing.
8. Press  next to the camera name to exit the edit camera screen.
9. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.

2.3.4 ANDROID WIFI SETUP

NOTE: The camera must be connected to your router using an Ethernet cable before you can set it up to use WiFi.

1. Connect to your camera using Lorex Ping. For details, see “Connecting to your Camera on Android” on page 15. **Your phone or tablet must be connected to your WiFi, not your 3G/mobile network.**
2. Tap  to open the edit camera screen.

3. Tap **Camera Settings**. Enter the admin user name and password. By default, the admin user name is **admin** and the password is **left blank**. Tap **OK**.

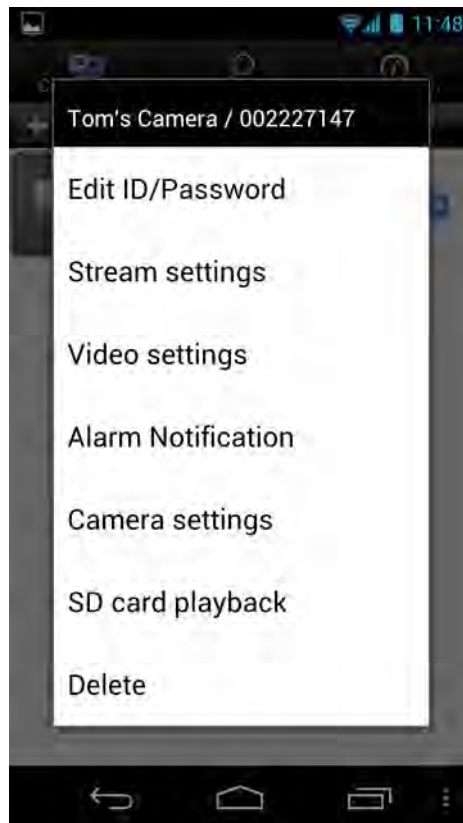

4. Tap **Network** then **WiFi Network**.
5. Check the **WiFi** checkbox. The camera will scan for available networks.



Check WiFi

Tap the name of your WiFi network

6. Tap the name of your WiFi network, enter the password, then tap **OK**. Wait for the update to complete.

7. Remove the Ethernet cable from the camera. It will connect to the WiFi network. When it is connected, the blue Network LED will be on or flashing.
8. Press **Camera Settings** then **Camera List** to exit the edit camera screen.
9. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.

3. L-VIEW 104 SOFTWARE

L-View is a PC/Mac client software that supports up to 4 cameras. L-View is provided on the CD or available as a free download from www.lorextechnology.com.

For instructions on installing and connecting to your camera using L-View, see “Connecting to Your Camera using a PC” on page 5.

3.1 SYSTEM REQUIREMENTS

Description	Minimum System Requirements
CPU	2.0 GHz (dual-core recommended)
Memory	2GB
Operating System	Windows: Windows XP SP 2 and higher Windows 7 Basic, Home Premium, Ultimate Mac: OS X 10.6.8 Snow Leopard (Intel Processors only)
Hard Drive	Minimum 5~10 GB free for recordings and snapshots

NOTE: For Mac software and instructions, please visit www.lorextechnology.com.

3.2 L-VIEW INTERFACE



English

1. **Display:** Shows live or recorded video from your camera(s).
 - Click to select a camera and scroll up/down to zoom in/out. When the camera is zoomed in, click and drag the camera image to pan the camera.
 - Double-click to open the display area in full-screen. Double-click again to exit full-screen.
 - Right-click to open the display sub-menu. See “Display Sub-Menu” on page 29.
2. **Image/Recording Controls:**
 -  **Video Settings:** Click to edit the camera’s video settings. See “Configuring Camera Video Settings” on page 37.


-  **microSD:** Click to open a list of recordings saved on the camera's microSD card (not included). See "Playing Back Recordings on the microSD card with L-View" on page 36.
 -  **Snapshot:** Click to save a still image screenshot of the camera. To access Snapshots, see "Directories (Opening or Changing the Snapshot Folder)" on page 43. Snapshots are saved in .png format.
3. **Time and Date:** Show the current time and date on the computer. Note that the camera time and date may differ. For instructions on setting the time and date on the camera, see "Date/Time" on page 131.
 4. **Minimize/Restore**
 5. **Maximize/Revert to Window**
 6. **Exit**
 7. **Camera List:** Shows list of saved cameras. Available cameras are in blue. Cameras in red are not available. If a camera appears in red, check the network connection. For more details, see "Camera List (Managing Cameras)" on page 31.
- NOTE:** Cameras may appear in red before you have connected to them the first time.
8. **Auto Search:** Auto Search shows cameras located on your local network (LAN).
 - Double-click the camera name or click and drag the camera to the display area to view the camera.
 - Drag the camera to the Camera List to save the camera.
 - Right-click and select Web Configure to configure the camera settings using a browser. See "Configuring Camera Settings using a Web Browser" on page 114.
 9. **Pan/Tilt/Zoom Controls:** Controls for compatible PTZ cameras (not included).
 10. **Volume Controls:**
 - Click  to activate 2-way-audio (intercom) feature and click again to deactivate 2-way-audio. Camera speaker required (not included). Note that turning on 2-way-audio will mute audio from the camera.
 - Click  to mute audio from the camera. Click again to unmute audio from the camera.
 - Use the top volume slider to control the volume for the camera speaker (not included) when the 2-way-audio is activated.
 - Use the bottom volume slider to control the volume of audio coming from the camera.

11.L-View Controls:

-  **L-View Settings:** Click to open settings for L-View. See “Configuring L-View” on page 42.
-  **Language Selector:** Click to select the language for L-View.
- 12.  **All Camera Action:** Click to perform an action on all cameras.
- 13.  **Split-Screen Selectors:** Click  to select single camera view or  to select 4-camera view.
- 14.  **Full Screen:** Click to open the camera display area in full-screen. Press **ESC** to exit full-screen.

3.2.1 DISPLAY SUB-MENU

The Display sub-menu opens when you right-click on a camera's display area. It contains additional camera controls.

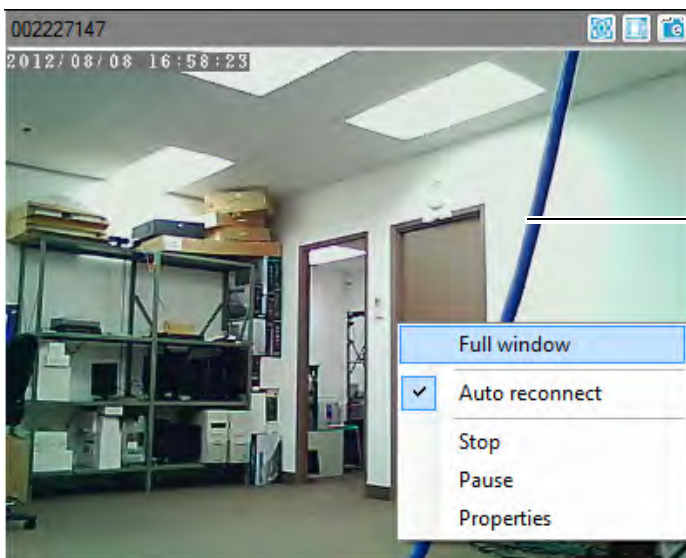


Right-click on a camera in the display area to open the Display sub-menu

The Display sub-menu contains the following controls:

- **Full window:** Open the camera in single camera view.


- **Auto reconnect:** L-View will attempt to reconnect to the camera if it becomes disconnected.
- **Stop:** Disconnect from the camera.
- **Pause:** Pause the video. Click again to un-pause the video.
- **Properties:** Click to view video properties.

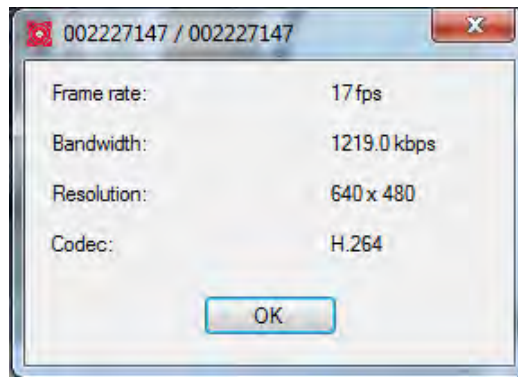

Video Properties

3.2.2 ALL CAMERA ACTION

Press  to open the All Camera Action menu.

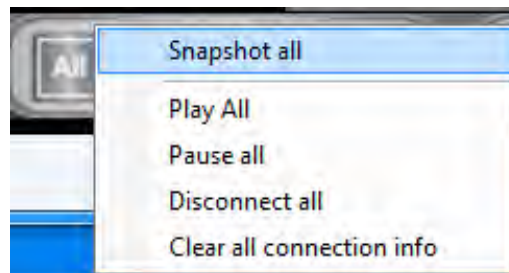

The All Camera Action Menu contains the following controls:

- **Snapshot all:** Take a snapshot from all connected cameras.
- **Play all:** Connect to all cameras selected in display grid.
- **Pause all:** Pause video for all connected cameras. Click **Pause all** again to resume video.
- **Disconnect all:** Disconnect from all connected cameras.
- **Clear all connection info:** Remove all cameras from the display grid.

3.3 CAMERA LIST (MANAGING CAMERAS)


The Camera List is used to save connection information for your cameras, so you don't have to re-enter the ID or password to connect. The Camera List also allows you to configure certain camera settings.

Cameras connected to the Internet or local network are shown in blue in the camera list. Cameras not connected are shown in red. If your camera is red, check the network connection.

NOTE: Cameras may appear in red before you have connected to them the first time.


3.3.1 ADDING CAMERAS TO CAMERA LIST

- If the camera is on the local network, click and drag a camera from the Auto Search list to Camera List to add it.

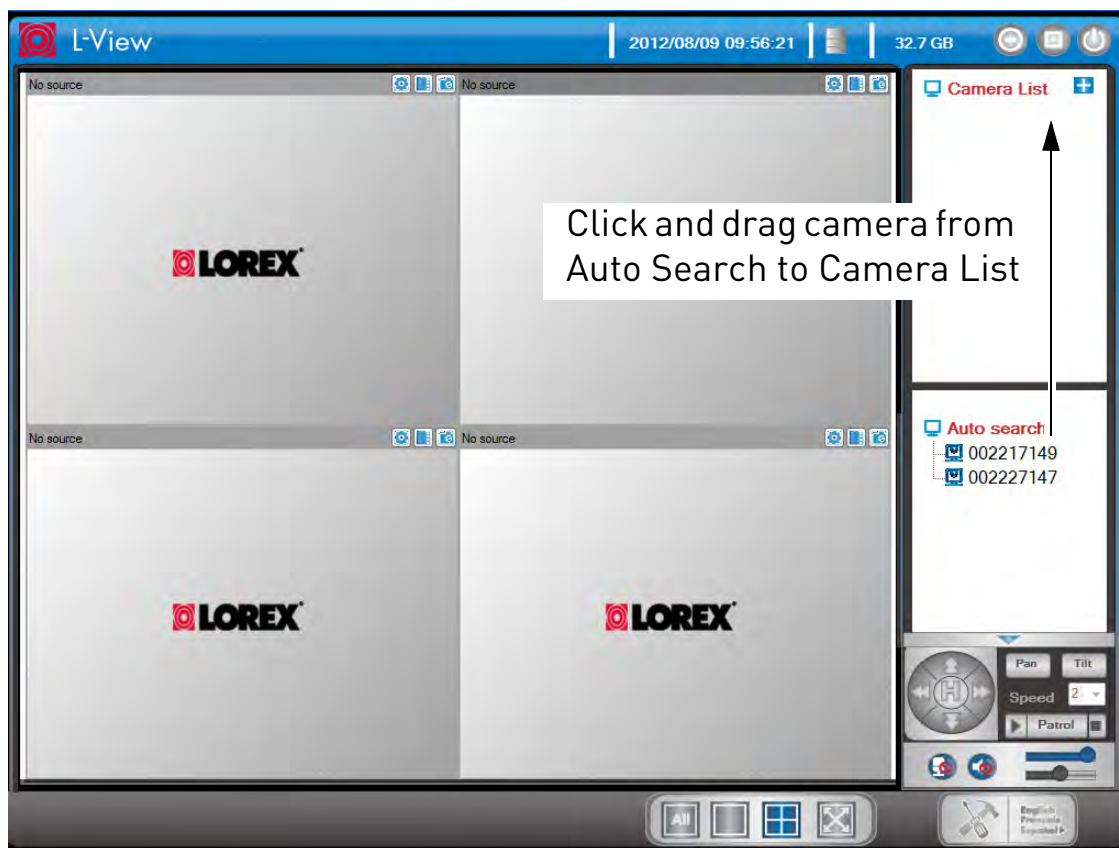

- If the camera is not on the local network (i.e. you are connecting over the Internet), see “Connecting to a Camera Over the Internet” on page 7 to add the camera to the Camera List.

- Right-click on your camera to open the Camera List sub-menu. See below for instructions.

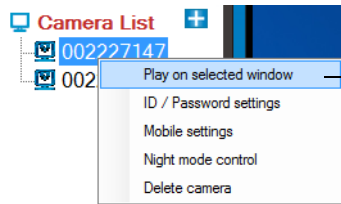


Right-click to open the Camera List sub-menu

3.3.2 SAVING CAMERA PASSWORDS

You can use the Camera List sub-menu to save the camera's password in L-View, so you don't have to enter the password to connect to the camera.

To save the camera password:

1. Right-click on the camera in Camera List and click **ID/Password settings**.
2. Under **Name**, enter a name for the camera that will appear in Camera List. This can be anything of your choice.
3. Under **Password**, enter the camera password to save the password in L-View.

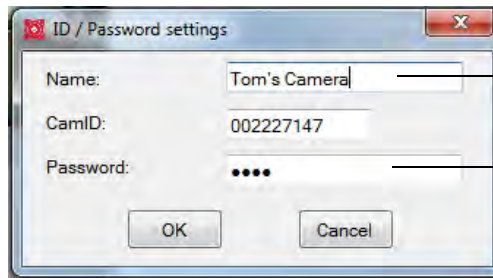


Enter a name for your camera

Enter the password to save it in L-View

4. Click **OK**.

3.3.3 DELETING CAMERAS

1. Right-click on the camera in Camera List and click **Delete Camera**

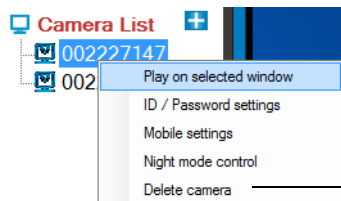


Right-click on the camera and click Delete Camera

2. Click **Delete** to confirm.

3.3.4 CONFIGURING MOBILE STREAMING SETTINGS

Configure streaming settings when connecting using a smartphone or tablet to connect.

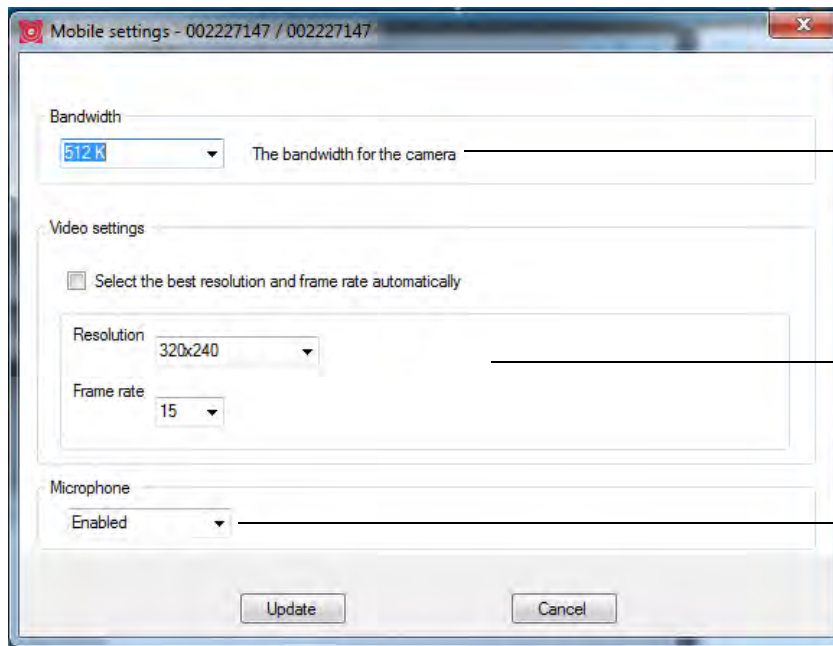

Select Bandwidth

Select Resolution and Frame Rate for mobile streaming

Enable or disable audio streaming to mobile device


English

To configure mobile streaming settings:

1. Right-click on the camera you want to configure and click **Mobile settings**.
2. Under **Bandwidth**, select your available mobile bandwidth. If you are primarily connecting using WiFi, you may set this setting higher.
3. Check **Select resolution and frame rate automatically** to have the camera automatically select the resolution and frame rate based on available bandwidth. If you leave this unchecked, configure the following:
 - Under **Resolution**, select the resolution that will be used when connecting to the camera using a smart phone or tablet: **640x480** (VGA), **320x240** (QVGA), or **160x120** (QQVGA).
 - Under **Frame rate**, select the frame rate that will be used when connecting to the camera using a smart phone or tablet between **30fps** (highest) and **1fps** (lowest).
4. Under **Microphone**, select **Enable** to enable audio streaming to smart phones and tablets or **Disable** to disable audio streaming to smart phones and tablets.
5. Click **Update** to apply changes to your camera. Enter the admin username (default: **admin**) and password (default: **left blank**) for the camera and click **OK**.
6. The camera will disconnect when the setting is changed. Double-click the camera in Camera List to reconnect.

3.3.5 CONFIGURING NIGHT MODE CONTROL


Configure when the camera uses day or night mode. When day mode is on, the camera sees in color. When night mode is on, the camera sees in black and white, and the Infrared LED turns on to enable night vision.

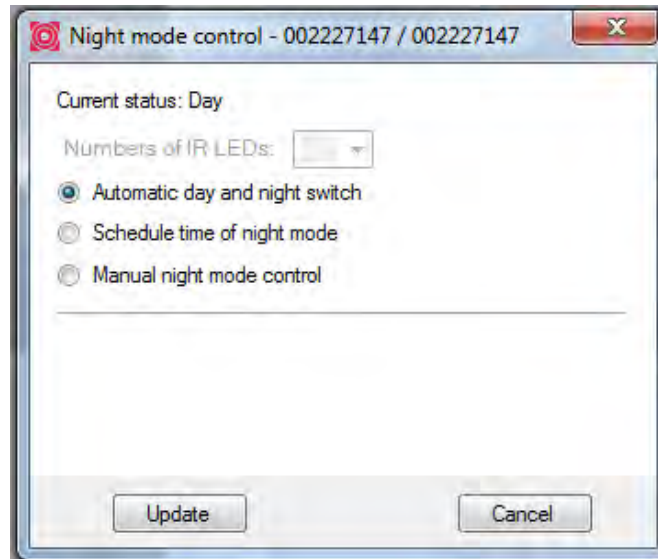

To configure night mode settings:

1. Right-click on the camera you want to configure and select **Night mode control**.
2. Select one of the following:
 - **Automatic day and night mode switch:** Camera will automatically switch between day mode or night mode, based on the amount of light in the room.
 - **Scheduled time of night mode:** Camera will switch between day mode and night mode at a scheduled times each day. If using this option, use the first set of drop-down menus to select (in 24-hour time) what time the camera will switch to night mode


and the second set of drop-down menus to select when the camera will return to day mode.

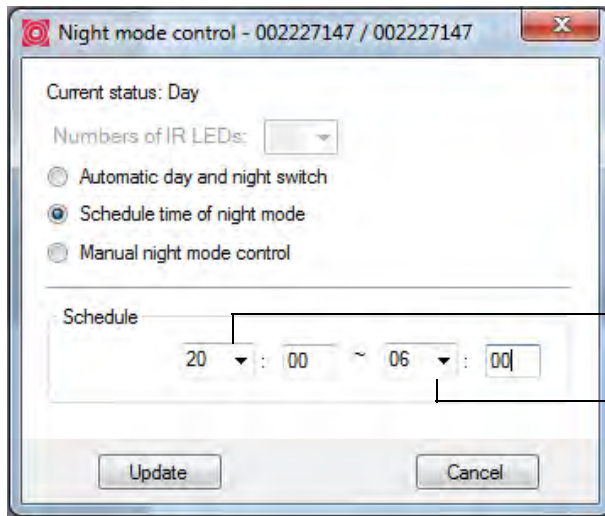

Start of night mode
(8:00 PM)

Return to day
mode
(6:00 AM)

- **Manual night mode control:** Manually select day mode or night mode. If using this option, under Mode, select **Day** for day mode or **Night** for night mode.

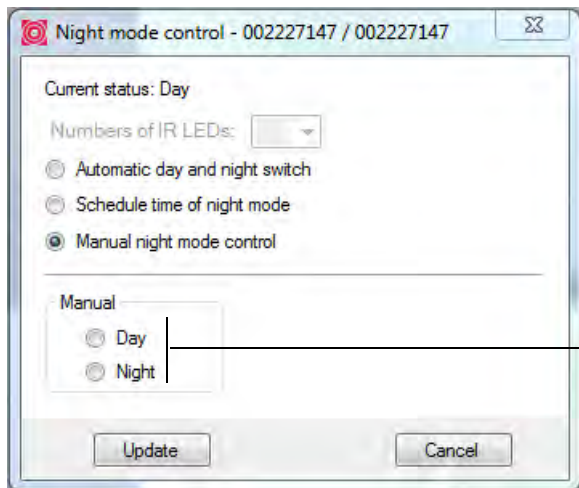

Select day or night mode

3. Click **Update** to apply changes to your camera. Enter the admin username (default: **admin**) and password (default: **left blank**) for the camera and click **OK**.
4. The camera will disconnect when the setting is changed. Double-click the camera in Camera List to reconnect.


3.4 PLAYING BACK RECORDINGS ON THE MICROSD CARD WITH L-VIEW

You can use L-View to playback recorded video on the camera's microSD card (required; not included). For instructions on setting up recording on the microSD card, see "SD Card (Configuring microSD Recording)" on page 125.

To playback recorded video on the microSD card:


1. Connect to the camera you would like to playback recordings from.
2. Click the **microSD button** () on top of the camera display area. Enter the camera password if required.
3. A list is created of all days with recordings available in the format *yyyymmdd* (for example, *20120730* is *July 30, 2012*).

Click + to view recordings from a day

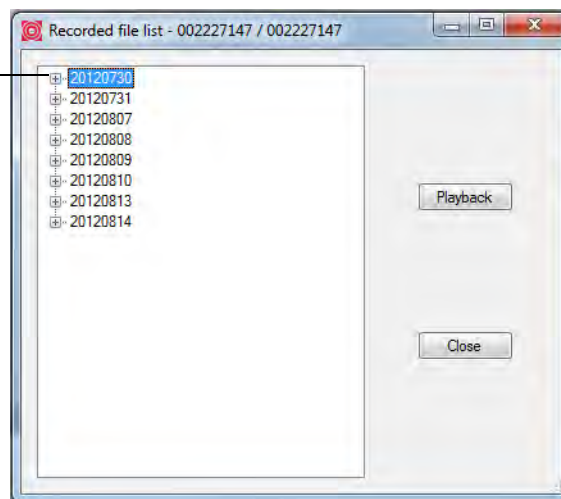

4. Click the + next to a day to view recordings from that day. Recordings from that day are shown from earliest to latest. Recordings are named according to the time they were recorded with the format *hhmmss* (for example, *115553* is *11:55:53 AM*).

5. Click a recording from the list and then click **Playback** to view it.

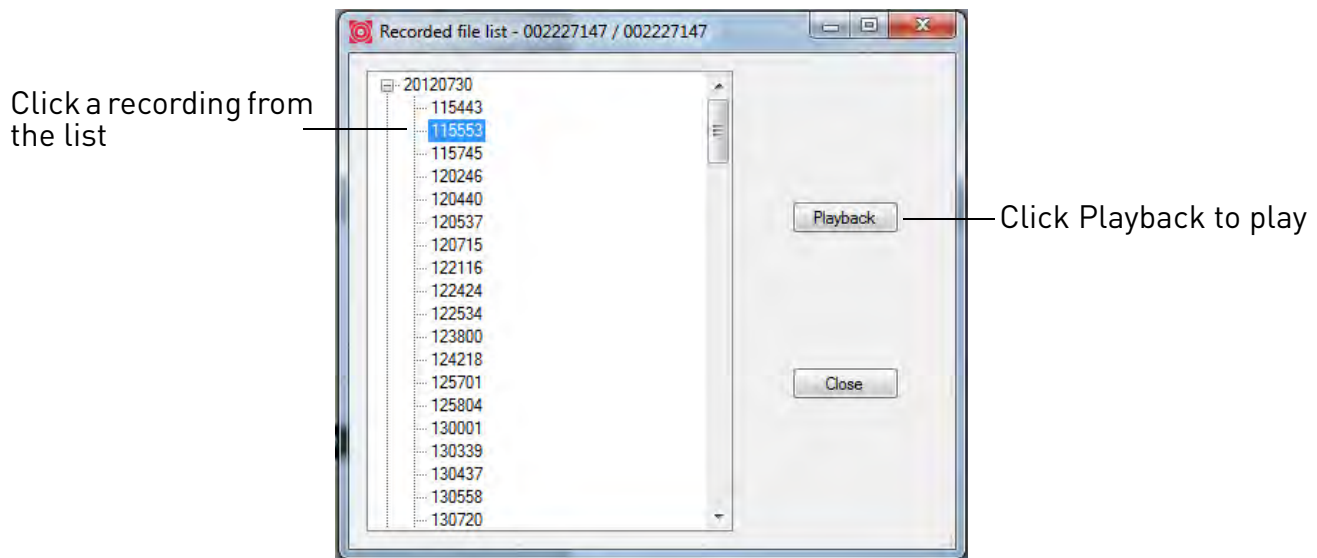

6. The recording plays back in the camera display area.

- To return to a live view of your camera, wait for the recording to finish, then right-click and select **Play**.
- **OR**, while the recording is still playing, right-click in the display area and select **Stop** then right-click again and select **Play**.

3.5 CONFIGURING CAMERA VIDEO SETTINGS

The Video Settings menu allows you to adjust the quality of the camera video.


To open the Video Settings menu:

- Click  on the top of the display area for the camera you would like to configure.

NOTE: The camera will disconnect after making changes to video settings. Wait about 15 seconds after clicking Update and double-click the camera in Camera List or Auto Search to reconnect to the camera.

TIP: Change only one camera image quality setting at a time before clicking **Update** so you can judge the effects.

3.5.1 QUALITY TAB (CONFIGURING RESOLUTION, FRAME RATE, AND BANDWIDTH)

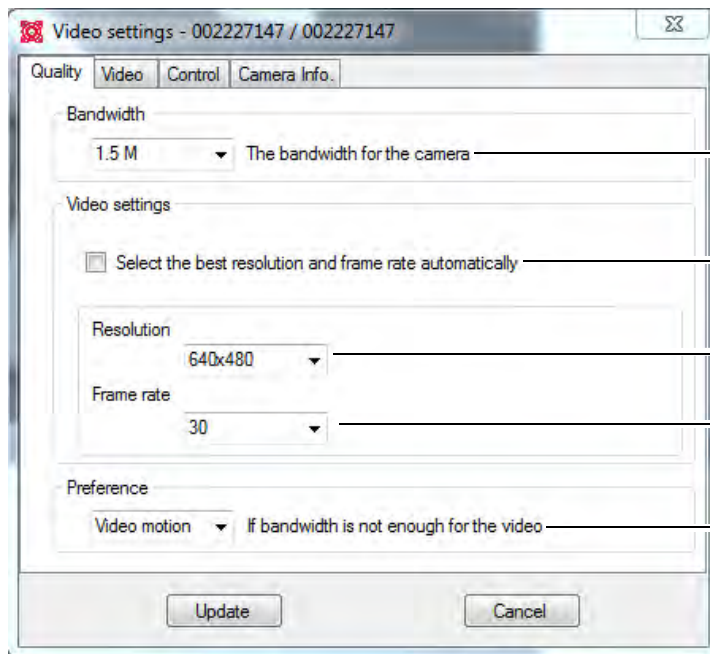

Select Internet connection speed

Check to automatically adjust resolution and frame rate based on bandwidth

Select Resolution

Select Frame Rate

Select how image quality will be affected when bandwidth is low

The Quality tab allows you to configure image quality settings such as the camera resolution, frame rate, and bandwidth settings.


To configure image quality settings:

1. Under **Bandwidth**, select the speed of your Internet connection. If your Internet connection is faster than 1.5Mbps, select 1.5Mbps.
2. Check **Select the best resolution and frame rate automatically** to have the camera automatically adjust the resolution and frame rate based on bandwidth. Or, uncheck it to manually configure the resolution and frame rate. If you are manually configuring the resolution and frame rate, configure the following:
 - **Resolution:** Manually select either **VGA** (640x480) or **QVGA** (320x240) resolution. VGA resolution will give you a better, more detailed picture, but requires more bandwidth. QVGA allows the camera to maintain a higher frame rate when available bandwidth is low.
 - **Frame rate:** Manually select the frame rate between **30fps** (highest) and **1fps** (lowest). 30fps is real time video, meaning that movement in the image will appear smooth, with no choppiness.
3. Under **Preference**, select your quality preference when bandwidth increases or decreases:

- Select **Video Motion** to have the camera maintain the frame rate and reduce image quality when bandwidth is insufficient.
 - Select **Image Quality** to have the camera maintain image quality and reduce frame rate when bandwidth is insufficient.
 - Select **Better Quality** to have the camera maintain frame rate and increase quality when bandwidth is sufficient.
 - Select **Best Quality** to have the camera maintain the frame rate and increase quality to the maximum speed of the connection.
4. Click **Update** to save changes. Enter the camera admin user name (default: **admin**) and password (default: **left blank**) and click **OK**. The camera will disconnect. Wait about 15 seconds and then double-click the camera in Camera List or Auto Search to reconnect to the camera.

3.5.2 VIDEO TAB (CONFIGURE GENERAL VIDEO SETTINGS)

The Video tab allows you to configure general video settings, such as color and brightness settings.

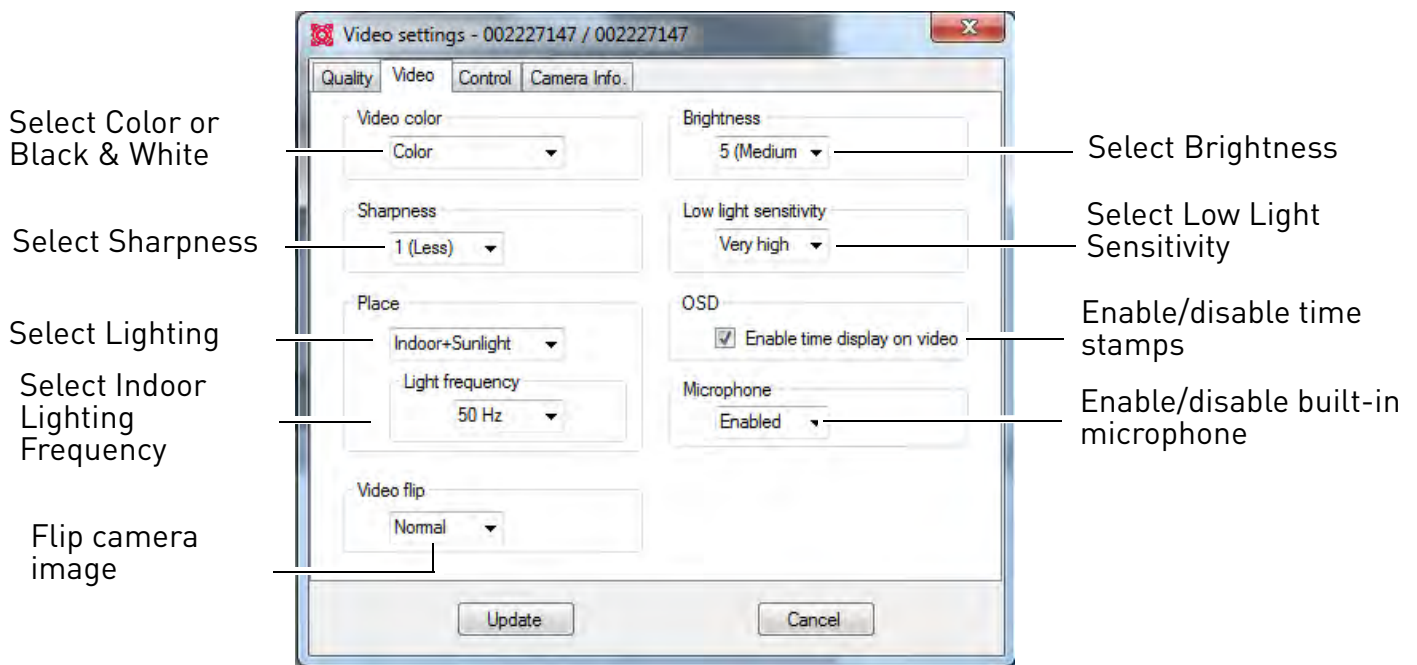


To configure general video settings:

1. Under **Video Color**, select **Color** or **Black & White**.
2. Under **Sharpness**, select the sharpness of the image between **10** (highest) and **1** (lowest).

3. Under **Place**, select **Outdoor video** if the area with the camera is brightly lit. Select **Indoor Video** if you notice strip lines in the image or if the picture is too dark on the Outdoor video setting. Select **Indoor video + Sunlight** if the picture is too bright on the Indoor Video setting.
 - If you select Indoor Video or Indoor Video + Sunlight, select **60Hz** or **50Hz** to adjust the camera for the frequency of your indoor lighting.
4. Under **Video Flip**, select **Video Flip** to flip the camera image vertically and horizontally or select **Normal** for normal orientation.
5. Under **Brightness**, select the brightness of the image between **10** (highest) and **1** (lowest).
6. Under **Low Light Sensitivity**, set the camera's sensitivity in low light environments between **Very High** (highest), **High**, and **Normal** (lowest).
7. Check **Enable time display on video** to turn on video time stamps or uncheck it to disable video time stamps.
8. Under **Microphone**, select **Enabled** to enable the built-in microphone on the camera or select **Disabled** to disable the built-in microphone on the camera.
9. Click **Update** to save changes. Enter the camera admin user name (default: **admin**) and password (default: **left blank**) and click **OK**. The camera will disconnect. Wait about 15 seconds and then double-click the camera in Camera List or Auto Search to reconnect to the camera.

3.5.3 CONTROL TAB (CONFIGURE STATUS LEDS AND MOTION DETECTION SENSITIVITY)

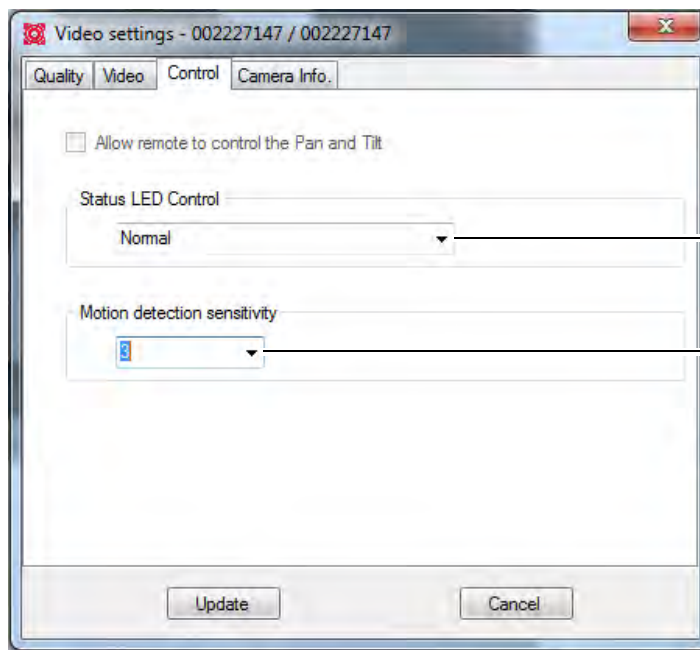

Configure status and network LEDs

Configure motion detection sensitivity from 1 (High) to 10 (Low)

English

The Control tab allows you to configure the camera status and network LEDs to make the camera harder to spot at night. It also allows you to configure the motion detection sensitivity when using video motion detection.

NOTE: These settings do not affect the SD LED. Removing the microSD card will turn off the SD LED, but it will also disable microSD recording.

To configure the camera status LEDs:

1. Select one of the following:
 - **Normal:** Status and network LED's will function as normal. For details on LED functions, see "Camera Overview" on page 1.
 - **Always turn off:** Status and network LED's are turned off at all times.
 - **Turn off after connected:** Status and network LED's turn on when the camera is powered on and turn off once a network connection is made.
2. Click **Update** to save changes. Enter the camera admin user name (default: **admin**) and password (default: **left blank**) and click **OK**. The camera will disconnect. Wait about 15 seconds and then double-click the camera in Camera List or Auto Search to reconnect to the camera.


To configure motion detection sensitivity:

NOTE: The following method works when using video motion detection. It does not work when using PIR motion detection. For details on enabling motion detection and selecting video motion detection or PIR, see “Schedule” on page 123.

1. Under **Motion Detection Sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection.
2. Click **Update** to save changes. Enter the camera admin User Name (default: **admin**) and Password (default: **left blank**) and click **OK**. The camera will disconnect. Wait about 15 seconds and then double-click the camera in Camera List or Auto Search to reconnect to the camera.

3.5.4 CAMERA INFO TAB

The camera info tab shows system information about the camera.

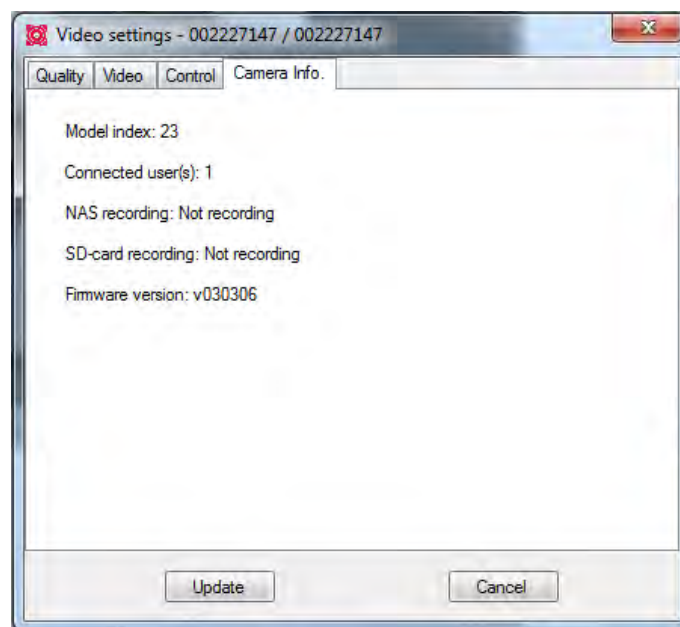


3.6 CONFIGURING L-VIEW

To configure settings for L-View, click the settings button ().

3.6.1 DIRECTORIES (OPENING OR CHANGING THE SNAPSHOT FOLDER)

The Directories menu shows you the folder where Snapshots are saved. It allows you to open or change the Snapshot folder.

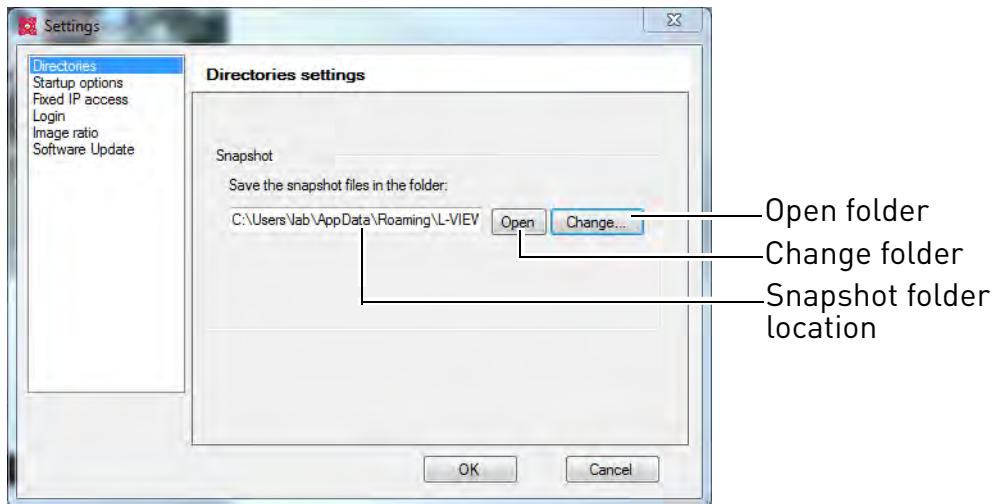

To open the Snapshot folder:

- Click **Open**.


To change the Snapshot folder:

1. Click **Change**.
2. Select a new Snapshot folder and click **OK** to save changes.

3.6.2 STARTUP OPTIONS

The Startup options menu allows you to configure startup options for L-View.

To configure startup options:

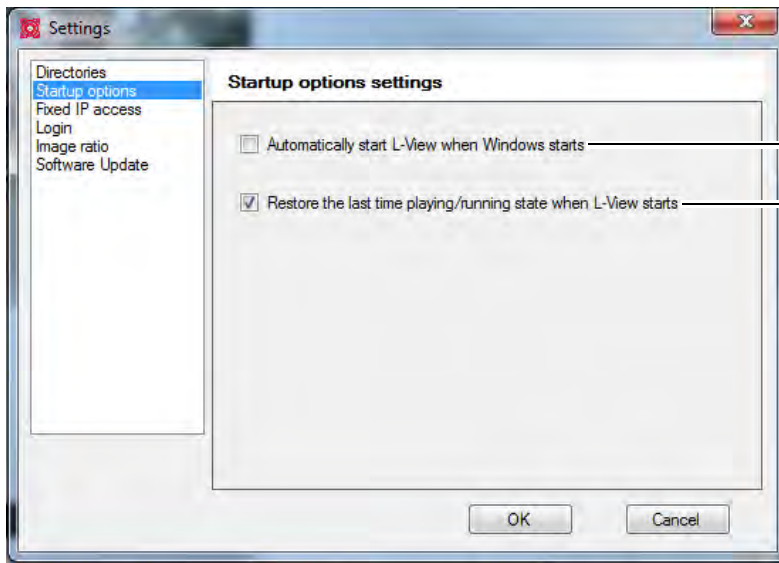


Check for L-View to open automatically when your computer turns on

Check to restore camera layout and connect to previously open cameras when L-View opens.

1. Check **Automatically start L-View when Windows starts** to have L-View open when your computer is turned on.
2. Check **Restore the last time playing/running state when L-View starts** to set L-View to restore the camera layout and connect to all the previously open cameras when L-View opens.
3. Click **OK** to save changes.

3.6.3 FIXED IP ACCESS


The Fixed IP Access menu is for advanced users only. It must be used if you have assigned your camera a fixed IP address on your router.

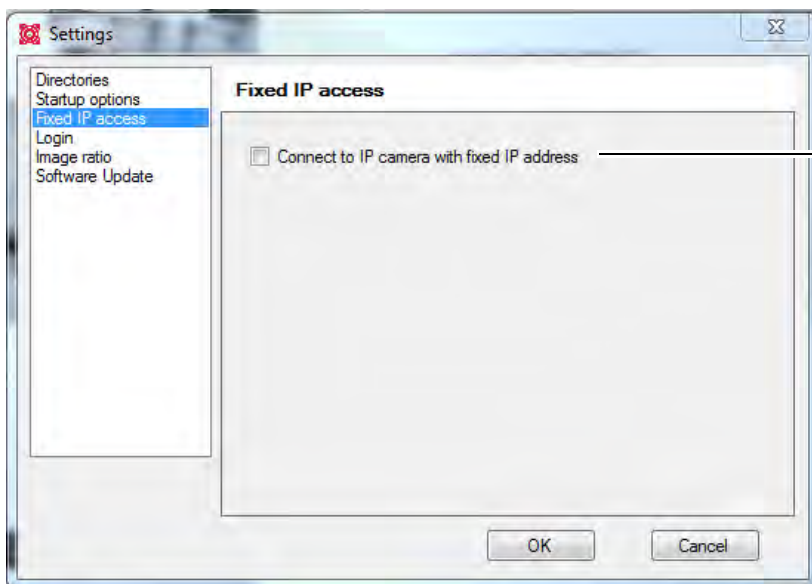

Check to enable Fixed IP addresses for cameras

To configure your camera to use a fixed IP address:


1. Check **Connect to the camera with a fixed IP address** to enable cameras to use fixed IP addresses.
2. Click **OK** to save changes.
3. In the camera list, right-click the camera you would like to configure and select **Assign IP Address**.

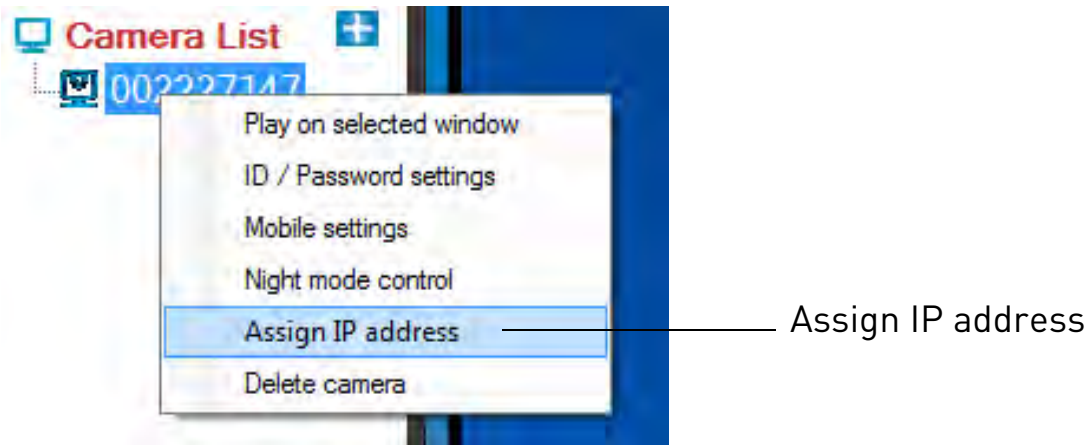

4. Enter the camera's internal IP address and click **OK**.

3.6.4 LOGIN (ENABLING PASSWORD TO ACCESS L-VIEW)

The Login menu allows you to enable a password to open L-View.

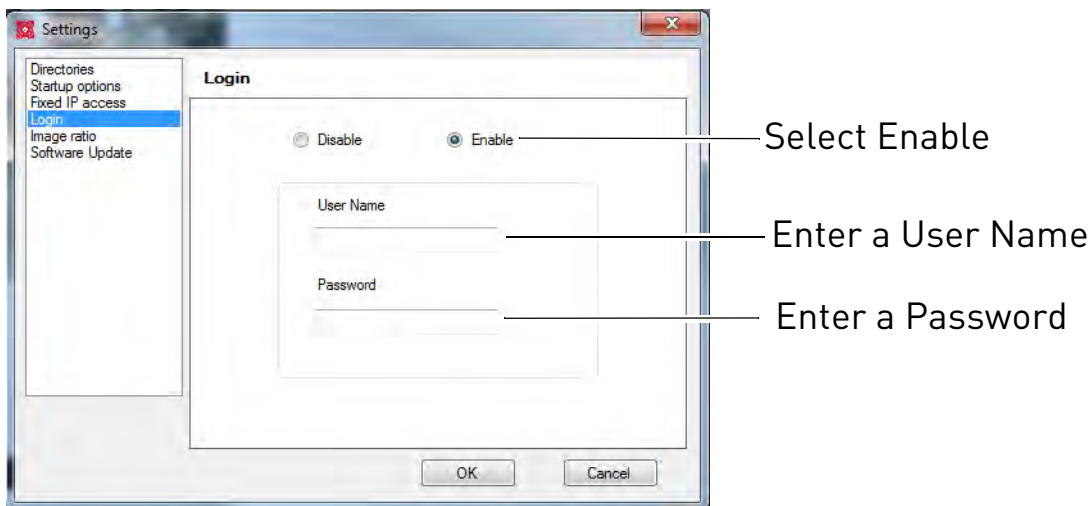
**To enable a password for L-View:**

1. Select **Enable**.

2. Under **User Name** and **Password**, enter the desired user name and password that must be used when you open L-View.
3. Click **OK** to save changes. The next time you exit L-View and re-open it, it will ask your for a password to log in.

3.6.5 IMAGE RATIO

The Image Ratio menu allows you to configure L-View to preserve the original aspect ratio of the video, or to allow the video to stretch to fill the display area.

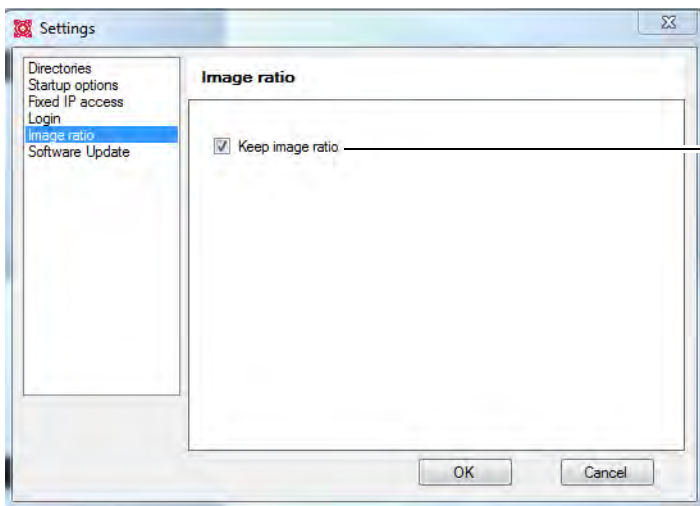


Check to prevent video stretching or uncheck to enable image stretching

To configure Image Ratio:

1. Check **Keep Image Ratio** to not allow any stretching of the image (bars may appear on the sides of the image). Uncheck **Keep Image Ratio** to stretch the image to the entire size of the display.
2. Click **OK** to save changes.

3.6.6 SOFTWARE UPDATE

The Software Update menu allows you to enable automatic updates of L-View or the camera firmware. It also allows you to manually check for updates.

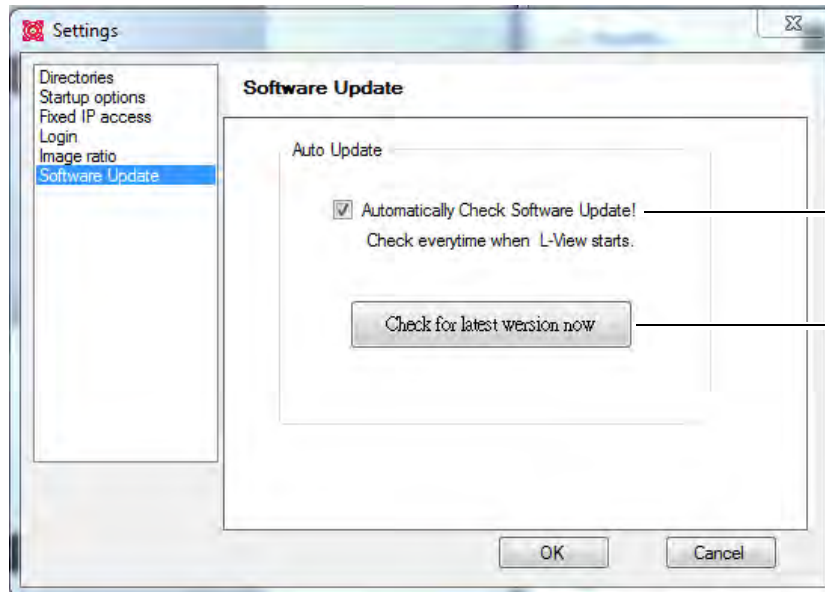

Check to have L-View look online for updates when it opens

Click to manually check for updates

English

To enable automatic upgrades:

1. Check **Automatically Check Software Update**.
2. Click **OK**. L-View will check online for an software updates when it opens. If an update is available, follow the on-screen instructions to install the update.
 - It will also check for camera updates when a new firmware is available. If a new camera firmware is available, click **OK** and enter the admin user name (default: **admin**) and password (default: **left blank**). Then, wait for the upgrade to complete. **Do not unplug the camera power cable or Ethernet cable during firmware updates.** The camera will reboot during the firmware upgrade process.

To manually check for an update:

1. Click **Check for latest version now**. If an update is available, follow the on-screen instructions to install the update.


4. IPHONE APP

The app for iPhone is called **Lorex Ping iPhone**.

For instructions on connecting to your camera using an iPhone, see “Connecting to your Camera on iPhone” on page 9.

4.1 LIVE VIEWING WITH LOREX PING FOR IPHONE

You can use Lorex Ping in portrait or landscape mode. Tilt the phone to switch between portrait or landscape.

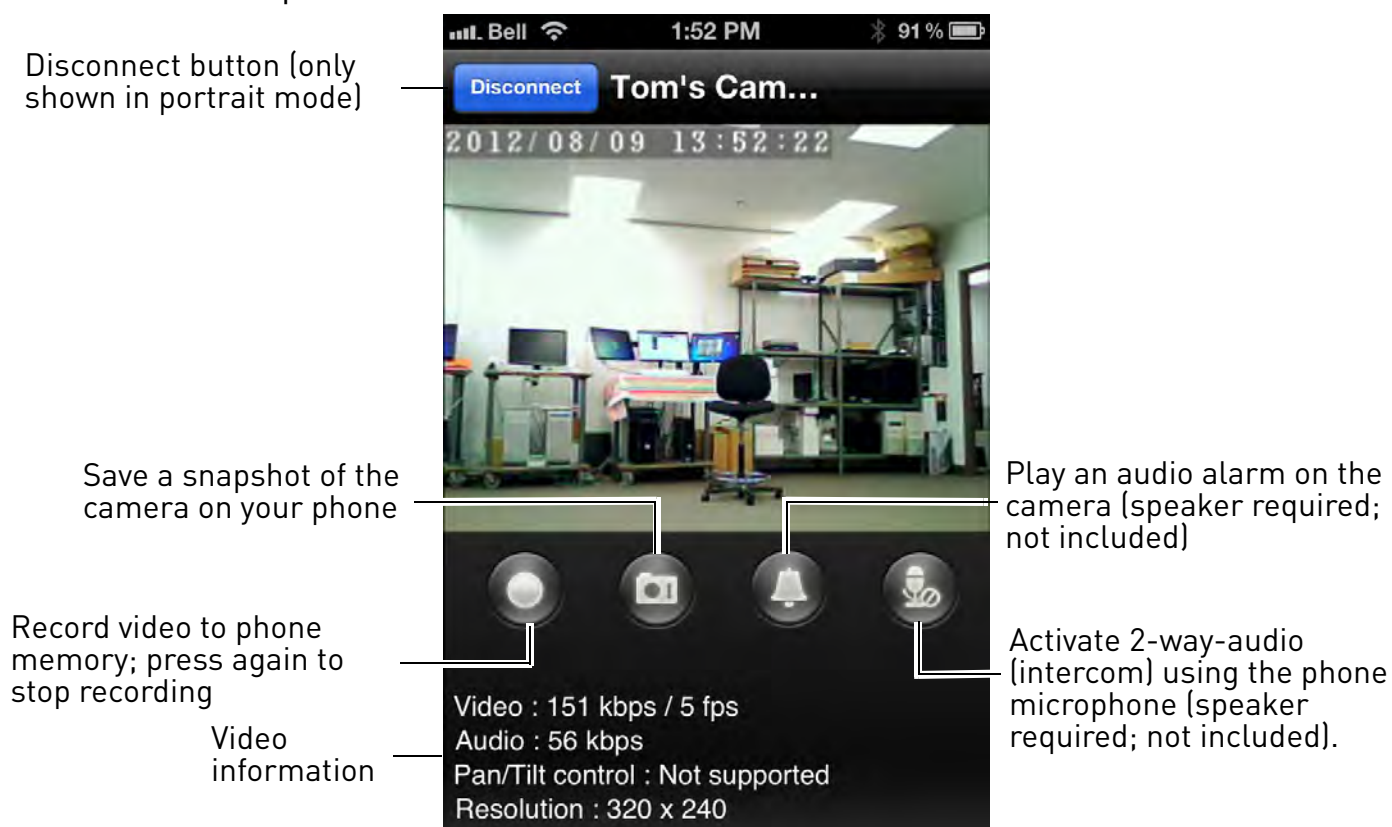

4.1.1 USING 2-WAY-AUDIO (INTERCOM)

- While viewing, touch  to activate 2-way-audio (intercom) using the phone microphone (speaker required; not included).
 - A volume slider appears that allows you to adjust the speaker volume.
 - Touch  again to turn off 2-way audio.



Turn off 2-way-audio
Adjust speaker volume

4.1.2 TAKING SNAPSHOTS

- While viewing, tap  to take a snapshot from the camera. You can view snapshots using the Camera app or save photos to your computer by connecting your iPhone to your computer using a USB cable.

4.1.3 RECORDING VIDEO TO IPHONE

You can manually record video from your camera directly to your iPhone's built in memory.

To record video to your iPhone's memory:

- While viewing, tap  to start recording.

2. Tap  again to stop recording. To view the recorded video, see “Playing Back Video Recorded on iPhone” on page 50.

4.2 PLAYING BACK VIDEO RECORDED ON IPHONE

After using the record button to record video to your iPhone, you can playback video on iPhone or convert the video files to .avi files for sharing.

4.2.1 USING PLAYBACK

1. From the Camera List, tap Playback ().

NOTE: If you are still connected to the camera, tap **Disconnect** to return to the Camera List. Disconnect only appears when holding the phone in portrait mode.

2. Tap the name of the camera you would like to select.



Tap the camera you would like to playback video from

3. Tap the date of the video recording you would like to playback. Then tap the desired video file to start playback.
4. Use the on-screen video controls to control playback. Tap **Stop** to return to the file list.

4.3 PLAYING BACK VIDEO RECORDED ON MICROSD ON IPHONE

You can playback video recorded on the camera microSD card (not included) on your iPhone. For details on setting up microSD recording, see “Configuring microSD Recording” on page 64.

NOTE: You must be connected to the same WiFi network or router as the camera to access microSD recordings.


To play back video recorded on the camera microSD card:

1. From the Camera List, tap  to open the camera settings page.
2. Scroll down and tap **SD card playback**.
3. Select the camera you would like to playback from.



Select camera for microSD playback

4. The camera scans for recorded video files and shows a list of days with recorded video. Tap a day to view recordings created on that day.

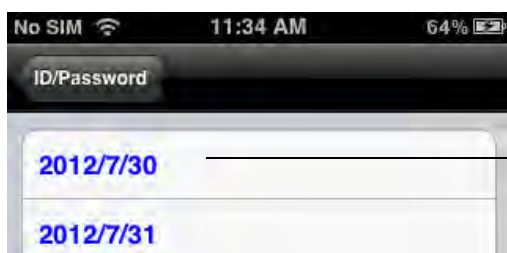

Tap a day to view recorded videos from that day.

5. Tap a recording to play it.
6. Tap **Disconnect** to return to the recordings list.

4.4 USING CAMERA LIST TO EDIT CAMERA SETTINGS

You can use the Camera List to adjust the connections settings or other settings for your camera.

To access Camera Settings:

1. Tap Camera List . Then tap  next to the camera you would like to edit.

2. For certain menus, you will need to enter the camera admin user name and password before you may change settings. By default, the admin user name is **admin** and the password is **left blank**.



IMPORTANT: Some menus below are only available if your device is on the same local network as the camera. If menus are missing, connect to the same WiFi network or router as the camera using your phone.

4.4.1 EDITING CAMERA CONNECTION SETTINGS

You can edit your camera connection information. This is useful if you change the password of the camera or if you want to save the admin user name and password, so you don't have to enter it to make settings changes.

To edit camera connection settings:

1. In Camera List, tap  next to the camera you would like to edit.




- Edit Camera Name
- Edit Password
- Enable/disable icon automatic icon updates
- Enable/disable saving admin user name and password next time entered

2. Change the **Name** and **Password** as needed.
3. Under **Dynamic icon update**, select **ON** to have the camera icon automatically update every time you connect to the camera, or select **OFF** to keep the icon as is.
4. Under **Save admin password**, select **ON** to have Lorex Ping save the admin user name and password the next time you enter it, or **OFF** to require the admin user name and password whenever settings changes are made.
5. Tap **Back** to save changes and return to camera list.


4.4.2 DELETING CAMERAS FROM CAMERA LIST

1. In Camera List, tap **Move**.

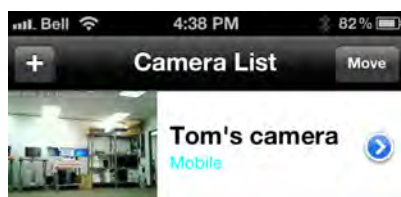

- Tap Move


2. Tap  next to the camera you would like to delete then tap **Delete** to confirm.

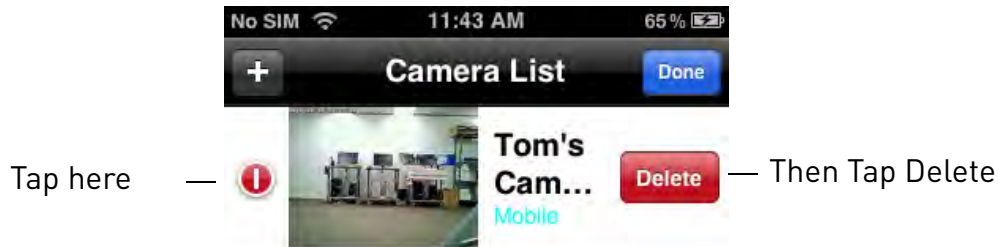

3. Tap **Done**.

4.4.3 EDITING ALARM NOTIFICATION SETTINGS (PUSH NOTIFICATIONS)

Push Alarm Notifications can be set up to create a notification straight to your iPhone when motion or sound is detected by the camera. Push Alarm Notifications go directly to the notifications area on your device.

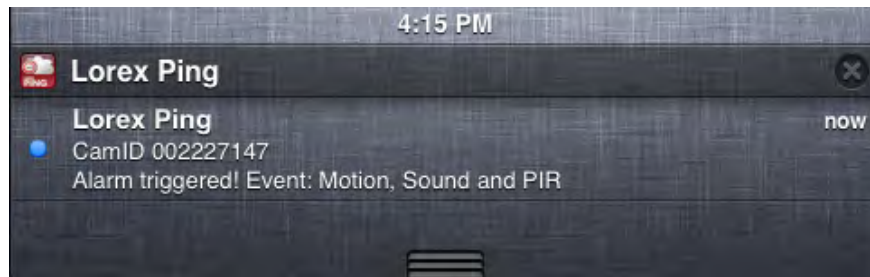

Example of Push Notification

To enable Push Alarm Notifications:

1. In Camera List, tap  next to the camera.
2. Tap **Alarm notification**.



— Enable/disable push notifications for video motion detection

— Enable/disable push notifications for sound

— Select sensitivity for sound push notifications

— Enable/disable push notifications for PIR motion detection


3. Under **Motion**, select **ON** to enable Push Alarm Notifications when motion is detected using video motion detection or **OFF** to disable.
4. Under **PIR**, select **ON** to enable Push Alarm Notifications when motion is detected using the PIR motion sensor or **OFF** to disable.
5. Under **Sound**, select **ON** to enable Push Alarm Notifications when sound is detected by the camera or **OFF** to disable. Under **Sound Sensitivity**, select a sensitivity for Sound Push Alarm Notifications between **1** (lowest) and **10** (highest).
6. Tap **Update** to save your settings

4.4.4 EDITING CAMERA MOBILE STREAMING SETTINGS

Configure the camera image quality settings for streaming to mobile devices (i.e. smart phones and tablets). Please note that less bandwidth is generally available over mobile networks than over WiFi or Ethernet.

To edit mobile streaming settings:

1. In Camera List, tap  next to the camera.
2. Tap **Stream Settings**.

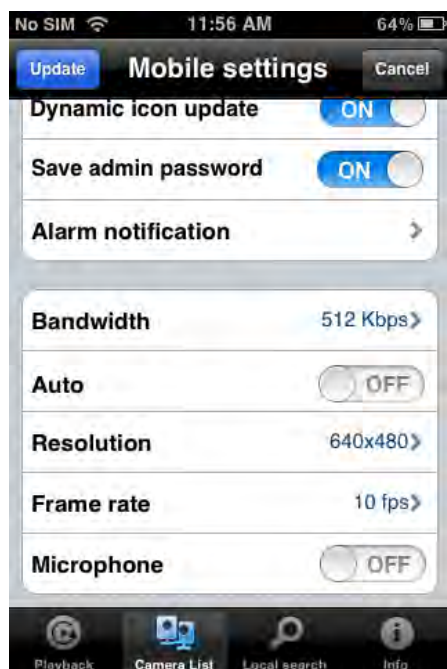


- Select Mobile Bandwidth
- Enable/disable auto resolution and frame rate adjustment
- Select Resolution
- Select Frame rate
- Enable/disable audio streaming

3. Under **Bandwidth**, select the bandwidth for your mobile connection. If you are mainly connecting using WiFi, you may set this setting higher.

4. Under **Auto**, select **ON** to have the camera automatically select the resolution and frame rate based on available bandwidth. Or, select **OFF** to manually select the resolution and frame rate. If you select OFF, configure the following:
 - Under **Resolution**, select the resolution that will be used when connecting to the camera using a smart phone or tablet: **320x240** (QVGA) or **640x480**(VGA).
 - Under **Frame rate**, select the frame rate that will be used when connecting to the camera using a smart phone or tablet between 30fps (highest) and 1fps (lowest).
5. Under **Microphone**, select **OFF** to turn off audio streaming to your mobile device or tap to select **ON** to turn on audio streaming to your mobile device.
6. Tap **Update** to save your settings.

4.4.5 EDITING CAMERA VIDEO SETTINGS

1. In Camera List, tap  next to the camera.
2. Tap **Video Settings**.
3. Tap **Video**.

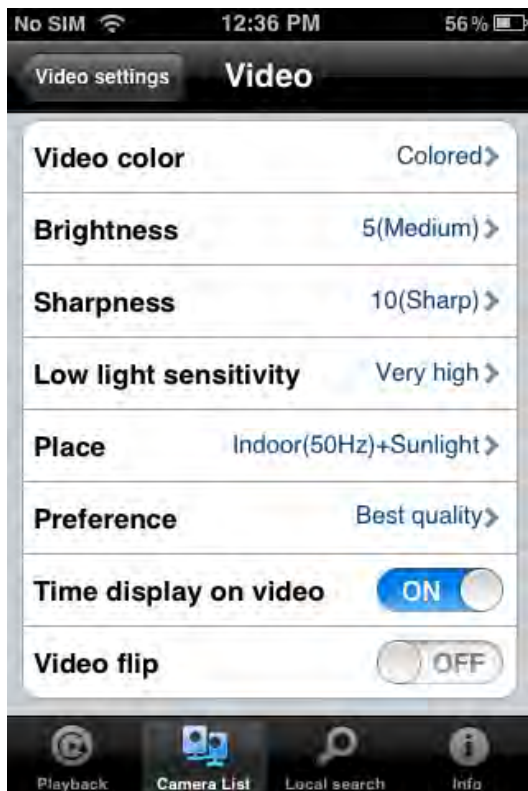

- Select Color or Black & White
- Select Brightness
- Select Sharpness
- Select Low light sensitivity
- Select environment settings
- Select quality preference
- Enable/disable time stamps
- Enable/disable video flip

4. Configure the following:


- **Video color:** Select **Colored** to view the camera in color or select **Black & white**. Tap **Video** to return to Video settings.
 - **Brightness:** Manually adjust the brightness of the image between **10** (highest) and **1** (lowest). Tap **Video** to return to Video settings.
 - **Sharpness:** Manually adjust the sharpness of the image between **10** (highest) and **1** (lowest). Tap **Video** to return to Video settings.
 - **Low Light Sensitivity:** Set the camera's sensitivity in low light environments between **Very High** (highest), **High**, and **Normal** (lowest). Tap **Video** to return to Video settings.
 - **Place:** Select **Outdoor** for well lit environments. Select **Indoor** if you notice strip lines in the image or if the picture is too dark on the Outdoor video setting. Select **Indoor + Sunlight** if the picture is too bright on the Indoor Video setting. If you select an indoor setting, select **60Hz** or **50Hz** to adjust the camera for the frequency of your indoor lighting. Tap **Video** to return to Video settings.
 - **Preference:** Select whether you would like the camera to reduce the image quality or the frame rate when bandwidth increases or decreases. Select **Video Motion** to have the camera maintain the frame rate and reduce image quality when bandwidth is insufficient. Select **Image Quality** to have the camera maintain image quality and reduce frame rate when bandwidth is insufficient. Select **Better Quality** to have the camera maintain frame rate and increase quality when bandwidth is sufficient. Select **Best Quality** to have the camera maintain the frame rate and increase quality to the maximum speed of the connection. Tap **Video** to return to Video settings.
 - **Time Display on Video:** Select **ON** to enable time stamps on video or **OFF** to disable time stamps.
 - **Video flip:** Select **ON** to flip the camera image vertically and horizontally or select **OFF** for the normal orientation. This is useful if the camera has been mounted to a wall or ceiling upside down.
5. Tap **Video Settings** when finished making changes, then tap **Update** to save your settings.

4.4.6 CONFIGURING LED CONTROL AND MOTION DETECTION SENSITIVITY

Configure the behavior of the camera status and network LED's. This is useful if you want the camera to be harder to spot at night. You can also configure the sensitivity for video motion detection.

To configure LEDs and motion detection sensitivity:

1. In Camera List, tap  next to the camera.
2. Tap **Video Settings**. Then tap **Control**.

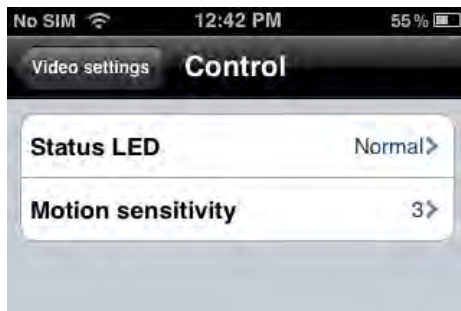

— Select Network and Status LED behavior

— Select Video motion detection sensitivity

3. Under **Status LED**, select one of the following:

- **Normal:** Status and network LED's will function as normal. For details on LED functions, see "Camera Overview" on page 1.
- **Always turn off:** Status and network LED's are turned off at all times.
- **Turn off after network connected:** Status and Network LED's turn on when the camera is powered on and turn off once a network connection is made.

NOTE: This does not affect the SD LED. Removing the microSD card will turn off the SD LED, but it will also disable microSD recording.

6. Tap **Control** to return to the Control menu.
7. Under **Motion Sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection. Tap **Control** to return to the Control menu.

NOTE: This setting does not affect the PIR motion detector.


5. Tap **Video Settings** when finished making changes, then tap **Update** to save your settings.

4.4.7 CONFIGURING NIGHT MODE SETTINGS

Configure when the camera uses day or night mode. When day mode is on, the camera sees in color. When night mode is on, the camera sees in black and white, and the Infrared LED turns on to enable night vision.


To configure Day/Night mode:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Video Settings**. Then tap **Night Mode Control**.

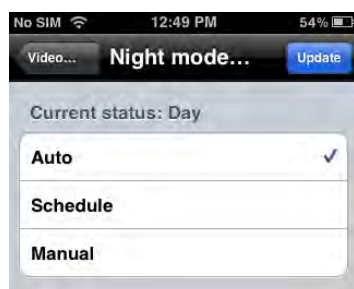

Select Night Mode control type


3. Select one of the following:
 - **Auto:** Camera will automatically switch between day mode or night mode, based on the amount of light in the room.
 - **Schedule:** Camera will switch between day mode and night mode at a scheduled times each day. If using this option, tap under **Schedule time of night mode**, use the sliders to set the **Start** time (when night mode begins each day) and **End** time (when night mode ends each day), then tap **OK**.

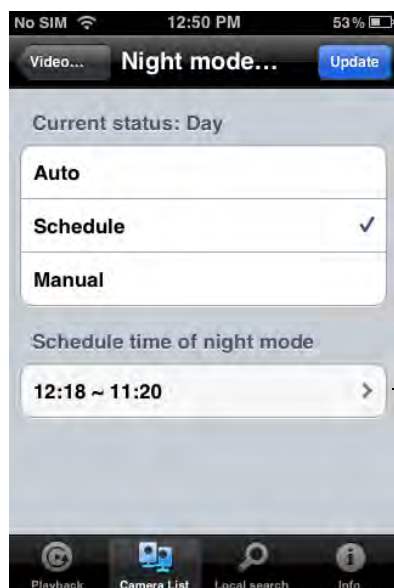

Select Schedule to schedule day/night mode switch

Tap to configure day/night mode schedule.

- **Manual:** Manually select day mode or night mode. If using this option, select **Day** for day mode or **Night** for night mode.

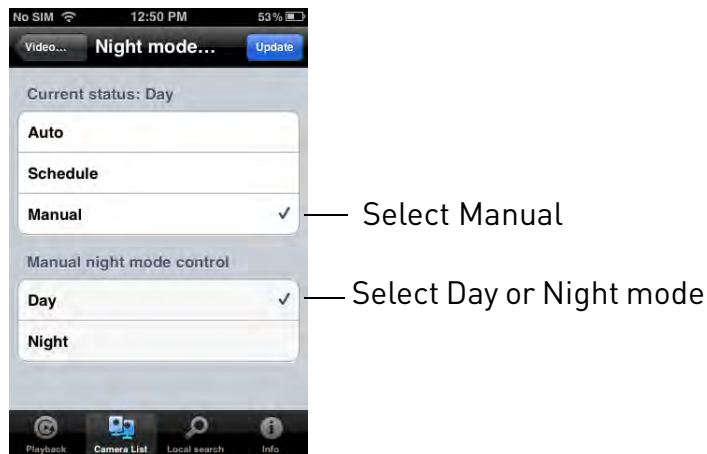


4. Tap **Update** to save your changes.

4.4.8 EDITING CAMERA WIRED NETWORK SETTINGS

Configure the camera IP address when connected using Ethernet. Select DHCP or Fixed IP.

To edit camera wired network settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Network** then **Wired Network**.

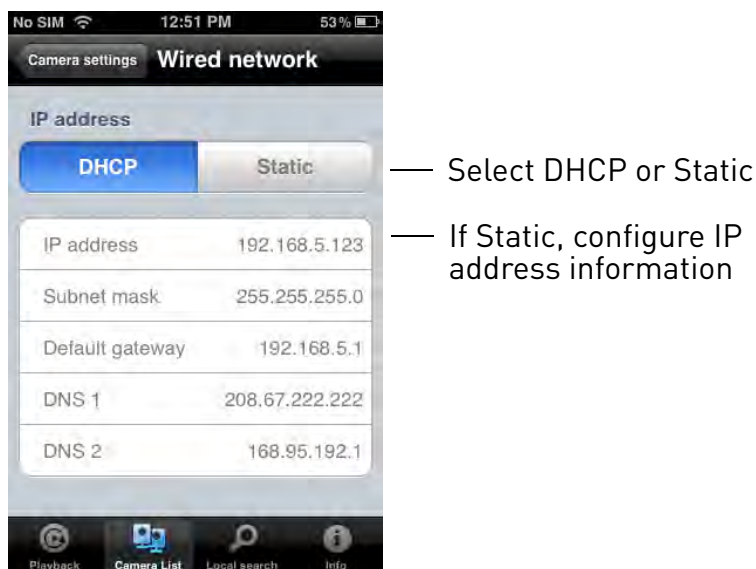


4. Select **DHCP** (recommended) to allow the camera to automatically obtain an IP address from the router or **Static** to use fixed IP address settings. If you select Static, configure your **IP Address**, **Subnet mask**, **Default gateway**, **DNS1**, and **DNS2**.
5. Tap **Update** to save your settings.

4.4.9 EDITING CAMERA WIFI NETWORK SETTINGS

Configure WiFi network settings for the camera. To setup the camera with a WiFi network, see “iPhone WiFi Setup” on page 20.

To edit camera WiFi settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Network** then **WiFi Network**.
4. Slide WiFi to **ON** to enable WiFi on the camera and scan for available networks.
5. Tap a WiFi network and enter the password to connect.
 - To connect to a hidden WiFi network, tap **Other**. Enter the SSID and select the security type and tap Add. Tap the network name from the list and enter the password.

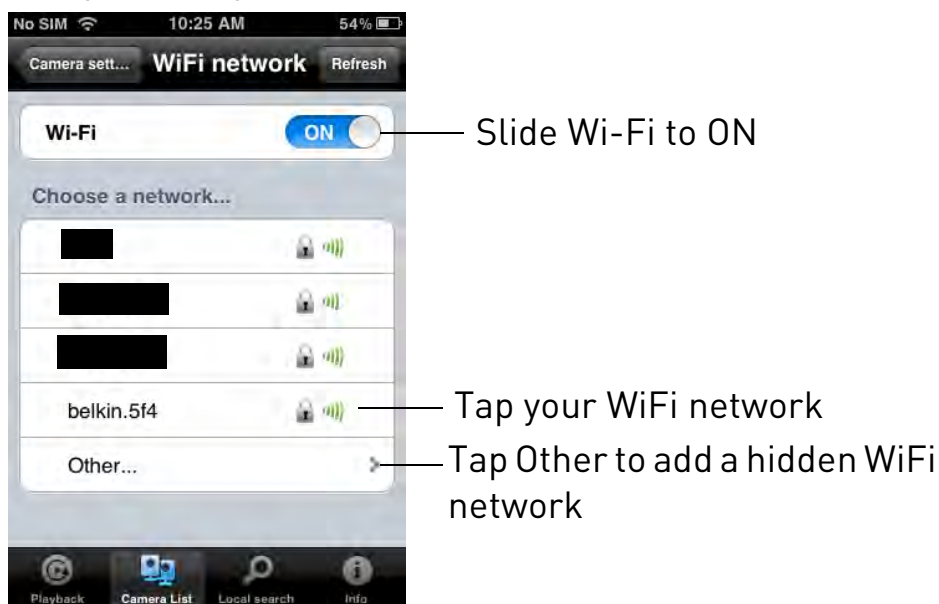

6. Wait for the update to complete.
7. Remove the Ethernet cable from the camera. It will connect to the WiFi network. When it is connected, the blue Network LED will be on or flashing.
8. Press **Camera Settings** then **Camera List** to exit the edit camera screen.


9. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.

4.4.10 ENABLING EMAIL NOTIFICATIONS

Configure email alarms. The camera can be set up to send email alerts when motion is detected. Email alarms include a .jpg attachment.

To enable email notifications:

1. In Camera List, tap  next to the camera.
2. Tap **Camera Settings**.
3. Tap **Schedule** then **Email Alarm**.

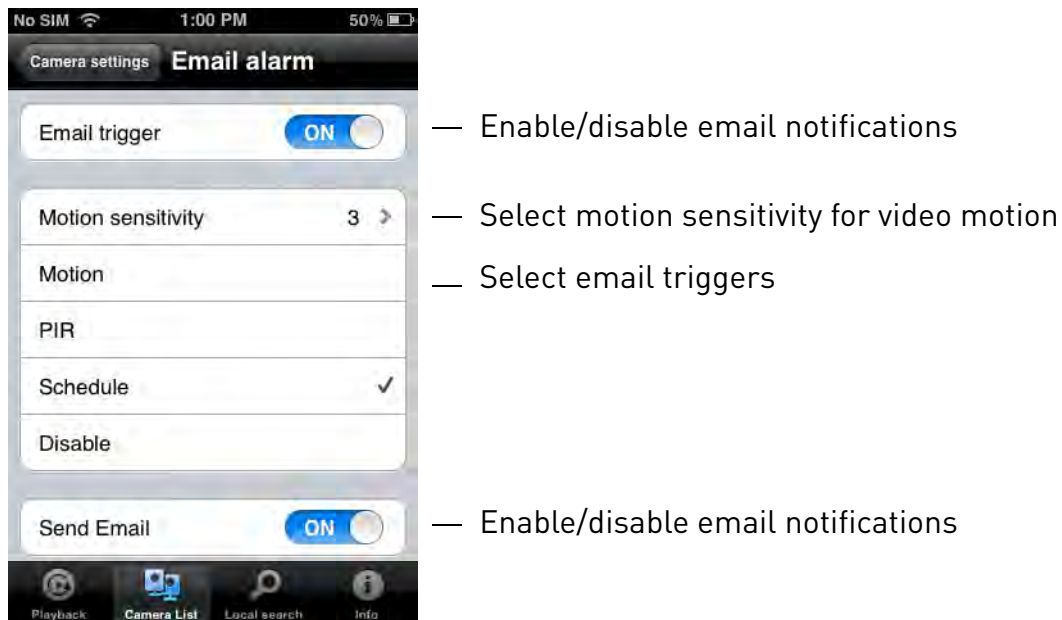

4. Under **Email trigger**, select **ON** to enable email notifications or **OFF** to disable. Then under **Send Email**, select **ON** to enable email notifications.
5. Under **Motion sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection. Tap **Email alarm** to return to the Email Alarm menu.

NOTE: This setting does not affect the PIR motion detector.

6. Check the following trigger options for email alarms:

- **Motion:** Use Video motion detection to trigger email alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
- **PIR:** Use the PIR motion detector to trigger email alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Schedule:** Send email alarms based on the settings configured in the Scheduling menu.
- **Disable:** Disable email alarms.

7. Enter up to 3 email addresses under **Recipient1~3** that will receive email alarms.



— Enter recipient email addresses

8. Tap **Update** to save your changes.

NOTE: If you want to use a custom SMTP server to send Email messages, click **SMTP Settings**, enter your SMTP server information, and tap **OK**.


4.4.11 ENABLING SPEAKER ALARMS

Configure audio alarms using a speaker (not included) connected to the camera. Audio alarms can be set up to go off when the camera detects motion. This is helpful if you want to scare off intruders.

To configure speaker alarms:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.

3. Tap **Schedule** then **Speaker Alarm**.

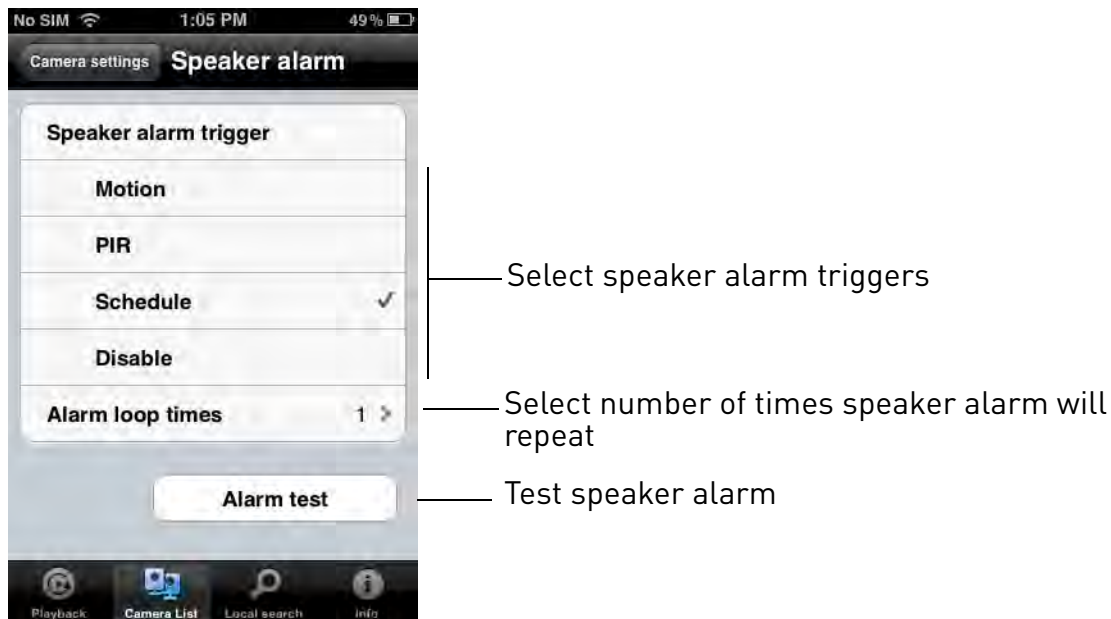

4. Under **Speaker Alarm Trigger**, check the triggers that will cause speaker alarms:

- **Motion:** Use Video motion detection to trigger audio alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
- **PIR:** Use the PIR motion detector to trigger audio alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Schedule:** Create audio alarms based on the settings set in the Scheduling menu.
- **Disable:** Disable speaker alarms.

5. Under **Alarm Loop Times**, select the number of times you would like the speaker alarm to repeat when alarms occur.

6. Tap **Alarm Test** to sound a test alarm.

7. Tap **Update** to save your settings.

4.4.12 CONFIGURING MICROSD RECORDING

Configure video recording to the microSD card (required; not included). To playback

recordings saved on the microSD card, use L-View or the iPhone, iPad, or Android apps.

To configure microSD card recording:

1. Make sure a microSD card (not included) is inserted into the camera. It is recommended to format the microSD card before using it with the camera.
2. In Camera List, tap  next to the camera you would like to edit.
3. Tap **Camera Settings**.
4. Tap **Schedule** then **SD-Card**.



— Enable microSD recording

— Select Always recording or Schedule recording

— Select if you want the camera to overwrite or stop recording when the microSD card is full

5. Under Recording, select **ON** to enable microSD recording or **OFF** to disable.
6. Check one of the following recording options:
 - **Always Recording:** Camera will record continuously at all times.
 - **Schedule Recording:** Camera will record according to settings set in the recording schedule.

NOTE: To enable Motion detection recording using iPhone, you must use Schedule recording. Then, create a schedule in the Scheduling menu with Motion trigger, PIR trigger, or both Motion trigger and PIR trigger selected.


7. Under When disk space full check **Overwrite** to set the camera to overwrite the oldest recordings when the microSD card is full or select **Stop recording** to set the camera to stop recording when the microSD card is full.
8. Tap **Update** to save your settings.

4.4.13 CONFIGURING THE CAMERA RECORDING AND ALARM SCHEDULE

Configure schedules for recording and alarms. Schedules can be configured separately for alarms and recording. You can configure up to 12 schedules.

To create a schedule for alarms or recording:

1. First, you must enable alarms or recording to use the schedule.
2. In Camera List, tap  next to the camera you would like to edit.
3. Tap **Camera Settings**.
4. Tap **Schedule** then **Scheduling**.
5. Tap **Add Schedule**.

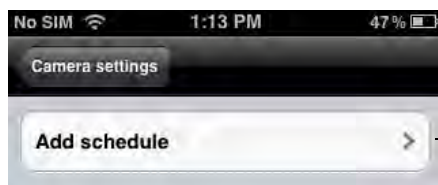

— Add Schedule

6. Under **Email Alarm**, check **Motion trigger** to send an email alarm based on video motion, select PIR trigger to use the PIR motion sensor, or select both Motion Trigger and PIR trigger.



— Configure triggers for email alarms in this schedule

— Configure triggers for speaker alarms in this schedule

7. Under **Speaker Alarm**, check **Motion trigger** to create an audio alarm based on video motion, check **PIR trigger** to use the PIR motion sensor, or select both Motion trigger and PIR trigger.


8. Under **SD card record**, check **Continuous** for the camera to record to microSD continuously during the scheduled time. Check **Motion trigger** to record when video motion is trigger during the scheduled time, select **PIR trigger** to record when the PIR motion sensor is triggered during the scheduled time, or select both.



Configure triggers for
microSD recording in this
schedule

9. Under **Time period**, select one of the following:

- **Every week:** Create a weekly recording schedule. Tap  and check the days you would like the schedule to apply to. Tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **OK**.
- **Every day:** Create a daily recording schedule. Tap  then tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **OK**.
- **Fixed time:** Create a one time schedule (for example, if you are going on vacation, and would like to record all the time). Tap  then tap **Start** and **End** and use the sliders to configure the exact date and time when you would like the schedule to start and end. Tap **OK**.

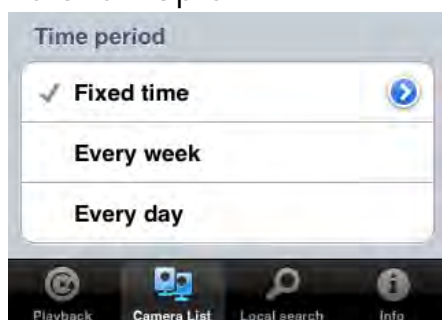


Configure schedule times

9. Tap **OK** to save the schedule. Tap **Update** to save your settings.

To delete a Schedule:

1. From the Scheduling menu, swipe the schedule you would like to delete from left to right.

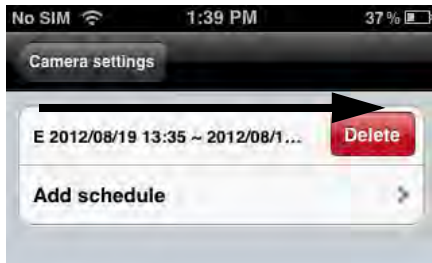

Swipe from left to right and then tap delete to delete a schedule

2. Tap **Delete**.
3. Tap **Update** to save your changes.

4.4.14 CONFIGURING THE CAMERA DATE AND TIME

Configure the camera date and time. The camera syncs with an Internet NTP time server to automatically provide the correct time, once you have configured your time zone and daylight savings time settings.

To set the camera date and time:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Admin** then **Date/Time**.



— Tap Time zone

4. Tap **Time Zone**.

5. Use the slider to select your time zone.



Select your time zone

Enable Daylight Savings and configure start and end times for daylight savings

- If your region observes Daylight Savings Time, check **Daylight Savings Time**. Tap **Start Time** and **End Time**, use the sliders to configure the start and end time for Daylight Savings Time and then tap **OK**. Tap **Back** to return.
6. Tap **Update** to save your changes. Tap **OK**. The camera will reboot to apply the new time zone.


4.4.15 REBOOTING THE CAMERA

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Admin** then **Reboot**.
4. Tap **OK** to confirm.


4.5 USING LOCAL SEARCH TO ADD CAMERAS

You can use the Local Search Menu to automatically add the ID's for cameras on your local network.

To add cameras using local search:

1. Tap the Local Search button ().

2. Lorex Ping automatically scans for cameras on your local network. Tap **Search** to re-scan.

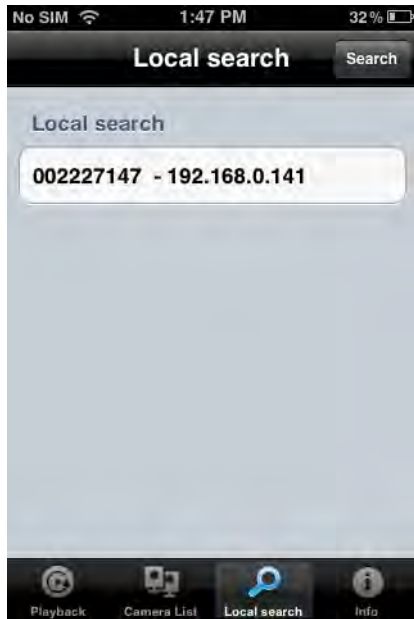

—— Tap Search to re-scan

—— Tap a camera to add to camera list


3. Tap a camera from the list. The Add camera screen comes on with the camera ID already entered.
4. Enter a **Name** of your choice and enter the camera **Password**. If you have not connected to your camera before, the password is lorex.
5. Tap **Done**. The camera is now added to camera list. Tap the camera name in camera list to connect to the camera.

5. IPAD APP

The app for iPad is called **Lorex Ping iPad**.

For instructions on connecting to your camera using iPad, see “Connecting to your Camera on iPhone” on page 9.

5.1 LIVE VIEWING WITH LOREX PING IPAD

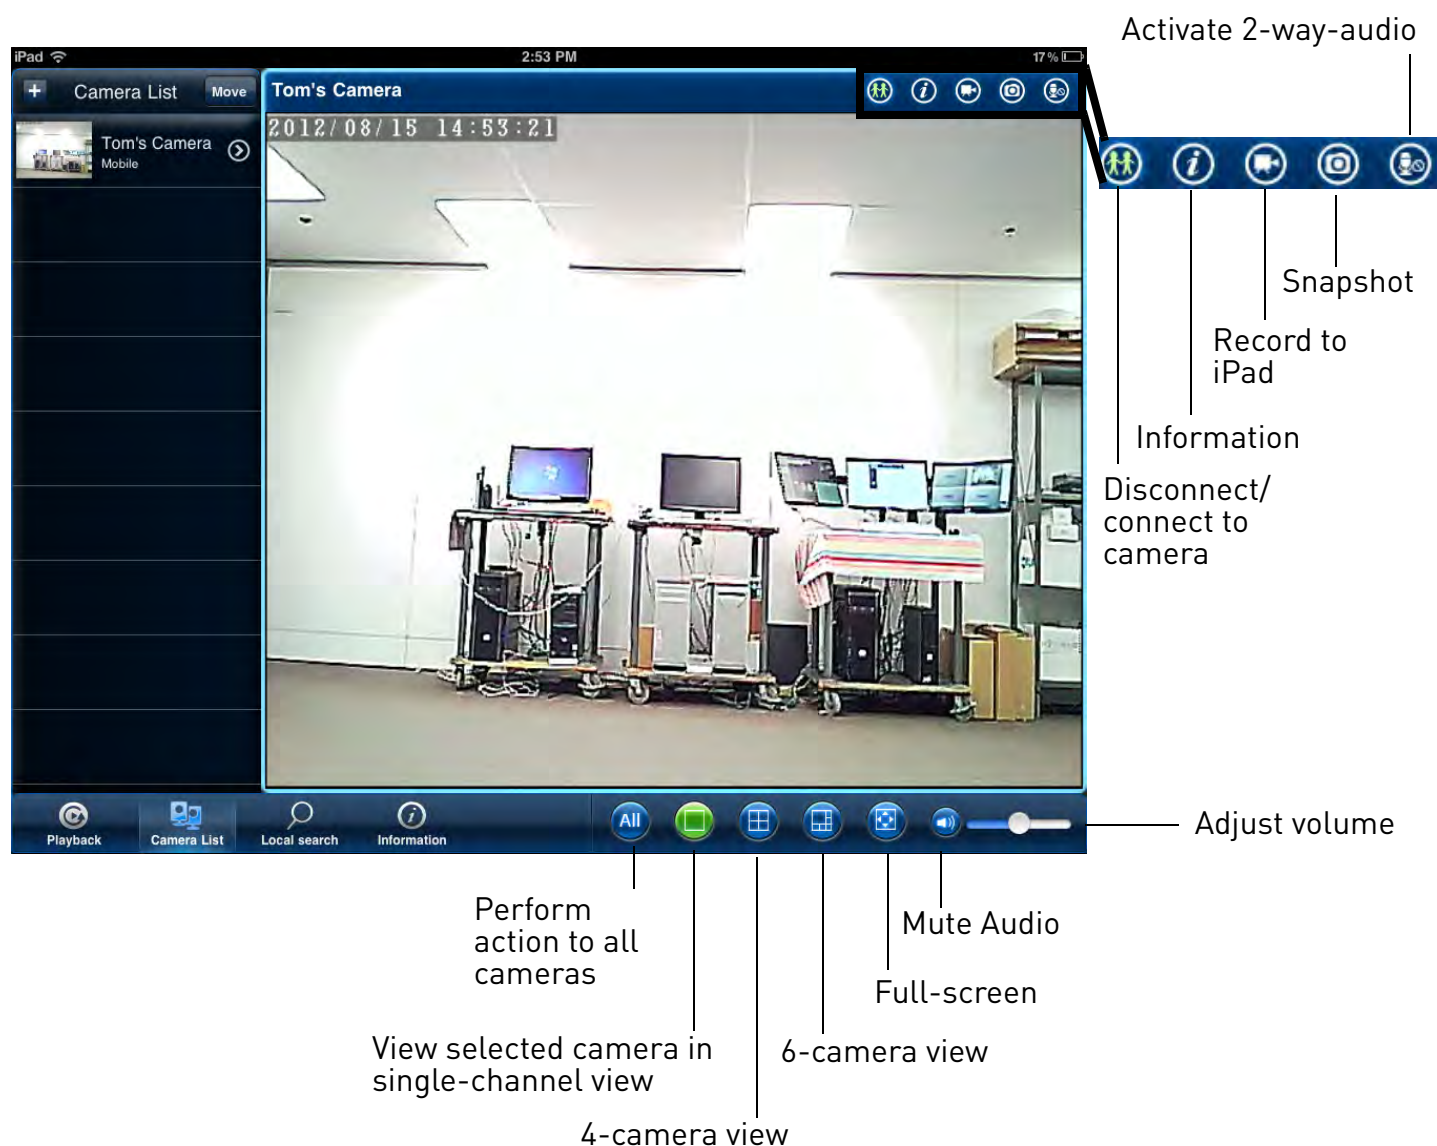

5.1.1 USING 2-WAY AUDIO (INTERCOM)

1. While viewing, touch  to activate 2-way-audio (intercom) using the phone microphone (speaker required; not included).
2. Tap  again to deactivate 2-way-audio.

5.1.2 TAKING SNAPSHOTS

- While viewing, tap  to take a snapshot from the camera. You can view snapshots using the Camera app or save photos to your computer by connecting your iPad to your computer using a USB cable.

NOTE: There is no Camera app on 1st generation iPads. To view your snapshots, you must connect the iPad to your computer using a USB cable.

5.1.3 RECORDING VIDEO TO IPAD

You can manually record video from your camera directly to your iPad's built in memory.

To record video to your iPhone's memory:

1. While viewing, tap  to start recording.
2. Tap  again to stop recording. To view the recorded video, see "Playing Back Video Recorded to iPad" on page 72.

5.2 PLAYING BACK VIDEO RECORDED TO IPAD

After using the record button to record video to your iPad, you can playback video on iPad.

To playback video recorded to iPad:

1. Tap the Playback button () then tap **iPad**.
2. Select the camera you would like to playback video from. A list of days with recorded video appears.

3. Tap a day to see recordings from that day. Tap a recording to start playback.
4. During playback, tap in the display area to bring up playback controls.

Tap to Select
Camera

Tap to Select
Day

Tap to play
file



Tap in the display area during
playback for playback controls

English

5.3 PLAYING BACK VIDEO RECORDED TO MICROSD ON IPAD

You can playback video recorded on the camera microSD card (not included) on your iPad. For details on setting up microSD recording, see “Configuring MicroSD Recording” on page 87.

NOTE: You must be connected to the same WiFi network or router as the camera to access microSD recordings.

To play back video recorded on the camera microSD card:




1. Tap the Playback button () then tap **SD Card**.
2. Select the camera you would like to playback from.
3. The camera scans for recorded video files and shows a list of days with recorded video. Tap a day to view recordings created on that day.
4. Tap a recording to play it.

Tap to Select
Camera

Tap to Select
Day

Tap to play
file




5. Tap the Camera List button () to exit playback.

5.4 USING CAMERA LIST TO EDIT CAMERA SETTINGS

You can use the Camera List to adjust the connections settings or other settings for your camera.

To access Camera Settings:

1. Tap Camera List . Then tap  next to the camera you would like to edit.
2. For certain menus, you will need to enter the camera admin user name and password before you may change settings. By default, the admin user name is **admin** and the password is **left blank**.



IMPORTANT: Some menus below are only available if your device is on the same local network as the camera. If menus are missing, connect to the same WiFi network or router as the camera using your phone.


5.4.1 EDITING CAMERA CONNECTION SETTINGS

You can edit your camera connection information. This is useful if you change the password of the camera or if you want to save the admin user name and password, so you don't have to enter it to make settings changes.

To edit camera connection settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Change the **Name** and **Password** as needed.


- Under **Dynamic icon update**, select **ON** to have the camera icon automatically update every time you connect to the camera, or select **OFF** to keep the icon as is.
- Under **Save admin password**, select **ON** to have Lorex Ping save the admin user name and password the next time you enter it, or **OFF** to require the admin user name and password whenever settings changes are made.

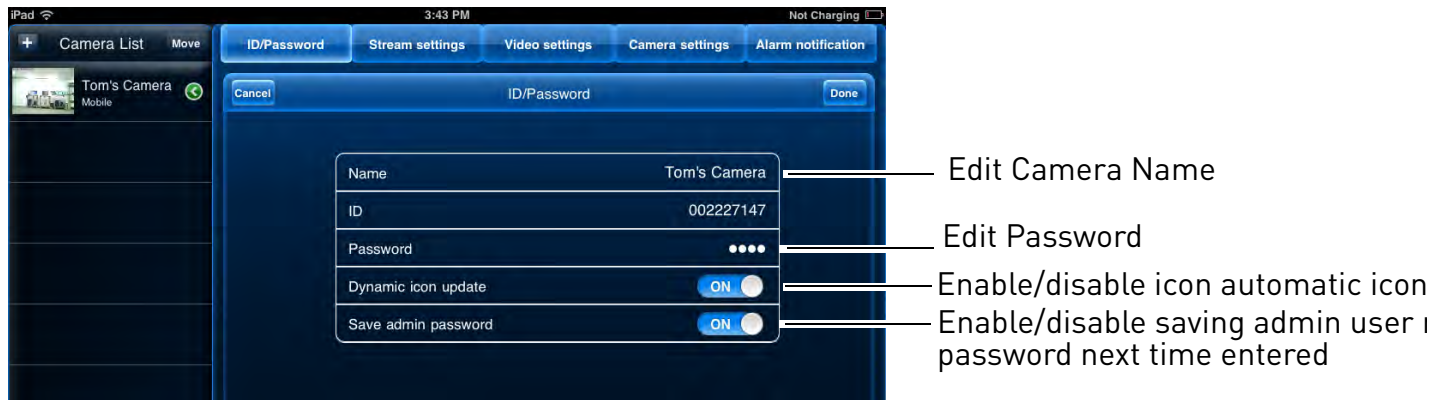

- Tap **Done** to save changes.

5.4.2 DELETING CAMERAS FROM CAMERA LIST

- In Camera List, tap **Move**.

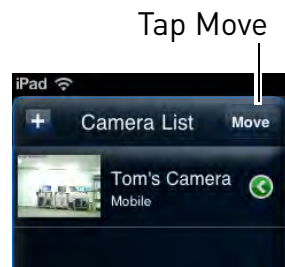


- Tap  next to the camera you would like to delete then tap **Delete** to confirm. Tap **Done**.

5.4.3 EDITING ALARM NOTIFICATIONS SETTINGS (PUSH NOTIFICATIONS)

Push Alarm Notifications can be set up to create a notification straight to your iPhone when motion or sound is detected by the camera. Push Alarm Notifications go directly to

the notifications area on your device.

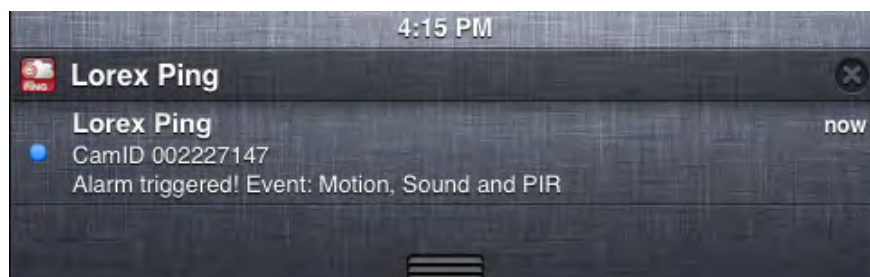

Example of Push Notification

To enable Push Alarm Notifications:

1. In Camera List, tap  next to the camera.
2. Tap **Alarm notification**.



Alarm Notification

Enable/disable push notifications for video motion detection

Enable/disable push notifications for sound

Select sensitivity for sound push notifications

Enable/disable push notifications for PIR motion detection

3. Under **Motion**, select **ON** to enable Push Alarm Notifications when motion is detected using video motion detection or **OFF** to disable.
4. Under **PIR**, select **ON** to enable Push Alarm Notifications when motion is detected using the PIR motion sensor or **OFF** to disable.


5. Under **Sound**, select **ON** to enable Push Alarm Notifications when sound is detected by the camera or **OFF** to disable. Under Sound Sensitivity, select a sensitivity for Sound Push Alarm Notifications between 1 (lowest) and 10 (highest).
6. Tap **Update** to save your settings.

5.4.4 EDITING CAMERA MOBILE STREAMING SETTINGS

Configure the camera image quality settings for streaming to mobile devices (i.e. smart phones and tablets). Please note that less bandwidth is generally available over mobile networks than over WiFi or Ethernet.

To edit mobile streaming settings:

1. In Camera List, tap  next to the camera.
2. Tap **Stream Settings**.

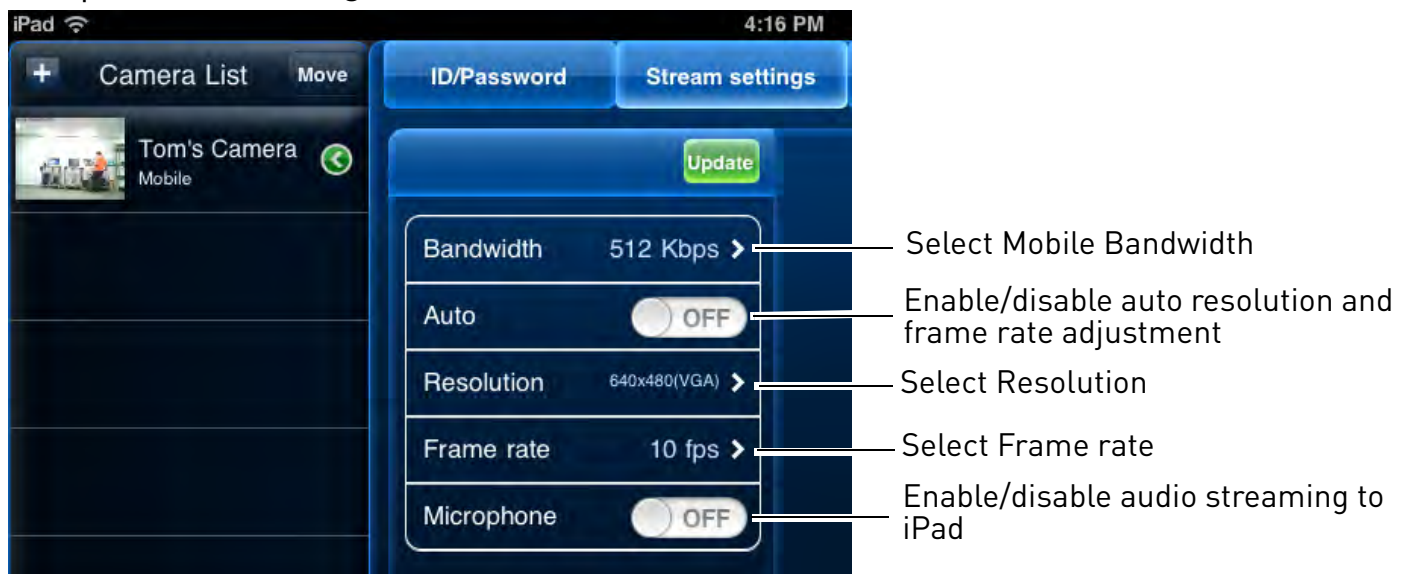

3. Under **Bandwidth**, select the bandwidth for your mobile connection. If you are mainly connecting using WiFi, you may set this setting higher.
4. Under **Auto**, select **ON** to have the camera automatically select the resolution and frame rate based on available bandwidth. Or, select **OFF** to manually select the resolution and frame rate. If you select OFF, configure the following:
 - Under **Resolution**, select the resolution that will be used when connecting to the camera using a smart phone or tablet: **320x240 (QVGA)** or **640x480 (VGA)**. Tap **Done** to confirm.


- Under **Frame rate**, select the frame rate that will be used when connecting to the camera using a smart phone or tablet between **30fps** (highest) and **1fps** (lowest). Tap **Done** to confirm.

5. Under **Microphone**, select **OFF** to turn off audio streaming to your mobile device or tap to select **ON** to turn on audio streaming to your mobile device.

6. Tap **Update** to save your settings.

5.4.5 EDITING CAMERA VIDEO SETTINGS

1. In Camera List, tap  next to the camera.
2. Tap **Video Settings**.
3. Tap **Video**.

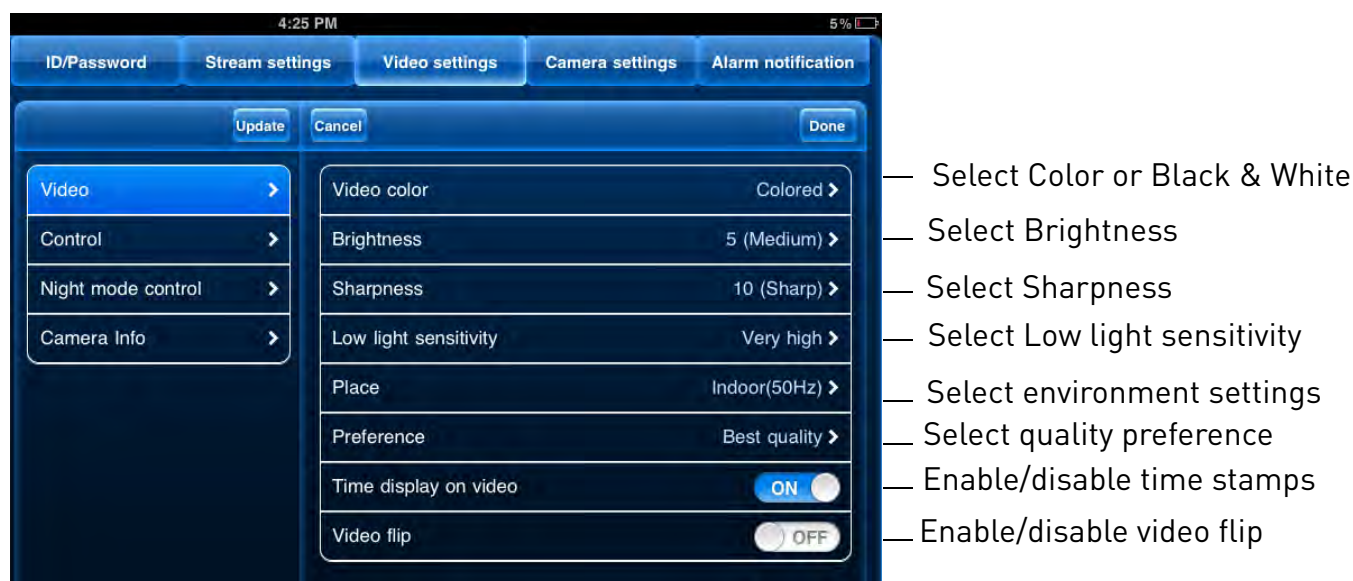

4. Configure the following:
 - **Video color:** Select **Colored** to view the camera in color or select **Black & white**. Tap **Done** to return to Video settings.
 - **Brightness:** Manually adjust the brightness of the image between **10** (highest) and **1** (lowest). Tap **Done** to return to Video settings.
 - **Sharpness:** Manually adjust the sharpness of the image between **10** (highest) and **1** (lowest). Tap **Done** to return to Video settings.
 - **Low Light Sensitivity:** Set the camera's sensitivity in low light environments between **Very High** (highest), **High**, and **Normal** (lowest). Tap **Done** to return to Video settings.
 - **Place:** Select **Outdoor** for well lit environments. Select **Indoor** if you notice strip lines in the image or if the picture is too dark on the **Outdoor** video setting. Select **Indoor**

+ **Sunlight** if the picture is too bright on the Indoor Video setting. If you select an indoor setting, select **60Hz** or **50Hz** to adjust the camera for the frequency of your indoor lighting. Tap **Done** to return to Video settings.

- **Preference:** Select whether you would like the camera to reduce the image quality or the frame rate when bandwidth increases or decreases. Select **Video Motion** to have the camera maintain the frame rate and reduce image quality when bandwidth is insufficient. Select **Image Quality** to have the camera maintain image quality and reduce frame rate when bandwidth is insufficient. Select **Better Quality** to have the camera maintain frame rate and increase quality when bandwidth is sufficient. Select **Best Quality** to have the camera maintain the frame rate and increase quality to the maximum speed of the connection. Tap **Done** to return to Video settings.
- **Time Display on Video:** Select **ON** to enable time stamps on video or **OFF** to disable time stamps.
- **Video flip:** Select **ON** to flip the camera image vertically and horizontally or select **OFF** for the normal orientation. This is useful if the camera has been mounted to a wall or ceiling upside down.


5. Tap **Update** to save your settings.

5.4.6 CONFIGURING LED CONTROL AND MOTION DETECTION SENSITIVITY

Configure the behavior of the camera status and network LED's. This is useful if you want the camera to be harder to spot at night. You can also configure the sensitivity for video motion detection.

To configure LEDs and motion detection sensitivity:

1. In Camera List, tap  next to the camera.
2. Tap **Video Settings**. Then tap **Control**.

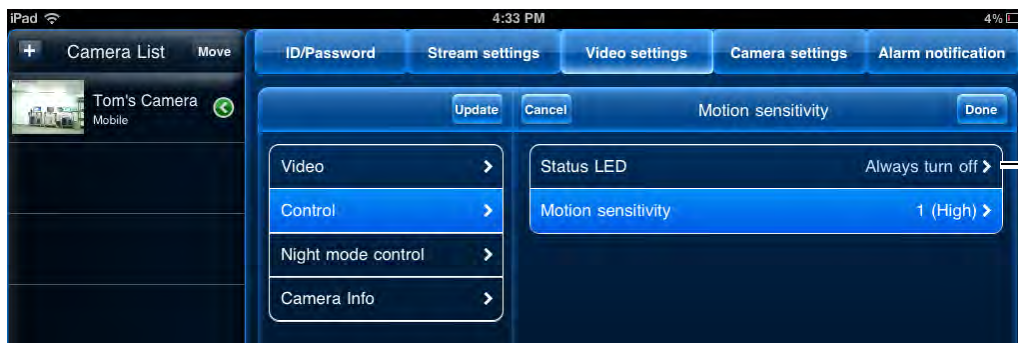

Set control settings for Status and Network LED's


3. Under **Status LED**, select one of the following:

- **Normal:** Status and network LED's will function as normal. For details on LED functions, see "Camera Overview" on page 1.
- **Always turn off:** Status and network LED's are turned off at all times.
- **Turn off after network connected:** Status and Network LED's turn on when the camera is powered on and turn off once a network connection is made.

NOTE: This does not affect the SD LED. Removing the microSD card will turn off the SD LED, but it will also disable microSD recording.

4. Tap **Done** to return to the Control menu.

5. Under **Motion Sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection. Tap Control to return to the Control menu.

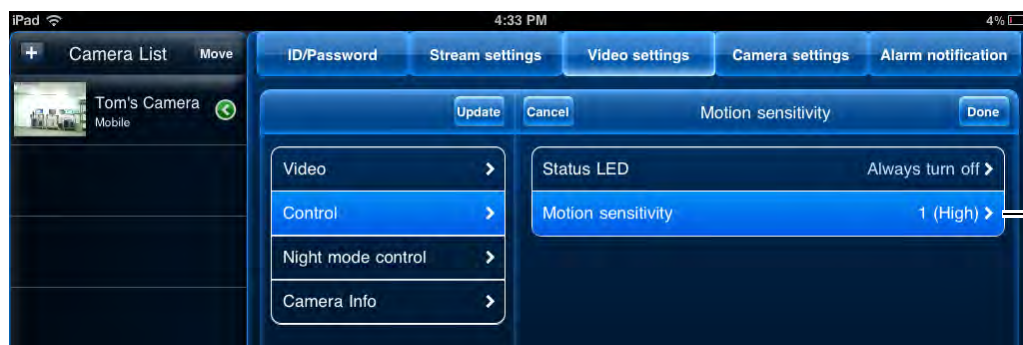

Set video motion detection sensitivity

NOTE: This setting does not affect the PIR motion detector.

6. Tap **Update** to save your settings.


5.4.7 CONFIGURING NIGHT MODE SETTINGS

Configure when the camera uses day or night mode. When day mode is on, the camera sees in color. When night mode is on, the camera sees in black and white, and the Infrared LED turns on to enable night vision.

To configure Day/Night mode:


1. In Camera List, tap  next to the camera you would like to edit.

2. Tap **Video Settings**. Then tap **Night Mode Control**.

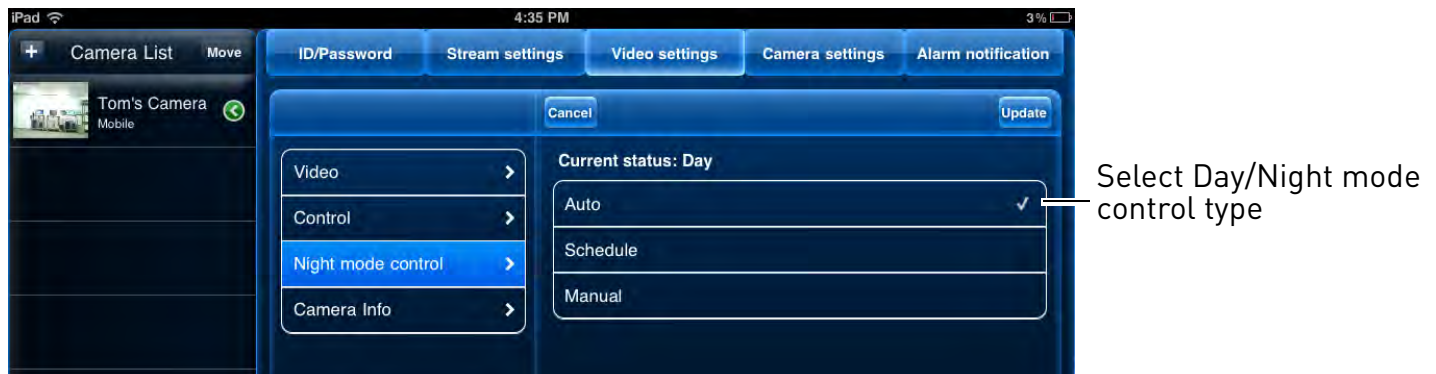

3. Select one of the following:

- **Auto:** Camera will automatically switch between day mode or night mode, based on the amount of light in the room.
- **Schedule:** Camera will switch between day mode and night mode at a scheduled times each day. If using this option, tap under Schedule time of night mode, use the sliders to set the **Start** time (when night mode begins each day) and **End** time (when night mode ends each day), then tap **Done**.

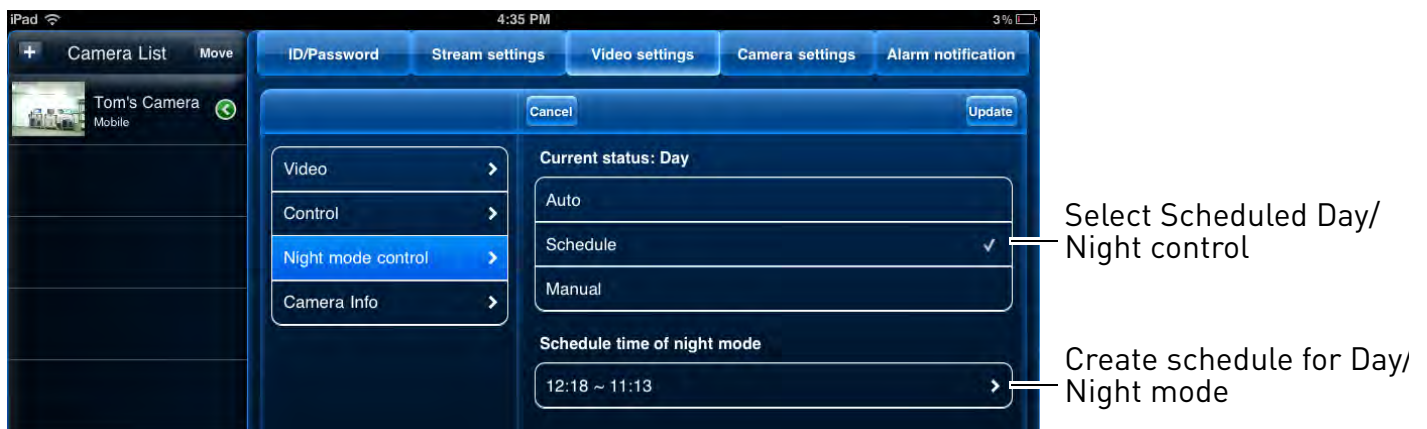

- **Manual:** Manually select day mode or night mode. If using this option, select **Day** for day mode or **Night** for night mode.

4. Tap **Update** to save your changes.


5.4.8 EDITING CAMERA WIRED NETWORK SETTINGS

Configure the camera IP address when connected using Ethernet. Select DHCP or Fixed IP.

To edit camera wired network settings:

1. In Camera List, tap  next to the camera you would like to edit.

2. Tap **Camera Settings**.
3. Tap **Network** then **Wired Network**.

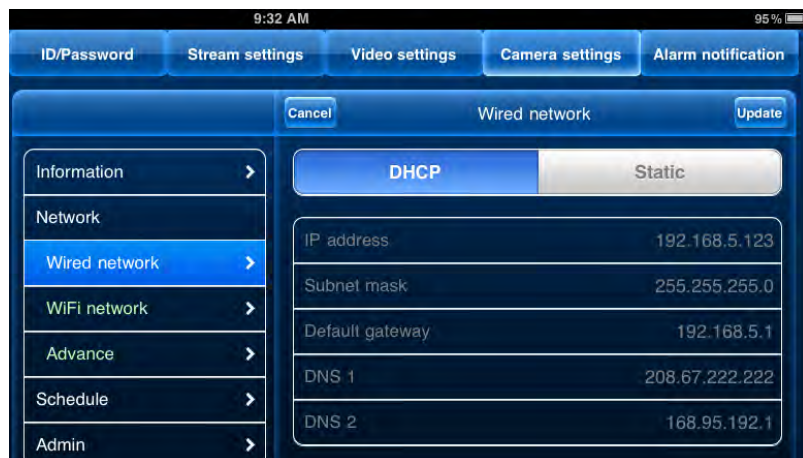

— Select DHCP or Static

— If Static, configure IP address information

4. Select **DHCP** (recommended) to allow the camera to automatically obtain an IP address from the router or **Static** to use fixed IP address settings. If you select Static, configure your **IP Address**, **Subnet mask**, **Default gateway**, **DNS1**, and **DNS2**.
5. Tap **Update** to save your settings.


5.4.9 EDITING CAMERA WIFI NETWORK SETTINGS

Configure WiFi network settings for the camera. To setup the camera with a WiFi network, see “iPad WiFi Setup” on page 22.

To edit camera WiFi settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.

3. Tap **Network** then **WiFi Network**.

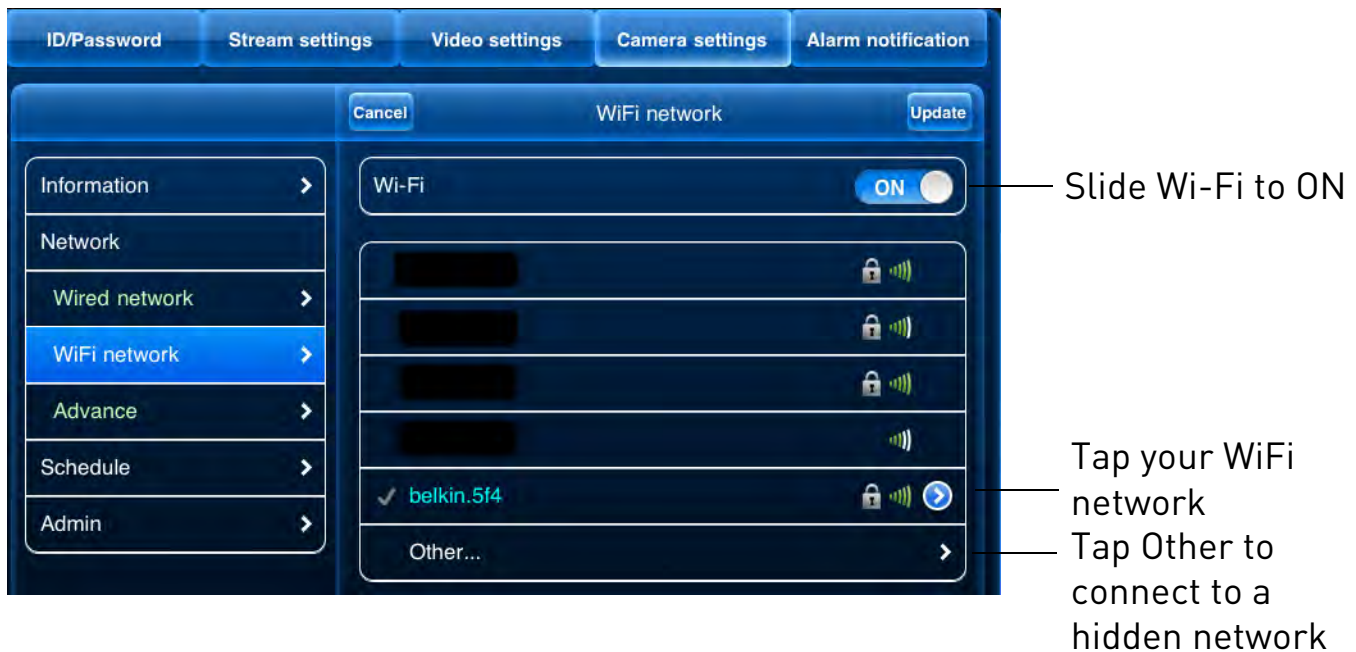

4. Slide **WiFi** to **ON** to enable WiFi on the camera and scan for available networks.
5. Tap a WiFi network and enter the password to connect.
 - To connect to a hidden WiFi network, tap **Other**. Enter the SSID and select the security type and tap **Done**. Tap the network name from the list and enter the password.
6. Wait for the update to complete.
7. Remove the Ethernet cable from the camera. It will connect to the WiFi network. When it is connected, the blue Network LED will be on or flashing.
8. Tap  next to the camera to exit the edit camera screen.
9. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.

5.4.10 ENABLING EMAIL NOTIFICATIONS

Configure email alarms. The camera can be set up to send email alerts when motion is detected. Email alarms include a .jpg attachment.

To enable email notifications:

1. In Camera List, tap  next to the camera.

2. Tap **Camera Settings**.



— Enable/disable email notifications

— Select motion sensitivity for video motion

— Select email triggers

— Enable/disable email notifications

— Add up to 3 email recipients

English

3. Tap **Schedule** then **Email Alarm**.

4. Under **Email trigger**, select **ON** to enable email notifications or **OFF** to disable. Then under **Send Email**, select **ON** to enable email notifications.
5. Under **Motion sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection. Tap Email alarm to return to the Email Alarm menu.

NOTE: This setting does not affect the PIR motion detector.

6. Check the following trigger options for email alarms:

- **Motion:** Use Video motion detection to trigger email alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.

- **PIR:** Use the PIR motion detector to trigger email alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Schedule:** Send email alarms based on the settings configured in the Scheduling menu.

7. Enter up to 3 email addresses under **Recipient1~3** that will receive email alarms.

8. Tap **Update** to save your changes.

NOTE: If you want to use a custom SMTP server to send Email messages, click **SMTP Settings**, enter your SMTP server information, and tap **OK**.

5.4.11 ENABLING SPEAKER ALARMS

Configure audio alarms using a speaker (not included) connected to the camera. Audio alarms can be set up to go off when the camera detects motion. This is helpful if you want to scare off intruders.

To configure speaker alarms:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Schedule** then **Speaker Alarm**.



— Select speaker alarm triggers

— Select number of times speaker alarm will repeat

— Test speaker alarm

4. Under **Speaker Alarm Trigger**, check the triggers that will cause speaker alarms:
 - **Motion:** Use Video motion detection to trigger audio alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
 - **PIR:** Use the PIR motion detector to trigger audio alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

 - **Schedule:** Create audio alarms based on the settings set in the Scheduling menu.
 - **Disable:** Disable speaker alarms.
5. Under **Alarm Loop Times**, select the number of times you would like the speaker alarm to repeat when alarms occur. Tap **Done**.
6. Tap **Alarm Test** to sound a test alarm.
7. Tap **Update** to save your settings.

5.4.12 CONFIGURING MICROSD RECORDING

Configure video recording to the microSD card (required; not included). To playback recordings saved on the microSD card, use L-View or the iPhone, iPad, or Android apps.

To configure microSD card recording:

1. Make sure a microSD card (not included) is inserted into the camera. It is recommended to format the microSD card before using it with the camera.
2. In Camera List, tap  next to the camera you would like to edit.
3. Tap **Camera Settings**.

4. Tap **Schedule** then **SD-Card**.



Enable microSD recording

Select Always recording or Schedule recording

Select if you want the camera to overwrite (Circular recording) or stop recording when the microSD card is full

5. Under **Recording**, select **ON** to enable microSD recording or **OFF** to disable.

6. Check one of the following recording options:

- **Always Recording:** Camera will record continuously at all times.
- **Schedule Recording:** Camera will record according to settings set in the recording schedule.

NOTE: To enable Motion detection recording using iPad, you must use Schedule recording. Then, create a schedule in the Scheduling menu with Motion trigger, PIR trigger, or both Motion trigger and PIR trigger selected.

7. Check **Circular recording** to set the camera to overwrite the oldest recordings when the microSD card is full or select **Stop recording** to set the camera to stop recording when the microSD card is full.


8. Tap **Update** to save your settings.

5.4.13 CONFIGURING THE CAMERA RECORDING AND ALARM SCHEDULE

Configure schedules for recording and alarms. Schedules can be configured separately for alarms and recording. You can configure up to 12 schedules.

To create a schedule for alarms or recording:

1. First, you must enable alarms or recording to use the schedule.
2. In Camera List, tap  next to the camera you would like to edit.
3. Tap **Camera Settings**.
4. Tap **Schedule** then **Scheduling**.
5. Tap **Add Schedule**.

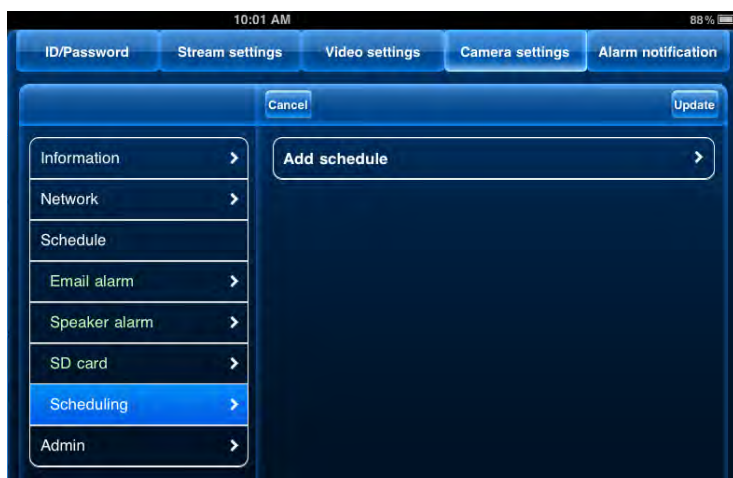


6. Under **Email Alarm**, check **Motion trigger** to send an email alarm based on video motion, check **PIR trigger** to use the PIR motion sensor, or select both.
7. Under **Speaker Alarm**, check **Motion trigger** to create an audio alarm based on video motion, check **PIR trigger** to use the PIR motion sensor, or select both.
8. Under **SD card record**, check **Continuous** for the camera to record to microSD continuously during the scheduled time. Check **Motion trigger** to record when video motion is triggered during the scheduled time, select **PIR trigger** to record when the PIR motion sensor is triggered during the scheduled time, or select both.



- Select triggers for email alarms
- Select triggers for speaker alarms
- Select triggers for microSD recording

9. Under **Time period**, select one of the following:

- **Every week:** Create a weekly recording schedule. Tap  and check the days you would like the schedule to apply to. Tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **Done**.
- **Every day:** Create a daily recording schedule. Tap  then tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **Done**.
- **Fixed time:** Create a one time schedule (for example, if you are going on vacation, and would like to record all the time). Tap  then set the **Start** and **End** using the sliders to configure the exact date and time when you would like the schedule to start and end. Tap **Done**.

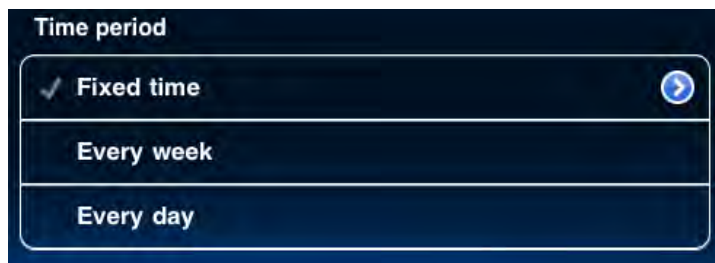

———— Configure schedule times

10. Tap **Done** to save the schedule. Tap **Update** to save your settings.

To delete a Schedule:

1. From the Scheduling menu, swipe the schedule you would like to delete from left to right.
2. Tap **Delete**.
3. Tap **Update** to save your changes.


5.4.14 CONFIGURING THE CAMERA DATE AND TIME

Configure the camera date and time. The camera syncs with an Internet NTP time server to automatically provide the correct time, once you have configured your time zone and daylight savings time settings.

To set the camera date and time:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.

3. Tap **Admin** then **Date/Time**.

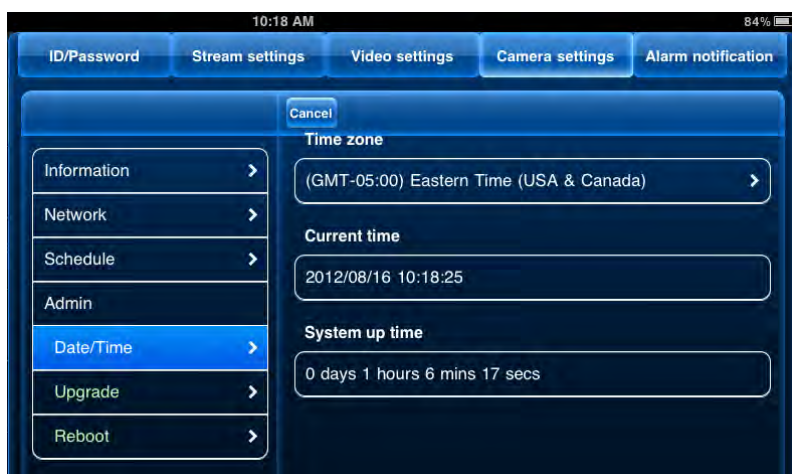


Tap Time Zone

4. Tap **Time Zone**.

5. Use the slider to select your time zone.

- If your region observes Daylight Savings Time, check **Daylight Savings Time**. Tap **Start Time** and **End Time**, use the sliders to configure the start and end time for Daylight Savings Time and then tap **Done**.

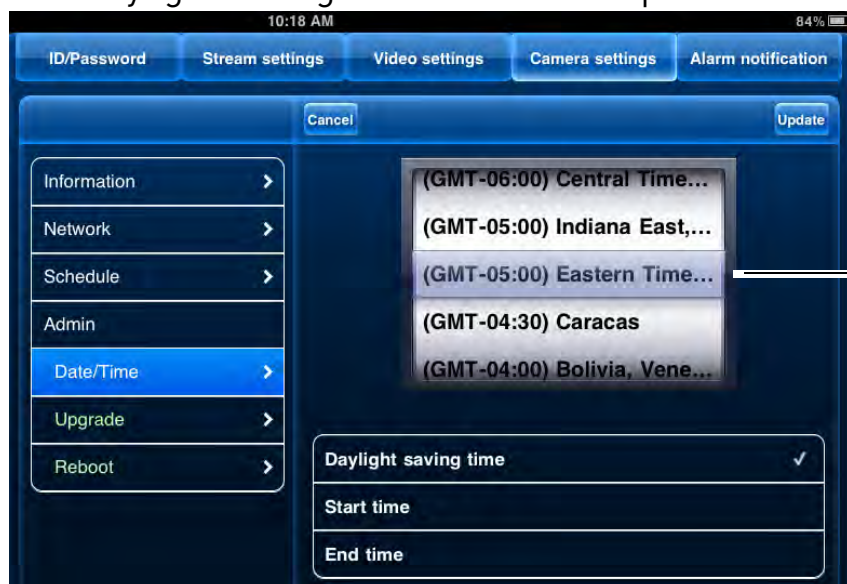

Select your Time Zone

Enable Daylight Savings and configure start and end times for daylight savings

6. Tap **Update** to save your changes. Tap **OK**. The camera will reboot to apply the new time zone.

5.4.15 REBOOTING THE CAMERA

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Admin** then **Reboot**.

4. Tap **OK** to confirm.

5.5 USING LOCAL SEARCH TO ADD CAMERAS


You can use the Local Search Menu to automatically add the ID's for cameras on your local network.


To add cameras using local search:


1. Tap the Local Search button ().
2. Lorex Ping automatically scans for cameras on your local network. Tap **Search** to re-scan.

Tap search to re-scan your local network

Tap to add camera

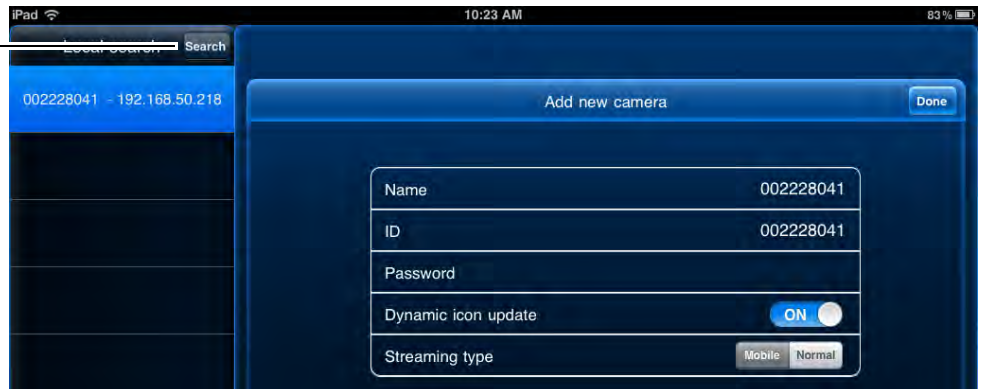

3. Tap a camera from the list. The Add camera screen comes on with the camera ID already entered.
4. Enter a **Name** of your choice and enter the camera **Password**. If you have not connected to your camera before, the password is **lorex**.
5. Tap **Done**. The camera is now added to camera list. Tap the Camera List button (), and then tap the camera name in Camera List to connect to the camera.



6. ANDROID APP


The app for Android is called **Lorex Ping**.

For instructions on connecting to your camera using Android, see “Connecting to your Camera on Android” on page 15.

6.1 LIVE VIEWING WITH LOREX PING FOR ANDROID

You can use Lorex Ping in portrait or landscape mode. Tilt the phone to switch between portrait or landscape.

Disconnect button
(only shown in
portrait mode)

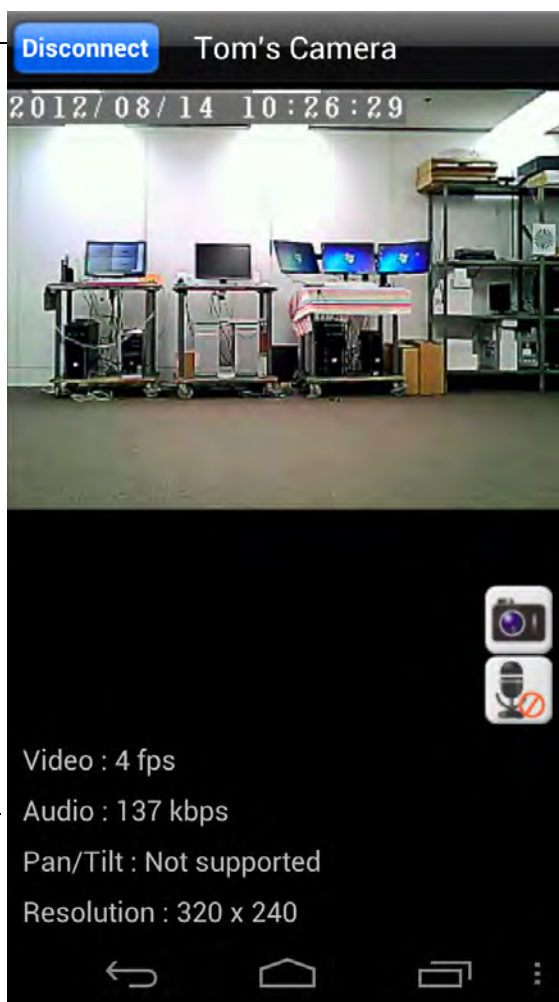

Video
information

Save Snapshot

Activate 2-way
audio (intercom)
using the phone
microphone

6.1.1 USING 2-WAY AUDIO (INTERCOM)

1. Touch  to activate 2-way-audio (intercom) using the phone microphone (speaker required; not included).
2. Touch  again to turn off 2-way audio.

6.1.2 SAVING SNAPSHOTS

- Touch  to take a snapshot from the camera. Snapshots are saved in .png format to the *DCIM/Lorex Ping* folder on your device. To view or copy Snapshots to your computer, connect your device to your computer using a USB cable. See you Android device's Instruction Manual for details.

6.2 PLAYING BACK VIDEO RECORDED ON MICROSD ON ANDROID


You can playback video recorded on the camera microSD card (not included) on your Android phone or tablet. For details on setting up microSD recording, see “Enabling microSD Recording” on page 108.

NOTE: You must be connected to the same WiFi network or router as the camera to access microSD recordings.


To play back video recorded on the camera microSD card:

1. From the Camera List, tap .


2. Tap **SD card playback**.

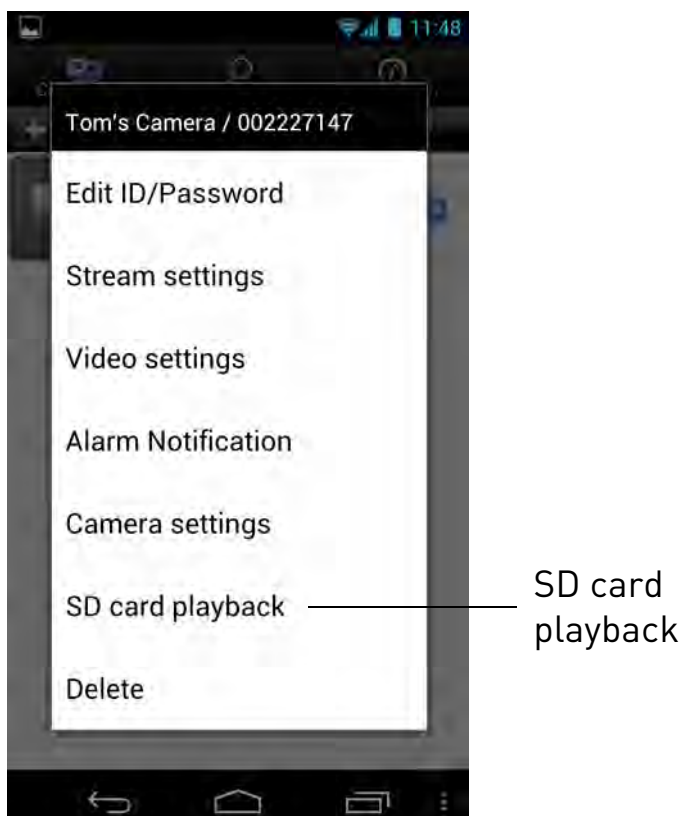

3. The camera scans for available video files. Files are shown in a list according to the date they were recorded.

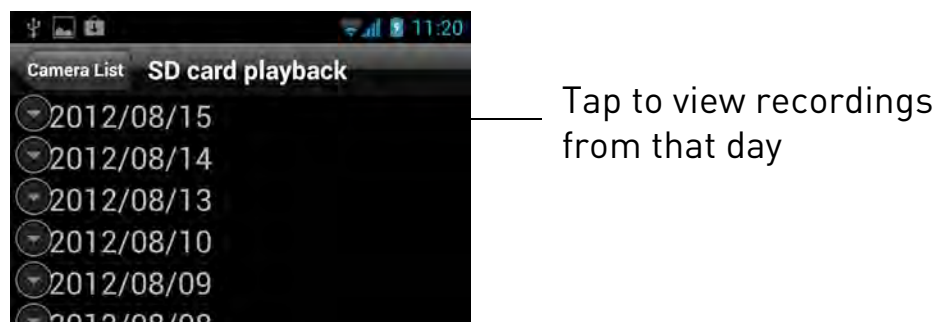

4. Tap a day to view recordings for that day. Tap a recording to view it.

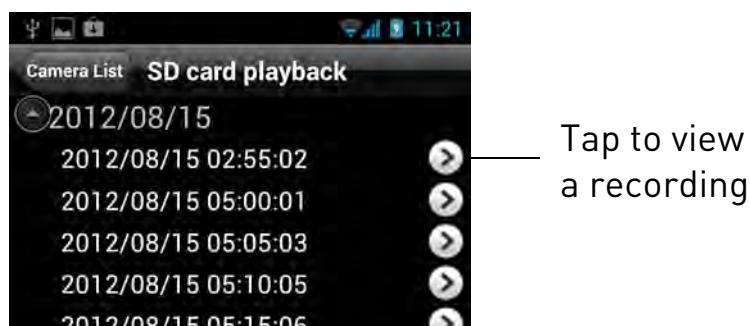

5. Tap **Disconnect** to return to the recording list.


6.3 USING CAMERA LIST TO EDIT CAMERA SETTINGS

You can use the Camera List to adjust the connection or other settings for your camera.

IMPORTANT: Some menus below are only available if your device is on the same local network as the camera. If menus are missing, connect to the same WiFi network or router as the camera using your phone.

To access Camera Settings:

1. Tap Camera List . Then tap  next to the camera you would like to edit. The Camera List Settings Menu appears.

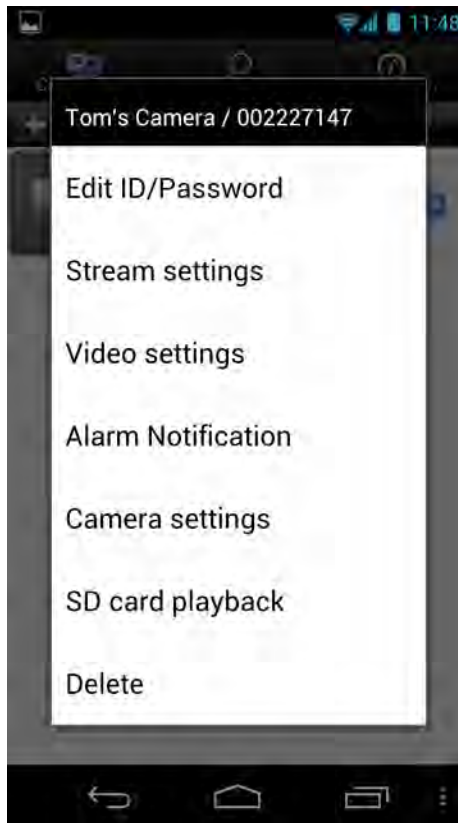

Camera List Settings Screen


2. For certain menus, you will need to enter the camera admin user name and password before you may change settings. By default, the admin user name is **admin** and the password is **left blank**.

6.3.1 EDITING CAMERA CONNECTION SETTINGS

You can edit your camera connection information. This is useful if you change the password of the camera or if you want to save the admin user name and password, so you don't have to enter it to make settings changes.

To edit camera connection settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Edit ID/Password**.

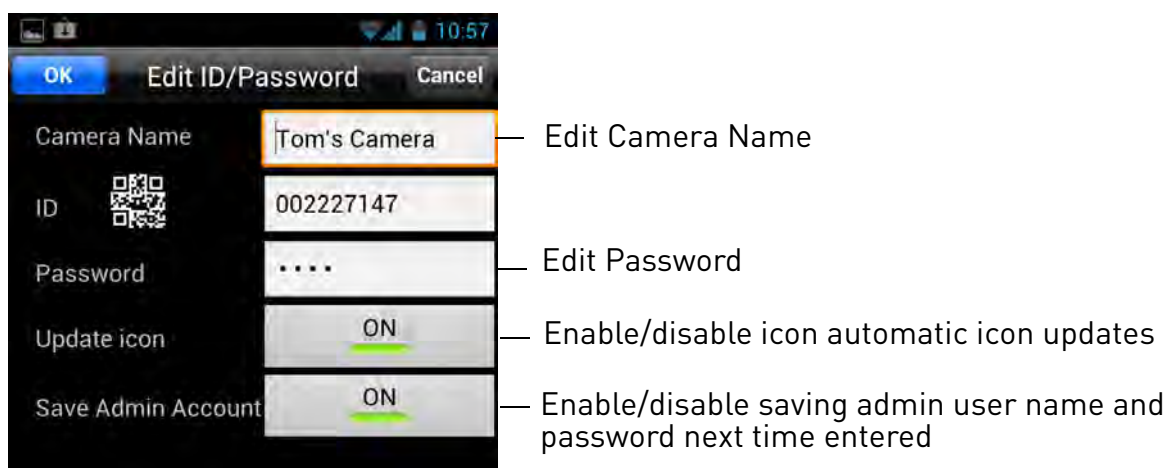

3. Edit the **Camera Name** and **Password** as needed.
4. Under **Update icon**, select **ON** for the camera to update the icon shown in camera list every time you connect to it or **OFF** for the icon to remain as is.
5. Under **Save Admin Account**, select **ON** to save the admin user name and password, so you do not have to enter it when making setting changes. Or, select **OFF** to not save the admin user name and password. The admin user name and password will be saved the next time you enter it to make a setting change.
6. Tap **OK** to save changes.

6.3.2 DELETING CAMERAS FROM CAMERA LIST

1. In Camera List, tap  next to the camera you would like to delete.
2. Tap **Delete**.


6.3.3 EDITING CAMERA MOBILE STREAMING SETTINGS

Configure the camera image quality settings for streaming to mobile devices (i.e. smart phones and tablets). Please note that less bandwidth is generally available over mobile

networks than over WiFi or Ethernet.

To edit mobile streaming settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Stream Settings**.

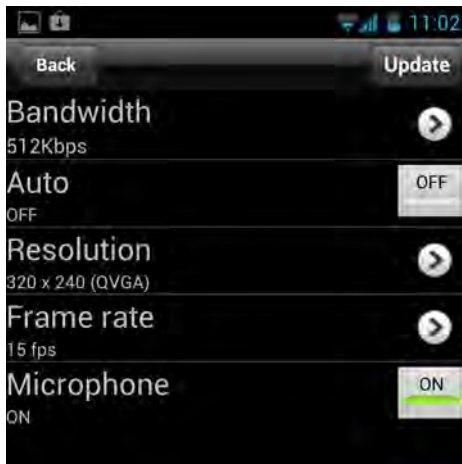


- Select Mobile Bandwidth
- Enable/disable auto resolution and frame rate adjustment
- Select Resolution
- Select Frame rate
- Enable/disable audio streaming to Android device

3. Under **Bandwidth**, select the bandwidth for your mobile connection. If you are mainly connecting using WiFi, you may set this setting higher.
4. Under **Auto**, tap to select **ON** to have the camera automatically select the resolution and frame rate based on available bandwidth. Or, select **OFF** to manually select the resolution and frame rate. If you select **OFF**, configure the following:
 - Under **Resolution**, select the resolution that will be used when connecting to the camera using a smart phone or tablet: **160x120 (Q2WGA)**, **320x240 (QVGA)**, or **640x480(VGA)**.
 - Under **Frame rate**, select the frame rate that will be used when connecting to the camera using a smart phone or tablet between **30fps** (highest) and **1fps** (lowest).
5. Under **Microphone**, tap to select **OFF** to turn off audio streaming to your mobile device or tap to select **ON** to turn on audio streaming to your mobile device.
6. Tap **Update** to save your settings.

6.3.4 EDITING CAMERA VIDEO SETTINGS

1. In Camera List, tap  next to the camera you would like to edit.

2. Tap **Video Settings**. Then tap **Video**.

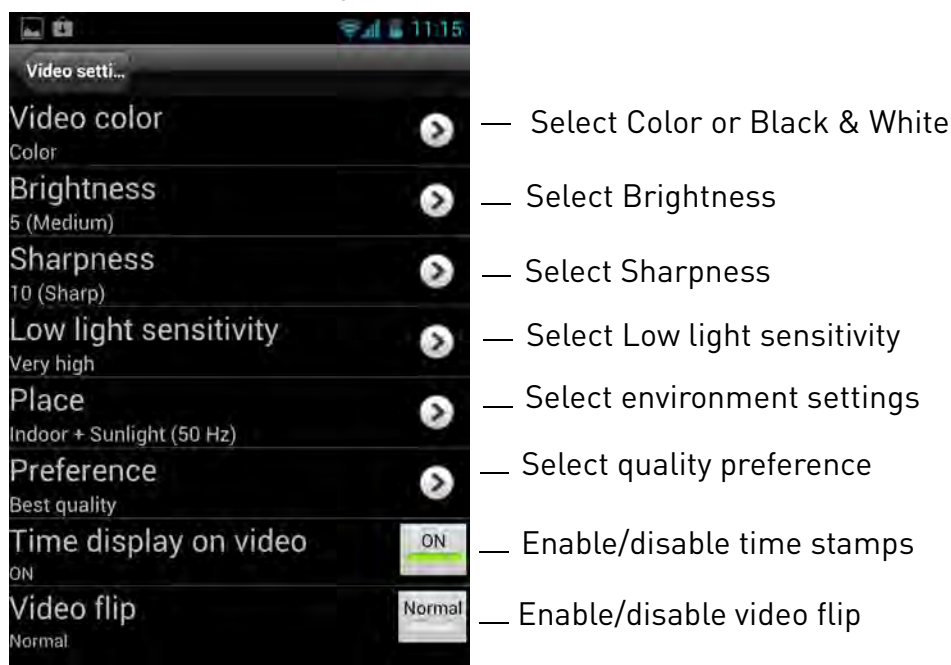

3. Configure the following:

- **Video color:** Select **Color** to view the camera in color or select **Black & white**.
- **Brightness:** Manually adjust the brightness of the image between **10** (highest) and **1** (lowest).
- **Sharpness:** Manually adjust the sharpness of the image between **10** (highest) and **1** (lowest).
- **Low Light Sensitivity:** Set the camera's sensitivity in low light environments between **Very High** (highest), **High**, and **Normal** (lowest).
- **Place:** Select **Outdoor video** for well lit environments. Select **Indoor Video** if you notice strip lines in the image or if the picture is too dark on the Outdoor video setting. Select **Indoor video + sunlight** if the picture is too bright on the Indoor Video setting. If you select an indoor settings, select **60Hz light freq** or **50Hz light freq** to adjust the camera for the frequency of your indoor lighting.
- **Favor/Preference:** Select whether you would like the camera to reduce the image quality or the frame rate when bandwidth increases or decreases. Select **Video Motion** to have the camera maintain the frame rate and reduce image quality when bandwidth is insufficient. Select **Image Quality** to have the camera maintain image quality and reduce frame rate when bandwidth is insufficient. Select **Better Quality** to have the camera maintain frame rate and increase quality when bandwidth is sufficient. Select **Best Quality** to have the camera maintain the frame rate and increase quality to the maximum speed of the connection.


- **Time Display on Video:** Tap to select **ON** to enable time stamps on video or **OFF** to disable time stamps.
 - **Video flip:** Tap to select **Video Flip** to flip the camera image vertically and horizontally or select **Normal** for the normal orientation. This is useful if the camera has been mounted to a wall or ceiling upside down.
4. Tap **Video Settings** when finished making changes, then tap **Update** to save your settings.

6.3.5 CONFIGURING LED CONTROL AND MOTION DETECTION SENSITIVITY

Configure the behavior of the camera status and network LED's. This is useful if you want the camera to be harder to spot at night. You can also configure the sensitivity for video motion detection.

To configure LEDs and motion detection sensitivity:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Video Settings**. Then tap **Control**.

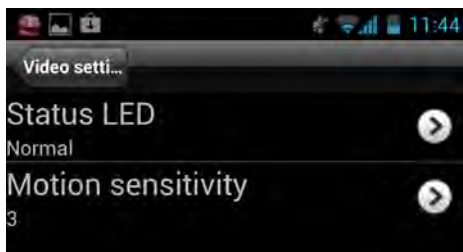

- Select Network and Status LED behavior
- Select Video motion detection sensitivity

3. Under **Status LED**, select one of the following:
 - **Normal:** Status and network LED's will function as normal. For details on LED functions, see "Camera Overview" on page 1.
 - **Always turn off:** Status and network LED's are turned off at all times.
 - **Turn off after network connected:** Status and Network LED's turn on when the camera is powered on and turn off once a network connection is made.
- NOTE:** This does not affect the SD LED. Removing the microSD card will turn off the SD LED, but it will also disable microSD recording.
4. Under **Motion Sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be

triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection.

NOTE: This setting does not affect the PIR motion detector.


5. Tap **Video Settings** when finished making changes, then tap **Update** to save your settings.

6.3.6 CONFIGURING NIGHT MODE SETTINGS

Configure when the camera uses day or night mode. When day mode is on, the camera sees in color. When night mode is on, the camera sees in black and white, and the Infrared LED turns on to enable night vision.


To configure Day/Night mode:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Video Settings**. Then tap **Night Mode Control**.

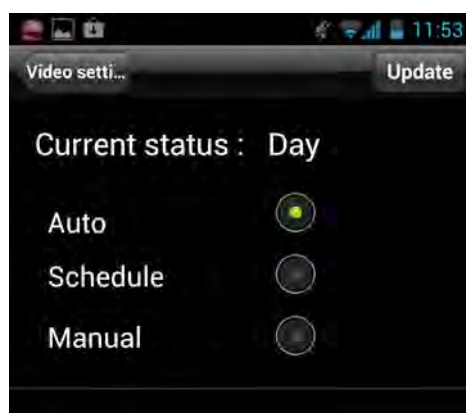


3. Select one of the following:
 - **Auto:** Camera will automatically switch between day mode or night mode, based on the amount of light in the room.
 - **Schedule:** Camera will switch between day mode and night mode at a scheduled times each day. If using this option, tap under Schedule time of night mode, use the

sliders to set the **Start** time (when night mode begins each day) and **End** time (when night mode ends each day), then tap **OK**.

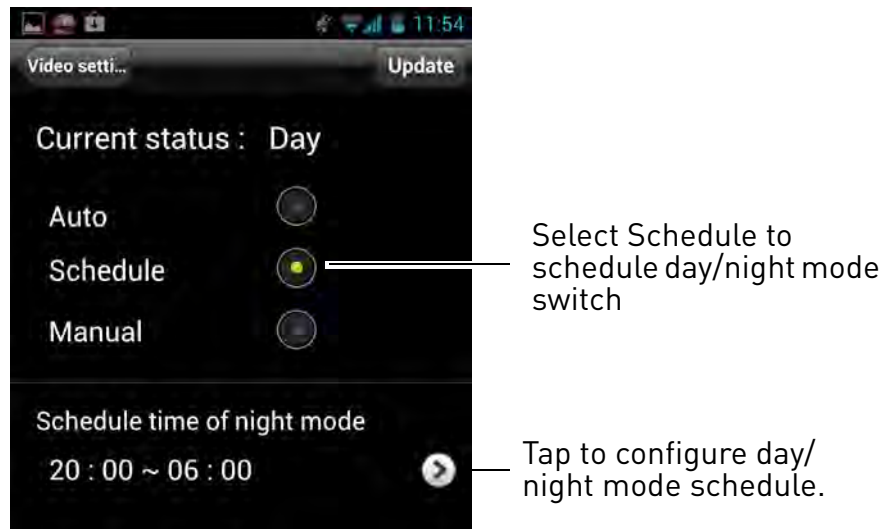

- **Manual:** Manually select day mode or night mode. If using this option, select **Day** for day mode or **Night** for night mode.

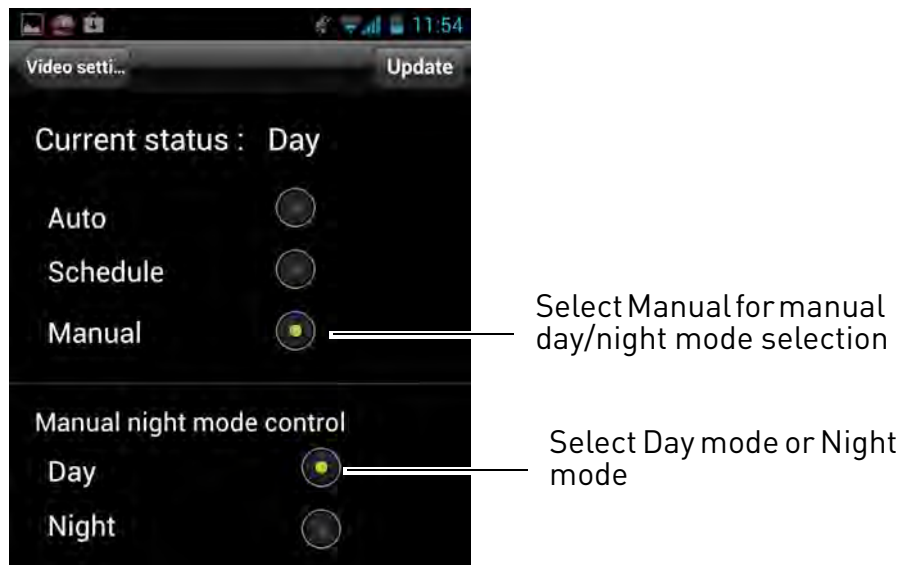


4. Tap **Update** to save your changes.

6.3.7 ENABLING PUSH ALARM NOTIFICATIONS

Push Alarm Notifications can be set up to create a notification straight to your Android device when motion or sound is detected by the camera. Push Alarm Notifications go


directly to the notifications area on your device.

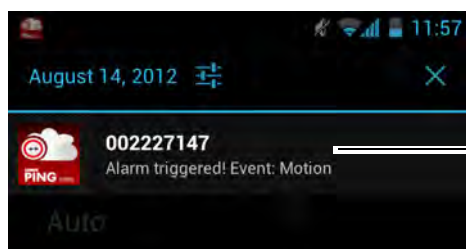

Push notification sent to device notifications list

To enable Push Alarm Notifications:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Alarm Notification**.

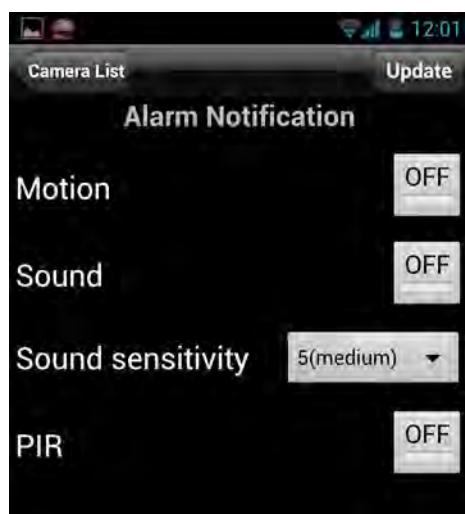

Enable/disable push notifications for video motion detection

Enable/disable push notifications for sound

Select sensitivity for sound push notifications

Enable/disable push notifications for PIR motion detection

3. Under **Motion**, tap to select **ON** to enable Push Alarm Notifications when motion is detected using video motion detection or **OFF** to disable.
4. Under **PIR**, tap to select **ON** to enable Push Alarm Notifications when motion is detected using the PIR motion sensor or **OFF** to disable.
5. Under **Sound**, tap to select **ON** to enable Push Alarm Notifications when sound is detected by the camera or **OFF** to disable. Under Sound Sensitivity, select a sensitivity for Sound Push Alarm Notifications between 1 (lowest) and 10 (highest).
6. Tap **Update** to save your settings.

6.3.8 EDITING CAMERA WIRED NETWORK SETTINGS

Configure the camera IP address when connected using Ethernet. Select DHCP or Fixed IP.

To edit camera wired network settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Network** then **Wired Network**.



Select DHCP (recommended) or Static for a fixed IP address
If Static, configure IP address information as needed

4. Select **DHCP** (recommended) to allow the camera to automatically obtain an IP address from the router or **Static** to use fixed IP address settings. If you select Static, configure your **IP Address**, **Subnet mask**, **Default gateway**, **DNS1**, and **DNS2**.
5. Tap **Update** to save your settings.

6.3.9 EDITING CAMERA WIFI NETWORK SETTINGS

Configure WiFi network settings for the camera. To setup the camera with a WiFi network, see “Android WiFi Setup” on page 23.

To edit camera WiFi settings:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.

3. Tap **Network** then **WiFi Network**.



Check to enable WiFi

Tap the network you would like to connect to and enter the password

Tap Other to add a hidden WiFi network

4. Check WiFi to enable WiFi on the camera and scan for available networks.
5. Tap a WiFi network and enter the password to connect.
 - To connect to a hidden WiFi network, tap **Other**. Enter the **SSID** and select the security type and tap **Add**. Tap the network name from the list and enter the password.
6. Wait for the update to complete.
7. Remove the Ethernet cable from the camera. It will connect to the WiFi network. When it is connected, the blue Network LED will be on or flashing.
8. Press **Camera Settings** then **Camera List** to exit the edit camera screen.
9. Tap the camera in the Camera List to connect. If you cannot connect, check to make sure you have entered the correct wireless password and that the camera is in signal range of your wireless router.


6.3.10 ENABLING EMAIL NOTIFICATIONS

Configure email alarms. The camera can be set up to send email alerts when motion is detected. Email alarms include a .jpg attachment.

To enable email notifications:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.

3. Tap **Schedule** then **Email Alarm**.

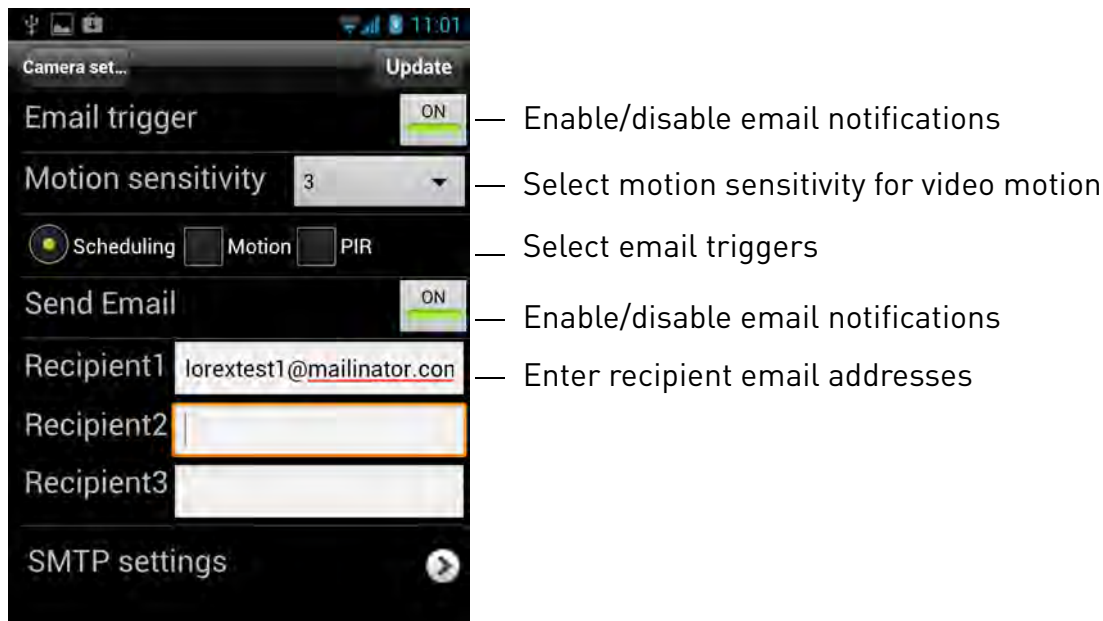

4. Under **Email trigger**, tap to select **ON** to enable email notifications or **OFF** to disable. Then under **Send Email**, tap to select **ON** to enable email notifications.
5. Under **Motion sensitivity**, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection.
- NOTE:** This setting does not affect the PIR motion detector.

6. Select from the following trigger options for email alarms:

- **Motion:** Use Video motion detection to trigger email alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
- **PIR:** Use the PIR motion detector to trigger email alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Scheduling:** Send email alarms based on the settings configured under Schedule.

7. Enter up to 3 email addresses under **Recipient1~3** that will receive email alarms.
8. Tap **Update** to save your changes.

NOTE: If you want to use a custom SMTP server to send Email messages, click **SMTP Settings**, enter your SMTP server information, and tap **OK**.

6.3.11 ENABLING SPEAKER ALARMS

Configure audio alarms using a speaker (not included) connected to the camera. Audio alarms can be set up to go off when the camera detects motion. This is helpful if you want to scare off intruders.

To configure speaker alarms:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Schedule** then **Speaker Alarm**.



Enable/disable speaker alarms

Select number of times speaker alarm will repeat

Select speaker alarm triggers

Test speaker alarm

4. Under **Speaker Alarm Trigger**, tap to select **ON** to enable speaker alarms or **OFF** to disable.
5. Under **Alarm Loop Times**, select the number of times you would like the speaker alarm to repeat when alarms occur.
6. Select from the following speaker alarm triggers:
 - **Motion:** Use Video motion detection to trigger audio alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
 - **PIR:** Use the PIR motion detector to trigger audio alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Scheduling:** Create audio alarms based on the settings set in the Schedule.

7. Tap **Alarm Test** to sound a test alarm.
8. Tap **Update** to save your settings.

6.3.12 ENABLING MICROSD RECORDING

Configure video recording to the microSD card (required; not included). To playback recordings saved on the microSD card, use L-View or the iPhone, iPad, or Android apps.

To configure microSD card recording:

1. Make sure a microSD card (not included) is inserted into the camera. It is recommended to format the microSD card before using it with the camera.
2. In Camera List, tap  next to the camera you would like to edit.
3. Tap **Camera Settings**.
4. Tap **Schedule** then **SD-Card**.



Enable/disable microSD recording

Select always recording or schedule recording

Select Circular recording to overwrite oldest recordings when microSD card is full or Stop recording to stop recording when microSD card is full

5. Under Recording, tap to select **ON** to enable microSD recording or **OFF** to disable.
6. Select one of the following recording options:
 - **Always Recording:** Camera will record continuously at all times.

- **Schedule Recording:** Camera will record according to settings set in the recording schedule.

NOTE: To enable Motion detection recording using Android, you must use Schedule recording. Then, create a schedule in the Scheduling menu with **Motion trigger**, **PIR trigger**, or both Motion trigger and PIR trigger selected.


- Under **When disk space full** select **Circular** recording to set the camera to overwrite the oldest recordings when the microSD card is full or select Stop recording to set the camera to stop recording when the microSD card is full.
- Tap **Update** to save your settings.

6.3.13 CONFIGURING THE RECORDING AND ALARM SCHEDULE

Configure schedules for recording and alarms. Schedules can be configured separately for alarms and recording. You can configure up to 12 schedules.

To create a schedule for alarms or recording:


- First, you must enable alarms or recording to use the schedule.
- In Camera List, tap  next to the camera you would like to edit.
- Tap **Camera Settings**.
- Tap **Schedule** then **Scheduling**.
- Tap **Add Schedule**.

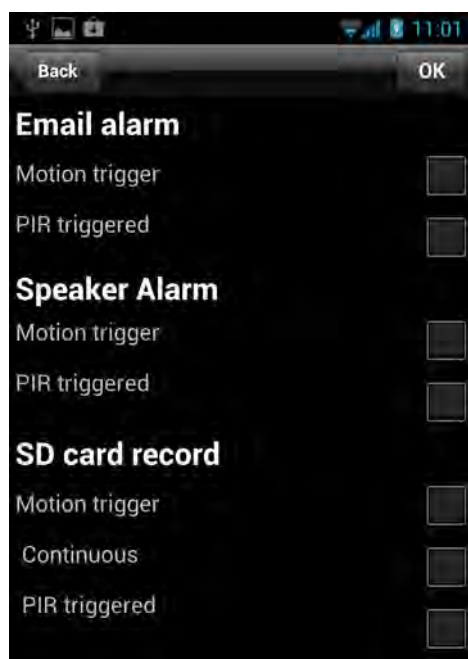

Select alarm and recording types
for the schedule

- Under **Email Alarm**, check **Motion trigger** to send an email alarm based on video motion, select **PIR trigger** to use the PIR motion sensor, or select both.

7. Under **Speaker Alarm**, check **Motion trigger** to create an audio alarm based on video motion, check **PIR trigger** to use the PIR motion sensor, or select both.
8. Under **SD card record**, check **Continuous** for the camera to record to microSD continuously during the scheduled time. Check **Motion trigger** to record when video motion is trigger during the scheduled time, select **PIR trigger** to record when the PIR motion sensor is triggered during the scheduled time or select both.
9. Under **Time period**, select one of the following:

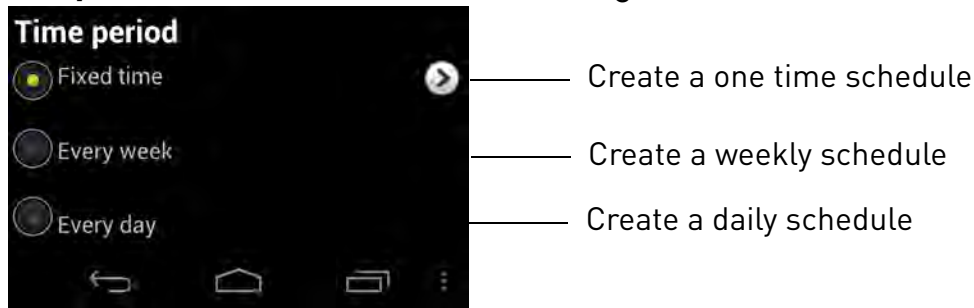


- **Every week:** Create a weekly recording schedule. Tap  and check the days you would like the schedule to apply to. Tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **OK**.
- **Every day:** Create a daily recording schedule. Tap  then tap **Start** and **End** and use the sliders to configure the start and end time for the schedule. Tap **OK**.
- **Fixed time:** Create a one time schedule (for example, if you are going on vacation, and would like to record all the time). Tap **Start** and **End** and use the sliders to configure the exact date and time when you would like the schedule to start and end. Tap **OK**.


10. Tap **OK** to save the schedule. Tap **Update** to save your settings.

To delete a Schedule:

1. From the Scheduling menu, press the Android menu button and tap **Delete**.

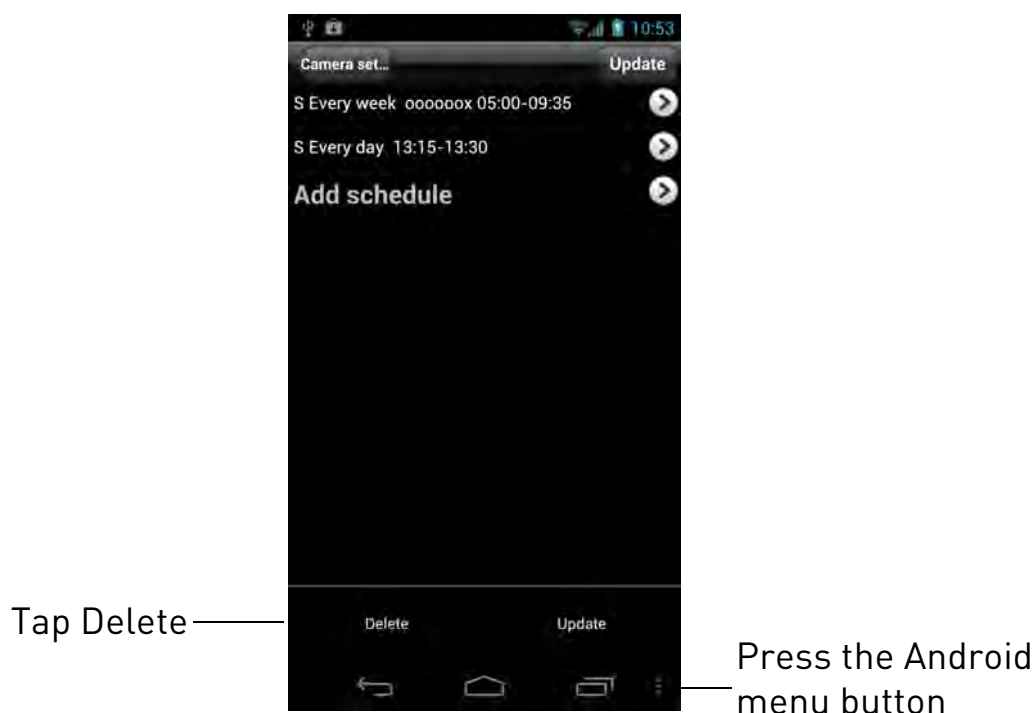

2. Select the schedule you want to delete and tap **Delete**.

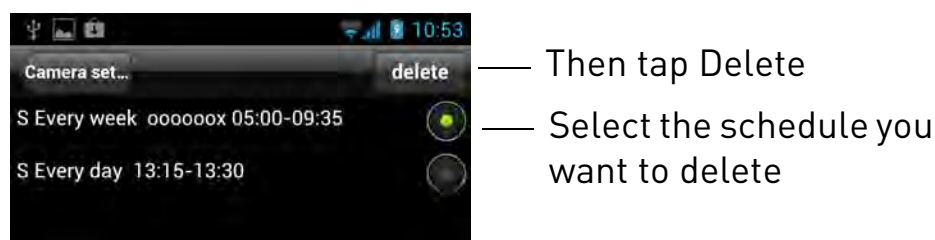

3. Tap **Update** to save your changes.

6.3.14 CONFIGURING THE CAMERA DATE AND TIME

Configure the camera date and time. The camera syncs with an Internet NTP time server to automatically provide the correct time, once you have configured your time zone and daylight savings time settings.

To set the camera date and time:

1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Admin** then **Date/Time**.

4. Tap **Time Zone**.



Tap Time Zone

5. Use the slider to select your time zone.

6. If your region observes Daylight Savings Time, check **Daylight Savings Time**. Tap **Start Time** and **End Time**, use the sliders to configure the start and end time for Daylight Savings Time and then tap **OK**.



Select Time Zone

Check to enable Daylight Savings Time adjustments

Configure Start Time and End Time for Daylight Savings Time

7. Tap **Update** to save your changes.

6.3.15 REBOOTING THE CAMERA


1. In Camera List, tap  next to the camera you would like to edit.
2. Tap **Camera Settings**.
3. Tap **Admin** then **Reboot**.
4. Tap **OK** to confirm.

6.4 USING LOCAL SEARCH TO ADD CAMERAS

You can use the Local Search Menu to automatically add the ID's for cameras on your local network.

To add cameras using local search:

1. Tap the Local Search button ().

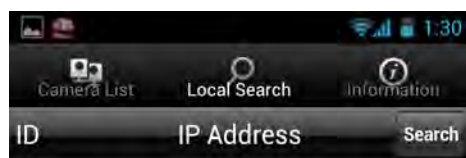

— Tap Search to re-scan your network

— Tap a camera to add the ID to your camera list


2. Lorex Ping automatically scans for cameras on your local network. Tap **Search** to re-scan.
3. Tap a camera from the list. The Add camera screen comes on with the camera ID already entered.
4. Enter a **Camera Name** of your choice and enter the camera **Password**. If you have not connected to your camera before, the password is **lorex**.
5. Tap **OK**. The camera is now added to camera list. Tap the camera name in camera list to connect to the camera.

7. CONFIGURING CAMERA SETTINGS USING A WEB BROWSER

Web Configure lets you modify camera settings using a web browser.

To access Web Configure:

1. Open L-View, right-click on the camera ID under Auto Search, and click **Web Configure**.

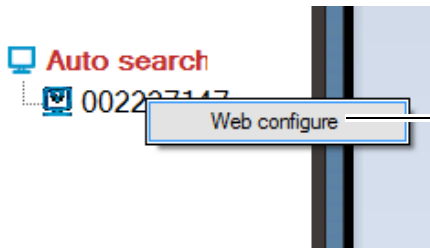


Right-click the camera under Auto Search and click Web Configure

NOTE: Your computer must be on the same network as the camera to use Web Configure.

2. Enter the camera admin user name and password. By default, the admin user name is **admin** and the admin password field is **left blank**. Click **Log in**. The Web Configure interface opens in your default web browser.

NOTE: Your camera admin user name and password differs from the password used to connect to your camera to view video.

7.1 WEB CONFIGURE OVERVIEW

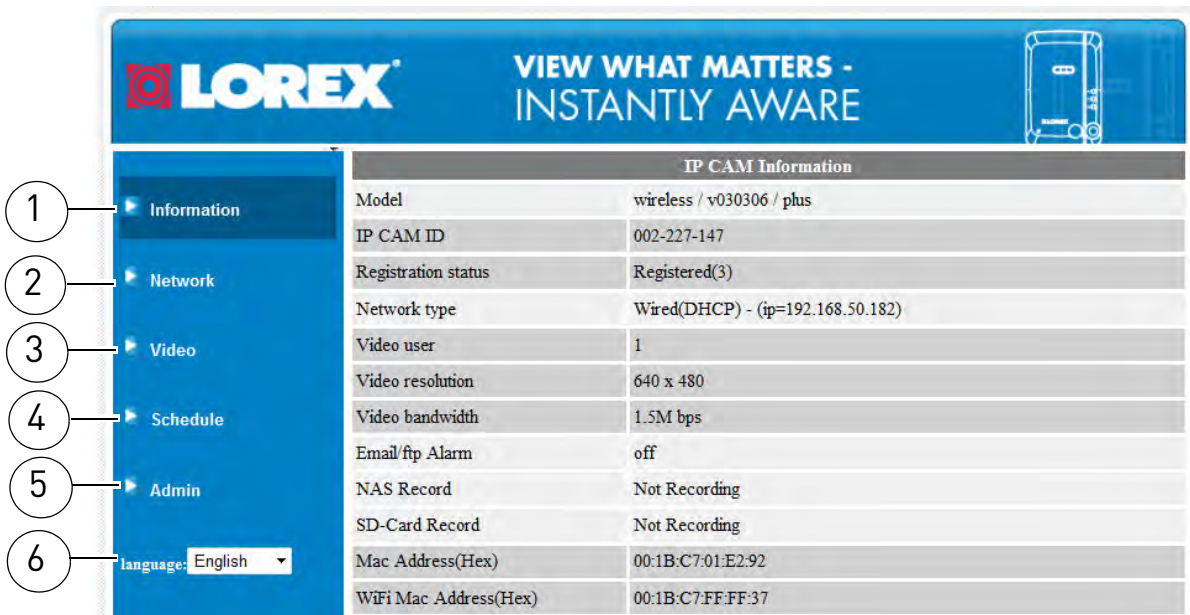

- 1. Information:** View information about the camera and camera settings.
- 2. Network:** Configure wired/wireless network settings. Connect to a wireless network.
- 3. Video:** Configure camera video and streaming settings. Watch live video from the camera (Internet Explorer only).
- 4. Schedule:** Configure recording settings and schedules. Configure email and audio alarms (speaker required; not included).
- 5. Admin:** Configure the camera date and time, passwords, and LEDs. Restart the camera. Perform system upgrades.
- 6. Language:** Select the language for the Web Configure interface.

7.2 NETWORK

Configure networking settings for WiFi or Ethernet connection.

7.2.1 WIRED NETWORK (DHCP OR FIXED IP)

Configure the camera IP address when connected using Ethernet. Select DHCP or Fixed

IP.

Network Settings(For wired ethernet)							
☐ Obtain an IP address automatically							
☒ Use the following IP address							
IP address	192	.	168	.	5	.	123
Subnet mask	255	.	255	.	255	.	0
Default gateway	192	.	168	.	5	.	1
☐ Obtain DNS server address automatically							
☒ Use the following DNS server address							
Preferred DNS server	208	.	67	.	222	.	222
Alternate DNS server	168	.	95	.	192	.	1
<button>Save & Apply</button>							

To configure the camera to use DHCP or fixed IP:

1. Select one of the following:
 - **Obtain an IP address automatically (recommended):** Use DHCP and allow the camera to obtain an IP address from the router automatically.
 - **Use the following IP address:** Use a fixed IP address and manually enter the IP address information.
2. If you selected Use the following IP address, configure the following:
 - **IP address:** Enter the IP address the camera will use. Make sure it is available on your network.
 - **Subnet mask:** Enter the Subnet Mask.
 - **Default Gateway:** Enter the Default Gateway address.
 - **Obtain DNS server address automatically:** Select to have the camera automatically select a DNS server.
 - **Use the following DNS server address:** Select and then manually enter DNS server information.
3. Click **Save & Apply**.

7.2.2 WIFI SECURITY (CONFIGURING WIFI SETTINGS)

Configure the camera to connect to a WiFi network and configure WiFi settings.

To configure WiFi Settings:

NOTE: For instructions on connecting your camera to a WiFi network, see “WiFi Setup” on page 18.

1. Perform one of the following:

WiFi Security Settings

☒ Enable WiFi function ☐ Disable WiFi function

SSID: belkin.5f4

Security mode: ☐ None ☐ WEP ☒ WPA(2)-PSK(WPA personal)

WEP Encryption: 64 bits(10 hex digits)

WEP Key: 1234567890

WPA Encryption: TKIP

WPA-PSK Key:

Buttons: Save & Apply, IP address, WiFi test, WiFi Scan

Labels below buttons: Configure WiFi IP address, Test WiFi configuration, Scan WiFi networks

- To Scan available WiFi networks, click **WiFi Scan**.
- To connect to a hidden WiFi network, select **Enable Wifi function**, and manually fill out the **SSID**, **Security mode** (i.e. encryption type), and the **WEP** or **WPA-PSK Key**. Click **Save & Apply**. Refresh the page and select **WiFi test**. When the test is successful, disconnect the camera from Ethernet.
- To configure a fixed IP address for the camera when connected over WiFi, click **IP address**, configure the settings as needed, and click **Save & Apply**.
- To test configured WiFi settings, click **WiFi test**.

7.3 VIDEO

Configure camera video and streaming settings. Watch live video from the camera (Internet Explorer only).

7.3.1 DISPLAY


Watch live video from the camera (only compatible with Internet Explorer).

You must install ActiveX controls to view live video using Internet Explorer. An

Configuring Camera Settings using a Web Browser

attention bar will appear to prompt you to install ActiveX controls. Click **Install** or click inside the attention bar and select **Install ActiveX for all users on this computer** and follow the prompts to install ActiveX controls.


Once ActiveX controls are installed, you can view live video from the camera. Double-click inside the video area to open the video in full-screen. Double-click again to exit full screen.

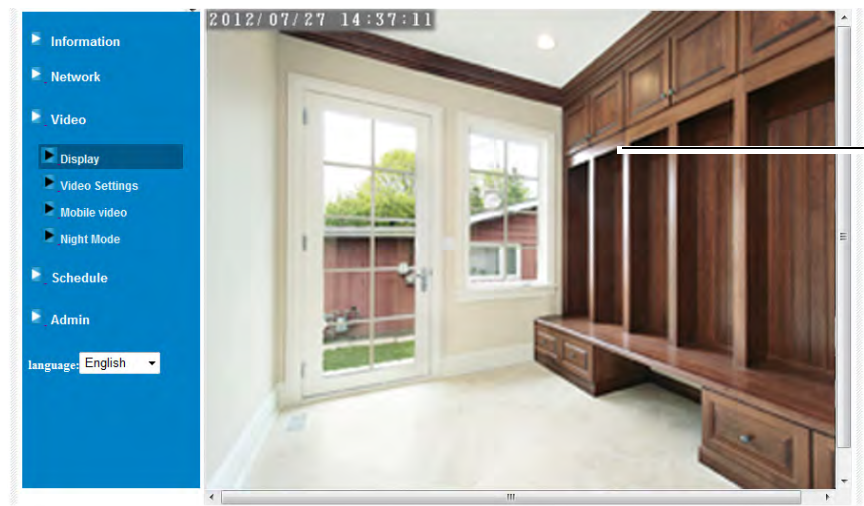

Double-click inside the video area for full-screen

7.3.2 VIDEO SETTINGS

Adjust the video quality settings. Set the password to access camera video through L-View or apps.

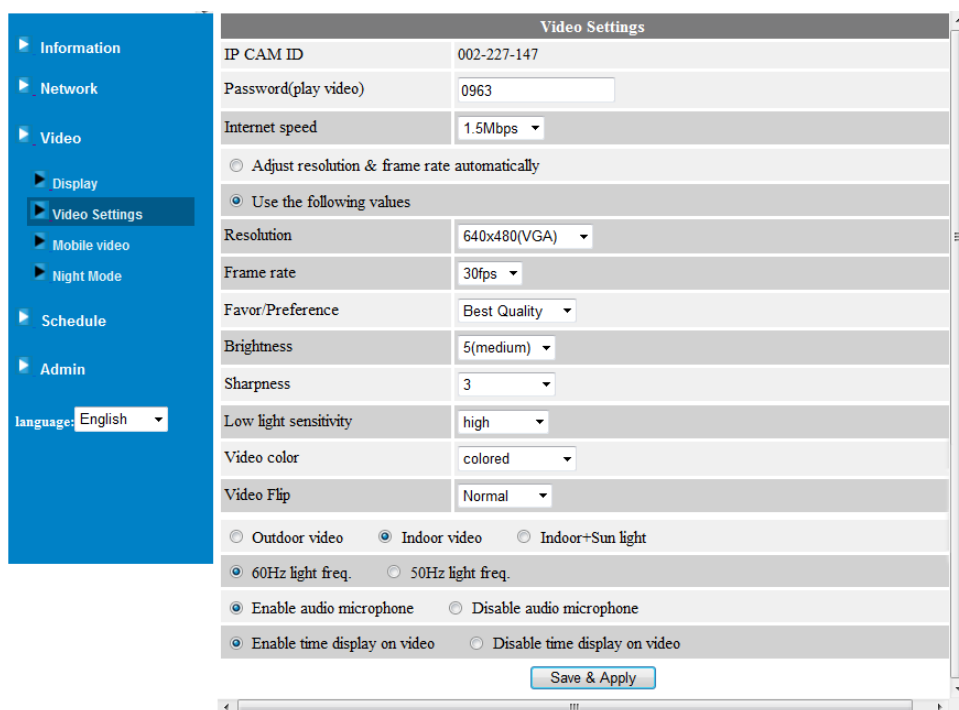

Video Settings	
IP CAM ID	002-227-147
Password(play video)	0963
Internet speed	1.5Mbps
☐ Adjust resolution & frame rate automatically	
☒ Use the following values	
Resolution	640x480(VGA)
Frame rate	30fps
Favor/Preference	Best Quality
Brightness	5(medium)
Sharpness	3
Low light sensitivity	high
Video color	colored
Video Flip	Normal
☐ Outdoor video ☒ Indoor video ☐ Indoor+Sun light	
☒ 60Hz light freq. ☐ 50Hz light freq.	
☒ Enable audio microphone ☐ Disable audio microphone	
☒ Enable time display on video ☐ Disable time display on video	
<button>Save & Apply</button>	

To configure camera video quality settings:

TIP: Change only one camera image quality setting at a time before clicking **Save & Apply** so you can judge the effects.

1. Configure the following, as needed:

- **Internet speed:** Select the speed of your Internet connection. If your Internet connection is faster than 1.5Mbps, select 1.5Mbps.
- **Adjust resolution and frame rate automatically:** Select to allow the camera to adjust the video resolution and frame rate based on available bandwidth.

NOTE: Resolution is the number of pixels (dots) used to make up the video image. A higher resolution means that more detail can be expressed in the video, but it increases the amount of bandwidth required to stream the video.

Frame rate is the number of frames (images) per second (FPS) shown in a video. A higher frame rate means that movement in the image appears smoother, but it also increases the amount of bandwidth required to stream the video.

- **Use the following values:** Select to manually select the video resolution and frame rate for the camera. Note that the image quality may decrease if there is not enough bandwidth for your selected settings.
- **Resolution:** Manually select either **VGA** (640x480) or **QVGA** (320x240) resolution. VGA resolution will give you a better, more detailed picture, but requires more bandwidth. QVGA allows the camera to maintain a higher frame rate when available bandwidth is low.
- **Frame rate:** Manually select the frame rate between **30fps** (highest) and **1fps** (lowest). 30fps is real time video, meaning that movement in the image will appear smooth, with no choppiness.
- **Favor/Preference:** Select whether you would like the camera to reduce the image quality or the frame rate when bandwidth increases or decreases. Select **Video Motion** to have the camera maintain the frame rate and reduce image quality when bandwidth is insufficient. Select **Image Quality** to have the camera maintain image quality and reduce frame rate when bandwidth is insufficient. Select **Better Quality** to have the camera maintain frame rate and increase quality when bandwidth is sufficient. Select **Best Quality** to have the camera maintain the frame rate and increase quality to the maximum speed of the connection.

- **Brightness:** Manually adjust the brightness of the image between **10** (highest) and **1** (lowest).
 - **Sharpness:** Manually adjust the sharpness of the image between **10** (highest) and **1** (lowest).
 - **Low Light Sensitivity:** Set the camera's sensitivity in low light environments between **Very High** (highest), **High**, and **Normal** (lowest).
 - **Video color:** Select **Colored** to view the camera in color or select **Black & white**.
 - **Video flip:** Select **Video Flip** to flip the camera image vertically and horizontally or select **Normal** for the normal orientation. This is useful if the camera has been mounted to a wall or ceiling upside down.
 - **Outdoor video/Indoor video/Indoor video + sun light:** Select **Outdoor video** for well lit environments. Select **Indoor Video** if you notice strip lines in the image or if the picture is too dark on the Outdoor video setting. Select **Indoor video + sunlight** if the picture is too bright on the Indoor Video setting.
 - **60Hz light freq/50Hz light freq:** If necessary, select **60Hz light freq** or **50Hz light freq** to adjust the camera for the frequency of your indoor lighting. These settings are not available when the camera is set to Outdoor video.
 - **Enable audio microphone/Disable audio microphone:** Select **Disable audio microphone** to disable the built-in microphone in the camera or select **Enable audio microphone** to enable it.
 - **Enable time display/Disable time display:** Select **Disable time display** to turn off video time stamps or **Enable time display** to turn on video time stamps.
2. Click **Save & Apply** to apply the settings to the camera. You may need to reconnect to the camera after making settings changes.

To set the camera password for accessing video through L-View or apps:

1. **Under Password (play video),** enter a password to access the camera video using L-View or smart phone and tablet apps.
2. Click **Save & Apply** to save the new password.

7.3.3 MOBILE VIDEO

Set streaming settings for connecting using a smart phone or tablet. Note that less bandwidth is generally available when connecting to the camera over a mobile cellular

network than when connecting using broadband Internet.


To configure mobile streaming settings:

1. Under **Mobile bandwidth**, select your available mobile bandwidth. If you are primarily connecting using WiFi, you may set this setting higher.
2. Select either **Select resolution & frame rate automatically** to have the camera automatically select the resolution and frame rate based on available bandwidth or select **Use the following values** to manually select the resolution and frame rate.
3. Under **Resolution**, select the resolution that will be used when connecting to the camera using a smart phone or tablet: **VGA** (640x480) or **QVGA** (320x240).
4. Under **Frame rate**, select the frame rate that will be used when connecting to the camera using a smart phone or tablet between **30fps** (highest) and **1fps** (lowest).
5. Select **Enable audio** to enable audio streaming to smart phones and tablets or **Disable audio** to disable audio streaming to smart phones and tablets.
6. Click **Save & Apply** to apply changes to your camera.

7.3.4 NIGHT MODE

Configure when the camera uses day or night mode. When day mode is on, the camera sees in color. When night mode is on, the camera sees in black and white, and the


Infrared LED turns on to enable night vision.

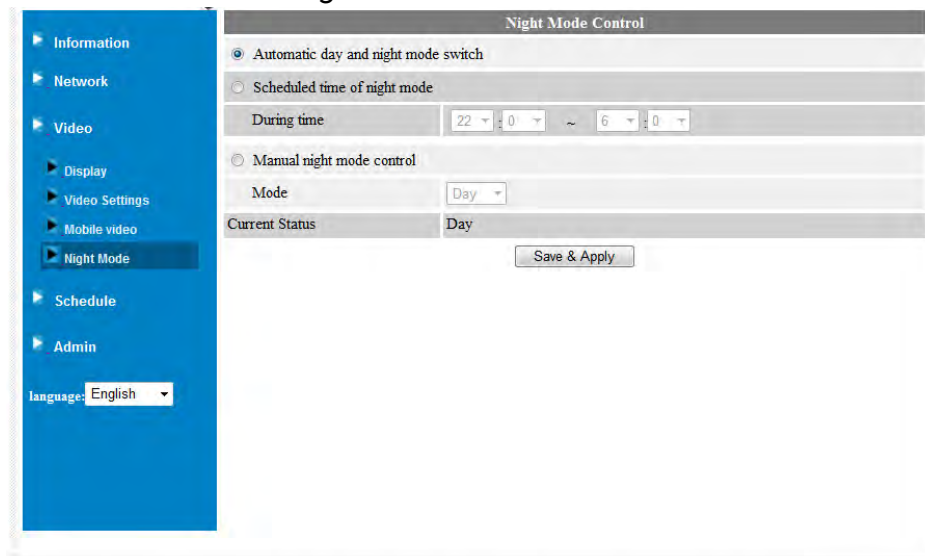


To configure Day/Night mode:

1. Select one of the following:

- **Automatic day and night mode switch:** Camera will automatically switch between day mode or night mode, based on the amount of light in the room.
- **Scheduled time of night mode:** Camera will switch between day mode and night mode at a scheduled times each day. If using this option, use the first set of drop-down menus to select (in 24-hour time) what time the camera will switch to night mode and the second set of drop-down menus to select when the camera will return to day mode.

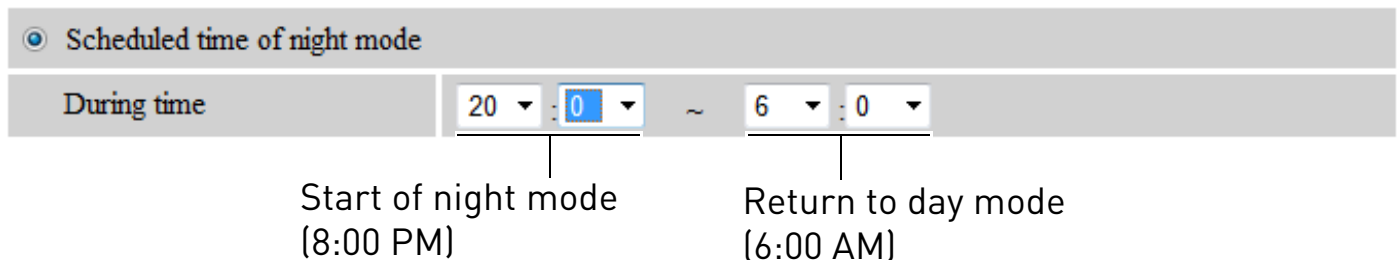

- **Manual night mode control:** Manually select day mode or night mode. If using this option, under Mode, select **Day** for day mode or **Night** for night mode.

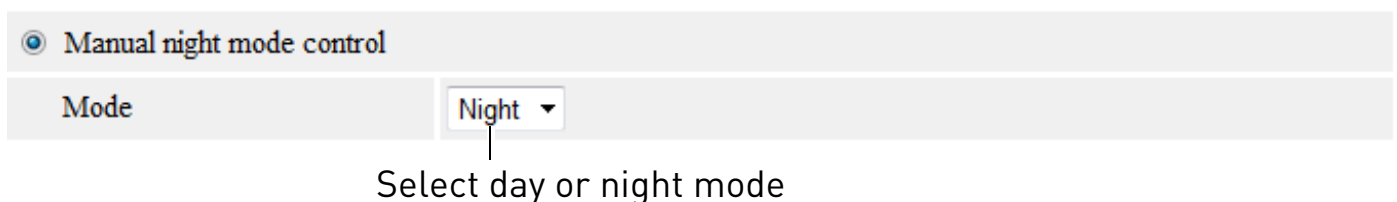

2. Click **Save & Apply** to apply your settings to the camera.

7.4 SCHEDULE

Configure recording to microSD card, configure email or speaker alarms, and setup the recording/alarm schedule.

7.4.1 EMAIL/FTP ALARM SETTINGS (CONFIGURING EMAIL ALARMS)

Configure email alarms. The camera can be set up to send email alerts when motion is detected. Email alarms include a .jpg attachment.

The screenshot shows the 'Email/FTP Alarm Settings' web interface. On the left is a blue sidebar with a menu containing: Information, Network, Video, Schedule (highlighted), Email/ftp Alarm (sub-highlighted), Speaker Alarm, NAS Settings, SD-Card, Scheduling, Admin, and a language dropdown set to 'English'. The main content area is titled 'Email/FTP Alarm Settings' and contains the following fields:

- Email/FTP Trigger:** Radio buttons for Motion (selected), PIR, Schedule, and Disable.
- Motion sensitivity:** A dropdown menu currently showing '3'.
- Trigger Interval:** A text input showing '100' with the unit 'seconds(1~600)'.
- Send Email message:** A checked checkbox.
- Email recipient#1, #2, #3:** Three text input fields for email addresses.
- Send FTP message:** An unchecked checkbox.
- FTP Server, Username, Password, Remote folder:** Four text input fields.

At the bottom of the form are two buttons: 'Save & Apply' and 'Advanced'. Annotations with lines pointing to specific elements are as follows:

- 'Configure Triggers' points to the 'Email/FTP Trigger' radio buttons.
- 'Check Send Email message' points to the 'Send Email message' checkbox.
- 'Enter up to 3 email recipients' points to the three 'Email recipient' input fields.
- 'Click Save & Apply' points to the 'Save & Apply' button.

To configure Email Alarms:

- Under **Email/FTP Trigger**, select one of the following alarm triggers:
 - **Motion:** Use Video motion detection to trigger email alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.

- **PIR:** Use the PIR motion detector to trigger email alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.

NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Schedule:** Send email alarms based on the settings configured under Schedule. see “Scheduling (Configuring Recording and Alarm Schedules)” on page 126.
- **Disable:** Disable email alarms.

2. If you have selected Motion, under Motion Sensitivity, select the motion detection sensitivity between **1** (High) and **10** (Low). If Motion Detection Sensitivity is set to 1, motion detection will be triggered if a moving object is larger than 1% of the video area. If it is set to 10, a moving object must be larger than 10% of the video area to trigger motion detection.

NOTE: This setting does not affect the PIR motion detector.


3. Under **Trigger Interval**, enter the minimum time (in seconds) the camera will wait in between email alarms. If this Interval is set too low, you may receive a lot of messages.
4. Under **Email Recipient**, enter up to 3 email addresses that will receive email alarms.
5. Click **Save & Apply** to Save email alarm settings.

NOTE: If you want to use a custom SMTP server to send Email messages, click Advanced, enter your SMTP server information, and click Save & Apply.

7.4.2 SPEAKER ALARM (CONFIGURING AUDIO ALARMS)

Configure audio alarms using a speaker (not included) connected to the camera. Audio alarms can be set up to go off when the camera detects motion. This is helpful if you want

to scare off intruders.

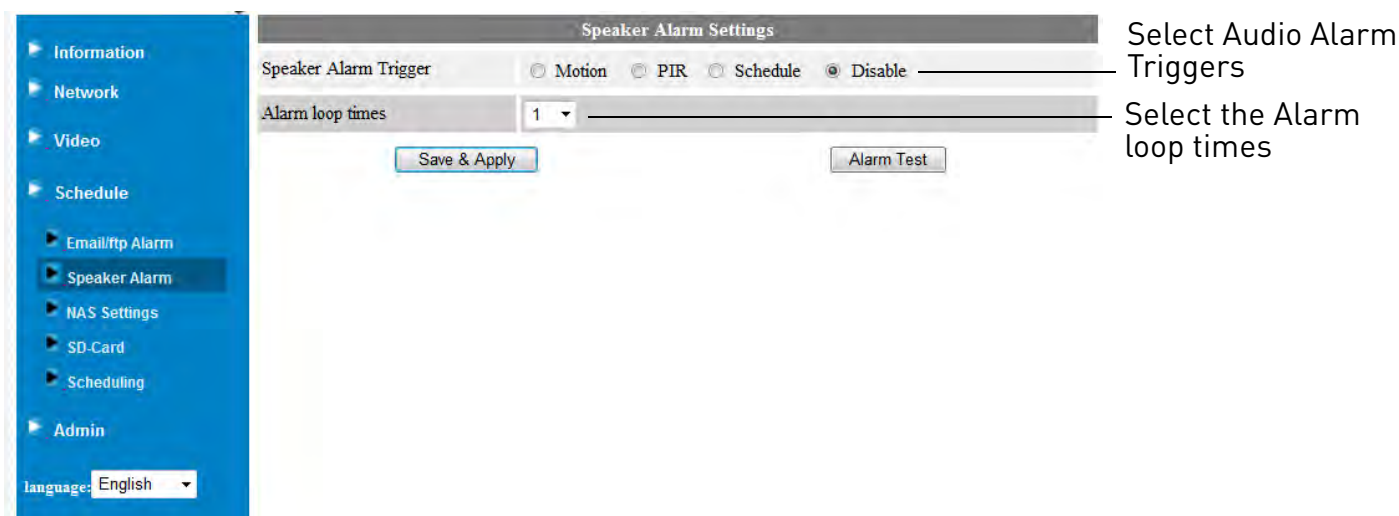

To configure speaker alarms:

1. Under **Speaker Alarm Trigger**, select one of the following alarm triggers:
 - **Motion:** Use Video motion detection to trigger audio alarms. Video motion detection looks for movement in the image to determine if there is motion. This means that there may be false alarms caused by changes in lighting, trees moving in the wind, etc.
 - **PIR:** Use the PIR motion detector to trigger audio alarms. The PIR motion detector uses changes in temperatures (e.g. from a person moving around in front of the camera) to determine if there is motion. PIR motion detection is less effective at higher temperatures.


NOTE: You may also select both PIR and Motion to receive alarms from both motion triggers.

- **Schedule:** Create audio alarms based on the settings set in the Schedule. see “Scheduling (Configuring Recording and Alarm Schedules)” on page 126.
 - **Disable:** Disable audio alarms.
2. Under **Alarm loop times**, select the number of times the alarm will repeat.
 3. Click **Alarm Test** to sound a test alarm.
 4. Click **Save & Apply**.

7.4.3 SD CARD (CONFIGURING MICROSD RECORDING)

Configure video recording to the microSD card (required; not included). To playback

recordings saved on the microSD card, use L-View or the iPhone, iPad, or Android apps.

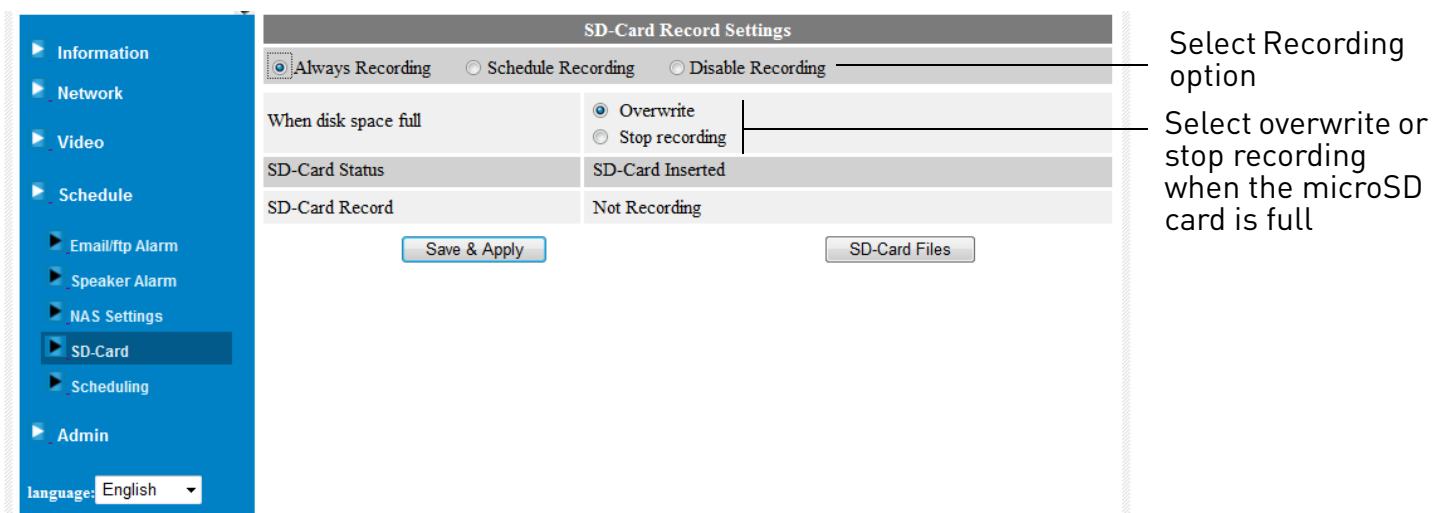

To configure microSD card recording:

1. Make sure a microSD card (not included) is inserted into the camera. It is recommended to format the microSD card before using it with the camera.
2. Select one of the following recording options:
 - Always Recording: Record continuously, all the time to microSD card.
 - Schedule Recording: Record according to the settings set in the Schedule.
 - Disable Recording: Do not record.
3. Under **When disk space full**, select **Overwrite** for the camera to record over the oldest recordings when the microSD card is full or select **Stop recording** for the camera to stop recording when the microSD card is full.
4. Click **Save & Apply**.

7.4.4 SCHEDULING (CONFIGURING RECORDING AND ALARM SCHEDULES)

Configure schedules for recording and alarms. Schedules can be configured separately

for alarms and recording. You can configure up to 12 schedules.

Schedule Management

☐ Email/ftp Alarm	☐ Motion triggered ☐ PIR triggered	
☐ Speaker Alarm	☐ Motion triggered ☐ PIR triggered	
☐ NAS Record	Nas schedule not enabled	
☐ SD-Card Record	☐ Continuous ☐ Motion triggered ☐ PIR triggered	

☐ Every week ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat
☐ Every day During time 00 : 00 ~ 00 : 00
☒ Fixed time Start time : 2012 / 08 / 13 13 : 00
 End time : 2012 / 08 / 13 13 : 00

[Add Schedule](#)

Select Recording or alarm types for the schedule

Configure schedule times

Click Add Schedule

To create a schedule for alarms or recording:

- First, you must enable alarms or recording to use the schedule.
- Check which alarm or recording types will use this schedule:
 - Email/ftp Alarm:** Check to use this schedule for Email Alarms. Select **Motion triggered** to send an email alarm based on video motion, select **PIR triggered** to use the PIR motion sensor, or select both.
 - Speaker Alarm:** Check to use this schedule for Email Alarms. Select **Motion triggered** to create an audio alarm based on video motion, select **PIR triggered** to use the PIR motion sensor, or select both.
 - SD Card Recording:** Check to use this schedule for microSD recording. Select **Continuous** for the camera to record to microSD continuously during the scheduled time. Select **Motion triggered** to record when video motion is triggered during the scheduled time, select **PIR triggered** to record when the PIR motion sensor is triggered during the scheduled time or select both.
- Select one of the following to configure the times that will be used for this schedule:
 - Every week:** Create a weekly recording schedule. Check the days you would like the schedule to apply to. Under **During time**, enter the start time for the schedule on the left and the end time for the schedule on the right.
 - Every day:** Create a daily recording schedule. Under **During time**, enter the start time for the schedule on the left and the end time for the schedule on the right.
 - Fixed time:** Create a one time schedule (for example, if you are going on vacation, and would like to record all the time). Under **Start time**, enter the exact date and time when you would like the schedule to start and enter the **End time**.

4. Click **Add Schedule**.

To delete a schedule:

1. Existing schedules are shown at the top of the page. Click **Delete** next to the schedule you want to delete.

The screenshot shows the 'Schedule Management' interface. On the left is a blue sidebar with a menu containing 'Information', 'Network', 'Video', 'Schedule', 'Email/ftp Alarm', 'Speaker Alarm', 'NAS Settings', 'SD-Card', 'Scheduling' (highlighted), and 'Admin'. At the bottom of the sidebar is a 'language: English' dropdown. The main content area has a title bar 'Schedule Management' and a table with the following structure:

Schedule list		
Every day	01:30 - 01:50	Edit Delete
☐ Email/ftp Alarm	☐ Motion triggered ☐ PIR triggered	
☒ Speaker Alarm	☒ Motion triggered ☐ PIR triggered	
☐ NAS Record	Nas schedule not enabled	
☐ SD-Card Record	☐ Continuous ☐ Motion triggered ☐ PIR triggered	
☐ Every week	☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat	
☒ Every day	During time 01 : 30 ~ 01 : 50	
☐ Fixed time	Start time : 2012 / 08 / 13 13 : 00 End time : 2012 / 08 / 13 13 : 35	
Add Schedule		

Click Delete to delete a schedule

To edit a schedule:

1. Click **Edit** next to the schedule you want to delete.
2. Edit the schedule settings as needed.
3. Click **Update Schedule**.

7.5 ADMIN

Configure the camera date and time, passwords, and LEDs. Restart the camera. Perform system upgrades.

7.5.1 ADMIN LOGIN

Configure the admin user name and password for the camera. The admin user name and

password are used to login to Web Configure. Configure the web access port.

To configure the admin user name and password used to login to Web Configure:

1. Under **Username**, enter the desired admin user name for the camera. The default is **admin**.
2. Under **Password**, enter the desired admin password for the camera. By default, the password field is left blank when logging in. Repeat the password under **Password confirm**.
3. Click **Save & Apply** to apply the settings to the camera. Restart the camera by disconnecting and reconnecting the power adapter or pressing the Reboot button (see “Reboot” on page 133).

To configure the Web access port (advanced users only):

You do not need to change the Web access port unless you have multiple cameras on the same network and wish to access Web Configuration for them from a remote location (i.e. over the Internet).

If you wish to access Web Configuration over the Internet, you must port forward the Web access port on your router to the camera’s IP address (see your router’s instruction manual for details), and connect to **http://**, the **public IP address of the camera**, colon (:), and the **camera’s web access port** (e.g. *http://245.54.112.12:80*).

1. Under **Web access port**, enter the desired web access port. It must not be used by any other device on your network. Note that L-View will automatically update the web access port when connecting to Web Configure on the local network.
2. Click **Save & Apply**. Restart the camera by disconnecting and reconnecting the power adapter or pressing the Reboot button (see “Reboot” on page 133).

7.5.2 LED CONTROL

Configure the behavior of the camera power and network LED's. This is useful if you want the camera to be harder to spot at night.



NOTE: This does not affect the SD LED. Removing the microSD card will turn off the SD LED, but it will also disable microSD recording.

To configure the status and network LED's:

1. Select one of the following:
 - **Normal LED display:** Status and network LED's will function as normal. For details on LED functions, see “Camera Overview” on page 1.
 - **Turn off LED display always:** Status and network LED's are turned off at all times.
 - **Turn off LED display after network connected:** Status and Network LED's turn on when the camera is powered on and turn off once a network connection is made.
2. Click **Save & Apply** to apply settings to the camera.

7.5.3 DATE/TIME

Configure the camera date and time. The camera syncs with an Internet NTP time server to automatically provide the correct time, once you have configured your time zone and daylight savings time settings.



It is highly recommended to set the date and time when first setting up your system.

Inaccurate time stamps may render your footage unusable for court evidence.

To set the camera date and time:

1. Under **Time Zone**, select your time zone.
2. Select **Enable** under **Daylight Savings Time** if your region observes Daylight Savings Time. Configure the **Start Time** and **End Time** for Daylight Savings Time if needed.
3. Click **Save & Apply** to apply settings to the camera.

7.5.4 UPGRADE


Upgrade the camera firmware. When firmware upgrades are released, they will be available as a free download from www.lorextechnology.com.

NOTE: Your computer must be on the same network as the camera to upgrade the firmware.

To upgrade the camera firmware:


Configuring Camera Settings using a Web Browser

1. Download the free firmware upgrade from www.lorextechnology.com. Unzip the contents of the firmware .zip file to a folder.
2. In L-View, right-click on the camera in Auto Search and click **Web Configure**.

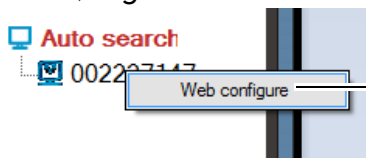


Right-click the camera under Auto Search and click Web Configure

3. Type the camera admin User Name (default: **admin**) and Password (default: **left blank**) and click **Ok** to log into the camera.
4. Click **Admin** then click **Upgrade**.

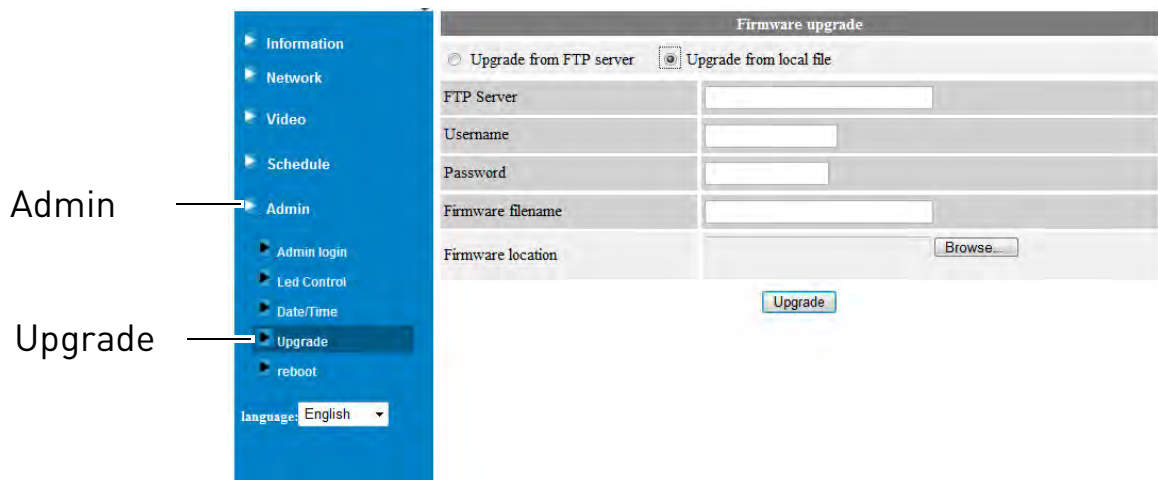

5. Select **Upgrade from local file**.
6. Click **Browse**, locate the firmware upgrade file, and then click **Open**.
7. Click **Upgrade**. Wait for the firmware upgrade to complete. **Do not disconnect the power or network cable during the firmware upgrade.** The camera will reboot once firmware upgrade is complete.

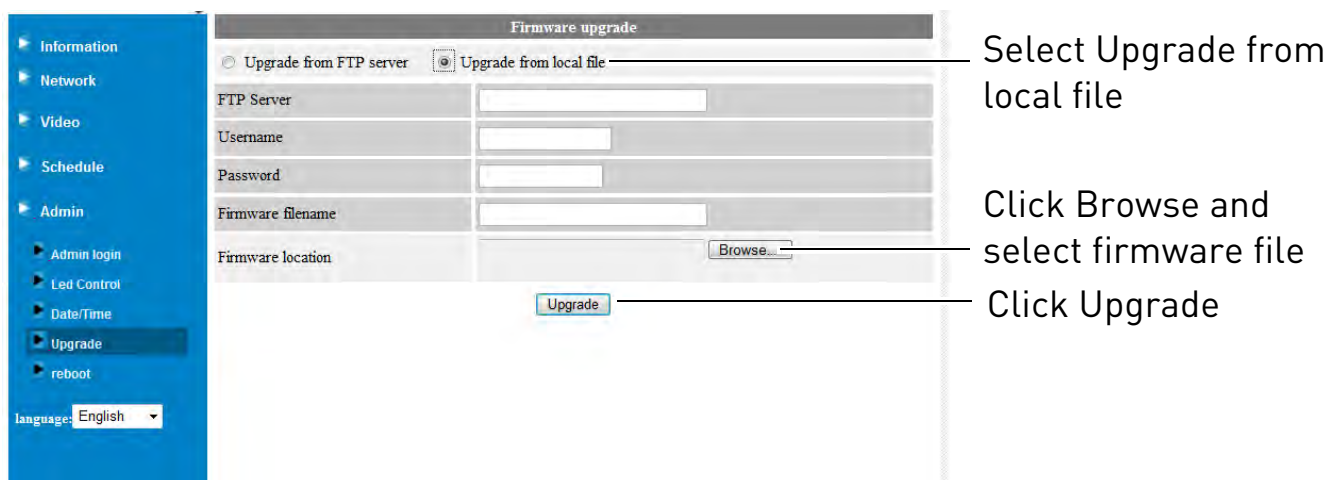

7.5.5 REBOOT

Restart the camera from your Internet browser. This is useful if you need to restart the camera to apply settings changes or if the camera requires an error.

To restart the camera:

1. Press the **reboot** button.



8. TECHNICAL SPECIFICATIONS

Mode:	Day & Night	Security:	Web management username/password protection Video display ID/password protection WiFi WEP and WPA/WPA2 security mode
Power:	DC 5V, 1A (USB)	Installation, management and maintenance:	Plug & play by ID/password. Video management software-LView for video access and multi-camera management Firmware upgrades Push Notification L-View SW upgrade Push Notification
Processors:	RISC CPU, hardware video processing and compression.	Web browsing:	Built-in web server for standard web browser access Video display on IE browser Video snapshot on any browser
Network interface:	Ethernet 10BaseT/100BaseTX, Auto-MDIX, RJ-45	Supported protocols:	IPv4, HTTP, TCP, ICMP, RTSP, RTP, UDP, RTCP, SMTP, SNMP, FTP, DHCP, ARP, DNS, PPPoE, etc.
Wireless interface:	IEEE 802.11n 90 - 150 Mbps IEEE 802.11g 6 - 54 Mbps IEEE 802.11b 1 - 11 Mbps	Accessories:	Power adaptor, camera bracket, RJ45 Ethernet cable, quick installation guide, CD with installation software and User's Manual.
Transmit power:	14.5dBm typically @ 802.11g 17.5dBm typically @ 802.11b	Video management software:	Surveillance software for viewing and archiving up to 4 cameras
Receiver sensitivity:	54Mbps: Typical -73dBm @ 10% PER 11Mbps: Typical -86dBm @ 10% PER	Users	Up to 20 simultaneous unicast users (depends on video settings and internet bandwidth)
Antenna gain:	0.01 dBi	Alarm and event management:	Events triggered by PIR and sound detection Email/ftp alarm message Push notification on supported mobile devices.
Image sensor:	RGB VGA 1/4 inch CMOS Day and night separate sensorsAutomatic exposure control, automatic white balance, automatic gain control, automatic brightness control.	Dimensions:	75 x 35 x 128mm/3.0 x 1.4 x 5.1" (W x D x H)
PIR sensor:	Effective distance – 7 meters	Weight:	0.28kg/0.62lbs (including camera bracket)
Light sensitivity:	0.2 Lux (IR LED off) 0 Lux (with 9 meters IR LED on) Automatically turn on the IR LED on low light environment.	Approvals:	EMC - CE, FCC Part 15 Subpart B Class B Wireless RF - CE, FCC Part 15 Subpart C Power supply: CE, FCC, UL, EN 60950
Lens:	3.2 mm, F2.0, viewing angle: 60.3°, fixed iris. focus range: 30 cm to infinity Day and night separate lens	Operating conditions	0-50 °C Humidity 20 – 80% RH (non-condensing)
Buttons:	One reset button, to factory default settings One WPS button for automatic WiFi setup		
Indicators:	One LED for Internet connection status indication One LED for Ethernet connection indication One LED for SD card recording indication		
Video compression:	H.264, baseline profile level 3.1		
Video streaming:	Separate frame rate/resolution/bandwidth settings for PC and mobile.		
Resolution:	VGA(640x480), QVGA(320x240), QQVGA(160x120)		
Bandwidth:	64k, 128k, 256k, 512k, 768k, 1M, 1.2M, 1.5M bps		
Frame rate:	1~5, 10, 15, 20, 25, 30 fps		
Audio:	Built-in microphone for audio monitoring Speaker jack for external speaker Audio compression: G.711		

As our product is subject to continuous improvement, Lorex Technology & subsidiaries reserve the right to modify product design, specifications & prices without notice and without incurring any obligation.

9. CLEANING AND DISPOSAL

Clean camera with a slightly damp cloth or an anti-static cloth. Never use cleaning agents or abrasive solvents.

- Do not clean any part of the product with cleaners with thinners or other solvents and chemicals. This may cause permanent damage to the product which is not covered by the warranty. When necessary, clean it with a damp cloth.
- Keep your camera and monitor away from hot, humid, or wet areas or strong sunlight.
- Every effort has been made to ensure high standards of reliability for your video monitor. However, if something does go wrong, please do not try to repair it yourself. Contact customer service for assistance.

Disposal of the Device

At the end of the product lifecycle, you should not dispose of this product with normal household waste, but take the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, User's Guide, and/or box indicates this.

Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area. Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.



10. NOTICES

Warning: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

FCC Notice

This device complies with Part 15, subpart C, of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

However, it is imperative that the user follows the guidelines in this manual to avoid improper usage which may result in damage to the unit, electrical shock and fire hazard injury. In order to improve the features, functions, and quality of this product, the specifications are subject to change without notice from time to time.

Caution: To maintain compliance with the FCC's RF exposure guidelines, place the camera at least 20cm (7.87in) from nearby persons.

IC Notice

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesirable operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

11. WALL OR CEILING MOUNTING


11.1 INSTALLATION TIPS AND WARNINGS

- **Camera is rated for indoor use only.** Do not install in wet or humid areas.
- Do not point the camera out of a window. The camera will not be able to see at nighttime due to reflection from the Infrared LED.
- Temporarily connect the camera and test it before permanent installation.
- If using the camera with a wireless network, set up the camera's wireless connection before permanent installation.
- Make sure that power adapter cable and ethernet cable (if connecting the camera using ethernet) are long enough to reach the installation location.


11.2 INSTALLATION

1. Use the camera mounting stand to mark holes for the mounting screws. If you are installing the camera in the ceiling, the screw holes should face the same direction that you would like the camera to point.
2. Drill holes for the mounting screws. If installing in drywall, it is recommended to use the included drywall anchors.

3. Attach the camera to the wall or ceiling using the included mounting screws. Adjust the camera angle as necessary. See below for suggested stand configurations.

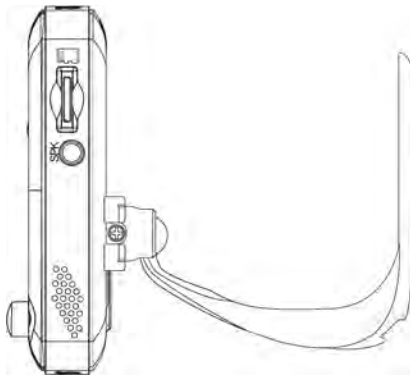


Wall Mount

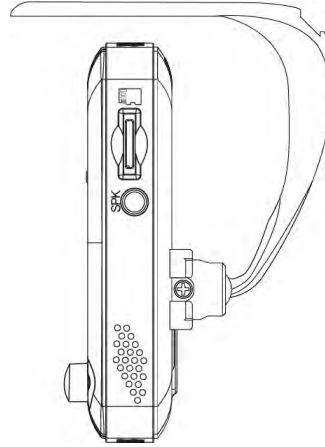

Ceiling Mount

4. Secure the stand position by using a Philipshead screwdriver to tighten the screw connecting the camera to the stand.

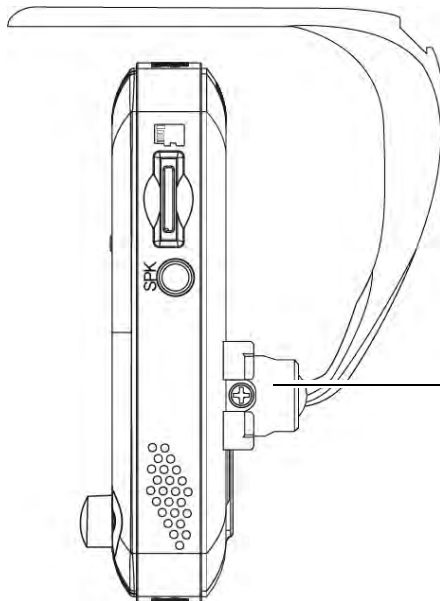

Camera stand screw

5. Connect the power adapter cable and ethernet cable (if connecting the camera using ethernet) to the camera.

12. TROUBLESHOOTING

WPS Wireless Setup does not work:

- Connect the camera using Ethernet and manually setup the camera to use WiFi. See “WiFi Setup” on page 18.

WiFi is not working:

- Camera has not been setup to use WiFi. Unless your router supports WPS, WiFi setup must be completed while the camera is connected to Ethernet. See “WiFi Setup” on page 18.
- Incorrect password/network information entered. Re-complete WiFi setup and double-check your WiFi network settings.
- Camera is not in range of WiFi router. Move the camera closer to the WiFi router.
- Interference with other wireless devices is affecting signal strength. Move the camera and/or wireless router further away from any cordless telephones or other wireless devices.

Password required to change settings different than password created:

- Changing settings requires the admin user name and password for the camera. This is a different password than the one used to connect to the camera for video streaming. By default, the admin user name is **admin** and the password is **left blank**.

Cannot access Camera Settings or setup camera for WiFi on phone or tablet; error message "Get Settings Failed" appears:

- You cannot modify Camera Settings if the device is connected using 3G. Connect to your WiFi network instead.
- Connected to different local network than camera. You must be on the same local network as the camera to change Camera Settings. This means that you must connect both your phone or tablet to the same router as the camera, either through WiFi or Ethernet.

Forgot Password for Camera:

- Press and hold the Reset button under the camera for 4 or more seconds to reset the camera to factory default settings. The password will reset to the default password lorex.

Camera does not appear in Auto Search or Local Search:

- Camera may be on different network than computer. Press + next to camera list and enter the camera ID and password manually. If this does not work, check the network connection.

Cannot access Web Configure on PC:

- Camera may be on different network than computer. Connect the camera and computer to the same network (i.e. the same router).

Bright spot in video when viewing camera at night:

- Night vision reflects when pointing a camera to a window. Move the camera to a different location.



LNC104

Version 1.0

www.lorextechnology.com