

# Instructions



## Air-Operated Diaphragm Pumps

308981ZAC

EN

For fluid transfer applications. For professional use only.  
Only models marked with (\*) are approved for use in European explosive atmosphere locations.

100 psi (0.7 MPa, 7 bar) Maximum Fluid Working Pressure


100 psi (0.7 MPa, 7 bar) Maximum Air Input Pressure

ACETAL, POLYPROPYLENE, AND PVDF

### Husky™ 515

- Model No. D 5 1 \_\_\_ Acetal NPT Pumps\*
- Model No. D 5 2 \_\_\_ Polypropylene Pumps
- Model No. D 5 5 \_\_\_ PVDF NPT Pumps
- Model No. D 5 A \_\_\_ Acetal BSPT Pumps\*
- Model No. D 5 B \_\_\_ Polypropylene BSPT Pumps
- Model No. D 5 E \_\_\_ PVDF BSPT Pumps

For Additional Models, see Table of Contents

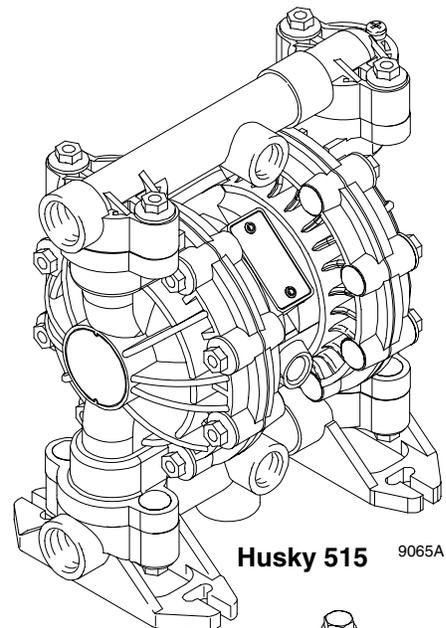


Husky 515 9065A

ALUMINUM AND STAINLESS STEEL\*

### Husky™ 716

- Model No. D 5 3 \_\_\_ Aluminum NPT Pumps
- Model No. D 5 4 \_\_\_ Stainless Steel NPT Pumps
- Model No. D 5 C \_\_\_ Aluminum BSPT Pumps
- Model No. D 5 D \_\_\_ Stainless Steel BSPT Pumps

For Additional Models, see Table of Contents

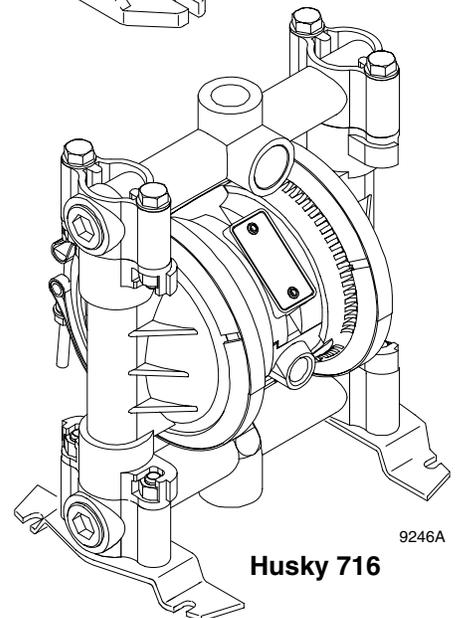

Husky 716 9246A

\*These models are  certified.



#### Important Safety Instructions

Read all warnings and instructions in this manual.

Save these instructions.

Refer to the Pump Matrix on page 22 to determine the model number of your pump.



HO03

PROVEN QUALITY. LEADING TECHNOLOGY.

# Table of Contents

|  |    |
|--|----|
| Safety Warnings .....                          | 2  |
| Installation .....                             | 4  |
| Operation .....                                | 10 |
| Maintenance .....                              | 11 |
| Troubleshooting .....                          | 12 |
| Service .....                                  | 13 |
| Husky 515 and Husky 716 Pump Matrix .....      | 22 |
| Husky 515 and 715 Additional Pumps .....       | 23 |
| Husky 515 and Husky 716 Repair Kits .....      | 22 |
| <b>Parts</b>                                   |    |
| Husky 515 and Husky 716 Common Parts .....     | 24 |
| Husky 515 Parts Drawing .....                  | 25 |
| Husky 515 Fluid Section Parts List .....       | 26 |
| Husky 716 Parts Drawing .....                  | 27 |
| Husky 716 Fluid Section Parts List .....       | 28 |
| Torque Sequence .....                          | 29 |
| <b>Husky 515:</b>                              |    |
| Technical Data .....                           | 30 |
| Dimensions .....                               | 31 |
| <b>Husky 716:</b>                              |    |
| Technical Data .....                           | 32 |
| Dimensions .....                               | 33 |
| Husky 515 and Husky 716 Performance Charts ... | 34 |
| Graco Standard Warranty .....                  | 36 |
| Graco Information .....                        | 36 |

# Symbols

## Warning Symbol



This symbol alerts you to the possibility of serious injury or death if you do not follow the instructions.

## Caution Symbol



This symbol alerts you to the possibility of damage to or destruction of equipment if you do not follow the instructions.

# ! WARNING



INSTRUCTIONS

## EQUIPMENT MISUSE HAZARD

Equipment misuse can cause the equipment to rupture or malfunction and result in serious injury.

- This equipment is for professional use only.
- Read all instruction manuals, tags, and labels before operating the equipment.
- Use the equipment only for its intended purpose. If you are not sure, call your Graco distributor.
- Do not alter or modify this equipment. Use only genuine Graco parts and accessories.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not exceed the maximum working pressure of the lowest rated component in your system. This equipment has a **100 psi (0.7 MPa, 7 bar) maximum working pressure at 100 psi (0.7 MPa, 7 bar) maximum incoming air pressure.**
- Use fluids and solvents that are compatible with the equipment wetted parts. Refer to the **Technical Data** section of all equipment manuals. Read the fluid and solvent manufacturer's warnings.
- Route hoses away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not expose Graco hoses to temperatures above 82°C (180°F) or below -40°C (-40°F).
- Wear hearing protection when operating this equipment.
- Do not lift pressurized equipment.
- Do not kink or overbend hoses or use hoses to pull equipment.
- Comply with all applicable local, state, and national fire, electrical, and safety regulations.
- Do not use 1.1.1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment. Such use could result in a chemical reaction, with the possibility of explosion.

# WARNING



## TOXIC FLUID HAZARD

Hazardous fluid or toxic fumes can cause serious injury or death if splashed in the eyes or on the skin, inhaled, or swallowed.

- Know the specific hazards of the fluid you are using.
- Do not lift a pump under pressure. If dropped, the fluid section may rupture. Always follow the **Pressure Relief Procedure** on page 10 before lifting the pump.
- Store hazardous fluid in an approved container. Dispose of hazardous fluid according to all local, state, and national guidelines.
- Always wear protective eyewear, gloves, clothing, and respirator as recommended by the fluid and solvent manufacturer.
- Pipe and dispose of the exhaust air safely, away from people, animals, and food handling areas. If the diaphragm fails, the fluid is exhausted along with the air. Read **Air Exhaust Ventilation** on page 6.
- **Never** use an acetal pump to pump acids. Take precautions to avoid acid or acid fumes from contacting the pump housing exterior. Stainless steel parts will be damaged by exposure to acid spills and fumes.



## FIRE AND EXPLOSION HAZARD

Improper grounding, poor ventilation, open flames, or sparks can cause a hazardous condition and result in a fire or explosion and serious injury.

- Ground the equipment. Refer to **Grounding** on page 8.
- **Never** use a polypropylene or PVDF pump with non-conductive flammable fluids as specified by your local fire protection code. Refer to **Grounding** on page 8 for additional information. Consult your fluid supplier to determine the conductivity or resistivity of your fluid.
- If there is any static sparking or you feel an electric shock while using this equipment, **stop pumping immediately**. Do not use the equipment until you identify and correct the problem.
- Provide fresh air ventilation to avoid the buildup of flammable fumes from solvents or the fluid being pumped.
- Pipe and dispose of the exhaust air safely, away from all sources of ignition. If the diaphragm fails, the fluid is exhausted along with the air. Read **Air Exhaust Ventilation** on page 6.
- Keep the work area free of debris, including solvent, rags, and gasoline.
- Electrically disconnect all equipment in the work area.
- Extinguish all open flames or pilot lights in the work area.
- Do not smoke in the work area.
- Do not turn on or off any light switch in the work area while operating or if fumes are present.
- Do not operate a gasoline engine in the work area.
- Keep a fire extinguisher in the work area.

# Installation

## General Information

- The Typical Installations in Fig. 2 are only guides for selecting and installing system components. Contact your Graco distributor for assistance in planning a system to suit your needs.
- Always use Genuine Graco Parts and Accessories.
- Use a compatible, liquid thread sealant on all male threads. Tighten all connections firmly to avoid air or fluid leaks.

## Tightening Threaded Fasteners Before First Use

Before using the pump for the first time, check and retorque all external fasteners. See **Torque Sequence**, page 29. After the first day of operation, retorque the fasteners. Although pump use varies, a general guideline is to retorque fasteners every two months.

## Toxic Fluid Hazard



Read **Toxic Fluid Hazard** on page 3.

Use fluids and solvents that are compatible with the equipment wetted parts. Refer to the **Technical Data** section of all equipment manuals. Read the fluid and solvent manufacturer's warnings.

## CAUTION

### Safe Operating Temperatures

*Minimum (all pumps): 40° F (4° C)*

*Maximum*

*Acetal: 180° F (82° C)*

*Polypropylene: 150° F (66° C)*

*Aluminum, stainless steel, PVDF: 225° F (107° C)*

These temperatures are based upon mechanical stress only and may be significantly altered by pumping certain chemicals. Consult engineering guides for chemical compatibilities and temperature limits, or contact your Graco distributor.

## Mountings

- These pumps can be used in a variety of installations. Be sure the mounting surface can support the weight of the pump, hoses, and accessories, as well as the stress caused during operation.
- Fig. 2 shows some installation examples. On all installations, mount the pump using screws and nuts.

## Pumping High-Density Fluids

High density fluids may prevent the lighter non-metallic check valve balls from seating properly, which reduces pump performance significantly. Stainless steel balls should be used for such applications.

## Split Manifolds

Plastic Split Manifold Kits are available to enable you to pump two fluids simultaneously or to mix two fluids in the pump. To order a Split Manifold Kit, use the Part No. from the list below:

- 241240** polypropylene; split inlet
- 241241** acetal; split inlet
- 241242** PVDF; split inlet
- 241243** polypropylene; split outlet
- 241244** acetal; split outlet
- 241245** PVDF; split outlet

# Installation

## Air Line

### **WARNING**

A bleed-type master air valve (B) is required in your system to relieve air trapped between this valve and the pump. See Fig. 2. Trapped air can cause the pump to cycle unexpectedly, which could result in serious injury, including splashing in the eyes or on the skin, injury from moving parts, or contamination from hazardous fluids.

### **CAUTION**

The pump exhaust air may contain contaminants. Ventilate to a remote area if the contaminants could affect your fluid supply. Read **Air Exhaust Ventilation** on page 6.

1. Install the air line accessories as shown in Fig. 2. Mount these accessories on the wall or on a bracket. Be sure the air line supplying the accessories is electrically conductive.
  - a. The fluid pressure can be controlled in either of two ways. To control it on the air side, install an air regulator (G). To control it on the fluid side, install a fluid regulator (J) near the pump fluid outlet (see Fig. 2).
  - b. Locate one bleed-type master air valve (B) close to the pump and use it to relieve trapped air. Read the **WARNING** above. Locate the other master air valve (E) upstream from all air line accessories and use it to isolate them during cleaning and repair.
  - c. The air line filter (F) removes harmful dirt and moisture from the compressed air supply.
2. Install an electrically conductive, flexible air hose (C) between the accessories and the 1/4 npt(f) pump air inlet. Use a minimum 1/4 in. (6.3 mm) ID air hose. Screw an air line quick disconnect coupler (D) onto the end of the air hose (C), and screw the mating fitting into the pump air inlet snugly. Do not connect the coupler (D) to the fitting yet.

## Installation of Remote Pilot Air Lines

1. Refer to Parts Drawings. Connect air line to pump as in preceding steps.
2. Connect 1/4 in. O.D. tubing to push type connectors (16) on underside of pump.

**NOTE:** by replacing the push type connectors, other sizes or types of fittings may be used. The new fittings will require 1/8 in. npt threads.

3. Connect remaining ends of tubes to external air signal, such as Graco's Cycleflo (P/N 195264) or Cycleflo II (P/N195265) controllers.

**NOTE:** the air pressure at the connectors must be at least 30% of the air pressure to the air motor for the pump to operate.

## Fluid Suction Line

- If using a conductive (acetal) pump, use conductive hoses. If using a non-conductive pump, ground the fluid system. Read **Grounding** on page 8. The fluid inlet port is 1/2 in. or 3/4 in.
- At inlet fluid pressures greater than 15 psi (0.1 MPa, 1 bar), diaphragm life will be shortened.

## Fluid Outlet Line

### **WARNING**

A fluid drain valve (H) is required in your system to relieve pressure in the hose if it is plugged. See Fig. 2. The drain valve reduces the risk of serious injury, including splashing in the eyes or on the skin, or contamination from hazardous fluids when relieving pressure. Install the valve close to the pump fluid outlet.

1. Use electrically conductive fluid hoses (K). The pump fluid outlet is 1/2 in. or 3/4 in. Screw the fluid fitting into the pump outlet snugly. **Do not over-tighten.**
2. Install a fluid regulator (J) at the pump fluid outlet to control fluid pressure, if desired (see Fig. 2). See **Air Line**, step 1a, for another method of controlling pressure.
3. Install a fluid drain valve (H) near the fluid outlet. Read the **WARNING** above.

# Installation

## Fluid Pressure Relief Valve

### **CAUTION**

Some systems may require installation of a pressure relief valve at the pump outlet to prevent overpressurization and rupture of the pump or hose. See Fig. 1.

Thermal expansion of fluid in the outlet line can cause overpressurization. This can occur when using long fluid lines exposed to sunlight or ambient heat, or when pumping from a cool to a warm area (for example, from an underground tank).

Overpressurization can also occur if the Husky pump is being used to feed fluid to a piston pump, and the intake valve of the piston pump does not close, causing fluid to back up in the outlet line.

- 1 Install valve between fluid inlet and outlet ports.
- 2 Connect fluid inlet line here.
- 3 Connect fluid outlet line here.

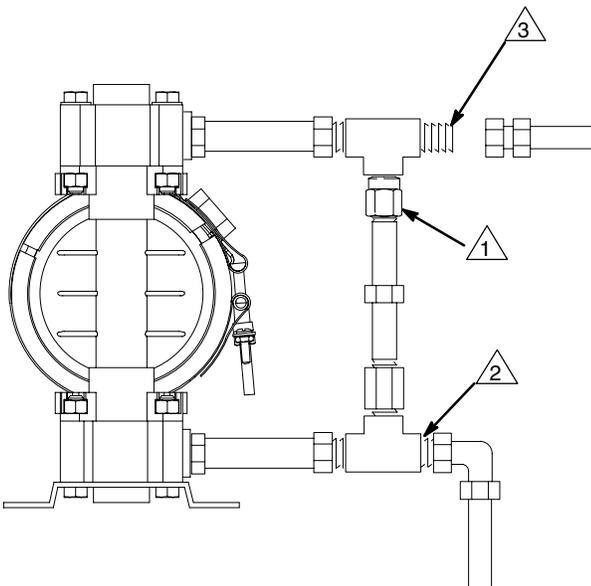


Fig. 1

9073A

## Air Exhaust Ventilation



Read **Toxic Fluid Hazard** on page 3.



Read **Fire and Explosion Hazard** on page 3.

Be sure the system is properly ventilated for your type of installation. You must vent the exhaust to a safe place, away from people, animals, food handling areas, and all sources of ignition when pumping flammable or hazardous fluids.

Diaphragm failure will cause the fluid being pumped to exhaust with the air. Place an appropriate container at the end of the air exhaust line to catch the fluid. See Fig. 2 .


The air exhaust port is 3/8 npt(f). Do not restrict the air exhaust port. Excessive exhaust restriction can cause erratic pump operation.

See **Venting Exhaust Air** in Fig. 2. Exhaust to a remote location as follows:

1. Remove the muffler (W) from the pump air exhaust port.
2. Install an electrically conductive air exhaust hose (X) and connect the muffler to the other end of the hose. The minimum size for the air exhaust hose is 3/8 in. (10 mm) ID. If a hose longer than 15 ft (4.57 m) is required, use a larger diameter hose. Avoid sharp bends or kinks in the hose.
3. Place a container (Z) at the end of the air exhaust line to catch fluid in case a diaphragm ruptures. See Fig. 2.

# Installation

## ABOVE-GROUND TRANSFER INSTALLATION

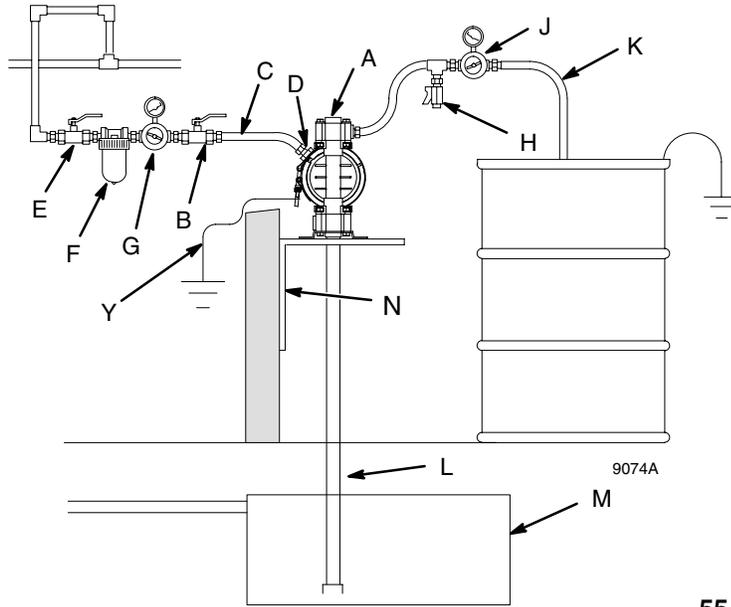


### KEY

- A Pump
- B Bleed-type master air valve (required for pump)
- C Electrically conductive air supply line
- D Air line quick disconnect
- E Master air valve (for accessories)
- F Air line filter
- G Pump air regulator
- H Fluid drain valve (required)
- J Fluid regulator (optional)
- K Electrically conductive fluid supply hose
- L Fluid suction line
- M Underground storage tank
- N Wall mounting bracket
- Y Ground wire (required; see page 8 for installation instructions)


## 55-GALLON BUNG PUMP INSTALLATION

### KEY

- A Pump
- C Electrically conductive air supply line
- D Air line quick disconnect
- H Fluid drain valve (required)
- K Electrically conductive fluid supply hose
- L Fluid suction line
- Y Ground wire (required; see page 8 for installation instructions)

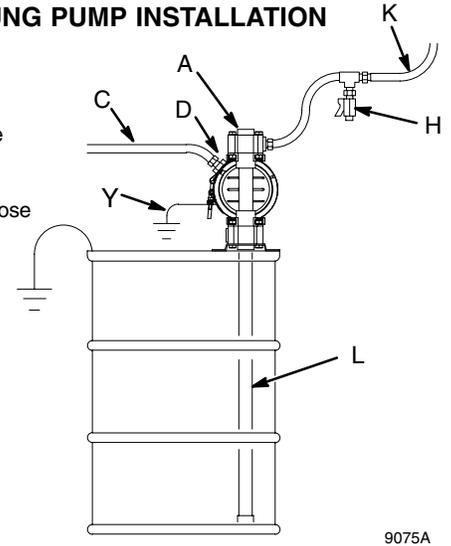

## AIR SPRAY INSTALLATION

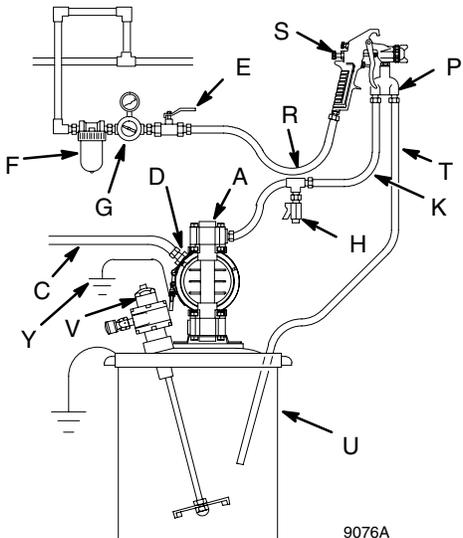

### KEY

- A Pump
- C Electrically conductive air line to pump
- E Gun air line shutoff valve
- F Air line filter
- G Gun air regulator
- H Fluid drain valve (required)
- K Electrically conductive fluid supply hose
- P Circulating valve
- R Electrically conductive air line to gun
- S Air spray gun
- T Electrically conductive fluid return line
- U 5-gallon pail
- V Agitator
- Y Ground wire (required; see page 8 for installation instructions)

### KEY

- W Muffler
- X Electrically Conductive Air Exhaust Hose
- Z Container for Remote Air Exhaust

All wetted and non-wetted pump parts must be compatible with the fluid being pumped.

## VENTING EXHAUST AIR

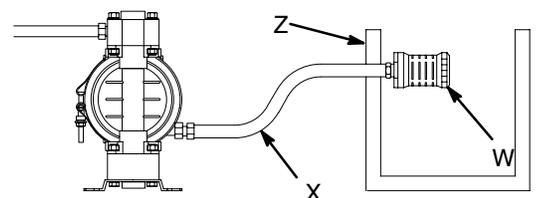


Fig. 2

# Installation

## Grounding

### ⚠ WARNING



#### FIRE AND EXPLOSION HAZARD

This pump must be grounded. Before operating the pump, ground the system as explained below. Also read the section **Fire and Explosion Hazard** on page 3.

The *acetal Husky 515 pump* contains stainless steel fibers, which makes the wetted parts conductive. Attaching the ground wire to the grounding screw (106) grounds the wetted parts. See **grounding screw** on page 25.

The *metal Husky 716 pumps* have a grounding strip connecting the vee clamps (109). Attach a ground wire to the grounding strip with the screw, lockwasher, and nut as shown in the **Grounding Detail** on page 27.

The *polypropylene and PVDF Husky 515 pumps* are **not** conductive.

When pumping conductive flammable fluids, **always** ground the entire fluid system by making sure the fluid system has an electrical path to a true earth ground (see Fig. 3). **Never** use a polypropylene or PVDF pump with non-conductive flammable fluids as specified by your local fire protection code.

US Code (NFPA 77 Static Electricity) recommends a conductivity greater than  $50 \times 10^{-12}$  Siemens/meter (mhos/meter) over your operating temperature range to reduce the hazard of fire. Consult your fluid supplier to determine the conductivity or resistivity of your fluid. The resistivity must be less than  $2 \times 10^{12}$  ohm-centimeters.

To reduce the risk of static sparking, ground the pump and all other equipment used or located in the pumping area. Check your local electrical code for detailed grounding instructions for your area and type of equipment.

**NOTE:** When pumping conductive flammable fluids with a polypropylene or PVDF pump, **always** ground the fluid system. See the **WARNING** above. Fig. 3 shows a recommended method of grounding flammable fluid containers during filling.

#### Ground all of this equipment:

- **Pump:** The metal pump has a grounding strip in front of the center housing. The acetal pump has a grounding screw on the top manifold. Connect the non-clamp end of the ground wire to the grounding strip or grounding screw, and connect the clamp end of the ground wire to a true earth ground. To order a ground wire and clamp, order Part No. 222011.
- **Air and fluid hoses:** Use only electrically conductive hoses.
- **Air compressor:** Follow the manufacturer's recommendations.
- **Solvent pails used when flushing:** Follow the local code. Use only grounded metal pails, which are conductive. Do not place the pail on a non-conductive surface, such as paper or cardboard, which interrupts the grounding continuity.
- **Fluid supply container:** Follow the local code.

#### GROUNDING A PUMP

##### KEY

- A Pump
- H Fluid drain valve (required)
- S Dispense valve
- T Fluid drain line
- Y Fluid section grounding via grounding strip or grounding screw (required for metal and acetal pumps)
- Z Container ground wire (required)

- 1 Hose must be conductive.
- 2 Dispense valve nozzle must be in contact with container.

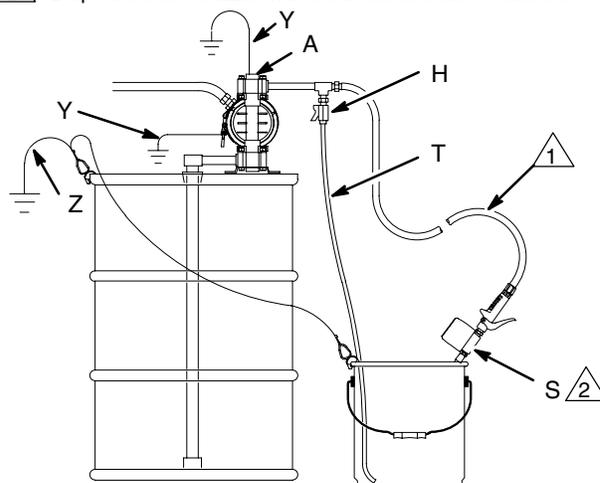


Fig. 3

9079A

# Installation

## Changing the Orientation of the Fluid Inlet and Outlet Ports (Husky 515)

You can change the orientation of the fluid inlet and outlet ports by repositioning the manifolds. For Husky 515, see Fig. 4. For Husky 716, see Fig. 5.

1.  **Relieve the pressure.** See **Pressure Relief Procedure** on page 10.

2. Remove the four manifold nuts (109) or bolts (105).
3. Turn the manifold to the desired position, reinstall the nuts or bolts, and torque to 80 to 90 in-lb (9 to 10 N•m). See **Torque Sequence**, page 29.

**NOTE:** Make sure all manifold o-rings are positioned correctly before you fasten the manifold. Manifold o-rings (139) are shown in Fig. 7 and Fig. 8.

**NOTE:** Pumps with duckbill check valves are shipped with the inlet manifold on top and the outlet manifold on the bottom. See page 14 for details.

1. Torque to 80 to 90 in-lb (9 to 10 N•m). See **Torque Sequence**, page 29.

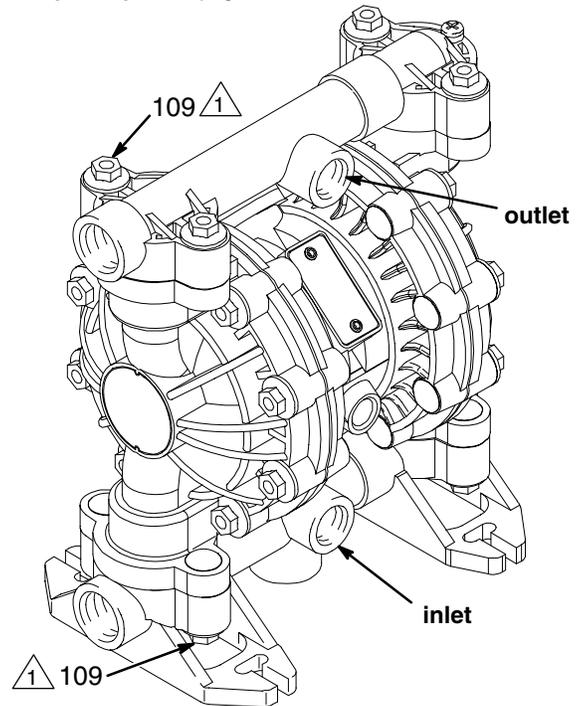


Fig. 4

9065A

1. Torque to 80 to 90 in-lb (9 to 10 N•m). See **Torque Sequence**, page 29.

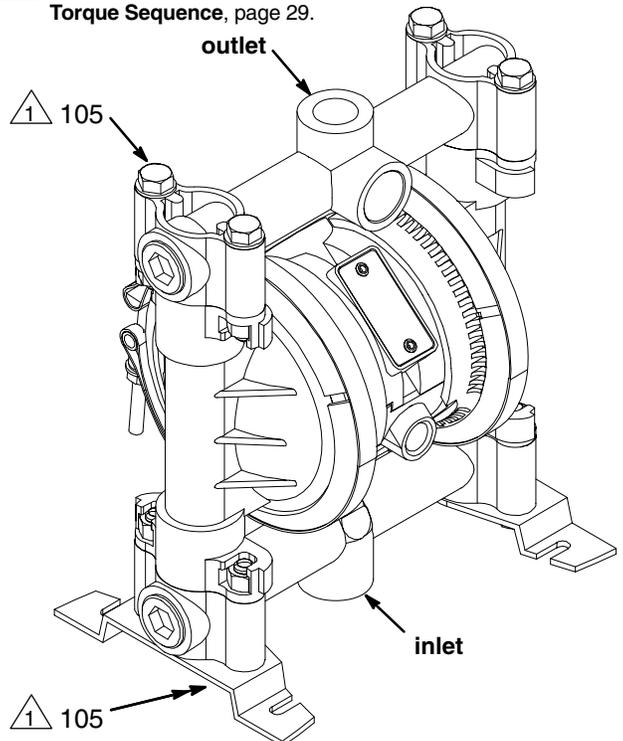


Fig. 5

9071A

# Operation

## Pressure Relief Procedure

### **WARNING**

#### **PRESSURIZED EQUIPMENT HAZARD**

The equipment stays pressurized until pressure is manually relieved. To reduce the risk of serious injury from pressurized fluid, accidental spray, or splashing fluid, follow this procedure whenever you

- Are instructed to relieve pressure
- Stop pumping
- Check, clean, or service any system equipment
- Install or clean fluid nozzles

1. Shut off the air to the pump.
2. Open the dispensing valve, if used.
3. Open the fluid drain valve to relieve all fluid pressure, and have a container ready to catch the drainage.

## Flush Pump Before First Use

The pump was tested with water. Prior to first use, flush the pump thoroughly with a compatible solvent.

Reactor feed pumps, part numbers 246484, 246485, and 257447, were tested with lightweight oil, which is left in the fluid passages. To avoid contaminating your fluid with oil, flush the pump with a compatible solvent before using the equipment. Follow the steps under **Starting and Adjusting Pump**.

## Starting and Adjusting Pump

1.   Read **Toxic Fluid Hazard** on page 3.
2.  If lifting the pump, follow the **Pressure Relief Procedure** above.
3.    Be sure the pump is properly grounded. Read **Fire and Explosion Hazard** on page 3.
4. Check all fittings to be sure they are tight. Use a compatible liquid thread sealant on all male threads. Tighten the fluid inlet and outlet fittings snugly. Do not overtighten the fittings into the pump.

5. Place the suction tube (if used) in the fluid to be pumped.

**NOTE:** If the inlet fluid pressure to the pump is more than 25% of the outlet working pressure, the ball check valves will not close fast enough, resulting in inefficient pump operation.

6. Place the end of the fluid hose (K) into an appropriate container.
7. Close the fluid drain valve (H).
8. With the pump air regulator (G) closed, open all bleed-type master air valves (B, E).
9. If the fluid hose has a dispensing device, hold it open while continuing with the following step. Slowly open the air regulator (G) until the pump starts to cycle. Allow the pump to cycle slowly until all air is pushed out of the lines and the pump is primed.

*If you are flushing*, run the pump long enough to thoroughly clean the pump and hoses. Close the air regulator. Remove the suction tube from the solvent and place it in the fluid to be pumped.

## Operation of Remote Piloted Pumps

1. Fig. 2 and Parts Drawings. Follow preceding steps 1 through 8 of **Starting and Adjusting Pump**.
2. Open air regulator (G).

### **WARNING**

The pump may cycle once before the external signal is applied. Injury is possible. If pump cycles, wait until end before proceeding.

3. Pump will operate when air pressure is alternately applied to push type connectors (16).

**NOTE:** Leaving air pressure applied to the air motor for extended periods when the pump is not running may shorten the diaphragm life. Using a 3-way solenoid valve to automatically relieve the pressure on the air motor when the metering cycle is complete prevents this from occurring.

## Pump Shutdown

 At the end of the work shift, **relieve the pressure** as described in **Pressure Relief Procedure** at left.

# Maintenance

## Lubrication

The air valve is lubricated at the factory to operate without additional lubrication. If you want to provide additional lubrication, remove the hose from the pump air inlet and add two drops of machine oil to the air inlet every 500 hours of operation or every month.

### CAUTION

Do not over-lubricate the pump. Oil is exhausted through the muffler, which could contaminate your fluid supply or other equipment. Excessive lubrication can also cause the pump to malfunction.

## Flushing and Storage

Flush the pump to prevent the fluid you are pumping from drying or freezing in the pump and damaging it. Use a compatible solvent.

Always flush the pump and **relieve the pressure** before you store it for any length of time.



Read **Pressure Relief Procedure** on page 10.

## Tightening Threaded Connections

Before each use, check all hoses for wear or damage and replace as necessary. Check to be sure all threaded connections are tight and leak-free.

Check fasteners. Tighten or retorque as necessary. Although pump use varies, a general guideline is to retorque fasteners every two months. See **Torque Sequence**, page 29.

## Preventive Maintenance Schedule

Establish a preventive maintenance schedule, based on the pump's service history. This is especially important for prevention of spills or leakage due to diaphragm failure.

# Troubleshooting



Read **Pressure Relief Procedure** on page 10, and **relieve the pressure** before you check or service the equipment. Check all possible problems and causes before disassembling the pump.

| PROBLEM  | CAUSE  | SOLUTION   |
|--|--|--|
| Pump will not cycle, or cycles once and stops.           | Air valve is stuck or dirty.                   | Use filtered air.                                |
| Pump cycles at stall or fails to hold pressure at stall. | Leaky check valves or o-rings.                 | Replace.   |
|  | Worn check balls or duckbill valves or guides. | Replace.   |
|  | Check ball wedged in guide.                    | Repair or replace.                               |
|  | Worn diaphragm shaft seals.                    | Replace.   |
| Pump operates erratically.                               | Clogged suction line.                          | Inspect; clear.                                  |
|  | Sticky or leaking check valve balls.           | Clean or replace.                                |
|  | Diaphragm ruptured.                            | Replace.   |
| Air bubbles in fluid.                                    | Suction line is loose.                         | Tighten.   |
|  | Diaphragm ruptured.                            | Replace.   |
|  | Loose manifolds or damaged manifold o-rings.   | Tighten manifold bolts or nuts; replace o-rings. |
|  | Loose fluid side diaphragm plates.             | Tighten.   |
| Fluid in exhaust air.                                    | Diaphragm ruptured.                            | Replace.   |
|  | Loose fluid side diaphragm plates.             | Tighten.   |
|  | Worn diaphragm shaft seals.                    | Replace.   |
| Pump exhausts air from clamps (metal pumps).             | Loose clamps.                                  | Tighten clamp nuts.                              |
|  | Air valve o-ring is damaged.                   | Inspect; replace.                                |
| Pump leaks fluid from check valves.                      | Worn or damaged check valve o-rings.           | Inspect; replace.                                |

# Service

## Air Valve (Husky 515 and Husky 716 Pumps)

**NOTE:** Air Valve Repair Kit 241657 is available. Parts included in the kit are marked with a dagger (†) in Fig. 6 and in the Parts Drawings and Lists. A tube of general purpose grease 111920 is supplied in the kit. Service the air valve as follows. See Fig. 6.



1. **Relieve the pressure.** See **Pressure Relief Procedure** on page 10.

2. Remove the cover (10) and the o-ring (4).
3. Remove the carriage plungers (7), carriages (8), carriage pins (9), and valve plate (14) from the center housing (11).
4. Clean all the parts, and inspect them for wear or damage.


**NOTE:** If you are installing the new Air Valve Repair Kit 241657, use all the parts in the kit.

5. Grease the lapped surface of the valve plate (14), and install the valve plate with the lapped surface facing up.
6. Grease the bores of the center housing (11), install the u-cup packings (2) on the carriage plungers (7), and slide the carriage plungers into the carriage plunger bores. See the following important installation notes:

### NOTES:

- When you install each u-cup packing (2) on each carriage plunger (7), make sure the lips of the u-cup packing face toward the **clip end** (the smaller end) of the carriage plunger.
  - When you slide the carriage plungers (7) into the bores, slide them in with the clip ends (the smaller ends) facing toward the center of the center housing (11).
7. Grease the carriage pins (9), and slide the carriage pins into the carriage pin bores.
  8. Install the carriages (8). Make sure the carriages engage the clip ends of the carriage plungers (7) and carriage pins (9).
  9. Grease the o-ring (4), and seat it in the groove around the cover opening of the center housing (11).
  10. Screw the cover (10) into the center housing, and torque the cover to 80 to 100 in-lb (9.0 to 13.6 N-m).

**NOTE:** Center housing (11) is shown separated from the air covers, but it is not necessary to remove the air covers for this service. Leave the center housing and air covers assembled for this service.

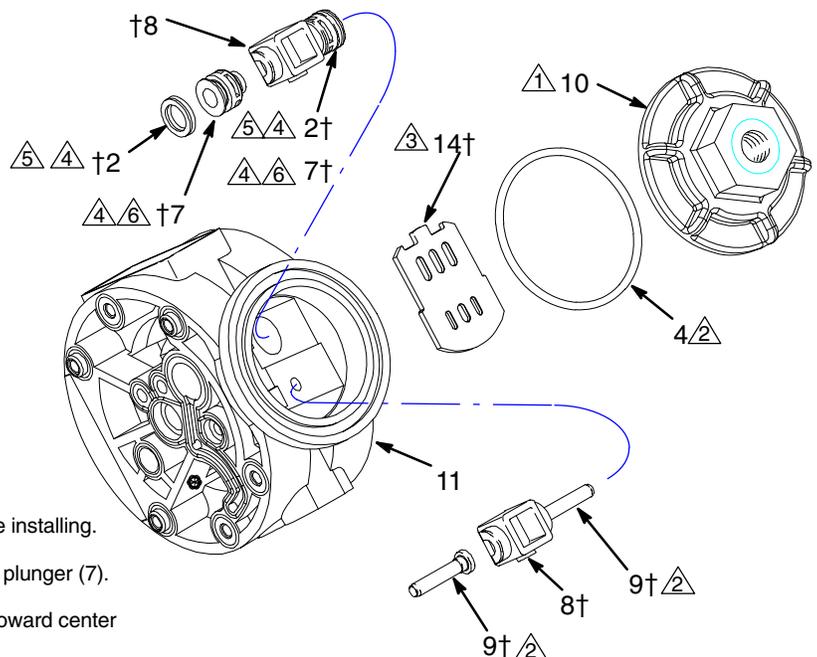

† Included in Air Valve Repair Kit 241657

1. Torque to 80 to 100 in-lb (9.0 to 13.6 N-m).
2. Apply grease.
3. Apply grease to lapped face.
4. Apply grease to bores of center housing (11) before installing.
5. Seal lips face clip end (the smaller end) of carriage plunger (7).
6. Install with the clip ends (the smaller ends) facing toward center of center housing (11).

**Fig. 6**

9069A

# Service

## Ball or Duckbill Check Valves

**NOTE:** Fluid Section Repair Kit D05XXX is available. See page 22 to order the correct kit for your pump. Parts included in the kit are marked with a double dagger (‡) in Fig. 7 and Fig. 8 and in the Parts Drawings and Lists. General purpose grease 111920 and Adhesive 113500 are supplied in the kit.




1. **Relieve the pressure.** See **Pressure Relief Procedure** on page 10.

2. Remove the top and bottom manifolds (102, 103).
3. Remove all parts shown with a dagger (‡) in Fig. 7 and Fig. 8.
4. Clean all parts, and replace worn or damaged parts.
5. Reassemble the pump.

**NOTE:** Torque the manifold nuts (109) or bolts (105) to 80 to 90 in-lb (9 to 10 N•m). See **Torque Sequence**, page 29.


## Inlet and Outlet for Pumps with Duckbill Check Valves

Pumps with duckbill check valves are shipped with the inlet manifold on top and the outlet manifold on the bottom. To make the inlet manifold on the bottom and the outlet manifold on the top, rotate each of the four duckbill assemblies vertically 180° as shown below.

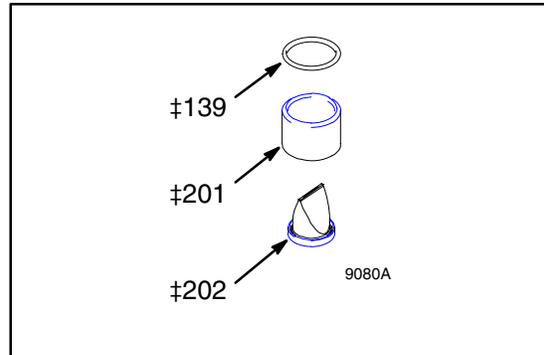

# Service

**Husky 515**

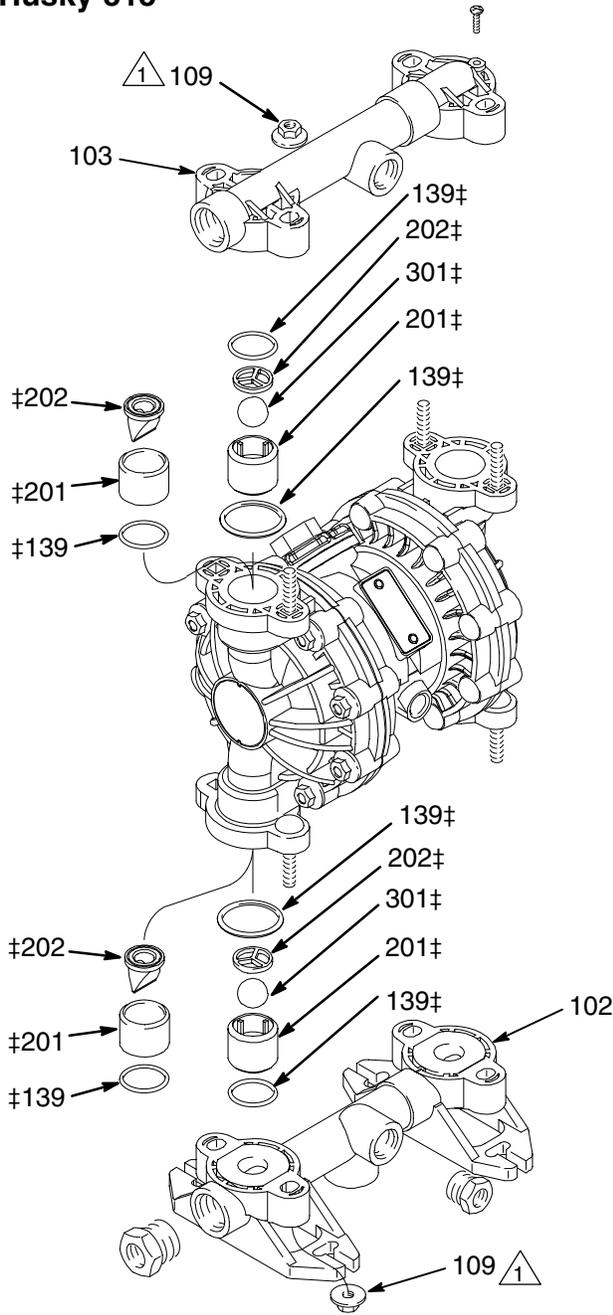


 Torque to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

**Fig. 7**

9067A

**Husky 716**

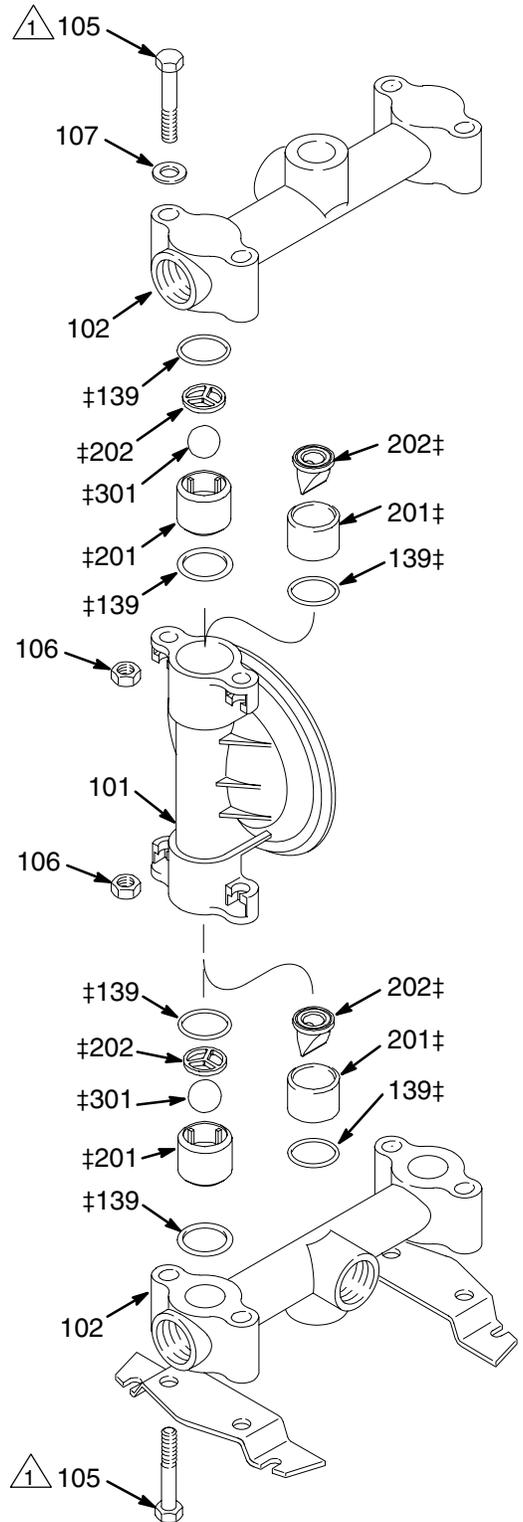

 Torque to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

**Fig. 8**

9081A

# Service

## Diaphragms (Husky 515)

**NOTE:** Fluid Section Repair Kit D05XXX is available. See page 22 to order the correct kit for your pump. Parts included in the kit are marked with a double dagger (‡) in Fig. 9 and in the Parts Drawings and Lists. General purpose grease 111920 and Adhesive 113500 are supplied in the kit. Service the diaphragms as follows. See Fig. 9.

### Disassembly



1. **Relieve the pressure.** See **Pressure Relief Procedure** on page 10.

2. Remove manifolds (102 and 103) and fluid covers (101).

**NOTE:** Make sure all the check valve parts stay in place. See Fig. 7 on page 15.

3. Remove one of the fluid-side diaphragm plates (105) (whichever one comes loose first when you use a wrench on the hex of each), and pull the diaphragm shaft out of the center housing (11).

**Overmolded Diaphragms:** The air cover bolts may make it difficult to remove the overmolded diaphragms on the 515 pump. Use a flat surface that fits within the bolt pattern to apply pressure on one of the diaphragms to shift the diaphragm shaft to one side. Apply pressure until the other diaphragm is separated from the air cover. Rotate the separated diaphragm counterclockwise until the diaphragm assembly comes free. Pull the second diaphragm assembly and the diaphragm shaft (15) out of the center housing. (11)

4. Use a wrench on the flats of the diaphragm shaft (15) to remove the other fluid-side diaphragm plate (105) from the diaphragm shaft.

**Overmolded Diaphragms:** Use a wrench on the flats of the diaphragm shaft (15) to remove the second diaphragm.

5. Remove the screws (106), remove the left (114) and right (113) air covers, and remove all old gasket (12) material from the ends of the center housing (11) and the surfaces of the air covers.

6. Remove the diaphragm shaft u-cups (416) and pilot pin o-rings (1).

7. Inspect all parts for wear or damage, and replace as necessary.

### Reassembly

1. Insert a diaphragm shaft u-cup (416) and a pilot pin o-ring (1) into the bores of the center housing (11).

**NOTE:** Make sure the lips of the u-cup face **out** of the center housing.

2. Line up the holes in the gasket (12) with the holes in the end of the center housing (11), and use six screws (106) to fasten an air cover (113 or 114) to the end of the center housing (11). Torque the screws to 35 to 45 in-lb (4.0 to 5.1 N-m).

3. Position the exhaust cover (13) and o-ring (4) on the center housing (11).

4. Repeat steps 1 and 2 for the other end of the center housing and the remaining air cover.

5. Apply medium-strength (blue) Loctite or equivalent to the threads of the fluid-side diaphragm plates (105). Install on one end of the diaphragm shaft (15) the following parts (see proper order in Fig. 9): air-side diaphragm plate (6), backup diaphragm (402, used only on models with PTFE diaphragms), diaphragm (401), and fluid-side diaphragm plate (105).

**NOTE:** The words "AIR SIDE" on the diaphragm (401), the backup diaphragm (402, used only on models with PTFE diaphragms) and the flat side of the air-side diaphragm plate (6) must face toward the diaphragm shaft (15).


**Overmolded Diaphragms:** Assemble the air-side plate (6) onto the diaphragm (401). The words AIR SIDE on the air-side plate must face away from the diaphragm. Apply medium-strength (blue) thread locking adhesive to the threads of the diaphragm assembly. Screw the assembly into the diaphragm shaft (15) hand tight.

6. Put grease on the diaphragm shaft (15), and carefully (do not damage the shaft u-cups) run the diaphragm shaft (15) through the center housing (11) bore.
7. Repeat step 5 for the other end of the diaphragm shaft (15), and torque the fluid-side diaphragm plates (105) to 80 to 90 in-lb (9 to 10 N-m) at 100 rpm maximum.
8. Install the muffler (3).
9. Make sure all the check valve parts are in place. See Fig. 7 on page 15.
10. Reinstall the fluid covers (101) and manifolds (102 and 103), and torque the fluid cover and manifold nuts (109) to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

**Overmolded Diaphragms:** The air cover bolts may make it difficult to assemble the overmolded diaphragms on the 515 pump. Two people are needed. Use a flat surface that fits within the bolt pattern to apply pressure on the diaphragm that has already been assembled. Apply pressure until the diaphragm shaft sticks out of the other end of the center housing far enough to attach the second diaphragm assembly. Screw the assembly into the shaft (15) hand tight.

# Service

## Diaphragms (Husky 515)

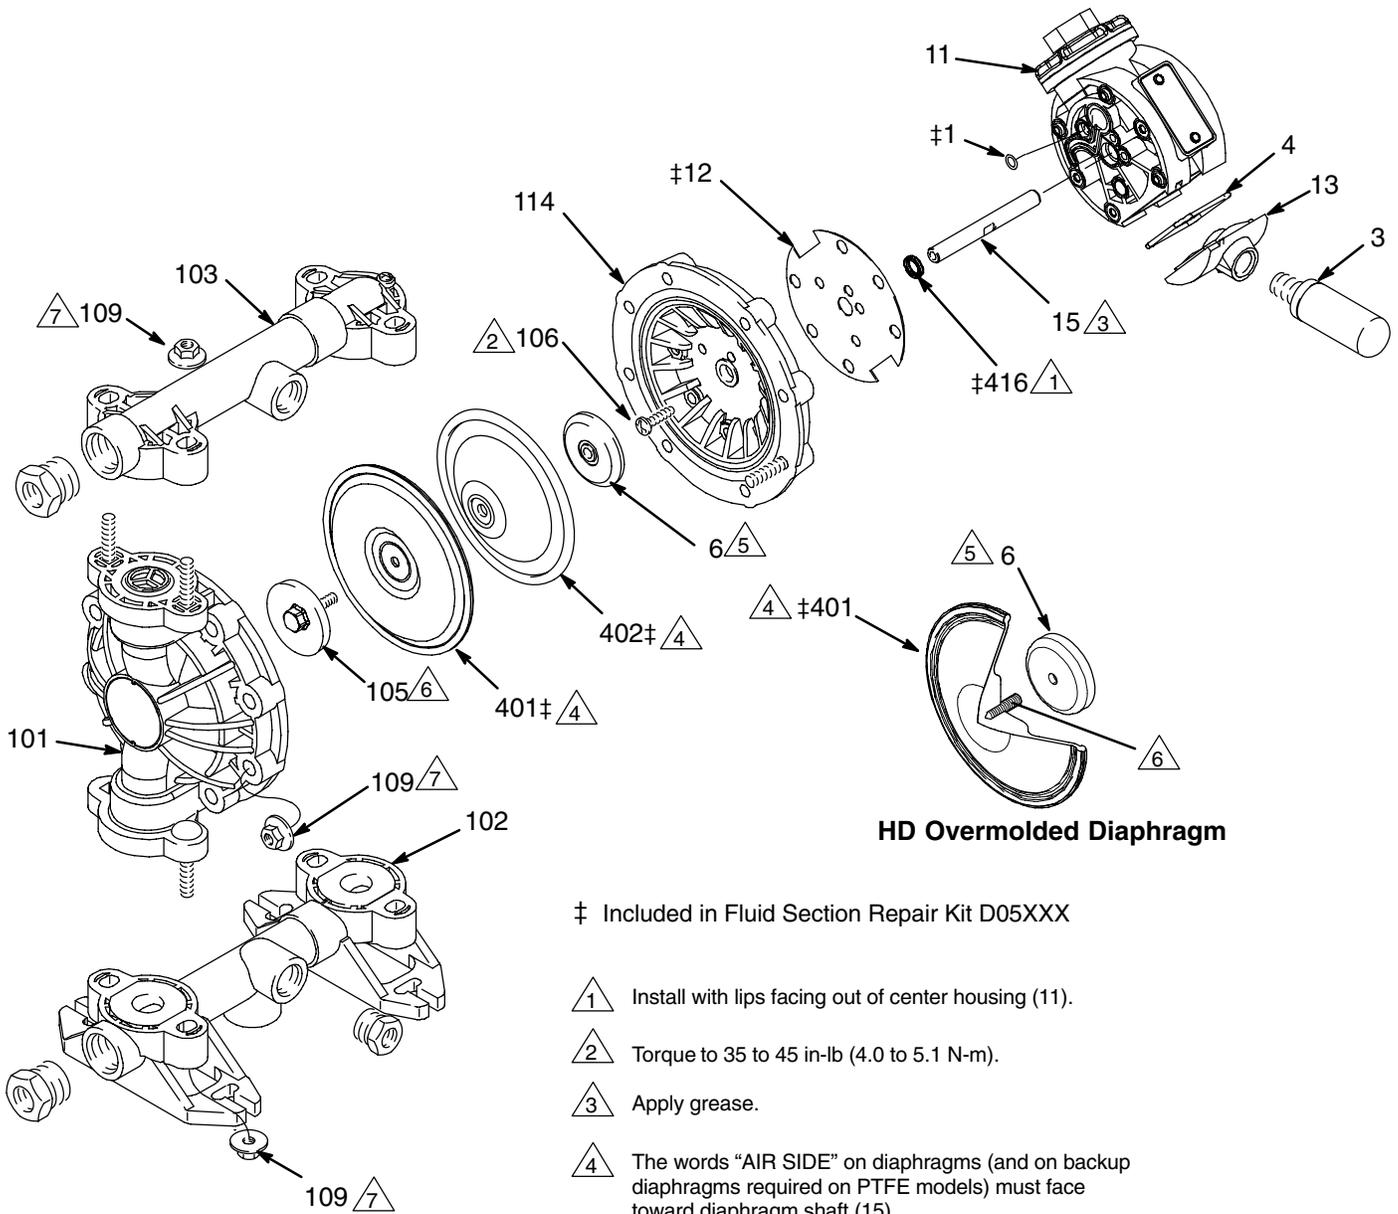

**HD Overmolded Diaphragm**

‡ Included in Fluid Section Repair Kit D05XXX

- 1 Install with lips facing out of center housing (11).
- 2 Torque to 35 to 45 in-lb (4.0 to 5.1 N-m).
- 3 Apply grease.
- 4 The words "AIR SIDE" on diaphragms (and on backup diaphragms required on PTFE models) must face toward diaphragm shaft (15).
- 5 Flat side of air-side diaphragm plate must face toward diaphragm shaft (15).
- 6 Apply medium-strength (blue) Loctite® or equivalent to threads, and torque to 80 to 90 in-lb (9 to 10 N-m) at 100 rpm maximum.
- 7 Torque to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

**Fig. 9**

# Service

## Diaphragms (Husky 716)

**NOTE:** Fluid Section Repair Kit D05XXX is available. See page 22 to order the correct kit for your pump. Parts included in the kit are marked with a double dagger (‡) in Fig. 10 and in the Parts Drawings and Lists. General purpose grease 111920 and Adhesive 113500 are supplied in the kit. Service the diaphragms as follows. See Fig. 10.

### Disassembly



1. **Relieve the pressure.** See **Pressure Relief Procedure** on page 10.

2. Remove the manifolds (102) and fluid covers (101).

**NOTE:** Make sure all the check valve parts stay in place. See Fig. 8 on page 15.

3. Remove the grounding strip from the vee clamps (109), and remove the vee clamps.
4. Remove one of the fluid-side diaphragm plates (133) (whichever one comes loose first when you use a wrench on the hex of each), and pull the diaphragm shaft out of the center housing (11).

**Overmolded Diaphragms:** Grip both diaphragms securely around the outer edge and rotate counter-clockwise. One diaphragm assembly will come free and the other will remain attached to the diaphragm shaft (15). Remove the freed diaphragm and the air side plate (6). Pull the other diaphragm assembly and the diaphragm shaft (15) out of the center housing (11).

5. Use a wrench on the flats of the diaphragm shaft (15) to remove the other fluid-side diaphragm plate (133) from the diaphragm shaft.

**Overmolded Diaphragms:** Use a wrench on the flats of the diaphragm shaft (15) to remove the second diaphragm from the diaphragm shaft.

6. Remove the screws (141) and air covers (136), and remove all old gasket (12) material from the ends of the center housing (11) and the surfaces of the air covers.
7. Remove the diaphragm shaft u-cups (416) and pilot pin o-rings (1).
8. Inspect all parts for wear or damage, and replace as necessary.

### Reassembly

1. Insert a diaphragm shaft u-cup (416) and a pilot pin o-ring (1) into the end of the diaphragm shaft bore of the center housing (11).

**NOTE:** Make sure the lips of the u-cup face **out** of the center housing.

2. Line up the holes in the gasket (12) with the holes in the end of the center housing (11), and use six screws (141) to fasten an air cover (136) to the end of the center housing (11). Torque the screws to 35 to 45 in-lb (4.0 to 5.1 N-m).
3. Position the exhaust cover (13) and o-ring (4) on the center housing (11).
4. Repeat steps 1 and 2 for the other end of the center housing and the remaining air cover.
5. Apply medium-strength (blue) Loctite or equivalent to the threads of the screws (140). Install on one end of the diaphragm shaft (15) the following parts (see proper order in Fig. 10): air-side diaphragm plate (6), backup diaphragm (402, used only on models with PTFE diaphragms), diaphragm (401), fluid-side diaphragm plate (133), o-ring (115), and screw (140).

**NOTE:** The words "AIR SIDE" on the diaphragm (401), the backup diaphragm (402, used only on models with PTFE diaphragms), and the flat side of the air-side diaphragm plate (6) must face toward the diaphragm shaft (15).

**Overmolded Diaphragms:** Assemble the air-side plate (6) onto the diaphragm (401). The words AIR SIDE on the air side plate must face away from the diaphragm. Apply medium-strength (blue) thread locking adhesive to the threads of the diaphragm assembly. Screw the assembly into the diaphragm shaft (15) hand tight.

6. Put grease on the diaphragm shaft (15), and carefully (do not damage the shaft u-cups) run the diaphragm shaft (15) through the center housing (11) bore.
7. Repeat step 5 for the other end of the diaphragm shaft (15), and torque the diaphragm shaft screws (140) to 80 to 90 in-lb (9 to 10 N-m) at 100 rpm maximum.

**Overmolded Diaphragms:** Repeat Step 5 for the other end of the diaphragm shaft (15).


8. Install the muffler (3).

When you install the vee clamps in step 10, orient the center housing (11) so the air inlet is approximately 45° above horizontal and the muffler (3) is approximately horizontal.

9. Apply thin, even film of grease to inside of vee clamp (109).
10. Position the fluid covers (101), install the vee clamps (109) around the fluid and air covers, install the grounding strip on the vee clamps, and torque the vee clamp nuts to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.
11. Make sure all the check valve parts are in place. See Fig. 8 on page 15.
12. Install the manifolds (102), and torque the manifold bolts (105) to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

# Service

## Diaphragms (Husky 716)

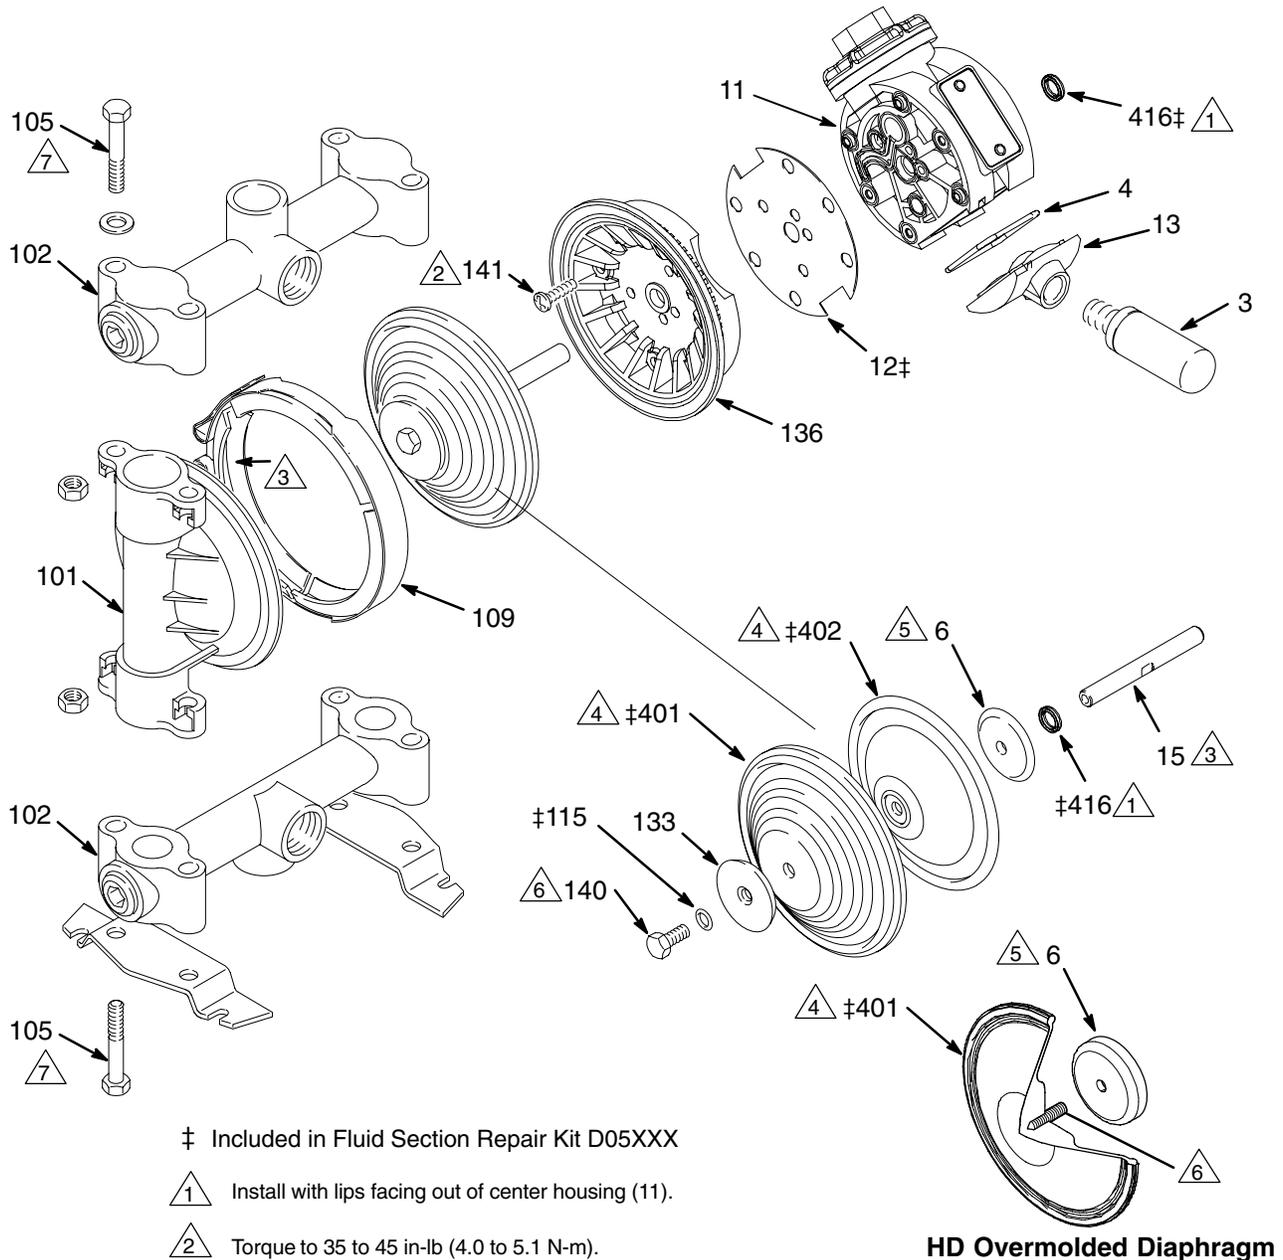

‡ Included in Fluid Section Repair Kit D05XXX

- 1 Install with lips facing out of center housing (11).
- 2 Torque to 35 to 45 in-lb (4.0 to 5.1 N-m).
- 3 Apply grease.
- 4 The words "AIR SIDE" on diaphragms (and on backup diaphragms used on PTFE models) must face toward diaphragm shaft (15).
- 5 Flat side of the air-side diaphragm plate must face toward diaphragm shaft (15).
- 6 Apply medium-strength (blue) Loctite® or equivalent to threads, and torque to 80 to 90 in-lb (9 to 10 N-m) at 100 rpm maximum.
- 7 Torque to 80 to 90 in-lb (9 to 10 N-m). See **Torque Sequence**, page 29.

Fig. 10

9072A

# Husky 515 and Husky 716 Pump Matrix

Your Model No. is marked on the pump's serial plate. To determine a pump Model No. from the following matrix, select the six digits that describe the pump, working from left to right. The first digit is always **D**, designating Husky diaphragm pumps. The remaining five digits define the air motor type and the materials of construction. For example, a pump with a standard air motor, acetal fluid section, acetal seats, PTFE balls, and PTFE diaphragms is Model **D 5 1 2 1 1**.

| Column 1                 | Column 2                                  | Column 3                                      | Column 4                 | Column 5                   | Column 6                   |
|--------------------------|---|---|--------------------------|----------------------------|----------------------------|
| <b>Diaphragm Pump</b>    | <b>Air Motor</b>                          | <b>Fluid Section</b>                          | <b>Guides</b>            | <b>Balls</b>               | <b>Diaphragms</b>          |
| <b>D</b> (for all pumps) | <b>4</b> (Husky 515/716; remote-operated) | <b>1</b> (acetal)<br>Husky 515, NPT           | <b>2</b> (acetal)        | <b>1</b> (PTFE)            | <b>1</b> (PTFE)            |
|                          | <b>5</b> (Husky 515/716; standard)        | <b>2</b> (polypropylene)<br>Husky 515, NPT    | <b>3</b> (316 sst)       | <b>3</b> (316 sst)         |                            |
|                          |   | <b>3</b> (aluminum)<br>Husky 716, NPT         | <b>9</b> (polypropylene) | <b>5</b> (TPE)             | <b>5</b> (TPE)             |
|                          |   | <b>4</b> (Stainless Steel)<br>Husky 716, NPT  | <b>A</b> (PVDF)          | <b>6</b> (Santoprene®)     | <b>6</b> (Santoprene®)     |
|                          |   | <b>5</b> (PVDF)<br>Husky 515, NPT             | <b>D</b> (duckbill)      | <b>7</b> (buna-N)          | <b>7</b> (buna-N)          |
|                          |   | <b>A</b> (acetal)<br>Husky 515, BSPT          |                          | <b>8</b> (fluoroelastomer) | <b>8</b> (fluoroelastomer) |
|                          |   | <b>B</b> (polypropylene)<br>Husky 515, BSPT   |                          |                            |                            |
|                          |   | <b>C</b> (aluminum)<br>Husky 716, BSPT        |                          |                            |                            |
|                          |   | <b>D</b> (stainless steel)<br>Husky 716, BSPT |                          |                            |                            |
|                          | <b>E</b> (PVDF)<br>Husky 515, BSPT        |   |                          |                            |                            |

**Note:** The following models have ports that open downward. See page 23.

- Husky 515: 241564, 241565, and 241484
- Husky 716: 243305, 243306, 243307, 246485

**Note:** The following models have Heavy Duty Overmolded PTFE/EPDM Diaphragms. See page 23.

- Husky 515: 24N093–24N098
- Husky 716: 24N257–24N262

## Husky 515 and Husky 716 Repair Kits

**NOTE:** Order Repair Kits separately.

To order the Air Valve Repair Kit, order **Part No. 241657**.

To order the Fluid Section Repair Kit, order **Part No. D05 \_ \_ \_**. For the last three digits, use the last three digits of your pump Model No.

The guides in **Part No. D\_ \_ 3\_ \_** pumps are powdered 316 stainless steel. Machined 316 stainless steel guides are available separately in a kit, **Part No. 24F846**.

**Part No. 24N320:** Husky 515/716 HD Overmolded PTFE/EPDM Diaphragm Repair Kit

**Part No. 24N321:** Husky 515/716 HD overmolded PTFE/EPDM Diaphragm Repair Kit, with new air side diaphragm plates.

# Additional Husky 515 and Husky 716 Pumps

## Model 241564, 515 pump

Same as the D51211 pump, but with an open downward port.

## Model 241565, 515 pump

Same as the D52911 pump, but with an open downward port.

## Model 248171, 515 pump

Same as the D51277 pump, except with split inlets/outlets.

## Model 248172, 515 pump

Same as the D51255 pump, except with split inlets/outlets.

## Model 248173, 515 pump

Same as the D52977 pump, except with split inlets/outlets.

## Model 248174, 515 pump

Same as the D52955 pump, except with split inlets/outlets.

## Model 246484, 515 pump

Same as the D51331 pump, but with an open downward port. Use inlet manifold 241558.

## Model 24G745, 515 pump

Same as the D5B981 pump, but with BSPP threads.

## Model 246485, 716 pump

Same as the D53331 pump, but with an open downward port. Use inlet manifold 190246.

## Model 243305, 716 pump

Same as the D53266 pump, but with an open downward port. Use inlet manifold 190246.

## Model 243306, 716 pump

Same as the D53277 pump, but with an open downward port. Use inlet manifold 190246.

## Model 243307, 716 pump

Same as the D53211 pump, but with an open downward port. Use inlet manifold 190246.

## Model 257447, 716 pump

Same as the D54311 pump, but tested for use with moisture-sensitive materials.

## Model 24B674, 716 pump

Same as the D54311 pump

## Pumps with Overmolded Diaphragms

### Model 24N093, 515 pump

Same as the D5291\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N094, 515 pump

Same as the D5B91\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N095, 515 pump

Same as the D55A1\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N096, 515 pump

Same as the D5121\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N097, 515 pump

Same as the D5133\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N098, 515 pump

Same as the D5A21\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N257, 716 pump

Same as the D5321\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N258, 716 pump

Same as the D5331\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N259, 716 pump

Same as the D5333\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N260, 716 pump

Same as the D5421\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N261, 716 pump

Same as the D5431\_ pump, but with overmolded diaphragm parts shown in table.

### Model 24N262, 716 pump

Same as the D5433\_ pump, but with overmolded diaphragm parts shown in table.

| Ref. | Part   | Description   | Qty. |
|------|--------|---|------|
| 6    | 16M001 | PLATE, air side                                     | 2    |
| 115  | —      | not used  | 0    |
| 133  | —      | not used  | 0    |
| 140  | —      | not used  | 0    |
| 401  | 16H679 | DIAPHRAGM, HD, overmolded, PTFE/EPDM, with setscrew | 2    |
| 402  | —      | not used  | 0    |

# Husky 515 and Husky 716 Common Parts

See the Pump Matrix on page 22 for an explanation of the **Matrix Column** and the **Digit**.

## Air Motor Parts List (Matrix Column 2)

| Digit | Ref. No. | Part No. | Description                | Qty |
|-------|----------|----------|----------------------------|-----|
| 5     | 1†       | 114866   | PACKING, o-ring            | 2   |
|       | 2†       | 108808   | PACKING, u-cup             | 2   |
|       | 3        | 112933   | MUFFLER                    | 1   |
|       | 4†       | 162942   | PACKING, o-ring            | 2   |
|       | 6        | 195025   | PLATE, diaphragm, air side | 2   |
|       | 7†       | 15Y825   | PLUNGER, carriage          | 2   |
|       | 8†       | 192595   | CARRIAGE                   | 2   |
|       | 9†       | 192596   | PIN, carriage              | 2   |
|       | 10       | 192597   | COVER, valve chamber       | 1   |
|       | 11       | 192602   | HOUSING, center            | 1   |
|       | 11*      | 194380   | HOUSING, center            | 1   |
|       | 12‡      | 192765   | GASKET                     | 2   |
|       | 13       | 194247   | COVER, exhaust             | 1   |
|       | 14†      | 194269   | PLATE, valve               | 1   |
|       | 15       | 192601   | SHAFT, diaphragm           | 1   |
|       | 16*      | 115671   | CONNECTOR, male            | 2   |

## Guide Parts List (Matrix Column 4)

| Digit | Ref. No. | Part No. | Description          | Qty |
|-------|----------|----------|----------------------|-----|
| 2     | 201†     | 186691   | GUIDE; acetal        | 4   |
|       | 202†     | 186692   | STOP; acetal         | 4   |
| 3     | 201†     | 187242   | GUIDE; sst           | 4   |
|       | 202†     | 187243   | STOP; sst            | 4   |
| 9     | 201†     | 186776   | GUIDE; polypropylene | 4   |
|       | 202†     | 186777   | STOP; polypropylene  | 4   |
| A     | 201†     | 192665   | GUIDE; PVDF          | 4   |
|       | 202†     | 192668   | STOP; PVDF           | 4   |

|   |      |        |                 |   |
|---|------|--------|-----------------|---|
| D | 201‡ | 192138 | SPACER          | 4 |
|   | 202‡ | 192137 | VALVE, duckbill | 4 |

## Ball Parts List (Matrix Column 5)

| Digit | Ref. No. | Part No. | Description           | Qty |
|-------|----------|----------|-----------------------|-----|
| 1     | 301†     | 108639   | BALL; PTFE            | 4   |
| 3     | 301†     | 103462   | BALL; sst             | 4   |
| 5     | 301†     | 112945   | BALL; TPE             | 4   |
| 6     | 301†     | 112946   | BALL; Santoprene®     | 4   |
| 7     | 301†     | 108944   | BALL; buna-N          | 4   |
| 8     | 301†     | 112959   | BALL; fluoroelastomer | 4   |

## Diaphragm Parts List (Matrix Column 6)

| Digit | Ref. No. | Part No. | Description                     | Qty |
|-------|----------|----------|---------------------------------|-----|
| 1     | 416†     | 108808   | PACKING, u-cup                  | 2   |
|       | 401†     | 108839   | DIAPHRAGM; PTFE                 | 2   |
|       | 402†     | 183542   | DIAPHRAGM, backup; polyurethane | 2   |
| 5     | 416†     | 108808   | PACKING, u-cup                  | 2   |
|       | 401†     | 189537   | DIAPHRAGM; TPE                  | 2   |
| 6     | 416†     | 108808   | PACKING, u-cup                  | 2   |
|       | 401†     | 189536   | DIAPHRAGM; Santoprene®          | 2   |
| 7     | 416†     | 108808   | PACKING, u-cup                  | 2   |
|       | 401†     | 190148   | DIAPHRAGM; buna-N               | 2   |
| 8     | 416†     | 108808   | PACKING, u-cup                  | 2   |
|       | 401†     | 190149   | DIAPHRAGM; fluoroelastomer      | 2   |

† Included in Air Valve Repair Kit 241657

‡ Included in Fluid Section Repair Kit D05XXX


\* These parts are unique to the remote operated air motor.

# Husky 515 Parts Drawing

† Included in Air Valve Repair Kit 241657

‡ Included in Fluid Section Repair Kit D05XXX

\* These parts are unique to the remote operated air motor.

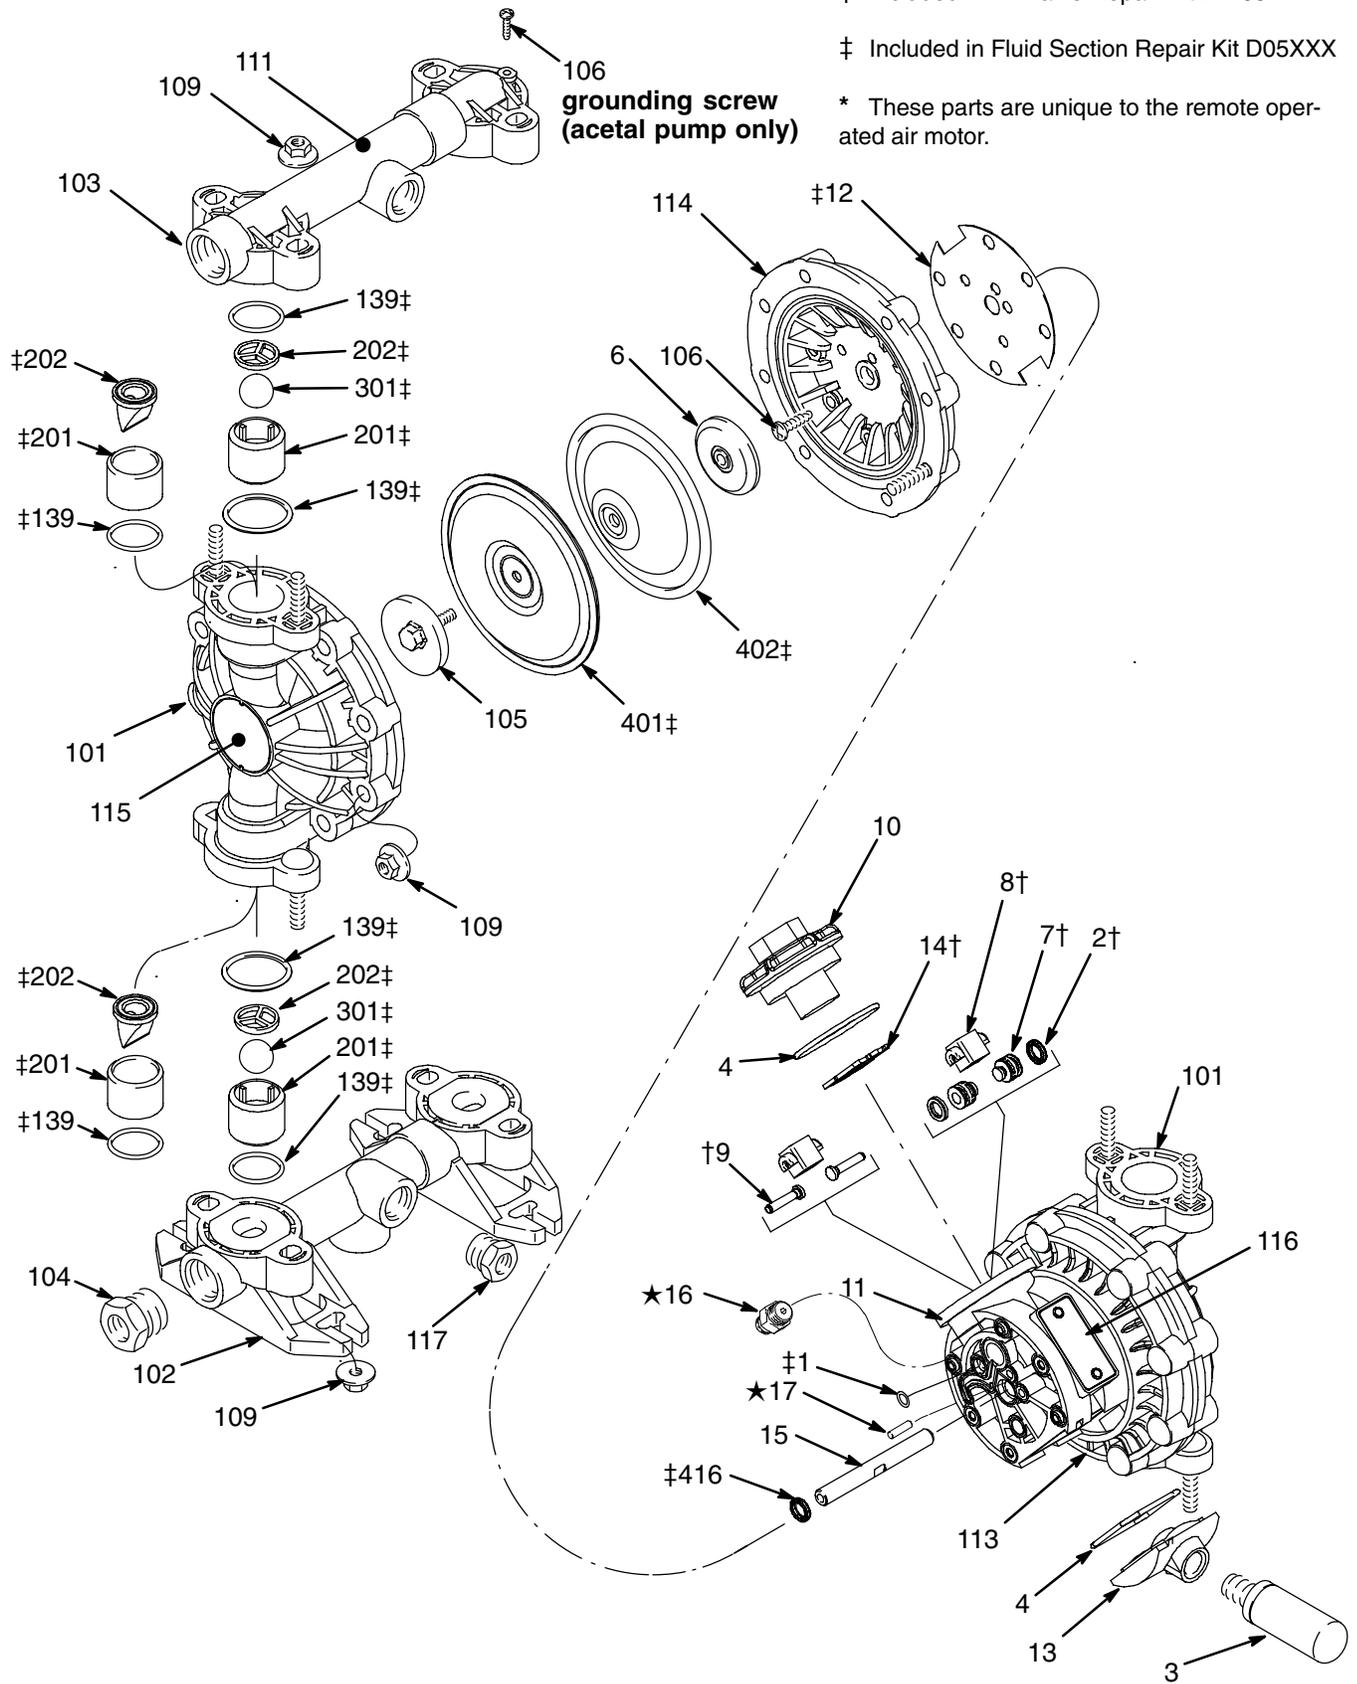

9064B

# Husky 515 Fluid Section Parts List

See the Pump Matrix on page 22 for an explanation of the **Matrix Column** and the **Digit**.

See page 24 for Air Motor Parts List (Matrix Column 2)

## Husky 515 Fluid Section Parts List (Matrix Column 3)

| Ref. No. | Acetal Pumps<br>Digit: 1 (NPT)<br>Digit: A (BSPT) |  |     | Polypropylene Pumps<br>Digit: 2 (NPT)<br>Digit: B (BSPT) |   |     | PVDF Pumps<br>Digit: 5 (NPT)<br>Digit: E (BSPT) |                               |     |
|----------|---|--|-----|--|---|-----|---|-------------------------------|-----|
|          | Part No.  | Description                                  | Qty | Part No.   | Description   | Qty | Part No.  | Description                   | Qty |
| 101      | 192559  | COVER, fluid; acetal                         | 2   | 192558   | COVER, fluid; polypropylene                         | 2   | 192560  | COVER, fluid; PVDF            | 2   |
| 102      | 192571  | MANIFOLD, inlet; acetal; NPT                 | 1   | 192570   | MANIFOLD, inlet; polypropylene; NPT                 | 1   | 192572  | MANIFOLD, inlet; PVDF; NPT    | 1   |
| 102      | 192576  | MANIFOLD, inlet; acetal; BSPT                | 1   | 192575   | MANIFOLD, inlet; polypropylene; BSPT                | 1   | 192577  | MANIFOLD, inlet; PVDF; BSPT   | 1   |
| 102*     | 241558  | MANIFOLD, inlet; open downspout, acetal; NPT | 1   | 241557   | MANIFOLD, inlet; open downspout, polypropylene; NPT | 1   |   | Not applicable to PVDF pumps  |     |
| 102      |   |  |     | 124847   | MANIFOLD, inlet; polypropylene; BSPP                | 1   |   |                               |     |
| 103      | 192562  | MANIFOLD, outlet; acetal; NPT                | 1   | 192561   | MANIFOLD, outlet; polypropylene; NPT                | 1   | 192563  | MANIFOLD, outlet; PVDF; NPT   | 1   |
| 103      | 192567  | MANIFOLD, outlet; acetal; BSPT               | 1   | 192566   | MANIFOLD, outlet; polypropylene; BSPT               | 1   | 192568  | MANIFOLD, outlet; PVDF; BSPT  | 1   |
| 103      |   |  |     | 124848   | MANIFOLD, outlet; polypropylene; BSPP               | 1   |   |                               |     |
| 104      | 194362  | PLUG; acetal; 3/4 NPT                        | 2   | 194361   | PLUG; polypropylene; 3/4 NPT                        | 2   | 194363  | PLUG; PVDF; 3/4 NPT           | 2   |
| 104      | 194368  | PLUG; acetal; 3/4 BSPT                       | 2   | 194367   | PLUG; polypropylene; 3/4 BSPT                       | 2   | 194369  | PLUG; PVDF; 3/4 BSPT          | 2   |
| 105      | 187711  | PLATE, diaphragm, fluid; acetal              | 2   | 187712   | PLATE, diaphragm, fluid; polypropylene              | 2   | 192679  | PLATE, diaphragm, fluid; PVDF | 2   |
| 106      | 114882  | SCREW, torx                                  | 13  | 114882   | SCREW, torx   | 12  | 114882  | SCREW, torx                   | 12  |
| 109      | 114850  | NUT, hex, large flng                         | 24  | 114850   | NUT, hex, large flng                                | 24  | 114850  | NUT, hex, large flng          | 24  |
| 111      | 187732  | LABEL, warning                               | 1   | 187732   | LABEL, warning                                      | 1   | 187732  | LABEL, warning                | 1   |
| 113      | 192599  | COVER, air, right                            | 1   | 192599   | COVER, air, right                                   | 1   | 192599  | COVER, air, right             | 1   |
| 114      | 192600  | COVER, air, left                             | 1   | 192600   | COVER, air, left                                    | 1   | 192600  | COVER, air, left              | 1   |
| 115      | 194352  | LABEL, identification                        | 2   | 194352   | LABEL, identification                               | 2   | 194352  | LABEL, identification         | 2   |
| 116      | 290045  | PLATE, designation                           | 1   | 290045   | PLATE, designation                                  | 1   | 290045  | PLATE, designation            | 1   |
| 117      | 194359  | PLUG; acetal; 1/2 NPT                        | 2   | 194358   | PLUG; polypropylene; 1/2 NPT                        | 2   | 194360  | PLUG; PVDF; 1/2 NPT           | 2   |
| 117      | 194365  | PLUG, acetal; 1/2 BSPT                       | 2   | 194364   | PLUG; polypropylene; 1/2 BSPT                       | 2   | 194366  | PLUG; PVDF; 1/2 BSPT          | 2   |
| 119      | 111183  | RIVET (for plate 116)                        | 2   | 111183   | RIVET (for plate 116)                               | 2   | 111183  | RIVET (for plate 116)         | 2   |
| 139<br>‡ | 114849  | PACKING, o-ring; encapsulated                | 8   | 114849   | PACKING, o-ring; encapsulated                       | 8   | 114849  | PACKING, o-ring; encapsulated | 8   |


\* Inlet manifolds with downspouts are used on pump models 241564, 241565, and 246484 only.

# Husky 716 Parts Drawing

† Included in Air Valve Repair Kit 241657

‡ Included in Fluid Section Repair Kit D05XXX

\* These parts are unique to the remote operated air motor.

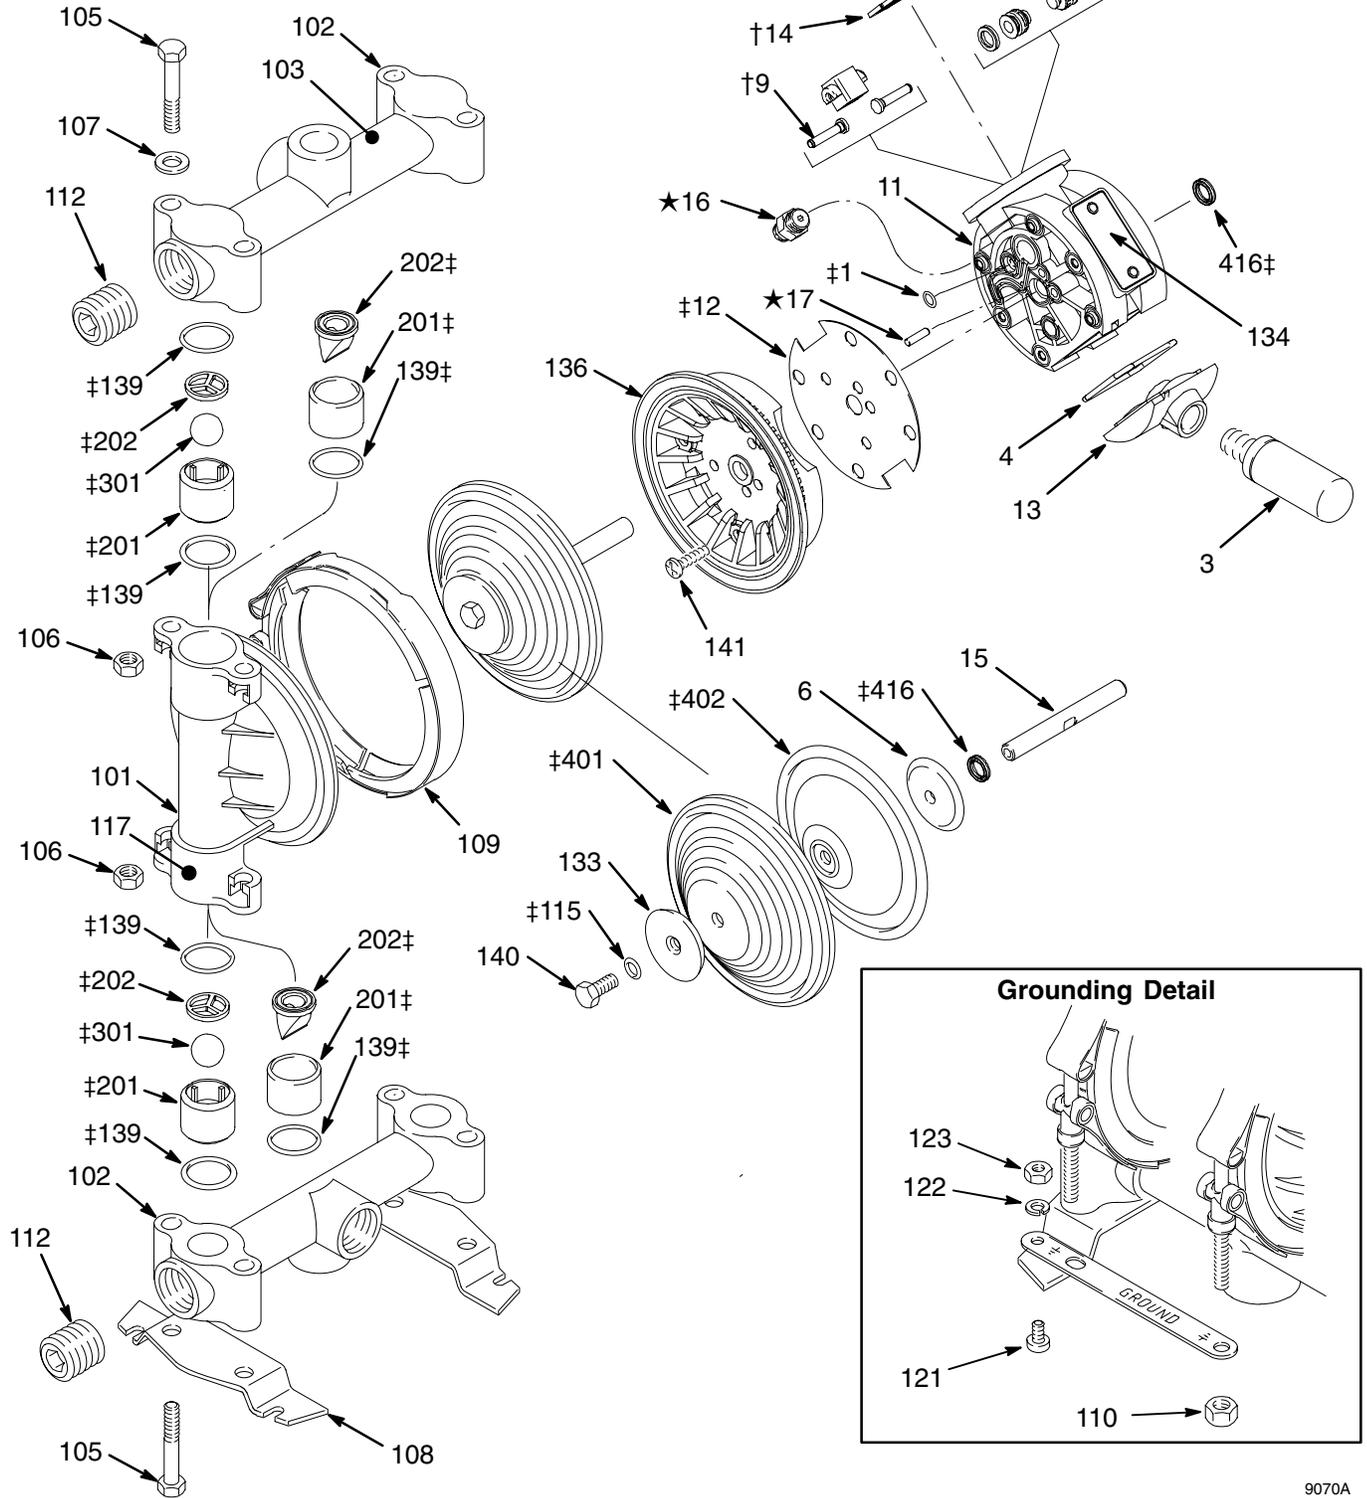

9070A

# Husky 716 Fluid Section Parts List

See the Pump Matrix on page 22 for an explanation of the **Matrix Column** and the **Digit**.

See page 24 for Air Motor Parts List (Matrix Column 2)

## Husky 716 Fluid Section Parts List (Matrix Column 3)

| Ref. No. | Aluminum Pumps<br>Digit: 3 (NPT)<br>Digit: C (BSPT) |                                   |     | Stainless Steel (sst) Pumps<br>Digit: 4 (NPT)<br>Digit: D (BSPT) |  |     |
|----------|---|-----------------------------------|-----|--|--|-----|
|          | Part No.  | Description                       | Qty | Part No.   | Description                                | Qty |
| 101      | 185622  | COVER, fluid; aluminum            | 2   | 187241   | COVER, fluid; sst                          | 2   |
| 102*     | 185624  | MANIFOLD; aluminum; NPT           | 2   | 187244   | MANIFOLD; sst                              | 2   |
| 102      | 192061  | MANIFOLD; aluminum; BSPT          | 2   | 192060   | MANIFOLD; sst; BSPT                        | 2   |
| 102      | 190246  | MANIFOLD; aluminum; NPT           | 2   |  |  |     |
| 103      | 189220  | LABEL, warning                    | 1   | 189220   | LABEL, warning                             | 1   |
| 105      | 112912  | SCREW; 3/8-16; 2.25 in. (57.2 mm) | 8   | 112912   | SCREW; 3/8-16; 2.25 in. (57.2 mm)          | 8   |
| 106      | 112913  | NUT, hex; 3/8-16; sst             | 8   | 112913   | NUT, hex; 3/8-16; sst                      | 8   |
| 107      | 112914  | WASHER, flat; 3/8 in.; sst        | 4   | 112914   | WASHER, flat; 3/8 in.; sst                 | 4   |
| 108      | 186207  | BASE, feet                        | 2   | 186207   | BASE, feet                                 | 2   |
| 109      | 189540  | CLAMP, vee                        | 2   | 189540   | CLAMP, vee                                 | 2   |
| 110      | 112499  | NUT, clamp; 1/4-28                | 2   | 112499   | NUT, clamp; 1/4-28                         | 2   |
| 111      | 191079  | STRIP, grounding                  | 1   | 191079   | STRIP, grounding                           | 1   |
| 112      | 102726  | PLUG, steel; NPT                  | 2   | 111384   | PLUG; sst; NPT                             | 2   |
| 112      | 113989  | PLUG, steel; BSPT                 | 2   | 113990   | PLUG; sst; BSPT                            | 2   |
| 112      | 24H344  | PLUG, sst; BSPP with seal         | 2   |  |  |     |
| 115‡     | 110004  | O-RING; PTFE                      | 2   | 110004   | O-RING; PTFE                               | 2   |
| 117      | 186205  | LABEL, warning                    | 1   |  |  |     |
| 121      | 102790  | SCREW; 10-24; 0.31 in. (8 mm)     | 1   | 102790   | SCREW; 10-24; 0.31 in. (8 mm)              | 1   |
| 122      | 100718  | LOCKWASHER; #10                   | 1   | 100718   | LOCKWASHER; #10                            | 1   |
| 123      | 100179  | NUT, hex; 10-24                   | 1   | 100179   | NUT, hex; 10-24                            | 1   |
| 133      | 191837  | PLATE, diaphragm, fluid side; sst | 2   | 16M908   | PLATE, diaphragm, fluid side; sst machined | 2   |
| 134      | 290045  | PLATE, designation                | 1   | 290045   | PLATE, designation                         | 1   |
| 136      | 194246  | COVER air                         | 2   | 194246   | COVER air                                  | 2   |
| 139‡     | 110636  | O-RING; PTFE                      | 8   | 110636   | O-RING; PTFE                               | 8   |
| 140      | 113747  | SCREW, flange; hex head           | 2   | 113747   | SCREW, flange; hex head                    | 2   |
| 141      | 114882  | SCREW, machine, torx              | 12  | 114882   | SCREW, machine, torx                       | 12  |
| 142      | 111183  | RIVET (for plate 134)             | 2   | 111183   | RIVET (for plate 134)                      | 2   |

‡ Included in Fluid Section Repair Kit D05XXX


\*Pump model numbers 243305, 243306, 243307, and 246485 have one 190246 inlet manifold and one 185624 outlet manifold.

# Torque Sequence

Always follow torque sequence when instructed to torque fasteners.


## Husky 515

1. Left/Right Fluid Covers  
Torque bolts to 80–90 in-lb (9–10 N•m)

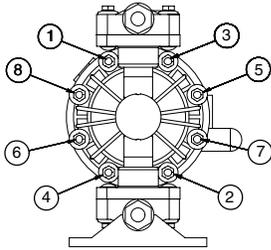


SIDE VIEW

2. Inlet Manifold  
Torque bolts to 80–90 in-lb (9–10 N•m)

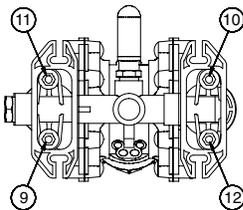

BOTTOM VIEW


3. Outlet Manifold  
Torque bolts to 80–90 in-lb (9–10 N•m)

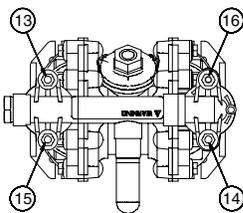

TOP VIEW


## Husky 716

1. Left/Right Fluid Covers  
Torque bolts to 80–90 in-lb (9–10 N•m)

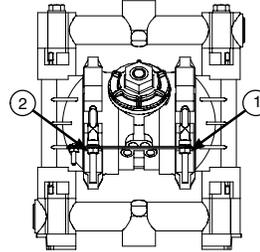


FRONT VIEW

2. Inlet Manifold  
Torque bolts to 80–90 in-lb (9–10 N•m)

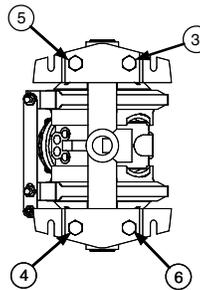

BOTTOM VIEW

3. Outlet Manifold  
Torque Bolts to 80–90 in-lb (9–10 N•m)

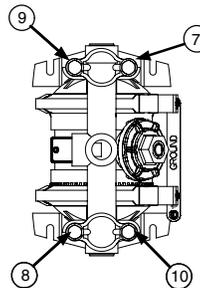

TOP VIEW

# Husky 515 Technical Data

|   |   |
|---|---|
| Maximum fluid working pressure  | 100 psi (0.7 MPa, 7 bar)  |
| Air pressure operating range  | 30 to 100 psi (0.2 to 0.7 MPa, 2.1 to 7 bar)  |
| Operating Temperature Range*  |   |
| Minimum (all pumps)   | 40°F (4°C)  |
| Maximum   |   |
| Acetal:   | 180°F (82°C)  |
| Polypropylene:  | 150°F (66°C)  |
| Aluminum, stainless steel, PVDF:  | 225°F (107°C)   |
| Maximum air consumption   | 28 scfm (0.672 cubic meters/min.)   |
| Maximum free flow delivery (1/2 in. ports)  | 15 gpm (57 l/min)   |
| Maximum pump speed  | 400 cpm   |
| Gallons (Liters) per cycle  | 0.04 (0.15)   |
| Maximum suction lift (water w/buna balls)   | 15 ft (4.5 m) dry,<br>25 ft (7.6 m) wet   |
| Maximum size pumpable solids  | 3/32 in. (2.5 mm)   |
| Sound power level (measured per ISO standard 9614-2)                                  |   |
| At 70 psig (0.48 MPa, 4.8 bar) at 50 cycles per minute                                | 77 dBA  |
| At 100 psig (0.7 MPa, 7 bar) at maximum cycles per minute                             | 95 dBA  |
| Sound pressure level (measured 1 meter from pump)                                     |   |
| At 70 psig (0.48 MPa, 4.8 bar) at 50 cycles per minute                                | 67 dBA  |
| At 100 psig (0.7 MPa, 7 bar) at maximum cycles per minute                             | 85 dBA  |
| Air inlet size  | 1/4 npt(f)  |
| Air exhaust port size   | 3/8 npt(f)  |
| Fluid inlet size.   | 1/2 and 3/4 in. npt(f) or bspt(f)   |
| Fluid outlet size.  | 1/2 and 3/4 in. npt(f) or bspt(f)   |
| Wetted parts (in addition to ball, seat, and diaphragm materials, which vary by pump) |   |
| Polypropylene pumps   | polypropylene, PTFE   |
| Acetal pumps  | groundable acetal, PTFE   |
| PVDF pumps  | PVDF, PTFE  |
| Non-wetted external parts   | polypropylene, stainless steel, polyester and aluminum (labels),<br>nickel-plated brass |
| Weight (approximate)  |   |
| Polypropylene pumps   | 6.5 lb (2.9 kg)   |
| Acetal pumps  | 7.8 lb (3.5 kg)   |
| PVDF pumps  | 8.5 lb (3.9 kg)   |


*\*These temperatures are based on mechanical stress only and may be altered significantly by pumping certain chemicals. Consult engineering guides for chemical compatibilities and temperature limits, or contact your Graco distributor.*

*Santoprene® is a registered trademark of the Monsanto Company.*



*Loctite® is a registered trademark of the Loctite Corporation.*

# Husky 515 Dimensions

\* Pumps with duckbill check valves are shipped with the inlet manifold on top and the outlet manifold on the bottom. To make the inlet manifold on the bottom and the outlet manifold on the top, rotate each of the four duckbill assemblies vertically 180° as shown below.

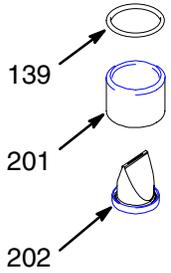


139  
201  
202

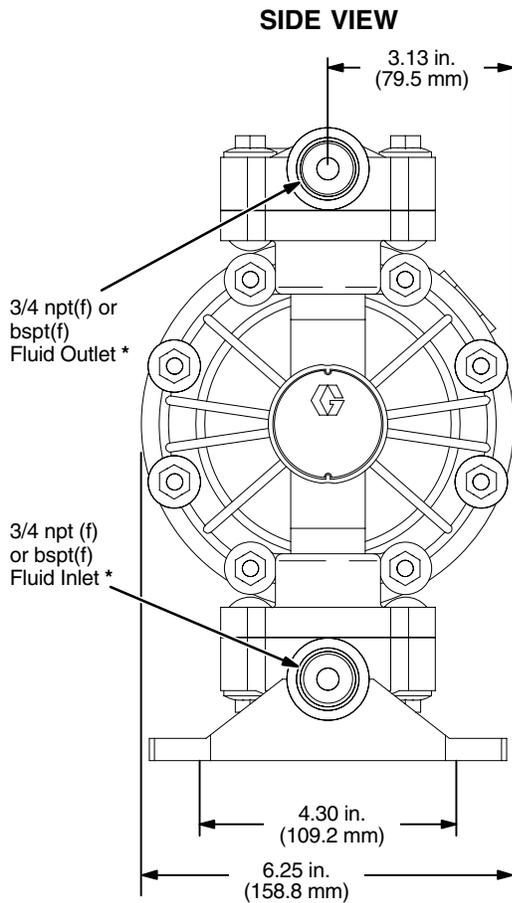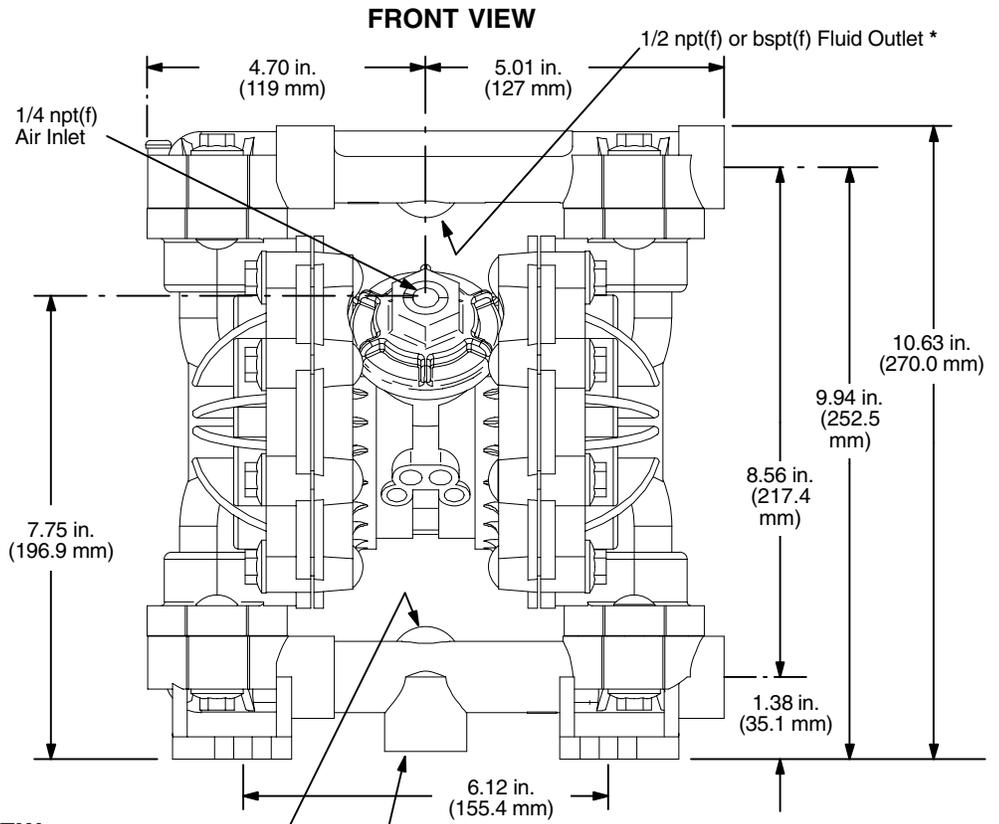

1/2 npt(f) or bspt(f) Fluid Inlet \*

3/4 npt(f) or bspt(f) Fluid Inlet \*

Note: Bottom port open on 241564, 241565, and 246484 only.

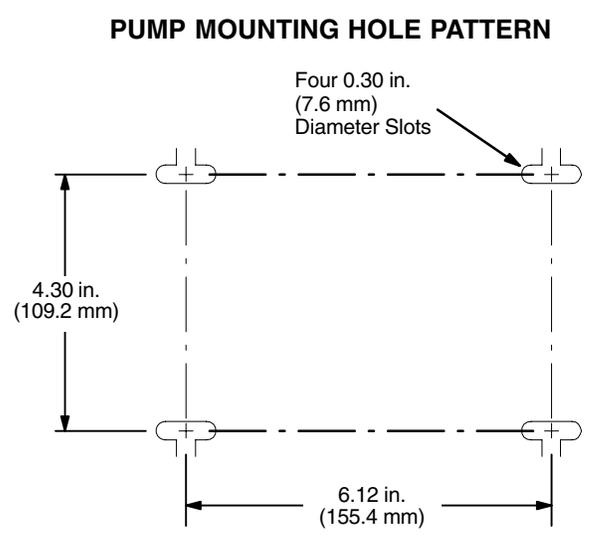

9077A

# Husky 716 Technical Data

|   |   |
|---|---|
| Maximum fluid working pressure  | 100 psi (0.7 MPa, 7 bar)  |
| Air pressure operating range  | 30 to 100 psi (0.2 to 0.7 MPa, 2.1 to 7 bar)  |
| Operating Temperature Range*  |   |
| Minimum (all pumps)   | 40°F (4°C)  |
| Maximum   |   |
| Acetal:   | 180°F (82°C)  |
| Polypropylene:  | 150°F (66°C)  |
| Aluminum, stainless steel, PVDF:  | 225°F (107°C)   |
| Maximum air consumption   | 28 scfm (0.672 cubic meters/min.)   |
| Maximum free flow delivery  | 16 gpm (61 l/min)   |
| Maximum pump speed  | 400 cpm   |
| Gallons (Liters) per cycle  | 0.04(0.15)  |
| Maximum suction lift (water w/buna balls)   | 15 ft (4.5 m) dry,<br>25 ft (7.6 m) wet   |
| Maximum size pumpable solids  | 3/32 in. (2.5 mm)   |
| Sound power level (measured per ISO standard 9614-2)                                  |   |
| At 70 psig (0.48 MPa, 4.8 bar) at 50 cycles per minute                                | 77 dBa  |
| At 100 psig (0.7 MPa, 7 bar) at maximum cycles per minute                             | 95 dBa  |
| Sound pressure level (measured 1 meter from pump)                                     |   |
| At 70 psig (0.48 MPa, 4.8 bar) at 50 cycles per minute                                | 67 dBa  |
| At 100 psig (0.7 MPa, 7 bar) at maximum cycles per minute                             | 85 dBa  |
| Air inlet size  | 1/4 npt(f)  |
| Air exhaust port size   | 3/8 npt(f)  |
| Fluid inlet size.   | 3/4 npt(f), bspt(f), or bspp(f)   |
| Fluid outlet size.  | 3/4 npt(f), bspt(f), or bspp(f)   |
| Wetted parts (in addition to ball, seat, and diaphragm materials, which vary by pump) |   |
| Aluminum pumps  | aluminum, stainless steel, PTFE, zinc-plated steel  |
| Stainless steel pumps   | 316 stainless steel, PTFE   |
| Non-wetted external parts   | polypropylene, stainless steel, polyester (labels),<br>nickel-plated brass, epoxy-coated steel (feet) |
| Weight (approximate)  |   |
| Aluminum pumps  | 8.5 lb (3.9 kg)   |
| Stainless steel pumps   | 18 lb (8.2 kg)  |


*\*These temperatures are based on mechanical stress only and may be altered significantly by pumping certain chemicals. Consult engineering guides for chemical compatibilities and temperature limits, or contact your Graco distributor.*

*Santoprene® is a registered trademark of the Monsanto Company.*


*Loctite® is a registered trademark of the Loctite Corporation.*

# Husky 716 Dimensions


\* Pumps with duckbill check valves are shipped with the inlet manifold on top and the outlet manifold on the bottom. To make the inlet manifold on the bottom and the outlet manifold on the top, rotate each of the four duckbill assemblies vertically 180° as shown below.

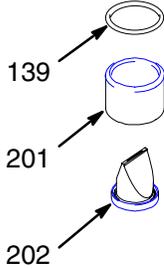

## FRONT VIEW

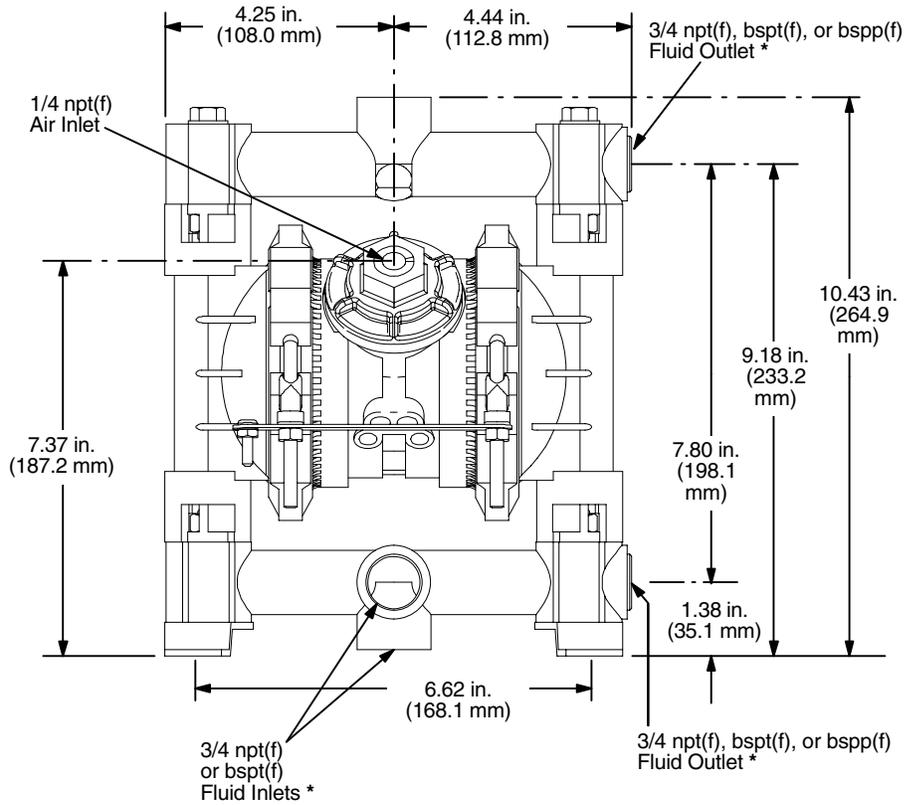


## SIDE VIEW

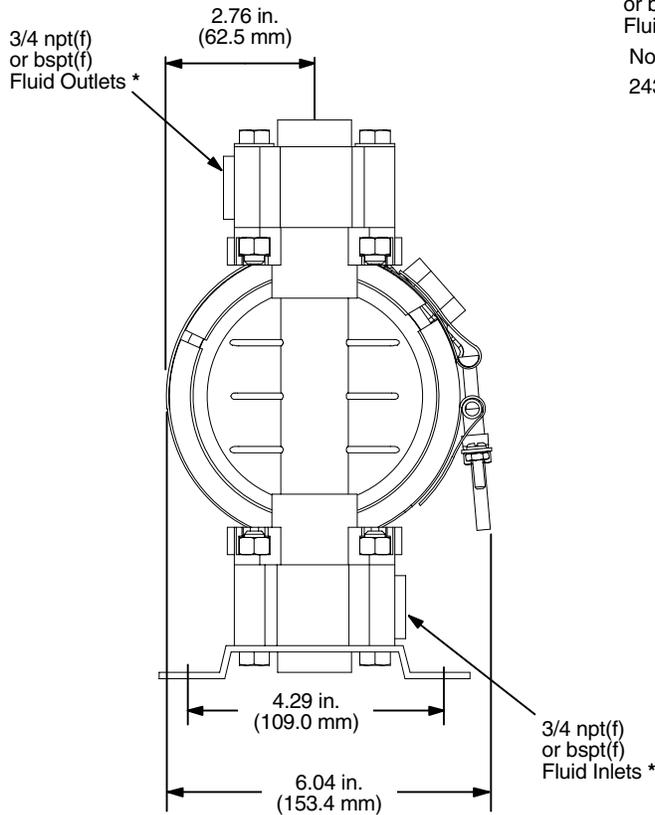

Note: Bottom port open on 243305, 243306, 243307, and 246485 only.

## PUMP MOUNTING HOLE PATTERN

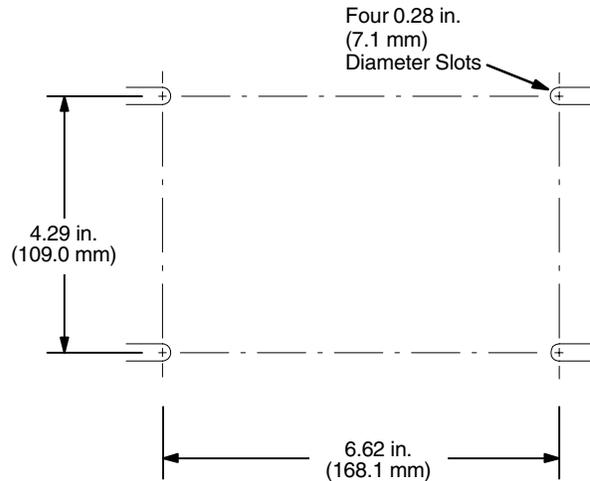


9078A

# Husky 515 and 716 Performance Charts

## Fluid Outlet Pressure

**Test Conditions:** Pump tested in water with inlet submerged.

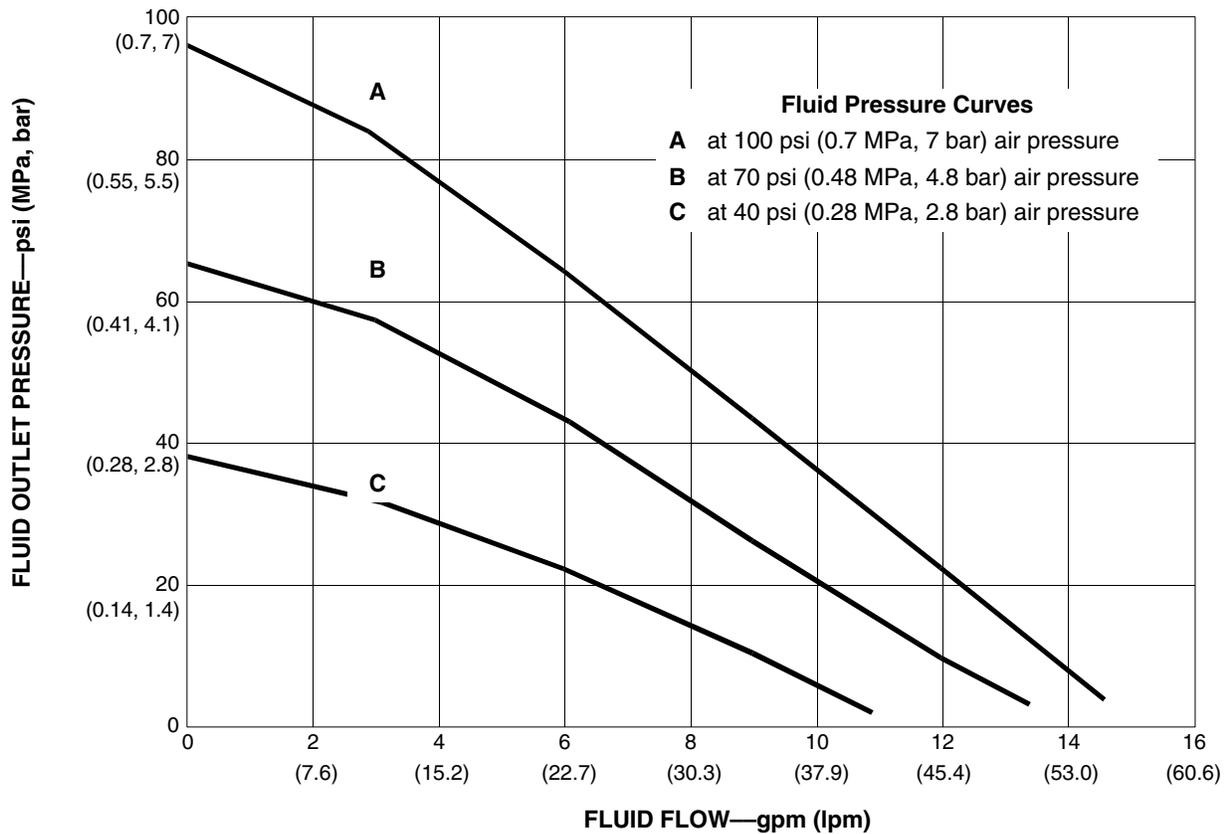


**To find Fluid Outlet Pressure (psi/MPa/bar) at a specific fluid flow (gpm/lpm) and operating air pressure (psi/MPa/bar):**

1. Locate fluid flow rate along bottom of chart.
2. Follow vertical line up to intersection with selected fluid outlet pressure curve.
3. Follow left to scale to read fluid outlet pressure.

# Husky 515 and 716 Performance Charts

## Air Consumption

**Test Conditions:** Pump tested in water with inlet submerged.

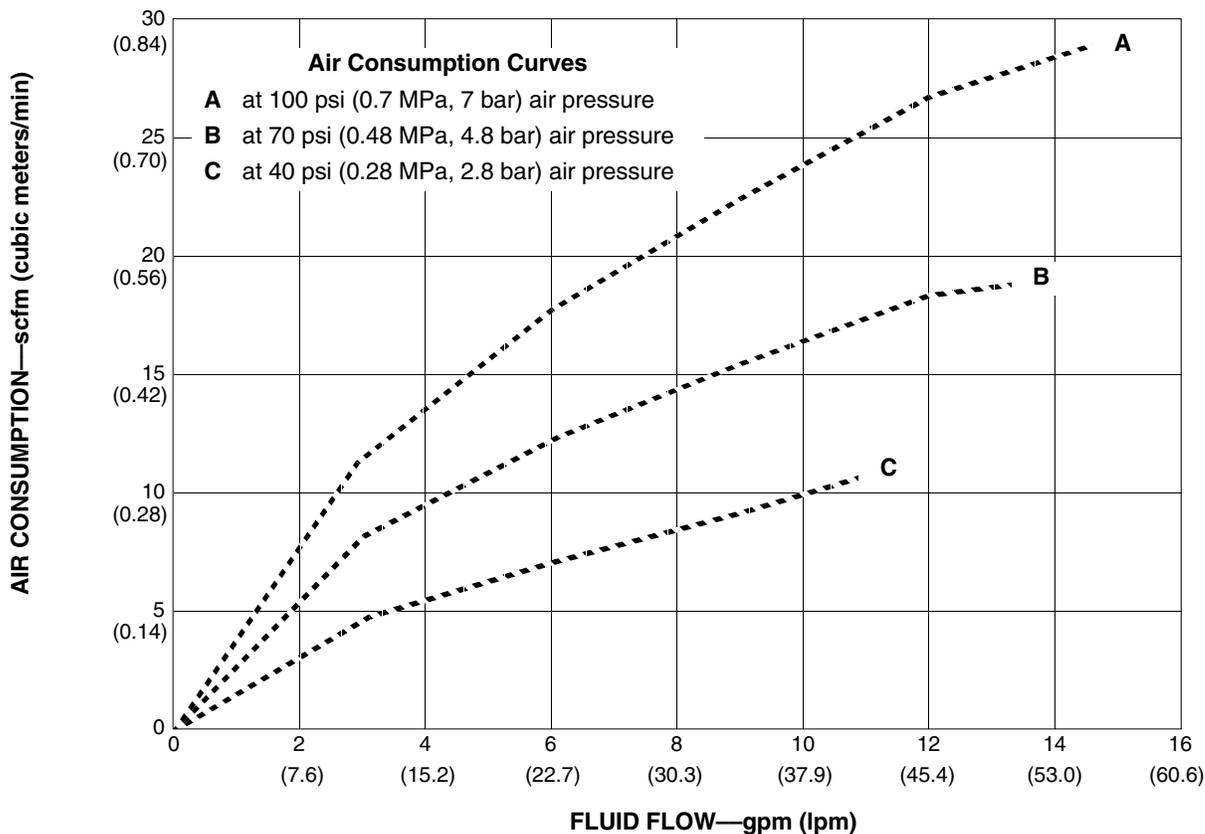

**To find Pump Air Consumption** (scfm or  $m^3/min$ ) at a specific fluid flow (gpm/lpm) and air pressure (psi/MPa/bar):

1. Locate fluid flow rate along bottom of chart.
2. Read vertical line up to intersection with selected air consumption curve.
3. Follow left to scale to read air consumption.

# Graco Warranties

## Graco Standard Husky Pump Warranty

Graco warrants all equipment manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of five years from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within six years of the date of sale.

Graco makes no warranty, and disclaims all implied warranties of merchantability and fitness for a particular purpose in connection with accessories, equipment, materials or components sold but not manufactured by Graco. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

### **FOR GRACO CANADA CUSTOMERS**

The parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

## Extended Product Warranty

Graco warrants all Husky 205, 307, 515, 716, 1040, 1590, 2150, and 3275 air valve center sections to be free from defects in material and workmanship for a period of fifteen years from date installed in service by the original purchaser. Normal wear of items such as packings or seals are not considered to be defects in material and workmanship.

|                      |  |
|----------------------|--|
| Five years           | Graco will provide parts and labor.      |
| Six to Fifteen years | Graco will replace defective parts only. |

# Graco Information

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

**TO PLACE AN ORDER**, contact your Graco distributor or call to identify the distributor closest to you:

**Phone:** 612-623-6921 or **Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

*All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 308981

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS, MN 55440-1441 • USA**

Copyright 2000, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

[www.graco.com](http://www.graco.com)

Revised June 2012