



Google play



SKYPE READY



4GB INTERNAL  
MEMORY



CAMERA



BUILT-IN  
SPEAKER



HEADPHONE  
SOCKET



BUILT-IN  
MICROPHONE



7" CAPACITIVE  
TOUCH SCREEN  
(5 POINTS)



16:9 WIDESCREEN



eLIBRARY  
READY



eBOOK  
READABLE



G SENSOR



WIFI READY

**INDEX**


APPEARANCE AND BUTTONS	4
ACCESSORIES	5
TURNING ON AND OFF	5
BATTERY CHARGING	5
RUN TIME	5
5 POINT TOUCH-SCREEN	5
SLEEP MODE	5
LOCK / UNLOCK	6
CHANGING WALLPAPER	6
HOME SCREEN ICONS	6
DESKTOP MENU BARS	7
APPS AND WIDGETS	8
FURTHER APP INFORMATION	9
CALENDAR	9
CAMERA	9
FILE MANAGER	10
APP AND WIDGET ICONS	10
SETTINGS - WI-FI	11
CONNECTING TO A PC / MAC VIA USB	12
EBOOK DRM (ALDIKO)	13
WHY CREATE A GOOGLE ACCOUNT	15
GOOGLE PLAY APP	15
SPECIFICATIONS	15
FULL SETTINGS FOLDER VIEW	15
FAQ	19

**IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS**


- Read all instructions carefully before use.
- Retain this manual for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- The following will damage this product: water or moisture ingress, exposure to prolonged extreme heat or cold; excessive humidity, dust or sandy.
- It is recommended to thoroughly charge the device for the first time overnight. Subsequent charges can be as needed. During charging, or extended use, the product may become warm.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Remove data cable by pulling it from the plug and not the cord.

## APPEARANCE AND BUTTONS:

Front View:

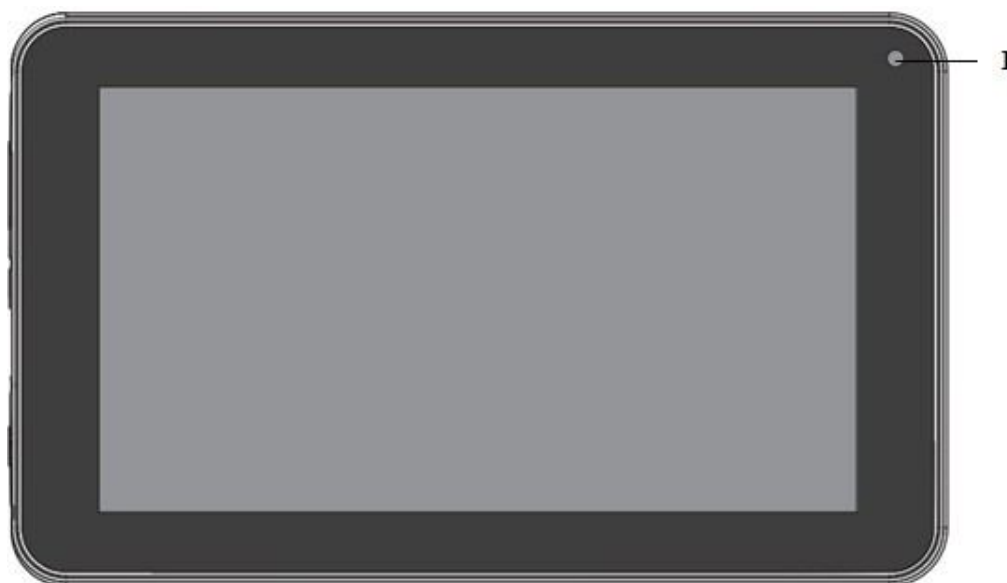

Rear View:

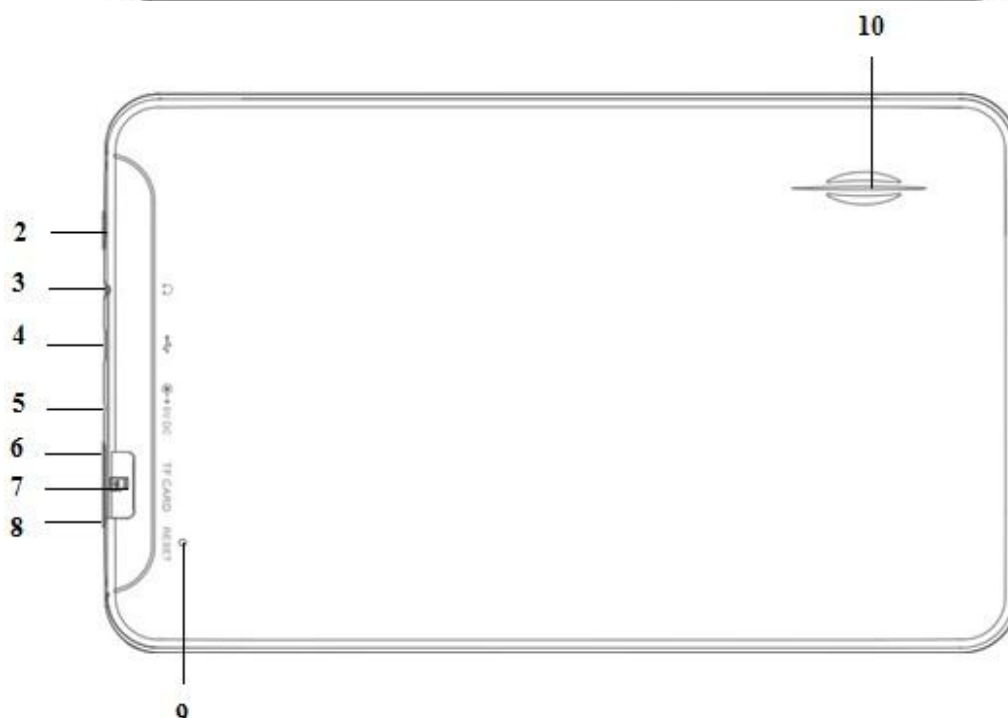

Number	Description
1	Front Camera Lens
2	ON/OFF Power Button
3	Stereo Earphone Socket (3.5mm Jack)
4	Micro USB interface (Data Transfer, Charging, USB Storage flash drive).
5	Charging Socket (DC 5V 2.5 amp)
6	Volume button – Decrease Volume (-)
7	Micro SD card slot. (Supports cards up to 32GB)
8	Volume button – Increase Volume (+)
9	Factory Reset Button
10	External Speaker

## **ACCESSORIES**

1 x 7" MID-742, 1 x Mains Power Adaptor, 1 x USB cable, 1 x User Guide

## **TURNING ON AND OFF**

To turn ON, PRESS and HOLD the POWER button until the screen turns ON.

To turn OFF, PRESS and HOLD the POWER button until the power screen appears. Then select turn OFF.

*Note: At any time you can press the POWER BUTTON to enter Snooze mode or to wake from Snooze mode.*

## **BATTERY CHARGING**

You can charge your MID-742 using the supplied Mains Power Adaptor or USB cable.



You will be alerted when the battery charge falls below 15%. If the battery is completely depleted the MID-742 will automatically turn off.

*Note: If the battery has been completely exhausted, it may take a few minutes to switch the MID-742 on once charging has begun. The MID-742 can be used during charging however this may increase the time needed to fully charge the battery.*

## **RUN TIME**

Run time of portable devices such as this MID-742 can be extended by reducing the screen brightness, turning off WiFi when not in use, turning off Apps that are not required and manually turning the screen off using the power button when not in use.

## **5 POINT TOUCH-SCREEN**

The MID-742 has 5 different touch screen behaviours.

- |                 |   |
|-----------------|---|
| 1-TAP           | Tap once to select or start a function, option or application |
| 2- TAP and HOLD | Tap and hold to select or start a function                    |
| 3-DRAG and DROP | Tap then drag an item and drop it to a location               |
| 4-DOUBLE TAP    | Double Tap an item twice to select or start a function        |
| 5-SLIDE/SWIPE   | Tap then slide an item up, down, left or right                |

## **SLEEP MODE**

During prolonged inactive use where no buttons have been pressed, the screen will turn off automatically to conserve power. Press the POWER button to wake the MID-742.


## LOCK / UNLOCK

When the MID-742 is in sleep mode, press the POWER button to open the unlock screen. TAP and HOLD the LOCKED padlock icon, drag it to the UN-LOCKED padlock icon, then release.


*Note: some of the following images may be different from the actual product supplied.*








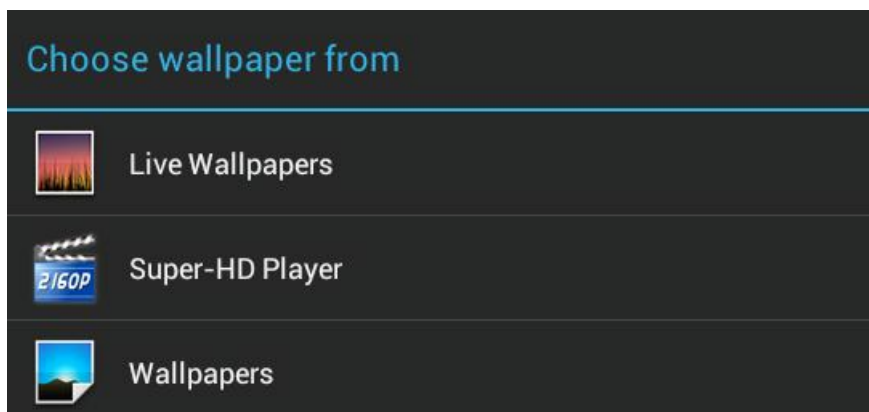


## CHANGING WALLPAPER

TAP and HOLD the current wallpaper from the main screen. The wallpaper option window will appear. Choose between LIVE WALLPAPER (Interact with the wallpaper by touching the screen), SUPER-HD PLAYER (Select an image for your wallpaper) and WALLPAPERS (Select from a standard list of wallpapers).

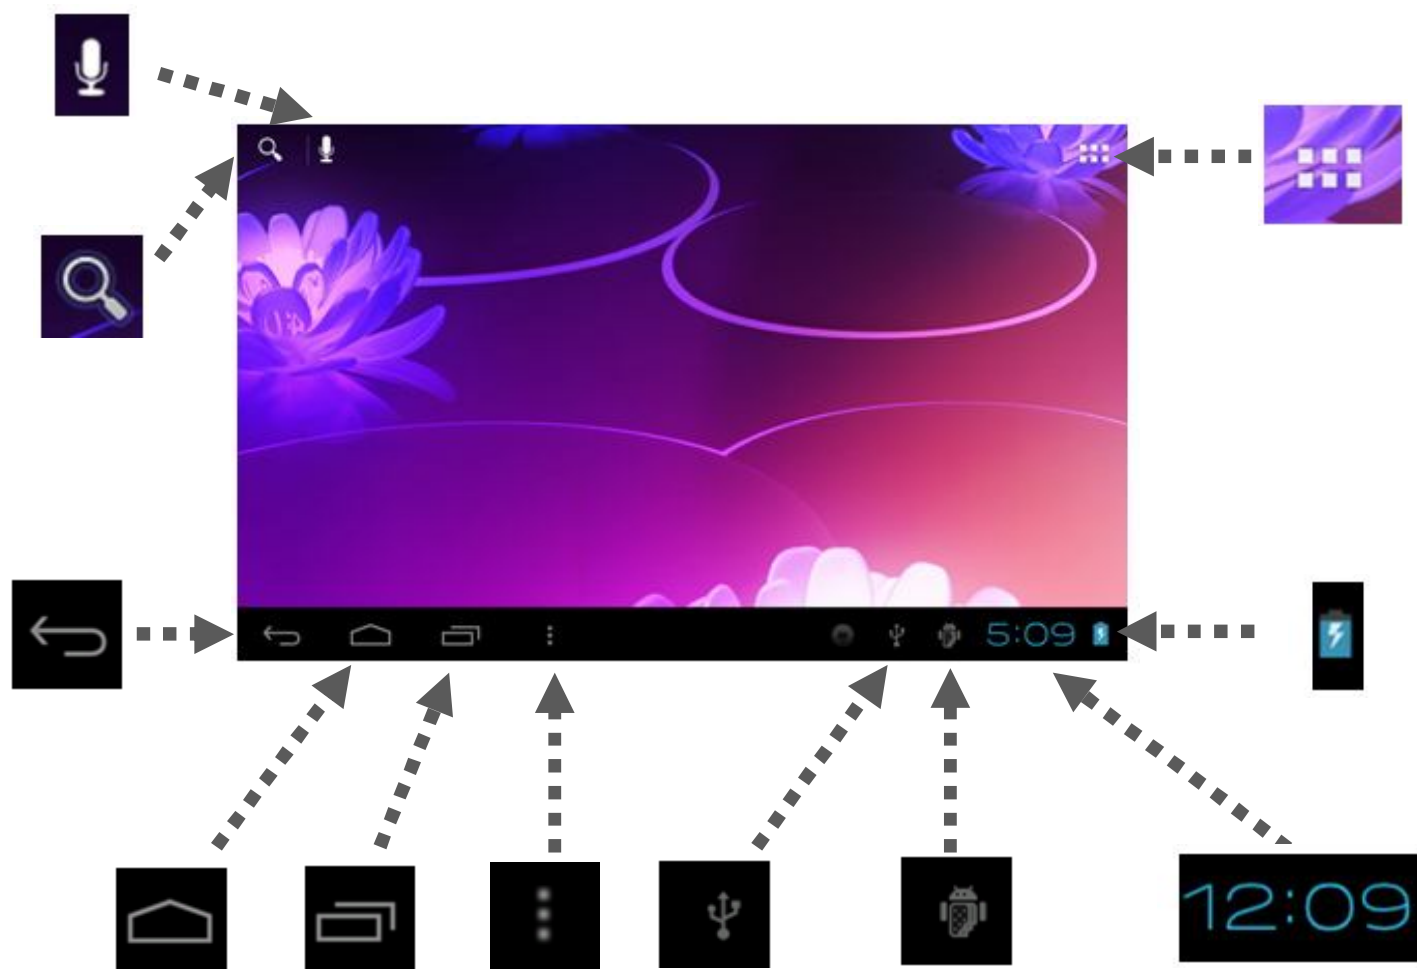

## HOME SCREEN ICONS




Icon	Function
	Open web browser
	Open App and widget menu
	Return back to the previous screen
	Return to the home screen
	Open a list of recently used applications
	<i>(Indicates current PC connection via USB cable)</i>
	<i>(USB debugging icon. Programming interface only)</i>
	<i>(Time display)</i>
	<i>(Battery status)</i>
	Enter "Wallpaper", "Manage applications", "System settings" shortcut

## DESKTOP MENU BARS

The desktop includes two separate menu-bars. ■■■▶

### 1) APPS MENU BAR - Top RIGHT of screen


When pressed the following screen is shown. *Note: Scroll across to access WIDGETS*

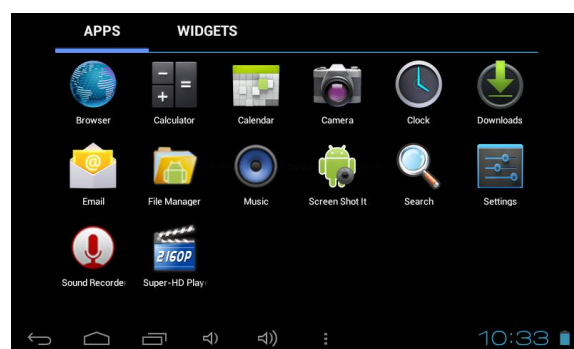

### 2) SHORTCUT MENU BAR - Bottom middle of screen





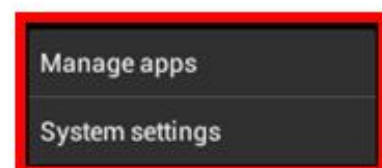


When pressed the following screen is shown. Select between either MANAGE APPS (SETTINGS SECTION) or SYSTEM SETTINGS.





## APPS AND WIDGETS

*Note: Some of the following images may be different from the actual product supplied.*


Icon	Function
	Browser: Internet browser
	Calculator
	Calendar: Create and manage daily, weekly and monthly events, set alarm clocks. <i>Note: A GOOGLE account is required</i>
	Camera: Take and view pictures and video
	Clock: Access alarm clock settings and time display
	Downloads: Manage downloaded content
	E-mail: Setup e-mail accounts
	File Manager: Access all pictures, video, music, sound clips and other files saved on the device and SD card
	Music: Music player
	Search: Open web browser search bar
	Settings: View main settings menu
	Sound Recorder: Record sound using the microphone
	Super-HD Player: Used to play pictures and video



## FURTHER APP INFORMATION

### Calendar

Tap this icon to open the calendar feature. Enter your GOOGLE account E-mail address and password information. *(Note: If you do not yet have a Google account, you can create a new account for free from Google.com)*

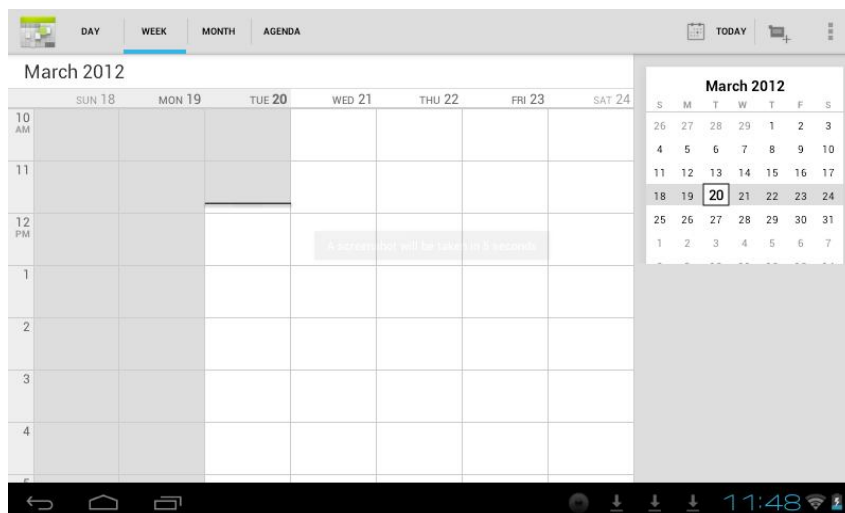


*Note: Double check your account information and repeat the above steps if you are experiencing connection issues.*

Once complete, your settings will be saved and the application will automatically close. Re-open the application then set the current date and time where required.



*Note: The first email setting will be saved as default and can-not be deleted. Subsequent email settings can be deleted however. To remove all email settings a factory default must be completed.*

### Camera

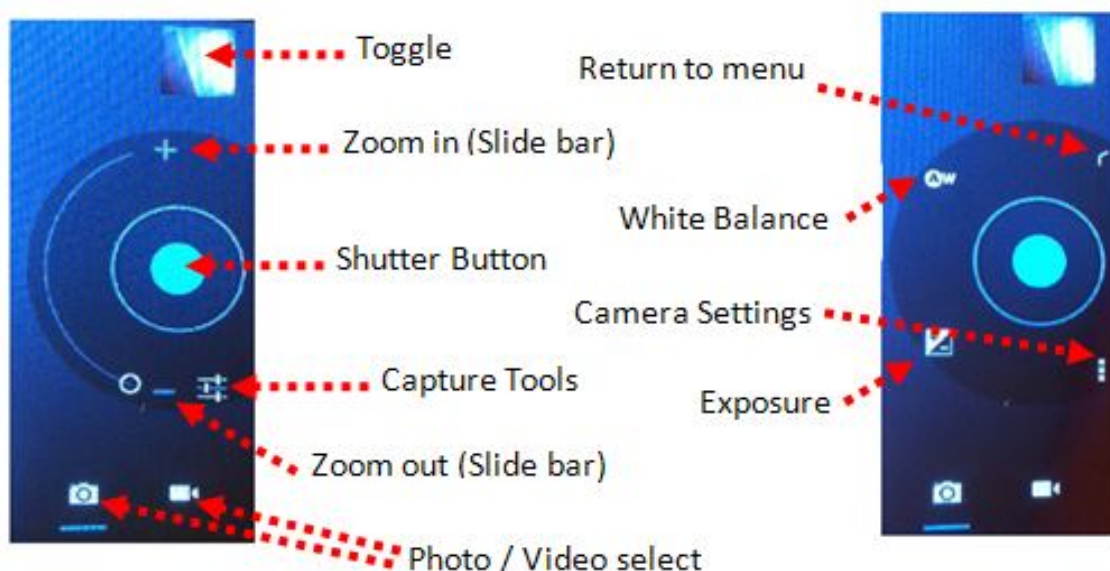Tap this icon to open the camera feature. Choose between camera and video recording. Tap the BLUE CIRCLE shutter icon to take a photo or to start recording a video from video mode.



To enter the photo playback mode and photo tools, tap the TOGGLE image at the top right corner of the screen. (This button is used to toggle between image capture mode and the playback screen.)

To connect through to your GOOGLE account, press , or  to continue through to the main image preview screen. Alternatively tap the image on the screen.

From the main image preview screen, SWIPE the screen left or right to review images or use the thumbnail images at the bottom of the screen to see previous.

*Note: Tap the screen if the image tools icon disappears.*



To delete an image, press the rubbish bin icon at the top of the screen. To access the menu screen tap the menu shortcut button. Choose between the options: slideshow, edit, rotate left, rotate right, crop, set picture as, details.

## File manager

File manager provides an overview of all files on your MID-742 or an external storage device. Use the tabs at the top of the screen to view files on your MID-742; built-in memory, SD card or USB.

*Note: The last two tabs (developer tab)s may not be visible depending on your user settings*

## App and Widget icons

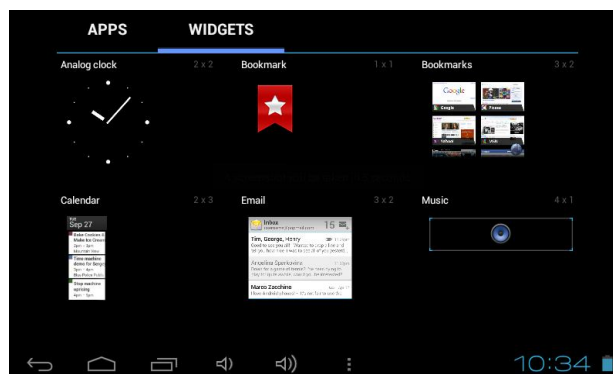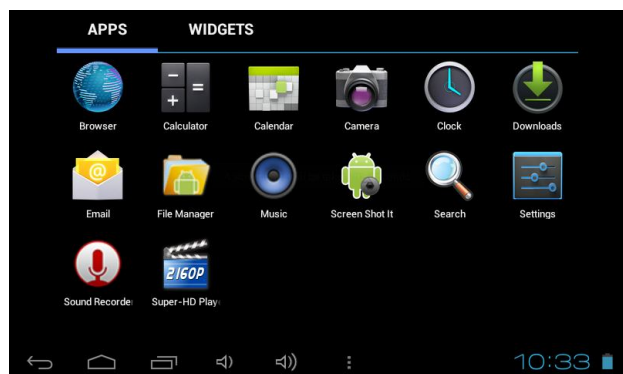

Users can add or remove Apps and Widgets program icons (shortcuts) from the desktop as well as move them to different desktop screens. The icons can be dragged within the desktop, or between the desktop and the shortcut bar.

To add an icon tap and hold the App or Widget, then drag and drop it to the desired position on the desktop.


To delete an icon, press and hold the icon until the trash bin icon appears at the top of the screen. Then drag the icon on top of the bin icon and release.

## SETTINGS

### Wi-Fi


*Note: a WiFi connection is required if connecting to the internet for email, Play Store or web browsing)*

When WiFi is turned on it will automatically scan for all available WiFi networks

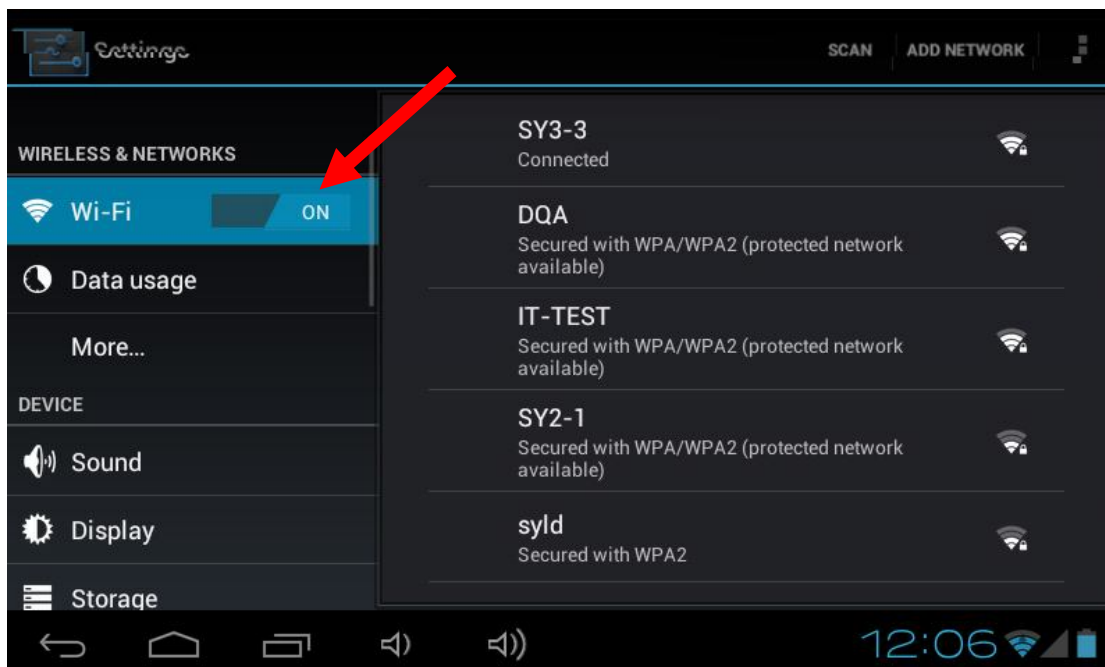

Tap the desired NETWORK name. If this NETWORK connects successfully, "Connected" (1) will appear. If the NETWORK is encrypted, enter the password then tap "Connect".



Your MID-742 will indicate when the NETWORK connection is ready for use when the WiFi icon appears on the lower right notification bar (2).

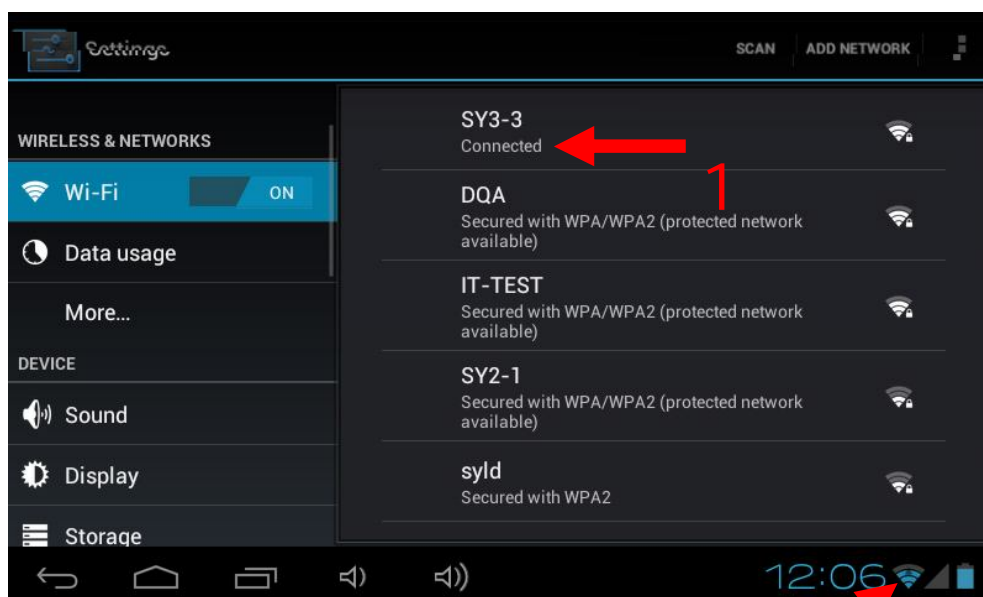

For training videos visit: <http://www.laserco.net/products/e-readers/MID-742>

## CONNECTING TO A PC / MAC VIA USB

Connect the USB cable to your MID-742 and PC, making sure you are using the correct MICRO USB cable supplied. The "USB connected" icon (1) will then appear. TAP the icon to show the connection window, and then TAP "USB connected" (2) to enter the final connection screen. TAP "Turn on USB storage" (3) to access the device.

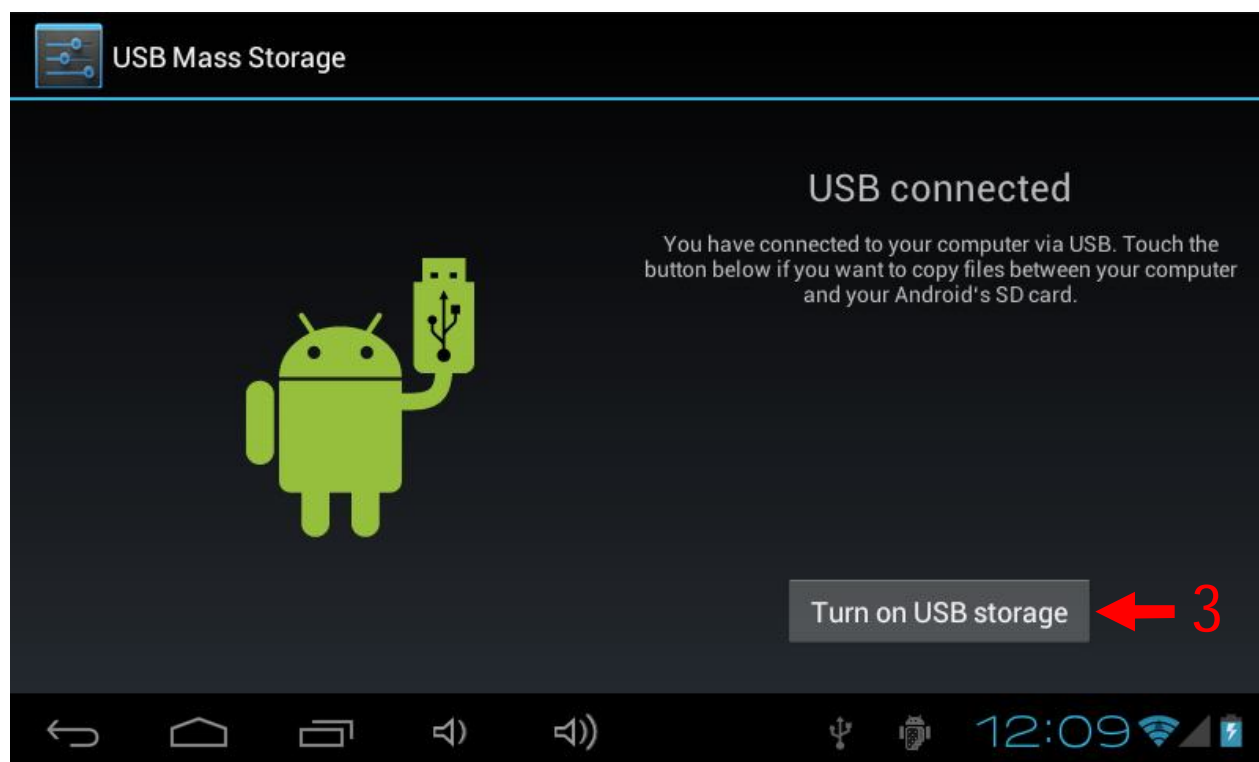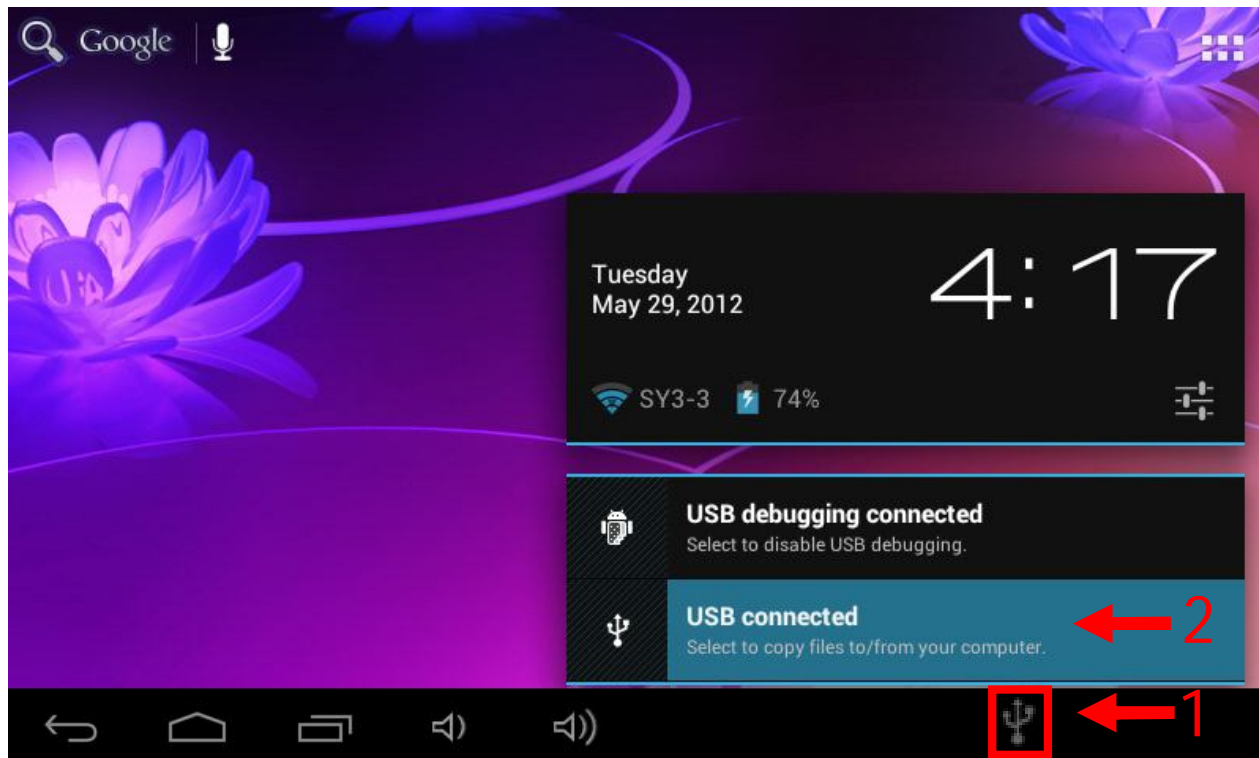


*Note: In USB mode, you can copy, cut, or delete files directly from the device.*

## EBOOK DRM (ALDIKO)


*Note: Aldiko supports purchased and borrowed eBooks.*

Download Adobe Digital Editions (ADE) to your PC and set up your FREE account. Upon purchasing or borrowing an eBook using ADE, it will then need to be transferred to your MID-742. From Adobe Digital Editions, right click the eBook you wish to transfer and select "Show File in Explorer".

View this YouTube video on purchasing eBooks. <https://www.youtube.com/watch?v=AieWzAbpmjs>

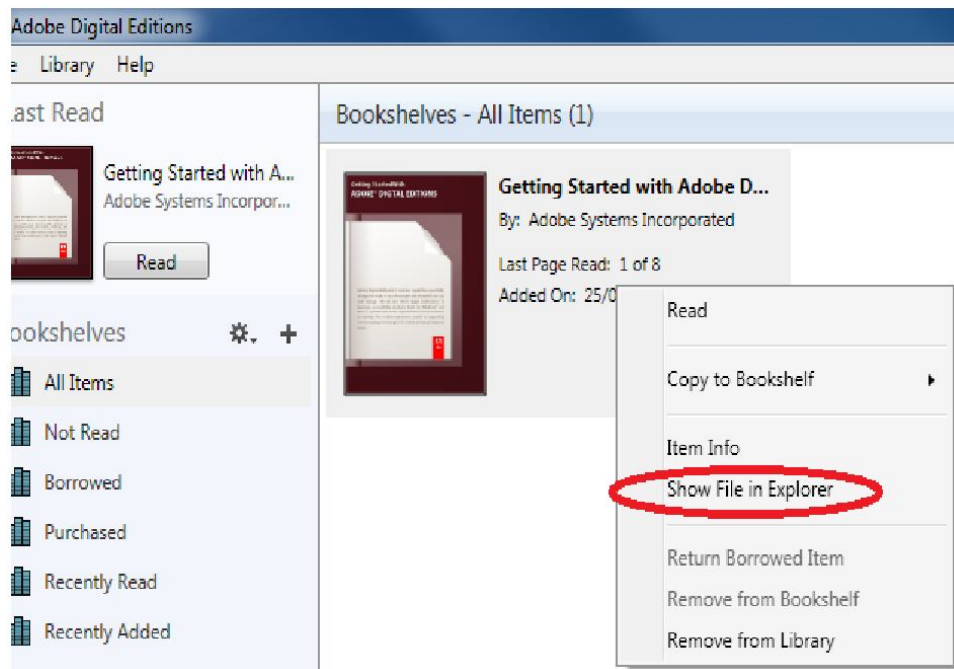

Then right click on the file and select "Copy".

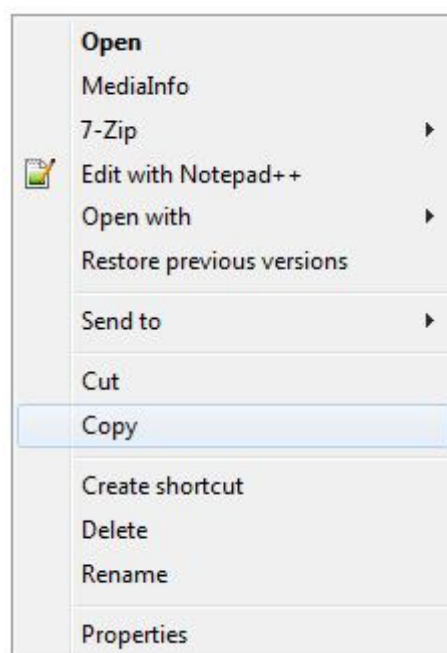




Connect your MID-742 to the same PC you have loaded ADE and open Windows Explorer. If connected correctly your MID-742 will be visible. Select the MID-742 by double-clicking it. Then contents will appear on the right side of the Windows Explorer screen. Right click this section and select paste. The file has now been transferred. Disconnected the MID-742, open the ALDIKO App on your MID-742 and select the top right "Settings" option.



Select ADOBE DRM then enter your username and password and select "Sign in".

Adobe ID

Password

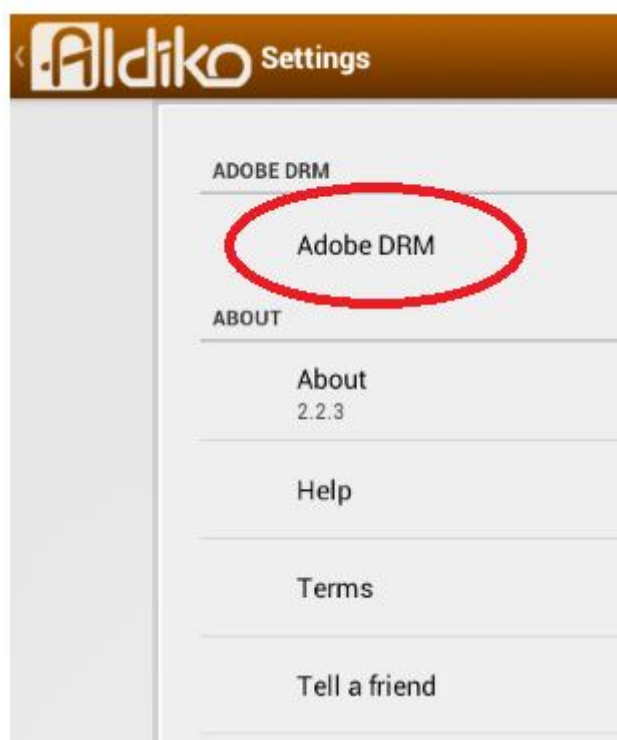

**Aldiko** Authorize device

Adobe DRM

Signing in with your Adobe ID enables you to access content protected with Adobe DRM.

Adobe ID

Password

Don't have an account?




Finally, locate the "File" which was just transferred, then click "Import".

## WHY CREATE A GOOGLE ACCOUNT

Creating a Google account allows you to talk, chat, share, schedule, store, organize, collaborate, discover, and create online. A Google account also provides user level access to Gmail, Google+ and YouTube which are all backed up online and accessible online via the cloud.

## GOOGLE PLAY APP

Open the GOOGLE PLAY STORE App and set up your account. If you have an existing account (*including non Gmail accounts*) select EXISTING, otherwise choose NEW to create a new account and follow the set-up steps.

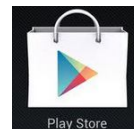

View our product training videos at: <http://www.laserco.net/products/e-readers/MID-742>

## SPECIFICATIONS

Operation System:	Android 4.0
Size	192x 117 x 11.2mm
CPU processor speed:	A13, 1.3GHZ
Memory:	4GB
RAM:	DDR3 512 MB
TF card:	128M-32G
Display screen:	7"(Capacitive multi-touch) TFT capacitive touch
Resolution:	800*480
Battery and capacity:	Rechargeable Built-in type polymer battery, 2200Mah
Camera Resolution:	
Screen auto orientation:	G-sensor 3D
Voice Recording	Built-in microphone
Supported file types:	

## FULL SETTINGS FOLDER VIEW

- Wireless and networks
  - WiFi
  - Data usage
    - Mobile data
    - Set mobile data limit
  - Airplane mode
  - Ethernet
  - VPN
  - Tethering and portable hotspot
  - Wi-fi direct
  - Wi-fi direct (peer to peer)



- Mobile networks
- 3g support information
- Device
  - Sound
    - Volumes
    - Ringtones and notifications
      - Default notification
  - System
    - Touch sounds
    - Screen lock sound
  - Display
    - Brightness
    - Wallpaper
    - Auto-rotation of screen
    - Sleep
    - Font size
    - Screen adaption
  - Storage
    - Media scan
      - Enable media scanning on SD
      - Enable media scanning on USB
    - Internal storage (1)
      - Total space
      - Apps
      - Available
    - Internal storage (2)
      - Total space
      - Apps
      - Available
    - EXTSD
      - Total space
      - Available
      - Un-mounted shared storage
    - Usbhost1
      - Total space
      - Available
  - Battery (graphs)
    - Charging
    - Screen usage
    - Android system usage
    - WiFi usage
    - Tablet idle usage
  - Apps
    - Downloaded
    - On SD card

- Running
- All
- Personal
  - Accounts and sync
  - Location services
    - Google's location service
    - Locations and Google search
  - Security
    - Screen security
      - Screen lock
      - Owner info
    - Encryption
      - Encrypt tablet
    - Passwords
      - Make passwords visible
    - Device administration
      - Device administrators
      - Unknown sources
    - Credential storage
      - Trusted credentials
      - Install from SD card
      - Clear credentials
  - Language and input
    - Language
    - Spelling correction
    - Personal dictionary
  - Keyboard and input methods
    - Default
    - Android keyboard
    - Google speech to text
  - Speech
    - Voice search
  - Mouse / track pad
    - Pointer speed
  - Backup and reset
    - Backup and restore
      - Backup my data
      - Backup account
      - Automatic restore
    - Personal data
      - Factory data reset
  - System upgrade
    - Recovery mode
- System
- Date and time

- Automatic date and time
- Automatic time zone
- Set date
- Set time
- Select time zone
- Use 24-hour format
- Select date format
- Accessibility
  - Services
    - Talkback
  - System
    - Large text
    - Auto-rotate screen
    - Speak passwords
    - Touch and hold delay
    - Install web scripts
- Developer options
  - USB debugging
  - Development device id
  - Stay awake
  - Allow mock locations
  - HDCP checking
  - Desktop backup password
- User interface
  - Strict mode enabled
  - Pointer location
  - Show touches
  - Show screen updates
  - Show CPU usage
  - Force GPU rendering
  - Window animation scale
- Apps
  - Don't keep activities
  - Background process limit
  - Show all ANR'S
- About tablet
  - Status
  - Legal information
  - Model number
  - Android version
  - Baseband version
  - Kernel version
  - Build number

## FAQ

I can't turn my MID-742 ON?	<ol style="list-style-type: none"> <li>1.Ensure your MID-742 is charged</li> <li>2. Connect the power adaptor, and then check again in 10 minutes.</li> <li>4. Reset the device using the reset button</li> </ol>
After the startup screens the device just shuts off.	Ensure your MID-742 is charged
I can't hear anything through my headset, or the sound quality is very bad	<ol style="list-style-type: none"> <li>1.Please check the volume is correct</li> <li>2. Check the music file on another device to make sure it is not damaged.</li> <li>3. Try using another pair of headphones</li> </ol>
I can't copy files or play music	<ol style="list-style-type: none"> <li>1.Please check the connection to you computer</li> <li>2.Ensure there is enough spare memory</li> <li>3.Check the USB cable is not damaged using another device</li> <li>4.Check the USB connection is correct</li> <li>5. Ensure the USB function has been turned on correctly (Page12)</li> </ol>
My MID-742 displays a network or service error message	<ol style="list-style-type: none"> <li>1. Check the strength of the WiFi signal</li> <li>2. Check that the WiFi service is available and operating correctly</li> </ol>
My touch screen is slow and not working correctly	<ol style="list-style-type: none"> <li>1. Make sure the protective film has been removed from the screen</li> <li>2. Ensure that your fingers are dry and clean.</li> <li>3. Restart your MID-742</li> <li>4. Ensure the touch screen is not scratched or damaged</li> </ol>
My MID-742 is frozen or a severe error has occurred	<ol style="list-style-type: none"> <li>1. Try closing Apps or resetting</li> <li>2. Restore or reset the MID-742 to factory default settings.</li> </ol>
My MID-742 becomes hot when is use or while charging	<ol style="list-style-type: none"> <li>1. Some applications can consume more power than others causing the MID-742 to become warm while in use or if used for extended amounts of time. This is normal and won't affect the life or performance of your MID-742.</li> </ol>
An error occurs when I start the camera	<ol style="list-style-type: none"> <li>1. The camera application requires sufficient storage space and battery voltage. If an error occurs here please try: <ol style="list-style-type: none"> <li>a. Charging the battery, or</li> <li>b. Remove some files to make more storage space</li> </ol> </li> </ol>
An error occurs when I open my music files	<ol style="list-style-type: none"> <li>1. Remove some files to make more storage space</li> <li>2. Make sure the music files aren't protected by digital rights management (DRM). If the files have DRM protection, make sure that you have the license or key.</li> <li>3. Make sure that file type is compatible.</li> </ol>
My MID-742 takes about 45 seconds to turn on / boot up. Is this normal?	Yes. This is common with all tablet devices. Like with most computers, they need time to "boot up". <i>Note: Once more apps and programs are loaded, boot up times may increase.</i>
The available memory on my MID742 is far less than 4GB. Why is that so?	Some of this space is required to pre-load Apps and other Software. Space is required for the OS (Operating System). Apps can be changed and removed if required to suit your memory space requirements.

For further product information and instructions please visit our product web page at [www.laserco.net](http://www.laserco.net) or email [support@laserco.com.au](mailto:support@laserco.com.au)

Please note: As continual improvements are made to this product, slight operational differences may occur. For the most up-to-date user manual, please visit our web site.

### Warranty against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase.

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser Customer Service with details of your defective Laser Product Phone (02) 9870 3355; or Email: [service@laserco.com.au](mailto:service@laserco.com.au) or online [www.laserco.net/support/warranty](http://www.laserco.net/support/warranty) (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

