

User's Manual



Air Ionizer Orion + Orion SK



Wolfgang Warmbier
Untere Gießwiesen 21
D-78247 Hilzingen
www.warmbier.com

Table of contents

INTRODUCTION	3
SAFETY	3
USE AND OPERATION	3
TECHNICAL SPECIFICATIONS	3
INSTALLATION	3
Checks	3
Mounting	4
■ Power unit mounting	4
■ Nozzle mounting	4
Compressed air connection	4
Mains voltage connection	4
PUTTING INTO USE	4
FUNCTIONAL CHECK	5
REMOTE CONTROL INSTALLATION	5
MAINTENANCE	5
Emitter point	5
Replacing the filter nozzle	5
FAULTS	6
REPAIR	6

Introduction

Read this manual completely before you install and put this product into use. Follow the instructions set out in this manual to ensure proper operation of the product and to be able to invoke guarantee.

Safety

- Electrical installation and repairs shall be performed by a skilled electrical engineer.
- When carrying out work on the equipment: De-energise the equipment.
- Make sure that the equipment is properly earthed.
- *Earthing is needed to ensure proper operation and to avoid electrical shocks upon contact.*
- If changes, adjustments, etc. have been made without prior consent in writing, or if no original parts have been used for repairs, CE approval for the equipment will be withdrawn and the equipment will no longer be under guarantee.

Use and operation

The Orion ionizing air gun allows you to simultaneously clean and neutralize electrostatically charged parts and to prevent the blown-away particles from being re-attracted. The Orion produces an air flow which is rich in positive and negative ions. When this air flow is pointed to an electrostatically charged area, electrons are exchanged so that the area is neutralized and cleaned.

Technical specifications

Mains voltage:	230 V AC, 50 Hz
Current:	5 mA (standby), 50 mA (in operation)
Connector:	IEC 320
Pressure:	medium Air (or nitrogen)
Max. pressure:	7 bar (100 PSI),
Air connection:	1/8 NPT female
Air consumption:	68 l/min at 2 bar, 130 l/min at 4 bar, 210 l/min at 7 bar
Filter:	0.01 micron
Noise level:	76 dB at 2 bar, 89 dB at 4 bar, 97 dB at 7 bar, measured at 60 cm distance from the nozzle
Ozone production:	< 0.001 ppm measured at 45 cm from the nozzle at a pressure of 1 bar
Ion balance:	0 +/- 15 volts
Operating temperature:	0 - 40°C
Operating conditions:	Light industrial

Installation

Checks

- Check that the Orion is undamaged and that you have received the correct version.
- Check that the data on the packing slip corresponds with the data shown on the product received.

If you have any problems and/or in the case of ambiguity: Please contact us.

Mounting

■ **Power unit mounting**

Mount the power unit in the position you like against a wall or on/under a work table.

■ **Nozzle mounting**

Mount the nozzle in the position you like using the perforated metal plate.

Compressed air connection

Warning:

The compressed air must be clean, dry and free of oil.

The maximum permissible compressed air pressure is 7 bar (100 PSI).

Use an external filter and pressure regulator for this purpose.

The compressed air is connected to the power unit via an 1/8" NPT female nipple. An adapter nipple (1/8 x 1/4 BSP) is included in the supply. Connect the compressed air via a flexible or rigid line. The line diameter depends on the air consumption. The minimum inside line diameter must be 4 mm.

Mains voltage connection

Warning:

Make sure that the equipment is properly earthed.

The wall socket to be used must be easily accessible.

1. Check that the mains voltage corresponds with the value shown on the rating plate.
2. Plug the connection lead into the connector of the power unit.
3. Insert the plug into an earthed wall socket.

Putting into use

Warning:

If the gun is used for a long period of time and/or frequently, it is recommended to wear ear protection.

- Mount the nozzle in front to the object to be cleaned (distance: 5 to 30 cm).
- Connect the activation input to a remote- or foot switch. (See "Remote control operation" below)
- Close the remote contact (LED lights up more brightly).

Attention:

If the Orion will not be used for a longer period: Remove the plug from the wall socket.

Functional check

The nozzle has a built-in LED with 2 light intensity levels. When the (mains) voltage is on, the LED will be dimly lit. After the gun has been put into operation, the LED will light up more brightly.

An electrostatic field meter must be used to measure the efficiency of the Orion ionizing air gun. Measure the charge on the object before and after the Orion has been used for the blowing-off job. The charge measured should have disappeared afterwards.

Remote control installation

Warning:

When carrying out work on the equipment: De-energise the equipment. Electrical installation and repairs shall be performed by a skilled electrical engineer.

The power unit is activated by a remote switch (relay or foot switch).
The voltage on this circuit is 100 V DC. The power unit is switched on by closing **contact 2 and 3** of the connector.

Attention:

The LED in the nozzle indicates “standby” (The Led will be dimly lit) if the remote control is used.

Maintenance

Warning:

When carrying out work on the equipment: De-energise the equipment.

Emitter point

The emitter point must be clean and sharp.

Regularly clean the emitter point with a cotton tip or a soft cloth, slightly soaked in alcohol.


Make sure that:

- no lint remains on the emitter point.
- the point is entirely dry before switching on the Orion again.

Replacing the filter nozzle

The filter turns red as a result of fouling. Replace the filter nozzle when it is discoloured.

1. De-energise the Orion.
2. Disconnect the compressed air supply.
3. Remove the filter nozzle.
For this purpose, insert a screwdriver between the filter nozzle and the locking ring.
4. Push the filter nozzle forwards (see sketch).
5. Fit a new filter and press it into place.

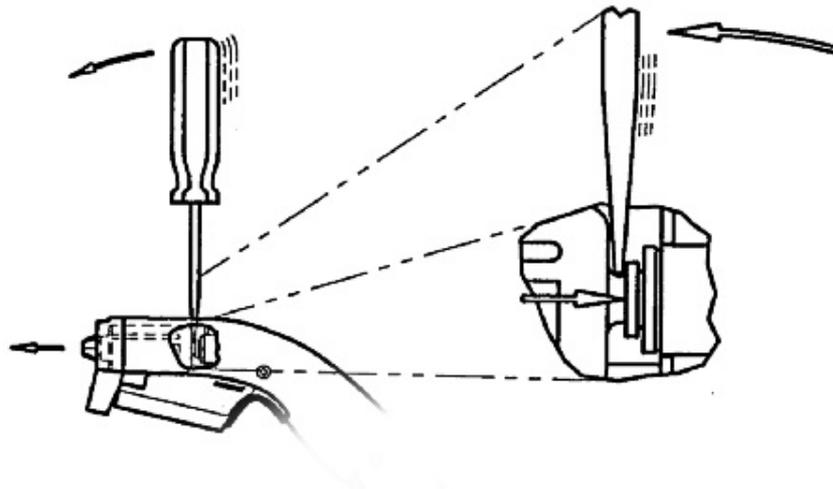

Faults

Problem	Cause	Remedy
Gun is not blowing	No (mains) voltage	Restore (mains) voltage
	No compressed air	Restore compressed air supply
	Filter nozzle clogged	Replace filter nozzle
No ionisation	No (mains) voltage	Restore (mains) voltage
(LED in gun does not light up)	Defective power unit	Repair the power unit

Table 1: faults

Repair

Warning:

Repairs shall be made by a skilled electrical engineer.

When opening the power unit, you may touch parts under hazardous voltage. We recommend you to return the complete installation (gun + power unit) if there is a need for repair. Pack them properly and clearly state the reason for return.