

ACCUSPLIT. PRO SURVIVOR STOPWATCH



STOPWATCH OPERATIONS


For Typical Uses

Press C until at STOPWATCH display.
If necessary, Press R to Stop and
L to Reset to zero.

Event	Split	1-2 Finish
R-Start	R-Start	R-Start
R-Stop (Repeat R,R time-in/ time-out)	L-Split L-Release (Repeat L,L each Split)	L-Stop #1 R-Stop #2 (See #1 time) L-Release (See #2 time)
L-Reset	R-Stop L-Reset	L-Reset

TIME AND CALENDAR DISPLAY

- Press C, until at TIME display.
- Hold R—display Month, Date and PM indicator (P).
- Hold L—display MEMO TIME (Professional X Stopwatch Series do not have Sound Alarm or Chime).

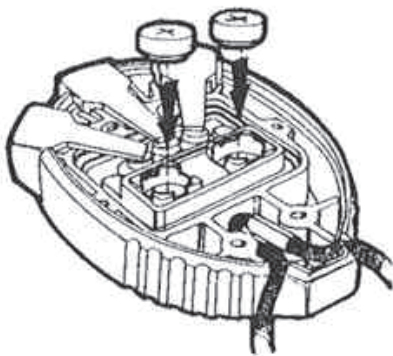

TO SET TIME AND CALENDAR

- Hold C for 3 seconds and Press C once to enter TIME SET MODE.
- Press R to select Minutes, Hour, Month, Date, Day, Seconds.
- Press L to change any of the above. (Seconds only resets to 00). (Hold L to change digits rapidly).
- Press C to return to TIME display.

TO SET MEMO TIME

- Hold C for 3 seconds to enter MEMO TIME SET MODE.
- Press R to select Minutes and Hours.
- Press L to change Minutes and Hours.
- Press C to return to TIME display.

TO SET 12/24 HOUR FORMAT

- Hold R and Press C to interchange 12P or 24 format.

BATTERY CHANGING

See Specifications panel.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>

1-800-965-2008 or 1-925-226-0888
FAX: 925-463-0147
repair@accusplit.com
www.accusplit.com

ASSEMBLED IN PRCHINA
© 2004 ACCUSPLIT

ACCUSPLIT, Inc. • 6120 Stoneridge Mall Rd., Suite 210 • Pleasanton, CA 94588 USA
800-965-2008 • 925-226-0888 • FAX 925-463-0147 • www.ACCUSPLIT.com • support@ACCUSPLIT.com