

GrooveMove Instruction Manual

Cygnett 12 month manufacturers warranty
Register online at www.cygnett.com
to activate your warranty

For product support, please contact
Cygnett directly at info@cygnett.com

For the latest news and more cool products,
visit the website www.cygnett.com

www.cygnett.com

Cygnett.

GrooveMove

Speaker system & alarm clock for iPod



OPERATING INSTRUCTIONS

Contents

- Introduction
- What's in the Box
- Caution/Safety Instructions
- Connecting the GrooveMove
- Operating the GrooveMove
- Audio Modes
- Setting the Time
- Alarm and Alarm Mode Setting
- Snooze/Nap Mode Setting
- Sleep mode setting
- Tuning the Radio
- Volume Setting
- Setting the Back light
- Changing Alarm Volume
- Operating the GrooveMove via Remote Control
- Product Specifications

Introduction

Thank you for purchasing Cygnett's GrooveMove Speaker system & alarm clock for iPod. This all-in-one, compact iPod speaker system & alarm clock gets you moving day or night. Customise your morning wake up call - iPod playlist, AM/FM radio, buzzer or one last snooze!

To get the most from your new GrooveMove, please take a few minutes to read the following instructions and familiarise yourself with the operation of the unit.


What's in the Box?

1. GrooveMove - iPod speaker system & alarm clock
2. AC/DC Power Adaptor
3. Remote Control
4. 3.5mm jack cable for auxiliary input

Caution/Safety


1. Read all safety & operating instructions before use & take notice of all warnings.
2. Follow all operating instructions and retain for later use.
3. Do not use this speaker system near water or moisture.
4. Clean only with a dry cloth.
5. Do not block any of the ventilation openings in accordance with the manufacturer's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other speaker systems (including amplifiers) that produce heat.
7. Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles and the point where they exit from the speaker system.
8. Only use the attachments/accessories specified by the manufacturer.
9. Unplug all electrical components during lightning storms or when unused for long periods of time.
10. Do not attempt to service the dock yourself. Refer all servicing to a qualified service professional. Servicing is required when the dock has been damaged in any way (i.e. power-supply cord/plug is damaged, liquid or objects or have fallen inside the dock, the dock has been exposed to rain or moisture, the dock has been dropped or does not operate normally).

A. Speaker unit(front)

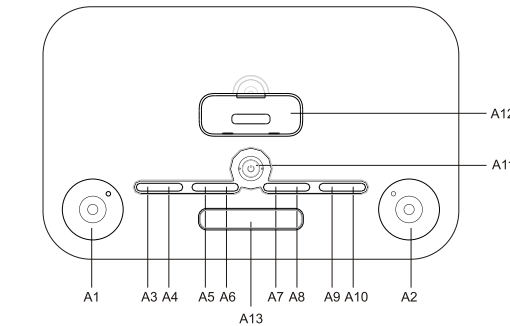

- | | | |
|-----------------|-------------|------------|
| A1. set +/- | A2. vol +/- | A3. timer |
| A4. time set | A5. dimmer | A6. al set |
| A7. al1/al2 | A8. al mode | A9. sounds |
| A10. audio | A11. power | A12. open |
| A13. snooze/nap | | |

B. Speaker unit(rear)

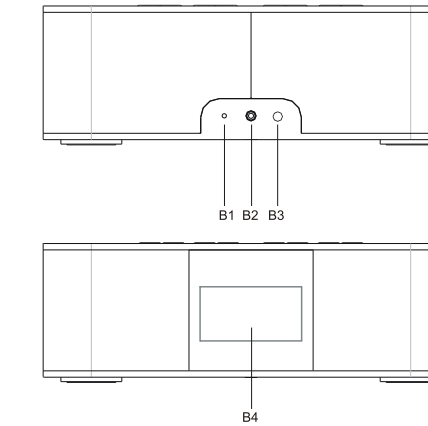

- | | |
|-------------|-----------------|
| B1. fm | B3. dc in |
| B2. line in | B4. LCD display |

Connecting the GrooveMove

Take the AC Power Adaptor and plug it into the GrooveMove 12v DC IN Port at the back of the unit. Plug the AC Power Adaptor into the wall socket and switch it on. Press the Power button located on the top of the GrooveMove. The unit should now be on and ready for use.

Please note: The unit will have default settings of AUX mode, **20dB volume** and the LCD will display a time of 12:00.

Note: Two AA batteries will also power the clock and alarm set functions (**batteries not included**).

Operating the GrooveMove

Audio Modes (AUX/RADIO/IPOD):

When the GrooveMove is turned on it will be in AUX audio mode.

To listen to your iPod, dock your iPod on the top of the unit. Press the 'Audio' button on the top of the unit and click through AUX/RADIO/IPOD audio modes until you have reached the iPod mode.

To listen to the radio or another Auxiliary input, press the 'Audio' button on the top of the unit to choose between AUX or RADIO modes.

Setting the Time:

Press the 'Time Set' button located on the top of the unit to select the Hour/Minute settings. Pressing the 'Time Set' button once will adjust the 'hour' and pressing it twice will adjust the 'minutes'

Then rotate the (set +/-) wheel to adjust the hour or minute setting.

Pressing the 'Time Set' button a third time will exit this function.

Alarm and Alarm Mode Setting:

Press the 'al1/al2' button to enter the alarm setting mode. A small bell (with a number 1) will appear in the right hand corner of the display.

Press the 'Al Set' button to set the alarm time. Adjust the hour first by rotating the (set +/-) wheel. Press 'Al Set' again to adjust the minutes and rotate the (set +/-) wheel up or down.

Press al1/al2 once more and a bell with number 2 will appear. Repeat process to set alarm 2 if desired.

After setting the alarm times, press 'al1/al2' button again to turn on Alarm 1, Alarm 2 or both (the bells with the numbers will indicate which alarm you have chosen).

After you set the alarm(s) press 'al mode' to switch between RADIO/IPOD/AUX/SOUND/BEEP as the alarm type.

Please note: Your iPod needs to be docked to see the IPOD as an alarm selection

If you choose to wake up to the nature SOUNDS, make sure the unit power is on. Press the 'Sounds' button to cycle between field, daybreak, water or ocean.

Pressing the 'Power' button will exit but will ensure the alarm is set. To set the volume of the alarm - see 'Volume Setting' section.

Snooze/Nap Mode Setting:

Snooze/Nap: Pressing the snooze/nap button after the alarm rings will turn off the alarm in nine minute intervals.

Nap Mode Setting: To change the Snooze/Nap intervals, put the unit in power off mode, Press the snooze/nap button to select a nap period of 10, 20, 30, 40, 50 or 60 minutes. The unit will power on and your chosen sound will activate after this time.

Sleep Mode Setting:

The sleep mode allows you to set the unit to turn off the music after a certain amount of time (10/20/30/40/50/60/70/80 or 90 minutes).

Turn the unit ON. Press the 'timer' button on the top left of the unit and the display will cycle through (10/20/30/40/50/60/70/80 or 90 minutes) time options. Select the time you desire and the GrooveMove will turn off after the desired sleep time selected.

Tuning the Radio:

In the power ON mode, press the 'audio' button to cycle through to radio mode and use the 'set +/-' wheel to adjust the FM frequency

Volume Setting:

To increase the volume, spin the 'volume' wheel clockwise. To decrease the volume spin the 'volume' wheel anti-clockwise. Maximum volume is 40dB.

Setting the Backlight:


Press the 'Dimmer' button to change the brightness of the backlight.

Changing Alarm Volume:

Set the desired volume before turning the unit into standby mode. Volume will start at level 5 and increase to the level previously set.

Operating the GrooveMove via Remote Control

The remote control can be used to control both your iPod (when docked) and the GrooveMove. Please see the functions of the remote below.

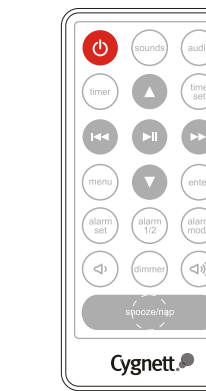

- power: power on/off
- sounds: button to choose nature sounds.
- audio: button to choose audio sources.
- timer: button to choose sleep time.
- time set: button to set time.
- menu: to go back to menu function for iPod.
- enter: go to the function you choose.
- al set: button to set alarm.
- alarm1/2: button to set alarm 1 or 2.
- al mode: button to set alarm music.
- q1: vol-
- q2: vol+
- dimmer: button to change brightness of LCD.
- snooze/nap: under the alarm mode, press this button, the alarm will be ring again after 9 minutes. In power off mode, press snooze/nap button 1, 2, 3, 4, 5, 6 times to postpone alarm 10, 20, 30, 40, 50, 60 minutes.
- play/pause: press to start playback, press again to pause.
- prev: go to previous song.
- next: go to next song.
- up/down button: to select the function menu use up/down button.

Product Specifications

Recharge iPod
Dock and play directly
Built-in FM radio function
LCD display for time
Output power: 8Wx2