

# OMEGA

OS643E-LS/OS643E  
Infrared Thermometer  
With Laser Sighting



OMEGAnet<sup>SM</sup> On-Line Service  
<http://www.omega.com>

Internet e-mail  
[info@omega.com](mailto:info@omega.com)

### **Servicing North America:**

**USA: ISO 9001 Certified** **Canada:**

One Omega Drive, Box 4047 976 Bergar  
Stamford, CT 06907-0047 Laval (Quebec) H7L5A1  
Tel: (203) 359-1660 Tel: (514) 856-6928  
FAX: (203)359-7700 FAX: (514) 856-6886  
e-mail: [info@omega.com](mailto:info@omega.com) e-mail: [info@omega.com](mailto:info@omega.com)

### **For immediate technical or application assistance:**

**USA and Canada:**

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA<sup>SM</sup>  
Customer Service: 1-800-622-2378 / 1-800-622-BEST<sup>SM</sup>  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN<sup>SM</sup>  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and Latin America:**

Tel: (95) 800-TC-OMEGA<sup>SM</sup>  
FAX: (95) 203-359-7807  
En Español: (203) 359-7803  
e-mail: [espanol@omega.com](mailto:espanol@omega.com)

### **Servicing Europe:**

**Benelux:**

Postbus 8034, 1180 LA Amstelveen,  
The Netherlands  
Tel: (31) 20 6418405 FAX: (31) 20 6434643  
Toll Free in Benelux: 06 0993344  
e-mail: [nl@omega.com](mailto:nl@omega.com)

**France:**

9, rue Denis Papin, 78190 Trappes  
Tel: (33) 130-621-400 FAX: (33)130-699-120  
Toll Free in France: 0800-4-06342  
e-mail: [france@omega.com](mailto:france@omega.com)

**United Kingdom: ISO 9002 Certified**

One Omega Drive  
Riverbend Technology Centre Northbank, Irlam,  
Manchester, M44 5EX, England  
Tel: 44 (161) 777-6611 FAX: 44 (161) 777-6622

**Czech Republic:**

ul. Rude armady 1868, 733 01 Karvina-  
Hranice, Czech Republic  
Tel: 420 (69) 6311627 FAX: 420 (69)  
6311114  
e-mail: [czech@omega.com](mailto:czech@omega.com)

**Germany/Austria:**

Daimlerstrasse 26, D-75392  
Deckenpfronn, Germany  
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540  
Toll Free in Germany: 0800 82 66342  
e-mail: [germany@omega.com](mailto:germany@omega.com)

Toll Free in England: 0800-488-488


e-mail: [sales@omega.com.uk](mailto:sales@omega.com.uk)

# INTRODUCTION


This instrument is a portable easy to use 3 digit, compact-sized digital infrared thermometer with laser sighting designed for simple one hand operation. Meter comes with Backlit LCD display, Auto-hold function and auto power down (20 seconds approx.) after releasing MEAS button to extend battery life.

## SAFETY INFORMATION

It is recommended that you read the safety and operation instructions before using the infrared thermometer.

The  symbol on the instrument indicates that the operator must refer to an explanation in this manual.

### DANGER

Pressing the  button turns the laser beam on and off. Exercise extreme care and do not allow the laser beam to enter your eye or those of any other person or animal.

- Do not look directly into the laser light from the optical system.
- When measuring the temperature of an object which has a mirror finish, be careful not to allow the laser light beam to be reflected off the surface into your eyes or those of another person.
- Do not allow the laser light beam to impinge upon any gas which can explode.


## CAUTION

- Do not use the unit near any device which generates strong electromagnetic radiation or near a static electrical charge, as these may cause errors.
- Do not use the unit where it may be exposed to corrosive or explosive gases. The unit may be damaged, or explosion may occur.
- Do not keep or use this unit in an environment where it will be directly illuminated by sunshine, or where it will be exposed to high temperatures, high humidity or condensation. If you do, it may be deformed, its insulation may be damaged, or it may no longer function according to specification.
- Do not point the lens at the sun or at any other source of strong light. If you do, the sensor may be damaged.
- Do not contact the lens against the object whose temperature is to be measured, or get it dirty, allow it to be scratched, or allow any foreign material to adhere to it. Doing so may cause errors.
- Do not touch or hold by the front cone. Temperature reading can be affected by heat from hand.
- Do not place the meter on or around hot objects (70°C/158°F). It may cause damage to the case.
- If the meter is exposed to significant changes in ambient temperature (hot to cold or cold to hot). Allow 20 minutes for temperature stabilization, before taking measurement.
- Condensation may form on the lens when going from a cold to hot environment-wait 10 minutes for condensation to dissipate before taking measurements.
- This unit is not constructed to be water proof or dustproof, so do not use it in a very dusty environment or in one where it will get wet.

# SPECIFICATIONS

## GENERAL

**Display:** 3½ digit liquid crystal display (LCD) with maximum reading of 1999.

**Low battery indication:** the "  " is displayed when the battery voltage drops below the operating level.

**Measurement rate:** 1 times per second, nominal.

**Operating Environment:** 32°F to 122°F (0°C to 50°C) at < 70% relative humidity.

**Storage Temperature:** 40°F to 140°F (-20°C to 60°C), 0 to 80% R.H. with battery removed from meter.

**Auto power off:** 20 seconds.

**Standby consuming current:** <9mA.

**Battery:** 4 pcs 1.5V (AAA size).

**Battery Life:** 30 hours (continuity) typical (Laser marker and Back-Light not illuminated).

**Dimensions:** 170mm(H) x 44mm(W) x 40mm(D).

**Weight:** 160g including batteries.

## **Laser Specifications**

**Laser safety classification of Class II**

**Wave Length:** Red (650nm).

**Operating Distance:** 2 to 50 feet.

**Power out:** <1mW , class II laser product.

## **ELECTRICAL**

**Temperature Range:** -4°F to 1022°F / -20°C to 550°C.

**Display Resolution:** 1°F / 1°C.

**Accuracy:**  $\pm 2\%$  of reading or  $\pm 6^\circ\text{F}/3^\circ\text{C}$ , whichever is greater @ 64.4 to 82.4°F (@ 18 to 28°C) ambient operating temperature.

**Temperature Coefficient:**  $\pm 0.2\%$  of reading or  $\pm 0.36^\circ\text{F}/0.2^\circ\text{C}$ , whichever is greater, change in accuracy per °F/°C change in ambient operating temperature above 82.4°F/28°C or below 64.4°F/18°C.

**Response Time:** 1 second.

**Spectral Response:** 6 to 14 $\mu\text{m}$  nominal.


**Emissivity:** 0.10 to 1.00 by step of 0.01.

**Detection Element:** Thermopile.

**Optical Lens:** Fresnel Lens.

**Sighting:** 1-beam laser marker <1mW (class 2).

**Field of View:** 65mm $\varnothing$  at 1000mm (2.56" $\varnothing$  at 39.37").

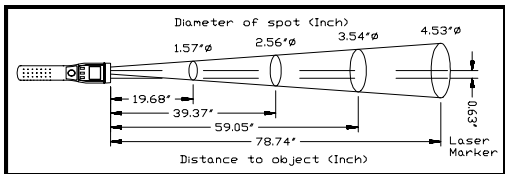

**Spot size increases with distance from the probe tip as shown  
(Spot Diameter measured at 90 % Energy)**

**CAUTION:** Use of controls or Adjustments or performance of Procedures other than those Specified herein may result in Hazardous radiation exposure.

**Aperture Label (on front):**



**Danger, Certification & ID Label:**

(Located on back of unit)

<b>CAUTION</b>	
LASER RADIATION DO NOT STARE INTO BEAM	
WAVELENGTH 600-700 nm POWER <1mW-CLASS II LASER PRODUCT, COMPLIES WITH 21 CFR CHAPTER 1, SUBCHAPTER J.	
LASER RADIATION- CLASS 2 LASER PRODUCT, CONFORMS TO IEC825-1:1993	
OMEGA ENGINEERING, INC. STAMFORD, CT 06907 U.S.A    MADE IN TAIWAN	
S/N: XXXXXX	XXX./XX

# OPERATING INSTRUCTIONS

## **Auto Power-down function**

If unused for about 20 seconds, the unit will power-down automatically. Press MEAS button resumes power-on mode. SET MODE disables auto power-down feature.

## **Turning the Power on**

When the power is down, press MEAS button to turn on the meter. The values and settings on the LCD return to what they were before the power was last turned off.





**NOTE:** If, from the power down condition, the MEAS button is held down for more than four second, measurement starts.

## **✳ Display Back-Light Button**

Press "✳" button to turn on or off the LCD Back-Light during measurement, or while the display shows HOLD, MAX or MIN.





## Laser Sighting

Press "" button to on the "" annunciator. If "" annunciator is on, press MEAS button and the laser beam will turn on and "" annunciator will blink. Releasing MEAS button turns off the laser beam.

## MEAS (MEASURE) Button

Press MEAS button to turn on the meter for measuring temperature. Releasing MEAS button to stop measuring temperature and automatically hold the display reading, the meter power down automatically after 20 seconds.

## Selecting the Temperature Scale

Readings are displayed in either degrees Celsius( $^{\circ}\text{C}$ ) or degrees Fahrenheit( $^{\circ}\text{F}$ ). When the thermometer is turned on, it is set to the temperature scale that was in use when the thermometer was last turned off. To change the temperature scale, in power down mode hold the "" button ( $^{\circ}\text{F}$ ) [" button ( $^{\circ}\text{C}$ )] down, and then press MEAS button until the  $^{\circ}\text{F}$  ( $^{\circ}\text{C}$ ) annunciator appear.

## Continuous Measurement

1. In the power down mode, holding the MODE key down and then pressing the MEAS key will put the unit into the continuous measurement mode.
2. When the MEAS key is pressed again to stop measuring temperature and automatically hold the display reading, the meter power down automatically after 20 seconds.

**NOTE:** During the continuous measurement mode, the HOLD indication does not appear.

**NOTE:** During the continuous measurement mode, the laser sighting is not turned on.

# MODE SELECTION AND OPERATION

Press MODE button switches the mode around the cycle

e® ALM Hi® ALM Lo® MAX® MIN® HOLD.

**HOLD** :Releasing MEAS button stops measuring temperature, the HOLD indication appears, and the measured temperature is held.

e :The thermal emissivity of the object set using the ▲ and ▼ keys.

**ALM Hi** :The upper limit alarm temperature is set using the ▲ and ▼ keys. When the measured temperature is exceeded the Hi setpoint, the beeper emits a discontinuous pulse tone and "ALM Hi" is displayed.

**ALM Lo** :The lower limit alarm temperature is set using the ▲ and ▼ keys. When the measured temperature is below the Lo setpoint, the beeper emits a continuous pulse tone and "ALM Lo" is displayed.

**MAX** :The maximum temperature during measurement is displayed. when measuring and also pressing the mode key, this will enter MAX/MIN/ Present cycling.

**MIN** :The minimum temperature during measurement is displayed. when measuring and also pressing the mode key, this will enter MAX/MIN/ Present cycling.

**NOTE:** If, from the power down condition, the MEAS key is held down for more than four second, MAX/MIN record starts.

## **SET MODE & Numeric input key**

"SET" annunciator appears when a numerical value can be set (during setting of  $e$ , ALM Hi and ALM Lo).

▲ key :The numerical value is increased.

▼ key :The numerical value is reduced.

If either of these numerical value keys is held down, the numerical value changes rapidly in the appropriate direction.

The data will store in nonvolatile storage region while after settings completing. In the this mode the automatic power-off feature is disabled.

## How to specify the thermal emissivity ( $\epsilon$ )

1. Stick black body tape on the object whose temperature is to be measured, or spray it with black body spray.
2. Set the thermal emissivity value ( $\epsilon$ ) on the LCD to 0.95.
3. Press the MEAS key, so as to measure the temperature ( $T_{\text{real}}$ ) of the part on which body tape (or black body spray) is applied.
4. Measure the temperature ( $T$ ) of the parts to which body tape (or black body spray) is not applied.
5. Change the thermal emissivity value ( $\epsilon$ ).
6. The value of the thermal emissivity ( $\epsilon$ ) at which  $T$  comes out to be equal to  $T_{\text{real}}$  is the correct value for the inherent thermal emissivity of the body whose temperature is to be measured.

## OPERATION

1. When the power is down, pressing MEAS button turns on the power.
2. Use "☀" button to select turn on or turn off the display Back-Light.
3. Use "▲" button to select turn on or turn off the Laser beam.
4. Press the MODE button, if necessary to set the thermal emissivity value ( $\epsilon$ ).
5. Point the lens at the object whose temperature is to be measured.
6. Press the MEAS button. Measurement is performed as long as the MEAS button is kept pressed.
7. Referring to the spot size figure, aim the laser beam at the object whose temperature is to be measured.

NOTE: Although the field of measurement (or Field of View) and the spot almost coincide, actually the field of measurement corresponds to the diameter for 90% optical response. The object whose temperature is to be measured needs to be larger than the measurement diameter (spot of size) by an adequate margin at least 1.5 to 2 times larger.

8. Read the display.

# MEASUREMENT CONSIDERATIONS

## 1. Theory of Measurement

Every object emits infrared energy in accordance with its temperature. By measuring the amount of this radiant energy, it is possible to determine the temperature of the emitting object.

## 2. About Infrared

Infrared radiation is a form of light (electromagnetic radiation), and has the property that it passes easily through air while it is easily absorbed by solid matter. With an emission thermometer which operates by detecting infrared radiation accurate measurement is possible, irrespective of the air temperature or the measurement distance.

## 3. Emission Thermometer Structure

Infrared radiation which has been emitted from the object is focused upon an infrared radiation sensor, via an optical system. This includes a lens which is transparent to infrared radiation, and  $5.3\mu\text{m}$  cut off filter. The output signal from the infrared radiation sensor is input to an electronic circuit along with the output signal from a standard temperature sensor (Thermopile).

#### 4. Emissivity


All objects emit invisible infrared energy. The amount of energy emitted is proportional to the object's temperature and its ability to emit IR energy. This ability, called emissivity, is based upon the material that the object is made of and its surface finish. Emissivity values range from 0.10 for a very reflective object to 1.00 for a black body. Factory set emissivity value of 0.95, which cover 90% of typical applications.

5. If the surface to be measured is covered by frost or other material, clean it to expose the surface.
6. If the surface to be measured is highly reflective, apply masking tape or matt finish black paint to the surface.
7. If the meter seems to be giving incorrect readings check the front cone. There may be condensation or debris obstructing the sensor; clean per instructions in the maintenance section.



# MAINTENANCE

## Battery Replacement

Power is supplied by four 1.5V (AAA size) batteries. The "" appears on the LCD display when replacement is needed. To replace the batteries, remove the screw from the back of the meter and lift off the battery cover case. Remove the batteries from battery contacts.

## Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

Substance	Thermal emissivity	Substance	Thermal emissivity
Asphalt	0.90 to 0.98	Cloth (black)	0.98
Concrete	0.94	Human skin	0.98
Cement	0.96	Lather	0.75 to 0.80
Sand	0.90	Charcoal (powder)	0.96
Earth	0.92 to 0.96	Lacquer	0.80 to 0.95
Water	0.92 to 0.96	Lacquer (matt)	0.97
Ice	0.96 to 0.98	Rubber (black)	0.94
Snow	0.83	Plastic	0.85 to 0.95
Glass	0.90 to 0.95	Timber	0.90
Ceramic	0.90 to 0.94	Paper	0.70 to 0.94
Marble	0.94	chromium oxides	0.81
Plaster	0.80 to 0.90	Copper oxides	0.78
Mortar	0.89 to 0.91	Iron oxides	0.78 to 0.82
Brick (red)	0.93 to 0.96	Textiles	0.90



## **WARRANTY**

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of 13 **months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. This includes contact points, fuses, and triacs.

**OMEGA is glad to offer suggestions on the use of its various products. Nevertheless, OMEGA only warrants that the parts manufactured by it will be as specified and free of defects**

**OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.**

**LIMITATION OF LIABILITY:** The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

**SPECIAL CONDITION:** Should this equipment be used in or with any nuclear installation or activity, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient connected application.

## **RETURN REQUESTS / INQUIRIES**

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available **BEFORE** contacting OMEGA:

1. P.O. number under which the product was **PURCHASED.**
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. P.O. number to cover the **COST** of the repair.
2. Model and serial number of product , and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

## HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

## PRESSURE/STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

## FLOW/LEVEL

- Rotameters, Gas Mass  
Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

## TEMPERATURE

- Thermocouple, RTD & Thermistor  
Probes, Connectors, Panels &  
Assemblies
- Wire: Thermocouple, RTD &  
Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process  
Monitors
- Infrared Pyrometers

## ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater  
Treatment
- pH, Conductivity & Dissolved  
Oxygen Instruments

## pH/CONDUCTIVITY

- pH Electrodes, Testers &  
Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators,  
Simulators & Pumps
- Industrial pH & Conductivity  
Equipment

## DATA ACQUISITION

- Data Acquisition & Engineering  
Software
- Communications-Based  
Acquisition Systems
- Plug-in Cards for Apple, IBM  
& Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

M-3230/0999