

ACCEPTANCE CERTIFICATE

The fan is duly recognized
as serviceable.

Approval mark

Manufactured on (date)

Sold
(name and stamp of the trade company)

Date of sale

iFan

iFan Move

iFan
intelligent fan

INTELLIGENT AXIAL FAN
user's manual

model
VENTS iFan



Thank you for purchasing the fan made by VENTS. iFan is an innovative extract bathroom fan enclosed into a compact casing. The unique technologies combined with smart electronics support the ideal comfort and microclimate in your house. The stylish fan design matches well with any modern interior. We do hope that you are happy with your fan's quality of performance.

 **WARNING**

Disconnect the fan from power mains prior to any connection, servicing and repair operations. Mounting and maintenance are allowed for duly qualified electricians with valid electrical work permit for electric operations at the units up to 1000 V after careful study of the present user's manual.

The single-phase power grid must comply with the acting local electrical norms and standards. The fixed electrical wiring must be equipped with an automatic circuit breaker. The fan must be connected to power mains through an automatic circuit breaker integrated into the fixed wiring system with the gap between the breaker contacts on all poles not less than 3 mm.

Check the fan for any visible damages of the impeller and the casing before starting installation. The casing internals must be free of any foreign objects which can damage the impeller blades. Misuse of the device or any unauthorized modification is not allowed. The fan is not to be used by children and persons with reduced physical, mental or sensory capacities, without proper practical experience or expertise, unless they are controlled or instructed on the product operation by the person(s) responsible for their safety.

Do not leave children unattended and do not let them play with the product. Take steps to prevent ingress of smoke, carbon monoxide and other combustion products into the room through open chimney flues or other fire-protection devices. Sufficient air supply must be provided for proper combustion and exhaust of gases through the chimney of fuel burning equipment to prevent back drafting.

Operating medium must not contain any dust or other solid impurities, sticky substances or fibrous materials. Do not use the fan in the environment containing hazardous or explosive materials and vapours, i.e. spirits, gasoline, insecticides, etc. Do not close or block the fan intake or extract vents in order to ensure the most effective air passage. Do not sit on the fan and do not put objects on the fan. Fulfill the requirements stated in this user's manual to ensure long service life of the product.



WARNING



Recycle at the end of the service life.

Do not dispose the product with unsorted municipal trash.

Read the present user's manual carefully before proceeding with installation works.
Compliance with the manual requirements ensures reliable operation and long service life of the product.
Keep the user's manual available as long as you use the product. You may need to re-read the information on the product servicing.

DELIVERY SET

The delivery set includes:

1. Fan - 1 pce;
2. Logo - 1 pce;
3. Spigot 100 mm - 1 pce;
4. Spigot 125 mm - 1 pce;
5. Screws and dowels - 4 pcs;
6. User's manual - 1 pce.

DESCRIPTION

Due to constant improvements the design of some models may slightly differ from that one described in this manual.
The product described herein is the axial fan made of high-quality plastic designed for extract ventilation of small and medium-sized residential premises that are heated during winter period.

Table 1

Voltage [W]	100-240
Frequency [Hz]	50-60
Max. power [W]	3,8
Current [A]	0,03
RPM [min⁻¹]	2200
Max. air capacity [m³/h]	133
Ingress Protection	IP 44
Weight [kg]	0,35




Table 2

Model	Spigot dia.	Speed	Max. air capacity [m ³ /h]	Noise level at 3m [dBA]	Air capacity, factory settings [m ³ /h]	Air capacity regulation range [m ³ /h]
iFan / iFan Move	100	24 Hours	33	17	33	-
		Silent	72	22	72	33 ... 72
		Max	106	31	82	72 ... 106
	125	24 Hours	40	17	40	-
		Silent	83	21	83	40 ... 83
		Max	133	32	97	83 ... 133

Table 3

Model	Functions							
	Humidity control	24 Hour	Turn-on delay timer	Off-delay timer	Speed control	Interval ventilation	External switch	Motion sensor
iFan	+	+	+	+	+	+	+	
iFan Move	+	+	+	+	+	+	+	+

Overall dimensions

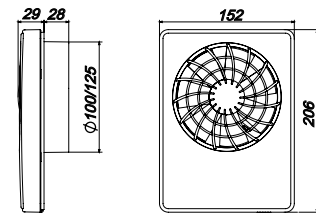


The fan has four ventilation modes:

- Standby** mode - standard operation mode for the fan in case of no signalling from the sensors or external switch. In standby mode the fan does not run.
- 24 Hours** - the fan runs at low speed for minimum round-the-clock ventilation. As humidity level increases, the fan switches to MAX mode (by default) or to SILENT mode. The fan switches to SILENT mode when the motion sensor is activated or external switch is closed.
- SILENT** - silent operation mode of the fan. This mode is may be activated by the motion sensor, external switch or humidity sensor. For humidity sensor, this mode may be activated from the fan.
- MAX** - humidity-activated operation mode. It is switched on as humidity level increases. This mode is activated for the humidity sensor by default.


iFan
Intelligent fan

PRODUCT MOUNTING.


The fan is designed for mounting into round 100 or 125 mm air duct or installation into the ventilation shaft.

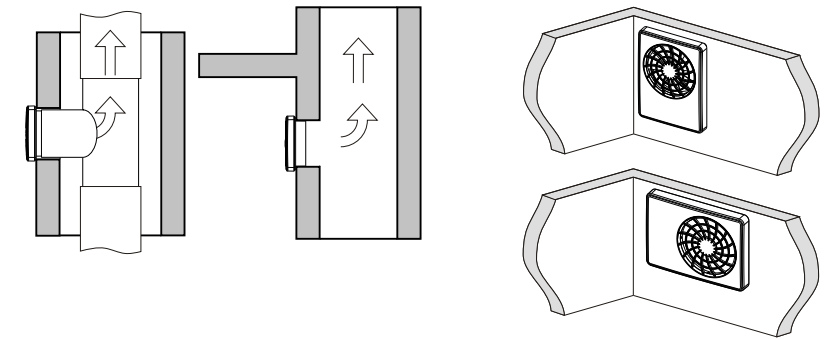


The replaceable adapter of required size may be used to facilitate mounting.

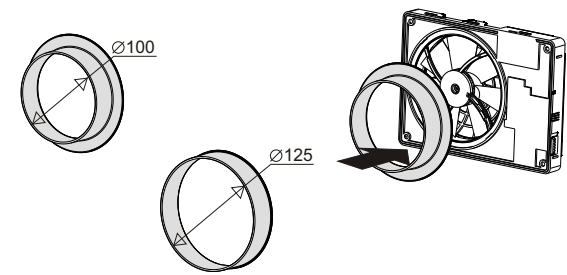


The fan is equipped with a removable grille. Press the latches slightly to release the grille from the front cover. While installing the grille on the front cover back match the latches and respective slots in the cover and insert to click. The pointer on the reverse side of the grille must be directed to the shorter side close to the hole.

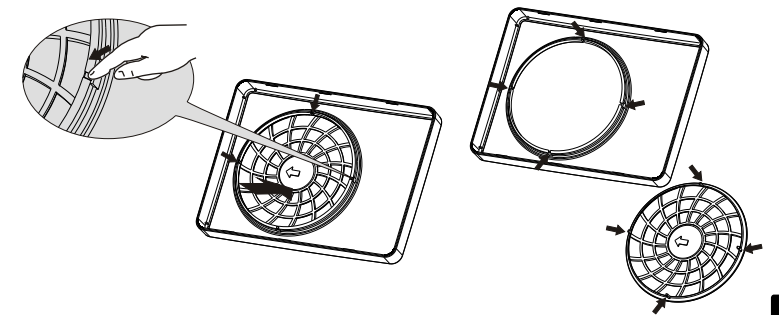


The fan casing has three round lowered tabs for cable entry.
Cut out a hole at the most suitable place with a knife.

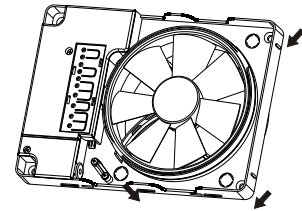


FAN MOUNTING SEQUENCE

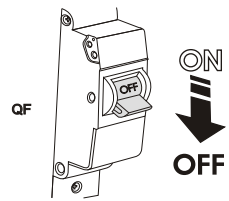


1

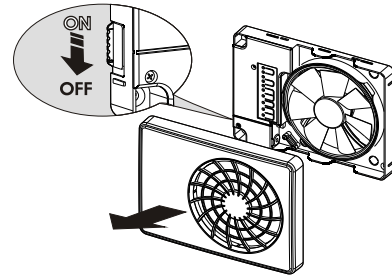


2

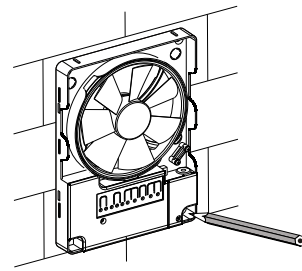


3

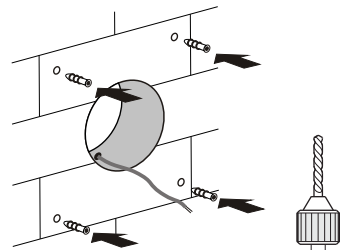

4

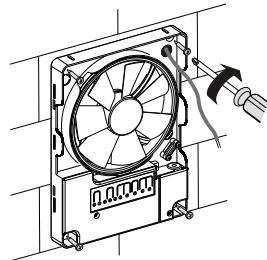


5

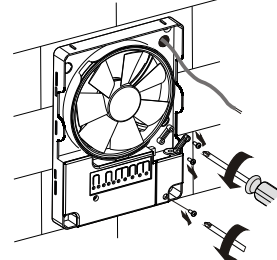


6

6


ifan
Intelligent fan

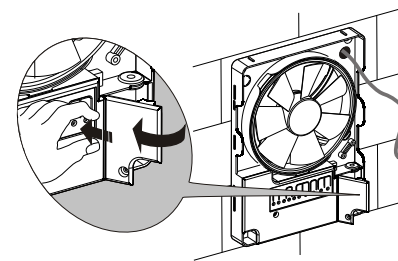


7

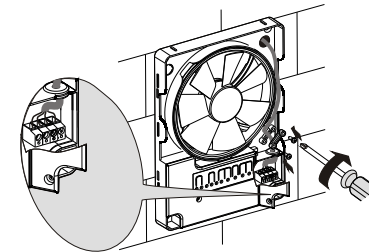


8

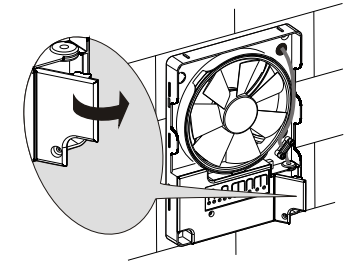


9

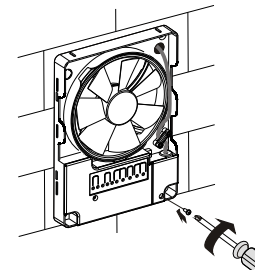

10

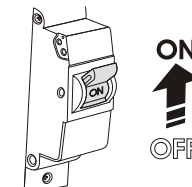

11

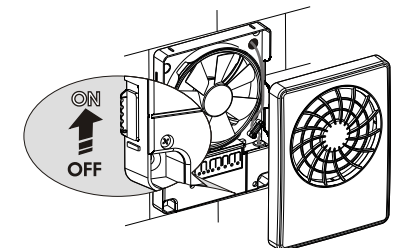


12

The fan may be connected to power mains by four wiring diagrams. The fan is compatible with 100-240 V / 50-60 Hz power mains. The iFan Move has LI terminal for connection to the lamp up to 200W/230 V or 100 W/120 V. At this connection the fan will be switched




Wiring diagram 1

L and N terminals are connected to live and neutral respectively. The fan is always in standby mode and does not run. As 24 HOURS Mode is activated the fan runs permanently at low speed to ensure minimum round-the-clock ventilation. As motion sensor is activated (for iFan Move only) the fan switches to SILENT mode. After no motion is detected the fan reverts to standby mode. As humidity level increases the fan switches to MAX mode (by default) or to SILENT mode. After humidity level drops the fan reverts to standby mode.

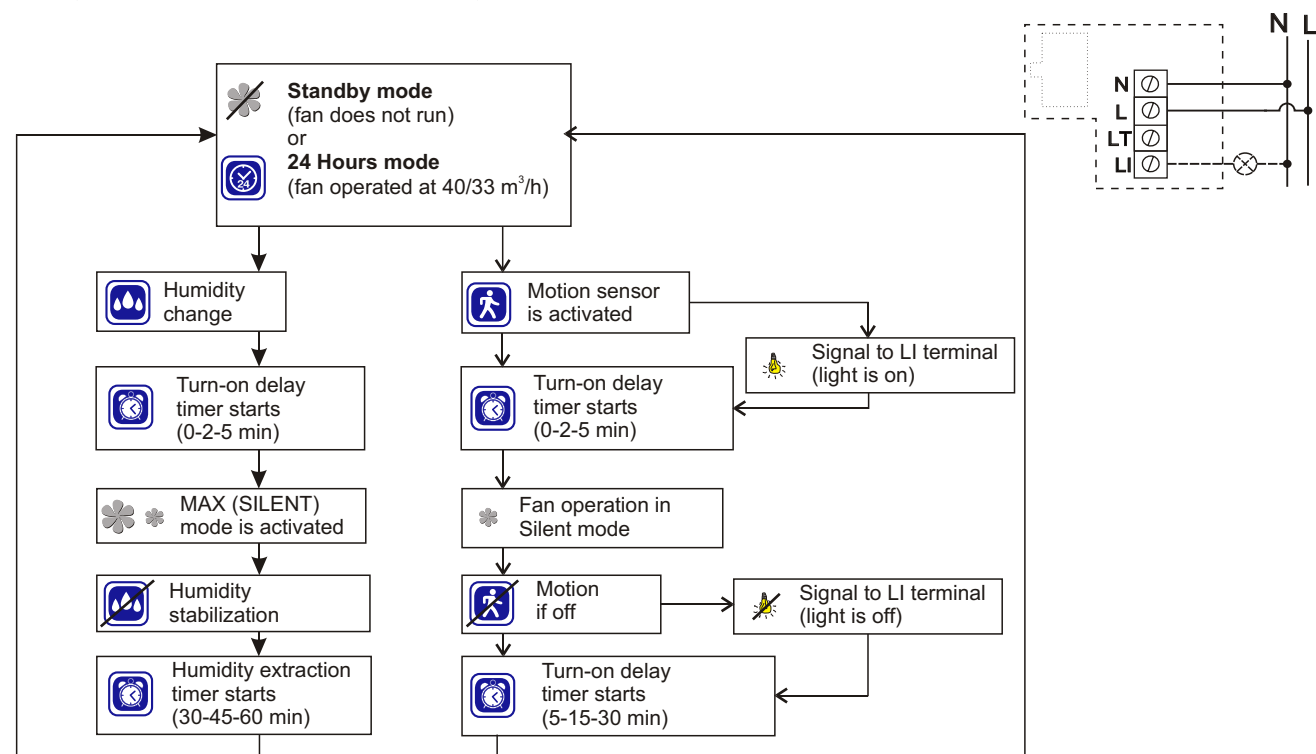


Wiring diagram 2

L and N terminals are connected to live and neutral respectively and L and LT terminals are joined by the jumper. The fan is always in SILENT mode. 24 Hours mode may not be activated. No matter of the signal from the motion sensor the fan operated in SILENT mode. As humidity level increases the fan switches to MAX mode (by default) or continues operation in SILENT mode (if adjusted by the user). After humidity level drops to standard level the fan reverts to SILENT mode.

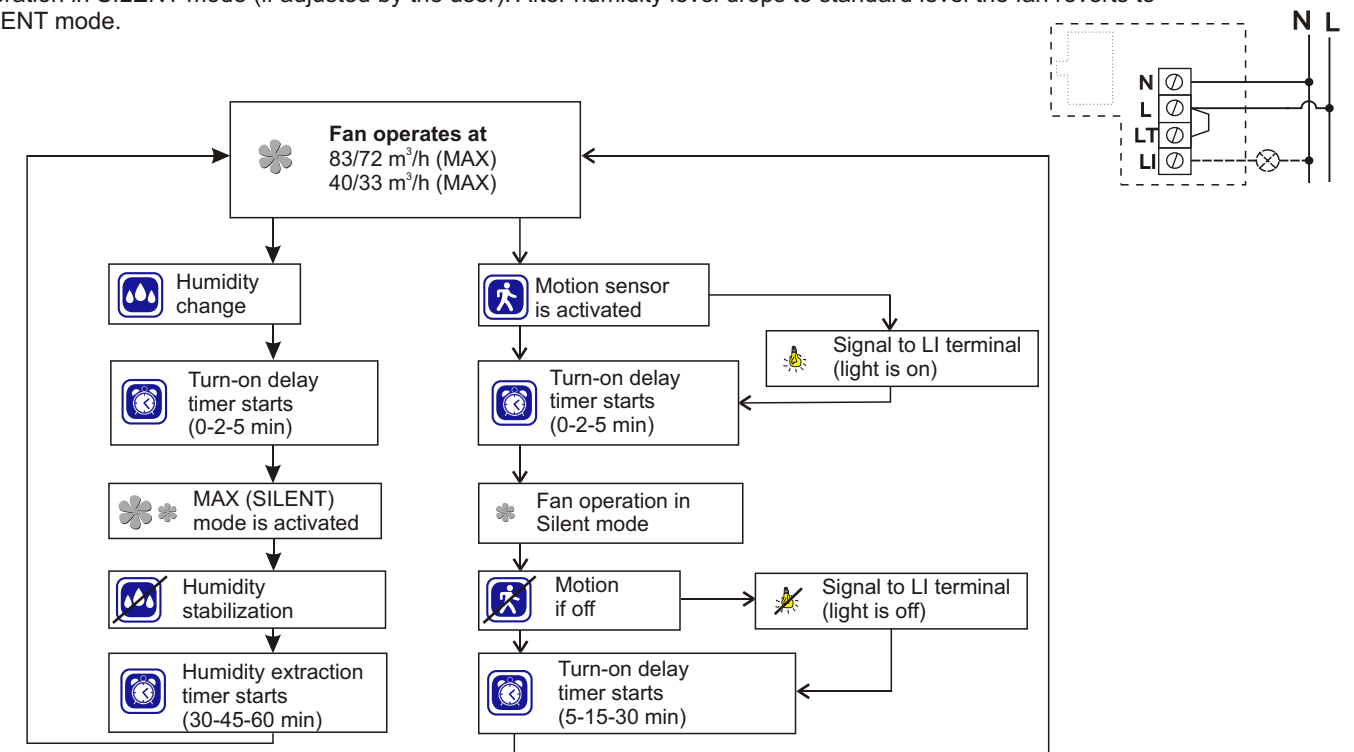


Wiring diagram 3

L and N terminals are connected to live and neutral respectively. LT contact is connected to live through external switch, light switch. The fan is always in standby mode. As 24 HOURS Mode is activated the fan runs permanently at low speed to ensure minimum round-the-clock ventilation. As the external switch is closed the fan switches to SILENT mode. After the external switch is off the fan reverts to standby mode. As motion sensor is activated (for iFan Move only) the fan switches to SILENT mode. After no motion is detected the fan reverts to standby mode. As humidity level increases the fan switches to MAX mode (by default) or to SILENT mode. After humidity level drops the fan reverts to standby mode.

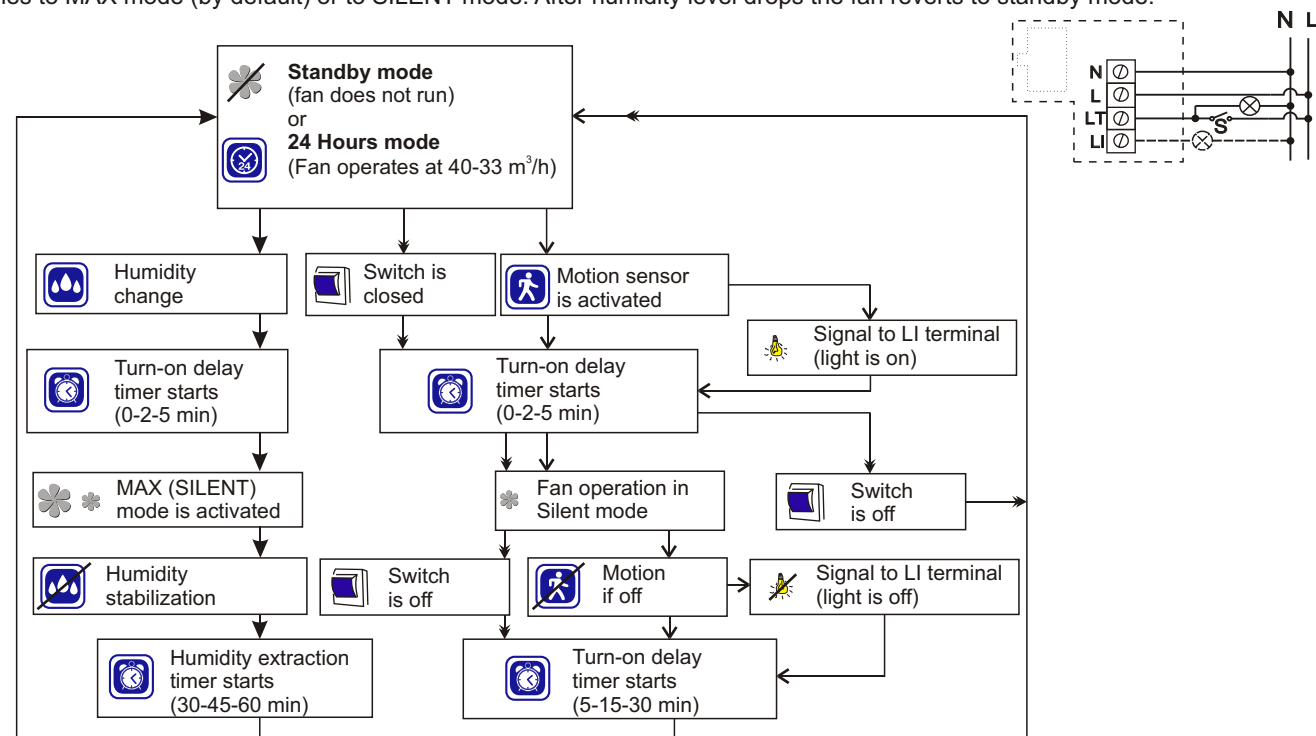

Wiring diagram 4

L and N terminals are connected to live and neutral respectively. LT terminal is connected to live through the external momentary switch that is activated by opening a door. The fan is in standby mode and does not run. As 24 HOURS Mode is activated the fan runs permanently at low speed to ensure minimum round-the-clock ventilation. As the external momentary switch is closed the fan switches to SILENT mode for the period adjusted in the off-delay timer. After the fan reverts to standby mode. As motion sensor is activated (for iFan Move only) the fan switches to SILENT mode. After no motion is detected the fan reverts to standby mode. As humidity level increases the fan switches to MAX mode (by default) or to SILENT mode. After humidity level drops the fan reverts to standby mode.

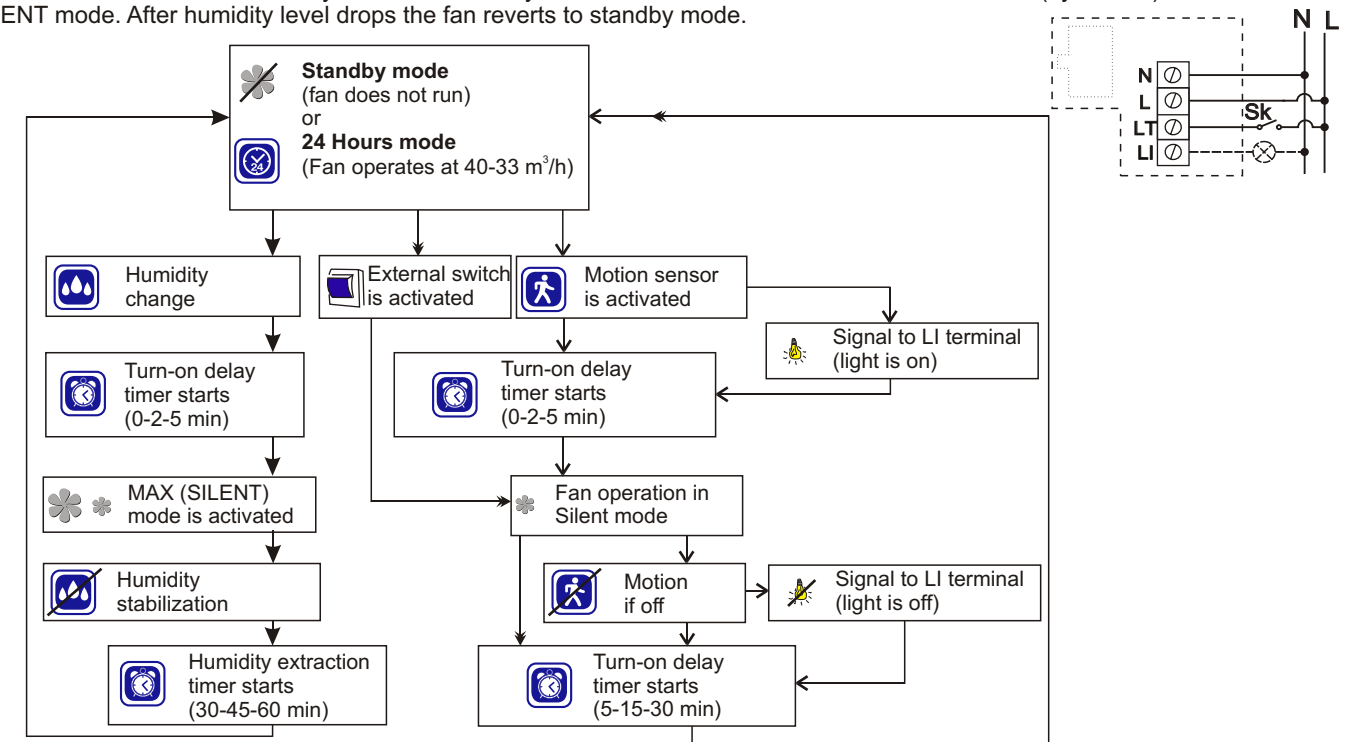

FAN ADJUSTMENTS

The fan is adjusted at the factory and is ready for operation. It is a fully operable product without extra adjustments. However if you want to adjust the fan according to your needs, please follow the instruction below.


You can always reset to the factory settings.

Factory setting parameters (spigot 125/spigot 100):


- speed in standby mode - 0 m³/h
- speed in 24 Hours mode - 40/33 m³/h
- speed in Silent mode - 83/72 m³/h
- speed in Max mode - 97/82 m³/h
- humidity extraction Max mode
- turn-on delay time - 0 min
- off-delay time - 5 min
- humidity extraction time - 30 min
- motion sensor (for iFan Move) is included.

CONTROL PANEL

iFan model

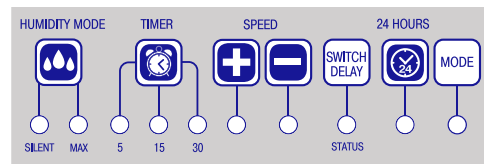

iFan Move model

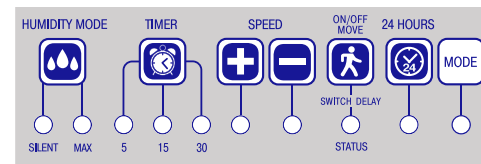

FAN OPERATION INDICATION

The fan is turned on by the motion sensor or external switch - the light indicator STATUS is green.

The fan is in standby mode - the light indicator STATUS blinks green once in 2 seconds.

Fan operation in 24 Hours mode - the light indicator is red.

Fan operation in humidity extraction mode - the light indicator STATUS blinks red once in 2 seconds.

Fan operation in interval ventilation mode - the light indicator STATUS blinks in turn red and green once in 2 second.

Fan operation in turn-on delay mode - the light indicator STATUS blinks red twice in 1 second.



iFan
Intelligent fan

SILENT MODE SPEED ADJUSTMENT

By default the speed is 83/72 m³/h.
To adjust the speed press the buttons "+" or "-".
Press the button "+" or "-" to display the current air capacity.

Number of active light indicators	Air capacity [m ³ /h]
1	40/33
2	44/37
3	48/41
4	52/45
5	57/49
6	62/53
7	67/57
8	72/61
9	77/66
10	83/72

MAX MODE SPEED ADJUSTMENT


By default the speed is 97/82 m³/h.
To adjust this speed, press the button "MODE", hold it and adjust the required speed with buttons "+" or "-".
Press the button "+" or "-" together with the button "MODE" once to display the current air capacity.

Number of active light indicators	Air capacity [m ³ /h]
1	83/72
2	87/75
3	92/79
4	97/82
5	103/86
6	109/90
7	115/94
8	121/98
9	127/102
10	133/106

HUMIDITY EXTRACTION MODE SELECTION

By default the extraction mode is MAX mode:
When humidity level increases the fan switches to higher speed to extract excessive humidity.
After the indoor humidity drops to standard level, the humidity timer activates and the fan operates throughout the time period set for the humidity extraction timer.
After that the fan reverts to the previous operation mode. If humidity level increases less than by 20% within 10 minutes, the fan run-out time becomes 15 minutes.
Select the humidity extraction mode by pressing the button "Humidity mode":
Max - active humidity response mode with the best impeller performance.
Silent - active humidity response mode with silent operation.
Press the button "Humidity mode" once to display the current mode.

Note: Stabilization of humidity is understood as humidity change no more than by 3% within 5 minutes.

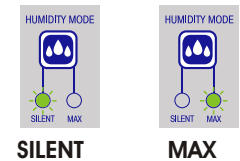


HUMIDITY EXTRACTION MODE ADJUSTMENT

After the humidity level stabilization the fan continues operating for some time period at higher speed to ensure full excessive humidity extraction. This time is adjustable.

To adjust the time, press and hold the button "MODE" and synchronously press the button "TIMER".

The default time is 30 minutes.

Press the button "TIMER" together with the button "MODE" once to display the current setting.

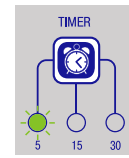

30 min



45 min




60 min


OFF-DELAY TIMER ADJUSTMENT

When the motion sensor is activated or the external switch is closed, the fan operates for some time and then reverts to standby mode. This time is adjustable. To adjust the time, press the button "TIMER".


The default time is 5 minutes.

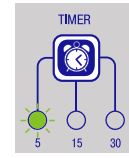

5 min

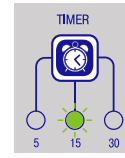

15 min

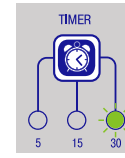

30 min


TURN-ON DELAY TIMER ADJUSTMENT

If you have to visit the bathroom often, you can adjust the turn-on delay timer to avoid the fan unnecessary switching. After humidity increases or after signal from the external switch/motion sensor, the fan switches to higher speed not immediately, but in some time period.

To change this time (0, 2 or 5 minutes) press and hold the button "SWITCH DELAY" and synchronously press the button "TIMER".

The default time is 0 minutes.

Press the button "TIMER" together with the button "SWITCH DELAY" once to display the current setting.

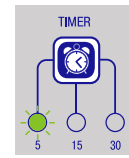

0 min



2 min



5 min

SWITCHING MOTION SENSOR (FOR IFAN MOVE MODEL)

The motion sensor is off by default.
Press the button "On/Off move" to switch it on.
The light indicator "Status" under the button glows when the motion sensor is turned on.
Press the button "On/Off move" once to display the current setting.



SWITCHING 24 HOURS MODE

In this mode the fan has minimum air capacity before the humidity sensor, motion sensor or external switch is activated.
Press the button "24 Hours" to switch this function on.
The green light indicator under this button glows when 24 Hours mode is on.
To turn this mode off, press the button 24 Hours.
This function is not available for wiring diagram 2.
By default this mode is turned off.




EXTRA MODE - INTERVAL VENTILATION

Automatic function.
It can not be adjusted or turned off.
After 15 hours standstill the fan is switched on for 2 hours to ventilate the room with air capacity 72 m³/h.
If the fan receives a signal from a sensor during interval ventilation operation, it switches to the mode according to the activated sensor.




RESET TO FACTORY SETTINGS

The fan side panel incorporates a built-in manual power slide switch. Turn the fan off with this power switch, press the button "MODE" on the control panel, hold this button and switch the fan on with this slide power switch. When the fan turns on, hold the button "MODE" within 5 seconds until the light under the button stops blinking green.

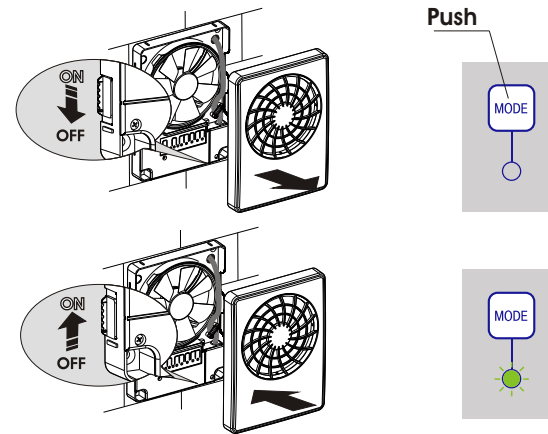


MAINTENANCE


Disconnect the fan from power mains prior to any maintenance operations!
Maintenance means periodic clearing of the fan surfaces from dust and dirt. To clean the fan use a soft cloth wetted in a water-soap solution. Wipe the surfaces dry after washing. Avoid liquid splashes on the motor and the circuit board!

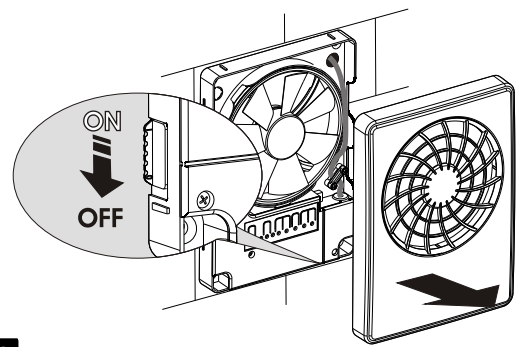


1

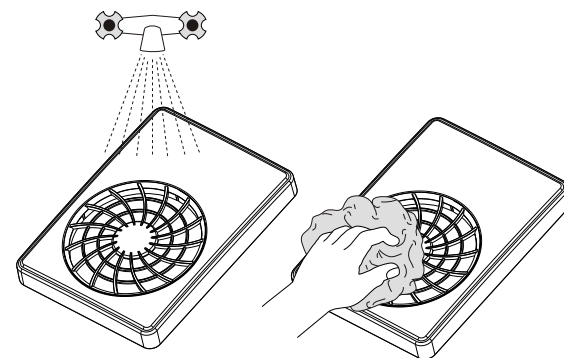


2

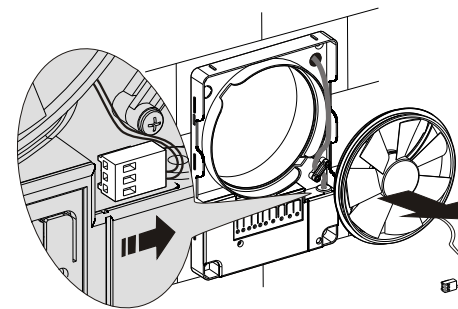


3

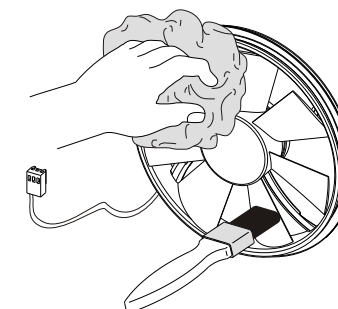

4

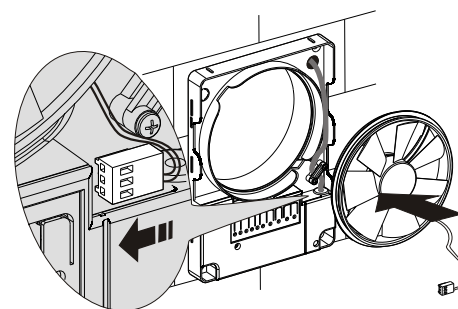

5

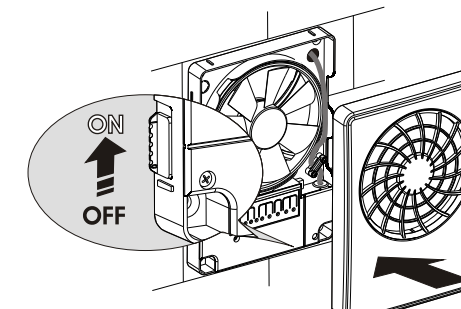

6

STORAGE AND TRANSPORTATION RULES

Transport the product by any transportation vehicle in the manufacturer's original package.
Store the product in the manufacturer's original packing box in a dry ventilated premise with the temperature range from +5°C up to + 40°C and relative humidity less than 80%.
The storage environment must not contain dust, acid or alkali vapours that may cause corrosion of the product parts.



OPERATION RULES

The fan is designed for connection to single-phase ac 100-240 V / 50-60 Hz power mains.

The fan is designed for continuous operation always connected to power mains.

The fan is rated for operation at the ambient temperature ranging from +1°C до +45°C.

The fan is double-insulated and requires no grounding.

The fan complies with the requirements according to the EU norms and directives, to the relevant EU-Low Voltage Equipment Directives, EU-Directives on Electromagnetic Compatibility (220-240 V / 50 Hz or 12 V / 50 Hz).

MANUFACTURER'S WARRANTY

The fan is manufactured at the factory of "Ventilation systems" PrJSC (hereinafter referred to as the Manufacturer).

By purchasing this product the customer confirms to have read and agreed to the terms, rules and requirements related to operation, storage, transportation, mounting, adjustment, connection, maintenance and repair as well as warranty obligations with respect to this product as set forth in the manufacturer's accompanying documentation to the product.

The manufacturing company sets forth the warranty period (service life) of the product as 60 months following the sale date via retail network subject to the customer's ensuring compliance with the rules of transportation, storage, mounting and operation of the product. In case of any malfunction of the product through the fault of the Manufacturing company within the warranty period (service life), the customer shall have the right to elimination of the manufacturing defects by means of warranty servicing performed free of charge. The warranty servicing implies performance of activities related to elimination of defects in the product aimed to provide intended use of the product by the customer. The defects are eliminated either by replacing or repairing such a product or a part (component) thereof.

NOTE: with the purpose of performing warranty servicing you please produce User Manual or other relevant substituting document and the payment document as an evidence of the purchase with indication of the sale date. The product model shall comply with that one specified in the User Manual or other relevant substituting document. With the purpose of performing warranty servicing please contact the trade company where you purchased the product. If warranty servicing on the spot proves impossible, you will be provided with the necessary information regarding rendering of this service.

Manufacturer's warranty shall not apply in the following cases:

- in case the customer fails to provide the product in complete according to the package contents specified in the User Manual or other relevant substituting document, including any components disassembled by the customer;
- in case of incompliance of the model or marking of the product with data specified on the product packaging and in the User Manual or other relevant substituting document;
- in case of non-timely technical maintenance of the product by the customer (dust, mud, oil condensate, foreign particles);
- in case of causing external damage to the product by the customer ('damage' shall not apply to external changes of the product required for the product mounting);
- in case of altering the product design or further reworking of the product;



- in case of replacing and using parts, units and components of the product not prescribed by the manufacturing company;
- in case of other use of the product other than intended use;
- in case of the customer's violating product operation rules;
- in case of connecting the product to electric mains of voltage exceeding voltage value specified in the User Manual;
- in case of step voltage that resulted in the product failure;
- in case of the customer's performing unauthorised repair of the product;
- in case of performing repair of the product by third persons unauthorized by the manufacturing company;
- in case of warranty period (service life) expiry;
- in case of the customer's violating transportation rules assuring prevention of damaging and/or destruction of the product;
- in case of the customer's violating product storage rules;
- in case of performing unlawful actions by third persons with respect to the product;
- in case of force majeure (fire, flood, earthquake, war, hostilities of any kind, blockade);
- in case of absent seals, provided such seals are prescribed by the User Manual or other relevant substituting document;
- in case of unavailable warranty card;
- in case of unavailable payment document to confirm the purchase with indication of the sale date.

The manufacturing company shall be responsible for defects arising through its fault prior to the moment of transferring the product to the ownership of the customer. The manufacturing company shall not be responsible for defects arising after transferring the product to the customer and caused by the customer's violating the rules of transportation, storage, assembly and operation of the product, or by actions of third persons, an accident or force majeure circumstances.

The manufacturing company shall not be responsible for damage to health and property of the customer caused by the customer's violating the User Manual or other relevant substituting document; other use of the product by the customer other than its intended use, or by failure of the customer to comply with warnings and other information on the product specified in the User Manual or other relevant substituting document, or by the customer's violating the rules of transportation, storage, mounting, maintenance and operation of the product.