

BIXOLON®
SAMSUNG mini printers

KN04-00016A
Rev. 1.05


BIXOLON®
SAMSUNG mini printers



USER'S MANUAL

SRP-770/UPS, SRP-770-999

LABEL PRINTER

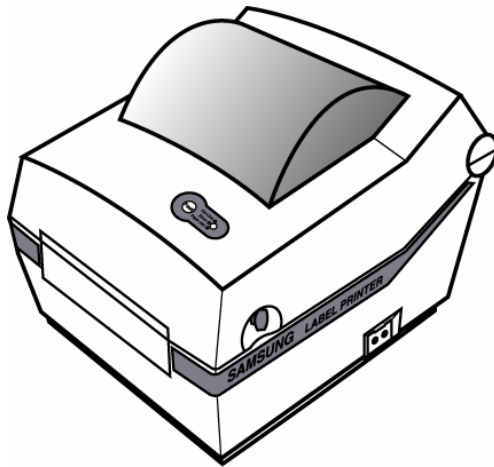

www.samsungminiprinters.com

Safety Precautions

In using the present appliance, please keep the following safety regulations in order to prevent any hazard or material damage.

WARNING Violating following instructions can cause serious injury or death.	
Do not plug several products in one multi-outlet. • This can provoke over-heating and a fire. • If the plug is wet or dirty, dry or wipe it before usage. • If the plug does not fit perfectly with the outlet, do not plug in. • Be sure to use only standardized multi-outlets. PROHIBITED	You must use only the supplied adapter. • It is dangerous to use other adapters.
Do not pull the cable to unplug. • This can damage the cable, which is the origin of a fire or a breakdown of the printer. PROHIBITED	Keep the plastic bag out of children's reach. • If not, a child may put the bag on his head. PROHIBITED
Do not plug in or unplug with your hands wet. • You can be electrocuted. PROHIBITED	If you observe a strange smoke, odor or noise from the printer, unplug it before taking following measures. • Switch off the printer and unplug the set from the mains. • After the disappearance of the smoke, call your dealer to repair it. TO UNPLUG
Do not bend the cable by force or leave it under any heavy object. • A damaged cable can cause a fire. PROHIBITED	



CAUTION

Violating following instructions can cause slight wound or damage the appliance.

Keep the desiccant out of children's reach.

- If not, they may eat it.


PROHIBITED



Install the printer on the stable surface.

- If the printer falls down, it can be broken and you can hurt yourself.

PROHIBITED

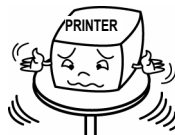

Use only approved accessories and do not try to disassemble, repair or remodel it for yourself.

- Call your dealer when you need these services.

**DISASSEMBLING
PROHIBITED**



Do not use the printer when it is out of order. This can cause a fire or an electrocution.

- Switch off and unplug the printer before calling your dealer.

TO UNPLUG



Do not let water or other foreign objects in the printer.

- If this happened, switch off and unplug the printer before calling your dealer.

PROHIBITED




Table of Contents

- 1. Unpacking & Repacking.....5**
- 2. Samsung Label Printer6**
- 3. Connecting the Power Supply.....7**
- 4. Connecting the Interface Cable8**
- 5. Installing or Replacing the Paper Roll.....9**
- 6. Setting the Dip Switches10**
- 7. The Self Test.....12**
- 8. The hex Dump Mode.....13**
- 9. The Peel-off14**
- 10. Using Fan Fold Paper15**
- 11. Cleaning Head16**
- 12. Driver Install Guide.....17**
 - I. To install SRP-770 windows driver
 - II. To use USB interface
 - III. Tip & Trouble shooting
- 13. The trouble shooting Table30**

1. Unpacking & Repacking





Your printer box should include these items. If any items are damaged or missing, please contact your dealer for assistance.

Note : Please keep the packing materials(①,②,④,⑥) for future repacking to send a printer for repairs.

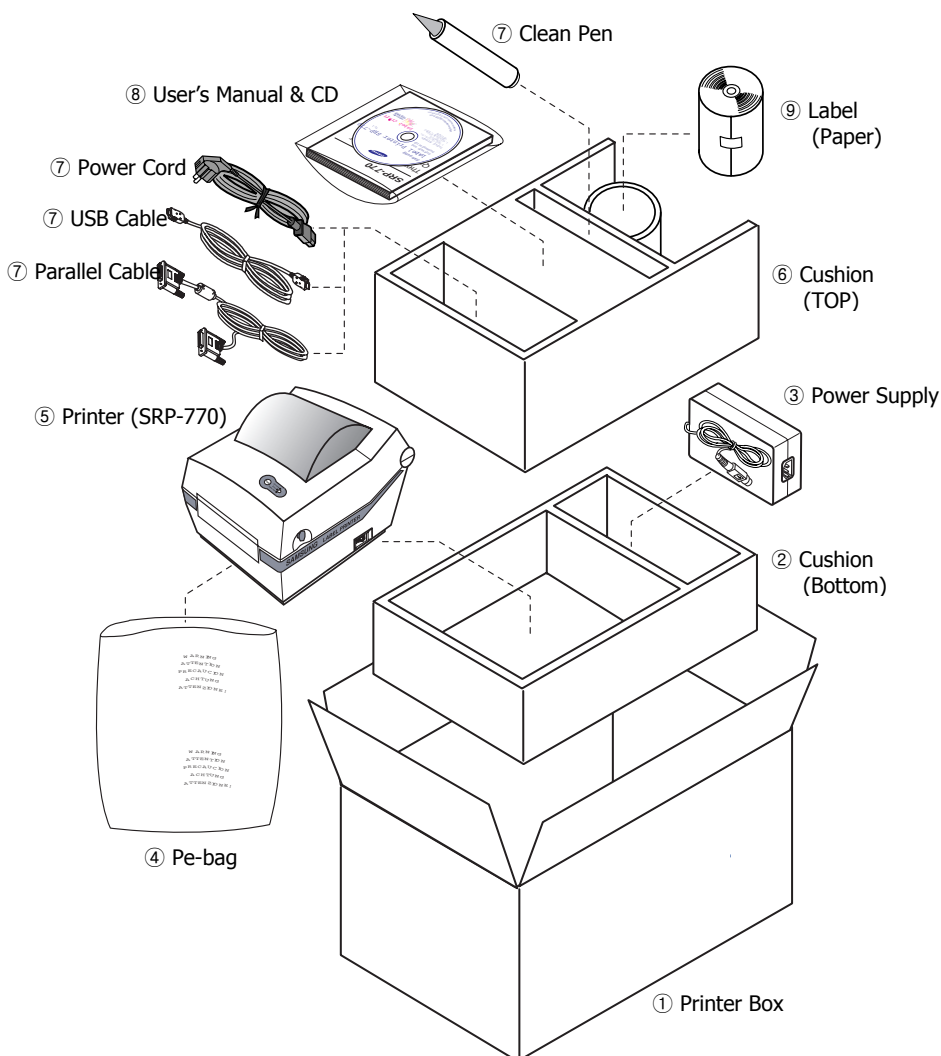

※ You can repack the printer package in above numeric order(①~⑨)

2. Samsung Label Printer

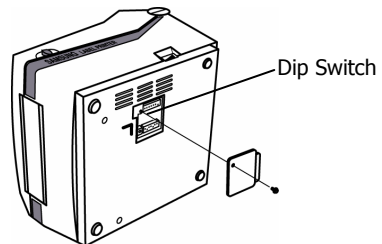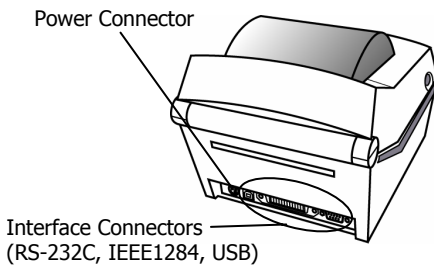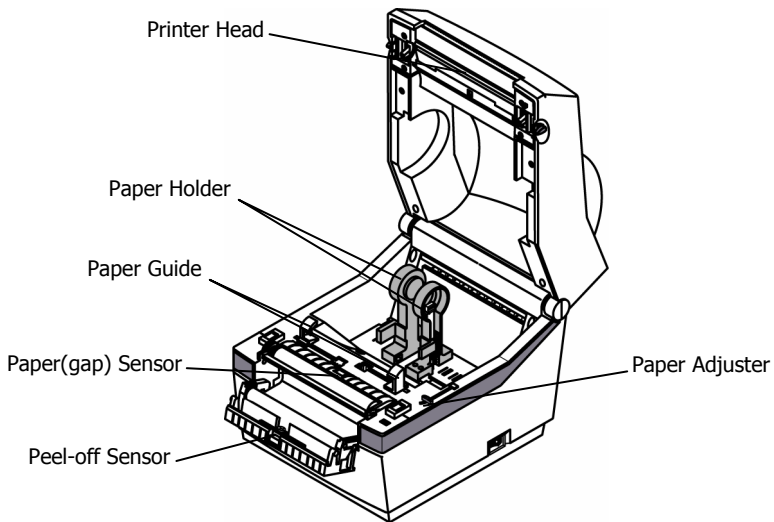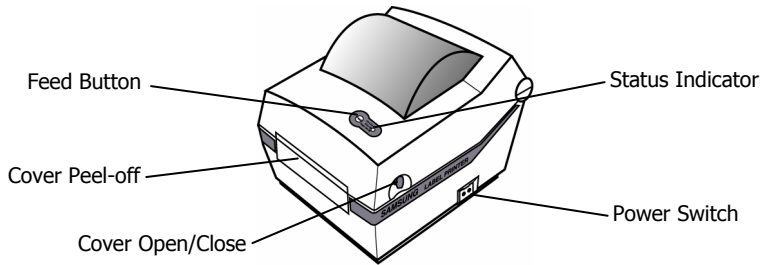


3. Connecting the Power Supply


CAUTIONS:

When connecting or disconnecting the power supply from the printer, make sure that the power supply is not plugged into an electrical outlet. And the power supply's rated voltage and your outlet's voltage do not match, contact your dealer for assistance. Then do not plug in the power cord. Otherwise, you may damage the power supply or the printer.

1. Make sure that the printer's power switch is turned off, and the power supply's power cord is unplugged from the electrical outlet.
2. Check the label on the power supply to make sure that the voltage required by the power supply matches that of your electrical outlet.
3. Plug in the power supply's cable as shown below. Notice that the flat side of the plug faces down.

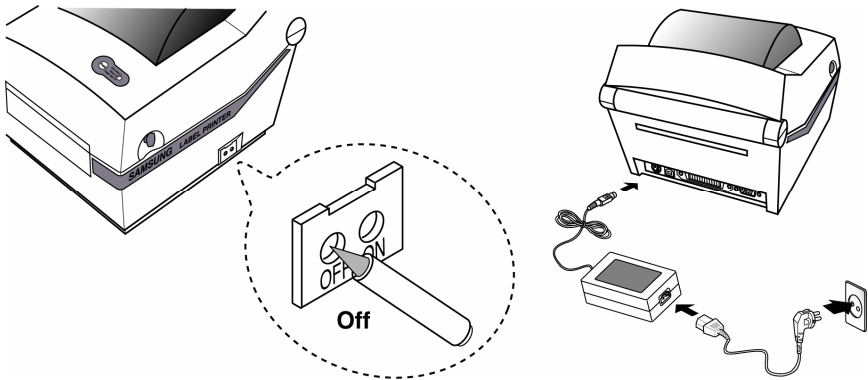


4. Connecting the Interface Cable

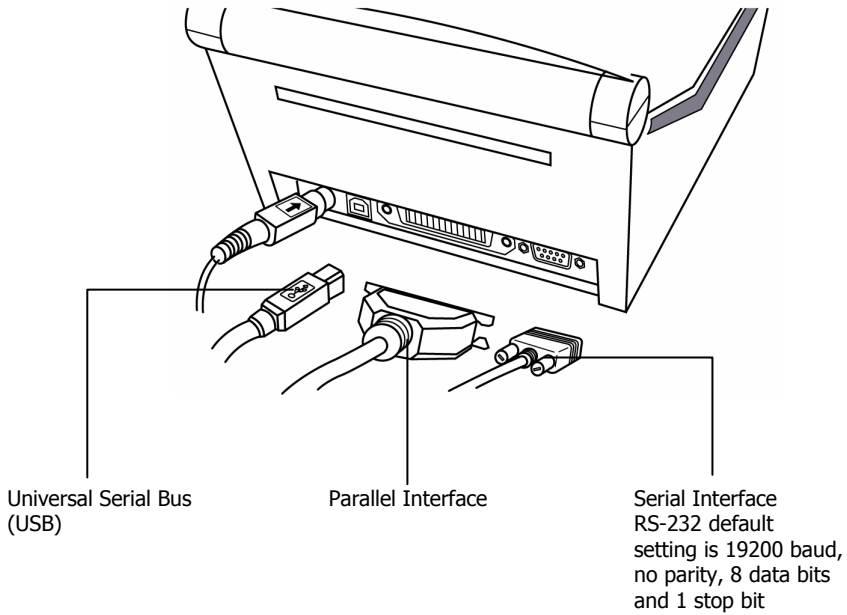


5. Installing or Replacing the Paper Roll



① Open Cover

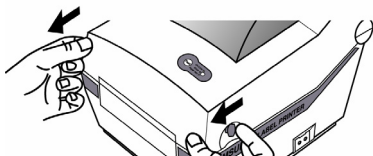


② Open Guides

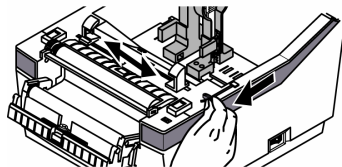

③ Install Roll

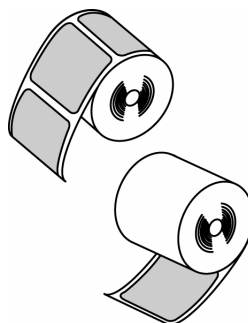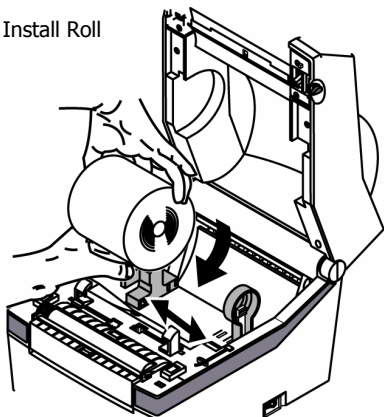

④ Close Guides to the Width of the paper

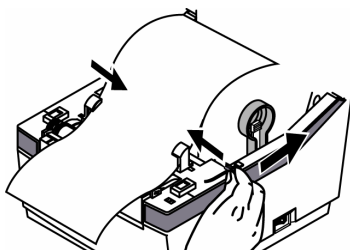

⑤ Close Cover




6. Setting The Dip Switches

6-1. Setting the Dip Switches

The Dip Switches are located on the bottom of the printer. The Dip Switches are used to set the Printer to perform various functions. Follow these steps when changing Dip Switches setting :

- 1. Turn the printer power switch off.
- 2. Remove the screw on the bottom of the printer and open the bracket.
- 3. Flip the Dip Switches using tweezers or another narrow-ended tool. Switches are **off** when up and **on** when down in the Figure below.
- 4. The new setting takes effect when you turn on the printer.

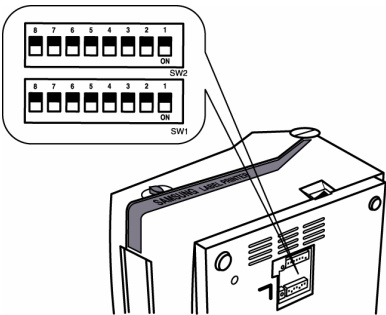

Note : Always change Dip Switch settings only when the printer is turned off.

6-2. Functions of Dip Switches

6-2-1. Dip S/W 1

NO	Functions	Details		
		2	1	
1,2	Speed Selection	Off	Off	Speed
		Off	On	2.5 ips
		On	Off	3.0 ips
		On	On	4.0 ips
		On	On	5.0 ips
3,4	Density Selection	Off	Off	Density
		Off	On	0(Low)
		On	Off	7
		On	Off	13
		On	On	20(High)
5,6,7	Developer Mode	Default --- off		
8	Position Selection	Off	Move to Cutting Position	
		On	Move to top of next page	

6-2-2. Dip S/W 2

No	Functions	Details		
		2	1	
1,2	Baud Rate	Off	Off	Baud Rate
		Off	On	9,600 bps
		On	Off	19,200 bps
		On	Off	57,600 bps
		On	On	115,200 bps
3	Reserved			
4	Reserved			
5~8	Developer Mode	Default --- off		

6-3. The default dip switches setting.

The default dip switch settings are as follows.

```


SAMSUNG  SRP770  UPS2.03  2006.3.13
=====
Speed   : [ 2.5    3.0    4.0    5.0 ] ips
Density : Low [ 0    7    13    20 ] High
I / F   : [ Serial    Parallel    USB ]
          [ 9600    19200    57600    115200 ] bps
          [ No    Odd    Even ] Parity
          [ 7    8 ] data bits
          [ 1    2 ] stop bits
          [ Xon/Xoff    RTS/CTS ] Control

```

```

GPL:47,GPE:00,BPL:00,BPE:00,
1.38V ,0.00V , 0.00V , 0.00V ,

```


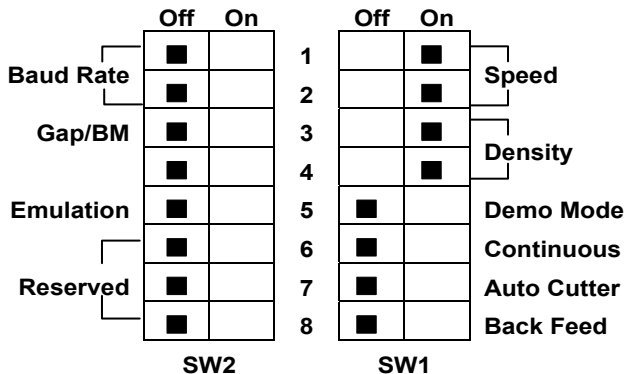


Now Hexdumping...

7. The Self Test

The self-test checks whether the printer has any problems. (You cannot perform this procedure if using the printer's label peel-off option) If the printer does not function properly, contact your dealer. The self-test checks the following;

1. Make sure that paper roll has been installed properly.
2. Turn on the power while holding(2sec) down the FEED button. The self-test begins.
3. The self-test prints the current printer status, which provides the control ROM version and the DIP switch setting.

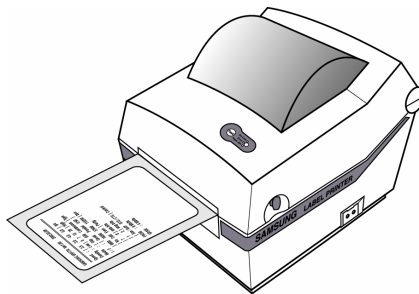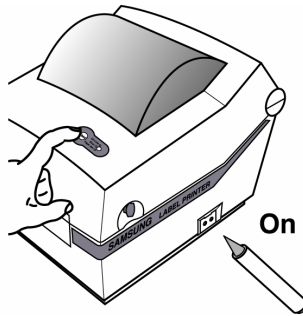

8. The Hex Dump Mode

This mode is used to make sure that the printer receives the correct data from the host. In this mode all data which the printer gets are printed out in shape of the hexadecimal numbers. It can look like the garbage printing to people without any technical knowledge.

The ways to start and exit from the hex dump mode is different according to the firmware version of the printer.


Firmware Version	To start hex dump mode	To exit from the hex dump mode
UPS 2.03 or lower	The printer enters the hex dump mode automatically after self-test printing. Turn on the power switch while holding the feed button in order to execute the self-test printing.	Turn off and turn on the printer.
UPS 2.04 or higher		Two different ways are provided. 1. Turn off and turn on the printer. (same as the previous version) 2. Press the feed button.

9. The Peel-off


This function is used to separate label from liner automatically.

CAUTIONS:


- 1) Peeler is for Label Paper only.
 - 2) When the peeler switch is on, label is not printed before when the previous printed label is taken off from the peeler.
 - 3) When the peeler function is not used, set peeler switch off.
With this switch on printer may not work correctly.
 - 4) When the peeler switch is changed, the printer should be turned off and on.
1. Open the peel-off cover and turn on peeler switch.
(Check if Peeler LED is on.)

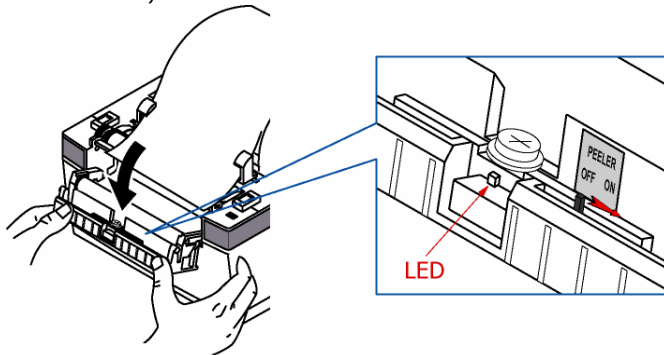

2. Remove the paper and insert the paper through slot.

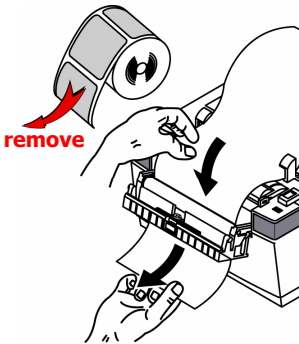

3. Adjust the paper guides and close the cover.

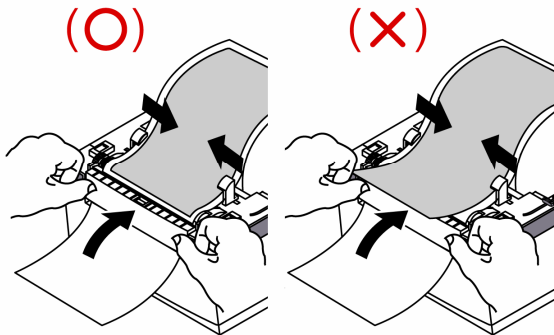


4. Turn off and on the printer.


10. Using Fan Fold Paper

Insert paper through both the rear slot and guides.
Adjust holders and guides to the width of the paper.


Insert the paper

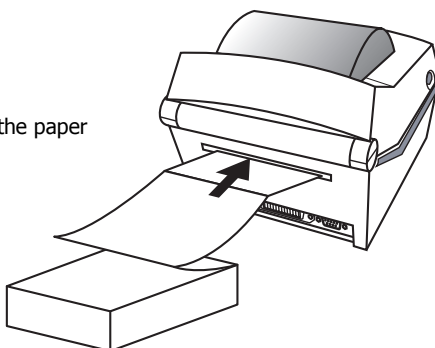

Adjust holders papers and paper Fixed

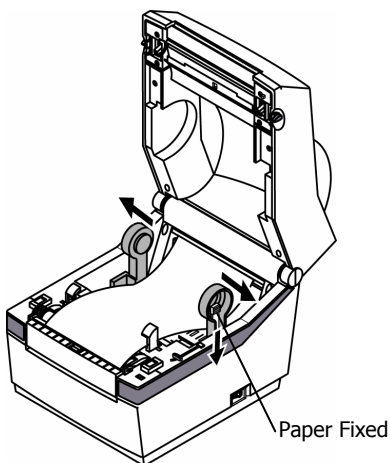

Adjust Guides

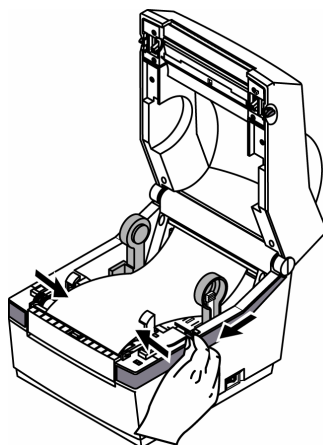

11. Cleaning Head

Paper dust on the heating elements may lower the printer quality. In this case, clean the print head as follows :


Cautions

1. Turn Off the printer power before cleaning.
2. Note that the thermal head becomes very hot during normal operation, creating the danger of burn injury. Be sure to wait for about 2~3 minutes after turning printer power off before beginning the cleaning.

1. Open the printer cover.
2. Clean the thermal element (the area which is marked a thin black line) of the thermal head with a cotton swab moistened with a alcohol solvent (ethanol, methanol, or IPA).
3. After confirming that the alcohol solvent has been dried up completely, close the cover-open.

Note

1. **Never touch the thermal element with your hand, then the thermal element can be damaged.**
2. **Don't scratch the printer head.**

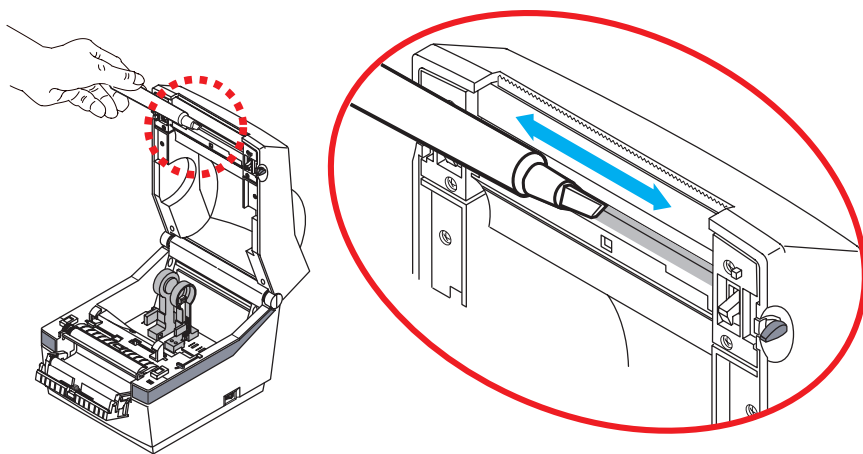

※ Clean it up when you replace every roll of paper to prevent the quality deterioration.


12. Driver Install Guide

I. To install SRP770 windows driver


1. Insert CD-ROM included in your printer package then install guide program will appear automatically. Please click on **Windows Drivers**.



2. You can see the driver auto-install program prepares to install driver matching your windows system.

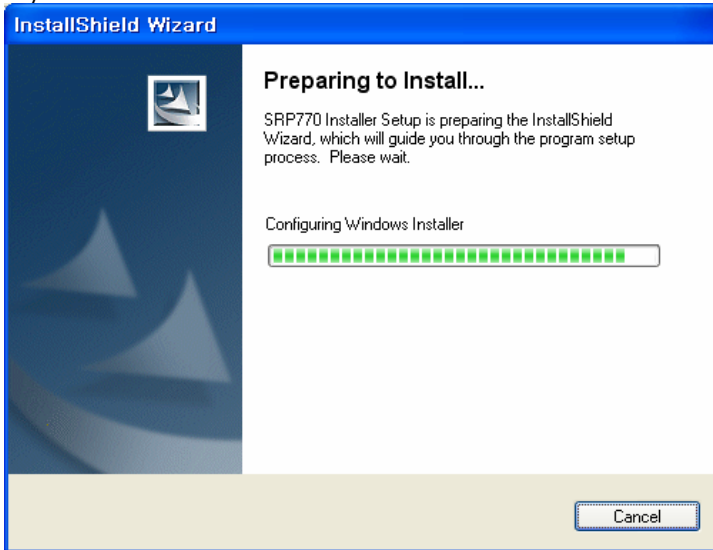


3. If it is first time to install SRP770 windows driver, you can see the Welcome message as below. Please click on **Next>** to continue install procedure.

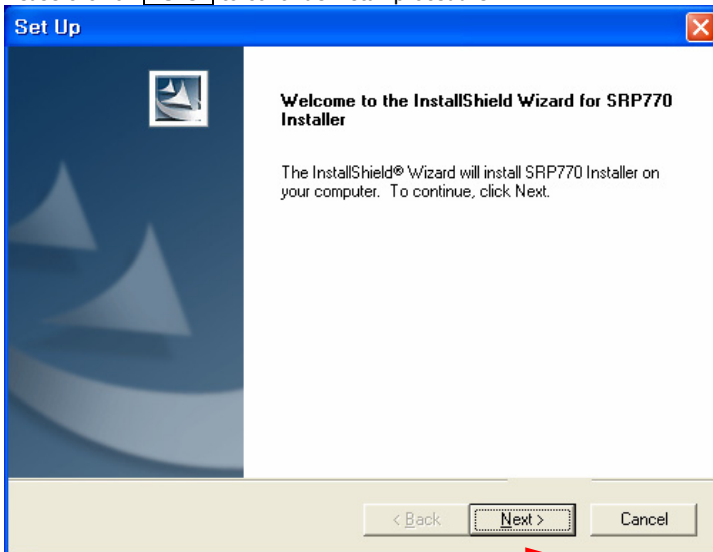


**** If previous version driver is already installed in your system, some other type window will appear. In this case, please refer to "///. Tip & Trouble shooting"**


4. If you accept the license agreement, click on **Yes** to continue install procedure.

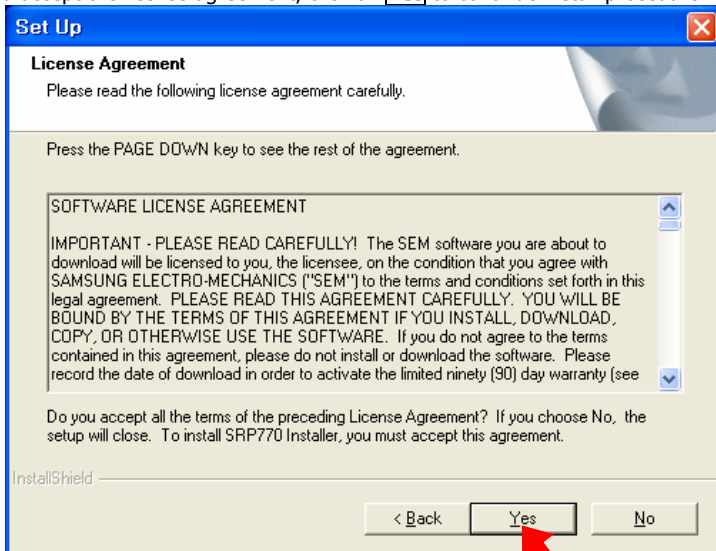


5. If you want to use USB interface with SRP770 printer, please select both "SAMSUNG SRP770" and "SAMSUNG USB Port Monitor" together and click on **Next>**.

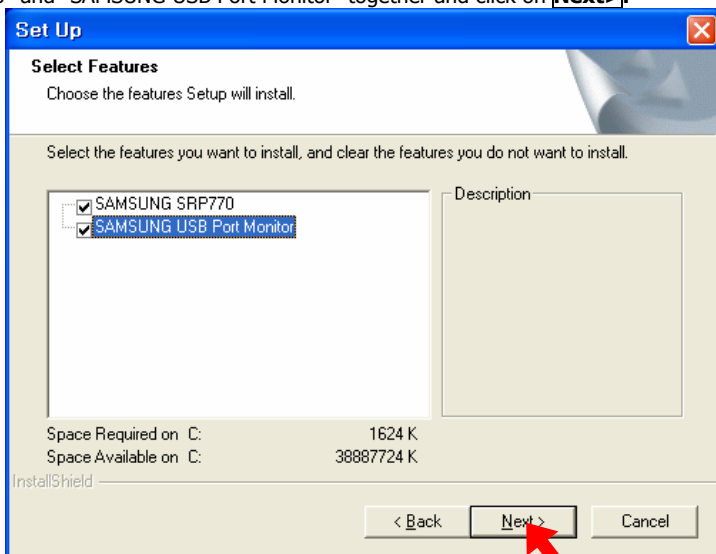


6. Just wait until auto-installer program finishes drivers setup.

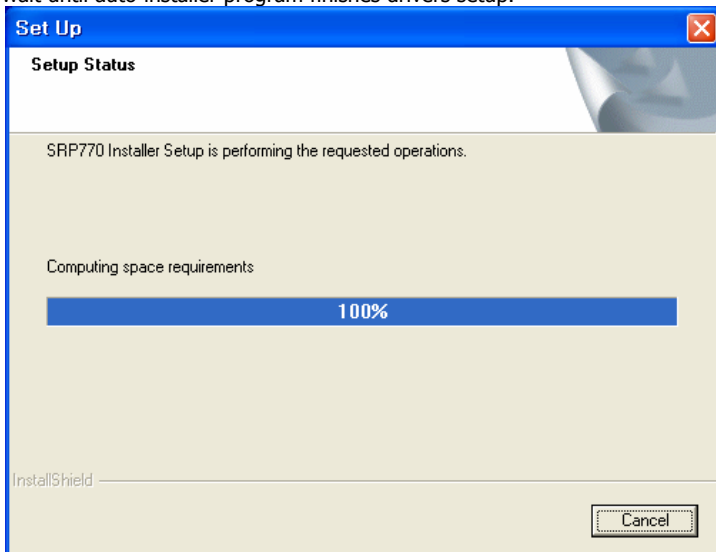

7. Click on **Finish** to exit auto-installer program.

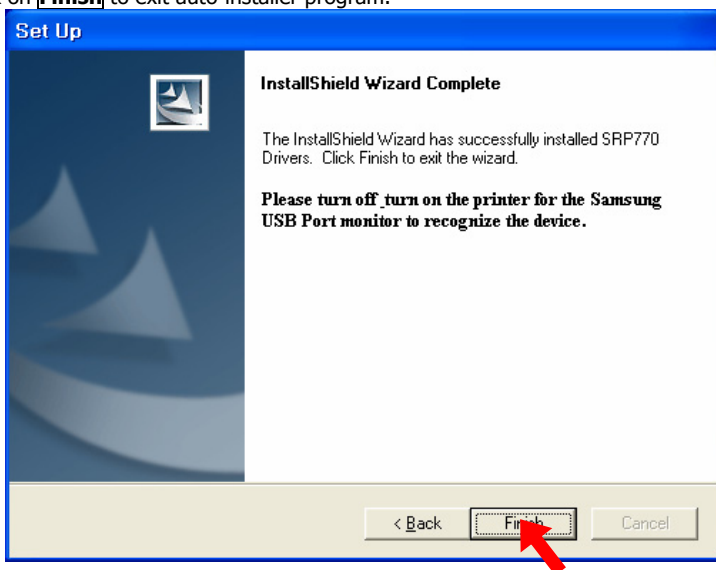

8. You can see the SAMSUNG SRP770 driver is correctly installed in Printer folder.

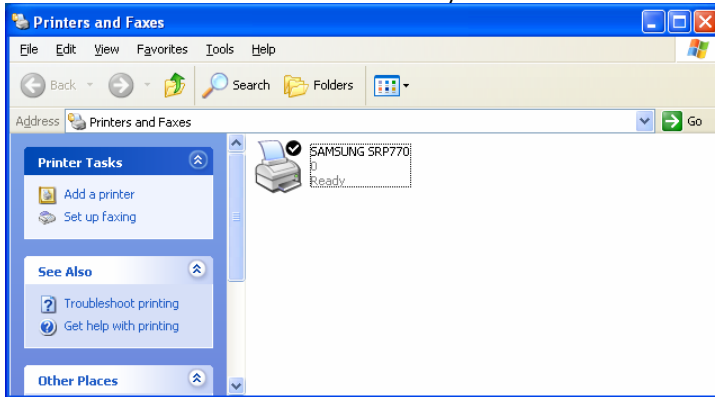


II. To use USB interface

Microsoft windows basically supports Serial and Parallel interface without installing any port drivers but in case of USB interface, USB port driver should be pre-installed. Please follow next steps to properly install Samsung USB port driver in your system.

1st. Turn off the printer power switch and don't turn on while auto-install program setup drivers in your system.

2nd. Execute auto-install program as shown in " I .To install SRP770 windows driver" or manually.


3rd. During installation procedure, please select both SAMSUNG SRP770 and SAMSUNG USB Port Monitor together as below.

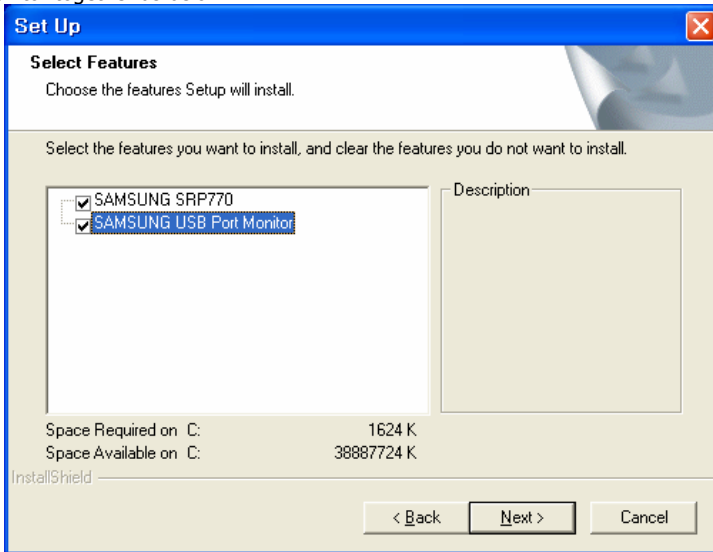


4th. After driver installation is finished, Please connect USB cable between your system and printer correctly and turn on the printer power switch.

5th - 1. *In Windows XP or 2000,*

1) When you turn on the printer power switch first time after installing USB port driver, the OS recognize the printer and pop up the window to complete USB driver installation a. Please click on **Next>**.

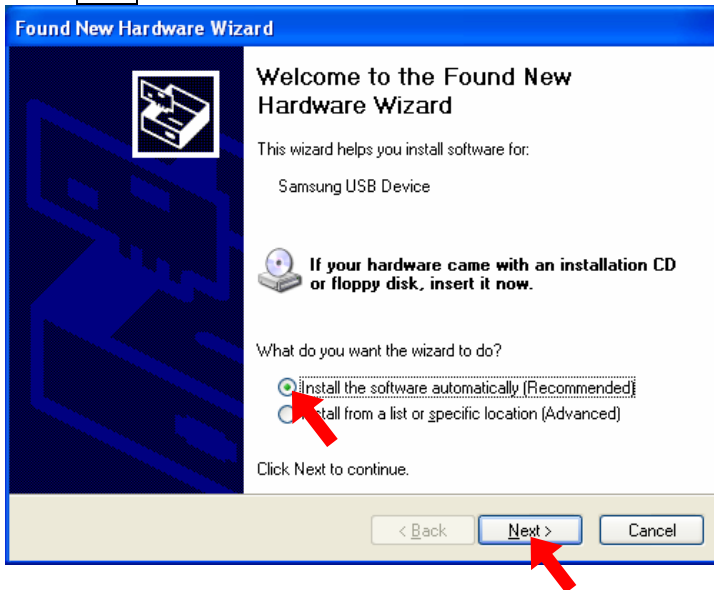


2) Just wait...

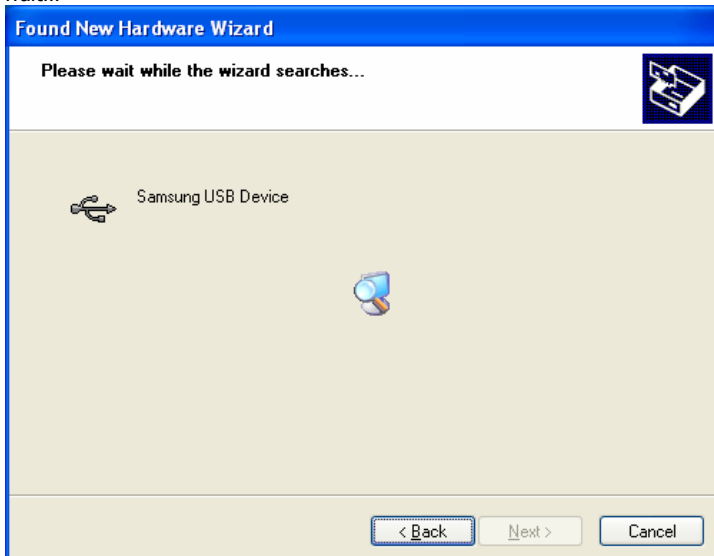


- 3) If the following message box appears while your installation, just click on **Continue Anyway** to continue install procedure.



- 4) Click on **Finish** to complete installation.

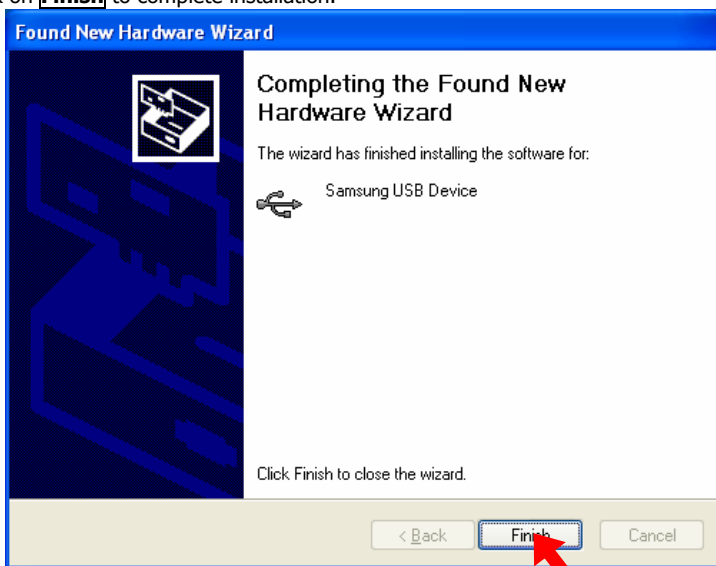


5) In Ports Tab of SRP770 Properties window, select **SSUSB0:** and click on **Apply**.

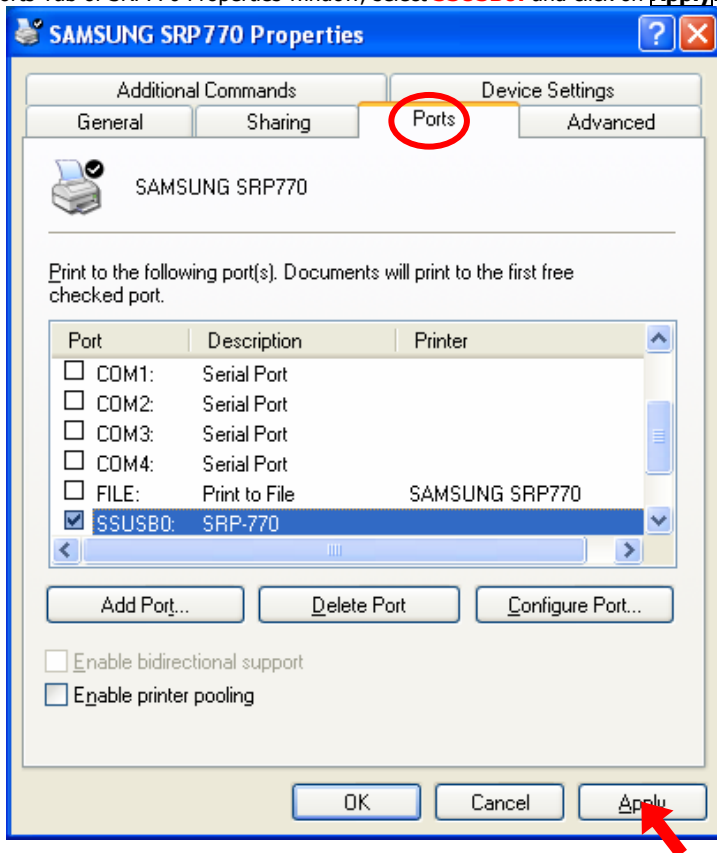


5th -2. *In Windows 98 or Me,*

1) When you turn the printer power switch first time after installing USB port driver, the OS recognize the printer and pop up the window to complete USB driver installation. Just wait.

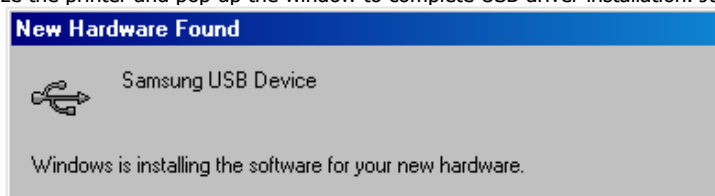

2) In Details Tab of SRP770 Properties window, select **SSUSB0:** and click on **Apply**.

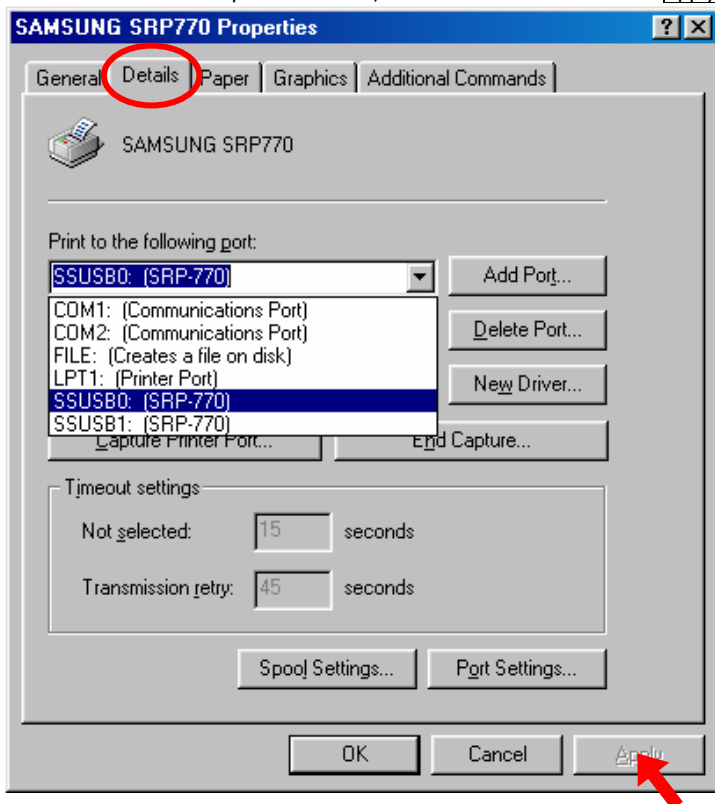


6th. Please print Test page in General Tab to confirm the USB port driver is correctly installed in your system.


III. Tip & Trouble shooting

1. When the previous version driver of SRP770 is already installed your system, please remove that driver before installing new driver as follows.

1) If auto-installer search old version drivers in your system, the below windows will appear. Select Remove and click on **Next>** to clean up your system before installing new driver.

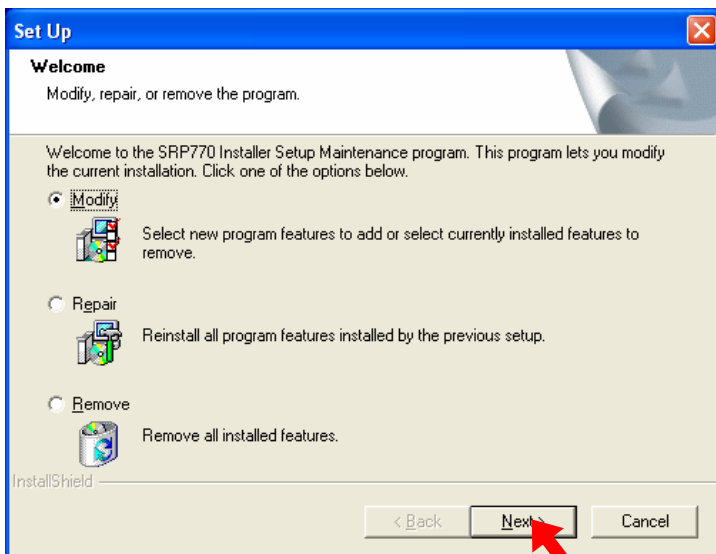


2) Click on **OK** and Restart in next message box.

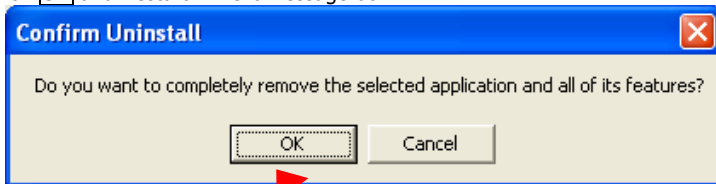

3) After rebooting your system, re-execute auto-install program and follow steps shown in **"1. To install SRP770 windows driver"** to install new driver.

2. If you meet the following message box while driver installation.

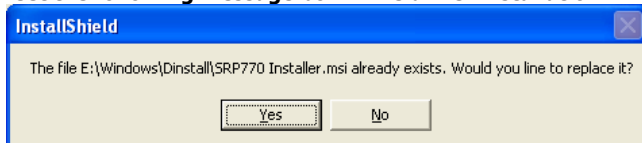

Ans.) If you have used the old version auto-installer, that message box is likely to appear. Just click on **Yes** to replace old file with new file.


3. How to execute driver auto-install program if the install guide program will not automatically appear when you insert the CD-ROM.

Ans.) Double click **770Installerxxxx.exe** ('xxxxx' means driver version number) in "CD-ROM drive-drivers" folder by using windows explorer.

4. How to select paper size in Windows XP or 2000.

Ans.) If you use Windows XP or 2000, there are two places to set the paper size in the printer properties window in comparison that there are just one place in Windows 98 or Me.

1) First Place : General Tab – Print Preferences... - Advanced – Advanced Option window

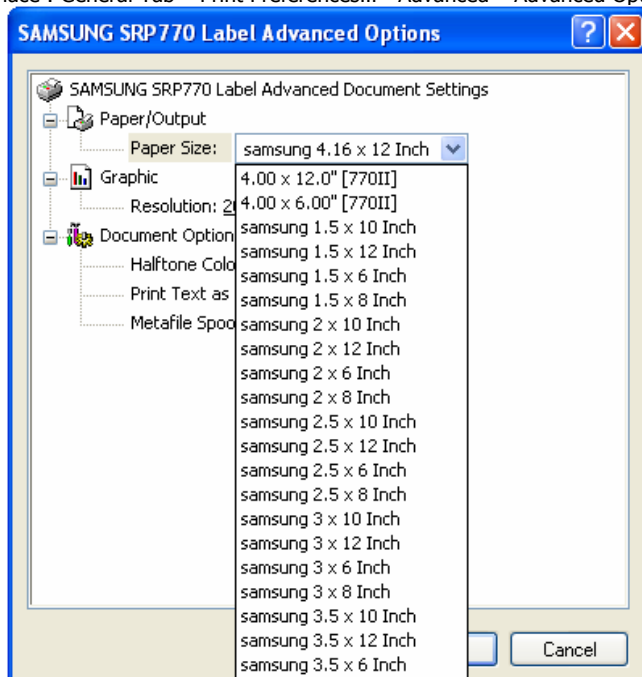

2) Second Place : Device Setting Tab.

5. When your system does not recognize USB connection after installing USB port monitor.

Ans.) After deleting 'USB print support' (or other name marked by an exclamation mark) under Universal Serial Bus Controller in Device Manager, please re-install USB port monitor. During installing USB port monitor, I recommend to turn off printer power.

You can open Device Manager window with following procedure.

- 1) Windows 9x/Me/2000
 - Right-click on My Computer on Desktop and select Properties.
 - Hardware - Device Manager - Universal Serial Bus Controller - USB print support
- 2) Windows XP
 - Start - My Computer - View System Information
 - Hardware - Device Manager - Universal Serial Bus Controller - USB print support

13. Trouble-Shooting Table

Category	Symptoms	Corrective Action
When not using Peeler function	The printer won't print any more after printing 1 page of label and the feed button does not work.	Make sure the peeler switch is located on the OFF position. If not, turn off the peeler switch and turn the printer's power switch off and on again.(14p)
When using peeler function	The printer starts to print new label while the previously printed label is still stuck on the peeler module. And the paper jam takes place.	Make sure the peeler switch is located on the ON position. If not turn on the peeler switch and turn the printer's power switch off and on again.(14p)
Hex Dump Mode	The printer prints out the label which is full of strange numeric data. It can look like the garbage printing.	Check out the user executed self-test printing and didn't turn off and on the power switch. Let the user turn on and off the printer's power switch to exit from the hex dump mode.(13p)
The Others	Printer doesn't respond to the host.	1 st . Check the dip switches are set to the default positions. (11p) 2 nd . If the dip switch setting is correct, please start the hex dump mode and check out the printer is receiving the correct data from the host. If the printer doesn't print out any data in the hex dump mode, there is some communication error between the host and the printer.(13p)
	The printer can't detect the media gap and prints label on the wrong position of the media.	Check the dip switches are set to the default positions.(11p)

【 Specification 】

Printing method		Thermal line printing
Dot density		203 dpi (8 dot/mm)
Printing width		25.4 ~ 101.6 mm
Paper width		38.1 ~ 104 mm
Printing speed		127 mm/sec
Receive Buffer Size		4K Byte
※ Note : Printing speed may be slower, depending on the data transmission speed and the combination of control commands.		
Supply voltage	Input voltage	100~240V AC
	Frequency	50/60 Hz
	Output voltage	DC 24V
Environmental conditions	Temperature	5 ~ 45 °C (Operating) -25 ~ 70 °C (Storage)
	Humidity	30 ~ 80 % RH (Operating) 10 ~ 90 % RH (Storage) ; Except for paper
LIFE	Mechanism Head	10,000,000 lines 5×10 ⁷ pulse (50km)
MCBF	Mechanism	20,000,000 lines



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

※ **All specifications are subjected to change without notice.**