



---

## OWNER'S AND OPERATOR'S MANUAL

---

Diesel Engine Generator & Welder

# DGW300M

Vertical, Water-Cooled 4-Cycle Diesel Engine



**CAUTION**

Do not operate the Generator/Welder, or any other appliance, before you have read and understood the instructions for use and keep near for readily use.

DGW300M/EASIA  
X750803-5300



## Introduction

Thank you for purchasing Shindaiwa Sound Proof Diesel Engine Generator & Welder.

- This user manual was created to ensure the safe operation of this equipment. Therefore, the manufacturer of this equipment strongly recommends that the user follow the instructions herein, to avoid unnecessary accidents and repairs.
- Please operate this equipment after thoroughly reviewing and understanding the contents of this manual. Do not operate the equipment while under the influence of alcohol, medication, or other drugs, or while fatigued.
- Must be compliant with all applicable regulations for the area in which the equipment is operated.
- Please attach this manual and explain how to operate and have them read this manual, if the equipment will be sub-leased.
- Please store this manual near the equipment for easy reference. Replace damaged or missing the manual with new manual from authorized distributor.
- For service, contact the authorized distributor. Please be prepared to give them the model name and serial number.
- Observe the relevant environmental protection regulations when disposing of equipment.

■ Following convention will be used throughout the manual to indicate the degree of cautions.

 **Danger** : Can cause serious injuries or death.

 **Caution** : Can cause minor injuries or damage to the equipment or other properties.

<Caution> : Other types of caution.

- Even some of the items noted in 『  **Caution** 』 may lead to serious injuries. Please read all item and follow all the safety guidelines.

## Table of Contents

<b>1. Safety Guidelines</b>	2
<b>2. Specifications</b>	5
<b>3. Usage</b>	5
<b>4. Names of Parts</b>	6
<b>5. Equipment</b>	8
5-1. Eco Welding/Eco Generating	8
5-2. Display	8
5-3. Voltage Reducing Device	8
5-4. AC Voltage Adjusting Dial	9
5-5. Frequency Change	9
5-6. Monitor Lamp	10
5-7. Remote Control(Optional)	11
<b>6. Initialization and Pre-operation check</b>	12
6-1. Checking Engine Oil	12
6-2. Checking Coolant/Water	12
6-3. Checking Fuel	13
6-4. Checking Fuel, Engine Oil and Water Leakage	14
6-5. Checking Battery	14
<b>7. Operation the Engine</b>	15
7-1. Starting	15
7-2. Stopping	16
<b>8. Welding Operation</b>	17
8-1. Selection-Welding Cable	17
8-2. Polarity	17
8-3. Connection-Welding Cable	17
8-4. Duty Cycle	18
8-5. Welding	18
<b>9. Generator Operation</b>	19
9-1. Output Range	19
9-2. Output Limitation	19
9-3. Operation	20
<b>10. Simultaneous Use of Welding and Generating</b>	21
<b>11. Inspection and Maintenance</b>	21
<b>12. Long-term Storage</b>	26
<b>13. Troubleshooting</b>	27
<b>14. Engine Wiring Diagram</b>	29
<b>15. Generator Wiring Diagram</b>	30

## 1. Safety Guidelines

- ❗ **Danger : Suffocation from exhaust fume**
  - Exhaust fume from the engine contains many elements harmful to human. Do not operate this equipment in poorly ventilated area, such as inside a room or in a tunnel.
  
- ❗ **Danger : Electric Shock**
  - Close all doors and place locks during operation.
  - Do not touch the output terminals or external body while the unit or your body is wet.
  - Do not insert metal objects (such as pin or wire) into plug-in receptacles.
  - Do not touch wiring or electric parts inside the equipment during operation.
  - Before connecting or disconnecting a plug from output receptacle, always turn the circuit breaker to OFF position.
  - Before connecting or disconnecting a welding cable from output terminals, stop the engine, and remove the engine key.
  - Before performing any equipment check or maintenance, stop the engine, and remove the engine key. A person performing the maintenance should always keep the key.
  
- ❗ **Danger : Electromagnetic Interference**
  - Person with a pacemaker of the heart, do not approach the equipment and welding around the work site during work. May adversely affect the operation of the pacemaker.
  
- ❗ **Danger : Injuries**
  - Close all doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.
  
- ⚠ **Caution : Suffocation from exhaust fume**
  - Do not redirect the exhaust fume toward pedestrians or building.
  
- ⚠ **Caution : Suffocation from welding fume**
  - Be sure to wear a fume proof mask in operation, because welding fume contains poisonous gas and dust. Pay attention to the airflow direction and sufficient ventilation also in order to prevent from inhaling the fume.
  
- ⚠ **Caution : Injuries to eyes and skin**
  - Be sure to wear spark protection glass(es), long-sleeve shirts, gloves, etc. in order to protect eyes and skin from harmful spark in welding.
  - Battery fluid contains diluted sulfuric acid. Avoid contact with eyes, skin or on clothing. If the acid comes in contact, especially with eyes, flush with a lot of water, and contact your physician immediately.
  
- ⚠ **Caution : Electric shock**
  - Do not flush water onto the equipment nor operate it in the rain.

**⚠ Caution : Explosion**

- Do not use the equipment or charge the battery, in the case the battery fluid level is lower than the LOWER level.
- Battery may emit some combustible gas, so keep it away from fire and sparks.

**⚠ Caution : Fire**

- The equipment uses Diesel Oil as a fuel. When inspecting the equipment or refueling, always stop the engine and keep away from fire. Moreover, always wait until the engine cools down before refueling.
- Always wipe any drip of Diesel fuel or lubrication oil. Do not use this equipment when leakage is found. Repair the equipment before use.
- Temperature around muffler and exhaust can get extremely high. Keep any inflammable items (such as fuel, gas, paint, etc.) away from the equipment.
- Keep any inflammable items and easily burning items away from the place in welding, because welding splashes spatters.
- Always operate this equipment on flat surface and, at least 1 meter away from any objects (wall, box, etc.).
- Do not connect AC output to any indoor wiring.
- Always wait until the equipment cools down, before placing any covering materials for storage.

**⚠ Caution : Burns**

- Do not open the radiator cap while operating this equipment or immediately after stopping the equipment, to avoid sustaining burns from hot vapor.
- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature could reach extremely high temperature.
- When checking engine oil or changing oil, always stop the engine, and wait until the engine cools down. If you open either the oil gauge or the oil plug during operation, hot oil may cause some injury.
- Be sure to wear leather gloves, apron, shoe covers, eye protection glass(es) (mask), safety shoes, safety cap, and long sleeve shirts, because welding splashes spatters.
- Do not open the side door during operation and immediately after stopping the equipment, because some parts/components (flexible tube, resistors, etc.) can reach very high temperature inside the equipment.

**⚠ Caution : Injuries**



- When lifting the equipment, always use a lifting lug. Do not lift a handle, for it may cause equipment to drop due to handle breaking off.
- When carrying the equipment by trucks, fix it strongly to keep the equipment from sliding.
- Always place the equipment on a flat and stable surface, to keep the equipment from sliding. Be sure to lock the wheels for with wheel type.
- When starting the engine, turn off the connected equipment and set the circuit breaker to OFF position.
- Do not move the equipment during operation.
- When performing equipment check and maintenance, always stop the engine.
- Do not operate the equipment, if the equipment is being modified or if the parts are removed.

## ■ Location of Warning labels

When any warning label becomes unreadable or damaged, place a new label on the appropriate location.

When ordering a new label, use the following part number.

- |                                 |                     |
|---------------------------------|---------------------|
| ① Suffocation from exhaust fume | (No. X505-004 90 0) |
| ② Suffocation from welding fume | (No. X505-004 91 0) |
| ③ Electric Shock                | (No. X505-004 93 0) |
| ④ Injuries                      | (No. X505-004 94 0) |
| ⑤ Burns                         | (No. X505-004 95 0) |
| ⑥ Fire                          | (No. X505-004 88 0) |

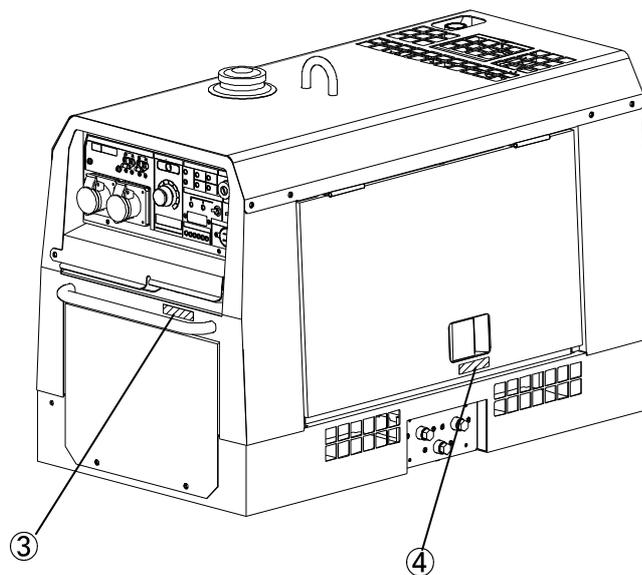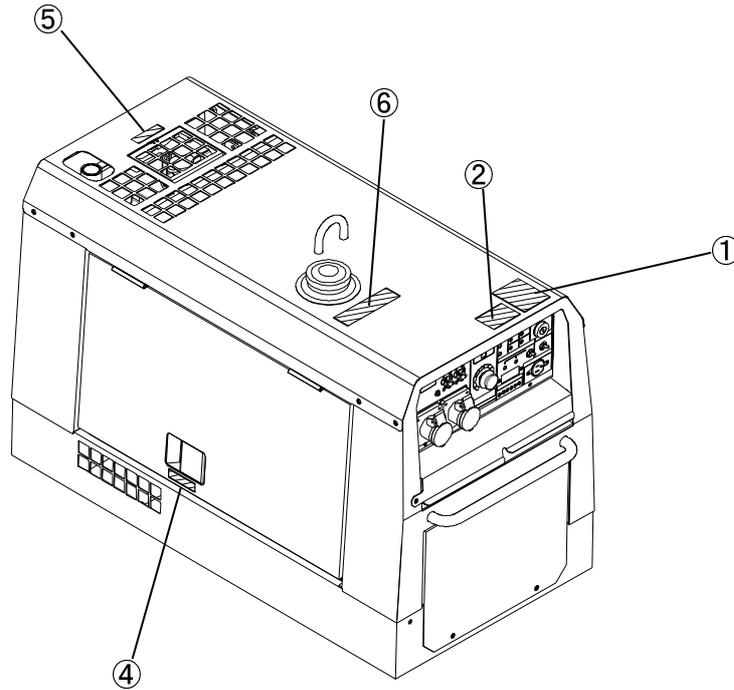

## 2. Specifications

Model		DGW300M/EASIA	
Generating Method		Rotating Field	
Welding DC Generator	Rated Current (A)	260/280	
	Rated Voltage (V)	30.4/31.2	
	Duty Cycle (%)	50	
	Rated Speed (min <sup>-1</sup> )	3000/3600	
	No Load Voltage (V)	MAX 85	
	ECO	Current Adj. Range (A)	30~280/30~300
		Welding Rod (mm)	2.0~6.0
	AUTO/HIGH	Current Adj. Range (A)	35~280/40~300
Welding Rod (mm)		2.0~6.0	
AC Generator	Rated Frequency (Hz)	50/60	
	Rated Speed (min <sup>-1</sup> )	3000/3600	
	Phase	1-Phase	
	Rated Voltage (V)	200/220	
	Rated Current (A)	15A×2	
	Power Factor	1.0	
	Rated Output (kVA)	6.0/6.6	
	Rating	Continuous	
Engine	Model	Kubota Z602	
	Type	Water-Cooled 4-Cycle Diesel Engine	
	Displacement (L)	0.599	
	Rated Output (kW/min <sup>-1</sup> )	12.5/3600(Gross Intermittent)	
	Fuel	ASTM No.2 Diesel Fuel or Equivalent	
	Lubricant Oil	API Class CD or Higher	
	Lubrication Oil Volume (L)	2.5 (Effective 0.8)	
	Cooling Water Volume (L)	3.0 (Sub Tank Capacity 0.6 L included)	
	Starting Method	Starter Motor	
Battery		44B19L(Japan Industrial Standard)	
Fuel Tank Capacity (L)		25	
Dimension	Length (mm)	1200	
	Width (mm)	566	
	Height (mm)	768	
Dry Weight (kg)		270	
Full Weight (kg)		299	



## 3. Usage



- Arc Welding
- Power Source for Electric Tools and Home Appliances
- Power Source for Lights

### **⚠ Caution : Damage to the equipment or other properties**

- Do not use other than the above purposes.
- Whenever connecting to use medical equipment or appliances, be sure to consult with the medical equipment company, doctor or hospital personnel.

# 4. Name of Parts

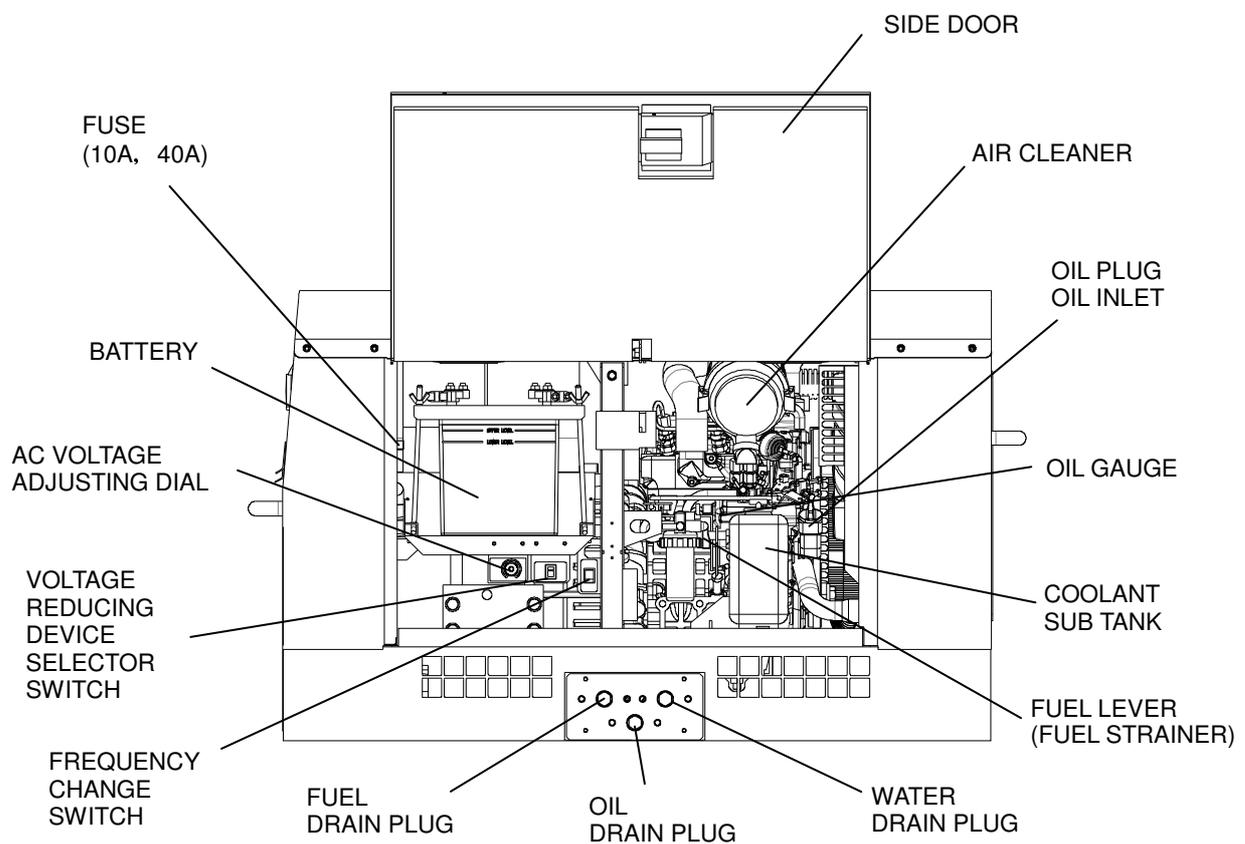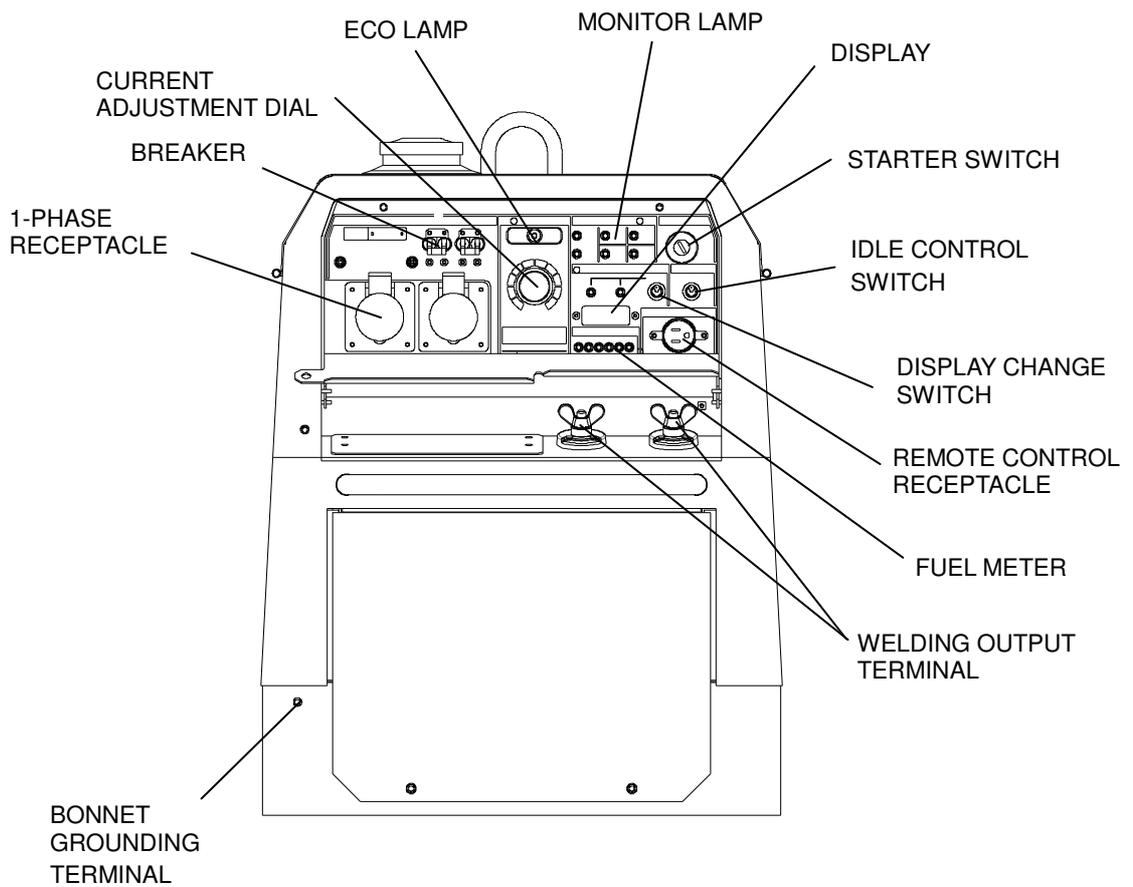

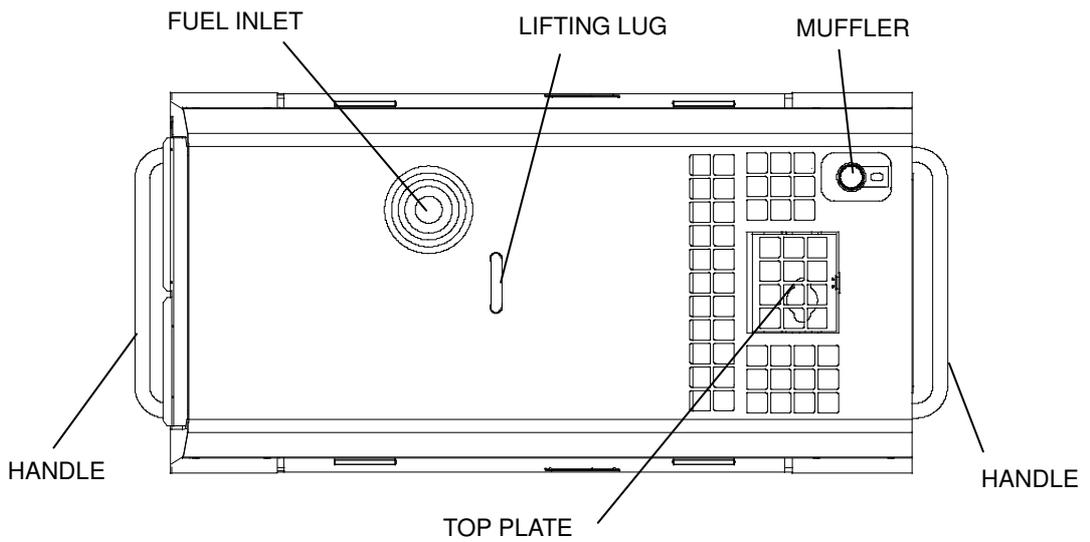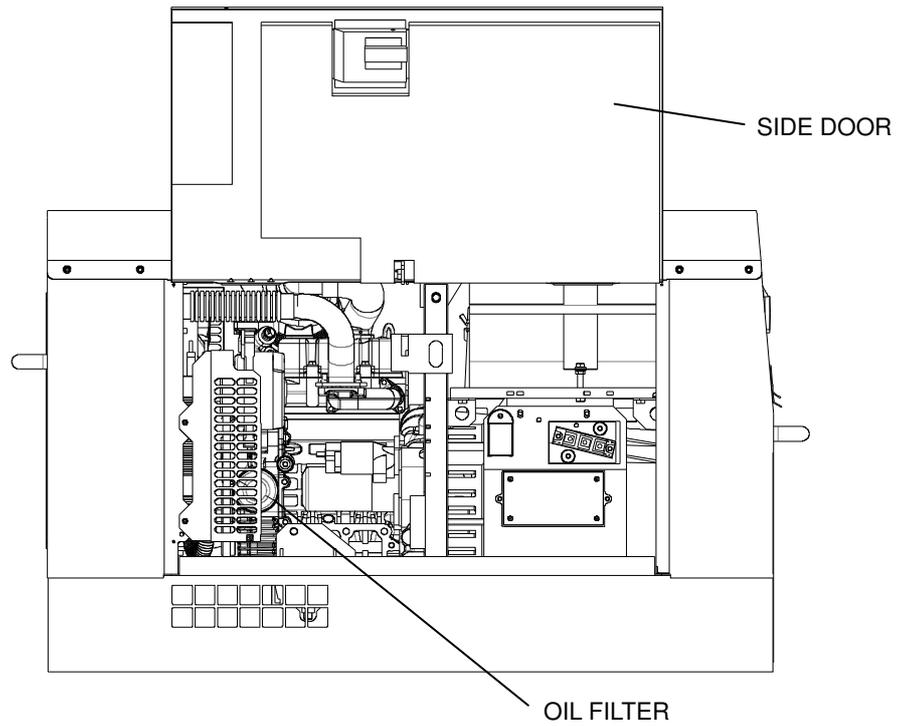

**ACCESSORIES**

OWNER'S AND OPERATOR'S MANUAL	
ENGINE WARRANTY STATEMENT	ENGINE KEY 1 PAIR
	
	M6 BOLT x1


## 5. Equipment

### 5-1. Eco Welding/Eco Generating

The equipment is incorporated in Eco Welding/Eco Generating features that are aimed at performing the lower noise, the lower fuel consumption and the lower gas emission than conventional models. When you turn the idle control switch to 『ECO』, the optimum engine speed will be adjusted automatically by load with green “ECO DRIVE” indicator lamp turned on.

#### < Caution >

- The optimum engine speed will be adjusted automatically while using welding output only.
- The engine speed will be set slightly lower than the rated speed while using generating output only.
- The engine speed will be set as rated speed while using simultaneous use of welding and generating.
- The engine speed will be set automatically as low speed at no load.
- Always turn the idle control switch to 『HIGH』, when using motor with large capacity or the load is incorporated with any magnet switch.
- When the load of less than 1A is connected to use, the feature does not function sometimes. Therefore, turn the idle control switch to 『HIGH』.
- When welding operation or electric supply performs alternately or intermittently, turn the idle control switch to 『HIGH』.

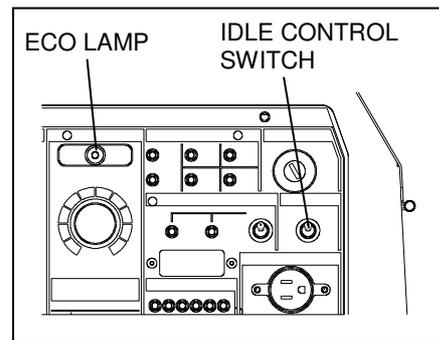


### 5-2. Display

The equipment incorporates in digital display. It displays 『DC CURRENT』, 『AC VOLTAGE』, 『HOUR』 successively, by changing the display change switch.

#### < Caution >

- During no load operation, the preset current is indicated on the display with “PRESET” indicator lamp turned on.
- While welding, the actual current is indicated on the display with “ACTUAL” indicator lamp turned on.
- During operation, AC voltage meter always displays the voltage in 200/220V AC output both at the breaker position 『ON』 and 『OFF』.

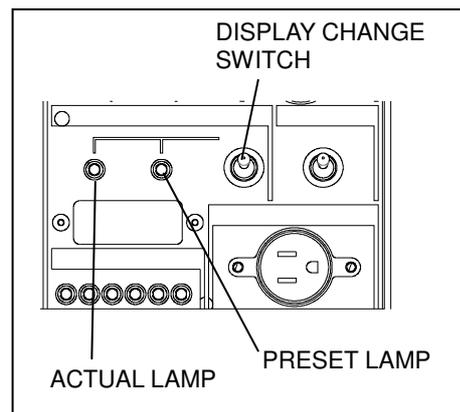

### 5-3. Voltage Reducing Device

#### ⚠ Danger : Injuries


- Frequency change should be done, only after stopping the engine. Moreover, close doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.

**⚠ Caution : Burns**

- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature can reach extremely high.

The equipment incorporates VRD (Voltage Reducing Device) feature, for the purpose of protecting an operator from electric shock with welding output.

When the VRD selector switch is turned to 『ON』, the voltage changes to 15V or lower during no welding period.

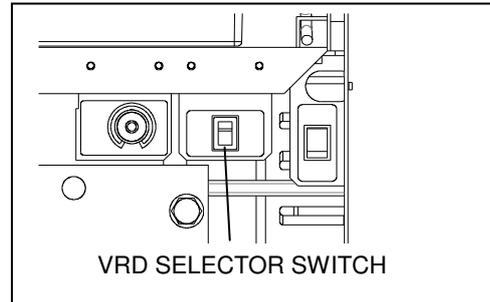

#### 5-4. AC Voltage Adjusting Dial

**⚠ Danger : Injuries**

- Frequency change should be done, only after stopping the engine. Moreover, close doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.


**⚠ Caution : Burns**

- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature can reach extremely high.

Adjust the dial whenever the AC output voltage adjustment is necessary.

**< Caution >**

- When raising the voltage, the current is decreasing. (Use the output within the output capacity.)
- In you raise the voltage exceeding the allowable voltage range, which causes the damage to the loads.

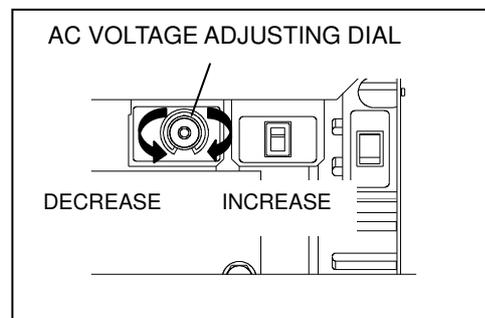

#### 5-5. Frequency Change

**⚠ Danger : Injuries**


- Frequency change should be done, only after stopping the engine. Moreover, close doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.

**⚠ Caution : Burns**

- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature can reach extremely high.

The equipment can be used to 50Hz and 60Hz.

Select the frequency according to the load by the frequency change switch located inside of the side door.

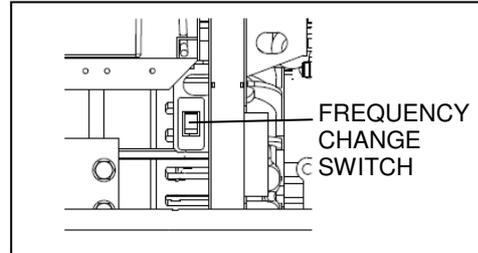

**< Caution >**

- The monitor lamp will be turned on either 50/60Hz based on the selected frequency.

**5-6. Monitor Lamp**


The equipment is incorporated in monitoring function of 『WATER TEMP』, 『CHARGE』, 『OIL PRESS』.

Under normal condition, when the starter switch changes from 『STOP』 to 『RUN』, all the lamps of 『CHARGE』, 『OIL PRESS』 will be turned on.

When the engine starts, all the lamps will be turned off.

When abnormality is detected, the corresponding monitor lamp will flash, and the engine is automatically shutoff.

When the automatic shutoff is engaged, turn the starter switch to 『STOP』 position once, and then restart the engine. In the event the automatic shutoff is engaged next time, check which lamp turns on or off and investigate where is the abnormality.

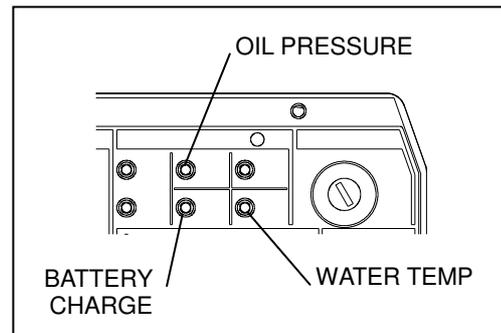

**(1) Coolant/Water Temperature Monitor Lamp**

**⚠ Danger : Injuries**

- Close all doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.

**⚠ Caution : Burns**

- Do not open the radiator cap while operating this equipment or immediately after stopping the equipment, to avoid sustaining burns from hot vapor.
- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature can reach extremely high.

When the water temperature rises abnormally, the coolant/water temperature monitor lamp will be flashing, and the automatic shutoff will be engaged.

When this occurs, check the coolant/water reservoir tank, and replenish if needed.

(Refer to 『6-2. Checking coolant/water』)

If the water level is normal, there may be a possibility of overloading. Always use the equipment within the rated duty cycle and output.

**(2) Battery Charge Monitor Lamp**

When the battery turns unable to be charged during operation, the battery charge monitor lamp will be flashed and the automatic shut-off will be engaged.

In the event this occurs, consult with authorized distributor.

**< Caution >**

- The battery charge monitor cannot detect the degradation of the battery nor the battery fluid level. Check the battery fluid level periodically. (Refer to 『6-5. Checking Battery』)

**(3) Oil Pressure Monitor Lamp**

**⚠ Danger : Injuries**

- Close all doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.

**⚠ Caution : Burns**

- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature could reach extremely high temperature.
- When checking engine oil, always stop the engine, and wait until the engine cools down. If you open either the oil gauge or the oil filter cap during operation, hot oil may spilled out.

When the engine oil pressure drops during operation, the oil pressure monitor lamp will flash, and the automatic shutoff will be engaged.

When this symptom occurs, check the engine oil level, and replenish to the maximum level if needed.

**< Caution >**



- The engine oil pressure monitor cannot detect the deterioration of engine oil itself. Check the engine oil periodically, and change if needed. (Refer to 『11. Inspection and Maintenance』)
  - Check the fuse next, when the abnormality, other than 『WATER TEMP』, 『CHARGE』 or 『OIL PRESS』 is detected.
- If the fuse is burned out, consult with authorized distributor, as there may be an abnormality of electrical components or wiring which would be inspected.

**5-7. Remote Control(Optional)**

The equipment incorporates with remote control receptacle feature.

Remote control boxes are the optional parts.

Remote control operation is available by connecting the compatible remote controller to the receptacle. Adjust the welding current at the remote area from the machine.

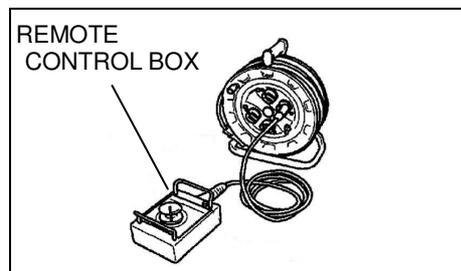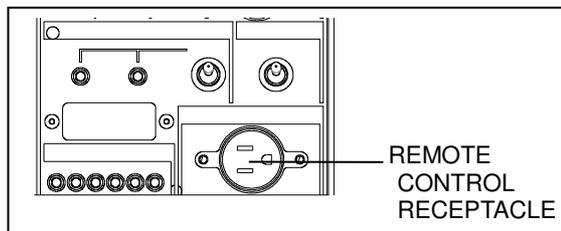

**< Caution >**

- When the remote control box is connected, the current adjustment dial of the equipment's front panel will not work.
- When the plug of remote control box has disconnected while welding, the current adjustment dial of the equipment will work. It may affect to increase or decrease the current accidentally.

- Never connect the plug of the remote control box to the receptacle of the extension cable reel when the reel is connected to AC output receptacle.
- Never connect the other loads additionally than the remote control box.
- In the case the extension cable reel is installing the breaker, use the equipment to have turned the breaker 『ON』 .


## 6. Initialization and Pre-operation check

### **⚠ Caution : Fire · Burns · Injuries**

- When checking engine, always stop the engine, and keep away from fire. Wait until the engine cools down, before performing any inspection.


#### 6-1. Checking Engine Oil

When checking for engine oil, be sure to keep the equipment leveled, and insert the oil gauge firmly. Prior to starting the equipment, make sure to fill the engine oil to the UPPER line through the oil inlet.

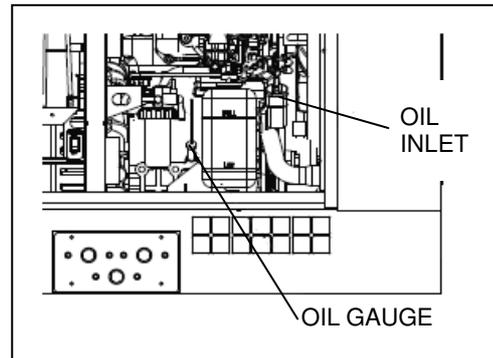

#### < Caution >

- If the equipment is not leveled, you cannot obtain accurate oil level. Do not overfill (over UPPER line) the engine oil. The excessive amount of engine oil may damage the engine (inside the cylinders)

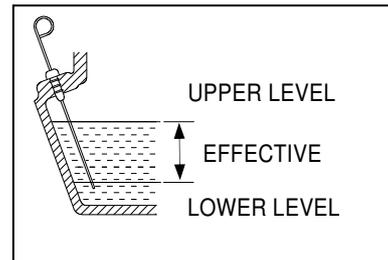

#### ■ Selecting proper engine oil

#### < Caution >

- Use the API class CD or higher.

Temperature	Over +20°C	+10°C~+20°C	-10°C~+40°C
Viscosity	SAE30	SAE20	SAE10W/30

#### 6-2. Checking Coolant / Water

### **⚠ Danger : Injuries**

- Close all doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.


### **⚠ Caution : Burns**

- Do not open the radiator cap while operating this equipment or immediately after stopping the equipment, to avoid sustaining burns from hot vapor.
- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature could reach extremely high temperature.

Check to see if the coolant/water level is between FULL and LOW levels in the coolant sub tank. If the coolant/water is below the LOW level, fill the tank and the radiator accordingly.


**(1) Filling to the Coolant Sub Tank**

- ① Remove the coolant sub tank cap.
- ② Fill up the coolant sub tank to the FULL level.
- ③ Install the cap back.

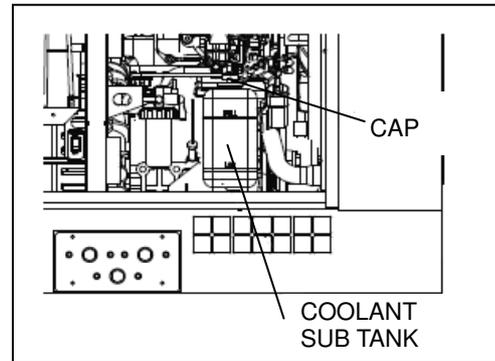


**(2) Filling to the Radiator**

- ① Open the top plate.
- ② Remove the radiator cap.
- ③ Fill the radiator up to the top.
- ④ Install the cap back and tighten.
- ⑤ Close the top plate.

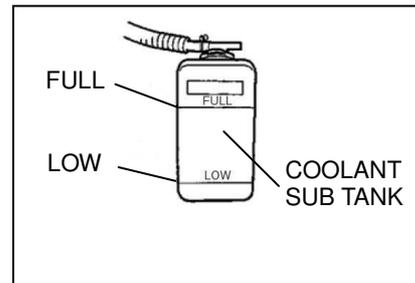

**< Caution >**

- Use Long Life Coolant (LLC), for prevent freeze and rust.  
(30% mixture LLC is filled when shipped from factory)
- Mixture ratio of the coolant should be 30%-45%, depending on the ambient temperature.
- Replace LLC at every year or 2000 hours.

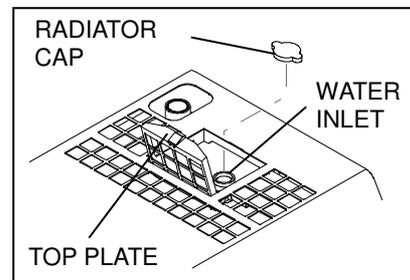

Mixture Ratio (for reference only)

Lowest Ambient Temperature	-15°C	-20°C	-30°C
Mixture Ratio	30%	35%	45%

**6-3. Checking Fuel**


**⚠ Caution : Fire**

- Always wipe any drip of fuel. Do not use this equipment when leakage is found. Repair the equipment before use.

Check for the fuel level in the tank. Add if necessary.  
After adding fuel, retighten the tank cap securely.

**< Caution >**

- Use Diesel fuel, ASTM D975 No.2-D in the event ambient temperature reaches down to -5°C.
- Always use No.2-D diesel fuel. You are required not to use alternative fuel, because its quality is unknown or it may be inferior in quality.

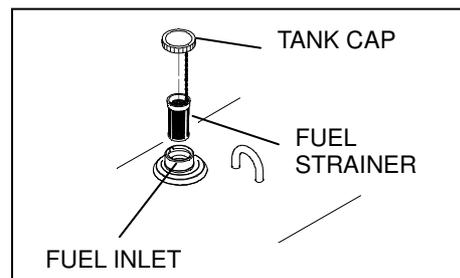

- At temperatures less than  $-7^{\circ}\text{C}$  ( $20^{\circ}\text{F}$ ), No.2-D fuel may pose operating problems. At colder temperatures, use No.1-D fuel (if available) or use a “winterized” No.2-D (a blend of No.1-D and No.2-D). This blended fuel is usually called No.2-D also, but can be used in colder temperatures than No.2-D fuel which has not been “winterized”. Check with the services stations operator to be sure you can get the properly blended fuel.
- Always use the fuel strainer.
- Fill the fuel tank slightly less than the full tank.
- Diesel fuel specification type and sulfur content %(ppm) used, must be compliant with all applicable emission regulations for the area in which the engine is operated.

#### 6-4. Checking Fuel, Engine Oil and Water Leakage

##### **⚠ Caution : Fire**

- Do not use this equipment when leakage is found. Repair the equipment before use.

Be sure to check any leakage for fuel, oil and coolant/water at the hose connections by opening side doors. Whenever checking any fuel leakage, turn the fuel lever 『OPEN』 and be sure to close the fuel lever after checking.

#### 6-5. Checking Battery


##### **⚠ Caution : Injuries to eyes and skin**

- Battery fluid contains diluted sulfuric acid. Avoid contact with eyes, skin or clothing.
- If the acid comes to contact, especially with eyes, flush with a lot of water, and contact your physician immediately.

##### **⚠ Caution : Explosion**

- Do not use the equipment or charge the battery, in the case the battery fluid level is lower than the LOWER level.
- Battery may emit some combustible gas, so keep it away from fire and sparks.

- ① Check the fluid level. If the level is near or lower than LOWER level, add distilled water until the fluid level reaches UPPER level.
- ② Make sure that the battery cables are firmly secured to the posts. Tighten the clamps if necessary.

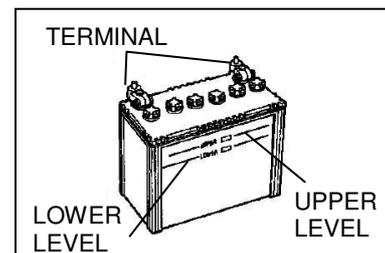


##### **< Caution >**

- Check the hydrometer of the battery fluid. If it falls below 1.23, the battery requires recharging. Please consult with authorized distributor.

##### **■ Replacing battery**

- ① Remove the clamp and cable from negative 『-』 post on the battery. (Remove always negative side first)
- ② Remove the hold-down clamp from the battery.

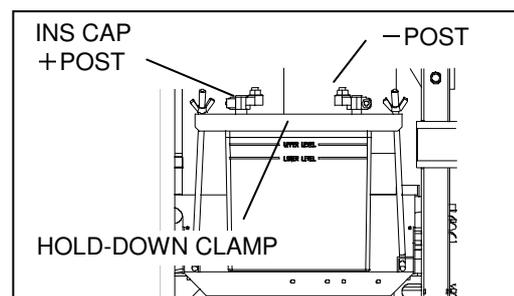

- ③ Remove the clamp and cable from positive 『+』 post on the battery.
- ④ Remove the battery from the seat.

※Reinstall a new battery in the reverse order. (Install always the cable to the positive 『+』 post in the new battery first.)

**< Caution >**

- Use the following battery.<Japan Industrial Standard : 44B19L>

## 7. Operating the Engine

### **⚠ Danger : Suffocation from exhaust fume**

- Exhaust fume from the engine contains many elements harmful to human. Do not operate this equipment in poorly ventilated area, such as inside a room or in a tunnel.

### **⚠ Caution : Suffocation from exhaust fume**

- Do not redirect the exhaust fume toward pedestrians or building.

### **⚠ Caution : Fire**

- Temperature around muffler and exhaust can get extremely high. Keep any inflammable items (such as fuel, gas, paint, etc.) away from the equipment.
- Always operate this equipment on flat surface and, at least 1 meter away from any objects (wall, box, etc.)

### **⚠ Caution : Injuries**

- Always place the equipment on a flat and stable surface, to keep the equipment from sliding.
- Before starting the engine, be sure to disconnect the loads and set the breaker to 『OFF』 position.

### **⚠ Caution : Burns**

- Do not touch the engine and muffler during operation and immediately after stopping the equipment, for the temperature could reach extremely high temperature.



**< Caution >**

- Check to see if it is safe around the equipment before starting.
- When working is performed together by two or more persons, take care to perform all work safely.
- Do not use the location of dusty, hot and humid.
- Close all doors and place locks during operating this equipment, to damage the equipment by decrease of cooling performance.
- When the equipment is noisy, it use additional hearing protection item to prevent the abnormal auditory.

### 7-1. Starting

- ① Turn the breaker to 『OFF』 .
- ② Turn the fuel lever to 『OPEN』 .
- ③ Turn the idle control switch to 『ECO』 or 『AUTO』 .
- ④ When the temperature is below -5°C, turn and keep the Starter switch to 『PREHEAT』 until the preheat lamp turns off (about 5 seconds).

- ⑤ Turn the starter switch to 『START』 and then the engine starts by the starter motor.
- ⑥ Release the starter switch, as soon as the engine has started.
- ⑦ Keep the engine idle for about 5 minutes.

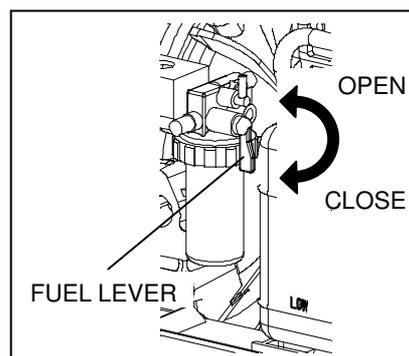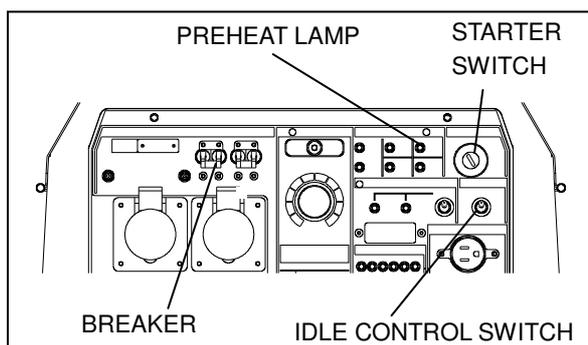

**< Caution >**

- Do not drive the starter motor for more than 15 seconds successively.
- If you need to restart, wait for 30 seconds or more before reattempt.
- Once the engine has started, never turn the starter switch to 『START』 .

**■ Restart after stopping due to fuel shortage**

This equipment is incorporated in automatic vacuuming air feature. Therefore, even though the engine stops due to running out of fuel, you can restart the engine easily by the following steps.

- ① Turn the breaker to 『OFF』 .
- ② Turn the Starter Switch to 『STOP』 .
- ③ Fill the fuel.
- ④ Turn the idle control switch to 『ECO』 or 『AUTO』 .
- ⑤ Turn the starter switch to 『START』 and drive the starter motor for about 10 seconds.
- ⑥ Release the starter switch, as soon as the engine has started.
- ⑦ Wait for about 1 minute to vacuum the air out. The engine speed becomes stable when the air is extracted.

**< Caution >**

- Never turn the engine high speed or connect the loads until the air is extracted completely (the engine speed becomes stable).

**7-2. Stopping**

- ① Turn the breaker to 『OFF』 .
- ② Turn the idle control switch to 『ECO』 or 『AUTO』 .
- ③ Keep the engine idle (cooling down) for about 5 minutes.
- ④ Turn the starter switch to 『STOP』 .
- ⑤ After the engine has stopped, turn the every fuel lever to 『CLOSE』 .

**< Caution >**

- When the engine does not stop in spite of turning the starter switch to 『STOP』 , Turn the fuel lever to 『CLOSE』 , then the engine will stop in a few minutes. In this case, be sure to consult with authorized distributor and ask to repair.
- Do not attempt to turn to 『STOP』 position while actual welding or utilizing AC power source, it may cause the serious damage on the unit.

## 8. Welding Operation

### 8-1. Selection – Welding Cable

Select the cable with proper gauge, based on the allowable amperage and the length, per the table shown below.

The welding capacity is to reduce if the small gauge cable is used.

#### < Caution >

- Welding cables should be used unstrained. When the welding cables are used in swirl, the welding capacity is to reduce.

Size of Cable (Unit : mm<sup>2</sup>)

Return Length \ Welding Current	20m	30m	40m	60m	80m	100m
300A	30	38	50	80	100	125
250A	22	30	38	60	80	100
200A	22	30	30	50	60	80
150A	22	22	22	38	50	60
100A	22	22	22	30	30	38

### 8-2. Polarity

There are two welding output terminals, 『+』 and 『-』 .

Select the polarity according to the operation, referring to the table below.

#### < Caution >

- Follow the instruction of the welding rods, the polarity of which is specified.
- If connected by different polarity and the same work is simultaneously used by two types of machine, the voltage between folders may receive an electric shock. That one operator has two folders absolutely should avoid.

	Application	Connection
Normal Polarity	Generals Welding, such as Construction	Minus to holder (Rod) Plus to the Earth (Material)
Reverse Polarity	Thin Plate, Build-Up Welding Stainless Steel	Minus to the Earth (Material) Plus to holder (Rod)

### 8-3. Connection – Welding Cable


#### ⚠ Danger : Electric Shock

- Before connecting or disconnecting a welding cable from welding output terminals, stop the engine, and remove the engine key. A person performing should always keep the key.

- ① Stop the engine.
- ② Connect a welding cable to a crimping terminal, a welding rod holder and a material holder.
- ③ Connect a welding cable to a welding output terminal.
- ④ After connecting cables, be sure to close output terminal covers and fit it with the bolt.

**< Caution >**

- Be sure to crimp a crimping terminal to a cable and connect the cable to welding output terminal. Otherwise, welding output terminals may burn out by the heat caused by insufficient connections.
- Do not use a cable without a crimping terminal. If you use the cable, the insulation is peeled off partly, to bind to an output terminal, the output terminal may burn out by the heat caused by insufficient connections and also a bare part of the cable may touch the bonnet to short-circuit.

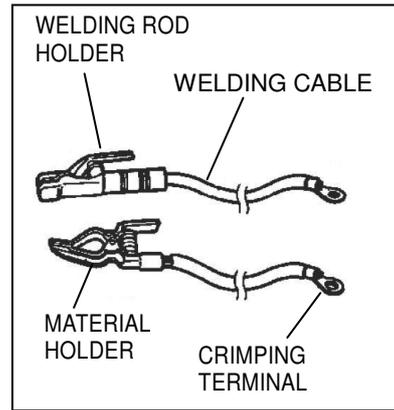

**8-4. Duty Cycle**

Duty cycle is the percentage of time the load is being applied in a 10 minutes. This equipment's rated duty cycle is 50%, therefore be sure to take 5mins recess after 5 minutes welding.

**< Caution >**

- The equipment may be damaged due to overheat, if welding more than 6 minutes successively or short recess after the welding.

**8-5. Welding**

**⚠ Danger : Electromagnetic Interference**

- Person with a pacemaker of the heart, do not approach the equipment and welding around the work site during work. May adversely affect the operation of the pacemaker.

**⚠ Caution : Suffocation from welding fume**

- Be sure to wear a fume proof mask in operation, because welding fume contains poisonous gas and dust. Pay attention to the airflow direction and sufficient ventilation also in order to prevent from inhaling the fume.

**⚠ Caution : Injuries to eyes and skin**

- Be sure to wear spark protection glass(es)(Refer to the table below), long-sleeve shirts, gloves, etc. in order to protect eyes and skin from harmful spark in welding.

Standard for Spark Protection Glass (Japan Industrial Standard)

No.	7	8	9	10	11	12	13
Welding Current (A)	30-75		76-200			201-400	

**⚠ Caution : Fire**

- Keep any inflammable items and easily burning items away from the place in welding, because welding splashes spatters.


**⚠ Caution : Burns**

- Be sure to wear leather gloves, apron, shoe covers, eye protection glass(es)(mask), safety shoes, safety cap and long sleeve shirts, because welding splashes spatters.

The output adjustable range by the current adjustment dial, depends on the position each of the idle control switch and frequency change switch. (Refer to『2. Specifications』)

- ① Turn the idle control switch and frequency change switch, according to the operation.
  - ② Turn the display change switch to 『DC CURRENT』 .
  - ③ Set the amperage by the current adjustment dial.
- The preset current is indicated on the display with “PRESET” indicator lamp turned on.

Whenever welding operation start, the actual current is indicated on the display with “ACTUAL” indicator lamp turned on.

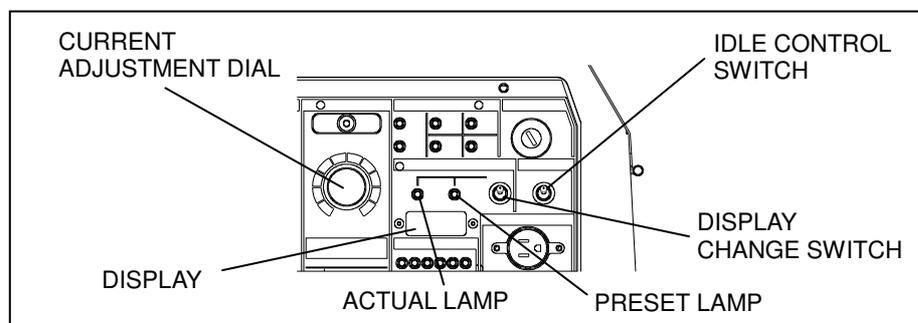

## 9. Generator Operation

### 9-1. Output Range

1-Phase 200V/220V Output is available through 2 receptacle sets.  
 Maximum output by 1 receptacle is 3kVA/3.3kVA.  
 Maximum output by 2 receptacle sets is 6kVA/6.6kVA.

### 9-2. Output Limitation

Please refer to the following table, because electric tools and home appliances cannot be judged only by the rated output or the power consumption due to the efficiency and character of the components.

Applicable Load (For reference purpose only)

Loads	Capacity (Unit : kW)	
	Receptacle 1 set	Receptacle 2 sets use
Electric Bulb, Heater, etc.	3.0(50Hz) 3.3(60Hz)	6.0(50Hz) 6.6(60Hz)
Electric Tools(Series Motor), etc	1.5(50Hz) 1.6(60Hz)	3.0(50Hz) 3.3(60Hz)
Mercury Bulb (High Power Factor Type)	1.2(50Hz) 1.3(60Hz)	2.4(50Hz) 2.6(60Hz)
Submersible Pump, Compressor, etc (Induction Motor)	1.2(50Hz) 1.3(60Hz)	2.4(50Hz) 2.6(60Hz)

- ※ Series Motor : Motor with brush
- ※ Induction Motor : Brushless Motor
- ※ The value described is 『OUTPUT』 for Induction Motor loads and 『POWER CONSUMPTION』 for the other equipment.

#### < Caution >

- Be sure to confirm the frequency designated in the equipment incorporated in mercury bulb or induction motor.

- The load incorporated in motor may require bigger power than the rated power consumption. Therefore, consult with authorized distributor to clarify.
- When connecting to use 2 or more sets, start the load one by one, not to start them simultaneously.
- When switching a Mercury bulb ON again, wait for approximately 15 minutes until the bulb cools down.

### 9-3. Operation

#### **⚠ Danger : Electric Shock**

- Before connecting or disconnecting a plug from output receptacle, always turn the circuit breaker to OFF position.

#### **⚠ Caution : Injuries**

- Be sure to insert a plug to a receptacle, after confirming that all the switches in the loads are positioned to 『OFF』 .
- Be sure to select the correct frequency, designated in the loads.


#### **⚠ Caution : Damage to the property - Aftermath**

- Whenever connecting to use medical equipment or appliances, be sure to consult with the medical equipment company, doctor or hospital personnel.
- Be sure to select the correct frequency, designated in the loads. Otherwise the loads may be damaged.

#### < Caution >

- During operation, AC voltage meter always displays the voltage in 200/220V AC output both at the breaker position 『ON』 and 『OFF』 .

- ① Select the correct frequency, designated in the loads.  
(Refer to 『5-5. Frequency Change』)
- ② Turn the power switch to 『OFF』 in the load.
- ③ Start the engine. (Refer to 『7-1. Starting』)
- ④ Check the frequency by monitor lamp.
- ⑤ Turn the breaker to 『OFF』 .
- ⑥ Connect the load to the output receptacles.
- ⑦ Turn the breaker to 『ON』 .

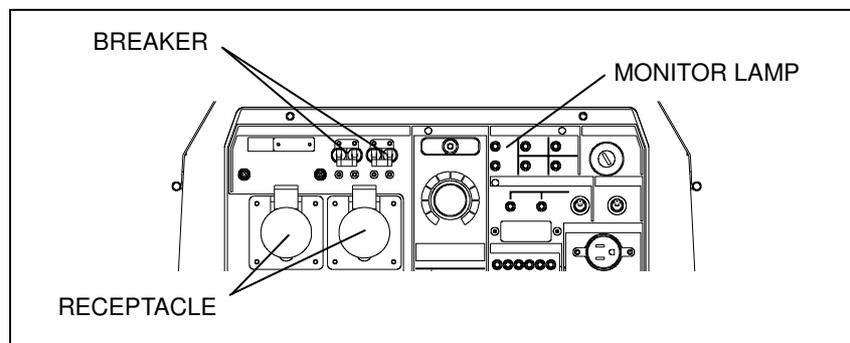

- The Circuit breaker has activated due to overload

#### **⚠ Caution: Injuries**

- Be sure to turn the power switch off in the load when turning the circuit breaker to 『ON』 again, when the circuit breaker has activated.

When the electric supply exceeds the rated output (overload), the circuit breaker activates to trip off in order to shut down the circuit. When the load operation stops during operation, check the circuit breaker.

When breaker has tripped, restore the circuit breaker as per the following procedure.

- ① Turn off all the power switches in the loads.
- ② Turn up the breaker to 『ON』 .

**< Caution >**

- Take care for overload, referring to 『9-2. Output Limitation』 .

## 10. Simultaneous Use of Welding and Generating

The circuit breakers react on the AC power supply circuit only. In the simultaneous use of welding and generating, there sometimes happens overload to the engine. Refer to the following table and limit the AC power use.

Limitation of AC power supply  
in the simultaneous use of welding and generating(Instance of 50/60Hz)

Welding Output	AC Power Output
Welding Rod/Amperage	
φ 2.0mm/60A	BELOW 5.2/6.4kVA
φ 2.6mm/120A	BELOW 3.6/5.0kVA
φ 3.2mm/140A	BELOW 3.0/4.3kVA
φ 4.0mm/170A	BELOW 2.4/3.7kVA
φ 5.0mm/240A	BELOW 0.4/0.8kVA
φ 6.0mm/300A	BELOW 0/0kVA

**< Caution >**

- Avoid the simultaneous use in the case high quality result in welding is required.

## 11. Inspection and Maintenance

**⚠ Danger : Electric Shock · Injuries**

- Before performing any equipment check or maintenance, stop the engine, and remove engine key. A person performing the maintenance should always keep the key.
- Close all doors and place locks during operating this equipment, to avoid injuries by unintentional contact with cooling fan and fan belt.

**⚠ Caution: Fire · Burns**

- Keep the equipment far away from fire.
- Wait until the engine cools down, before performing any inspection. Because some parts/components (flexible tube, etc.) could reach very high temperature inside the equipment.

**⚠ Caution: Burns**

- Do not open the radiator cap while operating this equipment or immediately after stopping the equipment, to avoid sustaining burns from hot vapor.

**⚠ Caution : Injuries to eyes and skin**

- Battery fluid contains diluted sulfuric acid. Avoid contact with eyes, skin or clothing.
- If the acid comes to contact, especially with eyes, flush with a lot of water, and contact your physician immediately.

**⚠ Caution : Explosion**

- Do not use the equipment or charge the battery, in the case the battery fluid level is lower than the LOWER level.
- Battery may emit some combustible gas, so keep it away from fire and sparks.

To optimize the use of this generator/welder, we recommend the periodical equipment checks and maintenance based on the following matrix.  
Use the hour meter as a guide for the operating time.

**< Caution >**

- The authorized technicians should perform all checking and maintenance work, except for the pre-startup checks.
- Request for the maintenance item with ● mark to authorized distributor.
- Always use our genuine parts of replacement.
- When draining waste fluid from the equipment, catch it by tray.
- When disposing of oil, fuel, coolant (LLC), fuel filter, battery and /or other harmful disposal, please observe the relevant environmental protection regulations.
- Please do not dispose the harmful items or waste fluid to the ground to a river, pond, and ocean to keep our environment clean and neat.
- Check to see if it is safe around the equipment before open the door.
- Close all doors and place locks, if you leave from the equipment for a while.


Checking Items		Startup Check	Checking Time					
			At 50hrs	Every 100 hrs	Every 200 hrs	Every 400 hrs	Every 1000 hrs	
1	Check and Supply Fuel	○						
2	Check and Supply Engine Oil	○						
3	Engine Oil Change		1 <sup>st</sup> ○	2 <sup>nd</sup> or after ○				
4	Oil Filter Change		1 <sup>st</sup> ○		2 <sup>nd</sup> or after ○			
5	Check/Add Water/Coolant	○						
6	Water/Coolant Change							○ or 1year

Checking Items		Startup Check	Checking Time					Every 2000 hrs
			At 50hrs	Every 100 hrs	Every 200 hrs	Every 400 hrs	Every 1000 hrs	
7	Clean Fuel Strainer		1 <sup>st</sup> ○	2 <sup>nd</sup> or after ○				
8	Change Fuel Filter					○		
9	Drain Water/Clean Fuel Tank				○			
10	Check Leakage Fuel, Oil, Water	○						
11	Check/Add Battery Water	○						
12	Clean Air Element		1 <sup>st</sup> ○	2 <sup>nd</sup> or after ○				
13	Change Air Element					○		
14	Adjust V-Belt Tension		1 <sup>st</sup> ●	2 <sup>nd</sup> or after ●				
15	Change V-Belt					● or 2year		
16	Clean Radiator Fin					●		
17	Clean Radiator (inside)					●		
18	Change Fuel Hose, Oil Hose, Vibration-Absorbing Rubber							● or 2year
19	Adjust Engine Valve Clearance						● Adjust	● Plane
20	Check/Adjust Injection Nozzle					●		
21	Check/Adjust Injection Pump							●

**(1) Oil Change**

First Time	50 hour mark
2 <sup>nd</sup> or after	Every 100 hours

- ① Remove the oil plug.
- ② Loosen the oil drain plug and allow the oil to drain fully.
- ③ Reinstall the oil drain plug.

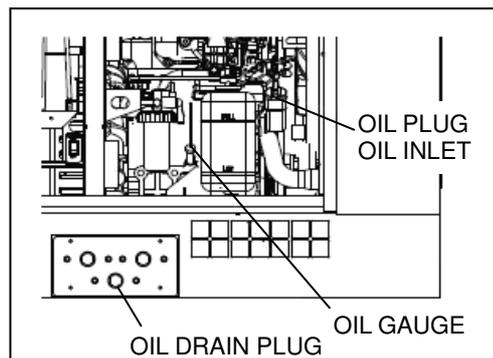

- ④ Checking the oil level by the oil level gauge, add oil into the oil filler to fill up to the max level (Approx. 2.5L).
- ⑤ Reinstall the oil plug hand tight.



**< Caution >**

- Refer to 『6-1. Checking Engine Oil』 to select engine oil.
- Change the packing, whenever changing oil.
- Packing No. : 6C090-58961 (Kubota)
- After reinstalling the oil drain plug tightly, keep the engine drive for a while to check no engine oil leakage and then stop the engine.

**(2) Oil Filter Change**

First Time	50 hour mark
2 <sup>nd</sup> or after	Every 200 hours

- ① Drain the engine oil completely, as described in 『11 (1) Oil Change』 .
- ② Loosen and remove the oil filter, using an oil filter wrench.
- ③ Smear a little engine oil on the rubber gasket of a new filter.
- ④ Screw the new filter into place and tighten it by hand until the gasket contact the seat. Then, give it additional 『1.1/4 Turn』 to seat the filter, using an oil filter wrench.
- ⑤ Supply oil and install the filler cap.

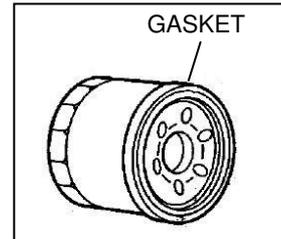
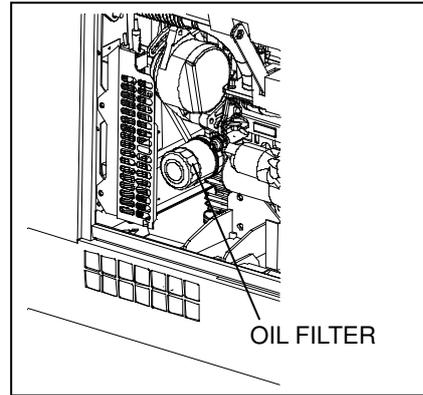


**< Caution >**

- If an oil filter wrench is not available, contact with authorized distributor.
- Oil Filter Part No. : 15853-32436 (Kubota)
- After the engine oil supply, keep the engine drive for a while to check no engine oil leakage and then stop the engine.

**(3) Clean/Change Air Filter Element**

Clean	1 <sup>st</sup> 50 hours and Every 100 hours afterwards
Change	Every 400 hours

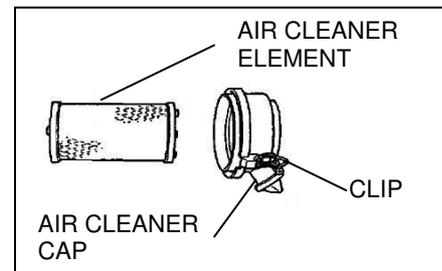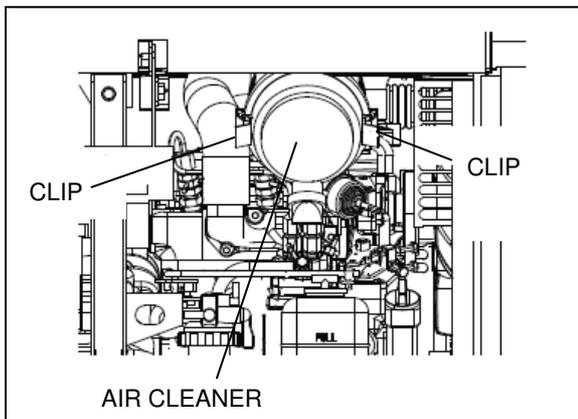

- ① Disconnect the air cleaner cap by releasing the clips.
- ② Remove the air element.

- ③ Clean or change the air element.
  - <The element is adhered with dried contaminants>  
Blow up compressed air from inside the element.
  - <The element is adhered with carbon or oil>  
Replace to a new one.
- ④ Reinstall them in reverse order.


**< Caution >**

- Clean more frequently, if it is used in dusty environment.
- Element Part No. : 1G659-11221 (Kubota)

**(4) Clean/Change Fuel Strainer**

Clean	1 <sup>st</sup> 50 hours and Every 100 hours afterwards
Change	Every 400 hours

- ① Turn the fuel lever to 『CLOSE』 .
- ② Unscrew the retainer ring counterclockwise, and remove the cup and the filter element.
- ③ Discard any dust or water inside the cup, and clean the filter element by blowing compressed air, or change if necessary.
- ④ Reassemble it back.

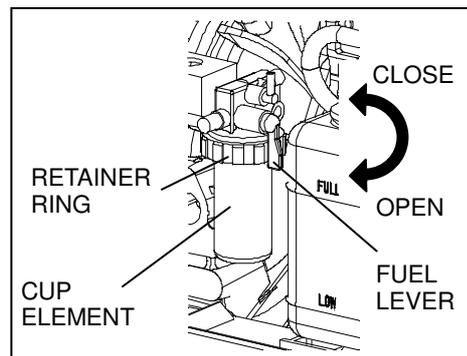


**< Caution >**

- Be sure to check for any contaminants on the packing, whenever reinstalling the cup.
- Turn the fuel lever to 『OPEN』 after assembling, and check for any leak. Having confirmed no leak without fail, turn the fuel lever to 『CLOSE』 .
- Element Part No. : 16271-43561 (Kubota)

**(5) Drain Water from Fuel Tank**

Drain Water	Every 200 hours
-------------	-----------------

- ① Unscrew the fuel drain plug.
- ② Reinstall the drain plug, after draining water completely.

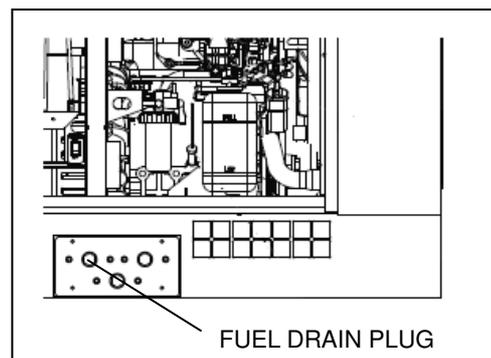

**< Caution >**


- Change the packing, whenever drain water.
- Packing Part No. : 6C090-58961 (Kubota)
- After reinstalling the fuel drain plug tightly, check no fuel leakage.

**(6) Changing Coolant/Water**

Change	Every 2000 hours or 2 years
--------	-----------------------------

(Total coolant/water capacity: about 3 L, including sub tank capacity 0.6 L)


- ① Open the top plate.
- ② Remove the radiator cap.
- ③ Loosen the water drain plug.
- ④ After draining all the water, reinstall the water drain plug.

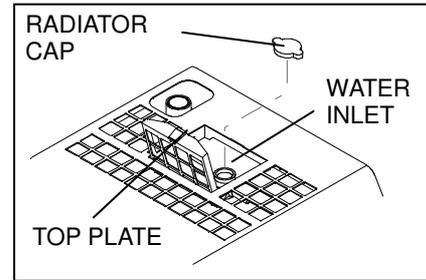

**< Caution >**

- Change the packing, whenever changing coolant/water.
- Packing Part No. : 6C090-58961 (Kubota)

- ⑤ Replace all the water in the sub tank.
- ⑥ Fill the radiator coolant/water up to the MAX level (to the upper edge of the inlet).
- ⑦ Reinstall the radiator cap.
- ⑧ Close the top plate.

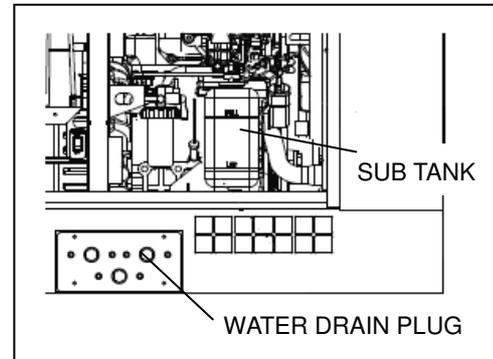

**< Caution >**

- After reinstalling the water drain plug tightly, keep the engine drive for a while to check no water leakage and then stop the engine.

## 12. Long-Term Storage

**⚠ Danger : Electric Shock**

- Before performing any equipment check or maintenance, stop the engine, and remove the engine key. A person performing the maintenance should always keep the key.

**⚠ Caution : Injuries**

- Before performing any equipment check or maintenance, stop the engine, and remove the engine key. A person performing the maintenance should always keep the key.

**⚠ Caution : Fire • Burns**

- When checking engine, always stop the engine, and keep far away from fire. Temperature around muffler and exhaust can get extremely high. Wait until the engine cools down, before performing any inspection.

If the equipment will not be used for more than two months, perform the following maintenance and storage procedures.

- ① Remove the battery.
- ② Change the engine oil.
- ③ Drain fuel from the fuel tank, the fuel strainer.
- ④ Remove the engine key and save it.
- ⑤ Clean all parts, cover the generator/welder, and keep it in the storage, away from dust and humidity.

**< Caution >**

- Recharge the removed battery once a month.

## 13. Troubleshooting

### **Danger : Electric Shock**

- Do not operate the equipment, if the equipment or you are wet.
- Before performing any equipment check or maintenance, stop the engine.

### **Caution : Injuries**

- When performing equipment check and maintenance, always stop the engine.

### **Caution : Fire • Burns**

- When checking engine, always stop the engine, and keep far away from fire. Temperature around muffler and exhaust can get extremely high. Wait until the engine cools down, before performing any inspection.


Follow the guideline below, when performing any troubleshooting.

If you cannot resolve the problems by this troubleshooting guide, contact with authorized distributor to request the repair.


Symptoms	Possible cause	Corrective actions
Starter motor does not start	<ol style="list-style-type: none"> <li>1. Weak battery</li> <li>2. Dead battery</li> </ol>	<ol style="list-style-type: none"> <li>1. Recharge battery</li> <li>2. Replace battery</li> </ol>
Engine does not start	<ol style="list-style-type: none"> <li>1. Fuel lever on fuel strainer to 『CLOSE』</li> <li>2. Insufficient fuel</li> <li>3. Fuel is contaminated by the water or dust</li> <li>4. Fuse burnt</li> </ol>	<ol style="list-style-type: none"> <li>1. Open the fuel lever for fuel strainer</li> <li>2. Replenish fuel</li> <li>3. Drain water or clean fuel tank, fuel strainer</li> <li>4. Repair the fuse</li> </ol>
Engine starts, but stalls immediately	<ol style="list-style-type: none"> <li>1. Insufficient oil</li> <li>2. High water temperature</li> <li>3. Unable to charge</li> </ol>	<ol style="list-style-type: none"> <li>1. Replenish oil</li> <li>2. Operate the machine within the rated output</li> <li>3. Repair</li> </ol>
Excessive black smoke exhaust from muffler	<ol style="list-style-type: none"> <li>1. Overloaded use</li> </ol>	<ol style="list-style-type: none"> <li>1. Operate the machine within the rated output</li> </ol>
Engine does not stop	<ol style="list-style-type: none"> <li>1. Stop solenoid malfunction</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn the fuel lever to 『CLOSE』 to stop and repair</li> </ol>
Welding arc is weak	<ol style="list-style-type: none"> <li>1. Frequency switch at 『50Hz』</li> <li>2. Wrong current adjustment dial position</li> <li>3. Improper connection of cables</li> <li>4. Improper Cable Diameter</li> <li>5. Improper connection to the base material</li> <li>6. Simultaneous use of welding and Generating</li> <li>7. Welding output short circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Change to 『60Hz』</li> <li>2. Turn the dial clockwise</li> <li>3. Connect securely</li> <li>4. Replace the cables based on the 『Welding Cable Selection』</li> <li>5. Connect securely</li> <li>6. Stop using AC power output</li> <li>7. Resolving short circuit</li> </ol>

Symptoms	Possible cause	Corrective actions
Excessive welding arc	1. Wrong current adjustment dial position	1. Turn the dial counterclockwise
No AC output	1. The breaker position to 『OFF』	1. Turn to 『ON』
AC output is weak	1. Wrong frequency 2. The rated current of the load exceeds the rated output 3. Simultaneous use of welding and Generating	1. Change to load frequency 2. Adjust according to 『OUTPUT LIMITATION』 3. Stop welding
Unable to activate the Idle control feature	1. Idol control switch is to 『ECO』 or 『AUTO』 2. Idol control switch is to 『HIGH』 3. The power consumption of the load is 1A or below 4. Welding output short circuit	1. Turn to 『HIGH』 2. Turn to 『ECO』 or 『AUTO』 3. Set the idol control to 『HIGH』 4. Resolving short circuit
Unable to adjust the welding current by remote controller	1. Connected AC load to remote control receptacle 2. The switch(breaker) on the cord reel at OFF	1. Disconnect AC load 2. Turn to ON
No welding and AC output with indicated "Err" on the display	1. Left the welding output short circuit	1. Stop the engine and resolving short circuit

# 14. Engine Wiring Diagram

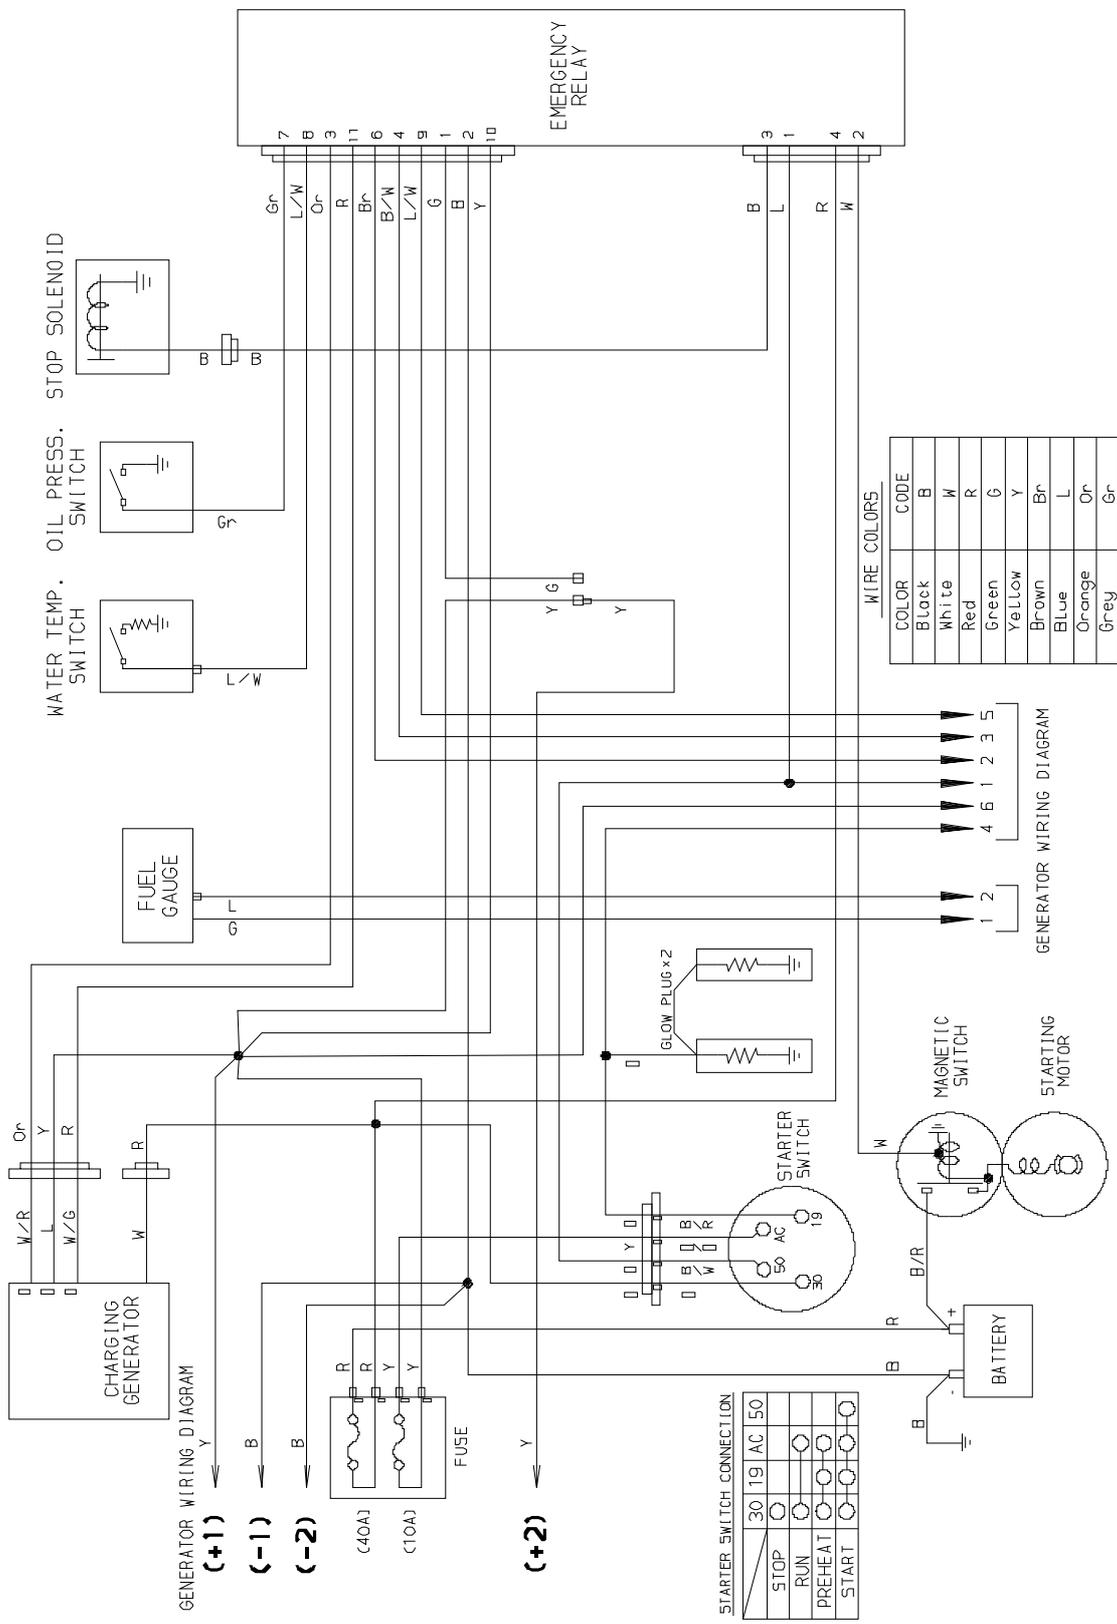

# 15. Generator Wiring Diagram

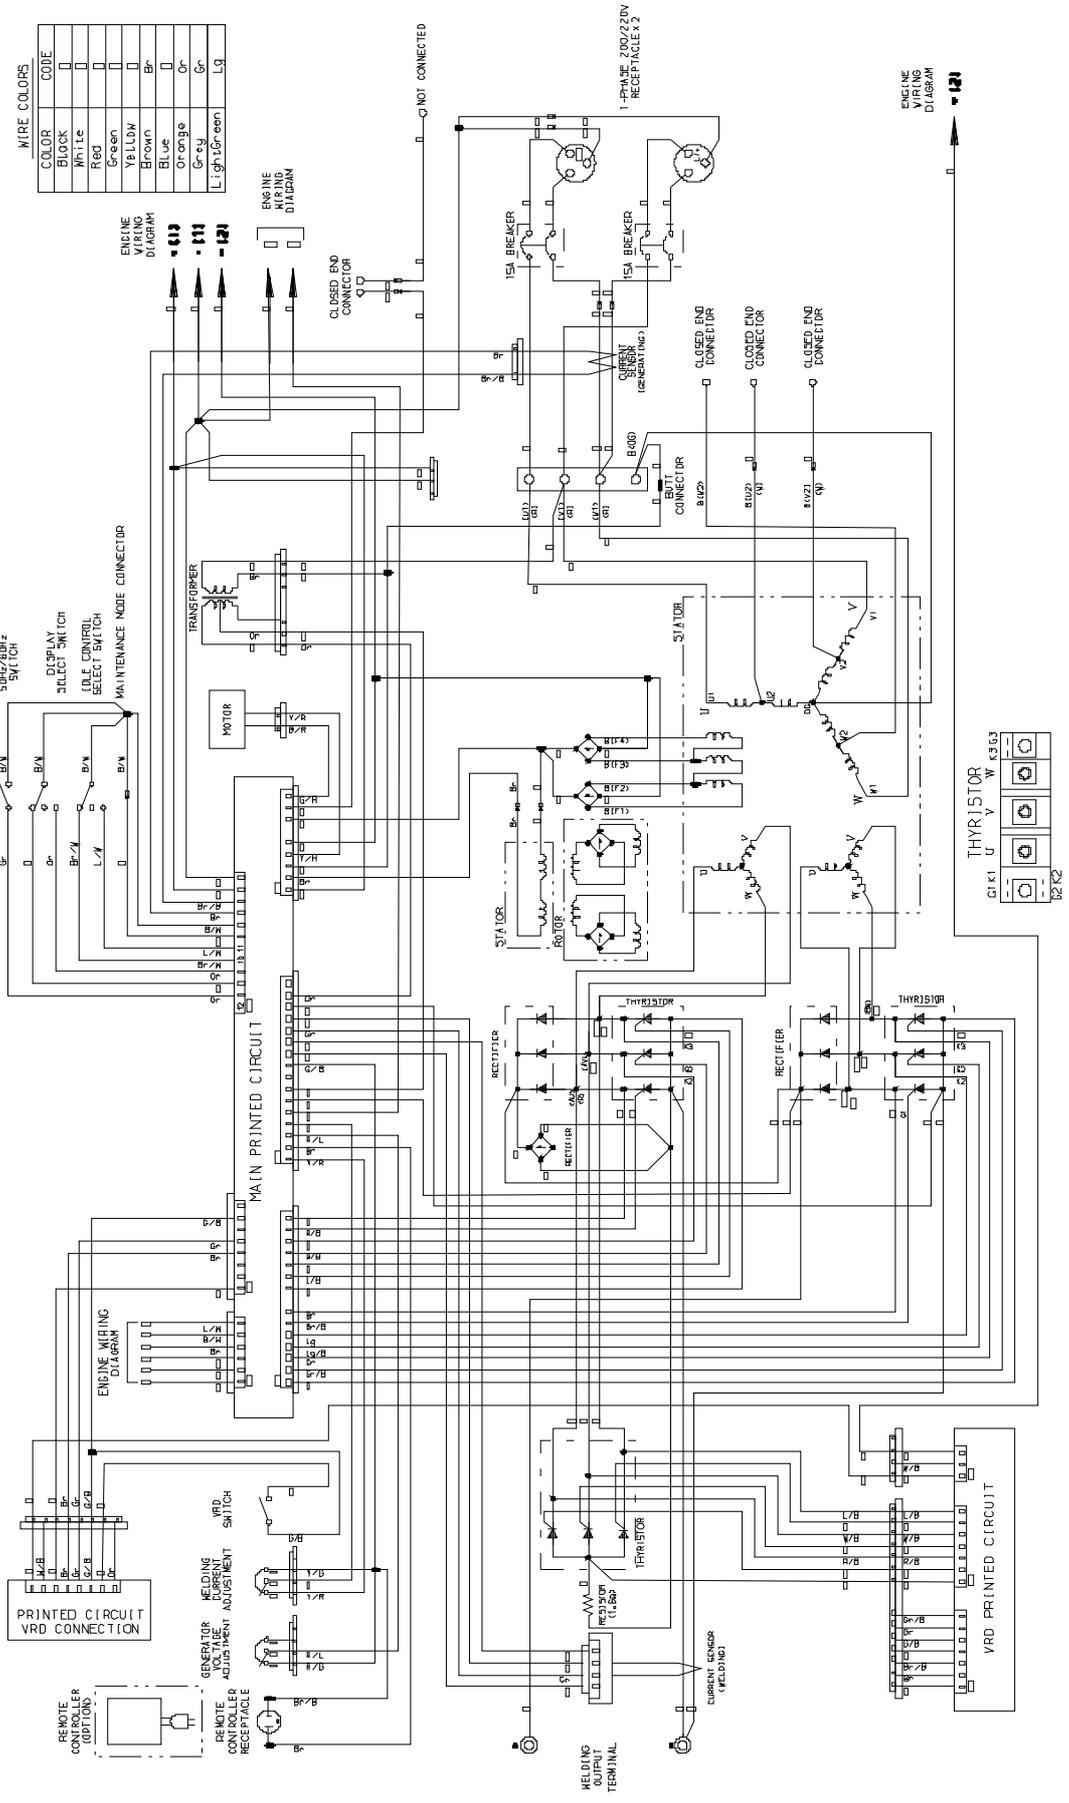

WIRE COLORS	
COLOR	CODE
Black	□
White	□
Red	□
Green	□
Yellow	□
Brown	□
Blue	□
Orange	□
Grey	□
Light Green	□
LG	□

ENGINE WIRING DIAGRAM

ENGINE WIRING DIAGRAM

ENGINE WIRING DIAGRAM





**YAMABIKO CORPORATION**  
7-2 SUEHIROCHO 1-CHOME, OHME, TOKYO 198-8760, JAPAN  
PHONE: 81-428-32-6118. FAX: 81-428-32-6145.

**shindaiwa<sup>®</sup>**