

# HERO3

BLACK EDITION

---

U S E R M A N U A L

GoPro<sup>®</sup>  
Be a HERO. ■■■■

Join the GoPro party at **facebook.com/gopro** to see what other GoPro owners are capturing and sharing. Share *your* footage and join the GoPro movement!

---

# TABLE OF CONTENTS

---

Accessories	4
Mounts + Accessories	5
HERO3 Features	6
Camera LCD Status Screen	8
Camera User Interface Flow Chart	9
Software Updates	10
Basics	10
Camera Modes	13
Camera Settings	20
Delete	30
Capture Settings	32
Set Up	40
Wireless Controls	49
Storage/SD Cards	52
System Requirements	53
Transferring Files	54
Playback	55
Battery Life	57
Important Warning Messages	59
Camera Assembly	60
Customer Support	67

---

---

WEAR IT. MOUNT IT. LOVE IT.

---

## PREMIUM ACCESSORIES

---



LCD Touch BacPac™

---



Battery BacPac™

---



Wi-Fi Remote

---



The Frame Mount  
(HERO3 accessory)

---

## HERO3 ACCESSORIES

---



Wrist Housing

---



Replacement Housing

---



Rechargeable Li-Ion Battery

---



Lens Replacement Kit

---



Caps + Doors

---



32GB/64GB microSD™

---

More HERO3 accessories available at [gopro.com](http://gopro.com).

---

**MOUNTS + ACCESSORIES**



Helmet Front Mount



Chest Mount Harness



Handlebar/Seatpost/  
Pole Mount



Surfboard Mounts



Floaty Backdoor



Head Strap Mount



Suction Cup



Vented Helmet Strap



Roll Bar Mount



Tripod Mount



Anti-Fog Inserts



Grab Bag of Mounts



Curved + Flat Adhesive Mounts



Side Mount




Camera Tethers



Wi-Fi Remote Mounting Kit

# HERO3 FEATURES

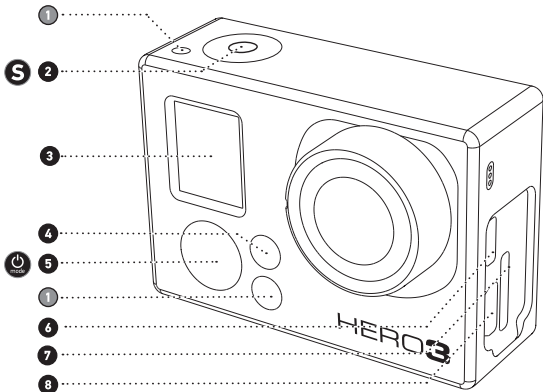

1. Status Indicator Lights (Red)

2. **SHUTTER/SELECT** Button **S**

3. LCD Status Screen


4. Wi-Fi Indicator Light (Blue)

5. **POWER/MODE** Button **mode**

6. Micro HDMI Port  
(Cable not included)

7. microSD Card Slot  
(SD card not included)

8. mini-USB Port  
(Supports Composite A/V  
cable/3.5mm stereo mic adapter,  
not included)

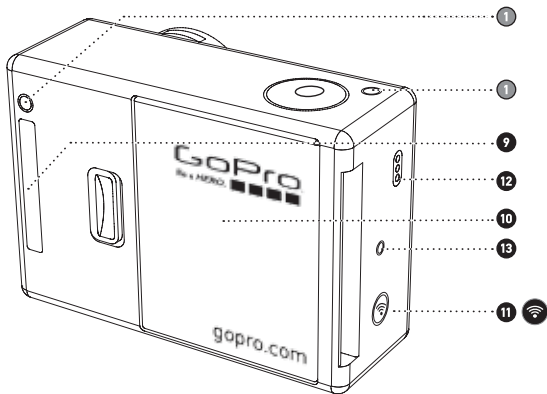

**9.** HERO Port

**10.** Battery Door


**11.** Wi-Fi **ON/OFF** Button 

**12.** Microphone

**13.** Audio Alert

## CAMERA LCD STATUS SCREEN

The LCD screen displays the following information about HERO3 modes and settings:

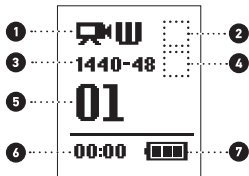


- 1. Camera Modes/FOV (Field of View)**
- 2. Capture Setting Modes** (not shown)
- 3. Resolution/FPS (Frames Per Second)**
- 4. Time Interval Settings:** (not shown)
- 5. Counter**
- 6. Time/Storage/Files**
- 7. Battery Life**

**Note:** *The icons displayed above will vary depending on what mode your camera is in.*



# CAMERA USER INTERFACE FLOW CHART

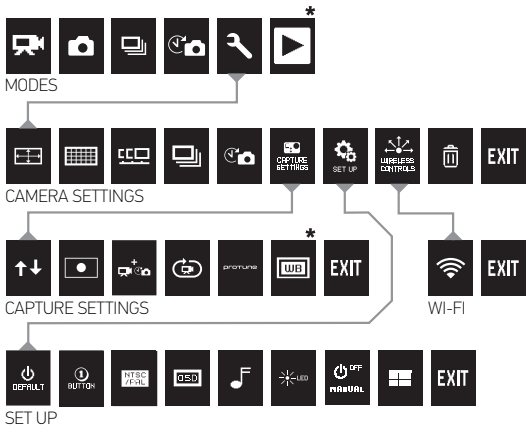

**\*Note:** White Balance only appears in your camera display if Protune™ mode is turned ON. Playback only appears if Playback is activated.

---

## SOFTWARE UPDATES

---



GoPro releases product updates through software updates. Check to see if any updates are available for your camera or other GoPro products. Visit: [gopro.com/update](https://gopro.com/update).

---

## USING YOUR HERO3: BASICS

---

### GETTING STARTED

**Before using your HERO3 for the first time:**

- 1. Insert a microSD, microSDHC™ or microSDXC™ card into the card slot with label facing forward, narrowest part of the card first.** Speed Class 10 or higher cards are recommended. When using 0.5 second **Time Lapse** or recording video in **Protune** mode, a Speed Class Rating 10 is required.
- 2. Place battery into the camera.**
- 3. Charge battery.** The included lithium-ion battery comes partially charged. To charge, connect the included USB cable to camera and connect the other end of the cable to a power source such as a computer, GoPro Wall Charger or GoPro Auto Charger. No damage will occur to the camera or battery if used prior to a full charge.

**PRO  
TIP:**

**Status Indicator Lights when camera is OFF and charging, show:**






- **Status Indicator Lights** are **ON** when charging.
- **Status Indicator Lights** are **OFF** when charging is complete.

- ▶ See **BATTERY LIFE** for more information.
- ▶ See **PROTUNE** for more information.

### CAMERA DEFAULT SETTINGS

The HERO3: Black Edition camera powers up with the following default settings:

---

	<b>Video Resolution</b>	1440p48fps
	<b>Photo Resolution</b>	12 Megapixels (MP)
	<b>Photo Burst</b>	30 photos in 1 second
	<b>Time Lapse</b>	0.5 seconds
	<b>Wi-Fi</b>	<b>OFF</b>


---

**PRO  
TIP:**

Want to change your **VIDEO** and **PHOTO** settings?

▶ See **SETTINGS** menu to make changes.


### POWERING ON AND OFF

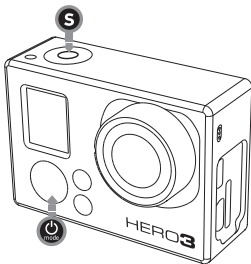

#### To power ON:

Press and release . The red **Status Indicator Lights** flash three times and the **Sound Indicator** emits three beeps.

#### To power OFF:

Press  for two seconds, then release. The red **Status Indicator Lights** flash several times and the **Sound Indicator** emits seven beeps.


#### PRO TIP:






Want to turn your HERO3 into a "one-button" camera that automatically starts recording **PHOTOS** or **VIDEOS** once it turns **ON**? Set the camera to **ONE BUTTON** mode.

▶ See **ONE BUTTON** mode for more information.

# USING YOUR HERO3: CAMERA MODES

## OVERVIEW

The HERO3 features several camera modes. To cycle through the modes, press . The modes will appear in the following order:

	<b>VIDEO</b>	Record Video
	<b>PHOTO</b>	Capture single Photo
	<b>PHOTO BURST</b>	Capture Burst photos
	<b>TIME LAPSE</b>	Capture Time Lapse photos
	<b>PLAYBACK</b>	Appears only if the camera is plugged into a TV/HDTV. <b>Playback</b> allows you to play <b>Photos</b> and <b>Videos</b> on a TV/HDTV (via optional Micro HDMI cable or A/V composite cable).

**PRO TIP:**

Use **PHOTO BURST** to capture fast moving subjects.



► See **PLAYBACK** for more information.

---


## USING YOUR HERO3: CAMERA MODES

---


### VIDEO

To record **Video**, verify the camera is in **Video** mode. If the **Video**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.

#### **To start recording:**

Press and release . The camera will emit one beep and the red **Status Indicator Lights** will flash while recording.

#### **To stop recording:**

Press and release . The red **Status Indicator Lights** flash three times and the camera emits three beeps to indicate recording has stopped.


The HERO3 automatically stops recording when the memory card is full or the battery is out of power. Your video will be saved before the camera powers **OFF**.

▶ See **VIDEO** mode for instructions on how to change resolution settings.

### PHOTO

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo**  icon on your camera's LCD is not showing, press  repeatedly until it appears.

#### **To take a photo:**



Press and release . The camera beeps two times and the red **Status Indicator Lights** flash.

► See **PHOTO** modes for instructions on how to change resolution settings and other **PHOTO** features.


## USING YOUR HERO3: CAMERA MODES

### PHOTO BURST

In **Photo Burst** mode your camera takes multiple photos in short time intervals— **3 photos/1 second, 5 photos/1 second, 10 photos/1 second, 10 photos/2 seconds, 30 photos/1 second, 30 photos/2 seconds or 30 photos/3 seconds.**

To capture a **Photo Burst** series, verify the camera is in **Photo Burst** mode. If the **Photo Burst**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.

#### To take a **Photo Burst** series:

Press and release . The red **Status Indicator Lights** flash and the camera beeps multiple times.

#### **PRO TIP:**



Sometimes **30 photos/1 second** is too fast. Try a slower **PHOTO BURST** setting to better match the action.

► See **PHOTO BURST** for instructions on how to change the interval settings.




### **TIME LAPSE**


**Time Lapse** mode captures a series of photos at **0.5, 1, 2, 5, 10, 30** or **60** second intervals. When using the **0.5** seconds setting, an SD card with a Speed Class 10 Rating is required.

To capture a **Time Lapse** series, verify the camera is in **Time Lapse** mode. If the **Time Lapse**  icon is not showing on your camera's LCD screen, press  repeatedly until it appears.

#### **To take Time Lapse:**

Press and release . The camera initiates countdown and the red **Status Indicator Lights** flash each time a **Photo** is taken.

#### **To stop Time Lapse:**

Press and release . The red **Status Indicator Lights** flash three times and the camera emits three beeps to indicate that **Time Lapse** has stopped.

▶ See **TIME LAPSE** for instructions on how to change the interval settings.



### SETTINGS

The **Settings** menu allows you to adjust a variety of camera settings including:



**Video Resolution**



**Photo Resolution**



**Time Lapse**



**Photo Burst**



**Continuous Photo**

- and more

► See **SETTINGS** menu to make changes, learn how to navigate menu options and read more details on each setting.



### PLAYBACK

You can playback your GoPro **Photos** and **Videos** on a TV/HDTV or with the LCD Touch BacPac (optional accessory). **Playback** appears as a camera mode when camera is powered **ON** and plugged into a TV/HDTV.









▶ See **PLAYBACK** for more information on viewing your **VIDEOS** and **PHOTOS**.

## CAMERA SETTINGS




### SETTINGS

#### To enter the Settings menu:

1. Verify the camera is in the **Settings** menu. If the **Setting**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press  to enter  menu.
3. Use  to cycle through the various **Settings** options.
4. Press  to select desired option.
5. To exit, hold down  for two seconds or cycle through to **EXIT** and press .

#### PRO TIP:



If at any time you wish to exit from the **SETTINGS** menu, press and hold  for two seconds.



## VIDEO RESOLUTION/FPS/FOV MODES

You can change **Resolution**, **FPS** and **View Angle (FOV)** for your HERO3 camera when using **Video** mode. This mode contains sub-level menu options.

**Once in the Settings menu:**

1. Press **S** to enter
2. Use  to cycle through options.
3. Press **S** to enter desired menu.
4. Use  to cycle through each sub-menu option and **S** to select.
5. To change additional options, repeat step 4.
6. To exit, hold down **S** for two seconds or cycle through to **EXIT** and press **S**.

# CAMERA SETTINGS

The HER03: Black Edition offers the following Video Capture modes:

Video Resolution	NTSC fps	PAL fps	std Mode	Protune	Field of View (FOV)	Screen Resolution
4k / 4k Cin	15 12	12.5 12	No	Yes	Ultra Wide	3840x2160, 16:9 4096x2160, 17:9
2.7k / 2.7k Cin	30 24	25 24	Yes	Yes	Ultra Wide	2704x1524, 16:9 2704x1440, 17:9
1440p	48 30 24	48 25 24	Yes	Yes	Ultra Wide	1920x1440, 4:3
1080p	60 48 30 24	50 48 25 24	Yes	Yes	Ultra Wide Medium Narrow	1920x1080, 16:9
960p	100 48	100 48	Yes	Yes No	Ultra Wide	1280x960, 4:3
720p	120 60	100 50	Yes	Yes No	Ultra Wide Narrow*	1280x720, 16:9
WVGA	240	240	Yes	No	Ultra Wide	848x480, 16:9

\*Medium and Narrow FOV will be available in an upcoming software update. Note: 720p120 and 720p100 only support Ultra Wide and Narrow FOV.

**Note:** Protune mode is only possible in select Video resolutions.

## CAMERA SETTINGS

Video Resolution	Best Use
4k / 4k Cin	Stunning 8MP resolution video with professional low light performance. Pull 8MP stills from video. Recommended for tripod or fixed position shots.
2.7k / 2.7k Cin	16:9 / 17:9 resolution video downscales to provide stunning, cinema-quality results for professional productions. Recommended for tripod or fixed position shots.
1440p	Recommended for body-mounted shots as larger viewing area and high frame rate yield the smoothest, most immersive results for high action capture.
1080p	1080p60 is great for all shots as high resolution and frame rate yield stunning results. Tripod or fixed mounting for 1080p48 and 30fps and 1080p24 is ideal for television and film productions.
960p	Use for body-mounted shots and when slow motion is desired. Provides large viewing area and smooth results for high action capture.
720p	Good for handheld shots and when slow motion is desired.
WVGA	Good when super slow motion is desired and standard definition is acceptable.

<b>PRO TIP:</b>	Setting the <b>PROTUNE</b> mode to <b>ON</b> allows for high-quality capture, neutral color and 24fps video for professional video production. ▶ See <b>PROTUNE</b> for more information.
-----------------	--

---

# CAMERA SETTINGS

---



## PHOTO RESOLUTION MODES

The HER03 can capture photos at **12MP**, **7MP** and **5MP** resolutions. Any change to photo resolution also affects photos captured in **Photo**, **Photo Burst** and **Time Lapse** modes.

Photo Resolution	Field of View (FOV)
12MP	Wide (Default)
7MP	Wide
7MP	Medium
5MP	Wide

---





### CONTINUOUS PHOTO

**Continuous Photo** mode allows you to capture a series of **Photos** continuously while holding down the **S** button.

---

3 photos every 1 second

---

5 photos every 1 second

---

10 photos every 1 second

---

**Note:** *Your camera will remain in the **CONTINUOUS PHOTO** mode until you return it to the **SINGLE** photo capture setting option.*

---

## CAMERA SETTINGS

---



### PHOTO BURST OPTIONS

**Photo Burst** mode captures series of **Photos** when **S** is pressed. **Photos** can be captured in the following rates:

---

3 photos in 1 second

---

5 photos in 1 second

---

10 photos in 1 second

---

10 photos in 2 seconds

---

30 photos in 1 second (Default)

---

30 photos in 2 seconds

---

30 photos in 3 seconds

---



### TIME LAPSE

Several time interval options are available for **Time Lapse** mode, including **0.5, 1, 2, 5, 10, 30** and **60** seconds.

---



## CAPTURE SETTINGS MENU

**Capture Settings** allows you to adjust the following advanced camera settings:

**Camera Orientation**

**Spot Meter**

**Simultaneous Video and Photo**

**Looping Video**

**Protune**

**White Balance**

► See **CAPTURE SETTINGS** section for a complete list of capture options.

# CAMERA SETTINGS



## SET UP MENU

The **Set Up** menu allows you to adjust the following camera settings:



**Default mode at Power Up**



**One Button Mode**



**NTSC/PAL**



**On Screen Display**



**Status Indicator Lights**



**Sound Indicator**



**Month/Day/Year/Time**


▶ See **SET UP** menu section for a complete list of set up options.



### WIRELESS CONTROLS

The HERO3 camera's built-in Wi-Fi allows you to connect to the Wi-Fi Remote or smartphone/tablet via the GoPro App. When **Wi-Fi** is **ON**, your **Wi-Fi Status Indicator Light** will blink blue.

#### To turn Wi-Fi ON/OFF:

Press  to turn **Wi-Fi ON/OFF**. The most recently used **Wi-Fi** mode will be active when Wi-Fi is **ON**.

▶ See **WIRELESS CONTROLS** section for a complete list of wireless functions.

## CAMERA SETTINGS



### DELETE











Delete the last file or all files and format the memory card. During delete **LAST** or **ALL**, the **Status Indicator Lights** blink until operation is complete.

CANCEL (Default)

LAST

ALL

### To delete **LAST** or **ALL**:

1. Verify the camera is in **Settings** mode. If the **Settings**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press  to enter **Settings** menu.
3. Use  to cycle through **Settings** to locate .
4. Press  to enter **Delete**.
5. Use  to cycle through options.
6. Select highlighted option by pressing .
7. To exit, hold down  for two seconds or cycle through to **EXIT** and press .

### PRO TIP:

Use caution — by selecting **ALL**, the memory card will be formatted, deleting every file on your SD card.

### **EXIT** EXIT

From the **EXIT** screen, press **S** to exit the **Settings** menu.














#### **PRO TIP:**

If at any time you wish to exit from the **SETTINGS** menu, press and hold **S** for two seconds.



## CAPTURE SETTINGS

### To enter the Capture Settings menu:

1. Verify the camera is in **Settings** mode. If the **Settings**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press  to enter .
3. Use  to cycle through **Settings** to locate  **CAPTURE SETTINGS**.
4. Press  to enter **Capture Settings**.
5. Use  to locate the desired option to change.
6. Press  to select the desired option.
7. Some options have a sub-menu. Use  to cycle through the sub-menus.
8. Press  to select a highlighted option.
9. To exit, hold down  for two seconds or cycle through to **EXIT** and press .



---

## CAPTURE SETTINGS

---

You can customize the way your HERO3 camera captures **Video** and **Photos** in the **Capture Settings** menus, such as **Upside Down**, **Looping Video** and **White Balance**.



### UPSIDE DOWN

Mounting your HERO3 **Upside Down** but wish the files to appear upright when viewing or editing? This setting eliminates the need to flip your **Video** or **Photos** after recording.



Camera right side up (Default)




Camera upside down

---



### SPOT METER

Turn on **Spot Meter** when filming from within a dark space pointing the camera into a brighter setting, such as filming the outdoors from within a car. When **Spot Meter** is set to **ON**,  appears in the LCD window.

OFF (Default)

ON

---

# CAPTURE SETTINGS



## SIMULTANEOUS VIDEO AND PHOTO

**Simultaneous Video and Photo** mode, allows you to simultaneously capture both **Videos** and **Photos**. You can set the camera to take a **Photo** every **5 seconds**, **10 seconds**, **30 seconds** or **60 seconds** while you record **Video**. To set your camera to **Picture In Video Mode** verify that a supported **Video** resolution is selected and that **Protune** is turned **OFF**.

OFF

5 seconds

10 seconds

30 seconds

60 seconds


**Note:** You can capture **Simultaneous Video and Photo** in one of the following resolution settings: 1080p 24 fps, 1080p 30 fps, 720p 60fps or 1440p 24 fps.

### PRO TIP:

Your resulting **PHOTO** size is determined by the **VIDEO** dimensions you select.

#### Video Dimensions Megapixel

16:9 (1080p, 720p)	8MP
4:3 (1440p)	12MP

While capturing **VIDEO** you can manually take a **PHOTO** at any time by simply pressing .



## LOOPING VIDEO

**Looping Video** mode allows you to record a continuously looping video that overwrites itself until you press the **S** button to stop it. **Looping Video** is not available if **Protune** mode is turned **ON**.

**Looping Video options include:**

OFF	(Default)
Max video	Camera records until memory card is full, then overwrites with a new video.
5 min video	Camera records for 5 minutes, then begins a new video, progressively overwriting the previous 5 minute video.
20 min video	Camera records for 20 minutes, then begins a new video, progressively overwriting the previous 20 minute video.
60 min video	Camera records for 60 minutes, then begins a new video, progressively overwriting the previous 60 minute video.
120 min video	Camera records for 120 minutes, then begins a new video, progressively overwriting the previous 120 minute video.

**PRO TIP:**

Multiple chapter files are written to your memory card. This allows for small segments of content to be overwritten during loop recording. When viewing on a computer screen you will see separate files for each time segment. Use video editing software if you wish to combine files into a longer video.

**Note:** **Looping Video** is not enabled when in **Protune** mode.

---

# CAPTURE SETTINGS

---

## PROTUNE

The HERO3 camera can record video in **Protune** mode. **Protune** is a video mode that unlocks the camera's full potential, yielding stunning image quality and cinema-caliber video for professional productions. Content creators now have far more flexibility and workflow efficiency than ever before.

### PROTUNE KEY BENEFITS INCLUDE:

#### High-Quality Image Capture

**Protune**'s high data rate captures images with less compression, giving content creators higher quality for professional productions.

#### Neutral Color

**Protune**'s neutral color profile offers more flexibility during post-production color correction. Protune's log curve captures more detail in shadows and highlights.

#### Film/TV Frame Rate Standard

Record video in cinema-quality 24fps and easily intercut GoPro content with other source media without the need to perform fps conversion.

Turning **Protune ON** affects several settings and features, such as **Video Resolution, fps, FOV** and **Simultaneous Video and Photo**.

---

OFF (Default)

---

ON

---

**PROTUNE RESOLUTIONS (continued):**

**Protune** is available in the following HERO3: Black Edition resolutions:

RESOLUTION	FPS
4k / 4kCin	15/12.5,12
2.7k / 2.7kCin	30/25, 24
1440p	48, 30,25,24
1080p	60, 50, 48, 30, 25, 24
960p	100
720p	120, 100

**COMPATIBILITY:** **Protune** is compatible with professional color correction tools, editing programs and GoPro CineForm Studio.

# CAPTURE SETTINGS



## WHITE BALANCE

**White Balance** adjusts the overall color tone of videos. Standard video records in **AUTO White Balance** only.

Advanced users can make adjustments to the **White Balance** settings when in **Protune** mode. Just remember, **Videos** recorded with **Protune** turned **ON** require that you post process the video with an editing program to achieve your desired finish.

### PRO TIP:

Consider manually setting **WHITE BALANCE** to the following settings when operating in the following conditions:

Incandescent or sunrise/sunset lighting	3000K
Daylight or sunlit shooting	5500K
Cool white fluorescent skylight lighting	6500K
Industry standard optimized color	Cam RAW

## Cam RAW (Camera RAW)

The HERO3 camera can record **Video** in **Protune** mode in **Cam RAW**. GoPro **Cam RAW** mode yields a minimally processed data file direct from the image sensor that allows for more precise adjustments to be made in post-process. Working in this mode takes full advantage of the image sensor's capabilities.

### PRO TIP:

If you've changed your **WHITE BALANCE** settings in **PROTUNE** and switch back to Standard recording, the **WHITE BALANCE** settings will automatically revert back to **AUTO**.

### **EXIT** EXIT

From the **EXIT** screen press **S** to exit the **Capture Settings** menu.












#### **PRO TIP:**

If at any time you wish to exit from the **CAPTURE SETTINGS** menu, press and hold **S** for two seconds.



## SET UP

### To enter the Set Up menu:

1. Verify the camera is in **Settings** mode. If the **Settings**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press  to enter .
3. Use  to cycle through **Settings** to locate  **SET UP**.
4. Press  to enter **Set Up**.
5. Use  to locate the desired option to change.
6. Press  to select the desired option.
7. To exit, hold down  for two seconds or cycle through to **EXIT** and press .





## DEFAULT MODE AT POWER UP

You can set the camera's **Default** mode at power up to any of the following modes:



(factory default)



# SET UP











## ONE BUTTON


With **One Button** mode selected, the camera automatically begins recording when powering the camera **ON**. **One Button** mode can be configured to start in **Video** or **Time Lapse**.

OFF (Default)

ON


### To turn One Button mode ON:

1. Verify the camera is in **Settings** mode. If the **Settings**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press **S** to enter  menu.
3. Use  to cycle through **Settings** to locate  **SET UP**.
4. Press **S** to enter **Set Up**.
5. Use  to cycle through to locate .
6. Press **S** to enter **One Button** menu.
7. Use  to cycle through options.
8. Press **S** to select a highlighted option.
9. To exit, hold down **S** for two seconds or cycle through to **EXIT** and press **S**.

Next time you power your camera **ON**, it will begin recording in its **Default Power Up Mode**. To stop recording, push and hold  for two seconds.

**ONE BUTTON MODE (continued)**

To exit **One Button** mode:

1. Power camera **ON**.
2. Press and hold **S** until **1** **BUTTON** shows in the LCD window.
3. Press **S** to enter.
4. Use  to highlight **OFF**.
5. Press **S** to select.
6. To exit, hold down **S** for two seconds or cycle through to **EXIT** and press **S**.

**PRO TIP:**

To stop the capture process (**VIDEO** or **TIME LAPSE**) when in **ONE BUTTON**, press and hold **S** for two seconds. You will return to the **ONE BUTTON** menu where you can turn **ONE BUTTON** mode **OFF**.

**Note:** **One Button** mode is disabled when connected to *Wi-Fi Remote* or *GoPro App*.

## SET UP

NTSC  
/PAL

NTSC / PAL

The **NTSC** and **PAL** settings govern **Video** recording frame rate and playback when viewing **Video** on a TV/HDTV. Select **NTSC** when viewing a TV/HDTV in North America. Select **PAL** if viewing on a PAL TV/HDTV (most televisions outside of North America) or if viewing on a PAL TV/HDTV in any region.

<b>NTSC</b> (Default)	<b>PAL</b>
4k/15fps	4k/12.5fps
4k Cin/12fps	4k Cin/12fps
2.7k/30fps	2.7k/25fps
2.7k Cin/24fps	2.7k Cin/24fps
1440p/48fps	1440p/48fps
1440p/30fps	1440p/25fps
1080p/60fps	1080p/50fps
1080p/48fps	1080p/48fps
1080p/30fps	1080p/25fps
1080p/24fps	1080p/24fps
960p/100fps	960p/100fps
960p/48fps	960p/48fps
720p/120fps	720p/100fps
720p/60fps	720p/50fps
WVGA/240fps	WVGA/240fps



## ONSCREEN DISPLAY

To display or hide the recording icons and file information on **Video** or the viewing screen during playback, turn **Onscreen Display (OSD) OFF** or **ON**.

OFF

ON (Default)



## LED STATUS INDICATOR LIGHTS

Keep all four **Status Indicator Lights** active, only two active (front and back) or turn **OFF** all lights.

4 (Default)

2

OFF



## SOUND INDICATOR

You can adjust volume or turn **OFF** the **Sound Indicator**.

100% (Default)

70%

OFF

---

## SET UP

---



**MANUAL**

### MANUAL POWER OFF

The HERO3 can be configured to automatically power **OFF** after a specific period of inactivity (when no **Videos** or **Photos** are being taken and no buttons have been pressed).

---

MANUAL (Default)

---

60sec

---

120sec

---

300sec

















---



## MONTH / DAY / YEAR / TIME

Set the HERO3 clock to ensure **Video** and **Photo** files are saved with the correct date and time.

### To change Month/Day/Year/Time:

1. Verify the camera is in **Settings** mode. If the **Settings**  icon on your camera's LCD screen is not showing, press  repeatedly until it appears.
2. Press  to enter  menu.
3. Use  to cycle through **Settings** to locate  SET UP.
4. Press  to enter **Set Up**.
5. Use  to locate .
6. Press  to enter **Month/Day/Year/Time** sub-menu; **Month (MM)** will be highlighted.
7. Press  to access the list of months (**1** to **12**).
8. Use  to cycle through list until desired selection is highlighted.
9. Press  to select.
10. To advance to the next option, press .
11. Repeat steps 7, 8 and 9 to make selections for day (**DD**), year (**YY**), hour (**HH**) and minutes (**MM**).
12. To exit, hold down  for two seconds or cycle through to **EXIT** and press .

**Note:** *If the battery is removed from the camera for an extended period of time **Month/Day/Year/Time** will need to be set again.*

---

## SET UP

---

**EXIT** EXIT

From the **EXIT** screen, press **S** to exit the **Set Up** menu.

**PRO  
TIP:**

If at any time you wish to exit from the **SET UP** menu, press and hold **S** for two seconds.






## WIRELESS CONTROLS

The built-in Wi-Fi allows your HERO3 camera to connect to the Wi-Fi Remote and smartphone/tablet via the GoPro App.

### To turn Wi-Fi ON/OFF via the Wi-Fi button:












Press and hold  until blue lights flash. When turning **Wi-Fi ON** the Wi-Fi mode will be set to the most recently used mode.

### PAIRING YOUR HERO3 WITH THE WI-FI REMOTE

Before you can use the Wi-Fi Remote to control your HERO3 for the first time, you must pair the two devices.

First, ensure both camera and remote are powered **OFF**.









#### On the camera:

1. Press  to power **ON** your HERO3 .
2. Press  to turn **ON** the **Wi-Fi**, then press  again to access the  menu.
3. Press  to enter the  menu.
4. Press  to cycle to **Wi-Fi RC**, then press  to select it.
5. Press  to cycle to **NEW**, then press  to select it.
6. You will see .



## WIRELESS CONTROLS (CONTINUED)

### On the Wi-Fi Remote:









1. While holding down , press and release  once to power the remote **ON** into pairing mode.
2. When you see  on the remote's screen, you can release .
3.  will appear on both screens once the devices have paired.
4. The remote will now ask if you want to **CONNECT ANOTHER?** camera.
  - a. If yes, press  to select **YES**, then repeat the pairing process from the beginning.
  - b. If no, press  to cycle to **NO**, then press  to select it.

The remote's LCD screen will mirror the camera's LCD screen. You can now use the remote to control your camera.


### USING YOUR HERO3 WITH THE WI-FI REMOTE

Once you have paired your camera with the Wi-Fi Remote, follow these steps the next time you want to use the remote to control your camera. (You only need to pair the camera and remote once).

### On the camera:


1. Press  to power **ON** your HERO3.
2. Press  to turn **ON** the Wi-Fi, then press  again to access the  menu.
3. Press  to enter the  menu.
4. Press  to cycle to **Wi-Fi RC**, then press  to select it.

5. Press **S** to select **CURRENT**.

6. You will see .

### On the remote:

1. Press  to power **ON** the remote.

2. You will see  on the remote's screen.

3.  will appear once camera and remote are connected.

The remote's LCD screen will mirror the camera's LCD screen. You can now use the remote to control your camera.

### GOPRO APP (FREE)

The GoPro App lets you control your camera remotely using a smartphone or tablet. Features include full control of camera and settings, live video preview on your smartphone or tablet for easy shot framing and more. Download the GoPro App for free at the Apple App Store and Google Play.

#### PRO TIP:

Before you hit **S**, see what your HERO3 camera sees by viewing it on your smartphone or tablet's screen.

▶ See [gopro.com](http://gopro.com) for more information.

## STORAGE/MICROSD CARDS

The HERO3 camera is compatible with **2GB, 4GB, 8GB, 16GB, 32GB** and **64GB** capacity **microSD**, **microSDHC** and **microSDXC** memory cards. While all speed class ratings are compatible, GoPro requires using an SD card with Speed Class Rating 10 or higher speed when recording in **Protune** mode, or when using the **0.5 Time Lapse** setting. GoPro recommends using brand name memory cards for maximum reliability in high-vibration activities.

### To insert SD card:



1. Slide memory card into card slot with label facing front of camera.
2. The card will click into place when fully inserted.

### To remove SD card:



1. Place fingernail against edge of memory card and lightly press further into camera.
2. Card will spring out far enough to be removed.

### PRO TIP:

Use care when handling memory cards. Avoid liquids, dust and debris. As a precaution, turn off the camera before inserting or removing the card. Check manufacturer guidelines regarding use in acceptable temperature ranges.

► See **PROTUNE** for more information.

## SYSTEM REQUIREMENTS

The HERO3 camera is compatible with Microsoft® XP (Service Pack 2 or later) and Mac OS X 10.4.11 or later.

<b>WINDOWS</b>	<b>MAC</b>
Windows XP (Service Pack 2 or later) or Vista	Mac OS® X 10.4.11 or later
3.2GHz Pentium 4 or faster	2.0GHz Intel Core Duo or faster
DirectX 9.0c or later	
Minimum 1GB of system RAM	Minimum 1GB of system RAM
Video card with minimum 256MB of RAM	Video card with minimum 128MB of RAM

**PRO  
TIP:**

Want to see your footage and stills on the big screen? Plug your HERO3 directly into a TV/HDTV with GoPro's Micro HDMI cable or USB cable (optional accessories).


---

# TRANSFERRING FILES


---

## TO TRANSFER VIDEO AND PHOTO FILES TO A COMPUTER

### On a PC:

1. Connect the camera to the computer using included USB cable.
2. Press  to turn **ON** the camera.
3. Double click “My Computer” and locate “Removable Disk”.
4. If “Removable Disk” is not showing, close “My Computer” folder and reopen it. The “Removable Disk” icon should appear.
5. Double click “Removable Disk” icon.
6. Double click “DCIM” folder icon.
7. Double click “100GOPRO” icon to view all **Photo** and **Video** files.
8. Copy/move files to the computer or external hard drive.

### On a Mac:

1. Connect the camera to Mac using included USB cable.
2. Press  to turn **ON** the camera.
3. The Mac recognizes the camera as an external hard drive. Double click icon for external drive to access files.
4. Copy/move files to computer or external hard drive.











**IMPORTANT TIP FOR MAC USERS:** *When deleting files from the memory card, empty the trash before removing the memory card or unplugging the camera.*

## TO VIEW VIDEOS AND PHOTOS

**Videos** and **Photos** can be viewed on a TV/HDTV or the LCD Touch BacPac (optional accessory).

### PLAYBACK ON TV/HDTV

#### To browse Videos and Photos:

1. Plug the camera into a TV/HDTV with a **Micro HDMI** or a **mini-USB** to a **Composite Cable** (optional accessories).
2. Turn camera **ON**.
3. On your camera press  to cycle to . Press .
4. HERO3 displays thumbnail previews of all **Videos** and **Photos** on the SD card. **Photo** sets taken in **Continuous Photo**, **Photo Burst** and **Time Lapse** display the first **Photo** in a series.
5. While in thumbnail preview use  to cycle through thumbnails. Press  to view.
6. Use  and  to navigate backward and forward to see more media files on your memory card.
7. Highlight desired file to view and press .
8. Depending on whether you are viewing **Videos** or **Photos**, different control options will appear. Use the  and  buttons to navigate.

**Note:** **Photo Burst** and **Time Lapse** files will display the first **Photo** in the series. To view all **Photos** in a series, use  to select **VIEW** and press .

---

# PLAYBACK

---

## **PLAYBACK ON LCD TOUCH BACPAC**

Playback using the LCD Touch BacPac follows a similar process/procedure as described with a few slight variations.

▶ See the LCD Touch BacPac User Manual for more information.




## CHARGING BATTERY

The battery icon displayed in the camera's LCD will blink when the battery drops below 10%. If recording is occurring when battery reaches 0%, the camera will save the file and power **OFF**.

### To charge the battery:

1. Connect the camera to a computer or USB power supply (such as the GoPro Wall Charger or GoPro Auto Charger).
2. The red **Status Indicator Light** remains **ON** while the battery is charging.
3. The red **Status Indicator Light** will turn **OFF** when the battery is fully charged.

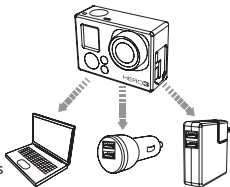

The battery will charge to 80% in one hour and 100% in two hours when using GoPro's 1000mAh USB-compatible Wall or Auto Charger. Other chargers may charge at only half this rate.

No damage will occur to the camera or the battery if used together prior to full charge. Spare batteries and additional charging accessories are available at [gopro.com](http://gopro.com).

---

## BATTERY LIFE

---



### USING THE CAMERA WHILE CHARGING

You can charge the camera's battery while recording **Video** or taking **Photos**. Simply plug the camera into a GoPro-specific auto, wall or phone charger to charge the HERO3 camera while recording **Video** or **Photos**. It is best to use GoPro's 1AMP (1000mAh) Wall or Auto Charger for maximum charging performance while the camera is in use. Performance of non-GoPro chargers cannot be guaranteed.

### REMOVING THE BATTERY FROM THE CAMERA

The HERO3 battery is designed to have a tight fit to maximize reliability in high-vibration activities.

#### To remove the battery:

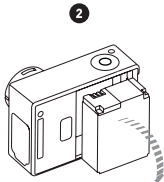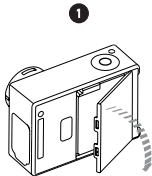

1. Remove the battery door by placing your thumb in the indentation in the battery door (on the back of the camera) and sliding it to the left.
2. Allow the door to pop out. Grasp the battery pull-tab and remove from the camera.

# IMPORTANT WARNING MESSAGES

## MICROSD CARD MESSAGES

<b>NO SD</b>	No card present. The camera requires a <b>microSD</b> , <b>microSDHC</b> or <b>microSDXC</b> card to record <b>Video</b> or take <b>Photos</b> .
<b>SD FULL</b>	Card is full. Delete files or swap card.
<b>SD ERROR</b>	Camera unable to access card.

## FILE REPAIR ICON ON THE LCD



If you see the **File Repair** icon on the LCD screen, your **Video** file was corrupted during recording. Press any button and the camera will repair the file.

## TEMPERATURE WARNING ICON ON THE LCD




The **Temperature Warning** icon will appear on the LCD when the camera has become too hot and needs to cool down. Simply let it sit and cool before attempting to use it again. Your camera will not allow itself to overheat—do not worry, no damage has occurred.

# CAMERA ASSEMBLY

## ASSEMBLING THE CAMERA

The HERO3 camera housing is waterproof to 197'/60m and is constructed of polycarbonate and stainless steel for ultimate durability. The HERO3 has a new improved latch closure that offers one hand open-and-close functionality and locking.



### To place the HERO3 camera into the housing:


1. Place camera in housing.
2. Position the backdoor into place.
3. Lift the latch arm into upright position allowing the hinged arm to hang downward.
4. Hook grooved portion of hinged arm to grooved top of the backdoor.
5. Use one finger to push down the latch arm to snap into place.

### To remove the HERO3 camera from the housing:

1. Grip the housing with left hand.
2. Using right hand, place thumb to left side of arrow and index finger just below latch arm.
3. Pinch fingers together, sliding arrow to the right.
4. Use fingertips to pull upward, allowing latch arm to swing to fully upright position.
5. Lift hinged arm over the housing and remove the HERO3.


To close properly, be sure grooved sections of the latch arm and the backdoor are hooked.

The HERO3 housing comes with two types of backdoors—Skeleton and Standard.



### **Skeleton Backdoor**

The Skeleton Backdoor (non-waterproof) provides better sound quality by allowing more sound to reach the camera's microphone. It also reduces wind noise at speeds up to 100mph when mounted on helmets, motorcycles, bikes and other fast-moving vehicles. Use this backdoor only when sand, excessive dirt/dust and water damage is not a risk. This backdoor is also recommended for use inside vehicles.



### **Standard Backdoor**

The Standard Backdoor makes the housing waterproof to 197'/60m. Use this door when you need to protect the camera from water and other environmental hazards.


**PRO  
TIP:**

Apply RAIN-X or a similar anti-beading solution to the housing lens to prevent waterspots from forming when using your camera in rain or water. When RAIN-X is not available, periodically licking your lens is a good backup solution. Trust us, this works.

## SWAPPING HOUSING DOORS

Your HERO3 camera housing comes with two types of backdoors—Standard and Skeleton (non-waterproof).

### To change backdoor:

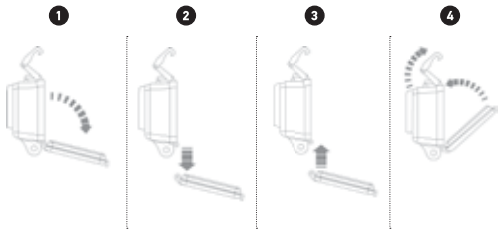

1. Open the backdoor of the housing so that it is hanging downwards.
2. Pull downwards on the backdoor until it snaps free from the hinge.
3. Line up replacement backdoor into the hinge opening.
4. Push upwards on the backdoor until it clicks into place.

### PREVENTING WATER DAMAGE TO YOUR CAMERA

The rubber seal that lines the camera housing forms a waterproof barrier that protects your HERO3 in wet and underwater conditions. Keep the camera housing's rubber seal clean; a single hair or grain of sand can cause a leak.


After every use in salt water you will need to rinse the outside of the housing with non-salt water and dry. Not doing this can eventually cause corrosion of the hinge pin and salt buildup in the seal, which can cause failure.

To clean the seal, rinse in fresh water and shake dry (drying with a cloth may cause lint to compromise the seal). Re-install the seal into the grooves in the backdoor of the housing.

**WARNING:** *Failure to follow these steps each time you use your HERO3 can result in leaks that may damage or destroy your camera. Your warranty does not cover water damage resulting from user error.*


## ATTACHING YOUR CAMERA TO MOUNTS

To attach your HERO3 camera to a mount, you will need an attachment buckle, thumb screw or hardware depending on the mount you are using. For more information on mounts, visit [gopro.com/support](http://gopro.com/support).

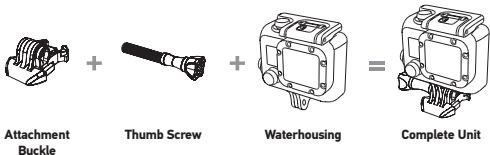

## USING CURVED OR FLAT ADHESIVE MOUNTS

The curved and flat adhesive mounts make it easy to attach the camera to curved and flat surfaces of helmets, vehicles and gear. With the attachment buckle the assembled camera housing can be clicked **ON/OFF** the secured adhesive mounts.



**Flat Adhesive Mount**



**Curved Adhesive Mount**



---

# HANDLING THE WI-FI REMOTE

---

## **CAUTION**

Failure to follow these safety instructions could result in damage to the Wi-Fi Remote or other property.

## **HANDLING**

The Wi-Fi Remote contains sensitive components. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint or insert foreign objects into either product. Do not use the Wi-Fi Remote if it has been damaged—for example, if the product is cracked, punctured or damaged by water.

## **KEEPING THE WI-FI REMOTE'S LCD CLEAN**

Clean LCD screen immediately if it comes into contact with any contaminants that may cause stains, such as ink, dyes, makeup, dirt, food, oils and lotions. To clean the LCD, use a soft, slightly damp, lint-free cloth. Avoid getting moisture in openings. Don't use window cleaners, household cleaners, aerosol sprays, solvents, alcohol, ammonia or abrasives to clean LCD.

## **WATER RESISTANCE**

Do not submerge the Wi-Fi Remote in more than 10ft / 3m of water. Do not attempt to dry the Wi-Fi Remote with an external heat source, such as a microwave oven or hair dryer. Damage to the Wi-Fi Remote caused by excessive water pressure is not covered under warranty.

## **USING CONNECTORS AND PORTS**

Never force a connector into a port. Check for obstructions on the port. If the connector and port don't join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

## **KEEPING THE WI-FI REMOTE WITHIN ACCEPTABLE TEMPERATURES**

The Wi-Fi Remote is designed to be operated in temperatures between 0° C and 40° C and stored in temperatures between 0° C and 70° C. Extreme temperatures may temporarily affect battery life, or affect the functionality of the Wi-Fi Remote. Avoid dramatic changes in temperature or humidity when using the Wi-Fi Remote as condensation may form on or within the product. When you're using the Wi-Fi Remote or charging the battery, it is normal for the product to get warm. The exterior of the product functions as a cooling surface that transfers heat from inside the unit to the cooler air outside.

## **USE WITH OTHER ELECTRONIC DEVICES**

Users of digital transceivers (avalanche beacons) should consult with their user manuals regarding use of GoPro cameras and other GPS or electronic devices when engaged in the avalanche beacon search mode in order to limit potential interference.

# CAMERA ASSEMBLY

## ATTACHING ADHESIVE MOUNTS

### PRO TIPS:

Apply to clean surface only. Wax, oil, dirt or other debris will reduce adhesion, which can result in a weak bond and risk of losing camera should connection fail.

Attach mount in room temperature conditions. Mount's adhesive will not bond properly if applied in cold or damp environments to cold or damp surfaces, or if the surface is not room temperature.

Adhesive mounts should only be mounted to smooth surfaces; porous or textured surfaces will not enable a proper bond. When applying mount, firmly press into place and ensure full contact over entire surface.

For best results, attach the mount 24 hours prior to use.

► See [gopro.com/support](http://gopro.com/support) for more information on mounts.

## Locking Plug



Using the HERO3 in high impact sports such as surfing or skiing where significant impact may occur? Use the special locking plug which securely locks the attachment buckle fingers into place--helping prevent accidental housing release from the mount. The circular ring fits over the thumbscrew and acts as a leash to prevent dropping or losing the locking plug.

GoPro is dedicated to providing the best possible service. To reach the GoPro Customer Support Team, visit **[gopro.com/support](https://gopro.com/support)**.