


ML6300

OKI
PRINTING SOLUTIONS

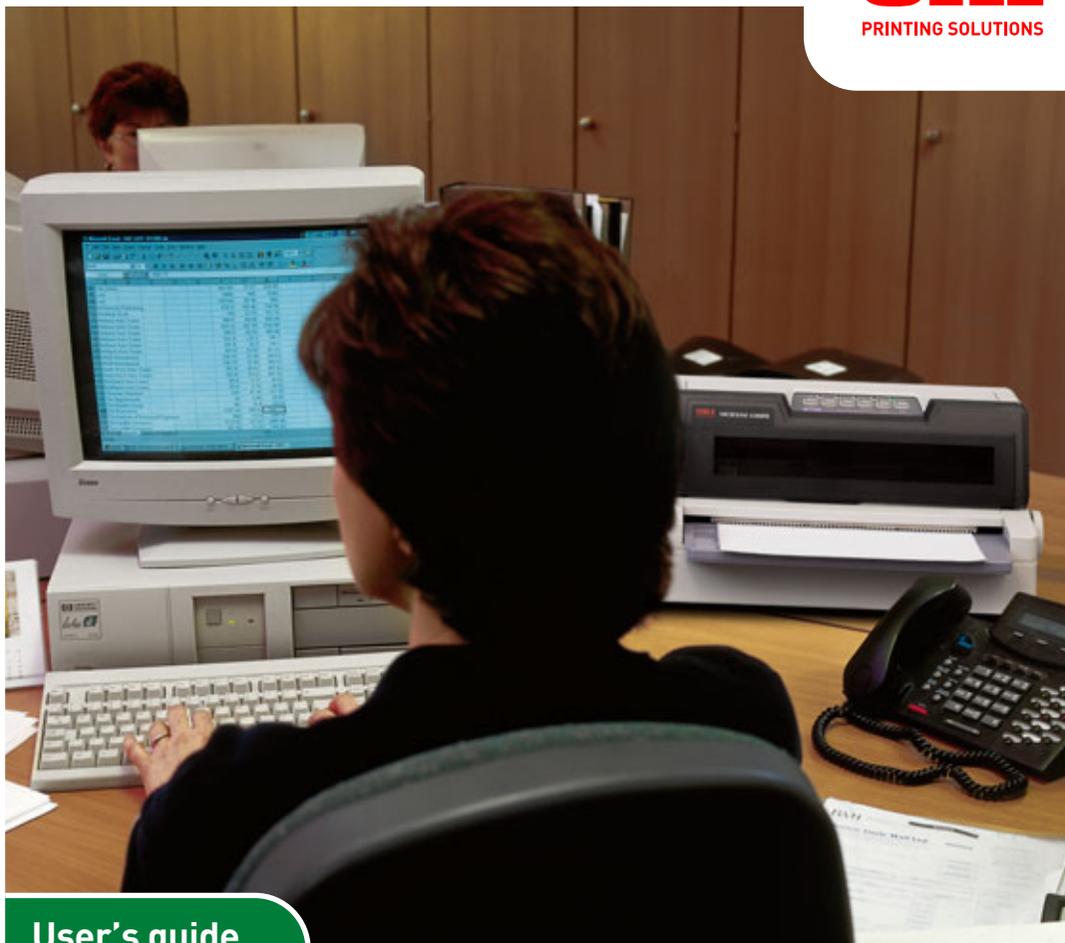

User's guide

ML6300FB



PREFACE

Every effort has been made to ensure that the information in this document is complete, accurate, and up-to-date. Oki Printing Solutions assumes no responsibility for the results of errors beyond its control. Oki Printing Solutions also cannot guarantee that changes in software and equipment made by other manufacturers and referred to in this guide will not affect the applicability of the information in it. Mention of software products manufactured by other companies does not necessarily constitute endorsement by Oki Printing Solutions.

While all reasonable efforts have been made to make this document as accurate and helpful as possible, we make no warranty of any kind, expressed or implied, as to the accuracy or completeness of the information contained herein.

The most up-to-date drivers and manuals are available from the Oki Printing Solutions web site:

<http://www.okiprintingsolutions.com>

Copyright © 2006 Oki Printing Solutions.

Oki, OKI Printing Solutions and Microline are registered trademarks of Oki Electric Industry Company, Ltd.

ENERGY STAR is a trademark of the United States Environmental Protection Agency.

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corporation.

Other product names and brand names are registered trademarks or trademarks of their proprietors.



As an ENERGY STAR Program Participant, the manufacturer has determined that this product meets the ENERGY STAR guidelines for energy efficiency.



This product complies with the requirements of the Council Directives 89/336/EEC (EMC) and 73/23/EEC (LVD) as amended where applicable on the approximation of the laws of the member states relating to electromagnetic compatibility and low voltage.



CONTENTS

| | |
|--|-----------|
| Preface | 2 |
| Notes, cautions and warnings | 5 |
| Introduction | 6 |
| About this guide. | 6 |
| On-line usage | 7 |
| Printing pages | 8 |
| Getting started | 9 |
| Retaining packing materials. | 9 |
| Identifying component parts | 9 |
| Front view. | 9 |
| Rear view | 11 |
| Locating your printer | 12 |
| Powering on your printer. | 13 |
| Producing a test print | 14 |
| Connecting to a computer | 15 |
| Interconnecting printer and computer. | 15 |
| Interfaces | 15 |
| Interconnection | 16 |
| Installing the printer driver | 16 |
| Printing a test page | 16 |
| Printing from a computer | 17 |
| Paper handling | 18 |
| Loading cut sheet paper | 18 |
| Ejecting cut sheet paper | 20 |
| Loading continuous forms | 20 |
| Setting up continuous forms | 20 |
| Feeding continuous forms | 21 |
| Tearing off continuous forms | 24 |
| Aligning the tear-off perforations | 24 |
| Removing continuous forms | 25 |
| Setting the Paper Thickness lever. | 26 |
| Operating instructions | 28 |
| Control panel | 28 |
| Indicators | 29 |
| Button switches | 30 |
| Setting menu values. | 32 |
| Confirming current settings. | 32 |
| Menu setting | 33 |
| Menu items and settings | 33 |

| | |
|---|-----------|
| Initialising menu settings | 40 |
| Adjusting TOF position | 41 |
| Quick printer settings | 42 |
| Printer impact mode. | 42 |
| Troubleshooting | 44 |
| Clearing paper jams | 44 |
| Cut sheet paper jammed in printer | 44 |
| Continuous forms jammed in printer | 46 |
| Responding to alarm conditions | 47 |
| Responding to general problems | 48 |
| Cleaning your printer | 54 |
| Printer exterior | 54 |
| Printer interior | 54 |
| Consumables and accessories | 56 |
| Consumables | 56 |
| Changing a ribbon cartridge | 56 |
| Consumable order information | 61 |
| Accessories | 61 |
| Accessory order information | 61 |
| Specifications | 62 |
| Appendix A – Rear Cover removal | 65 |
| Removal | 65 |
| Refitting | 66 |
| Index | 67 |
| Oki Printing Solutions contact details | 68 |

NOTES, CAUTIONS AND WARNINGS

NOTE

A note provides additional information to supplement the main text.

CAUTION!

A caution provides additional information which, if ignored, may result in equipment malfunction or damage.

WARNING!

A warning provides additional information which, if ignored, may result in a risk of personal injury.

INTRODUCTION

Congratulations on purchasing this Oki Printing Solutions printer!

The ML6300FB is designed to provide highly reliable letter quality printing and high resolution graphics for the desktop/office printing environment. It combines state-of-the-art, 24-pin, serial impact dot matrix printing technology with advanced materials and superior construction to provide high performance and versatility in a desktop sized unit. Careful attention to ergonomics and application needs provides user friendly operation for operators of varying technical capabilities.

ABOUT THIS GUIDE

NOTE

Images used in this manual may include optional features that your printer does not have installed.

This manual is your user's guide (check the web site, www.okiprintingsolutions.com, for the most up-to-date version) for your printer and forms part of the overall user support listed below:

- > **Installation Safety booklet:** provides information as to safe use of the printer.

This is a paper document that is packaged with the printer and should be read before setting up your printer.

- > **Set-up guide:** to describe how to unpack, connect and turn on your printer.

This is a paper document that is packaged with the printer.

- > This **User's Guide:** to help you to become familiar with your printer and make the best use of its many features. Also included are guidelines for troubleshooting and maintenance to ensure that it performs at its best. Additionally, information is provided for adding optional accessories as your printing needs evolve.

This is an electronic document stored on the manuals CD.

- > **Technical Reference Guide:** to provide detailed technical information for programmers and more technical users.

This is an electronic document available on the web site www.okiprintingsolutions.com.

- > **Network Configuration Guide:** to provide detailed technical information for network administrators to configure the optional accessory network interface.

This is an electronic document stored on the CD that accompanies the network interface card optional accessory.

- > **Installation Guides:** accompany consumable items and optional accessories to describe how to install them.

These are paper documents that are packaged with the consumables and optional accessories.

- > **On-line Help:** on-line information accessible from the printer driver and utility software.

ON-LINE USAGE

This guide is intended to be read on screen using an Adobe Acrobat Reader. Use the navigation and viewing tools provided in Acrobat.


You can access specific information in two ways:

- > In the list of bookmarks down the left hand side of your screen, click on the topic of interest to jump to the required topic. (If the bookmarks are not available, use the ["Contents" on page 3.](#))
- > In the list of bookmarks, click on Index to jump to the Index. (If the bookmarks are not available, use the ["Contents" on page 3.](#)) Find the term of interest in the alphabetically arranged index and click on the associated page number to jump to the page containing the term.


PRINTING PAGES

The whole manual, individual pages, or sections may be printed. The procedure is:

1. From the toolbar, select [File], then [Print] (or press the Ctrl + P keys).
2. Choose which pages you wish to print:
 - (a) [All pages], (1), for the entire manual.
 - (b) [Current page], (2), for the page at which you are looking.

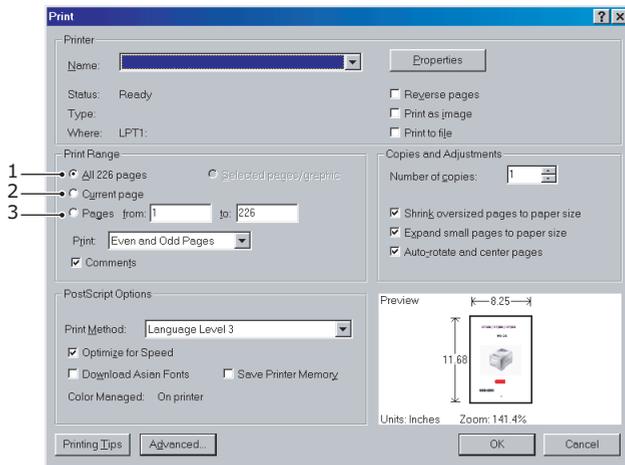

- (c) [Pages from] and [to], (3), for the range of pages you specify by entering their page numbers.

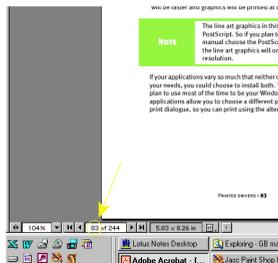

3. Click on [OK].

GETTING STARTED

WARNING!

If you have not already done so, familiarise yourself with the content of the Installation Safety booklet supplied with your printer.


RETAINING PACKING MATERIALS

After setting up your printer according to the instructions in the Set-up Guide, retain your packing materials and container in case you ever need to ship or transport your printer.

IDENTIFYING COMPONENT PARTS


The main parts of your printer are identified and briefly explained below.

FRONT VIEW

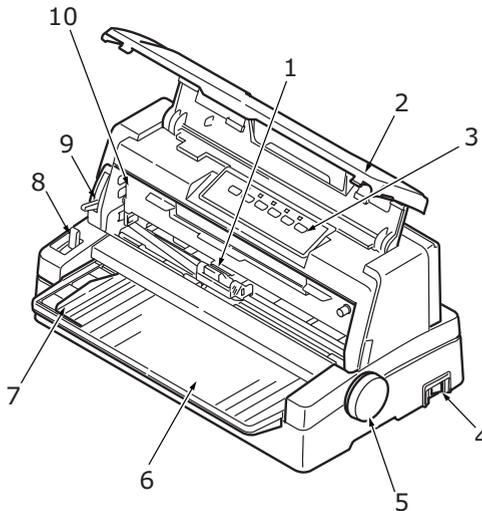


1. Print Head: prints the characters on the paper.

2. Top Cover: open and close for access, for example when changing a ribbon cartridge. Keep closed for noise reduction.
3. Control Panel: contains button switches and indicators (described in detail later) that allow you to operate the printer.

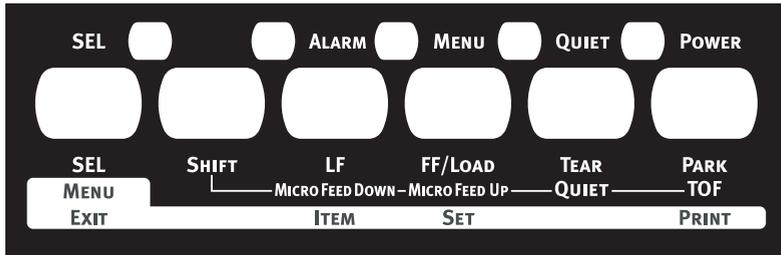

4. Power Switch: to turn the printer power ON/OFF.
5. Platen Knob: turn to move or eject the paper.
6. Paper Tray: to hold cut sheet paper for use by the printer (one sheet at a time).
7. Paper Guide: can be adjusted as required to locate the left edge of cut sheet paper.
8. Paper Type Lever: set according to the type of paper used – cut sheet or continuous forms.
9. Paper Thickness Lever: set according to the thickness of the paper. There is also a setting to facilitate ribbon replacement.
10. Ribbon Cartridge: holds the printer ribbon.


REAR VIEW

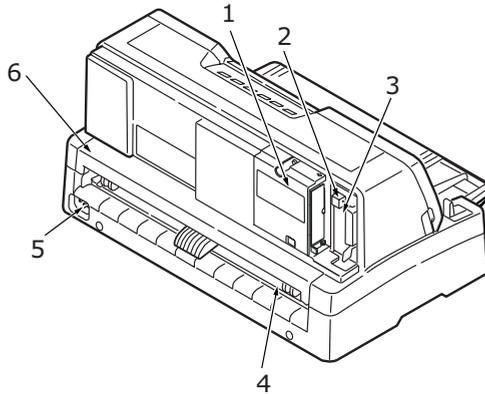

- 1.** Optional connector position: connect to optional accessory serial interface card or 100BASE-TX/10BASE-T network card.
- 2.** USB connector: connect to USB interface cable.
- 3.** Parallel connector: connect to parallel interface connector.
- 4.** Pin Tractor: to load and feed continuous forms.
- 5.** Power connector: connect to printer power cable.
- 6.** Rear Cover: open and close for access, for example when loading continuous forms. (To remove completely, see ["Appendix A – Rear Cover removal" on page 65.](#))

LOCATING YOUR PRINTER


- > Select a firm, solid surface on which to site your printer.
- > Allow enough space around your printer (e.g. at least 60 cm from any wall) for easy access to the Platen Knob and the various paper feed paths.

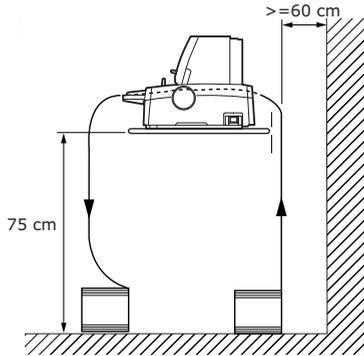


- > Make sure a grounded power outlet is available nearby.

POWERING ON YOUR PRINTER

1. Ensure that your printer Power Switch is set to OFF.

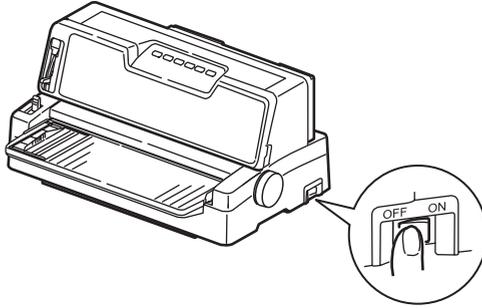

2. Connect the power cable connector (1) to the power connector (2) on the printer.

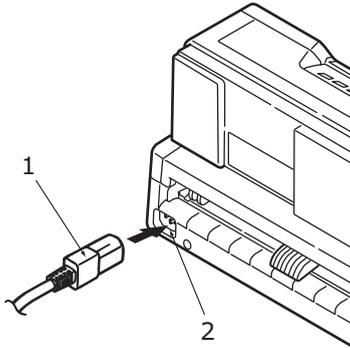

3. Connect the power cable to a 220/240 V AC power outlet and switch on the outlet power.
4. Turn the printer Power Switch to ON.



5. Check that the POWER indicator on the control panel illuminates.

PRODUCING A TEST PRINT

To check that your printer is operational, produce a test print on a sheet of 80 gsm A4 paper (for example) as follows:

CAUTION!

Allow at least 5 seconds between turning the printer ON after turning it OFF. A shorter time interval between turning ON/OFF operations may cause printer power failure.

Do not turn the printer OFF while it is printing as this may result in damage to the print head.

1. Turn the printer Power Switch to OFF.
2. Set the Paper Type Lever to cut sheet and set the Paper Thickness Lever to position 1.
3. Press and hold the LF button and turn the Power Switch to ON.
4. With the long side of the paper against the paper guide, insert the paper carefully into the printer. The printer will automatically grip the paper and start the test print.

NOTE

If required, you can pause the test print by pressing the SEL button and then resume the test print by again pressing the SEL button.

5. When the test print has completed, the paper is automatically ejected.

NOTE

If you want to abort the test print for any reason, press the SEL button followed by the PARK button to eject the paper and then turn the printer Power Switch to OFF.

CONNECTING TO A COMPUTER

In this section you will interconnect your printer and computer, install the printer driver in your computer and print a test page.

INTERCONNECTING PRINTER AND COMPUTER

INTERFACES

Your printer is equipped with two data interfaces:

CAUTION!

Do not use both parallel and USB printing together.

- > Parallel: for direct connection to a PC. This port requires a bi-directional (IEEE 1284 compliant) parallel cable.
- > USB: for connection to a PC running Windows 98 or above. This port requires a shielded cable less than 5m long conforming to USB version 2.0.

NOTE

Interface cables are not supplied with your printer.

The following interfaces are available as optional accessories and are described in their accompanying installation documentation:

- > RS232 Serial interface
- > 100BASE-TX/10BASE-T network connection


NOTE

Refer to the Network Configuration Guide for setting up the network connection.

It is not recommended that you use either the parallel or USB port when the RS-232C or OL7120e option is installed in this product.

INTERCONNECTION

1. Ensure that both printer and computer are turned OFF.
2. Connect the required interface cable, USB (1) or parallel (2), to the printer and then to the computer (3).

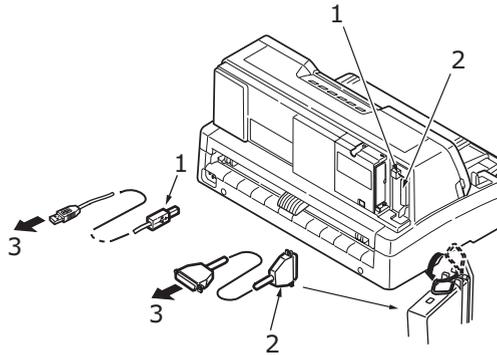

3. Turn ON the printer and then turn ON the computer.

INSTALLING THE PRINTER DRIVER

Insert the Drivers CD into your computer and follow the on-screen instructions to install the printer driver for use with your printer.

PRINTING A TEST PAGE

As an example, using Windows XP:

1. Use Start > Printers and Faxes to show the Printers and Faxes window.
2. Highlight the driver for your printer.
3. Use File > Properties to show the Properties window.
4. On the General tab, click the Print Test Page button.
5. Ensure that a test page has printed, verifying your printer – computer setup.

PRINTING FROM A COMPUTER

When printing to your printer from, for example, a Windows application on your computer, make your printing selections from the driver windows that appear on screen. These driver windows have been designed to be easy to use and intuitive while supplementary on-line help is available by clicking each window Help button .

PAPER HANDLING

This section describes how to use cut sheet paper and continuous forms in your printer.


LOADING CUT SHEET PAPER

1. Ensure that the printer is turned ON.


NOTE

If there are any continuous forms in the printer, eject them as described in ["Removing continuous forms" on page 25](#).


2. Ensure that the Pin Tractor covers (1) are closed to avoid the possibility of paper jams.

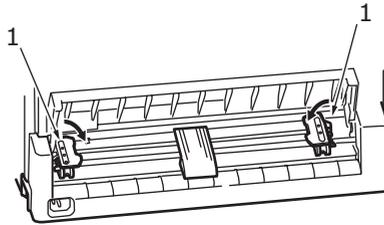

3. Ensure the Paper Type Lever (1) is set to Cut Sheet. 

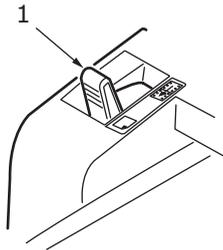

4. Set the left margin of the paper by adjusting the Paper Guide (1) along the scale (2) relative to the start of printed line marker arrow (3).

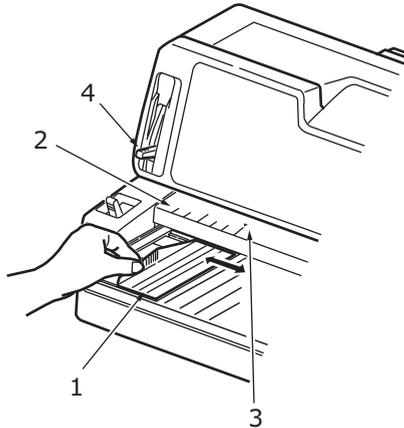


5. Adjust the Paper Thickness Lever (4) to suit the paper. See ["Setting the Paper Thickness lever" on page 26.](#)

NOTE

If the Paper Thickness Lever setting does not match the paper being used, paper feeding and printing may not work properly.

6. With the printing side upwards and the left edge aligned with the Paper Guide (1), carefully insert the paper on the Paper Tray (2) into the printer until it is gripped.

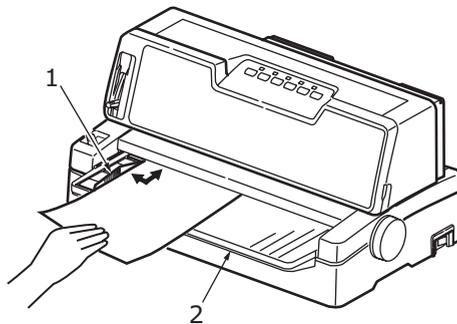

NOTE

Ensure that the paper is accurately aligned along the Paper Guide to avoid the possibility of skew printing.

When printing an envelope, do not fold up the flap. A flap aligned along the Paper Guide can lead to skew printing.

EJECTING CUT SHEET PAPER

When the printer reaches the end of the cut sheet page it automatically ejects the page. If required, add another sheet for the printer to continue printing from where it left off.

To eject a cut sheet left in the printer, carry out the following:

1. Press the SEL button to put the printer off-line.
2. Press the PARK button and the paper is ejected to the Paper Tray.


NOTE

Paper longer than A4 length (297 mm) may overlap and possibly fall off the Paper Tray.

LOADING CONTINUOUS FORMS

SETTING UP CONTINUOUS FORMS

To avoid paper feeding problems, carry out the following:

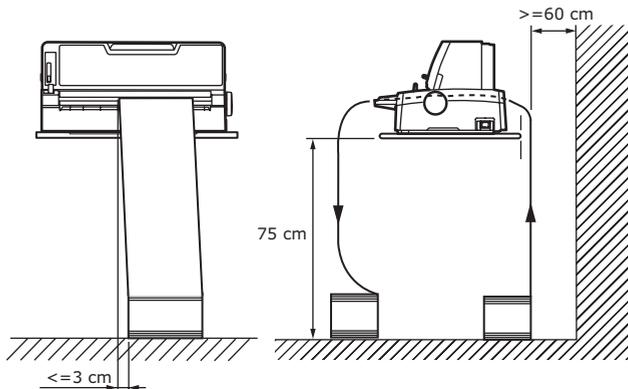

1. Check your printer is on a surface approximately 75 cm above the floor.

2. Position the continuous forms supply directly below the printer, no more than 3 cm left or right of the printer paper path.
3. Ensure the rear of the printer is close to and parallel with the edge of the surface and at least 60 cm from any wall.


FEEDING CONTINUOUS FORMS

1. Ensure that the printer is turned ON.

NOTE

If there is a cut sheet in the printer, eject it as described in "Ejecting cut sheet paper" on page 20.

2. Ensure the Paper Type Lever (1) is set to Continuous Forms. 

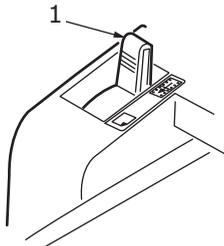


3. Adjust the Paper Thickness Lever to suit the paper. See ["Setting the Paper Thickness lever" on page 26.](#)

NOTE

If the Paper Thickness Lever setting does not match the paper being used, paper feeding and printing may not work properly.


4. Open the Rear Cover by gently pulling it out horizontally to the end of its travel then swinging it upwards until it locks into position.

- 5.** Lift the locking lever (1) of the left Pin Tractor and slide the Pin Tractor as required to adjust the paper position relative to the first horizontal character centre mark (2).

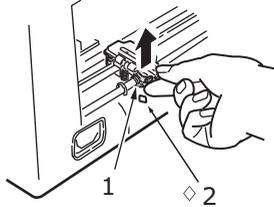


Press the locking lever back down to lock the Pin Tractor in the desired position.


- 6.** Lift the locking lever (1) of the right Pin Tractor and slide the Pin Tractor to the required position to accommodate the width of the continuous forms to be used. Move the rear paper guide (2) to midway between the left (3) and right (4) Pin Tractors.

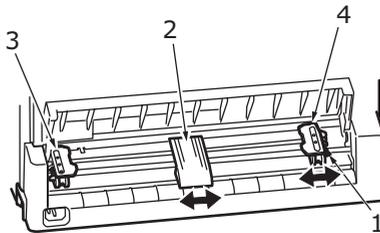

7. Open the left and right Pin Tractor covers (1) and feed the continuous forms in the direction of the arrows, locating the sprocket holes (2) in the forms onto the sprocket pins (3), then close the covers.

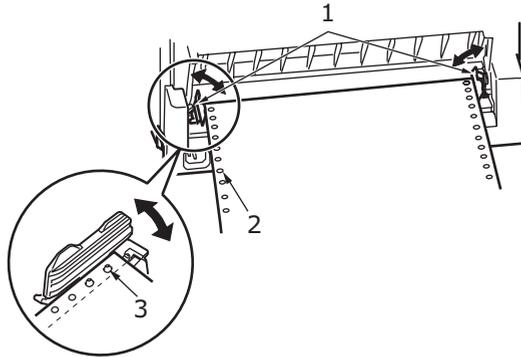

8. Adjust the right Pin Tractor (1) to accommodate the width of the continuous forms, taking care that the forms are held neither too loosely nor too tightly between the Pin Tractors. Press the locking lever (2) down to lock the right Pin Tractor in the desired position.

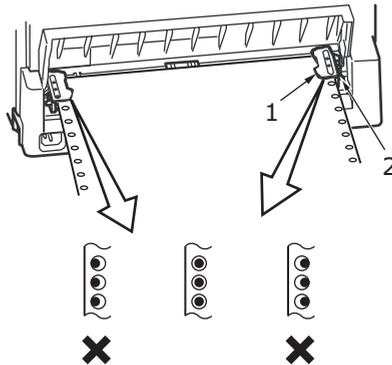


9. Close the Rear Cover by gently swinging it downwards to the horizontal and then pushing it inwards until it locks into position.

10. Press the FF/LOAD button. The continuous forms will be taken into the printer and positioned at the first line print position and the SEL indicator will illuminate.

TEARING OFF CONTINUOUS FORMS

1. With the SEL indicator illuminated, press the TEAR button to eject the continuous forms onto the Paper Tray.
2. Carefully tear off the forms along the tear-off perforations in the direction shown. Using excessive force may result in tearing at a position other than the tear-off perforations.

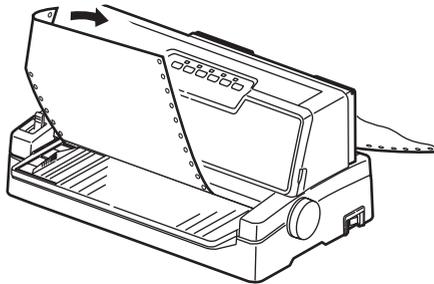


3. Press the TEAR button, FF/LOAD button or LF button to reposition the continuous forms in the printer back to the first line print position.

ALIGNING THE TEAR-OFF PERFORATIONS

If the tear-off perforations are not aligned with the paper cutter on the Top Cover, align them as follows:

1. With the SEL indicator illuminated, press and hold the TEAR button to move the tear-off perforations to the paper cutter on the Top Cover.

2. Check the position of the tear-off perforations (1) relative to the paper cutter (2). (Paper Tray (3) is shown for clarity.)

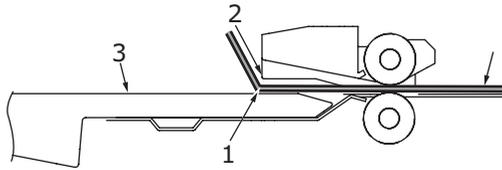

- (a) To advance the forms, hold down the TEAR button and press the FF/LOAD button.
- (b) To retract the forms, hold down the TEAR button and press the LF button.

NOTE

If a movement greater than $\pm 7/90$ in is specified, the QUIET indicator blinks and the above adjustment cannot be made.

3. Release the buttons after the tear-off perforations have been aligned with the paper cutter.

REMOVING CONTINUOUS FORMS


1. Tear off the continuous forms. See ["Tearing off continuous forms" on page 24.](#)
2. Press the SEL button to set the printer off-line and reposition the continuous forms in the printer.
3. Press the PARK button to move the front edge of the continuous forms backwards to the Pin Tractors.

NOTE

The ALARM indicator illuminates to indicate there is no paper present.

If sprocket holes of the last page of the forms disengage from the sprocket pins, do not attempt to eject the paper to avoid the possibility of a paper jam.

4. Open the Rear Cover by gently pulling it out horizontally to the end of its travel then swinging it upwards until it locks into position.
5. Lift the Pin Tractor covers (1) and remove the forms.

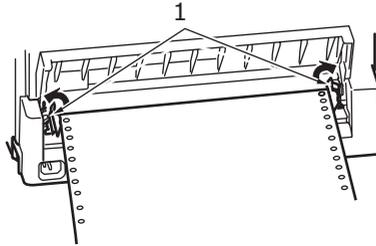

6. Close the Pin Tractor covers.
7. Close the Rear Cover by gently swinging it downwards to the horizontal and then pushing it inwards until it locks into position.

SETTING THE PAPER THICKNESS LEVER

There are 10 lever positions, the first 9 for printing purposes and the tenth to facilitate ribbon replacement.

Set the Paper Thickness lever for different paper types as follows:

| PAPER TYPE | LEVER POSITION | | | | |
|---|----------------|---|---|---|-----------|
| | 1 | 2 | 3 | 4 | 5 - 9 |
| Cut sheet paper | | | | | See below |
| 52 – 80 gsm | X | | | | |
| 81 – 127 gsm | | X | | | |
| 128 – 156 gsm | | X | | | |
| Envelope | | | | X | |
| Carbon paper or Pressure-sensitive paper (40 gsm) | | | | | See below |
| 2 part | | X | | | |
| 3 part | | X | | | |

| PAPER TYPE | LEVER POSITION | | | | |
|------------|----------------|---|---|---|-------|
| | 1 | 2 | 3 | 4 | 5 - 9 |
| 4 part | | | X | | |
| 5 part | | | X | | |
| 6 part | | | | X | |

Set the Paper Thickness lever for overall paper thickness as follows:

| OVERALL PAPER THICKNESS | LEVER POSITION |
|-------------------------|----------------|
| 0.06 - 0.12 mm | 1 |
| 0.13 - 0.21 mm | 2 |
| 0.22 - 0.30 mm | 3 |
| 0.31 - 0.39 mm | 4 |
| 0.40 - 0.48 mm | 5 |
| 0.49 - 0.57 mm | 6 |
| 0.58 - 0.66 mm | 7 |
| 0.67 - 0.75 mm | 8 |
| 0.76 - 0.84 mm | 9 |

NOTE

Printing with lever positions 5 - 9 is not guaranteed.

If the lever position does not suit the paper thickness, paper feeding and printing may not work properly.


Do not print bankbooks to avoid possible pin breakage/ribbon snagging.

Printing can be carried out with the lever position set to 4 for paper thickness up to 0.39 mm.

When lever positions 5-9 are selected, printing quality for carbon paper may decline resulting in illegible characters for example.

OPERATING INSTRUCTIONS

CONTROL PANEL

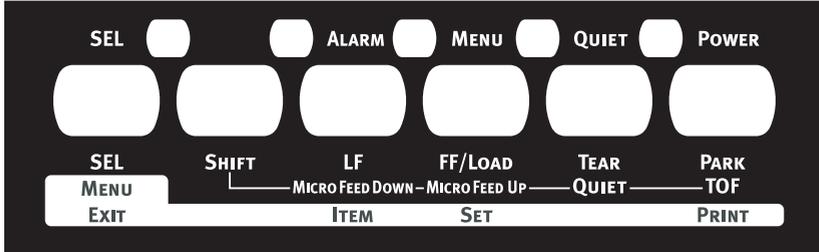

The status/alarm indicators and button switches on the control panel allow you to check printer status and control the printer.

INDICATORS

| INDICATOR | STATUS | MEANING |
|-------------------------------|----------|--|
| SEL | ON | Printer is on-line i.e. is available to print |
| | OFF | Printer is off-line i.e. is not available to print |
| | Flashing | When flashing together with the ALARM indicator, printing cannot be resumed at this stage. Turn the power OFF, verify that the carriage moves properly, then turn the power ON again. If the problem is still there after you turn the power ON again, contact your dealer. |
| ALARM | ON | Paper end status i.e. no paper present |
| | OFF | Paper present status |
| | Flashing | Paper jam alarm status |
| | | Media switch alarm status |
| | | When flashing together with the SEL indicator, printing cannot be resumed at this stage. Turn the power OFF, verify that the carriage moves properly, then turn the power ON again. If the problem is still there after you turn the power ON again, contact your dealer. |
| High temperature alarm status | | |
| MENU | ON | Menu printing mode |
| | OFF | Normal printing mode |
| | Flashing | High temperature indication |
| QUIET | ON | Quiet print mode |
| | OFF | Normal speed printing mode |
| | Flashing | High multipart printing mode |
| POWER | ON | Printer power is ON |
| | OFF | Printer power is OFF |
| | Flashing | Low power consumption mode |

BUTTON SWITCHES

| SWITCH | STATUS | FUNCTION |
|-----------|---|--|
| SEL | On-line | Sets the printer to off-line |
| | Off-line | Sets the printer to on-line and disalarms the printer |
| SHIFT | | Used only in conjunction with one of the following buttons: SEL, LF, FF/LOAD, PARK, TEAR described below. |
| LF | On-line | Feeds paper by one line. Holding the button down results in continuous line feeding. |
| | Off-line | Feeds paper by one line. Holding the button down results in continuous line feeding. |
| FF/LOAD | On-line and off-line Continuous Forms mode | Continuous form fed until first line of next page |
| | On-line and off-line Cut sheet manual mode | Ejects the cut sheet |
| TEAR | On-line Continuous Forms mode | Delivers the continuous form to the cut position. If the button is pressed again or data is received, the original form position is restored. |
| | On-line Cut sheet manual mode | Ineffective |
| | Off-line | Ineffective |
| PARK | Continuous Forms mode | If the continuous form is in position, press to retract the form to the Pin Tractors. (If the sprocket holes of the last page of the form disengage from the sprocket pins, do not attempt to eject the paper as a paper jam may result.) |
| SHIFT+SEL | | Enters menu mode |

| SWITCH | STATUS | FUNCTION |
|---------------|----------|---|
| SHIFT+LF | | Microfeed (0.14 mm step) down Hold this button combination down for continuous feeding or ejecting of paper. |
| SHIFT+FF/LOAD | | Microfeed (0.14 mm step) up Hold this button combination down for continuous feeding or ejecting of paper. |
| SHIFT+PARK | On-line | Ineffective |
| | Off-line | Saves the set paper start position (first line print position). |
| SHIFT+TEAR | On-line | Quieter print mode Each press of the button pair progresses the printer through Quieter print mode > High multipart print mode > Normal print mode |
| | Off-line | Ineffective |

SETTING MENU VALUES

The following information explains the printer settings and how you can change them. Printer items and their values are printed for reference.

CONFIRMING CURRENT SETTINGS

To print the current menu settings, use a cut sheet of A4 paper or continuous forms of width at least 254 mm. In this example, a sheet of A4 paper is used.

- 1.** Set the Paper Type lever to cut sheet mode.
- 2.** Carry out one of the following:
 - (a) If the printer power is OFF, while holding down the SEL button set the printer Power Switch to ON.
 - (b) If the printer power is ON, press the SHIFT and SEL buttons together.
- 3.** Place the cut sheet on the Paper Tray. The cut sheet is taken into the printer automatically and the printer prompts you to request a menu settings print.
- 4.** Press the PARK button and the printer prints out all the menu items currently selected and their corresponding settings.
- 5.** Exit or proceed to change menu settings:
 - (a) To exit menu settings confirmation, save the current settings and eject the paper, press the SHIFT and SEL buttons together.
 - (b) To change menu settings, see ["Menu setting" on page 33](#).

MENU SETTING

NOTE

Before changing menu settings, you may wish to print the current menu settings as in ["Confirming current settings"](#) on page 32.

Set menu item values (printed out for reference as you proceed) as follows:

1. Press LF (or SHIFT and LF together) to step forward (backward) through the menu items to the required item.
2. To change the setting for a selected item, press FF/LOAD (or SHIFT and FF/LOAD together) to step forward (backward) through the setting values to the required setting.
3. Repeat steps 1 and 2 as required to change settings for other items.
4. To exit menu setting, press SHIFT and SEL together to save the new settings and exit menu setting mode.

NOTE

Switching the printer OFF does not save the new settings.

MENU ITEMS AND SETTINGS

In the menu settings tables below, factory default settings are shown emboldened.

| ITEM | FUNCTION | SETTING |
|----------------|--|---|
| Emulation Mode | Select EPSON LQ mode, IBM PPR mode, or IBM X24 AGM mode. | IBM PPR IBM AGM EPSON LQ |
| Print Mode | Select quality of ANK characters. | LQ Courier LQ Roman LQ Swiss LQ Swiss Bold LQ Orator LQ Gothic LQ Prestige LQ OCR-A LQ OCR-B Utility HSD |
| Pitch | Select character pitch. | 10 CPI , 12 CPI, 15 CPI, 17.1 CPI, 20 CPI |

| ITEM | FUNCTION | SETTING |
|----------------------|--|---|
| Proportional Spacing | Select whether to use proportional spacing or not. | Yes No |
| Style | Select either font style. | Normal , Italics |
| Size | Select the character scale size. | Single , Double |
| Character Set | Select either ANK character code table. | Set I Set II |
| Language Set | Select a language character set. | ASCII , French, German, British, Danish I, Swedish I, Italian, Spanish I, Japanese, Norwegian, Danish II, Spanish II, Latin American, French Canadian, Dutch, Swedish II, Swedish III, Swedish IV, Turkish, Swiss I, Swiss II, Publisher |
| Zero Character | Select either print font pattern to receive a zero character located at 30H in ANK code or at AA30H in a single-byte code. | Unslashed Slashed |

| ITEM | FUNCTION | SETTING |
|------------------|--|--|
| Code Page | Select a code page. | USA Canada French Multilingual Portugal Norway Turkey Greek_437 Greek_869 Greek_928 Grk_437 CYPRUS Polska Mazovia Serbo Croatic I Serbo Croatic II ECMA-94 Hungarian CWI Windows Greek Windows East Europe Windows Cyrillic East Europe Latin II-852 Cyrillic I-855 Cyrillic II-866 Kamenicky(MJK) ISO Latin 2 Hebrew NC (862) Hebrew OC Turkey_857 Latin 5 (Windows Turkey) Windows Hebrew Ukrainian Bulgarian ISO Latin 6 (8859/10) Windows Baltic Baltic_774 KBL-Lithuanian Cyrillic Latvian Roman-8 Icelandic-861 Multilingual 858 ISO 8859-15 Greek_737 Asmo449+ Asom708 Arabic864 Windows Arabic |
| Slashed Letter 0 | Set whether to convert slashed 0 located at 9BH and 9DH in USA code page or not. | Yes No |
| Multi Pass | Select the printing direction when double-height print data exists in a line. | Bi-directional Uni-directional |

| ITEM | FUNCTION | SETTING |
|--|---|--|
| Rcv Buffer | Select size of the received buffer. | 0, 2 K, 32 K, 64 K |
| Print Suppress Effective | Set whether to enable or disable a print suppress setup command. | Yes No |
| Auto LF | Select whether to perform auto LF operation or not upon receiving a CR code. | Yes No |
| Auto CR *IBM PPR only | Select whether to perform auto CR operation upon receiving a carriage return command. | Yes No |
| SI Select Pitch (10CPI) *IBM PPR/AGM only | Set how to handle an SI command received in 10 CPI mode. | 15 CPI 17.1 CPI |
| SI Select Pitch (12CPI) *IBM PPR/AGM only | Set how to handle an SI command received in 12 CPI mode. | 12 CPI 20 CPI |
| Reset Inhibit | Set whether to enable or disable an initial command. | No Yes |
| Select Language Set *EPSON only | Set whether to enable or disable a combination of the code page setting and the language setting by menu. | Combined Code Page Only |
| Impact Mode | Select print mode on power on. (This item is referred to on initialisation only by I-PRIME or power on but not by an initialisation command.) | Normal Quiet Hi Copy |
| Print Direction Command | Select the validity of a one-way print setup command. | Valid Invalid |
| Power Save Time | Set idle time to enter power save mode. | 5 min , 10 min, 15 min, 30 min, 60 min |

| ITEM | FUNCTION | SETTING |
|--------------------------|---|--|
| PE Detection | Select whether to detect paper end or not. | OFF ON |
| Table Print | Set whether to divide a path or not to print on occasions when printing by the same headpin continues for 3 in or more in the same print block. | Standard Special |
| Line Spacing | Select line feed pitch. | 6 LPI 8 LPI |
| Page Width | Set width of a line to determine the number of ANK (10CPI) characters to be printed. With this setting, the right margin is set. For reduced-size prints, at 75 % or 50%, 136 characters are printed. | 10.6 in 8 in |
| Form Tear-Off | Select manual or auto as the method to advance a continuous form to the form tear-off position. | Off 500 ms 1 sec 2 sec |
| Skip Over Perforation | Select whether to skip over perforation or not. (When a skip over perforation setup command is received, the received command is given priority.) | Yes No |
| Page Length (Continuous) | Select the length of a continuous form. | 3.5 in, 4 in, 5.5 in, 6 in, 7 in, 8 in, 8.5 in, 11 in, 11 2/3 in, 12 in , 14 in, 17 in, 5 in, 3 in, 3.25 in |

| ITEM | FUNCTION | SETTING |
|-------------------------|--|---|
| TOF (Continuous) | <p>Select the reference position for the TOF position when auto loading continuous form paper from the rear of the printer. (Up to the mid-section of characters in the first line.)</p> <p>"1Chr. Set Pos." is printed if the TOF position is set by using SHIFT + PARK switches.</p> | 2.12 mm (1/12 in) 4.23 mm (1/6 in) 6.35 mm (1/4 in) 8.47 mm (1/3 in) 10.58 mm (5/12 in) 12.7 mm (1/2 in) 14.82 mm (7/12 in) 16.93 mm (2/3 in) 19.05 mm (3/4 in) 21.17 mm (5/6 in) 23.28 mm (11/12 in) 25.4 mm (1 in) 27.52 mm (13/12 in) 1Chr. Set Pos. |
| Initial Position | <p>This is the position of the paper when the paper is already loaded at power on. (For continuous form mode only.)</p> | Print Tear OFF |
| Auto Eject Position | <p>Select a printable area at the bottom of cut sheets of paper in cut-paper mode (the character centre position).</p> | 6.35 mm (1/4 in) 14.8 mm |
| Page Length (Cut Sheet) | <p>Select the page length of cut-paper.</p> | 3.5 in, 4 in, 5.5 in, 6 in, 7 in, 8 in, 8.5 in, 11 in, 11 2/3 in , 12 in, 14 in, 16.57 in, 5 in, 3 in, 3.25 in |
| TOF (Cut Sheet) | <p>Select the reference position for the TOF position when feeding cut-paper in manual mode. (Up to the mid-section of characters in the first line.)</p> <p>"1Chr. Set Pos." is printed if the TOF position is set by using SHIFT + PARK switches.</p> | 2.12 mm (1/12 in) 4.23 mm (1/6 in) 6.35 mm (1/4 in) 8.47 mm (1/3 in) 10.58 mm (5/12 in) 12.7 mm (1/2 in) 14.82 mm (7/12 in) 16.93 mm (2/3 in) 19.05 mm (3/4 in) 21.17 mm (5/6 in) 23.28 mm (11/12 in) 25.4 mm (1 in) 27.52 mm (13/12 in) 1Chr. Set Pos. |

| ITEM | FUNCTION | SETTING |
|-------------------------------|---|--|
| Wait Time | Select the waiting time between setting paper on the tray and feeding it while the printer is waiting for paper to be fed in cut-paper manual feed mode. | 500 ms 1 sec 2 sec |
| I-Prime | Select whether to print or clear buffer contents upon initialisation by receiving I-PRIME. | Invalid Buffer Clear Buffer Print |
| Auto Feed XT *EPSON only | Set the validity of an Auto Feed XT signal. | Valid Invalid |
| I/F Bi-Direction | Set whether to return a device ID or not in accordance with IEEE1284. | Enable Disable |
| TOF Adjustment (Cut Sheet) | Select an adjustment value for the reference position in regard to the TOF position of cut-paper/passbooks. The position moves to the rear of the form by [+] and to the top of the form by [-] in 1/60 in increments. | -7 - -1 0 +7 - +1 |
| Rear Load Adjustment | Select an adjustment value for the reference position in regard to the TOF position of a continuous form. The position moves to the rear of the form by [+] and to the top of the form by [-] in 1/60 in increments. | -7 - -1 0 +7 - +1 |
| Cut Position Adjust | Select an adjustment value for the position to cut the end of a continuous form. (In 1/90 in increments) | -7 - -1 0 +7 - +1 |

| ITEM | FUNCTION | SETTING |
|-----------------------|--|----------------------------------|
| Registration Low | Adjust the print starting position on printing in the reverse direction. (The position moves to the right or left in 1/720 in increments.) | -10 - -1 0 +10 - +1 |
| Registration Normal | Adjust the print starting position on printing in the reverse direction. (The position moves to the right or left in 1/720 in increments.) | -10 - -1 0 +10 - +1 |
| Registration High1 | Adjust the print starting position on printing in the reverse direction. (The position moves to the right or left in 1/720 in increments.) | -10 - -1 0 +10 - +1 |
| Registration High2 | Adjust the print starting position on printing in the reverse direction. (The position moves to the right or left in 1/720 in increments.) | -10 - -1 0 +10 - +1 |
| LF Revise (Cut Sheet) | Adjust a line feed amount in cut-paper mode. | -14 - -1 0 +14 - +1 |

INITIALISING MENU SETTINGS

To restore the menu settings to their initial values, carry out the steps below.

NOTE

The values adjusted by the Adjustment menus are not initialised by the following procedure.

1. Set the Power Switch to OFF.
2. Press and hold down the SEL and SHIFT buttons together then set the Power Switch to ON.

ADJUSTING TOF POSITION

Use the following procedure to set TOF to accord with the reference position (6.35 mm (0.25 in)). The reference position refers to the first line of the paper i.e. the position to which the printer feeds the paper when automatically loading the paper.

NOTE

Adjusting of TOF can be done in cut sheet mode or continuous forms mode.

1. Print out the menu settings of the printer as in ["Confirming current settings" on page 32](#) and confirm that the TOF (in cut sheet mode or continuous forms mode) is 6.35 mm (0.25 in).

2. Set the Paper Type lever to the required paper type.

3. When continuous forms are used, place the paper on the Pin Tractor.

For cut sheet mode, do not insert the paper at this stage.

4. In continuous forms mode, press the FF/LOAD button.

In cut sheet manual feeding mode, press the FF/LOAD button and place the paper on the Paper Tray.

After the paper has started to be taken into the printer, continue to press the FF/LOAD button and the paper is taken into the 6.35 mm (0.25 in) position.

5. Align the paper with the first print line position as follows:

In off-line mode, press the following buttons to adjust the first printing line:

To feed the paper forward by a small amount, hold down the SHIFT button and press the FF/LOAD button.

To feed the paper backward by a small amount, hold down the SHIFT button and press the LF button.

NOTE

If the specified correction range is more than $\pm 7/60$ in, the QUIET indicator flashes and the paper cannot be moved.

6. When the paper is positioned at the required TOF, release the buttons in Step 5 above.

To save this position as the TOF, press the SEL button to

set the printer off-line and press and hold down the SHIFT and PARK buttons for 3 seconds.

NOTE

Do not turn the Platen Knob or switch off the printer during the above procedure.

QUICK PRINTER SETTINGS

PRINTER IMPACT MODE

When switched ON, the printer enters the impact mode selected in the menu. You can change this to normal speed and quiet printing without using the menus as follows.

Normal speed printing

Use this for standard file printing operations.

1. Ensure the SEL indicator is illuminated.
2. Hold down the SHIFT button and press the TEAR button.
The QUIET indicator turns off.

Quiet printing

Use this for quieter printing.

1. Ensure the SEL indicator is illuminated.
2. Hold down the SHIFT button and press the TEAR button.
The QUIET indicator is illuminated.

Emphasis printing

CAUTION!

Do not use emphasis printing if performing horizontal tab character printing on thin paper as the paper may become damaged.

Use this for printing multipart forms.

You have to set emphasis printing by using the menus to set Impact Mode to Hi Copy as described in ["Menu setting" on page 33](#).

NOTE

If the paper on top is so thick that duplication on the paper below it fails, use emphasis printing.

In emphasis printing mode, printing is carried out twice.

The print may become blurred if high density characters and graphics are printed using a new ribbon.

In emphasis mode, ensure that the paper is flat to avoid possible printing errors.

TROUBLESHOOTING


CLEARING PAPER JAMS

CUT SHEET PAPER JAMMED IN PRINTER

WARNING!

Do not carry out any operations inside the printer with the Power Switch set to ON.

1. Set the Power Switch to OFF.
2. Open the Top Cover.

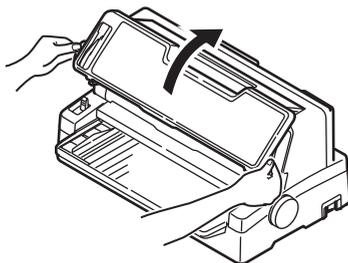


3. Set the Paper Thickness lever to the Replace Ribbon position (position 10).

WARNING!

The Print Head may be hot after printing. Allow it to cool before touching it.


4. Move the Print Head away from the paper.

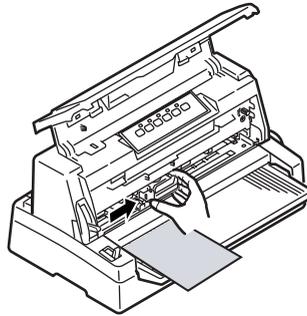

5. Rotate the Platen Knob in the relevant direction and pull the cut sheet out from the front or rear of the printer.
6. If a paper fragment remains inside the printer:
 - (a) use forceps to grip and extract it or
 - (b) insert a triple folded sheet from the Paper Tray and turn the Platen Knob to pass the folded sheet through and push out the paper fragment.



7. When the paper jams are cleared, close the printer Top Cover.

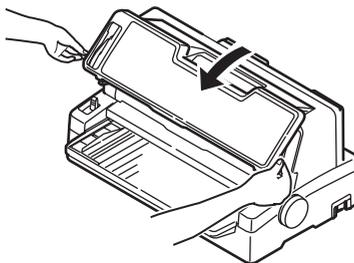


8. Set the Power Switch to ON.

CONTINUOUS FORMS JAMMED IN PRINTER


WARNING!

Do not carry out any operations inside the printer with the Power Switch set to ON.

1. Set the Power Switch to OFF.
2. Tear off any unprinted continuous forms.

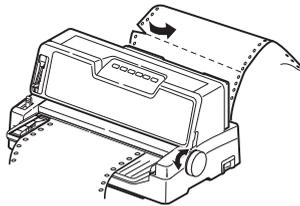

3. Open the Rear Cover by gently pulling it out horizontally to the end of its travel then swinging it upwards until it locks into position.
4. Raise each Pin Tractor cover (1) and remove the continuous forms from the Pin Tractors.

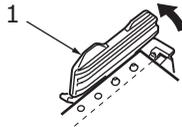

5. Rotate the Platen Knob and remove the forms from the front or rear of the printer.
6. If a form fragment remains inside the printer, place two or three forms in a stack on the Pin Tractors and turn the Platen Knob to push the fragment out of the printer.
7. When the paper jams are cleared, close the Rear Cover by gently swinging it downwards to the horizontal and then pushing it inwards until it locks into position.
8. Set the Power Switch to ON.

RESPONDING TO ALARM CONDITIONS

Use the following table for guidance on how to respond to indicated alarm conditions.

| INDICATOR | | ALARM MEANINGS AND ACTIONS |
|-----------|----------|---|
| SEL | ALARM | |
| OFF | ON | Paper has run out. Add paper and press the SEL button. |
| OFF | Flashing | The Paper Type lever is wrongly set for the type of paper in use. Press the SEL button and set the Paper Type lever to the correct position. |
| OFF | Flashing | Problem with cut sheet feeding. Remove the cut sheet. |
| Flashing | ON | Print data is received but printing does not start because no paper is being fed. Insert paper. |
| Flashing | Flashing | Printing cannot be resumed at this stage. Turn the power OFF, verify that the carriage moves properly, then turn the power ON again. If the problem is still there after you turn the power ON again, contact your dealer. |

RESPONDING TO GENERAL PROBLEMS

Use the following table to help you to identify symptoms with possible causes and take suggested remedial actions.

| PROBLEM | CAUSE | ACTION |
|---|--|--|
| No power | | |
| No power | The power cable is not properly connected. | Check the power cable is properly connected at both power outlet and printer. |
| | Power outlet problem or power outage. | Plug another appliance into this outlet to check if it works. |
| No printing takes place | | |
| SEL indicator is unlit. | The printer driver is not installed properly. | Re-install the printer driver correctly. |
| | The printer has just stopped printing. | Press the SEL button. |
| | There is no paper in the printer. | Load paper. |
| SEL indicator is illuminated but no printing takes place. | Interface cable is disconnected. | Reconnect the interface cable. |
| | Wrong interface cable has been used. | Use correct interface cable. |
| The print head is moving but no printing takes place. | The ribbon cartridge has not been installed. | Install the ribbon cartridge. |
| Print position offset | | |
| The horizontal printing position is offset. | The start position may change after the printer is powered on. | When the printer is powered ON, switch from off-line mode to on-line mode by pressing the SEL button. Reset the start position. You must set the Power Switch to OFF before you change the start position. |

| PROBLEM | CAUSE | ACTION |
|---|--|--|
| Printing slows down | | |
| Print direction changes suddenly to unidirectional . | When the print head overheats, the printer automatically starts unidirectional split printing. | When the print head temperature drops sufficiently, the printer will return to its original operation. |
| PE warning | | |
| The print carriage does not operate. | There is contamination on the carriage shaft. | Clean any paper dust and contamination from the carriage with a dry cloth. |
| Print blurring | | |
| The characters are too pale to display properly on the paper. | The Paper Thickness lever position does not match the paper. | Correct the Paper Thickness lever setting. |
| | The printer is set to print at high speed. | Set the speed to normal. |
| | The ribbon has reached its end of life. | Replace the ribbon by a new one. |
| | The ribbon cartridge is not installed correctly. | Reinstall the ribbon cartridge correctly. |
| | The ribbon has been wound incorrectly. | Replace the ribbon cartridge by a new one. |
| | The ribbon is not transferring properly. | Replace the ribbon cartridge by a new one. |
| A line of print is missing. | Broken wire pins. | Contact your dealer. |

| PROBLEM | CAUSE | ACTION |
|---|--|---|
| The printout differs from the screen display. | | |
| Printout of completely different characters or symbols. | Incorrect print setup for the user application. | Reselect print setup for the applications according to priority. |
| | The application control codes for the previous print operation are still enabled. | Initialise the printer. |
| | The input application control signal is not correct. | Print in hex dump mode and verify the data content. Make corrections in the application. |
| | The interface cable is not properly connected. | Reconnect the cable correctly. |
| Too high or too low TOF (where printing starts). | The TOF is not correctly selected. | Initialise the printer. |
| | | Select correct TOF for cut sheet and continuous forms. |
| | | Select the first-line print position and adjust the paper top position. |
| | | Reselect the margin correctly in the application. |
| Too large or small left and/or right margins. | The left or right margin is not correctly selected. | Incorrect positions of the Paper Guide or Pin Tractors. Select and adjust the position again depending on the paper type. |
| | | Reselect the left and right margins correctly in the application. |
| When continuous forms are used, the content of a single form is printed on two forms. | The paper length selected in the application does not match the physical paper length. | Match the paper length selected in the application with the physical paper length in use. |

| PROBLEM | CAUSE | ACTION |
|---|---|---|
| When cut sheets are used, the content of a single sheet is printed on two sheets. | The paper setting selected in the application does not match the physical paper size. | Match the paper setting selected in the application with the physical paper in use. |
| | It does not match the lines per page as the printer automatically detected. | Leave enough top and bottom margin in the application. |
| | | Correct the cut sheet LF adjustment. |
| The content of a single line is printed in two lines. | The left and/or right margins are not correctly selected. | Reselect the left and right margins correctly in the application. |
| When continuous forms are used, several blank lines appear in the printout. | Tear-off perforation spacing is selected. | Cancel tear-off perforation spacing. |
| Broken and uneven vertical lines. | This may happen in bidirectional printing. | Use Print Registration in the adjustment mode to adjust. |
| Too large or small line spacing. | Line spacing is not selected correctly. | Reselect line spacing correctly in the application. |
| Split print | | |
| Blanks appear in graphic printout. | This is a paper feed error, which is especially notable in printing regular characters. | This is not a failure. |
| Blanks or deformed characters appear in double height type or other extended types. | This is a paper feed error due to line feeding in printing a single character. | This is not a failure. Use the printer's built-in fonts when you print important documents or bills. |
| Improper cut sheet feed | | |
| No paper feed. | Sheets are located off the paper guide. | Load sheets with their left edges against the paper guide. |
| | Sheets are not loaded to the end. | Load sheets to the end. |

| PROBLEM | CAUSE | ACTION |
|---|--|---|
| The platen rotates without paper feed, or continuous forms instead of cut sheets are fed. | Sheets are not loaded to the end. | Load sheets to the end. |
| | The printer is in the continuous forms mode. | Eject the continuous forms and select cut sheet mode for the printer. |
| Paper distortion. | Sheets are not loaded to the end, or they are not inserted straight. | Load sheets to the end. |
| | Paper with wrinkles, folds or other defects. | Change paper. |
| | Paper not specified for the printer. | Use paper types specified for the printer. |
| Unable to eject. | The FF/LOAD button is pressed. | Press the PARK button. |
| Improper continuous forms feed. | | |
| No line feed, and no paper feed. | Paper is off the Pin Tractors. | Reload paper correctly. |
| | The adjust lever position does not match the paper type. | Set the adjust lever to the correct position. |
| Paper distortion or jam. | Forms are loaded with their left holes out of line with the right ones. | Load forms with their left holes in line with the right ones. |
| | Inadequate distance between the left and right Pin Tractors, making for loose paper. | Relocate the Pin Tractors to tighten the paper. |
| | Skew paper feeding. | Move the paper to make it straight. |
| | Paper movement is blocked. | Remove the blockage. |
| | Paper source is too far from the printer. | Move the paper source nearer to the printer. |
| | Paper not specified for the printer. | Use paper types specified for this printer. |
| Several blank lines appear in the printout. | Skip over perforation spacing is selected. | Cancel the skip over perforation spacing. |

| PROBLEM | CAUSE | ACTION |
|--|--|---|
| The selected skip over perforation spacing does not match the physical tear-off perforation positions. | The paper length selected in the application does not match the physical paper length. | Match the paper length selected in the application with the physical paper length in use. Select the paper length in number of lines in the application. |
| Abnormal switchover between cut sheet and continuous forms modes. | | |
| No cut sheet feed. | The printer is in continuous forms mode. | Set the Paper Type lever to cut sheet mode. |
| No continuous forms feed. | The printer is in cut sheet mode. | Set the Paper Type lever to continuous forms mode. |
| Paper feed operations for both cut sheets and continuous forms are actuated. | The cut sheet is not ejected. | Eject the cut sheet. |

CLEANING YOUR PRINTER

To keep your printer in good operating condition, you are advised to clean it regularly.

WARNING!

Set the printer Power Switch to OFF and disconnect the power cable from the printer before cleaning the printer.

PRINTER EXTERIOR

CAUTION!

Keep the Top Cover closed to avoid the possibility of detergent entering the printer

Clean the exterior of the printer as required, but at least every six months or 300 hours of operation, whichever comes first.

1. Moisten a piece of cotton cloth with diluted neutral detergent and carefully wipe the printer exterior.

PRINTER INTERIOR


WARNING!

As the print head becomes hot during printing, allow it to cool before carrying out any cleaning inside the printer.

Do not use any flammable solvents for cleaning the printer to avoid any risk of fire or electric shock.

Clean the interior of the printer every 6 months or 300 hours of operation, whichever comes first.

Using a soft cloth, cotton swabs and a vacuum cleaner, clean the interior of the printer as follows:

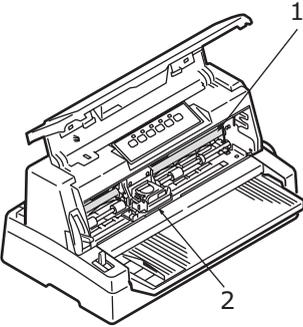

| WHERE TO CLEAN | WHAT TO CLEAN |
|---|---|
| The carriage (1) and the area around it | Clean and remove paper waste, dirt, dust and ribbon shreds. |
| The paper travel surface (2) | |

CAUTION!

When you clean the interior of the printer with a vacuum cleaner, do not attempt to clean any parts smaller than the suction nozzle.

Do not clean any interior working parts with the suction nozzle to avoid possible damage to the printer.

CONSUMABLES AND ACCESSORIES

CONSUMABLES

When the printed image becomes faint or incomplete, replace the ribbon cartridge.

CHANGING A RIBBON CARTRIDGE


CAUTION!

Only use genuine Oki Original consumables to ensure the best quality and performance from your hardware. Non-Oki Original products may damage your printer's performance and invalidate your warranty.

WARNING!

Do not change the ribbon cartridge with the Power Switch set to ON.


1. Set the Power Switch to OFF.
2. Set the Paper Thickness lever to Replace Ribbon (position 10) and open the Top Cover.

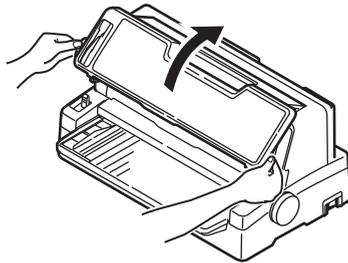


WARNING!

The print head and area around it may be hot after printing. Allow it to cool down before touching it.


3. Move the carriage (1) to the cutout (2) for ribbon replacement position.

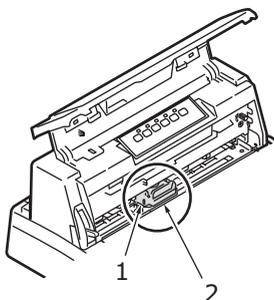


4. Hold the ribbon cartridge (1) with your fingers pressing on its ribbon guide (2) and slope it up and out to remove it from the carriage.

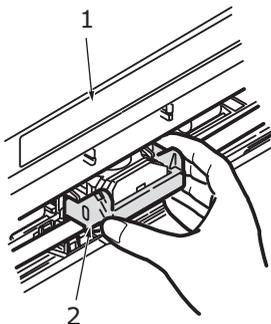

5. Holding the ribbon cartridge (1) close to both ends, slope it up and out until it unlocks then remove it along the direction indicated by the arrows.

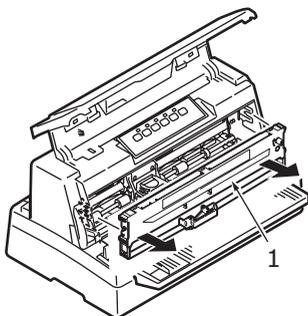


6. Dispose of the cartridge in accordance with your local guidelines.
7. Remove the new ribbon cartridge from its wrapping and note the position of the Ribbon Guide (1), Knob (2) and Pin (3).

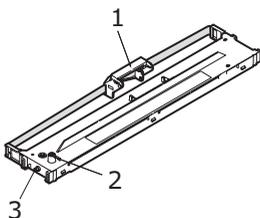


- 8.** In the direction indicated by the arrows, insert the pins at both ends of the ribbon cartridge (1) into the U grooves (2) in the printer until the ribbon cartridge is fully locked.

NOTE

It may be easier to mount the ribbon cartridge in place if you align it with the topside of the grooves. Also, a slightly loose ribbon may make it easier to mount the ribbon cartridge.

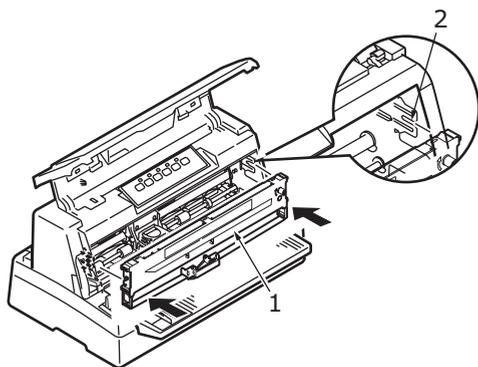

- 9.** Hold the ribbon cartridge (1) with your fingers pressing on its ribbon guide (2) and slope it upward and inward along the guide rails until the ribbon guide (2) comes in line with the U slot at the top of the cartridge.

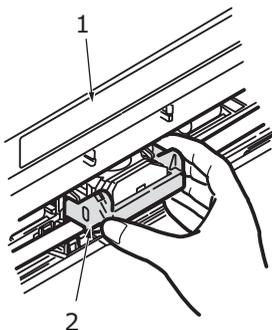


10. Turn the knob (1) clockwise (in the direction of the arrow) to wind up the ribbon.


CAUTION!

Do not turn the knob anticlockwise as the ribbon might jam.

Make sure that the ribbon is not twisted or damaged when it goes through the gap between the Print Head and the ribbon guide.

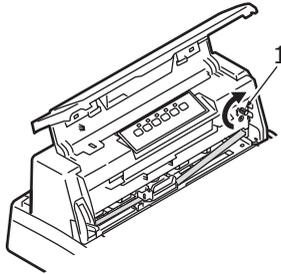

11. Close the printer Top Cover.

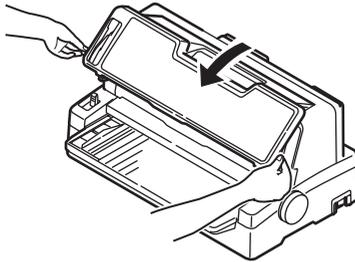

12. Set the Paper Thickness lever to match the paper being used. (See ["Setting the Paper Thickness lever" on page 26.](#))
13. Set the printer Power Switch to ON.

CONSUMABLE ORDER INFORMATION

| ITEM | LIFE | ORDER NO. |
|--------------------------|----------------------|-----------|
| Ribbon cartridge (Black) | 4 million characters | 43503601 |

ACCESSORIES

The following accessories are available for your printer:

- > RS-232C Serial Interface
- > OL7120e 100BASE-TX/10BASE-T Network Interface

Installation instructions are supplied with the accessories. The Network Configuration Guide on the CD that accompanies the Network Interface card provides detailed configuration information for the OL7120e.

ACCESSORY ORDER INFORMATION

| ITEM | ORDER NO. |
|---|-----------|
| RS-232C Serial Interface | 09002351 |
| OL7120e 100BASE-TX/10BASE-T Network Interface | 01144601 |

SPECIFICATIONS

| ITEM | SPECIFICATION |
|---|--|
| Model No. | D21008B (ML6300FB) |
| Print method | Impact dot matrix |
| Print head | 24 pins, 0.2 mm (0.0079 in) diameter |
| Print direction | Bi-directional, short-line-seeking printing |
| Print speed High Speed Draft (HSD) Letter Quality (LQ) Utility | 400cps @ 10 cpi 100 cps @ 10 cpi 300 cps @ 10 cpi |
| Line Feed (LF) time | Approximately 65 ms per line for LF of 4.23 mm (1/6 in) |
| Form Feed (FF) speed | Approximately 114.3 mm/s (4.5 in/s) |
| Paper feed control | Paper feed: yes Vertical tab: yes Direct line feed: yes |
| Duplication capability | Continuous forms: the original page +5 more pages (total maximum paper thickness less than 0.36 mm) Cut sheet: the original page +5 more pages (total maximum paper thickness less than 0.36 mm) |
| Feeding direction | Feed forward Feed backward |
| Feeding mode | Friction feed mode (front) Pin tractor feed mode (rear) |
| Continuous forms tape tail detection method | Detected when remaining paper is approximately 24 mm long. It can, however, print till about 6 mm from the paper bottom (measured at the centre of the characters). (The print accuracy of the last page cannot be guaranteed.) |
| Character sets | Standard ASCII Epson (Italics/Graphics) IBM (Set1/Set2) Foreign Code Page |

| ITEM | SPECIFICATION |
|---|--|
| Cut-sheet paper Paper width Paper length Single-part Weight Multipart Weight Number of copies Thickness | 90 to 304.8 mm (3.54 to 12 in) 70 to 364 mm (2.76 to 14.33 in) 52 to 209 gsm 40 gsm standard Original plus 5 copies 0.36 mm (0.014 in) maximum |
| Continuous Paper Paper width Paper length Single-part Weight Pressure-sensitive Weight Number of copies Thickness Multipart-carbon-lined or multipart-interleaf Weight Number of copies Thickness | 76.2 to 304.8 mm (3 to 12 in) 76.2 to 355.6 mm (3 to 14 in) 52 to 128 gsm 30 to 40 gsm standard Original plus 5 copies 0.36 mm (0.014 in) maximum 30 to 40 gsm standard Original plus 4 copies 0.36 mm (0.014 in) maximum Multiple-part paper should be fastened by spot-pasting or crimping on both sides, and should be free of wrinkles. |
| Original OKI cartridge ribbon Ink color Ribbon life | Black 4 million characters (Utility mode) |
| Print head life | 200 million characters |
| Dimensions | 440 mm (W) x 210 mm (H) x 302 mm (D) with platen knob installed |
| Weight | 7 kg |
| Power rating Voltage Frequency | 220 – 240V ± 10% 50/60 Hz ± 1 Hz |
| Power consumption Operation Standby mode Powersave mode | Typ. 60 W 15 W 6 W |
| Power cable | 3 - core AC power cable, approximately 1.8 m length |
| Interfaces | Bi-directional parallel, IEEE1284-1994 USB 2.0 RS-232C (optional accessory) OL7120e 100BASE-TX/10BASE-T (optional accessory) |

| ITEM | SPECIFICATION |
|--|--|
| Dust and corrosion | Use the printer in a general office environment. |
| Environmental conditions Operating Storage | 5°C – 40°C, 30% – 85% RH (Testing condition for print precision: 15°C – 30°C, 40% – 70%RH) -20°C – 60°C, 0% – 95% RH When the printer is stored, it should be in its original packaging, with no moisture formation. |
| Standard usage Average power on time Average printing time | 200 h/month 50 h/month (text density on page: 35%) |
| Noise level | The acoustic noise of this product is less than 70 dB (A) as measured in accordance with EN ISO 7779. |

APPENDIX A – REAR COVER REMOVAL


If required, the Rear Cover can be removed and refitted as described below.

CAUTION!

When removing or refitting the Rear Cover, take care not to apply excessive force.


REMOVAL

1. Remove the Rear Cover in the direction shown:

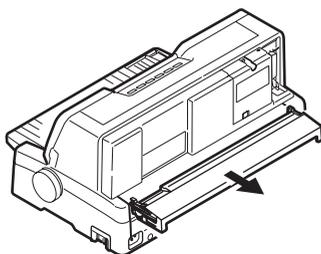

REFITTING

1. Align the Rear Cover (1) with the protruding part of the printer Top Cover (2) and insert in the direction shown:

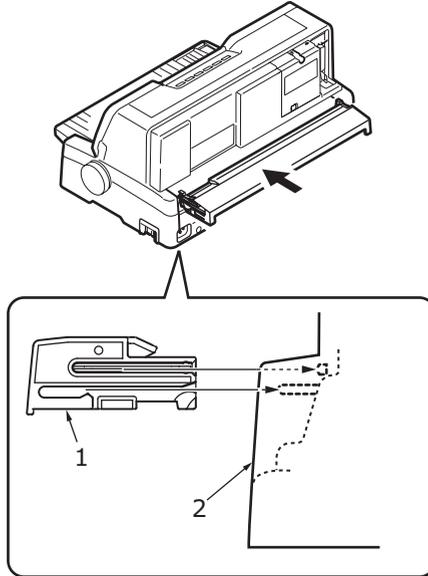

INDEX

A

| | |
|-----------------------------|----|
| accessories | |
| list | 61 |
| ordering | 61 |
| alarm indications | 47 |
| aligning perforations | 24 |

B

| | |
|-----------------------|----|
| button switches | 30 |
|-----------------------|----|

C

| | |
|----------------|----|
| cleaning | |
| exterior | 54 |
| interior | 54 |

D

| | |
|---------------|----|
| drivers | 16 |
|---------------|----|

E

| | |
|-------------------------|----|
| ejecting paper | |
| continuous forms | 24 |
| cut sheet | 20 |
| emphasis printing | 42 |

F

| | |
|---------------------|----|
| fault finding | 48 |
|---------------------|----|

I

| | |
|------------------|----|
| indicators | 29 |
| interface | |
| network | 15 |
| parallel | 15 |
| serial | 15 |
| USB | 15 |

L

| | |
|------------------------|----|
| loading paper | |
| continuous forms | 20 |
| cut sheet | 18 |

M

| | |
|--------------------|----|
| menu settings | |
| changing | 33 |
| confirming | 32 |
| initialising | 40 |
| list | 33 |

N

| | |
|-----------------------------|----|
| normal speed printing | 42 |
|-----------------------------|----|

P

| | |
|------------------------|----|
| paper jams | |
| continuous forms | 46 |
| cut sheet | 44 |
| printer | |
| control panel | 28 |
| location | 12 |
| parts | 9 |
| test print | 14 |
| printing files | 17 |

Q

| | |
|----------------------|----|
| quiet printing | 42 |
|----------------------|----|

R

| | |
|----------------|----|
| ribbon | |
| changing | 56 |
| ordering | 61 |

S

| | |
|-------------------------------|----|
| setting paper thickness | 26 |
| specifications | 62 |
| switching ON | 13 |

T

| | |
|-----------------|----|
| test page | 16 |
| TOF | |
| saving | 41 |
| setting | 41 |

U

| | |
|----------------|---|
| user guide | |
| list | 6 |
| printing | 8 |

OKI PRINTING SOLUTIONS CONTACT DETAILS

Oki Systems (UK) Limited

550 Dundee Road
Slough Trading Estate
Slough, SL1 4LE

Tel:44 (0) 1753 819819
Fax:44 (0) 1753 819899
<http://www.oki.co.uk>

Oki Systems Ireland Limited

The Square Industrial Complex
Tallaght, Dublin 24, Ireland

Tel:+353 1 4049590
Fax:+353 1 4049591
<http://www.oki.ie>

Technical Support:

Tel:+353 1 4049570
Fax:+353 1 4049555
E-mail: tech.support@oki.ie

Oki Systems (Ireland) Ltd.

(Northern Ireland)
40 Sydenham Park
Belfast, BT4 1PW

Tel:+44 (0)28 90 20 1110
<http://www.oki.ie>

Technical Support:

Tel: +44 (0)28 90 221919
E-mail: tech.support@oki.ie

Oki Data Corporation

4-11-22 Shibaura, Minato-ku, Tokyo
108-8551, Japan

Tel:(81) 3 5445 6158
Fax:(81) 3 5445 6189
<http://www.okidata.co.jp>

Oki Data (Singapore) Pte. Ltd.

78 Shenton Way, #09-01,
Singapore 079120

Tel:(65) 221 3722
Fax:(65)421 1688
<http://www.okidata.com.sg>

Oki Systems (Thailand) Ltd.

956 Udomvidhya Building 6th Floor,
Rama IV Rd., Bangkok 10500, Thailand

Tel:(662) 636 2535
Fax:(662) 636 2536
<http://www.okisysthai.com>

Oki Hong Kong Limited

Suite 1909, Tower3,
China Hong Kong City,
33 Canton Rd., Tsimshatsui,
Kowloon, Hong Kong

Tel:(852) 2736 0130
Fax:(852) 2376 3725

The IPL Group

63-85 Victoria Street
Beaconsfield NSW 2015, Australia

Tel:(61) 2 9690 8200
Fax:(61) 2 9690 8300
<http://www.oki.com.au>

Comworth Systems Ltd.

10 Constellation Drive Mairangi Bay,
Auckland,
New Zealand

Tel:(64) 9 477 0500
Fax:(64) 9 477 0549
<http://www.comworth.co.nz>

OKI EUROPE LIMITED

Central House

Balfour Road

Hounslow TW3 1HY

United Kingdom

Tel: +44 (0) 208 219 2190

Fax: +44 (0) 208 219 2199

WWW.OKIPRINTINGSOLUTIONS.COM

