

# *RTI Monitor*

## **Getting Started Guide**

Version 5.1.0



Your systems. Working as one.



© 2011-2013 Real-Time Innovations, Inc.

All rights reserved.

Printed in U.S.A. First printing.

December 2013.

### Trademarks

Real-Time Innovations, RTI, and Connexx are trademarks or registered trademarks of Real-Time Innovations, Inc. All other trademarks used in this document are the property of their respective owners.

### Copy and Use Restrictions

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form (including electronic, mechanical, photocopy, and facsimile) without the prior written permission of Real-Time Innovations, Inc. The software described in this document is furnished under and subject to the RTI software license agreement. The software may be used or copied only under the terms of the license agreement.

### Technical Support

Real-Time Innovations, Inc.

232 E. Java Drive

Sunnyvale, CA 94089

Phone: (408) 990-7444

Email: support@rti.com

Website: <https://support.rti.com/>

# Contents


<b>1</b>	<b>Welcome.....</b>	<b>1-1</b>
<b>2</b>	<b>Installation and Start Up .....</b>	<b>2-1</b>
2.1	Instructions for Linux Systems .....	2-1
2.1.1	Installing .....	2-1
2.1.2	Running .....	2-1
2.2	Instructions for Windows Systems.....	2-2
2.2.1	Installing .....	2-2
2.2.2	Running .....	2-2
2.3	Installing the License File .....	2-2
2.4	Command-line Options .....	2-3
<b>3</b>	<b>A Demo using RTI Shapes Demo .....</b>	<b>3-1</b>
3.1	Showing System Topology, Sample Counts and Rates.....	3-1
3.2	Showing Content-Filtered Samples.....	3-12
3.3	Showing Deadlines .....	3-13
3.4	Showing a 'Samples Rejected' Scenario .....	3-16
<b>4</b>	<b>Troubleshooting.....</b>	<b>4-1</b>
4.1	Debugging Problems with Monitor on Windows System .....	4-1
4.2	Running Monitor on a System with Limited Memory .....	4-1
4.3	Running Monitor with a Large System .....	4-1
4.4	Error Regarding 'Incompatible Shared Memory Segment' .....	4-2
4.5	Unable to Create Participant in Connex Application.....	4-2
4.6	Not Receiving Monitoring Data due to Inconsistent QoS .....	4-3
4.7	Not Receiving Monitoring Data for Entities .....	4-3
4.8	No Type Code for Some Entities in Description Panel.....	4-4
4.9	Running out of Memory .....	4-5
4.10	Running without an Active Network Interface.....	4-5

# Chapter 1 Welcome

*RTI® Monitor* is a graphical tool that displays monitoring data from *RTI Connex™* (formerly *RTI Data Distribution Service*) applications.

*Monitor* will help you:

- ❑ **Understand your system** with an easy-to-use graphical view into your entire *Connex* application.
- ❑ **Verify your design** by making sure the entities in your *Connex* applications are communicating as expected.
- ❑ **Tune performance** by providing deep statistics on every aspect of the middleware's operation.
- ❑ **Optimize integration** with detailed information on every entity in your system.
- ❑ **Monitor real-time operation** with a dashboard of tools to see traffic patterns, errors, lost samples, and more.

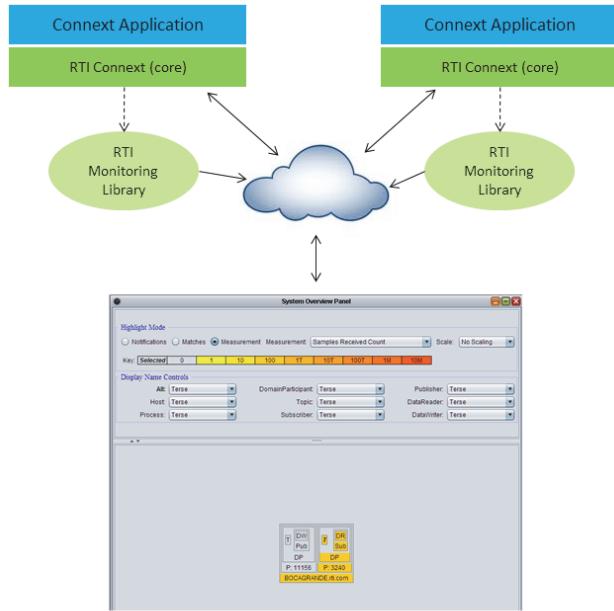

You can run *Monitor* on the same host as the *Connex* application or on a different host.

To enable a *Connex* application to provide monitoring data to *Monitor*, the application needs to use the *Monitoring Library* plug-in.

*Connex* notifies *Monitoring Library* every time an entity is created/deleted or a QoS is changed. *Monitoring Library* also periodically queries the status of all entities. *Monitoring Library* sends all the data to *Monitor* once it gets the data from the *Connex* application.

Monitoring is enabled in the application by setting values in the DomainParticipant's Property-QosPolicy (programmatically or through an XML QoS profile).

Refer to the *Monitoring Library Getting Started Guide*, included with the *Monitoring Library* bundle, for details. *Monitoring Library* is available from the RTI Support Portal (accessible from <https://support.rti.com/>).

# Chapter 2 Installation and Start Up

---

## 2.1 Instructions for Linux Systems

### 2.1.1 Installing

*Monitor* is included with *RTI Connexx Messaging*. Use the installation instructions in this chapter only if you are installing *Monitor* independently (not as part of *RTI Connexx Messaging*).

1. Untar **RTI\_Monitor-<version>-Linux.tar.gz** in a directory where you have write access.

For example, enter:

```
> cd /opt/rti  
> gunzip RTI_Monitor-<version>-Linux.tar.gz  
> gtar xvf RTI_Monitor-<version>-Linux.tar
```

The resulting installation will be in **/opt/rti/RTI\_Monitor\_<version>**.

2. See [Installing the License File \(Section 2.3\)](#).
3. *Monitor* is designed to monitor *Connexx* applications that are using *Monitoring Library*. If you have not yet installed *Monitoring Library* for use with your *Connexx* applications, you may want to do so now. Refer to the *Monitoring Library Getting Started Guide* that is provided with the *Monitoring Library* bundle.

*Monitoring Library* is available from the RTI Support Portal (accessible from <https://support.rti.com/>).

### 2.1.2 Running

If you have *RTI Launcher*, you can use its Tools tab to start *Monitor*.

Or you can start *Monitor* using the provided **rtimonitor** script. For example, if you installed *Monitor* in **/opt/rti**, start it by entering:

```
> /opt/rti/RTI_Monitor_<version>/scripts/rtimonitor
```

Command-line options are described in [Section 2.4](#).

## 2.2 Instructions for Windows Systems

### 2.2.1 Installing

*Monitor* is included with *RTI Connexet Messaging*. Use the installation instructions in this chapter only if you are installing *Monitor* independently (not as part of *RTI Connexet Messaging*).

1. Right-click **RTI\_Monitor-<version>-Win.zip** and select **Extract All...** to install *Monitor* in the directory of your choice. You must have write access to the directory.  
If you choose **c:\RTI**, the resulting installation will be in **c:\RTI\RTI\_Monitor\_<version>**.
2. See [Installing the License File \(Section 2.3\)](#).
3. *Monitor* is designed to monitor *Connexet* applications that are using *Monitoring Library*. If you have not yet installed *Monitoring Library* for use with your *Connexet* applications, you may want to do so now. Refer to the documentation in the *Monitoring Library* bundle for details.

*Monitoring Library* is available from the RTI Support Portal (accessible from <https://support.rti.com/>).

### 2.2.2 Running

If you have *RTI Launcher*, you can use its Tools tab to start *Monitor*.

Or, from the Windows Start menu, navigate to **RTI Connexet <version>, RTI Connexet Tools <version> Components, RTI Monitor <version>** and select **RTI Monitor**.

Or you can double-click **<installation directory>\scripts\rtimonitor.bat** in your browser.

You can also start it from the command-line if you need to use any of the options described in [Section 2.4](#).

---

## 2.3 Installing the License File

*Monitor* requires a valid license to run. You will receive one via email after you download the software.

Save the license file in any location of your choice. When *Monitor* starts, it will look in these locations until it finds a valid license:

1. The last saved, valid license location of the current user (if *Monitor* has been run before).
2. The file specified in the environment variable **RTI\_LICENSE\_FILE**, which you may set to point to the full path of the license file, including the filename (for example, **C:\RTI\my\_rti\_license.dat**).
3. The file **rti\_license.dat** in the current working directory.
4. The file **rti\_license.dat** in the directory specified by the environment variable **NDDSHOME**.

If *Monitor* cannot find a valid license file automatically, it will prompt you to enter the location of a license file.

If you have any questions about license installation, please contact [support@rti.com](mailto:support@rti.com).

## 2.4 Command-line Options

*Monitor* accepts the command-line options in [Table 2.1](#).

Table 2.1 **Command-line Options**

Option	Description
<b>-aggregationPeriodSeconds &lt;seconds&gt;</b>	<i>Monitor</i> periodically goes through all the monitored entities in the system (this information is saved in its own database) to calculate aggregated statistics and states. This value controls that minimum period (specified in seconds). Default: 5 seconds
<b>-help</b>	Displays all command-line options.
<b>-historyDepth &lt;value&gt;</b>	<i>Monitor</i> saves some statistics' history, so it can be displayed in the charts. This option controls how much historical data (number of samples) is saved per monitoring topic. Default: 12 samples
<b>-ignoreTypeConflicts</b>	Instructs <i>Monitor</i> to ignore any type conflicts. In <i>Monitor</i> , type conflicts are based on type-code equality rather than type compatibility. This command-line option can be useful if you have types that have different type-code but are compatible. Default: Not specified (do not ignore type conflicts)
<b>-initialDomainIds &lt;domain_id_list&gt;</b>	Specifies which domains <i>Monitor</i> will join when it starts up. <domain_id_list> is a list of domain IDs, each separated by a comma. <b>To specify multiple domain IDs on a Windows system</b> , enclose the comma-separated IDs in quotation marks. For example: <b>-initialDomainIds "31, 32"</b> . Default: If not specified, you will be prompted to enter a domain ID when <i>Monitor</i> starts.
<b>-matchRefreshPeriodSeconds &lt;seconds&gt;</b>	Specifies the period at which to refresh the system overview panel's matches. Default: 5 seconds
<b>-notificationHistoryDepth &lt;value&gt;</b>	Specifies the number of notifications to keep per entity. Default: 12 notifications
<b>-pruneDeadObjectsPeriodSeconds &lt;seconds&gt;</b>	Sets the period at which <i>Monitor</i> should clean up user-interface objects (such as the Host, and Process nodes in the tree views) that are no longer current (have no more children nodes in the tree view). This value should be increased when dealing with very large systems where the time to complete discovery is longer than the default value of 3 seconds. Default: 3 seconds

Table 2.1 Command-line Options

Option	Description
<b>-spawnReadThreads</b>	Instructs <i>Monitor</i> to use multiple threads (according to the number of cores on the host) to retrieve data from its DataReaders (which contain monitoring data). This is typically only needed for very large systems. Default: Not specified (use a single read thread to retrieve data at a period of 1 second)
<b>-verbosity &lt;value&gt;</b>	Sets the verbosity for <i>Monitor</i> and the <i>Connext Core Libraries</i> . 0: silent (both Core Libraries and <i>Monitor</i> ) 1: errors (both Core Libraries and <i>Monitor</i> ) 2: warnings ( <i>Monitor</i> only) 3: warnings (both Core Libraries and <i>Monitor</i> ) 4: information ( <i>Monitor</i> only) 5: tracing ( <i>Monitor</i> only) 6: tracing (both Core Libraries and <i>Monitor</i> ) Default: 1

# Chapter 3 A Demo using RTI Shapes Demo

Before going through the steps in this chapter, make sure that both *RTI Monitor* and *RTI Shapes Demo* are installed.

## 3.1 Showing System Topology, Sample Counts and Rates

1. Start two instances of *Shapes Demo*:

- On Linux systems:

If you have *RTI Launcher*, you can use its Utilities tab to start *Shapes Demo*. Or you can enter the following in a command shell:

```
> <Shapes Demo install directory>/scripts/rtishapesdemo
```

- On Windows systems:

If you have *RTI Launcher*, you can use its Utilities tab to start *Shapes Demo*. Or, from the Windows **Start** menu, navigate to **RTI Connexx <version>, RTI Connexx DDS Messaging <version> Components, RTI Shapes Demo <version>** and select **RTI Shapes Demo**.


- a. When the *Shapes Demo* window appears, open the Configuration dialog (under Controls). If the **Stop** button is enabled, press it.

- b. Uncheck the **Enable distributed logger** checkbox.

- c. From the drop-down list of profiles, choose **MonitorDemoLibrary::Monitor Default**.

*Shapes Demo* will use domain ID 0 by default. If you choose to use a different domain ID, make sure to use the same value in both instances of *Shapes Demo*.

- d. Press **Start**.

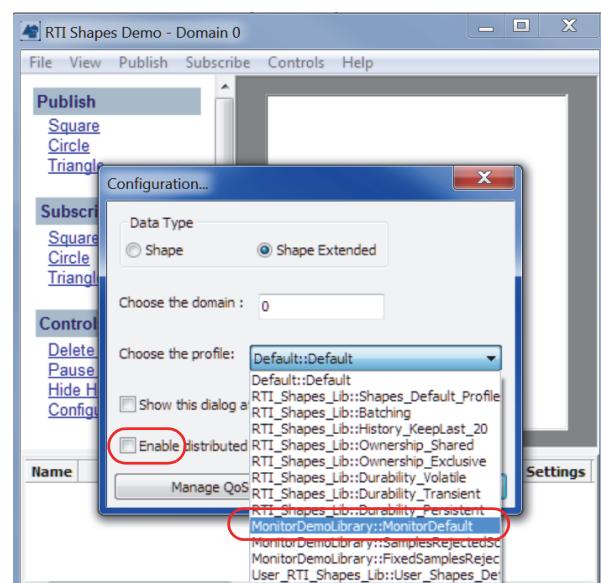

- e. Repeat, so you are running two instances of *Shapes Demo*.
2. In one instance of *Shapes Demo*, create a reliable square publisher as follows:
  - a. Select **Publish, Square**.
  - b. Choose the profile **MonitorDemoLibrary::MonitorDefault**.
  - c. Make sure the **Reliability** box is checked.
  - d. Select **OK**.
3. In the other instance of *Shapes Demo*, create a reliable square subscriber as follows:
  - a. Select **Subscribe, Square**.
  - b. Choose the profile **MonitorDemoLibrary::MonitorDefault**.
  - c. Check the **Reliability** box.
  - d. Select **OK**.
4. Start *Monitor*:
  - On Linux systems:


If you have *RTI Launcher*, you can use its Tools tab to start *Monitor*.  
Or you can start *Monitor* using the provided **rtimonitor** script. For example, if you installed *Monitor* in **/opt/rti**, start it by entering:

```
> /opt/rti/RTI_Monitor_<version>/scripts/rtimonitor
```
  - On Windows systems:


If you have *RTI Launcher*, you can use its Tools tab to start *Monitor*.  
Or, from the Windows **Start** menu, navigate to **RTI Connexx <version>, RTI Connexx Tools <version> Components, RTI Monitor <version>** and select **RTI Monitor**.  
Or double-click **<installation directory>\scripts\rtimonitor.bat** in your browser.


5. Review the system topology:

- a. Expand the Physical View tree by clicking the button below the **Physical View** tab.

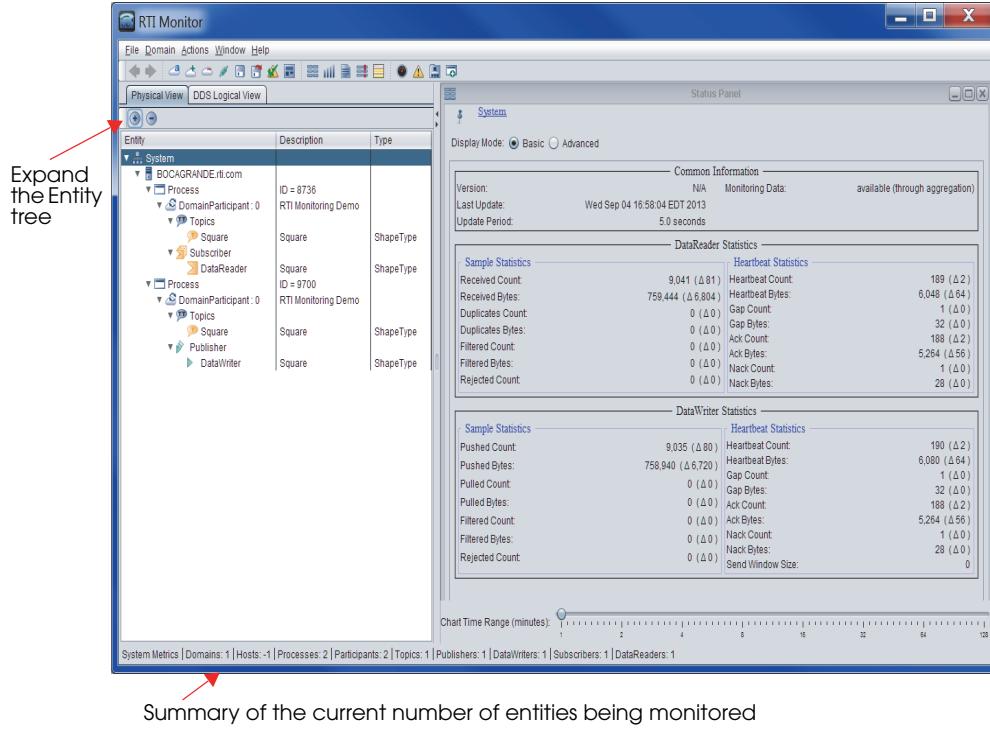

- b. Close the Status Panel on the right (select the red at the top-right corner of that panel).
- c. Select the **System Overview** button in the toolbar to see a summary of the monitored domain.

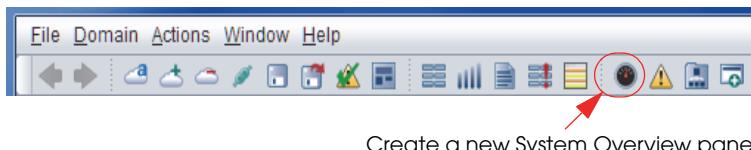

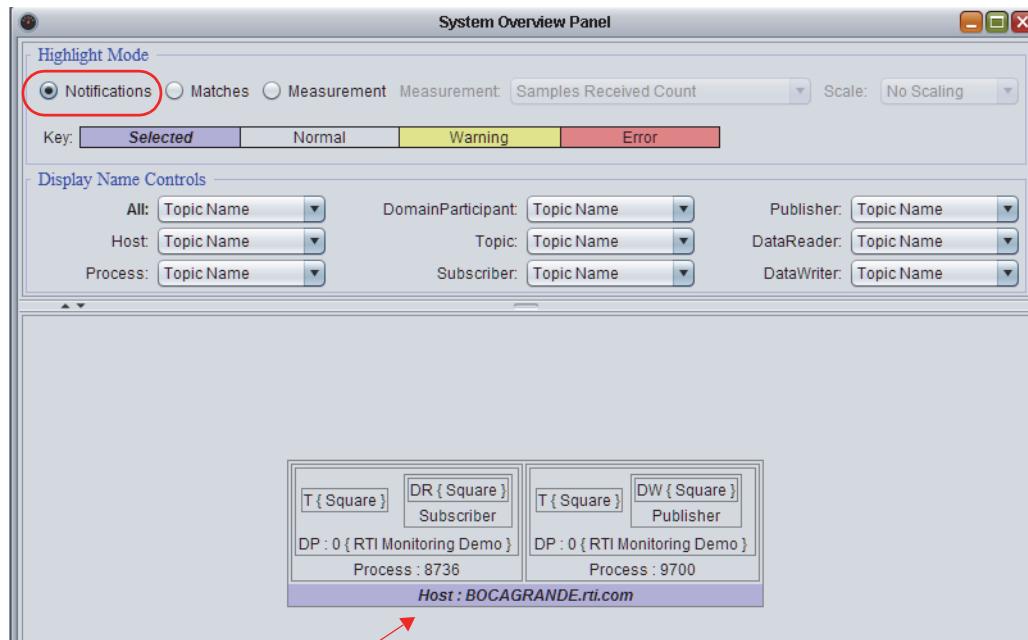


Visual map of the system


Outer-most box represents the host


T = Topic  
 DR = DataReader  
 DW = DataWriter  
 Sub = Subscriber  
 Pub = Publisher  
 DP = DomainParticipant  
 P:# = process ID

- d. Select the **Matches** option in the System Overview panel. Select **DW** or **DR** in the system map to see what entities are matched in the system.

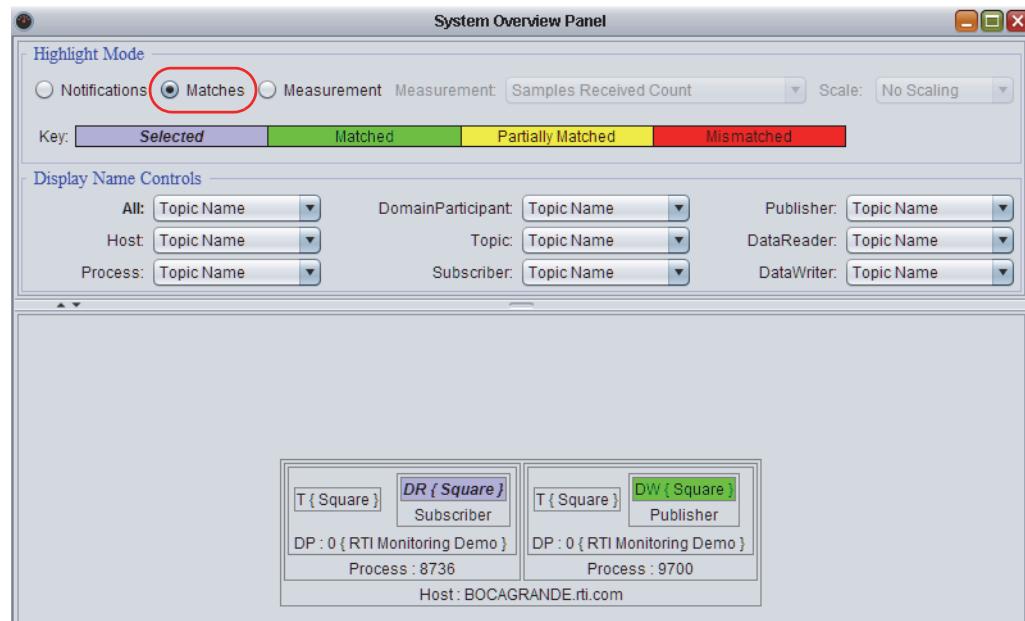

Notice that when you select an entity in the system map, that entity also becomes selected in the Physical View tree.


- e. Click the Back button  on the toolbar; it will change the selection back to the previously selected entity—in the Physical View tree and the System Overview panel. Try the Forward button  too.
- f. In the System Overview panel, select the **Measurement** option and **Samples Received Count** in the drop-down menu. You will see a color map that indicates the number of samples received by various entities in the system.

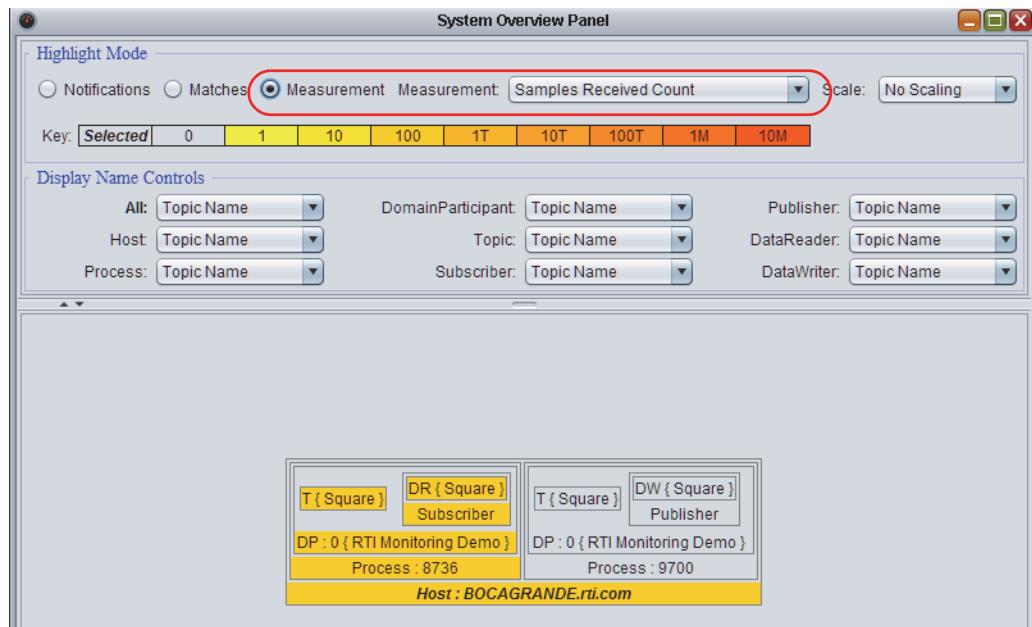

#### Notes:

- To change the scaling of the numbers indicated in the color map, use the **Scale** drop-down menu.
- Move the mouse over the entities in the map to see a tooltip of the actual value.
- You can select different **Display Name Controls** for each kind of entity (or all entities) to control how much detail will appear in the map in the System Overview panel.

- g. Close the System Overview panel.
- h. In the Physical View tree, select the **DataWriter**, then select the **Status Panel** button in the toolbar.

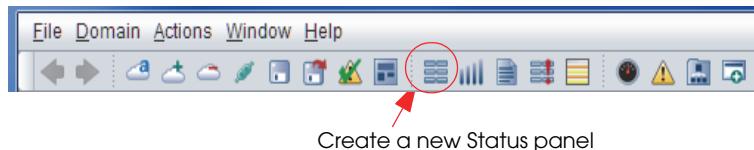

- i. Select the **Advanced** display mode.

- j. Scroll down to see Discovery Statistics. Click the link next to **Last DataReader GUID**. This will select the matching DataReader in the Physical View tree and the panel will switch to show DataReader status instead.

**Status Panel**

System > Host : BOCAGRANDE.rti.com > Process : 9700 > DP : 0 { RTI Monitoring Demo } > Publisher > DW { Square }

Filter by match: All Matches

Display Mode: Basic Advanced

Total Count:	0 (Δ 0)	First Unacked Sample DataReader GUID	c0a80183.2220.2.80000007
Last Instance Handle:		First Unelapsed Keep Duration:	1
<b>Reliable Writer Cache</b>		<b>Reliable Reader Activity</b>	
Empty Cache	950 (Δ 2)	Active Count	1 (Δ 0)
Full Cache	0 (Δ 0)	Inactive Count	0 (Δ 0)
Low Watermark	950 (Δ 2)	Last DataReader GUID:	c0a80183.2220.2.80000007
High Watermark	951 (Δ 2)	<b>Offered Incompatible QoS</b>	
Unacked Samples:	1	Total Count:	0 (Δ 0)
Unacked Samples Peak:	1	Last Policy Id:	Invalid
<b>DataWriter Cache</b>		<b>Policies:</b>	
Sample Count:	1	Sample Count:	1
Sample Count Peak:	1	Sample Count Peak:	1

Discovery Statistics

<b>Publications Matched</b>	
Total Count:	1 (Δ 0)
Current Count:	1 (Δ 0)
Current Count Peak:	1
Last DataReader GUID:	c0a80183.2220.2.80000007

Click here to select the matching reader

The top of the Status panel (and some of the other entity-specific panels that you will see later in this demo) shows a list of parent entities to which the selected entity belongs. For example:

**Status Panel**


System > Host : BOCAGRANDE.rti.com > Process : 8736 > DP : 0 { RTI Monitoring Demo } > Subscriber > DR { Square }

- k. Click on **DP : 0 { RTI Monitoring Demo }** in the list of parent entities. This will select the DomainParticipant in the Physical View tree and the Status panel will change to show the DomainParticipant's status. Notice that the Status panel now shows an aggregation of the statuses of all the DataWriters and DataReaders that belong to the selected DomainParticipant.

1. Close the Status panel.
6. Review all the processes in the system:
  - a. Select the **Processes Table** button from the toolbar.



- b. This will display a panel that shows the processor and memory usage of all monitored processes.

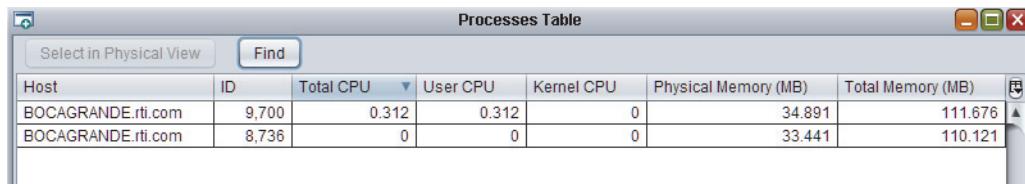


Host	ID	Total CPU	User CPU	Kernel CPU	Physical Memory (MB)	Total Memory (MB)
BOCAGRANDE.rti.com	9,700	0.312	0.312	0	34.891	111.676
BOCAGRANDE.rti.com	8,736	0	0	0	33.441	110.121

Select one of the processes in the table and click on the **Select in Physical View** button; this will select the same process in the Physical View tree.

The **Find** button is useful for searching a large table for a specific process. (This is a simple string search, so you must use the same format displayed in the table; for example, notice that the process ID includes a comma.)


- c. Click on the **Total CPU** column heading. This will sort the table by the values in this column. Clicking it again will sort in the opposite order. This is useful to watch in real time to see which processes are using a lot of CPU. You can sort based on any of the columns.
- d. Click the  button just above the vertical scrollbar. This allows you to choose which columns appear in the table. For instance, to remove the **ID** column, uncheck it. (Note: to enable the 'Pack Selected Column' option, select a cell in the top row.)

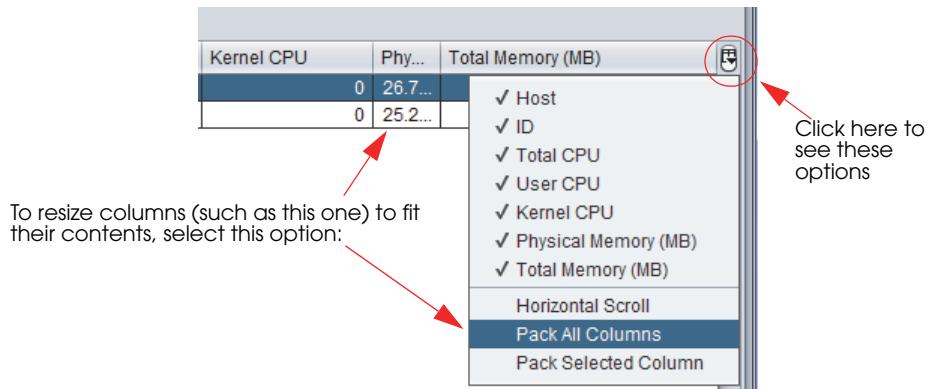

You can also change the order of the columns by simply dragging them to a new place in the table.

- e. Close the Processes Table.

7. Review all the data types in the system by selecting the **System Types Table** button from the toolbar.

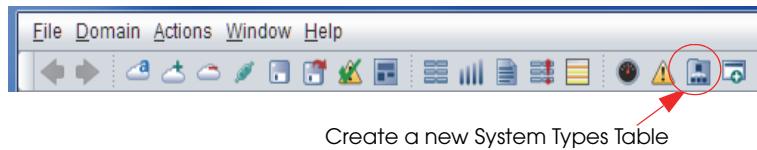

This will display a panel that shows all the known data types in the selected domain. In this case, there is only one data type called **ShapeType**.

System Types Table							
Type Name	Type ID	Keyed	Min Serialized	Max Serialized	Max Key Serialized	Type Code Serialized	
ShapeType	4328188006887bd3	Yes	32	160	137	378	


Like the Processes Table we saw earlier, this table also has a button (above the vertical scrollbar) to control the columns that appear in the table. You can also sort the table based on any of the columns by clicking on the column heading.

Close the System Types Table.

8. Show details of each data type:

a. Select the **Physical View** tab on the left.

b. Select **DataReader** in the tree, then select the **Description Panel** button from the toolbar.

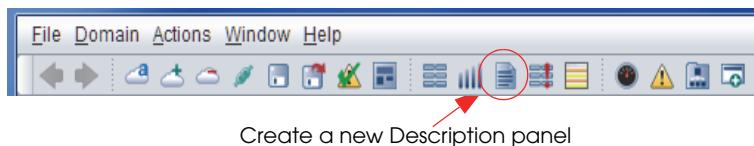

c. In the Description panel, select the **DataType** tab to see the data type for the data reader in IDL. You can also see other properties related to the data type.

d. Close the Description Panel.

9. To show panels for two or more entities side-by-side for comparison, you can press the **pin** button at the top-left corner of all the entity-specific panels. The panel is then pinned to the entity and the panel will periodically receive updated data for the pinned entity—even when another entity is selected in the tree.

a. Select the **Physical View** tab on the left.

b. From the menu, make sure **Window, Auto Checkerboard Tile** is checked.

```

Description Panel
System > Host : BOCAGRANDE.rti.com > Process : 6364 > DP : 0
RTI Monitoring Demo } > Publisher : DW { Triangle }


Maximum Serialized Size: 160
Maximum Key Serialized Size: 137
IDL Representation
enum ShapeFillKind {
    SOLID_FILL = 0,
    TRANSPARENT_FILL = 1,
    HORIZONTAL_HATCH_FILL = 2,
    VERTICAL_HATCH_FILL = 3
};
//@Extensibility EXTENSIBLE_EXTENSIBILITY

struct ShapeType{
    string<128> color; // @key
    //@ID 0
    long x; // @ID 1
    long y; // @ID 2
    long shapesize; // @ID 3
};
//@Extensibility EXTENSIBLE_EXTENSIBILITY


struct ShapeTypeExtended: ShapeType {
    public ShapeFillKind fillKind; // @ID 4
    public float angle; // @ID 5
};
//@Extensibility EXTENSIBLE_EXTENSIBILITY

```

- c. In the Physical View tree, select the **DataWriter**, then press the **Chart** button in the toolbar.

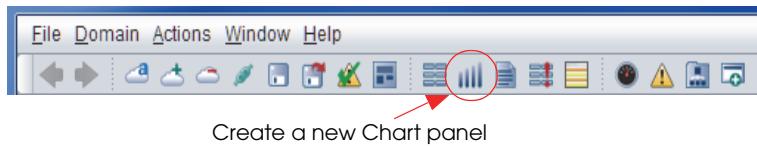

- d. In the Chart panel, press the **pin** button on the top-left corner. Notice that the button has changed to **pinned** to indicate that the panel is pinned to a specific entity. For Chart Data, select **Samples Written Counts**.
- e. In the Physical View tree, select the **DataReader**, then press the **Chart** button in the toolbar to create the second Chart panel and press its **pin** button . For Chart Data, select **Samples Received Counts**.
- f. Now you can compare the DataWriter's Samples Written Counts and the DataReader's Samples Received Counts side-by-side. Notice that the send and receive sample counts are about the same.

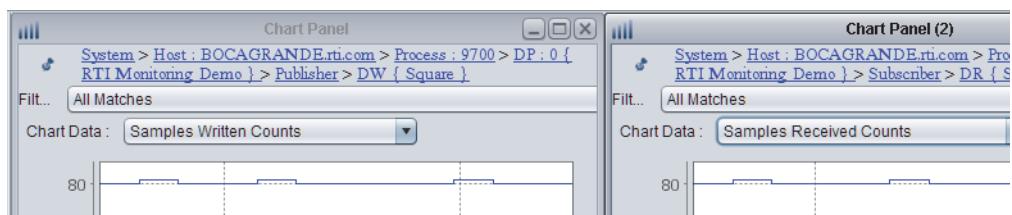

#### Notes:

- The default settings set the publish rate of the monitoring topics to 5 seconds. Therefore, you may need to wait 5 seconds for the *Monitor* data to be updated.
- The charts for Samples Written Counts and Samples Received Counts show the number of samples sent/received in the last sample period. In this case, the sample period is 5 seconds. Since *Shapes Demo* publishes 16 samples per second, you will see approximately 80 (5 x 16) samples per sample period.
- The **Chart Time Range** slider (at the bottom of *Monitor*) changes the time scale of the graphs.
- To unpin the panels, press their **pin** buttons again. Notice that now both chart panels are showing **DR** as the current entity at the top, since that entity is selected in the Physical View tree.

#### 10. Start a third instance of *Shapes Demo* with a specific publishing interval:

- On Windows systems:

Open a command prompt and enter the following (replacing the installation directory to match your system):

```
> cd <Shapes Demo installation directory>
> scripts\rtishapesdemo -pubInterval 250
```

- On Linux systems:

Enter the following (replacing the installation directory to match your system):

```
> cd <Shapes Demo installation directory>
> scripts/rtishapesdemo -pubInterval 250
```


Just like the other *Shapes Demo* instances, choose the profile **MonitorDemoLibrary:MonitorDefault**.

**11.** In the new *Shapes Demo* window, create a reliable square publisher of a different color:


- a. Select **Publish, Square**.
- b. Choose the profile **MonitorDemoLibrary:MonitorDefault**.
- c. Select **YELLOW**.
- d. Make sure the **Reliability** box is checked.
- e. Select **OK**.

**12.** Examine the data in chart:

- a. In *Monitor*, notice the number of received samples increases in the chart.

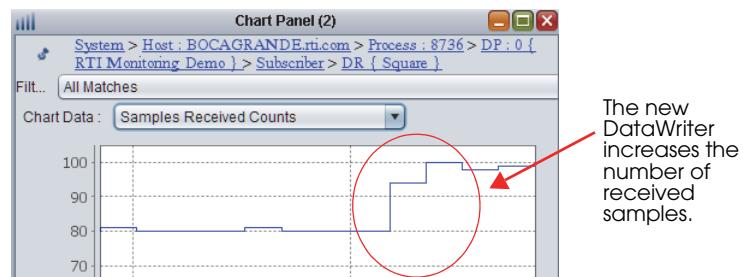

- b. Right-click in the white space in one of the charts to see how you can change the chart:

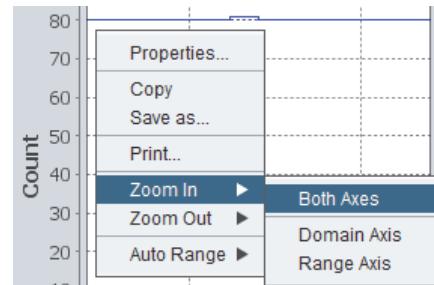


- c. Close the two Chart panels.

**13.** Let's see how to determine which DataWriter is contributing more received samples:

- a. In the Physical View tree, select the **Expand All** (+) button.
- b. Select the **DataReader** in the tree, then select the **Status Panel** button from the toolbar. For **Filter by match**, select the first matching endpoint in the drop-down menu.
- c. Select the **Status Panel** button again to open a second status panel for the reader. For **Filter by match**, select the second matching endpoint in the drop-down menu.


Now you have status for both of the reader's matching writers side-by-side. The Received Count values will point out which one is contributing more samples.

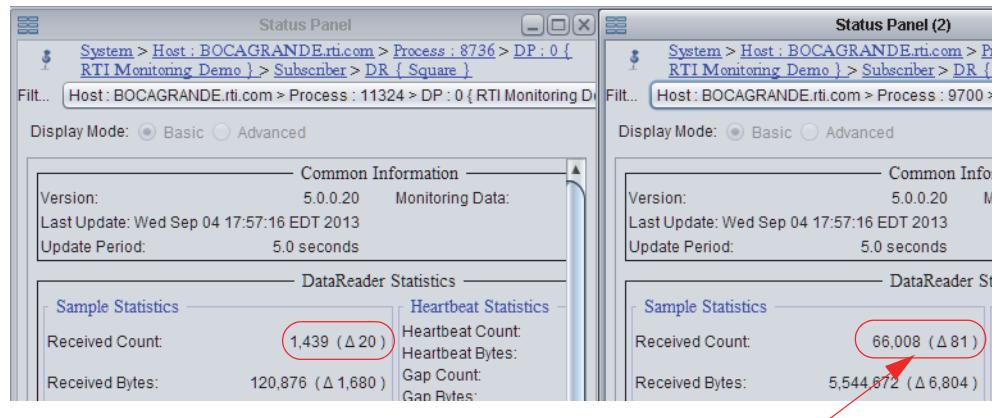


Delta value shows the change for the update period

#### 14. Let's see how to save the current data to be used for future analysis:

- Select the **Save Data** button in the toolbar.

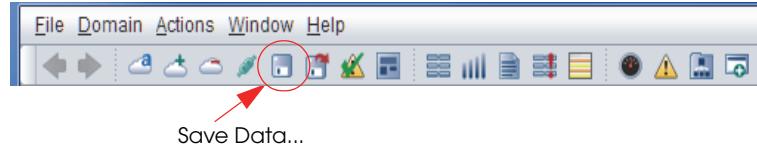

- Select a location and enter a filename in the file dialog.
- Close the third instance of *Shapes Demo*—the one started with **-pubInterval 250** that is publishing yellow squares.
- In the remaining two instances of *RTI Shapes Demo*, select **Controls, Delete All**. No shapes publications or subscriptions should be running in the system now.
- Select the **Load Data** button from the toolbar.

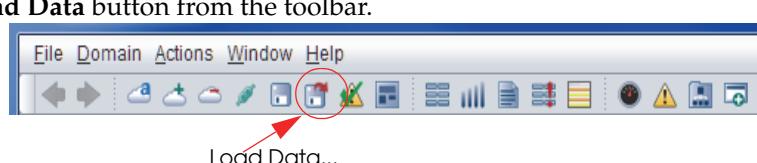

- You will see a prompt asking if you want to lose the current data and leave the domain. Select **OK** to continue. In the file dialog, select the file in which you previously saved the data.

Notice that the title of the *Monitor* window has changed to **Historical data mode** and shows the name of the loaded data file. Now you are seeing a snapshot of the system.



- Select the **Expand All** (+) button for the Physical View tree. You can see all the previously created entities, even though no publications or subscriptions are currently running.


- h. Select **Domain, Show Current Domain** from the menu. Notice that you are not joined to any domain now because *Monitor* is showing historical data instead of live data. Click **OK** to close the dialog box.
15. Prepare for the next demo:
- Select the **Join Domain** button  from the toolbar. You will see a prompt asking if you want to lose the currently loaded data. Click **OK** to continue. Rejoin your original domain by entering the domain ID, then click **OK**.  
Notice that the title of *Monitor* is no longer showing **Historical data mode**. *Monitor* is showing live data again.
  - Close all the panels.

## 3.2 Showing Content-Filtered Samples

The steps in this section assume you are using the same profile used in [Section 3.1](#) for the two instances of *Shapes Demo*.

- In one instance of *Shapes Demo*, create a reliable square publisher:
  - Select **Publish, Square**.
  - Make sure the **Reliability** box is checked.
  - Select **OK**.
- In the other instance of *Shapes Demo*, create a content-filtered, reliable square subscriber:
  - Select **Subscribe, Square**.
  - Check the **Reliability** box.
  - Check the **Use Filter** box under Content Filter Topic.
  - Select **OK**.

Notice that the subscriber only receives samples that are within the filtering square.
- Observe the filtered samples in *Monitor*:
  - Select the **Expand All**  button for the Physical View tree in *Monitor*.
  - In the Physical View tree, select the **DataReader**.  
The Status panel is showing values for the **DataReader**. Notice that the **Sample Statistics, Filtered Count** is zero. This shows that content filtering is only happening on the writer side in this case.
  - Close the Status panel.
- Show the content-filter expression:
  - In the Physical View tree, select the **DataReader**, then select the **Description Panel** button from the toolbar.

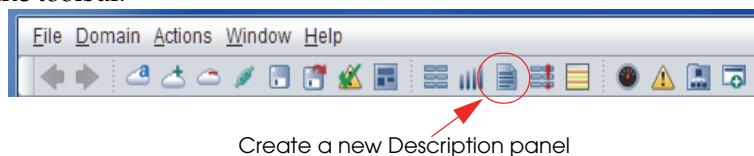

- b. Select the **Builtin Topic Data** tab in the Description Panel.

- c. See the content filter expression under `builtin topic data/content_filter_property/filter_expression` and `builtin topic data/content_filter_property/expression_parameters`.

Description Panel	
System > Host : BOCAGRANDE.rti.com > Process : 9700 > DP : 0 { RTI Monitoring Demo } > Subscriber > DR { Square }	
QoS    Builtin Topic Data    DataType	
Field	Value
<code>builtin topic data</code>	
<code>content_filter_property</code>	
<code>content_filter_topic_name</code>	ContentFilter_1
<code>expression_parameters</code>	
<code>expression_parameters[0]</code>	100
<code>expression_parameters[1]</code>	200
<code>expression_parameters[2]</code>	100
<code>expression_parameters[3]</code>	200
<code>filter_class_name</code>	DDSQL
<code>filter_expression</code>	<code>x &gt; %0 and x &lt; %1 and y &gt; %2 and y &lt; %3</code>
<code>deadline</code>	
<code>period</code>	Square
<code>destination_order</code>	
<code>kind</code>	infinite
<code>source_timestamp_tolerance</code>	BY_RECEPTION_TIMESTAMP_DESTINATIONORDER_QOS
<code>disable_positive_acks</code>	30.0 seconds
<code>durability</code>	
<code>direct_communication</code>	false
<code>kind</code>	true
	VOLATILE_DURABILITY_QOS

5. Prepare for the next demo:
  - a. Close the Description panel.
  - b. In the two instances of *Shapes Demo*, select **Controls, Delete All**.

### 3.3 Showing Deadlines

The steps in this section assume you are using the same profile used in [Section 3.1](#) for the two instances of *Shapes Demo*.

1. In one instance of *Shapes Demo*, create a reliable square publisher with a 100ms deadline:
  - a. Select **Publish, Square**.
  - b. Make sure the **Reliability** box is checked.
  - c. Set **Deadline** to 100.
  - d. Select **OK**.
2. In the other instance of *Shapes Demo*, create a reliable square subscriber with a 250ms deadline:
  - a. Select **Subscribe, Square**.
  - b. Check the **Reliability** box.
  - c. Set **Deadline** to 250.
  - d. Select **OK**.

3. In the publisher *Shapes Demo* instance, select **Controls, Pause Publishing**.

4. Observe the results in *Monitor*:


- a. Select the **Expand All** (+) button for the Physical View tree in *Monitor*.

Notice that all the entities in the Physical View tree are marked with yellow triangles to show there is a potential problem. The root cause of the problem is in bold (the **DataWriter** and **DataReader** in this case). The parent entities are also marked with yellow triangles, but not in bold.

Entity	Description	Type
System		
BOCAGRANDE.rti.com		
Process		
DomainParticipant : 0	ID = 8736 ?	
Topics		
Square	Square	ShapeType
Publisher		
DataWriter	Square	ShapeType
Process		
DomainParticipant : 0	ID = 9700 RTI Monitoring Demo	
Topics		
Square	Square	ShapeType
Subscriber		
DataReader	Square	ShapeType

b. In the Physical View tree, select the **DataWriter**, then select the **Status Panel** button in the toolbar.

c. In the Status panel, select the **Advanced** display mode. Under **Offered Deadlines Missed**, notice the non-zero **Total Count** highlighted in yellow.



d. In the Physical View tree, select the **DataReader**. Now the Status Panel is showing values for the **DataReader**.

Under **Requested Deadlines Missed**, you will see a non-zero **Total Count** highlighted in yellow.




You may notice that the DataWriter's **Offered Deadlines Missed Total Count** is different than the DataReader's **Requested Deadlines Missed Total Count**. That's because these entities were created with different deadline values (100ms for the writer, 250ms for the reader).

e. Close the Status panel.

5. Look at the notifications:


- a. In the Physical View tree, select the **DataWriter**, then select the **Notifications Panel** button in the toolbar.

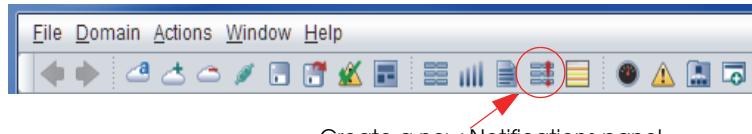

The Notifications panel displays the selected entity's current status and a historical list of all alarm statuses related to the selected entity.



- b. Close the Notifications panel.
- c. Select the All Notifications Table button from the toolbar.

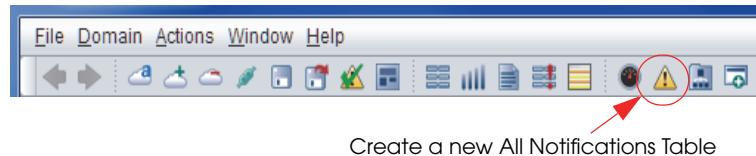


The All Notifications Table displays all the notifications *in the entire system* (not just for the selected entity). By default, it shows both warnings and errors. You can choose to see either just the warnings or just the errors by checking/unchecking the options.

All Notifications Table		
Entity	State	Status
System > Host : BOCAGRANDE.rti.com > Pro...	WARNI...	offered_deadline_missed_status.status.total_count_change : 50 > 0
System > Host : BOCAGRANDE.rti.com > Pro...	WARNI...	requested_deadline_missed_status.status.total_count_change : 20 > 0

If a row is selected in the All Notifications Table, clicking the **Select In Views** button will select the corresponding entity in the tree views.

- d. Close the All Notifications Table panel.
- e. Select the **System Overview Panel** button from the toolbar. Select the **Notifications** option. All the entities in the system that have caused a notification are highlighted in the system map.
- f. Close the System Overview Panel.

6. Clear the notifications:
  - a. In the publisher shapes demo instance, select **Controls, Resume Publishing**.
  - b. From *Monitor*'s menu, select the **Clear All Notifications** button from the toolbar. This will clear all the yellow markers in the tree.

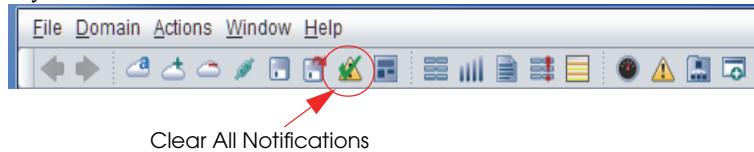

7. Prepare for the next demo:
  - a. In one instance of *Shapes Demo*, select **Controls, Delete All**.
  - b. Close the other *Shapes Demo* instance.

## 3.4 Showing a 'Samples Rejected' Scenario

1. Configure the existing instance of *Shapes Demo* to use the profile, **MonitorDemoLibrary::SamplesRejectedScenario**.
  - a. Select **Controls, Configuration, Stop**.
  - b. Choose the profile **MonitorDemoLibrary::SamplesRejectedScenario**.
  - c. Select **Start**.
2. Create a reliable square publisher with the **MonitorDemoLibrary::SamplesRejected-Scenario** profile:
  - a. Select **Publish, Square**.
  - b. Choose the profile **MonitorDemoLibrary::SamplesRejectedScenario**.
  - c. Make sure the **Reliability** box is checked.
  - d. Select **OK**.
3. Create a new *Shapes Demo* instance with a reliable subscribing rate of 1,000 ms:  
 For example, on a Windows system open a command prompt and enter the following (replacing the installation directory to match your system):
 

```
> cd <Shapes Demo installation directory>
> scripts\rtishapesdemo.bat -subInterval 1000
```

 Or, on a Linux system enter the following (replacing the installation directory to match your system):
 

```
> cd <Shapes Demo installation directory>
> scripts/rtishapesdemo -subInterval 1000
```
4. In the new *Shapes Demo* instance, create a reliable square subscriber that uses **take()** and the **MonitorDemoLibrary::SamplesRejectedScenario** profile:
  - a. Select **Subscribe, Square**.
  - b. Choose the profile **MonitorDemoLibrary::SamplesRejectedScenario**.
  - c. Check the **Reliability** box.
  - d. For the Read method to use, select **Take0**.


- e. Select OK.
5. Notice that the subscriber is not receiving all the samples. Let's see why.
- Select the **Expand All** (+) button for the Physical View tree in *Monitor*.
  - In the Physical View tree, select the **DataReader**, then select the **Status Panel** button from the toolbar.
  - Select the **Advanced** display mode.

Notice that the **Total Count** values for **Samples Lost** and **Samples Rejected** are non-zero. This indicates that not all samples are being received. **Samples Lost** and **Samples Rejected** are both yellow to indicate that this may or may not be a problem, depending on your use case.

Also notice further down under **DataReader Cache** that both **Sample Count** and **Sample Count Peak** are 2 (you will see why this is significant later).

DataReader Statistics	
<b>Sample Statistics</b>	<b>Heartbeat Statistics</b>
Received Count: 2,365 (Δ 82)	Heartbeat Count: 82 (Δ 4)
Received Bytes: 198,660 (Δ 6,888)	Heartbeat Bytes: 2,624 (Δ 128)
Duplicates Count: 0 (Δ 0)	Gap Count: 1 (Δ 0)
Duplicates Bytes: 0 (Δ 0)	Gap Bytes: 32 (Δ 0)
Filtered Count: 0 (Δ 0)	Ack Count: 25 (Δ 1)
Filtered Bytes: 0 (Δ 0)	Ack Bytes: 700 (Δ 28)
Rejected Count: 2,311 (Δ 80)	Nack Count: 57 (Δ 3)
	Nack Bytes: 1,820 (Δ 96)
<b>Samples Lost</b>	<b>Samples Rejected</b>
Total Count: 2,260 (Δ 95)	Total Count: 2,311 (Δ 80)
Last Reason: LOST_BY_WRITER	Last Reason: REJECTED_BY_SAMPLES_PER_REMOTE_WRITER_LIMIT
<b>Liveliness Changed</b>	<b>Requested Incompatible QoS</b>
Alive Count: 1 (Δ 0)	Total Count: 0 (Δ 0)
Not Alive Count: 0 (Δ 0)	Last Policy Id: Invalid
Last DataWriter GUID: c0a80183.22204.80000002	Policies:
<b>Requested Deadlines Missed</b>	<b>DataReader Cache</b>
Total Count: 0 (Δ 0)	Sample Count: 2
Last Instance Handle:	Sample Count Peak: 2

- d. In the Physical View tree, select the **DataReader**, then select the **Description Panel** button from the toolbar.

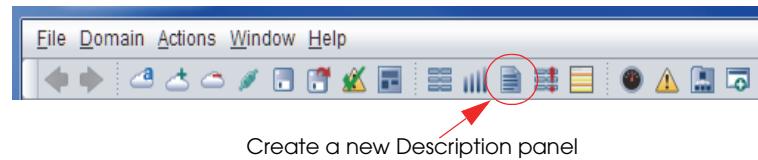

In the QoS tab, scroll down and notice that the values for **qos/resource\_limits/max\_samples** and **qos/reader\_resource\_limits/max\_samples\_per\_remote\_writer** are both 2, which is the same as the **Sample Count** and **Sample Count Peak** values we saw in the Status panel. This shows that the reader's queue for receiving samples is full.

Field	Value
reader_data_lifecycle	
autopurge_disposed_samples_delay	infinite
autopurge_nowriter_samples_delay	infinite
reader_resource_limits	
disable_fragmentation_support	false
dynamically_allocate_fragmented_samples	false
initial_fragmented_samples	4
initial_infos	32
initial_outstanding_reads	2
initial_remote_virtual_writers_per_instance	2
initial_remote_writers	2
initial_remote_writers_per_instance	2
initial_remote_virtual_writers	2
max_app_ack_response_length	0
max_fragmented_samples	1,024
max_fragmented_samples_per_remote_writer	256
max_fragments_per_sample	512
max_infos	-1
max_outstanding_reads	-1
max_query_condition_filters	4
max_remote_virtual_writers	-1
max_remote_virtual_writers_per_instance	-1
max_remote_writers	-1
max_remote_writers_per_instance	-1
max_remote_writers_per_sample	3
max_samples_per_read	1,024
max_samples_per_remote_writer	2
max_total_instances	0
reliability	
resource_limits	
initial_instances	1
initial_samples	1
instance_hash_buckets	1
max_instances	2
max_samples	2
max_samples_per_instance	2
subscription_name	

6. Fix the problem by creating a DataReader with a larger queue size:
  - a. In the Subscriber *Shapes Demo* instance, select **Controls, Delete All**.
  - b. Create a new reliable square subscriber that uses **take()** and the **MonitorDemoLibrary::FixedSamplesRejectedScenario** profile, which will fix the problem by increasing the queue size.
  - c. Select **Subscribe, Square**.
  - d. Choose the profile **MonitorDemoLibrary::FixedSamplesRejectedScenario**. This profile uses a larger queue size.
  - e. Check the **Reliability** box.
  - f. For Read method to use, select **Take()**.
  - g. Select **OK**.

7. Verify the new reader queue size in *Monitor*:

- a. Select the **Expand All**  button under the Physical View tab.
- b. In the Physical View tree, select the **DataReader**.
- c. In the Status panel that is already open, notice that the **Total Count** values for **Samples Lost** and **Samples Rejected** are now zero.

In the **DataReader Cache** section, notice the values for **Sample Count** and **Sample Count Peak**.

In the Description panel that is already open, notice in the QoS tab that the values for **qos/resource\_limits/max\_samples** and **qos/reader\_resource\_limits/max\_samples\_per\_remote\_writer** are now 100. This is larger than the **SampleCount** and **Sample Count Peak** values seen in the Status panel. This shows that now the reader queue still has a lot of room before it becomes full and starts dropping samples.

This concludes the demo.

# Chapter 4 Troubleshooting

---

## 4.1 Debugging Problems with Monitor on Windows System

If you run *Monitor* on a Windows system and it is not showing any error messages, but the *Monitor* window is not showing up, or you are not seeing any data in the *Monitor* window, you can modify the file `<installation directory>\scripts\rtimonitor.bat` to change `javaw.exe` to `java.exe`, so that error messages will be displayed in a command prompt to help you debug the issue.

---

## 4.2 Running Monitor on a System with Limited Memory

*Monitor* runs with Java and a default maximum Java heap size of 500m. If you are monitoring on a system with very little memory and you are only monitoring a very small system, you may be able to reduce memory usage by modifying the file in `<installation directory>\scripts\rtimonitor.bat` (on Windows systems) or `<installation directory>/scripts/rtimonitor` (on Linux systems) to decrease the maximum Java heap size usage.

For example, in the script change “`-Xmx500m`” to “`-Xmx300m`”.

*Monitor* will save some history of statistics to be displayed in the charts. By default, this value is 12. If you are running on a system with limited memory, you can decrease this value with the command-line option, `-historyDepth <value>` (see page 2-3).

---

## 4.3 Running Monitor with a Large System

*Monitor* runs with Java and a default maximum Java heap size of 500m. If you are monitoring a very large system, you may need to modify the file `<installation directory>\scripts\rtimonitor.bat` (on Windows systems) or `<installation directory>/scripts/rtimonitor` (on Linux systems) to increase the maximum Java heap size usage. For example, in the script change “`-Xmx500m`” to “`-Xmx1536m`”.

## 4.4 Error Regarding 'Incompatible Shared Memory Segment'

If you see the following error messages:

```
[D0000 | ENABLE] NDDS_Transport_Shmem_attach_writer:incompatible shared memory segment found.  
Found segment with max message size 9216. Needed 65530.
```

These messages likely mean either:

- a. Another application is currently running on the same host, in the same domain, with different shared-memory transport settings, or
- b. If you are on a Linux system, there was an old application running on that domain ID before—with different shared-memory transport settings—that was not terminated gracefully.

To correct problem (a), if you do not intend to monitor the application that has different shared-memory settings on the same host, you can use another domain ID for the monitoring topics, both in *Monitor* and in the *Connext* applications that you want to monitor. If you intend to monitor all the *Connext* applications in that domain on the same host, make sure that all the applications running on the same host with the same domain ID have consistent shared-memory transport settings.

The QoS profile used by *Monitor* is in `<installation directory>/config/rtimonitor_qos_profiles.xml`. The transport settings in this profile need to be consistent with the transport settings in all the *Connext* applications that are running on the same host with the same domain ID. All shared-memory transport settings are specified under the **participant\_qos** and have property names that begin with **dds.transport.shmem.builtin**. See the documentation for *Monitoring Library* for an explanation of the transport settings.

To correct problem (b), use the **ipcrm** command to clean up the shared-memory and shared-semaphore resources. See the *RTI Core Libraries and Utilities Platform Notes* for details. You can also run *Monitor* and the *Connext* application that you want to monitor with another domain ID that doesn't have any shared-memory or shared-semaphore resources left-over from previous runs.

## 4.5 Unable to Create Participant in Connext Application

If you see error messages similar to the following:

```
[CREATE Participant] RTIOSapiLibrary_open:error opening library  
rtimonitoringnothing.dll  
[CREATE Participant] DDS_DomainParticipantMonitoring_  
initializeMonitoringLibrary:  
ERROR: Failed to get load monitoring library  
[CREATE Participant] DDS_DomainParticipantMonitoring_initializeI:  
!create monitoring library instance  
[CREATE Participant] DDS_DomainParticipant_createI:!create builtin monitoring support  
[CREATE Participant] DDS_DomainParticipantFactory_create_participant_disabledI:!create participant
```

These messages most likely mean that your *Connext* application is configured to load the monitoring library dynamically, but you don't have the monitoring library in your path.

If you are running on a Linux system, make sure that your **LD\_LIBRARY\_PATH** environment variable includes the monitoring library. If you are running on Windows, make sure that your **PATH** environment variable includes the monitoring library.

If you are seeing error messages similar to the following:

```
[CREATE Participant] DDS_DomainParticipantFactory_set_default_-
participant_qos:ERROR: Inconsistent QoS (more information at WARN verbosity
level)
[CREATE Participant] DDS_DomainParticipantFactory_load_profilesI:ERROR: load-
ing profiles
[CREATE Participant] DDS_DomainParticipantFactory_create_participant_-dis-
abledI:ERROR: loading profiles
```

These messages most likely mean that you are using a lot of properties in the **ParticipantQos** to configure monitoring, and **participant\_property\_string\_max\_length** or **participant\_property\_list\_max\_length** in the **ResourceLimitsQosPolicy** in **DomainParticipantQos** is not large enough to accommodate all the properties. Try increasing those values in your *Connext* application to fix the problem.

---

## 4.6 Not Receiving Monitoring Data due to Inconsistent QoS

If you see an error message similar to the following:

```
WARN : com.rti.dds.monitor.util.DebugDataReaderLis-
tener.on_requested_incompatible_qos(Unknown Source) : - topic: rti/dds/mon-
itoring/domainParticipantDescription :
RequestedIncompatibleQosStatus [total_count=1, total_count_change=1,
last_policy_id=Durability, policies=[QosPolicyCount [policy_id=Durability,
count=1]]]
```

This message most likely means that the internal DataWriters created by *Monitoring Library* for publishing monitoring topics have QoS that are incompatible with the QoS of the internal DataReaders created by *Monitor* for subscribing to monitoring topics.

If you see this error message, try specifying the **rti.monitor.config.qos\_library** and **rti.mon-
itor.config.qos\_profile** properties in the *Connext* application that has monitoring turned on, to ensure that the internally created DataWriters are using the correct QoS values. The default QoS values used for the internally created DataReaders are listed in **RTIMonitoringQosLibrary** and **RTIMonitoringPublishingQosProfile** in the file <Monitoring Library installation directory>/resource/xml/MONITORING\_QOS\_PROFILES.xml in the *Monitoring Library* bundle. Refer to *Monitoring Library*'s documentation in the *Monitoring Library* bundle for an explanation of the QoS settings that are required to specify the QoS library and profile.

---

## 4.7 Not Receiving Monitoring Data for Entities

Some of the monitoring topics (the *description* monitoring topics) can have data that is larger than what is supported by the default transport settings, especially for cases in which a lot of propagated properties are added to the **PropertyQosPolicy**, or a large **UserDataQosPolicy**, **Topic-
DataQosPolicy**, or **GroupDataQosPolicy** is involved. By default, asynchronous publishing is

used for the writers in *Monitoring Library* for these monitoring topics to resolve the large data issue—transport settings and the maximum type-code serialized size are left at the default values.

The maximum type-code serialized size and transport settings *must be consistent* between *Monitor* and the *Connext* application in which monitoring is enabled. By keeping the maximum type-code serialized size and all the transport settings at default values in the QoS profile used by *Monitor*, all monitored *Connext* applications that use default settings will work with *Monitor* out of the box.

If you are not receiving monitoring data, it is most likely because you do have inconsistent transport settings or inconsistent maximum type-code serialized size settings between *Monitor* and the *Connext* application in which monitoring is enabled (maybe you are not using the default maximum type-code serialized size or transport settings in the monitored *Connext* application).

If your monitored *Connext* application is required to use a large maximum serialized type-code size or transport settings that support large data, you will need to change the corresponding settings in the QoS profile used by *Monitor*. The maximum type-code serialized size is configured under **resource\_limits** for the **participant\_qos**; transport settings are configured under **property** for the **participant\_qos**. The QoS profile used by *Monitor* is in `<installation directory>/config/rtimonitor_qos_profiles.xml`. See Section 3.8 in the *Monitor User's Manual* for more information on editing this file.

A sample large-data QoS profile is provided with the *Monitoring Library* bundle for your reference; it has large-data support turned on for both the UDPv4 and shared-memory transports, and uses large maximum type-code serialized size support. If you need to use large data or large type-code in your *Connext* application, you can use this provided large-data QoS profile in the monitored application and also uncomment the corresponding transport and maximum type-code serialized size settings in the *Monitor* QoS profile; this will enable consistent large maximum type-code serialized size and large-data transport settings. Please see the documentation in the *Monitoring Library* bundle for an explanation of this large-data QoS profile.

---

## 4.8 No Type Code for Some Entities in Description Panel

If the type code for your user data type is larger than the default maximum type-code serialized size, the IDL for that data type may not show up in the **Data Type** tab in *Monitor*'s Description Panel. However, it should not affect the rest of the monitoring data.

To see the IDL representation of large type-code in *Monitor*, you can increase the maximum type-code serialized size, both in the monitored *Connext* application and in *Monitor*. However, if you do that, you will also need to increase the values in the transport settings to support large data in *Connext* discovery traffic—both in the monitored *Connext* application and in *Monitor*.

A sample large-data QoS profile is shipped with the *Monitoring Library* bundle; it has large-data support turned on for both the UDPv4 and shared-memory transports, and a larger maximum type-code serialized size. Please see the documentation in the *Monitoring Library* bundle for an explanation of the large-data QoS profile. If you use the provided large-data QoS profile, you can uncomment the corresponding settings in the *Monitor* QoS profile to enable support for large type-code and large data. Both the monitored *Connext* application and *Monitor* must have a consistent maximum type-code serialized size and consistent transport settings. The QoS profile used by *Monitor* is in `<installation directory>/config/rtimonitor_qos_profiles.xml`.

## 4.9 Running out of Memory

If *Monitor* is running out of memory, you can use a smaller value for the **-historyDepth** command-line option or run *Monitor* on a 64-bit machine.

---

## 4.10 Running without an Active Network Interface

If you run *Monitor* on a computer that does not have an active network interface, you may see an error message stating “No interface found enabled for multicast.”

Modify the QoS profile used by *Monitor* to turn off UDPv4 and only use the shared-memory transport:

```
<participant_qos>
.....
    <transport_builtin>
        <mask>SHMEM</mask>
    </transport_builtin>
</participant_qos>
```

The QoS profile used by *Monitor* is in **<installation directory>/config/rtimonitor\_qos\_profiles.xml**. See Section 3.8 in the *Monitor User’s Manual* for more information on editing this file.