



**NAVIG[8]R
GPS NAVIGATION**

★ ★ ★ ★ ★

- PROFESSIONAL GPS NAVIGATION SYSTEM
- AUSTRALIA AND NZ MAPS PRELOADED
- FREE LIFETIME MAP UPDATES
- ESTREET DIRECTORY WORKS OFFLINE
- TURN BY TURN NAVIGATION

EXCLUSIVE
THE ULTIMATE STREET GUIDE GPS OR OFFLINE GUIDANCE

*Note:
eStreet
Maps does
not need an
internet or
satellite
connection
to operate.*



- | | | | | | |
|--|-------------------------|--------------------|----------------------|----------------------|-------------------------|
|
SKYPE READY |
8GB INTERNAL MEMORY |
DUAL CAMERA |
BUILT-IN SPEAKER |
HEADPHONE SOCKET |
BUILT-IN MICROPHONE |
|
10" CAPACITIVE TOUCH SCREEN (5 POINTS) |
16:9 WIDESCREEN |
eLIBRARY READY |
eBOOK READABLE |
G SENSOR |
WIFI READY |

TABLE OF CONTENTS

APPEARANCE AND BUTTONS _____	4
ACCESSORIES _____	5
TURNING ON AND OFF _____	5
BATTERY CHARGING _____	5
RUN TIME _____	5
5 POINT TOUCH-SCREEN _____	5
SLEEP MODE _____	5
LOCK / UNLOCK _____	6
HOME SCREEN ICONS _____	6
VIEW ALL APPS _____	7
APP ICONS _____	7
WIDGETS _____	8
NOTIFICATION MENU BAR _____	8
SHORTCUT MENU BAR _____	8
SETTINGS - WI-FI _____	9
SETTINGS - BLUETOOTH _____	10
CONNECTING TO A PC / MAC VIA USB _____	10
eSTREET DIRECTORY _____	11
NAVIGATOR _____	16
EBOOK DRM (ALDIKO) _____	17
WHY CREATE A GOOGLE ACCOUNT _____	19
GOOGLE PLAY APP _____	19
SPECIFICATIONS _____	19
FAQ _____	20
WARRANTY INFORMATION _____	21

IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain this manual for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- The following will damage this product: water or moisture ingress, exposure to prolonged extreme heat or cold; excessive humidity, dust or sandy.
- It is recommended to thoroughly charge the device for the first time. Subsequent charges can be as needed. During charging, or extended use, the product may become warm.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Remove data cable by pulling it from the plug, not from the cord.

APPEARANCE AND BUTTONS:



Number	Description
1	Microphone
2	Reset button
3	Micro SD card slot. (Supports cards up to 32GB)
4	HDMI output
5	Stereo Earphone Socket (3.5mm Jack)
6	USB interface (Data Transfer, Charging, USB Storage flash drive).
7	On / OFF button (*Press and hold to turn ON and OFF)
8	Volume Down
9	Volume Up
10	Rear mounted camera
11	Internal speakers
12	Front mount camera

ACCESSORIES

1 x 10" MID-1060, 1 x DC Power Adaptor with USB socket, 1 x Micro USB/DATA cable, 1 x User Guide

TURNING ON AND OFF


To turn ON, PRESS and HOLD the POWER button until the screen turns ON.

To turn OFF, PRESS and HOLD the POWER button until the power screen appears. Then select Power Off.

Note: At any time you can press the POWER BUTTON to enter Snooze mode or to wake from Snooze mode.

BATTERY CHARGING

You can charge your MID-1060 using the supplied DC Power Adaptor and USB/DATA cable.

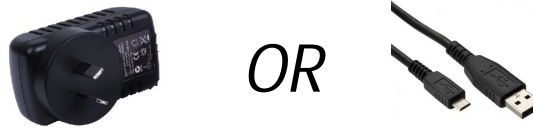

You will be alerted when the battery charge falls below 15%. If the battery is completely depleted the MID-1060 will automatically turn off.

Note: If the battery has been completely exhausted, it may take a few minutes to switch the MID-1060 on once charging has begun. The MID-1060 can be used during charging however this may increase the time needed to fully charge the battery.

RUN TIME

Run time of portable devices such as this MID-1060 can be extended by reducing the screen brightness, turning off Bluetooth function, turning off the Location function, turning off WiFi when not in use, turning off Apps that are not required and manually turning the screen off using the power button when not in use.

5 POINT TOUCH-SCREEN

The MID-1060 has 5 different touch screen behaviours.

- | | |
|-----------------|---|
| 1-TAP | Tap once to select or start a function, option or application |
| 2- TAP and HOLD | Tap and hold to select or start a function |
| 3-DRAG and DROP | Tap then drag an item and drop it to a location |
| 4-DOUBLE TAP | Double Tap an item twice to select or start a function |
| 5-SLIDE/SWIPE | Tap then slide an item up, down, left or right |

SLEEP MODE


During prolonged inactive use where no buttons have been pressed, the screen will turn off automatically to conserve power. Press the POWER button to wake the MID-1060.

Note: This can be adjusted in Display option under Settings.

LOCK / UNLOCK

When the MID-1060 is in sleep mode, press the POWER button to show the unlock screen. TAP and HOLD the LOCKED padlock icon, drag it to the UN-LOCKED padlock icon, then release.
Note: Some of the following images may be different from the actual product supplied.

HOME SCREEN ICONS

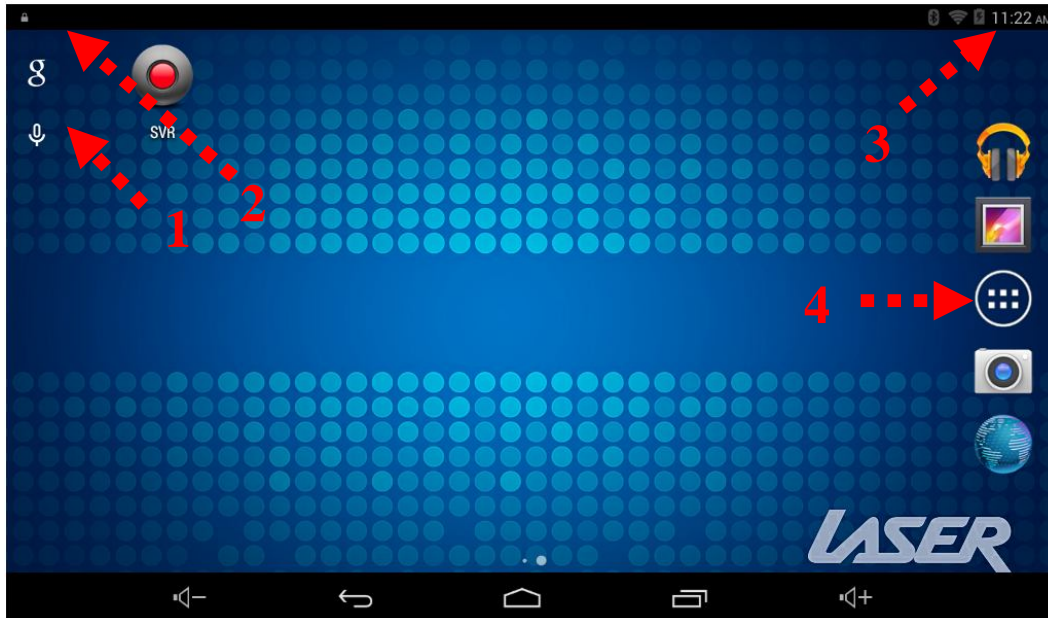


Number	Icon	Function
1		Open web browser / Voice command
2		"Swipe Down" Notification Menu Bar
3		"Swipe Down" Shortcut Menu Bar
4		View all apps
5		Increase Volume
6		Open a list of recently used applications
7		Home screen
8		Back button
9		Decrease Volume

VIEW ALL APPS





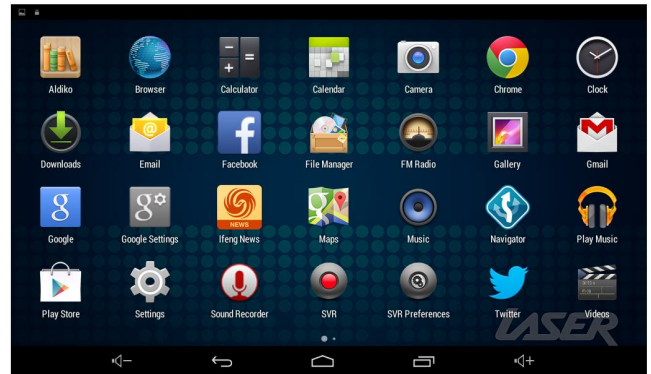


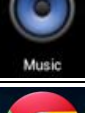

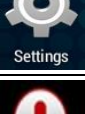




Press to view all the installed apps on your tablet




APPS ICONS

Note: Some of the following images may be different from the actual product supplied.

Icon	Function
	Browser: Internet browser
	Calendar: Create and manage daily, weekly and monthly events, set alarm clocks. <i>Note: A Google account is required</i>
	Camera: Take and view pictures and video
	Clock: Access alarm clock settings and time display
	Downloads: Manage downloaded content
	E-mail: e-mail access
	File Manager: Access all pictures, video, music, sound clips and other files saved on the device and SD card
	Music: Music player
	Web Browser: Open Chrome web browser
	Settings: View settings menu
	Sound Recorder: Record sound using the microphone
	Videos: Video player

WIDGETS

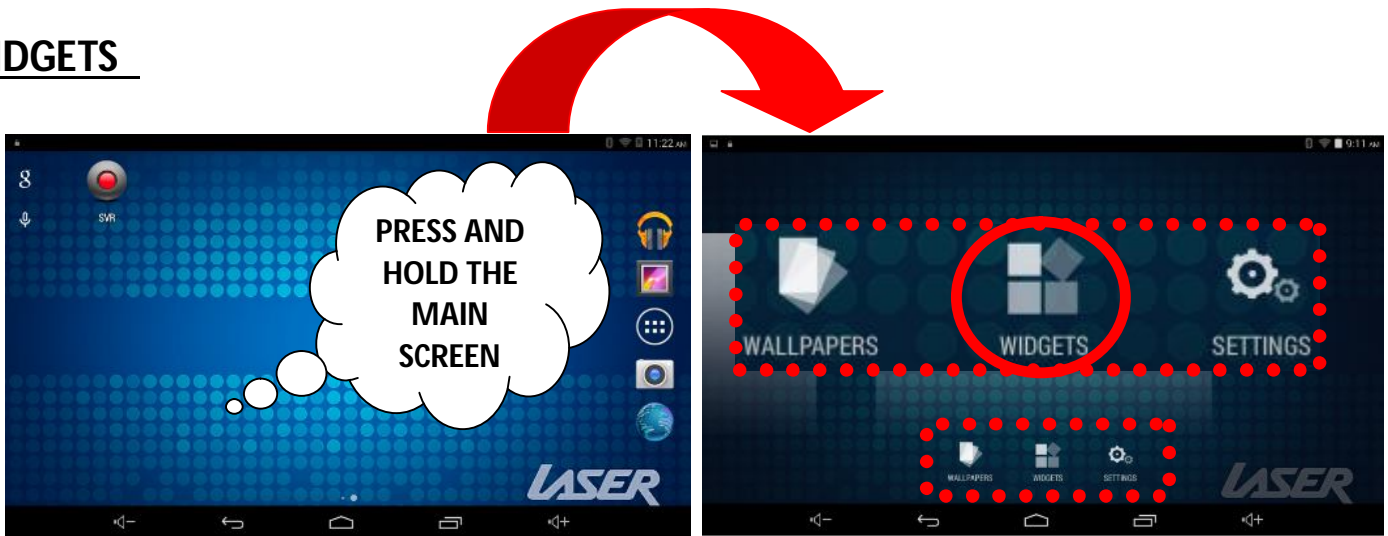

Users can add or remove Widget program icons (shortcuts) from the desktop as well as move them to different desktop screens.


To add a Widget, press and hold the desired widget, drag and drop it to the desired position on the desktop.

To delete an icon, press and hold the icon until the "X" icon appears at the top LEFT of the screen. Drag the icon to the "X" and then release to delete.

NOTIFICATION MENU BAR

Swipe down over the Notification Menu Bar (top left of the screen) to bring up any notifications you may have.

SHORTCUT MENU BAR ■■■■▶

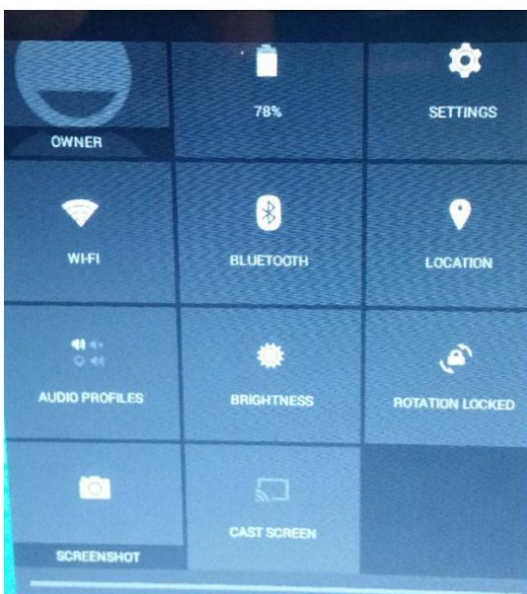

Swipe down over the Short cut Menu Bar to view items such as:


Battery charge, Settings, WiFi, Bluetooth, Location, Audio Profiles, Brightness, Rotation Locked, ScreenShot, CastScreen.

SETTINGS

Wi-Fi

Note: a WiFi connection is required if connecting to the internet (for email, Play Store or web browsing)


When WiFi is turned on it will automatically scan for all available WiFi networks

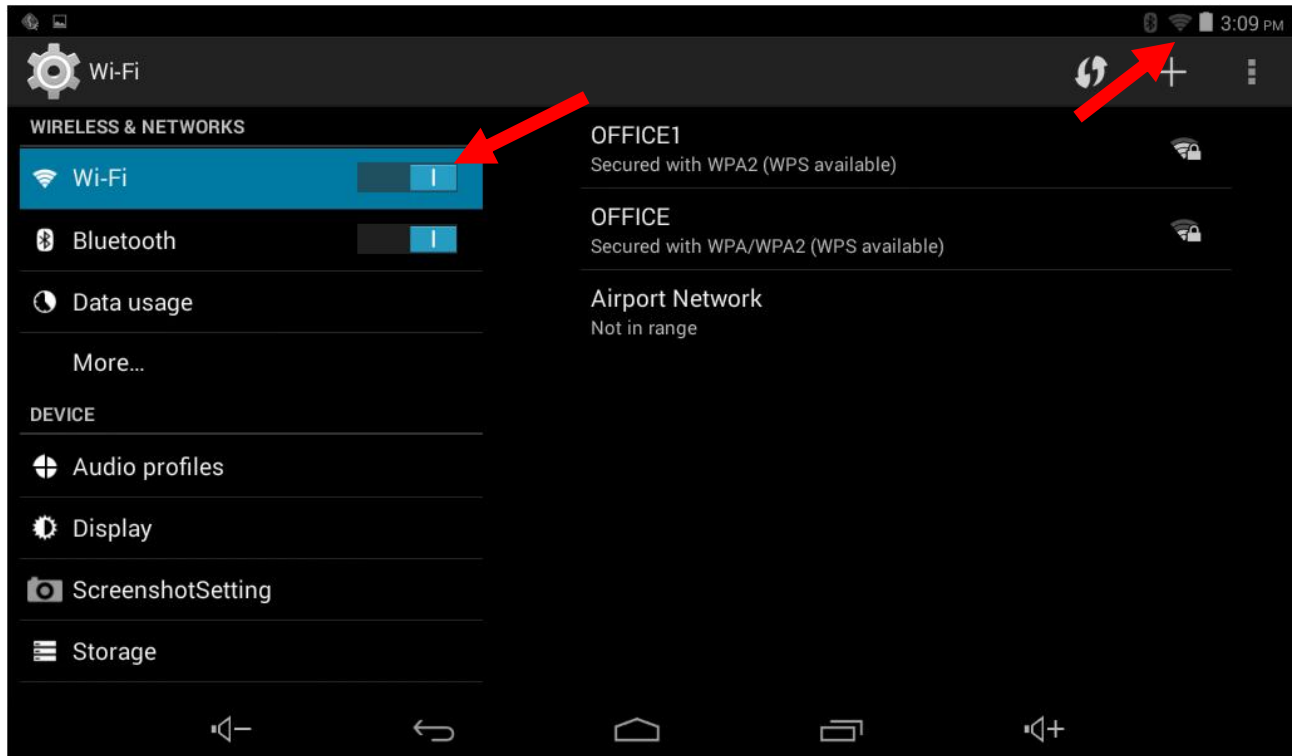

Tap the desired NETWORK name. If this NETWORK connects successfully, "Connected" will appear. If the NETWORK is encrypted, enter the password then tap "Connect".

Your MID-1060 will indicate when the NETWORK connection is ready for use when the WiFi icon appears on the top right notification bar.

Bluetooth

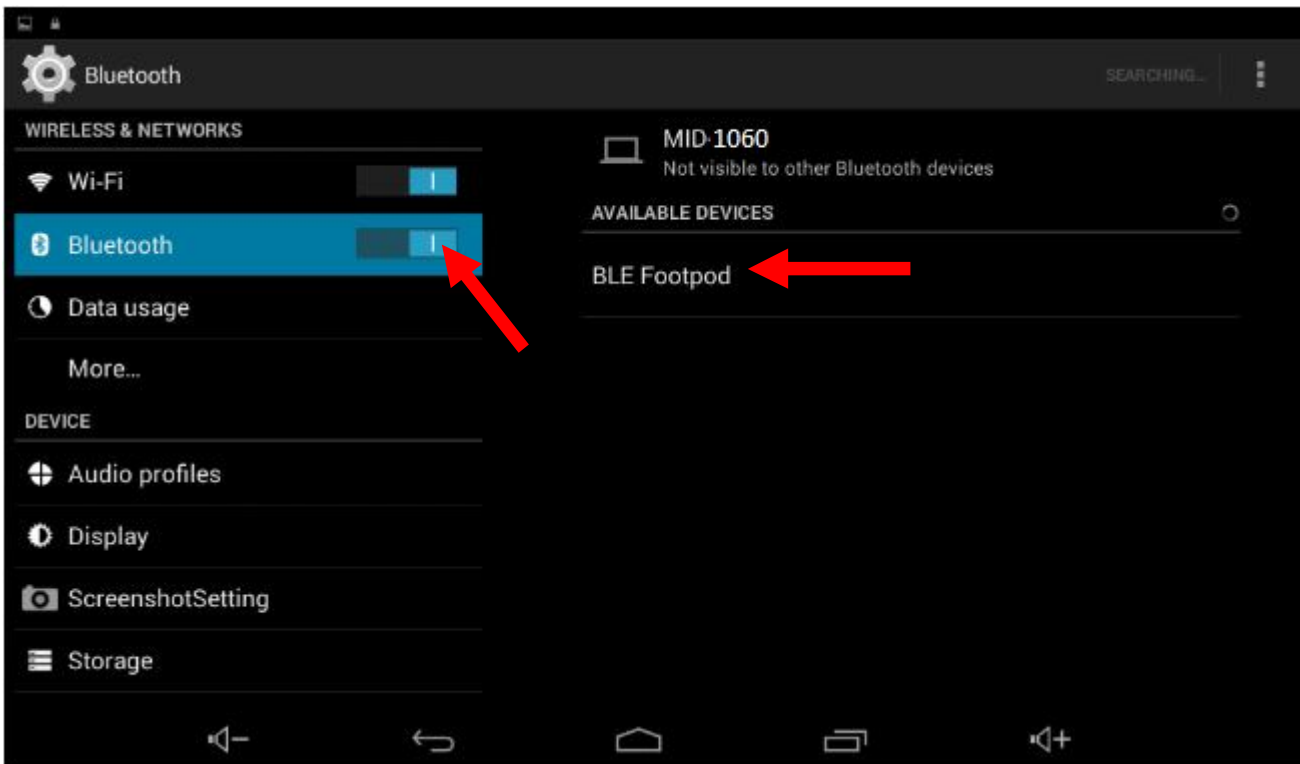

When Bluetooth is turned on, it will automatically scan for all available Bluetooth devices. Tap the desired Bluetooth device (example shown above). If connection is successful, "Connected" will appear.

CONNECTING TO A PC / MAC VIA USB

Connect the USB cable to your MID-1060 and PC/MAC, making sure you are using the correct MICRO USB cable supplied.

eSTREET DIRECTORY



Note: eStreet maps is like a pre-loaded "Gregory's" map and does not need satellite or internet connections to work. This is a fully featured mapping service with 3D effects however it does not offer turn by turn **verbal guidance**.

Interacting with eSTREET Screens


Note: Each **RED** coloured arrow below resembles the movement of a finger (two in total) for each screen movement.

Rotate screen clockwise or counter-clockwise.

Note: Tap the Compass reset icon to default the screen back to the true north position.

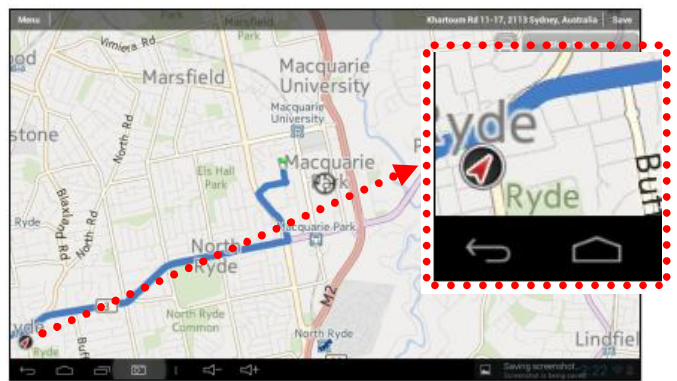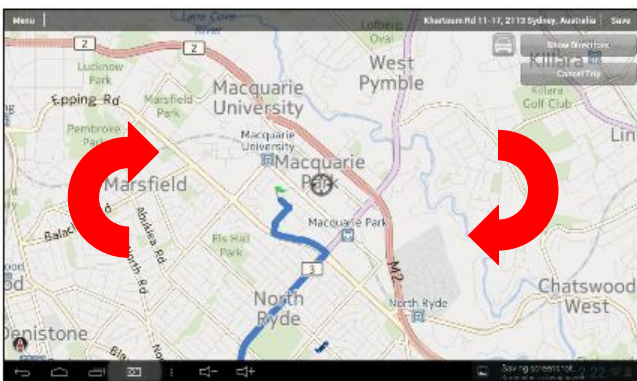

Tilt screen up or down

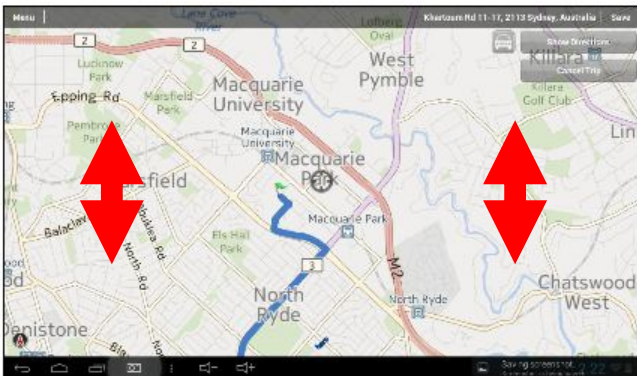

Zoom in or zoom out (Includes 3D imaging of key buildings)



MENU features are accessed from the MENU screen.





Once pressed, the following menu bar options will appear:

FIND LOCATION: Enter address, Saved Locations, Home, Nearby POI (Search), Nearby POI Search.

JOURNEY DETAIL: (*if a start or finish address has been inputted) Trip Details, Clear Trip Buttons


OPTIONS: Check for Map Updates, Show Help, About.

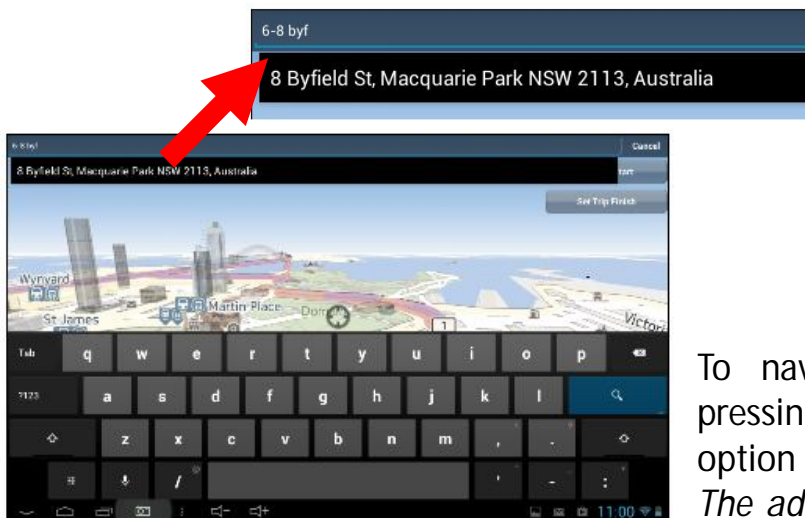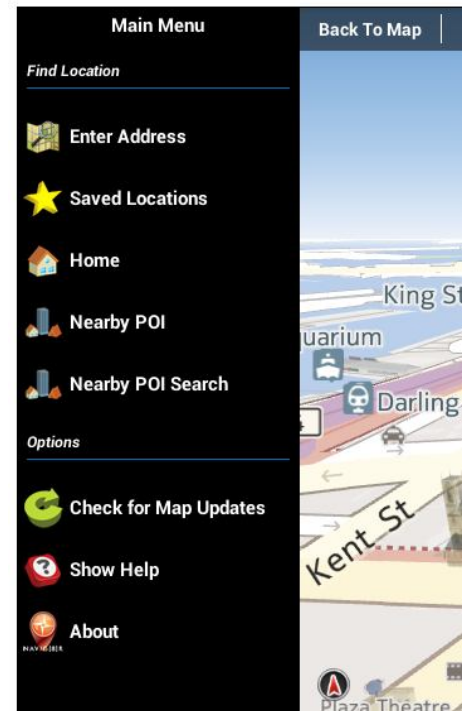


as you type. Alternatively, use the target "cross-hairs" at the middle of the screen to manually move through the mapping screens)

To navigate to a location, begin by pressing the ENTER ADDRESS menu option and keying in your details. *Note: The address auto fill will suggest options*


Target or select the correct address from the drop down suggestions. The selected address will now appear at the top of the screen. (a)

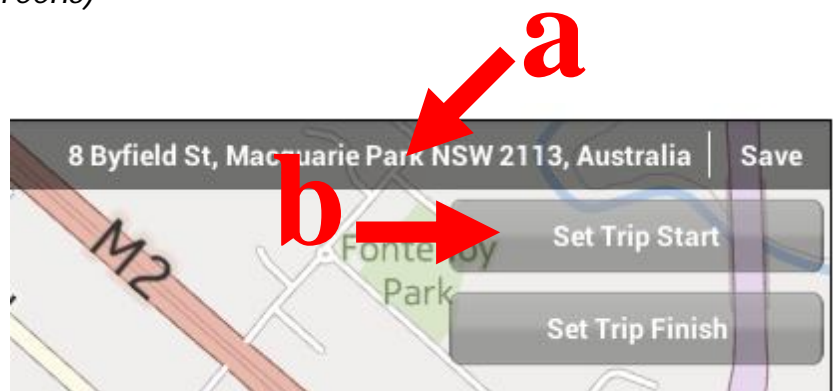

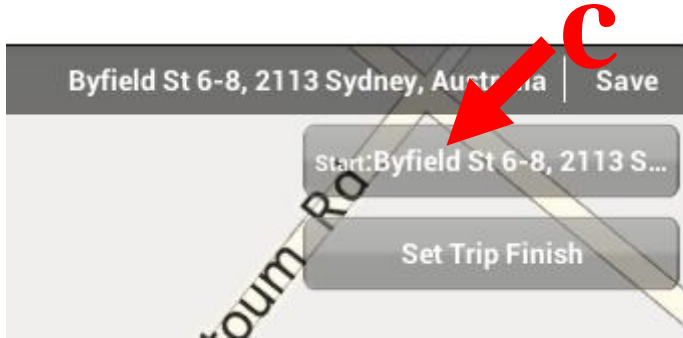


Press SET TRIP START (b). The address now replaces SET TRIP START as confirmation (c)

To fill in the destination address, press the MENU button again and select ENTER ADDRESS. Enter your details in the same previous fashion.


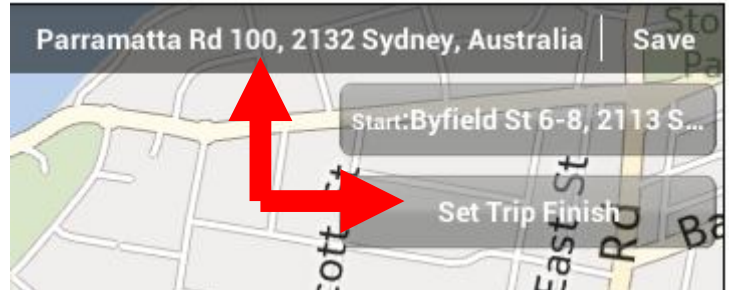


Press SET TRIP FINISH.



The address now replaces SET TRIP FINISH as confirmation

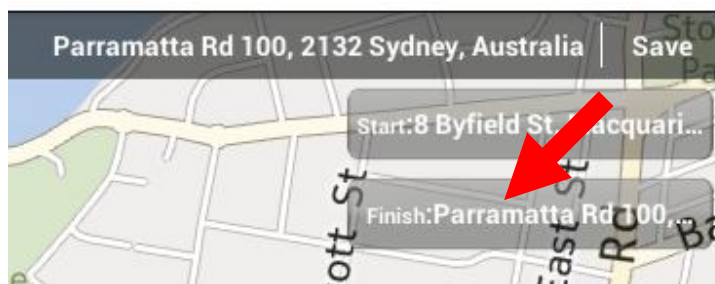


Your MID will then plot your route and add two navigation specific MENU options – Show Directions and Cancel Trip


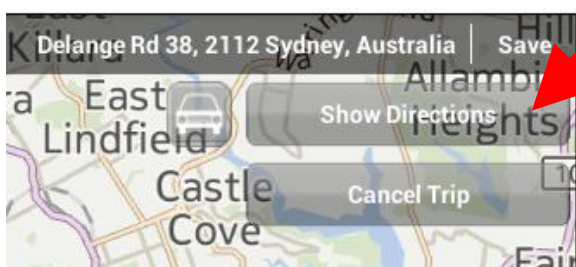
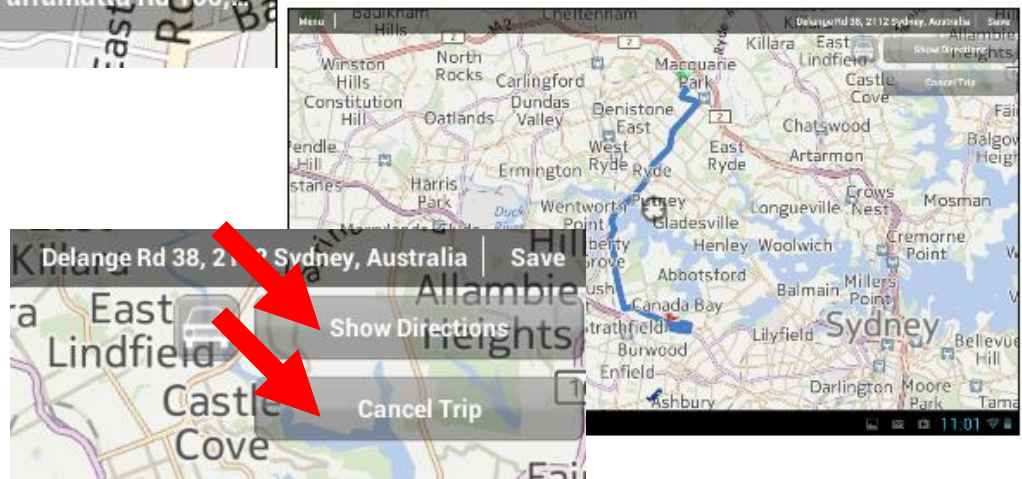


Press SHOW DIRECTIONS to view turn by turn instructions

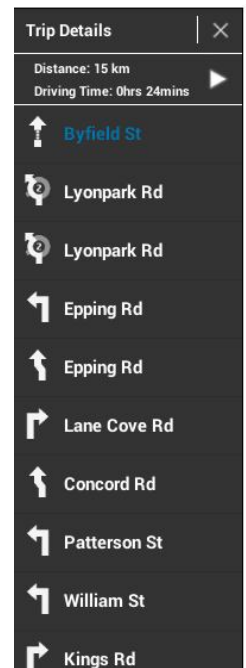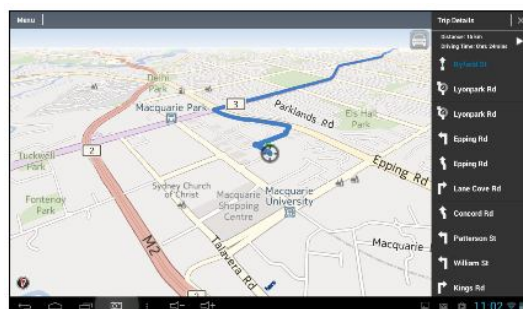

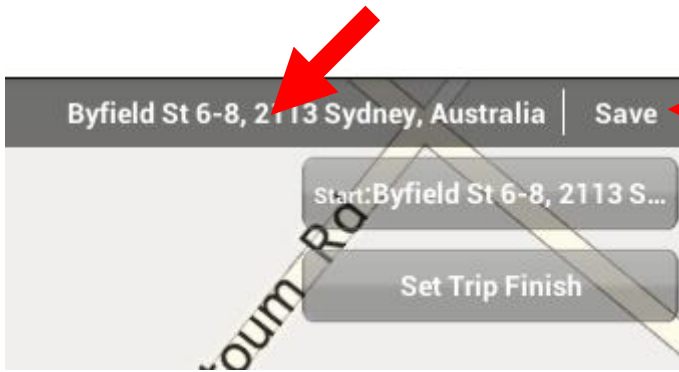


You can use the SAVE button to use EACH LOCATION you input, as either a HOME address or to add it to your SAVED LOCATIONS list.

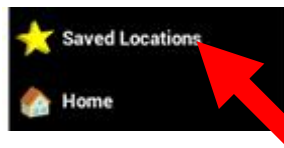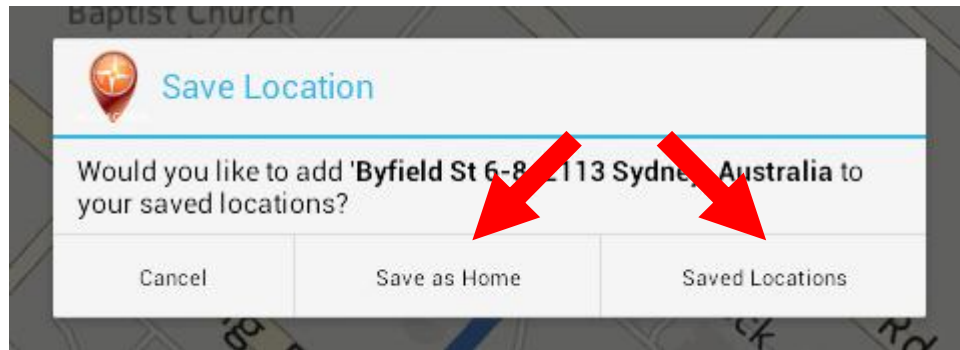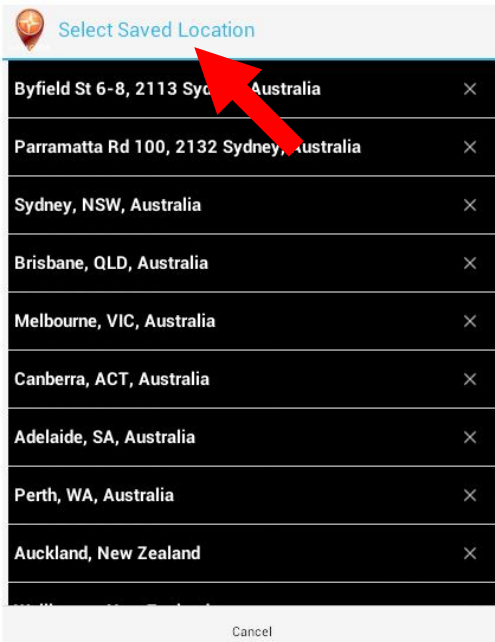

Note: Access your HOME and SAVED LOCATIONS directly from the MAIN MENU


Press the HOME button to return you to this default address, or press the SAVED LOCATIONS BUTTONS to choose an address from your favourites list.

There are further search functions you can perform without knowing the exact address of your desired destination. These are NEARBY POI and NEARBY POI SEARCH.

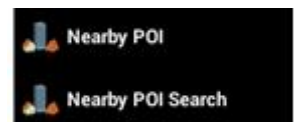

NEARBY POI search provides places by default categories eg. Accommodation



NEARBY POI SEARCH search provides a manual input search by name eg. LASER Corporation

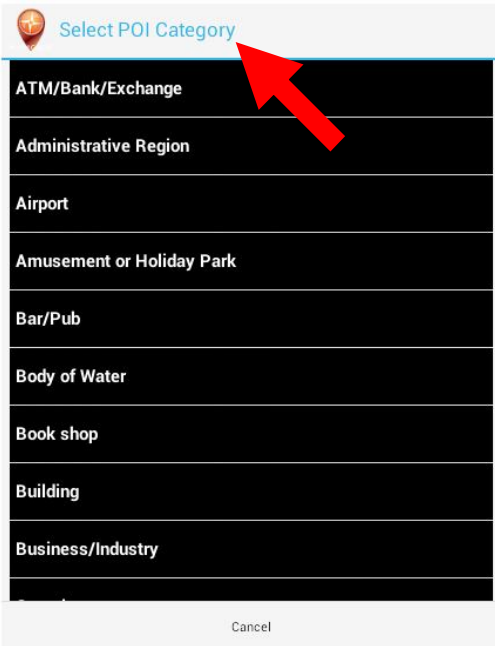

To locate Nearby Points of Interest, select **NEARBY POI** from the MAIN MENU. Select from the following categories:

ATM/Bank/Exchange, Administrative Region, Airport, Amusement or Holiday Park, Bar/Pub, Body of Water, Book Shop, Building, Business/Industry etc

When each category is selected, they will appear on the map as a blue "dot" landmark. Select a location and press the SET TRIP FINISH button and then the SET TRIP START as covered above.

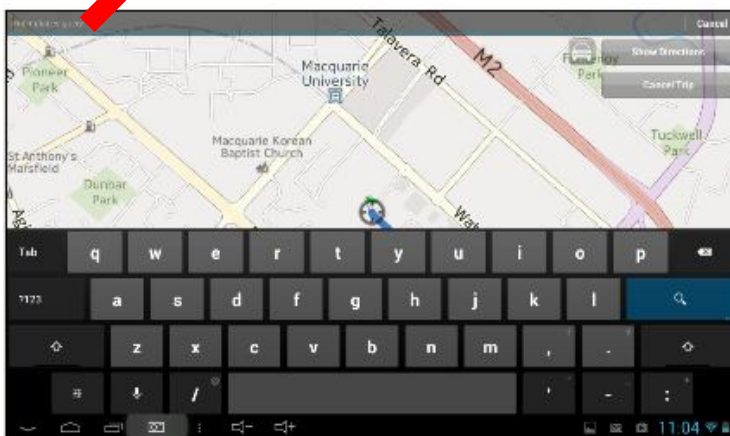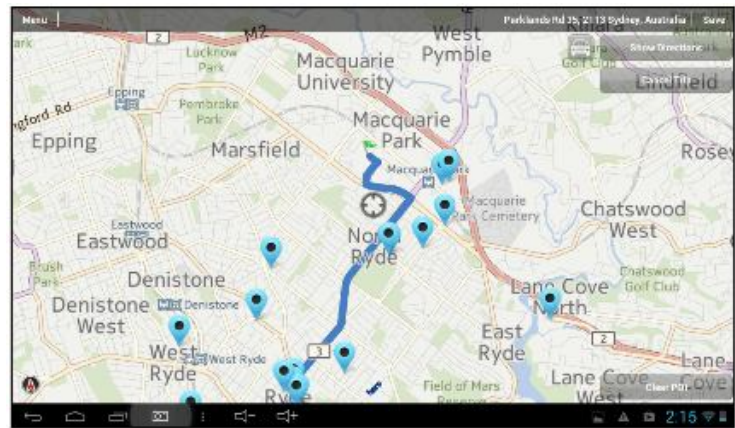

Or manually input your search name into the NEARBY POI SEARCH option

NAVIGATOR (PRE loaded App)

Try out the FREE GPS navigation app which has been pre-installed onto this tablet.

If you would like a full professional navigation app, you can subscribe to any of the leading map providers such as TomTom or Metroview.

Note: When using Navigator for the first time you have the option to select from either the FREE version or paid version.

Note: Ensure the "Location" function on the tablet is turned on otherwise you will not get a GPS position.




EBOOK DRM (ALDIKO)

Note: Aldiko supports purchased and borrowed eBooks.


Download Adobe Digital Editions (ADE) to your PC and set up your FREE account. Upon purchasing or borrowing an eBook using ADE, it will then need to be transferred to your MID-1060.

From Adobe Digital Editions, right click the eBook you wish to transfer and select "Show File in Explorer".

View this YouTube video on purchasing eBooks. <https://www.youtube.com/watch?v=AieWzAbpmjs>

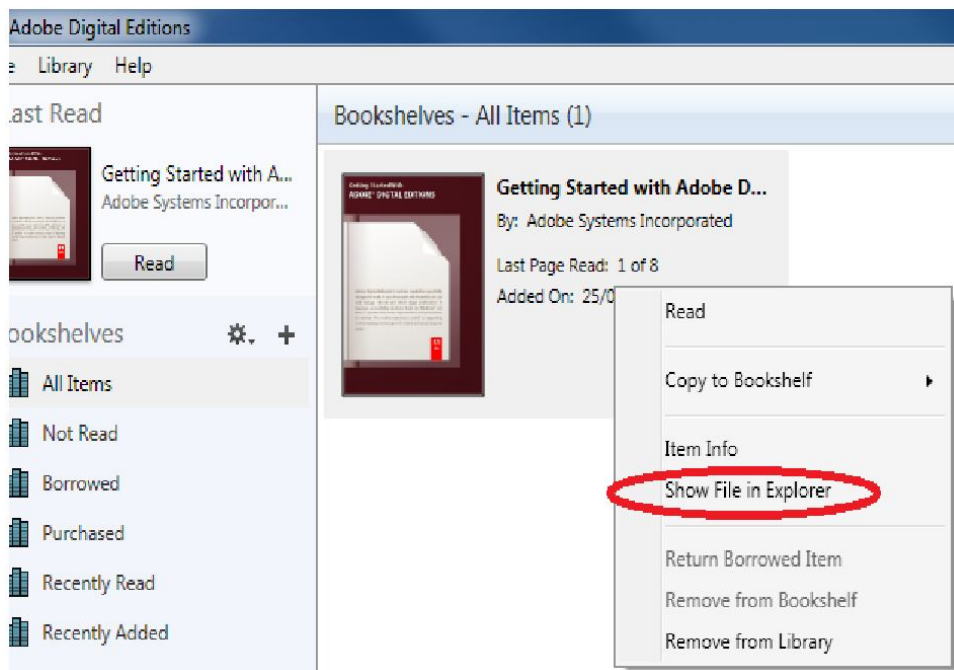




Then right click on the file and select "Copy".

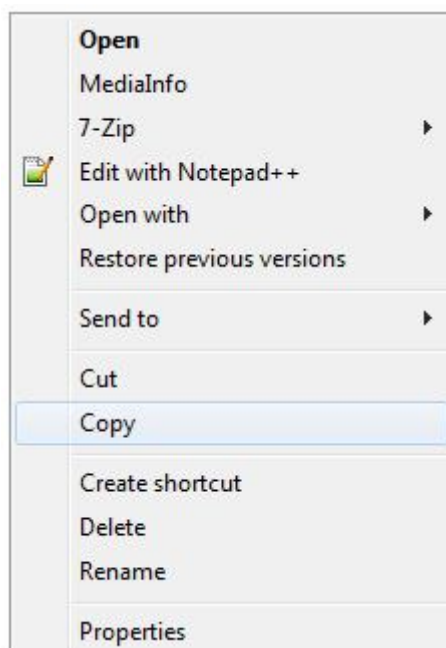

Connect your MID-1060 to the same PC you have loaded ADE and open Windows Explorer. If connected correctly your MID-1060 will be visible. Select the MID-1060 by double-clicking it. Then contents will appear on the right side of the Windows Explorer screen. Right click this section and select paste. The file has now been transferred. Disconnected the MID-1060, open the ALDIKO App on your MID-1060 and select the top right "Settings" option.



Select ADOBE DRM then enter your username and password and select "Sign in".

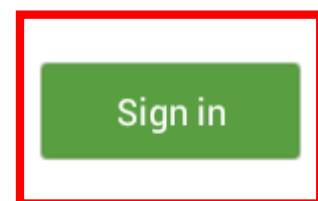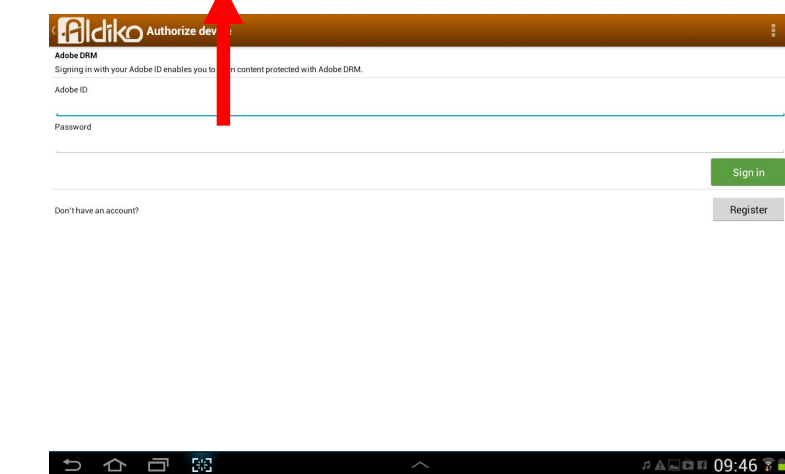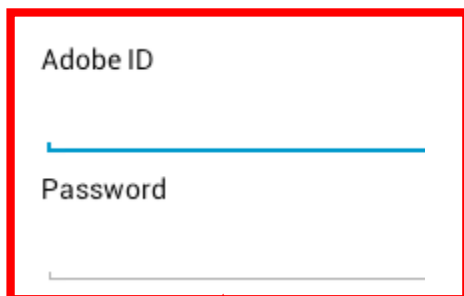

Finally, locate the "File" which was just transferred, then click "Import".

WHY CREATE A GOOGLE ACCOUNT

Creating a Google account allows you to talk, chat, share, schedule, store, organize, collaborate, discover, and create online. A Google account also provides user level access to Gmail, Google+ and YouTube which are all backed up online and accessible online via the cloud.

GOOGLE PLAY APP

Open the GOOGLE PLAY STORE App and set up your account. If you have an existing account select EXISTING, otherwise choose NEW to create a new account and follow the set-up steps.



View our product training videos at: www.laserco.com.au/tablets/Tablet/MID-1060

SPECIFICATIONS

Operation System:	Android 4.4.2
Size	261 x 150 x 10.5mm
CPU processor type:	Quad Core
Memory:	8GB
RAM:	DDR3 1GB
TF card:	128M-32G
Display screen:	10.1"(Capacitive multi-touch) TFT capacitive touch
Resolution:	1024 x 600
Battery and capacity:	Rechargeable Built-in type polymer battery, 5000Mah
Camera Resolution:	0.3MP (Front mount), 2.0MP (Rear Mount)
Screen auto orientation:	G-sensor 3D
Voice Recording	Built-in microphone
Supported file types:	Video format: avi, mov, mp4, 3gp, flv Audio format: mp3, flac, aac, wav, m4a <i>(To play other formats, you will need to download the App that supports the format you intend to play)</i>

FAQ

The HDMI output to my TV doesn't work	Please make sure the HDMI output has been turned on under the Settings Menu (Settings > Display > HDMI > ON)
I can't turn my MID-1060 ON?	<ol style="list-style-type: none"> 1.Ensure your MID-1060 is charged 2. Connect the power adaptor, and then check again after sufficient charge time 3. Reset the device using the reset button
I can't hear anything through my headset, or the sound quality is very bad	<ol style="list-style-type: none"> 1.Please ensure volume is turned up 2. Check the music file on another device to make sure it is not damaged. 3. Try using another pair of headphones
I can't copy files or play music	<ol style="list-style-type: none"> 1.Please check the connection to you computer 2.Ensure there is enough spare memory 3.Check the USB cable is not damaged using another device 4.Check the USB connection is inserted correctly
My MID-1060 displays a network or service error message	<ol style="list-style-type: none"> 1. Check the strength of the WiFi signal 2. Check that the WiFi service is available and operating correctly 3. When using apps like Face Book and Google play (with a lot of content) <u>for the first time</u>, a few extra minutes will be required to load all the content.
My touch screen is slow and not working correctly	<ol style="list-style-type: none"> 1. Make sure the protective film has been removed from the screen 2. Ensure that your fingers are dry and clean. 3. Restart your MID-1060 4. Ensure the touch screen is not scratched or damaged
My MID-1060 is frozen or a severe error has occurred	<ol style="list-style-type: none"> 1. Try closing Apps or resetting 2. Restore or reset the MID-1060 to factory default settings. 3. Reset the device using the reset button
My MID-1060 becomes hot when is use or while charging	1. Some applications can consume more power than others causing the MID-1060 to become warm while in use or if used for extended amounts of time. This is normal and won't affect the life or performance of your MID-1060.
An error occurs when I open my music files	<ol style="list-style-type: none"> 1. Remove some files to make more storage space 2. Make sure the music files aren't protected by digital rights management (DRM). If the files have DRM protection, make sure that you have the license or key. 3. Make sure that file type is compatible.
The available memory on my MID-1060 is less than 8GB. Why is that so?	Some of this space is required to pre-load Apps and other Software. Space is required for the OS (Operating System).
My MID tablets internal memory is almost full; can I install or move the Apps to external SD card?	Latest Android OS will only allow apps to be installed on internal memory. To free up the internal space: 1) Uninstall some un-used apps. 2) Move photos, music or video files to SD card.
My tablet screen has cracked; will it be covered by warranty?	No, physical damage is not covered by warranty.

For further product information and instructions please visit our product web page at www.laserco.com.au or email www.laserco.com.au/supports/email.php.

Please note: As continuous improvements are made to this product, slight operational differences may occur. For the most up-to-date user manual, please visit our web site.

Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a repair, exchange (where possible) or refund (**within Dead on Arrival period**) for this product if it becomes defective within the warranty period.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase.

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and repair, replace or refund the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser Customer Service with details of your defective Laser Product Phone (02) 9870 3355; or Email: service@laserco.com.au or online www.laserco.com.au/warranty (click on "Consumers (End Users)"). Our business address is: Unit 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser product.

Step 5: For further details on warranty cover and returns, please check [Terms and Conditions for Warranty Returns](#) section at www.laserco.com.au/warranty (Consumers Section).

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



NAVIG[8]R

PRECISION
gaming accessories

CONNECT

naum8
GPS ESSENTIALS