

GC400 Series – GC401-GC404 User Manual



The New Generation of Wireless Access Control Systems

User Manual for GC401-GC404 with firmware Ver. 0.52 and above, HW revision 03
For modules with serial numbers from 0011009

AccessZone® System - A Key to a Safer Future

Congratulations on choosing an AccessZone® GC400 Bluetooth Reader. It is a flexible and easy to use system for controlling access to doors and gates to private homes, shops and small and middle size companies. It enables quick configuration with a few simple commands entered on a standard mobile phone with Bluetooth without installing any software. No license or subscription is required. The Bluetooth ID is sent on the Wiegand bus to an external access controller.


This manual covers the easy configuration and use of the AccessZone® GC400 series of Wiegand Bluetooth Readers:

- GC401 – 2 administrators and 5 users
- GC402 – 2 administrators and 10 users
- GC403 – 2 administrators and 20 users
- GC404 – 2 administrators and 50 users

A GC500 series is also available as a stand-alone access control systems:

- GC501-GC504 – with 2+5, 2+10, 2+20 and 2+50 users

Please see the GC400 series Installation Manual for instructions on how to install the system.

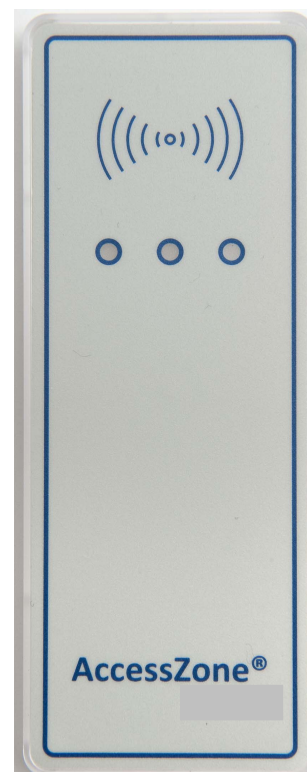

AccessZone® GC400 with
3 inputs/2 outputs
Form factor 127 x 47 x 8 mm



Get easy and seamless accesses to the secured areas with your mobile phone working as a secure access key from a distance of 0.1 up to 10 meters.

Table of Contents

1 Disclaimer	5
2 Introduction.....	6
3 Security Precautions.....	7
4 System Overview.....	8
5 I/O Description.....	8
5.1 Inputs.....	8
5.2 Outputs.....	8
6 LED Status.....	9
6.1 Power Up.....	9
6.2 Blue LED.....	9
6.3 Green LED / Ext. Red LED.....	9
6.4 Red LED / Ext. Green LED.....	9
7 How to Configure the System.....	10
7.1 Commands via Mobile.....	10
7.2 How to enter Configuration Mode.....	11
7.2.1 Method 1.....	11
7.2.2 Method 2.....	11
7.3 How to enter System Commands – Configuration Mode.....	12
7.3.1 If the system doesn't respond to a command:.....	12
7.4 How to Add or Delete Users – Normal Operation.....	13
7.4.1 If the system doesn't respond to a command:.....	13
8 System Commands.....	14
8.1 Change 8 digit Master PIN Code Command.....	14
8.2 Add new User Command.....	15
8.3 Add new User Command – Easy Enrolment.....	17
Default is 2 (standard device).....	17
See an example in section 18.2 Adding Users to the System from factory reset – Easy Enrolment.....	18
8.4 Delete User Command.....	19
8.5 Change System Configuration Command 1.....	20
8.6 Change System Configuration Command 2 – Advanced settings.....	21
8.7 Execute System Command – Advanced settings.....	23
8.8 Execute System Configuration – Advanced settings.....	24
9 How to understand TX and RX parameters.....	25
10 Wiegand Types.....	26
10.1 Wiegand 26.....	26
10.2 Double Wiegand 26.....	27
10.3 Triple Wiegand 26.....	27
10.4 Wiegand 34.....	27
10.5 Wiegand 42.....	28
10.6 Wiegand 50.....	28
10.7 Wiegand 58.....	28
10.8 Wiegand 40 with XOR checksum.....	28
10.9 Wiegand 56 with XOR checksum.....	29
10.10 Wiegand 64 with XOR checksum.....	29
11 Virtual Keypad.....	30
11.1 Virtual Keypad only Mode.....	30
11.2 Virtual Keypad Mixed Mode.....	30

12 User Access Key Setup.....	31
12.1 Mobile Phone as Key.....	31
12.2 GPS Key as Key.....	32
12.3 AccessZone Bluetooth Tags.....	32
13 Access Detection Range.....	33
13.1 Detection Range Command Examples.....	33
13.2 Detection range is too short.....	34
13.3 Detection range is too long.....	34
14 Default Factory System Settings.....	35
14.1 Restore Factory Default System Settings.....	35
15 Appendix A – User Log Template.....	36
16 Appendix B – System Master PIN Code Log Template.....	36
17 Appendix C – System Configuration Log Template.....	36
18 Appendix D – Quick Guide:.....	37
18.1 Setting as a simple Bluetooth ID reader from factory reset – Easy Enrolment.....	37
18.2 Adding Users to the System from factory reset – Easy Enrolment.....	37
18.3 Mobile Phone used for Adding and Deleting Users – Normal Operation:.....	38
18.4 Mobile Phone used for System Commands - System Configuration Mode:.....	39
18.5 Mobile Phone as Access Key:	40

1 Disclaimer

All rights reserved.

MVC-Data ApS assumes no responsibility for any errors in this manual.

MVC-Data ApS is constantly working to improve its products and offer new features in collaboration with customers and partners. Therefore, MVC-Data ApS reserves the right to change the hardware, software and / or specifications without notice and shall have no obligation to update the information contained in this manual.

MVC-Data ApS's products are not authorized for use as system-critical components in life supporting devices or systems.

AccessZone® is a registered trademark of MVC-Data ApS. The Bluetooth trademark is owned by the Bluetooth SIG. All other trademarks are owned by their respective owners.

The displayed screens may differ and depends on the mobile phone used for configuration.

Copyright © 2005-2011 MVC-Data ApS

2 Introduction

The AccessZone GC400 series GC401-GC404 are Wiegand Bluetooth ID Readers. They are well suited for use in private homes, shops and companies. Since they have Wiegand output they can be used with all access control systems with Wiegand bus.

They are unique wireless Bluetooth Readers with the latest Bluetooth technology – a wireless technology that operates in the license free ISM band at 2.4 GHz.

The reader sends the Bluetooth ID on the Wiegand bus for verification in a central access control system. No validation is done in the system. However, it is possible to add some unique Bluetooth IDs with an optional 4 digit PIN code for increased security. I.e. the Bluetooth ID will first be sent to the central access controller for final access verification after the unique PIN code has been entered by the user.

The used mobile phones or other Bluetooth devices must be set to “visible” to allow them to be discovered by the system.

The GC400 series eliminates the need for mechanical readers and keyboards outside the secured area. This removes the risk for property damage and breakdown due to harsh environmental conditions and heavy use.

Please refer to the GC400 Firmware Release Note for the latest changes.

The latest firmware versions introduces:

- **New easy user enrolment method**
It can be used to add users to the system without entering (knowing) the Bluetooth ID of the used mobile phone. Only storage position and access PIN code must be entered
- **New system commands**
Added support for two new groups of system commands to make administration easier:
System commands: "E01" - "E07" and System configurations commands: "C01" - "C06"

3 Security Precautions

Several security precautions have been implemented in the system to make it safe to use.

The system will only accept system configuration commands in a special configuration mode (refer to section 7.2 How to enter Configuration Mode).

All system configuration commands are entered by temporarily changing the mobile phones friendly name¹⁾ and must be followed by a unique 8 digit Master PIN code. The Master PIN code should only be known to a limited number of people (system administrators).

The 8 digit Master PIN code should be changed and is unique for each GC401-GC404 system. It can be entered from any Bluetooth enabled mobile phone. **Please change the Master PIN code before continuing.**

Two privileged users (administrators) can add and delete users at any time. Refer to section 7.4 How to Add or Delete Users – Normal Operation.


¹⁾**Caution!**

The Bluetooth friendly name feature is used for commands and can be read from another Bluetooth device from the distance (typically up to 10 meters).

Therefore it is highly recommended to immediately change the Bluetooth friendly name again or make the mobile phone invisibly to avoid that unauthorized people read the commands containing vital user information.

4 System Overview

This section presents a system overview with an I/O description:

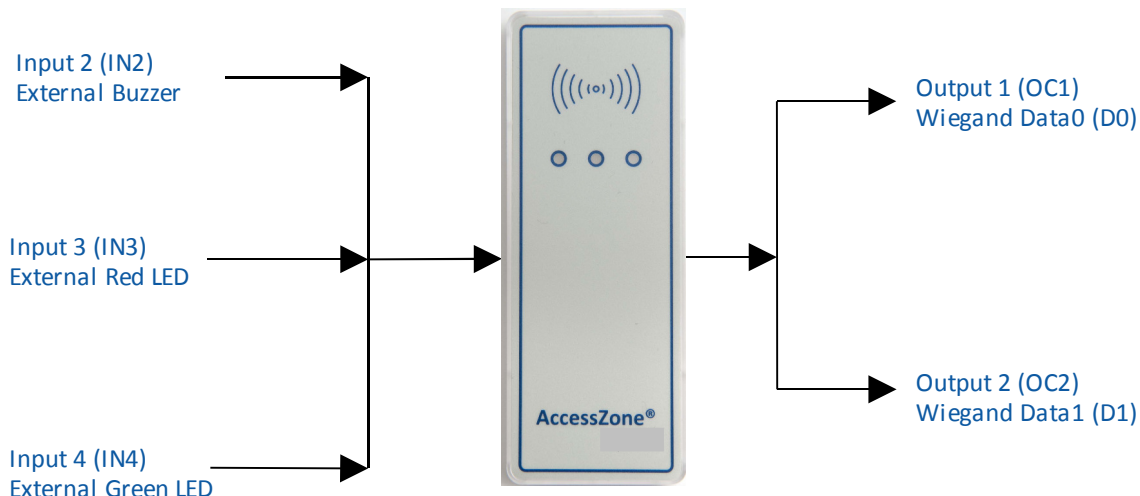

5 I/O Description

GC400 series have 3 inputs and 2 outputs.

The active levels (high '1'/low '0'), when an action is performed, can be configured (inverted) for some inputs/outputs. Please refer to section 8.6 Change System Configuration Command 2 – Advanced settings for more details.

5.1 Inputs

- Input 1 (IN1) - Not used
- Input 2 (IN2) - External control of buzzer / entering configuration mode during power up
- Input 3 (IN3) - External control of Red (dual) LED (in the middle)
- Input 4 (IN4) - External control of Green (dual) LED (to the right)

5.2 Outputs

Open collector type (500mA):


- Output 1 (OC1) - Wiegand Data0 (D0) output for external access controller
- Output 2 (OC2) – Wiegand Data1 (D1) output for external access controller

Please see the GC400 series Installation Manual for instructions on how to install the system.

6 LED Status

The GC400 series have 3 internally controlled LEDs (Blue, Green and Red) and two externally controlled LEDs (Red and Green) for system indications.

- The Green LED (mid) is a dual LED with an additional Red LED controlled through input 3 (Orange core)
- The Red LED (right) is a dual LED with an additional Green LED controlled through input 4 (Blue core)

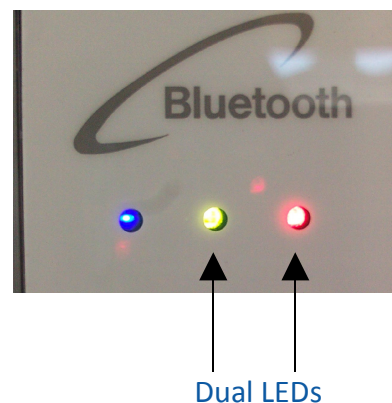

6.1 Power Up

The Blue LED and Red LED will light for 2 seconds from power up. This is the bootloader waiting for new firmware. Bootloader will call the application if new firmware is not received.

6.2 Blue LED

Normal Mode - the Blue LED is solid on. It flashes shortly whenever a Bluetooth device ID is read from a nearby Bluetooth device (e.g. a mobile phone).

Configuration Mode - the Blue LED blinks 1 time/sec. The device can accept commands.

6.3 Green LED / Ext. Red LED

The Green LED starts blinking when waiting for user to enter the PIN code.

The Green LED flashes shortly when an Bluetooth ID has been read and is sent on the Wiegand bus.

The external Red LED is by default OFF (leave not connected). It can be controlled from an external controller through input 3 (Orange Core). The LED is set ON by pulling input 3 down to GND.

6.4 Red LED / Ext. Green LED

The Red LED flashes shortly when an Bluetooth ID has been read but it could not be sent on the Wiegand bus because it was busy (to avoid collisions).

The external Green LED is by default OFF (leave not connected). It can be controlled from an external controller through input 4 (Blue Core). The LED can be set ON by pulling input 4 down to GND.

7 How to Configure the System

This section describes how to enter system commands and how to enable the system for configuration. Section 8 System Commands describes the different commands in details.

7.1 Commands via Mobile

System configuration (adding/deleting users and changing system settings) can be done from any Bluetooth enabled mobile phone.

Note!

It is not necessary to install any software on the mobile phone or use any PC tool.

The mobile phone used must support at least 20 characters as “Friendly Name” (also called “Phone Name”). This is the name revealed for other Bluetooth devices.

A system command (e.g. "01,0022b4b62918,1234") is entered by temporarily changing the mobiles Bluetooth “Friendly Name”. Refer to section 8 System Commands.

Please refer to the User Manual for a specific mobile phone type for how to change the Bluetooth friendly name.

Caution!

The Bluetooth specification states a maximum length of 248 characters as Friendly Name. However, most mobile phones have limited the space allowed for Friendly Name. A minimum of 20 characters must be supported by the used mobile phone.

All commands must be followed by an 8 digit Master PIN code for safe use. The system gives 3 short beeps to indicate that a valid command has been found and the Master PIN code is required. The user will automatically be prompted when to enter the Master PIN code.

Note!

This is not the normal 4 digit user access PIN code.

Please note when entering the commands:

- **All command parameters (enclosed by <>) must be separated by a comma ','**
- **No spaces between or after values are allowed**
- **Have the exact length as specified. I.e. no additional characters in the end**
- **A '-' indicates an integer range 1,2,3...**

7.2 How to enter Configuration Mode

The system must be set into configuration mode before it will accept the system commands. However, it is possible for two privileged users (administrators) to use the “Add new User” and “Delete User” commands in normal mode (Refer to section 7.4 How to Add or Delete Users – Normal Operation).

7.2.1 Method 1

Follow these steps to enter configuration mode:

Steps:

- 1) Power off the module
- 2) Pull down the buzzer input (IN2) to GND
- 3) Power on the module again
- 4) The buzzer input can be released again after the short beep

7.2.2 Method 2

Enter the system command “E02” on the administrator phone and enter the 8 digit master PIN code.

The system is now in configuration mode for 10 minutes and will flash with the Blue LED. Refer to section 7.3 How to enter System Commands – Configuration Mode for how to enter system commands.

The system coverage range will be limited to approximately 20 cm in the configuration period to prevent that unauthorized people can tamper with the system.

The configuration period is restarted every time a valid command has been executed.

Configuration mode is automatically terminated after 10 minutes without any valid commands by sending 2 short beeps. Alternatively by power cycling the device to startup in normal operation or by sending the system reset command “E01” from the administrator mobile phone and the 8 digits master PIN code (Buzzer input (IN2) is not pulled down to GND).

Caution!

The system will not scan for (detect) users in configuration mode. I.e. no Bluetooth IDs are send on the Wiegand bus

7.3 How to enter System Commands – Configuration Mode

The system commands (adding/deleting users and changing system settings) can be executed from any Bluetooth enabled mobile phone by temporarily changing the mobile phones friendly name.

After entering a command and the Master PIN code the system gives a short beep to indicate that the command has been accepted and executed and restarts the 10 minute configuration period. The next command can be entered, or wait for the termination of the configuration period, execute the “E01” command or power cycle the device to startup in normal operation.

Note!

3 short beeps indicate when to use the Master PIN code instead of normal access PIN code.

Follow these steps to execute commands:

Steps:

- 1) Set system into configuration mode. Refer to section 7.2 How to enter Configuration Mode
- 2) Enable Bluetooth on mobile phone and set it to hidden
- 3) Enter the required system command on the mobile phone and click save. Refer to section 8 System Commands for available commands
- 4) Set the mobile phone to visible
- 5) Place mobile phone within the detection range of the system
- 6) Wait for 3 short beeps
- 7) Enter Master PIN code (e.g. 12345678) when prompted
- 8) Wait for beep for successful execution of the command
- 9) Set the mobile phone to invisible/hidden
- 10) Erase command from mobile phone

If more commands must be executed repeat step 2) – 9)

7.3.1 If the system doesn't respond to a command:

- System is not in configuration mode any more (10 minutes time out)
 - Check Blue LED - flashing? Else re-enter configuration mode. Refer to section 7.2 How to enter Configuration Mode
- The administrator is outside the allowed configuration range of approximately 20 cm
 - Administrator must get closer to the system
- The command has already been executed
 - Try change one of the parameters or try another command
- The command is not valid
 - Wrong number of parameters, wrong parameter values and/or wrong command length (e.g. spaces at the end)
- The system times out waiting to read the command or connection to mobile failed
 - Wait for next detection

7.4 How to Add or Delete Users – Normal Operation

Privileged users (administrators) are stored on storage position 01 or 02. These two privileged users (administrators) are allowed to add and delete users from normal operation mode. I.e. it is not necessary to enter configuration mode first.

The user (administrator) might be prompted to first enter the normal access 4 digit PIN code (**if access PIN code is required**) and then the 8 digit Master PIN code if a valid and new “Add new User” or “Delete User” command has been found.

A short beep indicates that the command has been successfully executed as in normal configuration mode.

TIP!

Make sure that the mobile phone used is stored on position 01 or 02 and have an access PIN code (recommended) before continuing. It will not accept commands in this mode if PIN code is not used.

Follow these steps to add or delete a user:

Steps:

- 1) Enter the required Add new User or Delete User command on the mobile phone and click save (refer to section 8.2 Add new User Command and 8.4 Delete User Command)
- 2) Set the mobile phone to visible
- 3) Place mobile phone within the detection range of the system
- 4) Enter normal access PIN (e.g. 1234) when prompted – ID is sent on Wiegand bus if correct
- 5) Wait for 3 short beeps
- 6) Enter Master PIN code (e.g. 12345678) when prompted
- 7) Wait for beep for successful execution of the Add new User or Delete User command
- 8) Set the mobile phone to invisible/hidden
- 9) Erase command from mobile phone

If more users must be added/deleted repeat step 1) – 8)

7.4.1 If the system doesn't respond to a command:

- The administrator is outside the normal access range of approximately 20 cm
 - Administrator must get closer to the system
- The command has already been executed
 - Try change one of the parameters or try another command
- The command is not valid
 - Wrong number of parameters, wrong parameter values and/or wrong command length (e.g. spaces at the end)
- The system times out waiting to read the command or connection to mobile failed
 - Wait for next detection

8 System Commands

This section describes the simple and easy to use mobile configuration command set for GC401 - GC404- the Wiegand series.

8.1 Change 8 digit Master PIN Code Command

This command changes the Master PIN code which is used to validate all system commands. The system will automatically prompt the user for the Master PIN code.

The Master PIN code is a system code for authenticating the user/system administrator.

Caution!

The default Master PIN code should be changed before use of the system. The Master PIN code should only be known by a system administrator or a limited number of people to avoid unauthorized use.

Parameters	Values	Description
<New Master PIN code for the system>	8 digits	The Master PIN code for adding/removing users and change system settings ¹⁾ Default: "12345678"

Total length = 8 digits

Example:


To change Master PIN to 12345678 enter: "**12345678**"

Note!

The present (old) Master PIN code must be entered on the mobile to enable the new Master PIN code.

The Master PIN code can be reset to factory value. Please see section 14 Default Factory System Settings

System administrator should store the new master PIN code in a system log. Please see 16 Appendix B – System Master PIN Code

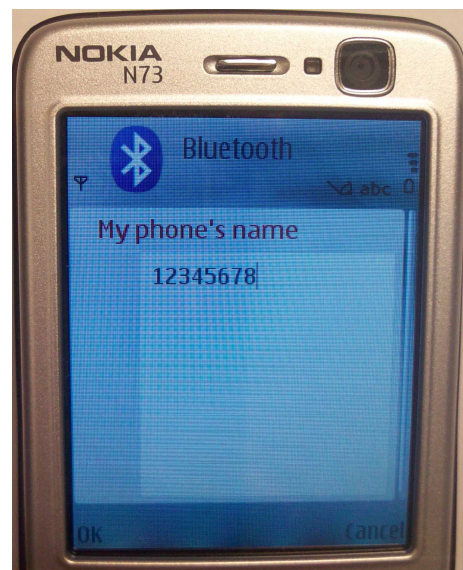

¹⁾ The Master PIN code must be entered and accepted within 15 seconds before it continues to scan for another user.

8.2 Add new User Command

This command adds a new user to the system. This is also used for editing an exiting user. Make sure to store the user on the same storage position.

This command can also be execute in normal mode by the privileged users (administrators) on storage position 01 and 02.

Parameters	Values	Description
<Add storage position>,	2 digits 01-02 03-07 03-12 03-22 03-52	Position in system database to store the user Privileged users (administrators): "01"- "02" ¹⁾ Normal users GC401: "03"- "07" Normal users GC402: "03"- "12" Normal users GC403: "03"- "22" Normal users GC404: "03"- "52" E.g. position 1 is written as "01"
<BD address of new device>,	12 digits	The unique Bluetooth address of device Valid values '0'-'9' and 'A'-'F' or 'a'-'f' E.g. "001256ABCDEF", "00BB592F030B"
<PIN code for user>	4 digits	User access PIN code ²⁾ E.g. "1234" Use "0000" to disables use of access PIN code for that particular user
<power class> (optional – not required)	1 digit 1-3	Device power class ³⁾ '1' = strong device '2' = standard device '3' = weak device. Default: '2'

¹⁾ The privileged users (administrators) should be added with a PIN code.

²⁾ The access PIN code must be entered within 15 seconds before it continues to scan for another user.

³⁾ Can be used to compensate (normalize), in some degree, for power differences and antenna location between the used Bluetooth keys (e.g. mobile phones):

- If a device must be closer to the reader than most others before access is granted
- set parameter = '3' (weak device)
- If a device gets access further away from the reader than most others
- set parameter = '1' (strong device)
- Default is 2 (standard device)

Total length = 20 digits or optional 22 digits

Examples:

Examples:

On position 1 - add unique user 0022b4b62918 with PIN code 1234 enter: **"01,0022b4b62918,1234"**

On position 5 - add unique user 0022b4b62918 without PIN code enter: **"05,0022b4b62918,0000"**

On position 1 - add unique user 0022b4b62918 without PIN code and strong enter: **"01,0022b4b62918,0000,1"**

On position 5 - add unique user 0022b4b62918 without PIN code and weak enter: **"05,0022b4b62918,0000,3"**

Note!

Any exiting user on the storage position selected will be erased. I.e. it is not necessary to erase an existing user first.

System administrator should maintain a system log of users and storage positions used. Please see 15 Appendix A – User Log Template

Caution!

A virtual “any” user is by default (from factory) added at storage position 01 (a privileged user) to allow an easy – first time - configuration of users without going through the normal system configuration mode. PIN code 1234 is used.

This corresponds to the command: "01,FFFFFFFFFFFF,1234"

Bluetooth ID reader with unique users with PIN code:

It is highly recommended to overwrite this with a specific user with a unique PIN code and move the “any” default user to the last location used. In example, move “any” user to the last storage position 7 (GC401):

Execute command: **"07,FFFFFFFFFFFF,0000"**

The privileged users (devices) added on position 01 or 02 can be used to add other users and the “any” user on position 07 will allow the system to send all other Bluetooth IDs on the Wiegand bus.

Simple Bluetooth ID reader:


Add the “any” user without PIN code on storage position 03 if PIN code is not used. Delete position 01 and 02 if no privileged users (01 and 02) are required. The Bluetooth reader will now send all the detected Bluetooth IDs on the Wiegand bus:

Execute command: **"03,FFFFFFFFFFFF,0000"**

Refer to section 11 Virtual Keypad for more details

Note!

With user 01 and 02 delete you need to enter Configuration Mode to be able to add users again.

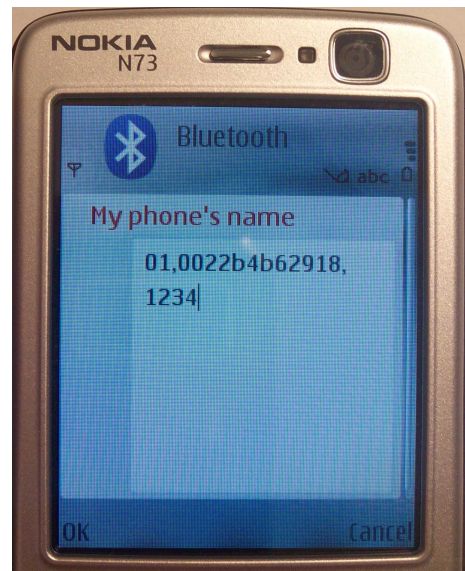

8.3 Add new User Command – Easy Enrolment

(Supported from firmware version 0.52)

This command adds a new user to the system. This is also used for editing an exiting user. Make sure to store the user on the same storage position.

This command can only be execute in configuration mode or when the any user (default) is located as the privileged users (administrators) on storage position 01 and 02.

This command will store the information together with the BD address of the mobile phone the command is read from. I.e. you do not need to know the BD address of a mobile phone.

Parameters	Values	Description
<Add storage position>	2 digits 01-02 03-07 03-12 03-22 03-52	Position in system database to store the user Privileged users (administrators): "01"- "02" ¹⁾ Normal users GC501: "03"- "07" Normal users GC502: "03"- "12" Normal users GC503: "03"- "22" Normal users GC504: "03"- "52" Ex. position 1 is written as "01"
<PIN code for user>	4 digits	User access PIN code ²⁾ Ex. "1234" Use "0000" to disables use of access PIN code for that particular user
<power class> (optional – not required)	1 digit 1-3	Device power class ³⁾ '1' = strong device '2' = standard device '3' = weak device. Default: '2'

¹⁾ The privileged users (administrators) should be added with a access PIN code.

²⁾ The access PIN code must be entered within 15 seconds before it continues to scan for another user.

³⁾ Can be used to compensate (normalize), in some degree, for power differences and antenna location between the used Bluetooth keys (e.g. mobile phones):

- If a device must be closer to the reader than most others before access is granted
- set parameter = '3' (weak device)
- If a device gets access further away from the reader than most others
- set parameter = '1' (strong device)
- Default is 2 (standard device)

Total length = 7 digits or optional 9 digits


Examples:

On position 1 - add unique user (with unknown BD address 0022b4b62918) with PIN code 1234 enter: **"01,1234"**

On position 5 - add unique user (with unknown BD address 0022b4b62918) without PIN code enter: **"05,0000"**

On position 1 - add unique user (with unknown BD address 0022b4b62918) without PIN code and strong enter: **"01,0000,1"**

On position 5 - add unique user (with unknown BD address 0022b4b62918) without PIN code and weak enter: **"05,0000,3"**

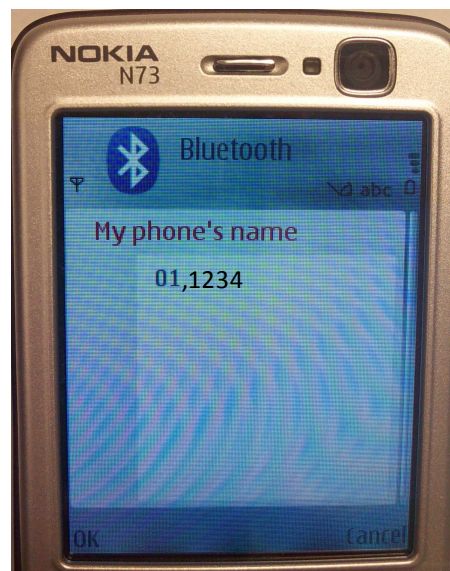

Note!

Any exiting user on the selected storage position will be erased. I.e. it is not necessary to erase an existing user first.

System administrator should maintain a system log of users and storage positions used. Please see 15 Appendix A – User Log Template

Caution!

A virtual user is by default (from factory) added on storage position 01 to allow easy configuration of users without first going through the normal system configuration mode. The default PIN code is 1234

This corresponds to the command: "01,FFFFFFFFFFFF,1234" (Any user). It is highly recommended to overwrite this with a specific user with a unique PIN code.

The virtual user can be placed on another (last) storage position and other PIN code to allow access for all users knowing the access PIN code. Please refer to section 11 Virtual Keypad.

See an example in section 18.2 Adding Users to the System from factory reset – Easy Enrolment.

8.4 Delete User Command

This command deletes a user from the system.

This command can also be execute in normal mode by the privileged users (administrators) on storage position 01 and 02.

Parameters	Values	Description
<Delete storage position>	2 digits	User position to delete from system database
	01-02	Privileged users (administrators): "01"- "02"
	03-07	Normal users GC401: "03"- "07"
	03-12	Normal users GC402: "03"- "12"
	03-22	Normal users GC403: "03"- "22"
	03-52	Normal users GC404: "03"- "52"
		Ex. position 1 = "01", 8 = "08" and 10="10"

Total length = 2 digits


Examples:

Delete privileged user (administrator) stored on position 1 enter: **"01"**

Delete normal user stored on position 5 enter: **"05"**

Note!

An exiting user can also be deleted by adding a new user on the same storage position. I.e. it is not necessary to use the delete command first.

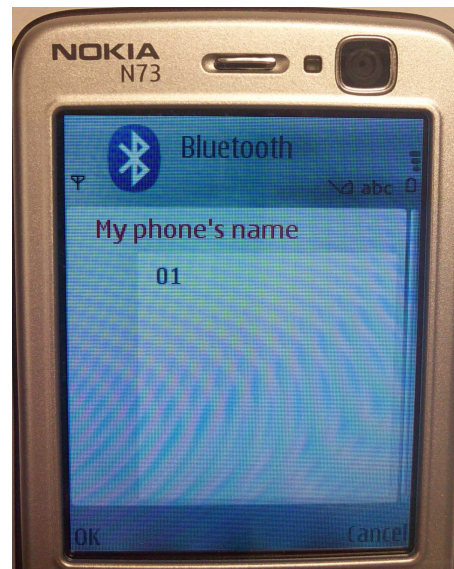

8.5 Change System Configuration Command 1

This command can change some Wiegand bus settings and thereby customize the system to your requirements.

Parameters	Values	Description
<Wiegand facility code>,	2 digits 0x00-0xFF	The facility code is a number used to uniquely identify the reader on the Wiegand bus. The number should be uniquely selected to avoid duplicates in a system. The number is entered as a hexadecimal number. E.g. 0x20 is written as "20" 0x00 = "00" (0) and 0xFF="FF" (255) Default: "20" (32)
<Wiegand type>,	2 digits 1-10	The number selects the Wiegand frame format to used: "01" = Wiegand 26 – de facto "02" = double Wiegand 26 frame "03" = triple Wiegand 26 frame "04" = Wiegand 34 "05" = Wiegand 42 "06" = Wiegand 50 "07" = Wiegand 58 "08" = Wiegand 40 with XOR checksum "09" = Wiegand 56 with XOR checksum "10" = Wiegand 64 with XOR checksum E.g. 01 is written as "01" Default: "01" = Wiegand 26

Total length = 5 digits

Example:


To select facility code 5 and standard Wiegand 26 enter:
"05,01"

To select facility code 255 and standard Wiegand 58 enter:
"FF,07"

Refer to section 10 Wiegand Types

The system settings can be reset to factory value. Please see section 14 Default Factory System Settings

System administrator should maintain a system log with changed System Settings for Normal Operation Mode. Please see 17 Appendix C – System Configuration Log Template

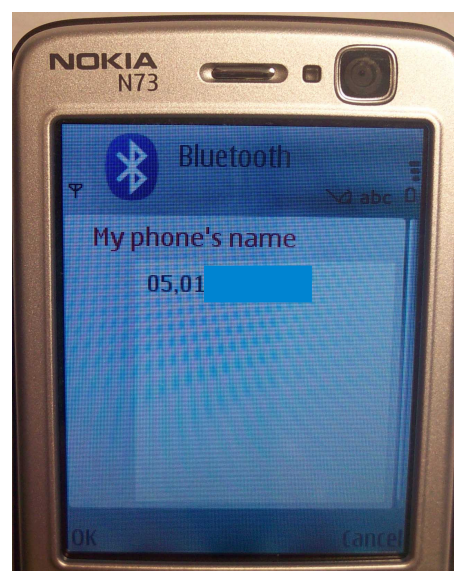

8.6 Change System Configuration Command 2 – Advanced settings

This command can change some additional system settings and thereby customize the system to your requirements.

Caution!


Caution must be taken when changing these system configuration parameters. Please refer to section 13.1 Detection Range Command Examples.

Parameters	Values	Description
<power range>,	1 digit 1-3	Maximum transmit power range (TX) ¹⁾ '1' ≈ 0,1 m - 2 m '2' ≈ 0,5 m - 10 m '3' ≈ 5 m - 100 m Default: '1'
<TX power level>,	1 digit 1-8	System transmit power (TX) level ¹⁾ 1≈0,1 m - 8≈ 10 m Default: '3'
<Detection range>,	2 digits 00-99	Device detection range (RX) ¹⁾ "00"=shortest distance, "99" longest distance Default: "40"
<Input1 active level >,	1 digit 0 or 1	'0'=low active (GND), '1'=high active (open) Default: '0' - NOT USED
<Input2 active level >,	1 digit 0 or 1	'0'=low active (GND), '1'=high active (open) Default: '0'
<Output1 active level >,	1 digit 0 or 1	'0'=low active (GND), '1'=high active (12V DC) (Open collector output for alarm/light) Default: '1' - NOT USED
<Output2 active level >	1 digit 0 or 1	'0'=low active (GND), '1'=high active (12V DC) (Open collector output for gate/door) Default: '1' - NOT USED

Note!

Input 3 and input 4 are by default low active '0' (GND) and cannot be changed.

¹⁾ The figure show the relation between TX and RX. A mobile phone must be within the RX (green) zone and TX should ideally be on RX or a little longer

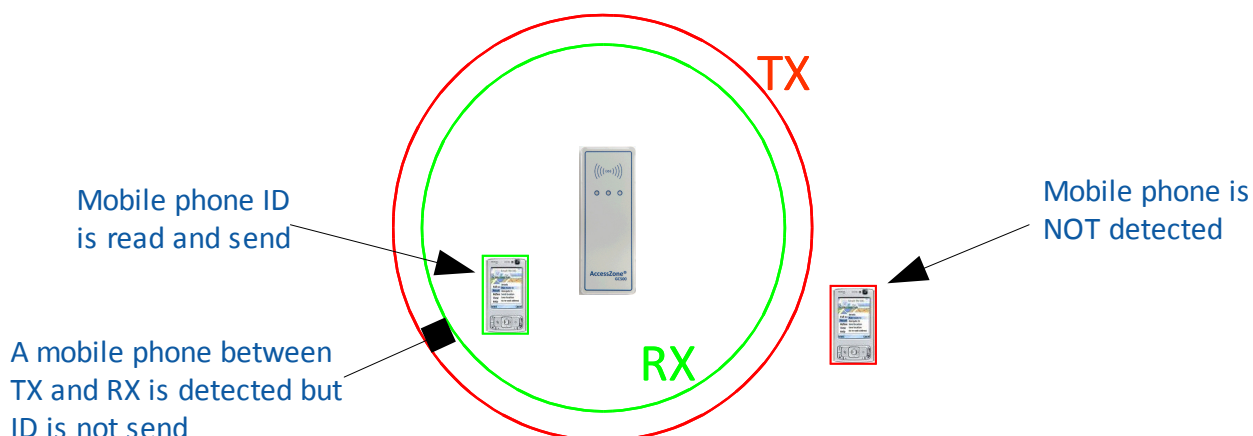

Total length = 14 digits

Example:

To select power range 2 (<10 m), and approximately 0,5 m with input 1 and 2 active at low level (GND) and output 1 and 2 with high level enter: "2,6,50,0,0,1,1"

There is a close relation between parameters <power range>, <TX power level> and <Detection range>. The system detection range depends on selected <power range>, <TX power level>.

Shortest detection range is with <power range>=1, <TX power level>=1 and <Detection range>0


Longest detection range is with <power range>=3<TX power level>=8 and <Detection range>99.

System must be power cycled for changes to take effect.

The System settings can be reset to factory value. Please see section 14 Default Factory System Settings

Please see section 13 Access Detection Range for some typical values for <power range>, <TX power level> and <Detection range> and how to adjust detection range.

System administrator should maintain a system log with System Settings 2 for Normal Operation Mode. Please see 17 Appendix C – System Configuration Log Template

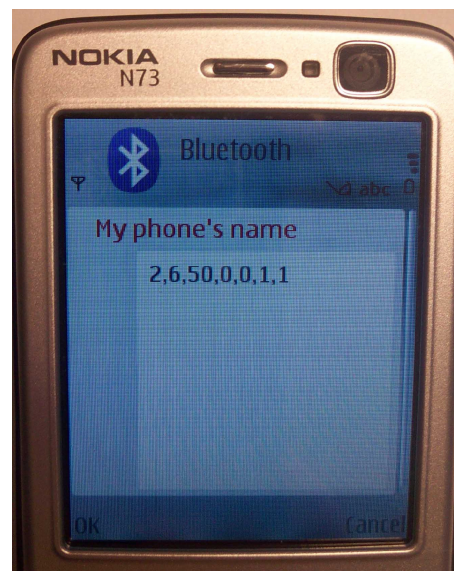

8.7 Execute System Command – Advanced settings

(Supported from firmware version 0.52)

This section describes some predefined system commands for easy execution from the administrator mobile or from any mobile phone when in configuration mode.

Caution!

Caution must be taken when using these system commands.

Command	Values	Description
"E01"	3 digits	Performs a System Reset ¹⁾
"E02"	3 digits	Performs a Factory Reset (refer to section 14.1)
"E03"	3 digits	System enters Configuration Mode
"E04"	3 digits	Performs a Factory Reset and enters Configuration Mode ("E02" + "E03")
"E05"	3 digits	Erases the complete user list and adds the default Any user "FFFFFFFFFFFF" on storage position 01 as new administrator
"E06"	3 digits	Increases the RX range to allow access to the users further away (+3 dBm steps) ²⁾
"E07"	3 digits	Decreases the RX range to allow the users to be closer to the reader before access (-3 dBm steps) ²⁾

Note!

The system also supports small letters. E.g. "e01", "e02" etc.

¹⁾ The System Reset command "E01" is useful when new firmware must be uploaded to the module. This is similar to reapplying the power.

²⁾ These commands can be executed again and again to allow easy adjustment of the RX range. The command changes the third parameter of the System Configuration Command 2 e.g. "2,6,**50**,0,0,1,1".

This means that command "E06" adds a value of (+)3 to the <Detection range> parameter. And "E07" subtracts a value of (-)3 to the <Detection range> parameter. E.g. start condition "2,6,**50**,0,0,1,1". "E06" is executed twice and the new setting is "2,6,**56**,0,0,1,1" etc.

The limits ('00' or '99') are reached when 2 beeps are heard and the system will stop prompting for the administrator PIN code. If this is not enough the TX range must be adjusted. Refer to the figure in section 8.6 for more information about the RX range

8.8 Execute System Configuration – Advanced settings

(Supported from firmware version 0.52)

This section describes some predefined system configurations which helps adjusting the system to the required detection distance. The configuration commands can easily be executed from the administrator mobile or from any mobile phone when in configuration mode.

The system will automatically perform a system reset to allow the new settings to take affect.

Caution!

Caution must be taken when changing these system configuration commands. The settings might be influenced by local installation conditions and need further adjustment.

Command	Values	Description
"C01"	3 digits	Very short range \approx 10 cm. Corresponds to the system command: "1,2,30,X,X,X,X"
"C02"	3 digits	Door access - short \approx < 50 cm Corresponds to the system command: "1,4,50,X,X,X,X"
"C03"	3 digits	Door access - normal \approx < 2 m Corresponds to the system command: "2,3,60,X,X,X,X"
"C04"	3 digits	Gate access \approx < 5 m Corresponds to the system command: "2,6,70,X,X,X,X"
"C05"	3 digits	Gate access - long \approx < 10 m Corresponds to the system command: "2,8,80,X,X,X,X"
"C06"	3 digits	Very long range \approx < 100 m Corresponds to the system command: "3,8,99,X,X,X,X"

Note!

The system also supports small letters. E.g. "c01", "c02" etc.

"X" means that the I/O setting is not affected (changed).

Use the E06 and E07 commands to adjust RX range.


Refer to the figure in section 8.6 for more information about the TX and RX range.

9 How to understand TX and RX parameters

The TX – and RX range should ideally lay on the same circle. It is recommended that the TX range is greater than the RX range.


Case 1:

The user is outside the TX – and RX range and the user is not detected by the AccessZone system.
I.e. no access allowed

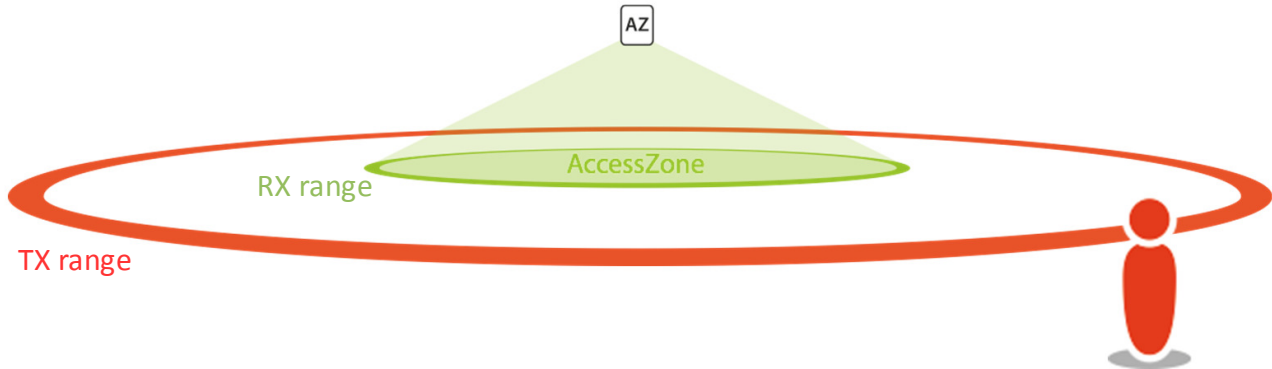


Case 2:

The user is now inside the TX circle and the AccessZone system can read the unique ID from the mobile phone. However, access is not allowed because the user is outside the RX range.

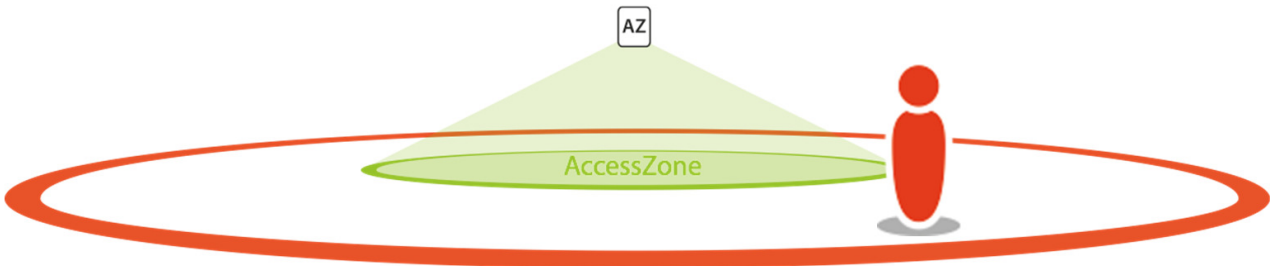

Case 3:

The user is now inside the TX circle and the AccessZone system can read the unique ID from the mobile phone. The user is also within the RX range and access are allowed.

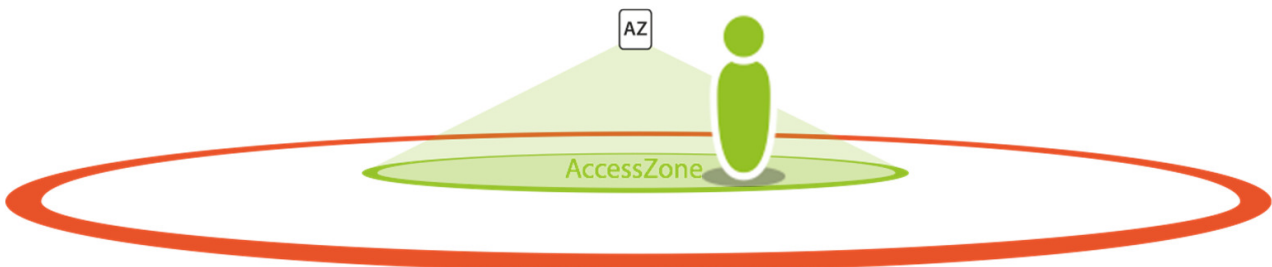

10 Wiegand Types

The GC400 series supports 10 different Wiegand frame formats. The Wiegand access controller must support at least one of the supported Wiegand formats.

GC400 uses the Wiegand signalling and different frame data formats:

The data is send on the Wiegand bus. I.e. a '0' is send on line Data0 and a '1' is send on line Data1. The signals are held at logical high levels until the data is sent. GC400 places the data as asynchronous low-going pulses on the Data0 or Data1 lines to transmit the data to the access control system.

The Wiegand specification requires a pulse width time between 20 µs and 100 µs and a pulse interval time between 200 µs and 20ms. GC400 uses a pulse width of 50 µs and a pulse interval time of 2 ms.

A 8 bit facility code and Bluetooth ID lengths between 16-48 bit are used depending on the selected Wiegand type.

Frame format:

1 bit MSB even parity	8 bit Facility code	16-48 bit of Bluetooth ID	1 bit LSB odd parity
--	--------------------------------------	--	---------------------------------------

Caution!

Mathematically it only gives a total of 256 different (0 to 255) facility codes. The shortest Wiegand format (Wiegand 26) only uses the lowest 16 bit of the Bluetooth ID number which gives a total of 65.536 (0 to 65.536) individual ID's. Due to the mathematical limitations of the Wiegand 26 format duplicates may occur. However, if Wiegand 58 is used instead all 48 bit of the unique Bluetooth ID number is send

For a general introduction to Wiegand refer to http://en.wikipedia.org/wiki/Wiegand_protocol

10.1 Wiegand 26

“01” = Wiegand 26 frame

This is the classic (de facto) Wiegand 26 frame format.

Frame: The last 2 bytes (LSB) of the 6 byte Bluetooth ID is sent together with the facility code. A even MSB parity bit and a odd LSB parity makes a total of 26 bits (1+8+16+1)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “2508” is send

10.2 Double Wiegand 26

“02” = double Wiegand 26 frame

Same as Wiegand 26 but the Bluetooth ID is sent in 2 Wiegand 26 frame with 25 ms delay between:

Frame 1: The facility code and the last 2 bytes (LSB) of the 6 byte Bluetooth ID is sent

Frame 2: The facility code and the next 2 bytes (middle) of the 6 byte Bluetooth ID is sent

A even MSB parity bit and a odd LSB parity makes a total of 26 bits (1+8+16+1) in each frame.

The Wiegand controller must be able to combine these frames.

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “B4B6” is send in frame 1 and Bluetooth ID “2508” is send in frame 2

10.3 Triple Wiegand 26

“03” = triple Wiegand 26 frame

Same as Wiegand 26 but the Bluetooth ID is sent in 3 Wiegand 26 frame with 25 ms delay between:

Frame 1: The facility code and the last 2 bytes (LSB) of the 6 byte Bluetooth ID is sent

Frame 2: The facility code and the next 2 bytes (middle) of the 6 byte Bluetooth ID is sent

Frame 3: The facility code and the first 2 bytes (MSB) of the 6 byte Bluetooth ID is sent

A even MSB parity bit and a odd LSB parity makes a total of 26 bits (1+8+16+1) in each frame.

The Wiegand controller must be able to combine these frames.

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “0022” is send in frame 1, Bluetooth ID “B4B6” is send in frame 2 and Bluetooth ID “2508” is send in frame 3. I.e. the full 6 byte ID is send

10.4 Wiegand 34

“04” = Wiegand 34

Uses the classic Wiegand 26 format but with an additional ID byte.

Frame: The facility code with the last 3 bytes (LSB) of the 6 byte Bluetooth ID is sent. A even MSB parity bit and a odd LSB parity makes a total of 34 bits (1+8+24+1)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “B62508” is send

10.5 Wiegand 42

“05” = Wiegand 42

Uses the classic Wiegand 26 format but with two additional ID byte.

Frame: The last 4 bytes (LSB) of the 6 byte Bluetooth ID is sent together with the facility code. A even MSB parity bit and a odd LSB parity makes a total of 42 bits (1+8+32+1)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “B4B62508” is send

10.6 Wiegand 50

“06” = Wiegand 50

Uses the classic Wiegand 26 format but with tree additional ID byte.

Frame: The last 5 bytes (LSB) of the 6 byte Bluetooth ID is sent together with the facility code. A even MSB parity bit and a odd LSB parity makes a total of 42 bits (1+8+40+1)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “22B4B62508” is send

10.7 Wiegand 58

“07” = Wiegand 58

Uses the classic Wiegand 26 format but with 4 additional ID byte. I.e. the full Bluetooth ID

Frame: All 6 bytes of the Bluetooth ID is sent together with the facility code. A even MSB parity bit and a odd LSB parity makes a total of 58 bits (1+8+48+1)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “0022B4B62508” is send

10.8 Wiegand 40 with XOR checksum

“08” = Wiegand 40 with XOR checksum

Uses a non standard Wiegand format with 3 ID bytes. Instead of the MSB and LSB parity bits a 8 bit XOR checksum is used.

Frame format:

8 bit Facility code	24 bit of Bluetooth ID	8 bit XOR checksum
--------------------------------	-----------------------------------	-------------------------------

Frame: The facility code with the last 3 bytes (LSB) of the 6 byte Bluetooth ID is sent together with an 8 bit XOR checksum. A total of 40 bits (8+24+8)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “B62508” is send

10.9 Wiegand 56 with XOR checksum

“09” = Wiegand 56 with XOR checksum

Uses a non standard Wiegand 26 format with 5 ID bytes. Instead of the MSB and LSB parity bits a 8 bit XOR checksum is used.

Frame format:

8 bit Facility code	40 bit of Bluetooth ID	8 bit XOR checksum
--------------------------------	-----------------------------------	-------------------------------

Frame: The facility code with the last 5 bytes (LSB) of the 6 byte Bluetooth ID is sent together with an 8 bit XOR checksum. A total of 56 bits (8+40+8)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “22B4B62508” is send

10.10 Wiegand 64 with XOR checksum

“10” = Wiegand 64 with XOR checksum

Uses a non standard Wiegand 26 format with all 6 ID bytes. Instead of the MSB and LSB parity bits a 8 bit XOR checksum is used.

Frame format:

8 bit Facility code	48 bit of Bluetooth ID	8 bit XOR checksum
--------------------------------	-----------------------------------	-------------------------------

Frame: The facility code with all 6 bytes of the Bluetooth ID is sent together with an 8 bit XOR checksum. A total of 64 bits (8+48+8)

In example:

Read Bluetooth ID: “0022B4B62508” => Bluetooth ID “0022B4B62508” is send. I.e. the full 6 byte ID is send

11 Virtual Keypad

The system has a wireless virtual keypad functionality which can operate in two different modes: “Virtual Keypad only Mode” and “Virtual Keypad Mixed Mode”

This feature will allow access to all users that know the 4 digit access PIN code or to any with a Bluetooth device.

11.1 Virtual Keypad only Mode

The system can be configured to run as a purely virtual keypad. I.e. no users have to be added. The system administrator adds a user with the special BD address “FFFFFFFFFFFF” (not a valid BD address) and a 4 digit access PIN code on **storage position 03** (Refer to section 8.2 Add new User Command).

The system will in this mode send the Bluetooth ID on the Wiegand bus for all users who enter the correct 4 digit access PIN code.

The request for PIN code is disabled when “0000” is entered as PIN code and thereby send all Bluetooth ID number on the Wiegand bus. I.e. a simple Bluetooth ID reader

The system administrator can at any time change the PIN code.

Caution!

If this special user is placed on storage position 01 or 02 all users will have the ability to add and delete users (privileged user) - if they know the correct access PIN code and the Master PIN code. This is not recommended.

11.2 Virtual Keypad Mixed Mode

The system can be configured to be a mixed mode virtual keypad with up to 4/9/19 or 49 unique users and 2 privileged (number depends on purchased system version) and a virtual keypad user with the special BD address “FFFFFFFFFFFF” (not a valid BD address) and optional a 4 digit access PIN code.

The system will in this mode send the Bluetooth ID for all unique users after entering of their unique 4 digit access PIN code/no PIN code and the Bluetooth ID for all other users which enter the correct 4 digit virtual keypad access PIN code.

This feature allows the virtual keypad PIN code to be changed frequently without affecting the other users.

Caution!

The system will start to search for a match from position 01 going up. The virtual keypad user must be placed after the last used storage position or store it on the last storage position 7/12/22 or 52, if you want to be able to add more users in the future.

12 User Access Key Setup

In principal all Bluetooth enabled devices can function as user access keys. If entering of PIN code is required the device must have a suitable keypad to enter the code.

The used Bluetooth device must also be configured to be visible from other Bluetooth devices to allow it to be detected by other Bluetooth devices. Please refer to MVC-Data “How to Get the Bluetooth ID” paper (<http://www.mvc-data.com/Misc.html>).

Note!

The time it takes to detect a nearby user can be influenced by:

- The time (Bluetooth inquiry scan time), i.e. the time a mobile phone uses to scan for other Bluetooth devices that want to connect to it. The time is typically set to a low value to preserve battery power. The time to discover a nearby Bluetooth enabled mobile phone strongly depends on implementation details for a particular mobile phone
- Radio noise from other radio communication in the 2400-2483,5 MHz (ISM) frequency band (e.g. WI-FI access points and other Bluetooth activity etc.) can cause disturbances of the radio signals to/from the Bluetooth transceiver and consequently increase the detection time
- Metal surfaces in the vicinity can also cause disturbances (distortion) or prevent radiation of the radio signals to and from the Bluetooth transceiver
- How the mobile phone/device is held in the hand may have a significant impact on the radio signals to and from the Bluetooth transceiver

12.1 Mobile Phone as Key

Any Bluetooth enabled mobile phone can be used as access key. No software has to be installed on the mobile phone.

The system will detect the mobile phone when it comes within the specified detection range.

TIP!

A few mobile phones cannot handle an active pairing or search for devices at the same time.

Steps:

1) Enable Bluetooth on mobile phone and set it to visible. Refer to the mobile phone's User Manual

2) Enter the 4 digit access PIN code when prompt (If PIN code is required)

Note!

The time (Bluetooth inquiry scan time) a mobile phone uses to scan for other Bluetooth devices, that want to connect to it, is typically set to a low value to preserve battery power. I.e. the time to discover a nearby Bluetooth enabled mobile phone strongly depends on implementation details for a particular mobile phone.

12.2 GPS Key as Key

A Bluetooth GPS antenna is also suitable as a simple wireless key. It works fine with and without PIN code. The PIN is typically fixed to "0000" or "1234" so the PIN code can typically be left out.

The GPS antenna can typically not have an active connection to another Bluetooth device to be detectable/visible.

Note!

PIN "0000" means no PIN code in the GC400 system. Some battery powered devices will automatically switch off after e.g. 60 minutes to preserve battery power. Please refer to the GPS user manual for more details.

12.3 AccessZone Bluetooth Tags

The AccessZone Bluetooth Tags is very suitable as a simple wireless key. They work without PIN code. They are available as battery powered hand-held devices or as power wired devices for mounting on cars/trucks or wheelchairs. Please refer to user manuals for more information.

13 Access Detection Range

The detection range may be influenced by the surroundings at the installation location (indoor or outdoor). If metal is close by reflections may increase/decrease the detection range.

It may also vary between the different used devices (mobile phones). I.e. some devices have a longer/shorter range than others because of different antenna designs and where and how they are placed (e.g. held in the hand or placed in the pocket etc.).

The system has some advanced and unique features to make individual adjustments of the detection range. Both the transmitted power (TX) and received signal power (RX) can be adjusted to compensate the installation environment and individual requirements. And the used devices can be added as a strong, standard or weak device to compensate for individual device characteristics.

If the detection range is not as expected the values can be adjusted up/down to find a suitable set of values. Please test and adjust as appropriate on location.

13.1 Detection Range Command Examples

The section shows some typical detection range commands you can use as a starting point to find your own specific values.

The first to value “**1,2,30,0,0,1,1**” corresponds to the used transmitting power (TX). The next parameter “**1,2,40,0,0,1,1**” corresponds to the received signal strength (RX). The parameters can also be set with the configuration commands in section 8.8 Execute System Configuration – Advanced settings

Here are some example commands to start with:

Range	Distance	System Command
Very short range	≈ 10 cm	“1,2,30, 0,0,1,1 ”
Door access - short	≈ < 50 cm	“1,4,50, 0,0,1,1 ”
Door access - normal	≈ < 2 m	“2,3,60, 0,0,1,1 ”
Gate access	≈ < 5 m	“2,6,70, 0,0,1,1 ”
Gate access -long	≈ < 10 m	“2,8,80, 0,0,1,1 ”
Very long range	≈ < 100 m	“3,8,99, 0,0,1,1 ”

Note!

The values “1,2,40,**0,0,1,1**” in bold must match your requirements. The default values are used in these examples. Please refer to 8.6 Change System Configuration Command 2 – Advanced settings for more details.

Please follow the descriptions in section 13.2 Detection range is too short and 13.3 Detection range is too long for adjusting to desired detection range up or down.

13.2 Detection range is too short

Follow and repeat these steps or use system command "E06" to increment the detection range:

- Increase (+3) the <Detection range> value
- If <Detection range> =99 is not enough - increase (+1) <TX power level> and set <Detection range>=50
- Check detection distance – follow adjusting procedure depending on result

Final adjustment can be done by changing (± 1) the <Detection range> value.

Refer to section 8.8 for commands to adjust TX and RX range.

13.3 Detection range is too long

Follow and repeat these steps or use system command "E07" to shorten the detection range:

- Decrease (-3) the <Detection range>
- If(<Detection range>=0) then decrease (-1) the <TX power level> value and set <Detection range>=99
- Check detection distance – follow adjusting procedure depending on result

The final adjustment can be done by changing (± 1) the <Detection range> value.

Refer to section 8.8 for commands to adjust TX and RX range.

14 Default Factory System Settings

Here is a short recap of the systems default settings:

- Virtual Keypad user 0xFFFFFFFF with PIN code "1234" is default on storage position 01
- Facility code is by default set to 20 (decimal 32)
- Wiegand type is by default Wiegand 26
- Detection range is approximately 20-40 cm
- Master PIN code is 12345678 – **Please change this as the first thing**

Below is a list of the commands for the default factory settings. See how to restore default values in section 14.1:

System Master PIN Code
12345678

Default System Settings 1 Normal Operation Mode
20,01

Default System Settings 2 Normal Operation Mode
1,3,40,0,0,1,1

Note! Settings in **bold** is fixed for the duration of the system configuration mode.

System Settings 2 System Configuration Mode
1,2,30 ,0,0,1,1

Default User
01,FFFFFFFFFFFF,1234

14.1 Restore Factory Default System Settings

The Master PIN code and the other system configuration settings can be restored to factory settings:

Please follow the below steps:

Steps:

- Power off the device
- Disconnect input 2
- Disconnect output 1 and output 2 from the Wiegand bus
- Connect (short) input 2 with output 1 and output 2
- Power on the device – Wait - a short beep acknowledges that the factory settings have been restored
- Power off the device again
- Reconnect input 2
- Reconnect output 1 and output 2 to the Wiegand bus
- Device can safely be re-powered with the restored factory settings.

Caution!

General caution must be taken when working with the wires to avoid short circuits etc.

15 Appendix A – User Log Template

Write your log of permitted users and store in a safe place

Storage Position	User Name	Bluetooth Address	PIN Code
01			
02			
03			
04			
05			
06			
07			
08			
09			
10			
11			
12			

16 Appendix B – System Master PIN Code Log Template

Write your Master PIN code here and store in a safe place

System Master PIN Code

17 Appendix C – System Configuration Log Template

Write your configuration setting here and store in a safe place

System Configuration 1

System Configuration 2

18 Appendix D – Quick Guide:

Users must first be added to the system with an optional 4 digit user access PIN code before access can be granted. All system commands (e.g. add user) can in configuration mode be send from a Bluetooth enabled mobile phone as long as the user knows the 8 digit Master PIN code.

Please refer to section 7 How to Configure the System for more details about the different commands.

18.1 Setting as a simple Bluetooth ID reader from factory reset – Easy Enrolment

This example shows how to easily setup the system as a simple Bluetooth ID reader. The read ID is send on the Wiegand bus.

Enter the 4 digit access PIN code “1234” and then the 8 digit master PIN code “12345678” when prompted:

- Mobile phone 1: Enter command “01,3423” New administrator
- Mobile phone 1: Enter command “03,FFFFFFFFFFFF,0000” Any user

A new administrator is added with a access PIN code. The Bluetooth ID is send on the Wiegand bus without PIN code for all users.

18.2 Adding Users to the System from factory reset – Easy Enrolment

This example shows how to easily enrol 3 mobile phones and a new system administrator – all with unknown BD addresses. The command must be entered on the mobile phone to add.

Enter the 4 digit access PIN code “1234” and then the 8 digit master PIN code “12345678” when prompted:

- Mobile phone 1: Enter command “03,2250” Position 3 and PIN “2250”
- Mobile phone 2: Enter command “04,7822” Position 4 and PIN “7822”
- Mobile phone 3: Enter command “05,3322” Position 5 and PIN “3322”

Add more....

- Mobile phone 4: Enter command “01,3423” Enter new administrator

Note!

The specified positions and user access PIN code is just used as example.

Caution!

Remember to change the 8 digit master PIN code when finished

18.3 Mobile Phone used for Adding and Deleting Users – Normal Operation:

The privileged users (administrators) on storage position 01 and 02 can add and delete users in normal operation if they are added with an access PIN code.

The user is first requested the normal 4 digit access PIN code. Then it will prompt for the 8 digit Master PIN code if the privileged user (administrator) has entered a valid “Add new User” or “Delete User” command.

Steps:

- 1) Enable Bluetooth on the mobile phone and set it to hidden
- 2) Temporarily change the Bluetooth friendly name to the desired command:

Examples:

- **Add User** (Refer to section 8.2 Add new User Command):
Add user with ID 0022b4b62918 and PIN code 1234 enter on position 1:
"01,0022b4b62918,1234"
or
Add user with unique ID 0022b4b62918 and without PIN code enter on position 5:
"05,0022b4b62918,0000"
or
Add user with unique ID 0022b4b62918 and with PIN code 1234 and “strong” enter on position 1: **"01,0022b4b62918,1234,1"**
or
Add user with unique ID 0022b4b66518 and without PIN code and “weak” enter on position 5: **"05, 0022b4b66518,0000,3"**
- **Delete User** (Refer to section 8.4 Delete User Command):
Delete user stored on position 1 enter: **"01"** or on position 5 enter **"05"**

- 3) Set the mobile phone to visible
- 4) Enter 4 digit access PIN code on mobile phone when prompt (ID is send if correct)
- 5) Wait for 3 short beeps which indicate that a valid command has been found and Master PIN code is required
- 6) Enter 8 digit Master PIN code on mobile phone when prompt – acknowledge with a short beep for successful execution
- 7) Set the mobile phone to invisible/hidden
- 8) Erase the command in the mobile phone

For more commands – repeat step 1) – 7)

If no more commands are required - Set friendly name back to desired name.

18.4 Mobile Phone used for System Commands - System Configuration Mode:

All mobile phones can in system configuration mode be used to enter system commands like adding and deleting users. Refer to section 7.2 How to enter Configuration Mode for more details about the systems commands:

The system will prompt for the 8 digit Master PIN code if a valid system command is found.

Steps:

- 1) Set system into configuration mode by pulling the buzzer input (IN2) to GND. Refer to section 7.2 How to enter Configuration Mode for more details
- 2) Enable Bluetooth on the mobile phone and set it to hidden
- 3) Temporarily change the Bluetooth friendly name to the desired command:

Examples:

- **Change Master PIN** (Refer to section 7.2 How to enter Configuration Mode):
Change Master PIN to 12345678 enter: **"12345678"**
 - **Add User** (Refer to section 8.2 Add new User Command):
Add user with unique ID 0022b4b62918 and with PIN code 1234 enter on position 1:
"01,0022b4b62918,1234"
or
Add user with unknown ID and without PIN code enter and "weak" on position 5:
"05,0000,3" (Enter the command on the users mobile phone)
 - **Delete User** (Refer to section 8.4 Delete User Command):
Delete user stored on position 1 enter: **"01"** or on position 5 enter **"05"**
 - **Change Wiegand type** (Refer to section 8.5 Change System Configuration Command 1)
Facility code is 32 (0x20) and Wiegand type is changed to standard Wiegand 26 enter:
"20,01"
 - **Change Detection Range** (Refer to section 8.6 Change System Configuration Command 2 – Advanced settings):
Select power range 2 (<10 m), and approximately 5 m with input 1 and 2 active at low level (GND) and output 1 and 2 with high level enter: **"2,6,50,0,0,1,1"**
- 4) Set the mobile phone to visible
 - 5) Place mobile phone within the detection range of the system
 - 6) Wait for 3 short beeps which indicate that a valid command has been found and Master PIN code is required
 - 7) Enter 8 digit Master PIN code on mobile phone when prompt
 - 8) Wait for beep for successful execution
 - 9) Set the mobile phone to invisible/hidden
 - 10) Erase the command in the mobile phone

For more commands – repeat step 2) – 9)

If no more commands are required - Set friendly name back to desired name.

18.5 Mobile Phone as Access Key:

Any Bluetooth enabled mobile phone can be used as access key. No software has to be installed on the mobile phone.

The system will detect the mobile phone when it comes within the specified detection range.

TIP!

A few mobile phones cannot handle an active pairing or search for devices at the same time.

Steps:

- 1) Enable Bluetooth on mobile phone and set it to visible. Refer to the mobile phone's User Manual
- 2) Enter the 4 digit access PIN code when prompt (Only if PIN code is required)

Note!

The time (Bluetooth inquiry scan time) a mobile phone uses to scan for other Bluetooth devices, that want to connect to it, is typically set to a low value to preserve battery power. I.e. the time to discover a nearby Bluetooth enabled mobile phone strongly depends on implementation details for a particular mobile phone.